

Seawater Intrusion in a Coastal Aquifer

Seawater intrusion is a significant concern in coastal regions, where the balance between freshwater sources and saltwater infiltration is constantly under threat. This problem is complex because it not only threatens the supply of fresh water but also the quality of groundwater.

This example illustrates how to set up a model for saltwater intrusion in a coastal aquifer when a pumping well is positioned at some distance from the shoreline. The inspiration for this approach arose from the research paper titled "Preferential Flow Enhances Pumping-Induced Saltwater Intrusion in Volcanic Aquifers." In this research, a range of methods were utilized to replicate the process of saltwater intrusion in a volcanic aquifer distinguished by the presence of highly conductive "lava tubes", contrasted with other geological formations displaying comparatively lower conductivity levels.

Given the distinctive characteristics of this scenario, where a low-conductivity aquifer intersects with highly conductive tubes, our model incorporates both the homogenized porosity approach as well as the dual porosity approach to capture these conditions.

Model Definition

Figure 1 illustrates the model's geometry and scenario, with the sea level represented by a hydraulic head condition. The model assumes a consistent rate of freshwater recharge, and the land surface is subjected to precipitation.

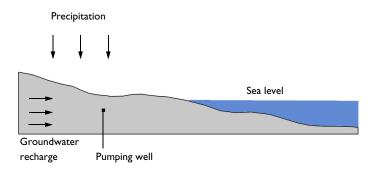


Figure 1: Model geometry and conditions.

Freshwater has a density of $\rho_f = 1000 \text{ kg/m}^3$, while saltwater has a higher density of $\rho_s = 1025 \text{kg/m}^3$. These density differences are essential and are incorporated into the model by considering the transport of salt within the aquifer and utilizing a linearized density relationship:

$$\rho = \rho_f + (\rho_s - \rho_f) \frac{c}{c_s} \tag{1}$$

Saltwater typically has a salinity of approximately 35% or 35 g/l. In this model, the specific value of $c_{\rm s}$ (maximum salt concentration) is not critical, as all effects are contingent upon the relative salt concentration c. Nonetheless, realistic salt concentration values are utilized by assuming a molar mass of 58.44 g/mol, resulting in $c_{\rm s} = 598.9 \, {\rm mol/m}^3$.

The transport through the porous aquifer is governed by the conservative formulation of the diffusion–convection equation which also includes dispersion.

$$\varepsilon_{\rm p} \frac{\partial c}{\partial t} + \nabla \cdot (-(D_d + D_e) \nabla c + \mathbf{u}c) = Q_s \tag{2}$$

here, $D_{\rm d}$ and $D_{\rm e}$ are the dispersion and diffusion coefficients., $\varepsilon_{\rm p}$ is the porosity , and on the right hand side $Q_{\rm s}$ denotes the source term. The convective velocity ${\bf u}$ is calculated using Darcy's law:

$$\mathbf{u} = -\frac{K}{\rho g} (\nabla p - \rho \mathbf{g}) \tag{3}$$

together with the continuity equation

$$\frac{\partial}{\partial t}(\varepsilon_{\rm p}\rho) + \nabla \cdot (\rho \mathbf{u}) = Q_{\rm m} \tag{4}$$

Here, K denotes the hydraulic conductivity , g and \mathbf{g} are the gravity constant and vector, respectively, while Q_{m} represents a source term. Note that the density ρ is given by Equation 1.

In Ref. 1 the researchers conducted a comparison of different approaches, including a homogenized approach and various heterogeneous approaches to represent diverse facies with distinct conductivities. They specifically set the conductivity for lava tubes to be two orders of magnitude larger than the next highest facies, sparking the idea of investigating a dual porosity approach.

In this example, a homogenized approach is initially considered assuming an anisotropic hydraulic conductivity where horizontal conductivity exceeds vertical conductivity. Then the solution is compared to that of a dual porosity approach.

Dual porosity implies that the flow occurs within the highly conductive area only, namely the lava tubes, which constitute the macroporous part of the system. In contrast, flow within all other facies is stagnant due to their significantly lower conductivity, forming the microporous system. However, these facies can still exchange fluids with the tubes, acting as sources or sinks. Consequently, Equation 3 and Equation 4 are employed for the volume fraction of the macropores $(\theta_{\rm M})$. The source term $Q_{\rm m}$ represents the interporosity flow and depends on the pressure difference between the macro- and micropores

$$Q_{\rm m} = -\alpha_{\rm w}(p_{\rm M} - p_{\rm m}) \tag{5}$$

The fluid transfer function α_w (s/m²)is influenced by various factors such as the facies structure and characteristics, and it is typically not known with accuracy. A more detailed discussion can be found in Ref. 2. Smaller values of $\alpha_{\rm w}$ indicate longer fluid exchange times. Therefore, when observation periods are sufficiently long and a steady state regime is achieved, the precise value becomes less significant. For the volume fraction of the micropores only an ordinary differential equation (ODE) needs to be solved:

$$(1 - \theta_{\rm M}) \frac{\partial}{\partial t} (\varepsilon_{\rm p} \rho) = -Q_{\rm m}$$

Above equations are incorporated using the **Dual Porosity** feature within the Darcy's Law interface. To account for the dual porosity characteristics in salt transport, this is manually integrated by introducing an additional ODE for the micropores:

$$(1 - \theta_{\rm M}) \varepsilon_{\rm p} \frac{\partial c_{\rm m}}{\partial t} = -Q_{\rm s}$$

in conjunction with a mass source term within the transport equation for the macropores (Equation 2) with the mass source being:

$$Q_{\rm s} = -\alpha_{\rm s}(c - c_{\rm m})$$

Like for the fluid transfer function α_w , the mass transfer function α_s (1/s) is not known and discussed in Ref. 2.

Results and Discussion

The model is calculated over a duration of one year. Notably, the concentration distribution remains relatively stable after approximately 100 days. The entire year is simulated to account for varying precipitation rates (Figure 2), although it demonstrates that their impact is relatively minor.

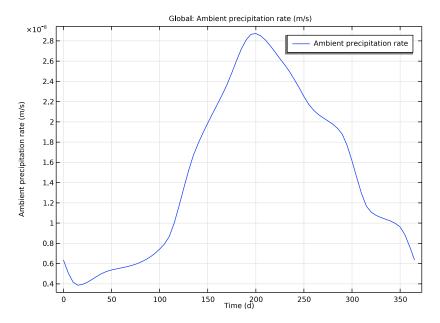


Figure 2: Varying precipitation rate over one year.

Figure 3 shows the pressure.

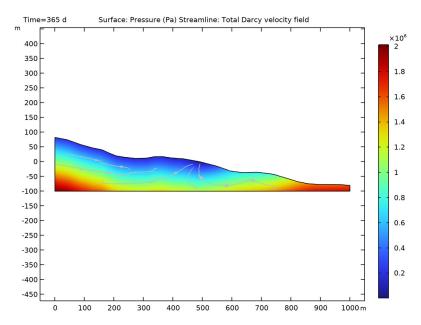


Figure 3: Pressure distribution after one year.

The concentration plot shows the salt concentration for the dual porosity approach. A contour line marks the location of the interface between saltwater and freshwater, where the concentration is 17.5 g/mol, representing half the concentration found in saltwater in the homogenized approach.

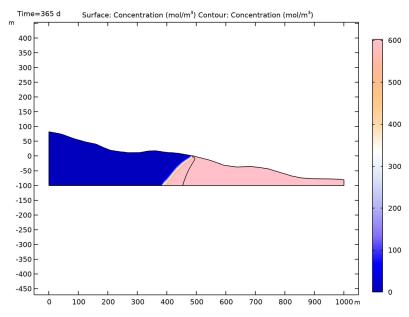


Figure 4: Concentration distribution after one year for the dual porosity approach. The black contour line indicates the position of the freshwater-saltwater interface for the homogenized approach.

The outcome of the dual-porosity simulation is that even though the volume fraction of the highly conductive lava tubes is small compared to the aquifer's low-conductive constituents, they can have a large impact on the saltwater intrusion characteristics. The results show that the dual-porosity approach predict a larger saltwater intrusion as compared to the homogenized approach.

Note that the parameters in this example are chosen arbitrarily. To predict saltwater intrusion in real aquifers it is essential to have good experimental data of the aquifer composition.

References

1. X. Geng and H.A. Michael, "Preferential flow enhances pumping-induced saltwater intrusion in volcanic aquifers," Water Resour. Res., vol. 56, 2020; https://doi.org/ 10.1016/j.jhydrol.2022.127835.

2. T. Vogel, H.H. Gerke, R. Zhang, and M.Th. Van Genuchten, "Modeling flow and transport in a two-dimensional dual-permeability system with spatially variable hydraulic properties," J. Hydrol., vol. 238, nos. 1–2, pp. 78–89, 2000. https://doi.org/ 10.1016/S0022-1694(00)00327-9.

Application Library path: Subsurface_Flow_Module/Solute_Transport/ seawater intrusion

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **2** 2D.
- 2 In the Select Physics tree, select Fluid Flow>Porous Media and Subsurface Flow> Darcy's Law (dl).
- 3 Click Add.
- 4 In the Select Physics tree, select Chemical Species Transport> Transport of Diluted Species in Porous Media (tds).
- 5 Click Add.
- 6 Click Study.
- 7 In the Select Study tree, select General Studies>Time Dependent.
- 8 Click M Done.

GLOBAL DEFINITIONS

Start by loading parameters and the geometry sequence into the model.

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.

4 Browse to the model's Application Libraries folder and double-click the file seawater intrusion parameters.txt.

GEOMETRY I

- I In the Geometry toolbar, click Insert Sequence and choose Insert Sequence.
- 2 Browse to the model's Application Libraries folder and double-click the file seawater_intrusion_geom_sequence.mph.
- 3 In the Geometry toolbar, click **Build All**.

DEFINITIONS

Next, define a variable for the density to account for density changes due to salt concentration.

Variables 1

- I In the Model Builder window, under Component I (compl) right-click Definitions and choose Variables.
- 2 In the Settings window for Variables, locate the Variables section.
- **3** In the table, enter the following settings:

Name	Expression	Unit	Description
rho	rhof+(rhos-rhof)*c/cs	kg/m³	Seawater density

DARCY'S LAW (DL)

- I In the Model Builder window, under Component I (compl) click Darcy's Law (dl).
- 2 In the Settings window for Darcy's Law, locate the Gravity Effects section.
- 3 Select the Include gravity check box.

Gravity I

The sea level is aty = 0m. To accurately account for the influence of gravity effects, the reference position is modified to align with the surface elevation for locations above sea level (y > 0) and is set to 0 for locations below sea level (y < 0).

- I In the Model Builder window, under Component I (compl)>Darcy's Law (dl) click Gravity I.
- 2 In the Settings window for Gravity, locate the Gravity section.
- 3 Select the Specify reference position check box.

4 Specify the \mathbf{r}_{ref} vector as

	_
int1(x)*(int1(x)>0)	у

Fluid 1

- I In the Model Builder window, under Component I (compl)>Darcy's Law (dl)> Porous Medium I click Fluid I.
- 2 In the Settings window for Fluid, locate the Fluid Properties section.
- **3** From the ρ list, choose **User defined**. In the associated text field, type rho.

Porous Matrix I

- I In the Model Builder window, click Porous Matrix I.
- 2 In the Settings window for Porous Matrix, locate the Matrix Properties section.
- **3** From the $\varepsilon_{\rm p}$ list, choose **User defined**. In the associated text field, type por.
- 4 From the Permeability model list, choose Hydraulic conductivity.
- 5 From the list, choose Diagonal.
- **6** In the *K* table, enter the following settings:

Kmean_h	0
0	Kmean_v

Initial Values 1

- I In the Model Builder window, under Component I (compl)>Darcy's Law (dl) click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- 3 Click the Hydraulic head button.

Hydraulic Head 1

- I In the Physics toolbar, click Boundaries and choose Hydraulic Head.
- 2 Select Boundary 5 only.
- 3 In the Settings window for Hydraulic Head, locate the Hydraulic Head section.
- **4** In the H_0 text field, type abs(y).

Inlet 1

- I In the Physics toolbar, click Boundaries and choose Inlet.
- 2 Select Boundary 1 only.
- 3 In the Settings window for Inlet, locate the Velocity section.

4 In the U_0 text field, type q_in.

Well I

- I In the Physics toolbar, click Points and choose Well.
- 2 Select Point 3 only.
- 3 In the Settings window for Well, locate the Well section.
- 4 From the Well type list, choose Production.
- 5 From the Specify list, choose Mass flow.
- **6** Locate the **Mass Flow** section. In the M_0 text field, type Mwell*dl.rho.

DEFINITIONS

Ambient Properties I (ampr I)

- I In the Physics toolbar, click **Shared Properties** and choose **Ambient Properties**.
- 2 In the Settings window for Ambient Properties, locate the Ambient Settings section.
- 3 From the Ambient data list, choose Meteorological data (ASHRAE 2021).
- 4 Locate the Location section. Click Set Weather Station.
- 5 In the Weather Station dialog box, type Hono in the text field.
- 6 In the tree, select Oceania>United States>HONOLULU INTL (911820).
- 7 Click OK.

DARCY'S LAW (DL)

Precibitation 1

- I In the Physics toolbar, click Boundaries and choose Precipitation.
- 2 Select Boundary 4 only.
- 3 In the Settings window for Precipitation, locate the Precipitation section.
- 4 From the P_0 list, choose Ambient precipitation rate (amprl).

TRANSPORT OF DILUTED SPECIES IN POROUS MEDIA (TDS)

Fluid 1

- I In the Model Builder window, under Component I (compl)>
 Transport of Diluted Species in Porous Media (tds)>Porous Medium I click Fluid I.
- 2 In the Settings window for Fluid, locate the Convection section.
- 3 From the u list, choose Total Darcy velocity field (dl/porous1).
- **4** Locate the **Diffusion** section. In the $D_{F,c}$ text field, type D.

Porous Matrix I

- I In the Model Builder window, click Porous Matrix I.
- 2 In the Settings window for Porous Matrix, locate the Matrix Properties section.
- **3** From the $\varepsilon_{\rm p}$ list, choose **User defined**. In the associated text field, type por.

Porous Medium I

In the Model Builder window, click Porous Medium 1.

Disbersion I

- I In the Physics toolbar, click Attributes and choose Dispersion.
- 2 In the Settings window for Dispersion, locate the Dispersion section.
- 3 From the Dispersion tensor list, choose Dispersivity.
- **4** In the α_L text field, type 4.
- **5** In the α_T text field, type 0.4.

Concentration I

- I In the Physics toolbar, click Boundaries and choose Concentration.
- 2 Select Boundary 5 only.
- 3 In the Settings window for Concentration, locate the Concentration section.
- **4** Select the **Species c** check box.
- **5** In the $c_{0,c}$ text field, type cs.

Concentration 2

- I In the Physics toolbar, click Boundaries and choose Concentration.
- 2 Select Boundary 1 only.
- 3 In the Settings window for Concentration, locate the Concentration section.
- 4 Select the **Species c** check box.

MESH I

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- 3 From the Element size list, choose Extremely fine.
- 4 Right-click Component I (compl)>Mesh I and choose Edit Physics-Induced Sequence.

Size

- I In the Model Builder window, under Component I (compl)>Mesh I click Size.
- 2 In the Settings window for Size, click to expand the Element Size Parameters section.

- 3 In the Maximum element size text field, type 5.
- 4 Click Build All.

STUDY I: HOMOGENIZED APPROACH

- I In the Model Builder window, click Study I.
- 2 In the Settings window for Study, type Study 1: Homogenized approach in the Label text field.

Step 1: Time Dependent

- I In the Model Builder window, under Study I: Homogenized approach click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- **3** From the **Time unit** list, choose **d**.
- 4 In the Output times text field, type range (0,5,365).
- 5 In the Home toolbar, click **Compute**.

By default, plots for the pressure and concentration are created automatically. Before examining the results, compute the solution for the dual porosity approach.

DARCY'S LAW (DL)

In the Model Builder window, under Component I (compl) click Darcy's Law (dl).

Dual Porosity Medium I

- I In the Physics toolbar, click **Domains** and choose **Dual Porosity Medium**.
- **2** Select Domain 1 only.
- 3 In the Settings window for Dual Porosity Medium, locate the Interporosity Flow section.
- **4** In the $\alpha_{\rm w}$ text field, type 1e-3.

Fluid 1

- I In the Model Builder window, click Fluid I.
- 2 In the Settings window for Fluid, locate the Fluid Properties section.
- **3** From the ρ list, choose **User defined**. In the associated text field, type rho.

Macrobores I

- I In the Model Builder window, click Macropores I.
- 2 In the Settings window for Macropores, locate the Matrix Properties section.
- 3 From the Permeability model list, choose Hydraulic conductivity.
- **4** Locate the **Volume Fraction** section. In the θ_M text field, type theta_M.

- **5** Locate the Matrix Properties section. From the $\varepsilon_{p,M}$ list, choose User defined. In the associated text field, type por.
- **6** In the $K_{\rm M}$ text field, type K1.

Micropores 1

- I In the Model Builder window, click Micropores I.
- 2 In the Settings window for Micropores, locate the Matrix Properties section.
- 3 From the $\epsilon_{p,m}$ list, choose User defined. In the associated text field, type por.

ADD PHYSICS

- I In the Physics toolbar, click add Physics to open the Add Physics window.
- **2** Go to the **Add Physics** window.
- 3 In the tree, select Mathematics>ODE and DAE Interfaces>Domain ODEs and DAEs (dode).
- 4 Click Add to Component I in the window toolbar.
- 5 In the Physics toolbar, click and Physics to close the Add Physics window.

DOMAIN ODES AND DAES (DODE)

- I In the Settings window for Domain ODEs and DAEs, locate the Units section.
- 2 Click Select Dependent Variable Quantity.
- 3 In the Physical Quantity dialog box, type conc in the text field.
- 4 In the tree, select General>Concentration (mol/m^3).
- 5 Click OK.
- 6 In the Settings window for Domain ODEs and DAEs, locate the Units section.
- 7 Click Select Source Term Quantity.
- 8 In the Physical Quantity dialog box, type reac in the text field.
- 9 In the tree, select Transport>Reaction rate (mol/(m^3*s)).
- 10 Click OK.
- II In the Settings window for Domain ODEs and DAEs, click to expand the **Dependent Variables** section.
- 12 In the Field name (mol/m³) text field, type c m.
- 13 In the Dependent variables (mol/m³) table, enter the following settings:

c_m

Distributed ODE I

- I In the Model Builder window, under Component I (compl)>
 Domain ODEs and DAEs (dode) click Distributed ODE I.
- 2 In the Settings window for Distributed ODE, locate the Damping or Mass Coefficient section.
- **3** In the d_a text field, type por.
- 4 Click to expand the **Equation** section. Locate the **Source Term** section. In the f text field, type -Qs/(1-theta_M).

DEFINITIONS

Variables 1

- I In the Model Builder window, under Component I (compl)>Definitions click Variables I.
- 2 In the Settings window for Variables, locate the Variables section.
- 3 In the table, enter the following settings:

Name	Expression	Unit	Description
Qs	-1e-4[1/s]*(c-c_m)	mol/(m³·s)	Mass exchange term

TRANSPORT OF DILUTED SPECIES IN POROUS MEDIA (TDS)

In the Model Builder window, under Component I (compl) click

Transport of Diluted Species in Porous Media (tds).

Species Source 1

- I In the Physics toolbar, click **Domains** and choose Species Source.
- 2 Select Domain 1 only.
- 3 In the Settings window for Species Source, locate the Species Source section.
- **4** In the S_c text field, type Qs/theta_M.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies> Time Dependent.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 2

Step 1: Time Dependent

- I In the Settings window for Time Dependent, locate the Study Settings section.
- **2** From the **Time unit** list, choose **d**.
- 3 In the Output times text field, type range (0,5,365).
- 4 In the Model Builder window, click Study 2.
- 5 In the Settings window for Study, type Study 2: Dual porosity approach in the Label text field.
- 6 Locate the Study Settings section. Clear the Generate default plots check box, because the plots that have already been generated will be utilized again.
- 7 In the Home toolbar, click **Compute**.

RESULTS

Pressure (dl)

- I In the Model Builder window, under Results click Pressure (dl).
- 2 In the Pressure (dl) toolbar, click Plot.
- 3 In the Settings window for 2D Plot Group, locate the Data section.
- 4 From the Dataset list, choose Study 2: Dual porosity approach/Solution 2 (sol2).
- 5 In the Pressure (dl) toolbar, click Plot.

The pressure distribution for the homogenized and dual porosity approach differ slightly.

Concentration (tds)

Modify the concentration plot to obtain Figure 4.

Streamline 1

- I In the Model Builder window, expand the Concentration (tds) node.
- 2 Right-click Streamline I and choose Delete.

Surface 1

- I In the Model Builder window, under Results>Concentration (tds) click Surface I.
- 2 In the Settings window for Surface, locate the Coloring and Style section.
- 3 Click Change Color Table.
- 4 In the Color Table dialog box, select Aurora>Twilight in the tree.
- 5 Click OK.

- 6 In the Settings window for Surface, locate the Coloring and Style section.
- 7 From the Color table transformation list, choose Reverse.

Add a contour plot for the salt distribution from the previous study. This provides a clear picture of the differences between both approaches.

Concentration (tds)

- I In the Model Builder window, click Concentration (tds).
- 2 In the Settings window for 2D Plot Group, locate the Data section.
- 3 From the Dataset list, choose Study 2: Dual porosity approach/Solution 2 (sol2).

Contour I

- I Right-click Concentration (tds) and choose Contour.
- 2 In the Settings window for Contour, locate the Data section.
- 3 From the Dataset list, choose Study I: Homogenized approach/Solution I (soll).
- **4** Locate the **Expression** section. In the **Expression** text field, type **c**.
- **5** Locate the **Levels** section. From the **Entry method** list, choose **Levels**.
- 6 In the Levels text field, type cs/2.
- 7 Locate the Coloring and Style section. From the Coloring list, choose Uniform.
- 8 From the Color list, choose Black.
- **9** Clear the **Color legend** check box.
- II Click the **Zoom Extents** button in the **Graphics** toolbar.

Precibitation Rate

Lastly, include a plot depicting the precipitation rate. This is an optional element meant to show that the precipitation variability is considered in this model.

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Precipitation Rate in the Label text field.

Global I

- I Right-click Precipitation Rate and choose Global.
- 2 In the Settings window for Global, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Ambient data> amprI.P0_amb - Ambient precipitation rate - m/s.

- 3 Locate the Data section. From the Dataset list, choose Study 2: Dual porosity approach/ Solution 2 (sol2).
- 4 In the Precipitation Rate toolbar, click Plot.

STUDY I: HOMOGENIZED APPROACH

Just in case you want to run the homogenized study again, you can deactivate the dual porosity domain conditions in the solver settings for this study as follows:

Step 1: Time Dependent

- I In the Model Builder window, under Study I: Homogenized approach click Step 1: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check box for Domain ODEs and DAEs (dode).
- 4 Select the Modify model configuration for study step check box.
- 5 In the tree, select Component I (compl)>Darcy's Law (dl)>Dual Porosity Medium I.
- 6 Right-click and choose Disable.
- 7 In the tree, select Component I (compl)> Transport of Diluted Species in Porous Media (tds)>Species Source 1.
- 8 Right-click and choose Disable.