

Thick Plate Stress Analysis

This example implements the static stress analysis described in the NAFEMS Test No LE10, "Thick Plate Pressure," found on page 77 in the NAFEMS report Background to Benchmarks (Ref. 1). The computed stress level is compared with the values given in the benchmark report.

Model Definition

The geometry is an ellipse with an ellipse-shaped hole in it. Due to symmetry in load and in geometry, the analysis only includes a quarter of the ellipse.

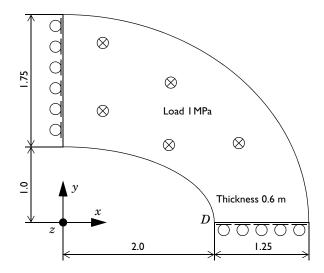


Figure 1: The thick plate geometry, reduced to a quarter of the ellipse due to symmetry.

MATERIAL

Isotropic with $E = 2.1 \cdot 10^{11}$ Pa, v = 0.3.

LOAD

A distributed load of 10^6 Pa on the upper surface pointing in the negative z direction.

CONSTRAINTS

• Symmetry planes, x = 0, y = 0.

- Outer ellipse surface constrained in the *x* and *y* directions.
- Midplane on outer ellipse surface constrained in the z direction.

Results

The normal stress σ_v is evaluated on the top surface at the inside of the elliptic hole, point D in Figure 1 with coordinate (2, 0, 0.6). It is in good agreement with the NAFEMS benchmark (Ref. 1), considering the coarse mesh. The difference is about 6%.

RESULT	COMSOL MULTIPHYSICS	NAFEMS (Ref. 1)	
σ_y (at D)	-5.72 MPa	-5.38 MPa	

The y-component of the stress is shown in Figure 2.

Volume: Stress tensor, yy-component (MPa)

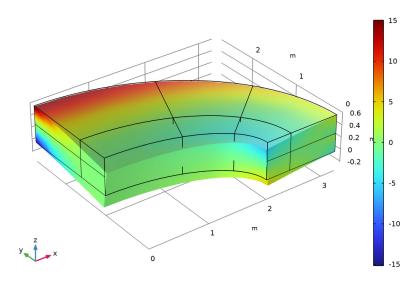


Figure 2: The stress in the y direction.

A note about this example is that the z direction constraint is applied to an edge only. This is a singular constraint, which causes local stresses at the constrained edge. These stresses are unlimited from a theoretical point of view, and in practice the stresses and vertical displacements are strongly mesh dependent. This does not invalidate the possibility to determine stresses at a distance far away from the singular constraint.

Notes About the COMSOL Implementation

In order to get the same mesh as in the original benchmark, some extra lines are drawn in the 2D geometry. As an effect, there will be several domains. This approach is efficient in this simple example, whereas for more complex geometries, the use of Mesh Control **Domains** should be considered.

Reference

1. G.A.O. Davies, R.T. Fenner, and R.W. Lewis, Background to Benchmarks, NAFEMS, Glasgow, 1993.

Application Library path: Structural Mechanics Module/

Verification Examples/thick plate

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select Structural Mechanics>Solid Mechanics (solid).
- 3 Click Add.
- 4 Click \Longrightarrow Study.
- 5 In the Select Study tree, select General Studies>Stationary.
- 6 Click M Done.

GEOMETRY I

If you do not want to build all the geometry, you can load the geometry sequence from the stored model. In the Model Builder window, under Component I (compl) right-click Geometry I and choose Insert Sequence. Browse to the model's Application Libraries folder and double-click the file thick plate.mph. You can then continue to the Add Material section below.

To build the geometry from scratch, continue here.

Work Plane I (wpl)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, click 🕍 Go to Plane Geometry.

Work Plane I (wp I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wp I)>Ellipse I (e I)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Size and Shape section.
- 3 In the a-semiaxis text field, type 3.25.
- 4 In the b-semiaxis text field, type 2.75.
- 5 In the Sector angle text field, type 90.
- 6 Click Pauld Selected.
- 7 Click the **Zoom Extents** button in the **Graphics** toolbar.

Work Plane I (wp I)>Ellipse 2 (e2)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Size and Shape section.
- **3** In the **a-semiaxis** text field, type **2**.
- 4 In the Sector angle text field, type 90.
- 5 Click **Build Selected**.

Work Plane I (wp I)>Ellipse 3 (e3)

- I In the Work Plane toolbar, click Ellipse.
- 2 In the Settings window for Ellipse, locate the Size and Shape section.
- 3 In the a-semiaxis text field, type 2.416.
- 4 In the b-semiaxis text field, type 1.583.
- 5 In the Sector angle text field, type 90.
- 6 Click | Build Selected.

Work Plane I (wp I)>Difference I (dif I)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Difference.
- 2 Select the objects el and e3 only.
- 3 In the Settings window for Difference, locate the Difference section.

- 4 Click to select the Activate Selection toggle button for Objects to subtract.
- 5 Select the object **e2** only.
- 6 Click | Build Selected.

Work Plane I (wpl)>Polygon I (poll)

- I In the Work Plane toolbar, click / Polygon.
- 2 In the Settings window for Polygon, locate the Object Type section.
- **3** From the **Type** list, choose **Open curve**.
- **4** Locate the **Coordinates** section. In the table, enter the following settings:

xw (m)	yw (m)	
1.783	2.3	
1.165	0.812	

Work Plane I (wpl)>Polygon 2 (pol2)

- I In the Work Plane toolbar, click / Polygon.
- 2 In the Settings window for Polygon, locate the Object Type section.
- 3 From the Type list, choose Open curve.
- **4** Locate the **Coordinates** section. In the table, enter the following settings:

xw (m)	yw (m)	
2.833	1.348	
1.783	0.453	


5 In the Work Plane toolbar, click **Build All**.

Work Plane 1 (wp1)>Plane Geometry
Click the Toom Extents button in the Graphics toolbar.

Work Plane I (wp I)>Partition Objects I (par I)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Partition Objects.
- **2** Select the object **difl** only.
- 3 In the Settings window for Partition Objects, locate the Partition Objects section.
- 4 Click to select the Activate Selection toggle button for Tool objects.
- **5** Select the objects **poll** and **pol2** only.

6 Click **Build Selected**.

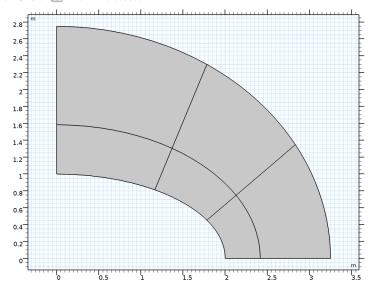


Extrude I (extI)

- I In the Model Builder window, under Component I (compl)>Geometry I right-click Work Plane I (wpI) and choose Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- **3** In the table, enter the following settings:

Distances (m)	
0.3	
0.6	

4 Click **Build Selected**.

5 Click the **Zoom Extents** button in the **Graphics** toolbar.

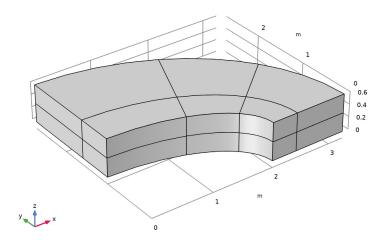

MATERIALS

Material I (mat I)

- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, locate the Material Contents section.
- **3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	E	210[GPa]	Pa	Young's modulus and Poisson's ratio
Poisson's ratio	nu	0.3	I	Young's modulus and Poisson's ratio
Density	rho	7850	kg/m³	Basic

SOLID MECHANICS (SOLID)

Symmetry I

- I In the Model Builder window, under Component I (compl) right-click Solid Mechanics (solid) and choose More Constraints>Symmetry.
- **2** Select Boundaries 1, 4, 8, 11, 40, 41, 49, and 50 only.

Prescribed Displacement I

- In the Physics toolbar, click **Boundaries** and choose **Prescribed Displacement**.
- **2** Select Boundaries 15, 16, 31, 32, 51, and 52 only.
- 3 In the Settings window for Prescribed Displacement, locate the Prescribed Displacement section.
- 4 From the Displacement in x direction list, choose Prescribed.
- 5 From the Displacement in y direction list, choose Prescribed.

Prescribed Displacement 2

- I In the Physics toolbar, click **Edges** and choose **Prescribed Displacement**.
- 2 Select Edges 20, 41, and 72 only.
- 3 In the Settings window for Prescribed Displacement, locate the Prescribed Displacement section.
- 4 From the Displacement in z direction list, choose Prescribed.

Boundary Load 1

- I In the Physics toolbar, click **Boundaries** and choose **Boundary Load**.
- **2** Select Boundaries 7, 14, 23, 30, 39, and 48 only.
- 3 In the Settings window for Boundary Load, locate the Force section.
- **4** Specify the \mathbf{F}_{A} vector as

0	x
0	у
-1e6	z

MESH I

Mabbed I

In the Mesh toolbar, click A Boundary and choose Mapped.

Distribution I

Right-click Mapped I and choose Distribution.

Mapped I

Select Boundaries 7, 14, 23, 30, 39, and 48 only.

Distribution I

I In the Model Builder window, click Distribution I.

- 2 In the Settings window for Distribution, locate the Distribution section.
- 3 In the Number of elements text field, type 2.
- 4 Locate the Edge Selection section. From the Selection list, choose All edges.
- 5 Click | Build Selected.

Swebt 1

- I In the Mesh toolbar, click A Swept.
- 2 In the Settings window for Swept, click Build All.

STUDY

In the **Home** toolbar, click **Compute**.

RESULTS

Point Evaluation 1

- I In the Results toolbar, click 8.85 Point Evaluation.
- **2** Select Point 24 only.

This corresponds to point D in Figure 1.

- 3 In the Settings window for Point Evaluation, click Replace Expression in the upper-right corner of the Expressions section. From the menu, choose Component I (compl)> Solid Mechanics>Stress>Stress tensor (spatial frame) - N/m2>solid.sGpyy - Stress tensor, yy-component.
- **4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
solid.sGpyy	MPa	Stress tensor, y-component (COMSOL)
-5.38[MPa]	MPa	Stress tensor, y-component (NAFEMS)

5 Click **= Evaluate**.

Stress (solid)

Modify the default surface plot to show the y-component of the stress tensor.

Volume 1

- I In the Model Builder window, expand the Results>Stress (solid) node, then click Volume 1.
- 2 In the Settings window for Volume, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Solid Mechanics> Stress>Stress tensor (spatial frame) - N/m2>solid.sGpyy - Stress tensor, yy-component.

- 3 Locate the Expression section. From the Unit list, choose MPa.
- 4 Locate the Coloring and Style section. Click | Change Color Table.
- 5 In the Color Table dialog box, select Rainbow>Rainbow in the tree.
- 6 Click OK.
- 7 In the Stress (solid) toolbar, click Plot.