

Bracket — Harmonic Vibration Fatigue

A frequency sweep test, or a sine sweep test, is sometimes used to experimentally determine the resonance frequencies (natural frequencies) of a structure. The structure is typically mounted on a shaker table, and then subjected a harmonic base excitation at variable frequency. The basic premise of the test is that the sweep is performed sufficiently slowly, so that a stationary state of harmonic vibration is obtained at each frequency. In addition to determining the resonance frequencies of the structure, a frequency sweep test can be used to ascertain whether the structure will fail during operation, particularly if the operating conditions are such, that the excitation frequencies are in close proximity to the resonance frequencies of the structure. In this example, it is shown how to perform a fatigue analysis of a bracket that undergoes base excitation during a frequency sweep. A pre-stress resulting from an external load is imposed before the frequency sweep is performed.

Model Definition

This model is based on the Bracket - Static Analysis model, found in the Structural Mechanics Module. The bracket is made of steel, and in the original model, it is constrained at the four mounting bolt holes, with static loading applied at the two arms. The static loading is the result of a pin running between the holes, with an actuator mounted on it. Figure 1 shows the stress state in the bracket under this static loading. There are stress concentrations at the mounting bolt holes, as well as at the fillets where the arms join the remaining parts of the bracket. Note that the stress concentrations at the mounting bolt holes are somewhat artificial, as they emanate from the crude approximation of the bolted joints using fixed constraints.

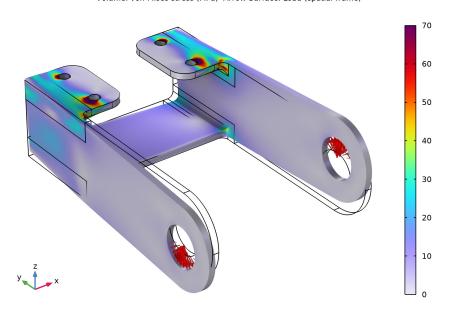


Figure 1: Stress state in the bracket when subjected to the external loading at the two arms.

In this example, we will consider the bolt mounting holes not as fixed, but instead assume that they are attached to a vibrating surrounding, such as a shaker table. We will then emulate a frequency sweep test using a base excitation (acceleration) of 3.5g, and subsequently perform a fatigue analysis to assess the damage incurred by the frequency sweep. The effect of the pre-stresses will be included, which has a few consequences. First, the modal basis and the natural frequencies of the bracket are affected. Second, the inclusion of pre-stresses will affect the fatigue damage, as they add a mean stress state to the pure amplitude stress state resulting from harmonic excitation. Note, however, that from a dynamics point of view, replacing the pin and actuator with boundary loads may be inadequate, as the mass and inertia of these items would in fact affect the natural frequencies of the system. However, for the purpose of illustrating how to model a frequency sweep test with a pre-stress, this modeling assumption is acceptable.

The frequency sweep is performed between 100 Hz and 500 Hz, with an increasing frequency, at a constant rate of 0.005 Hz/s. Of particular interest are the junctions

between the arms and the remaining structure, as these constitute stress concentrations at which fatigue failure is thought to occur.

The discrete set of excitation frequencies that is used must be chosen carefully. The purpose of the model is to emulate a frequency sweep test. Several resonance (natural) frequencies exist within the frequency range of the sweep test. As is well known, fatigue is highly stress dependent, so unless excitation at and around relevant resonance frequencies is included, the predicted fatigue damage will be inaccurate. In the model, we initially perform an analysis in which we consider the response at the resonance frequencies alone. This is to understand which resonance frequencies need to be resolved in greater detail during the subsequent frequency sweep calculation.

The assessment of fatigue is made using the stresses computed in the respective frequency sweeps. The fatigue stress measure that is used is based on a signed von Mises stress, and a load ratio dependent S-N curve, $f_{SN}(R, N)$, is then used to compute damage according to the Palmgren-Miner theory.

Results and Discussion

Figure 2 shows the peak von Mises stress in the bracket as it is subjected to harmonic vibration at its six lowest (constrained) resonance frequencies. The figure suggests that the first, second, and fifth resonance frequencies contribute more significantly to fatigue in the junctions between the arms and the remaining parts of the structure, than the remaining frequencies. The first and second natural frequencies are both about 115 Hz, and the fifth is about 366 Hz. The frequency sweep calculation was therefore performed for the frequency range 100 Hz to 600 Hz, with a densification about 115 and 366 Hz.

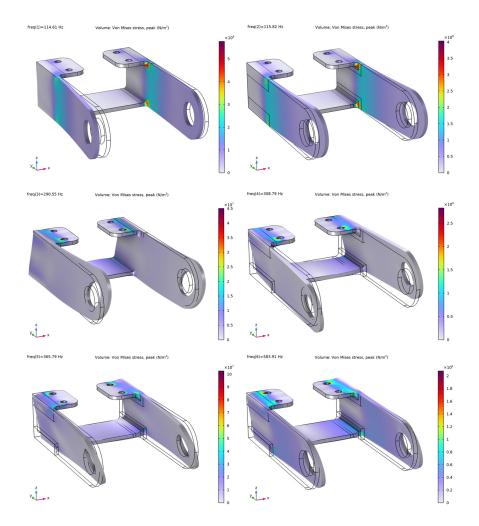


Figure 2: The peak von Mises stress when the bracket is subjected to harmonic vibration at its first six natural frequencies.

Figure 3 shows the fatigue usage factor resulting from the frequency sweep. The highest (most critical) value is about 0.37, and it represents the fraction of the fatigue life of the bracket spent during the sweep.

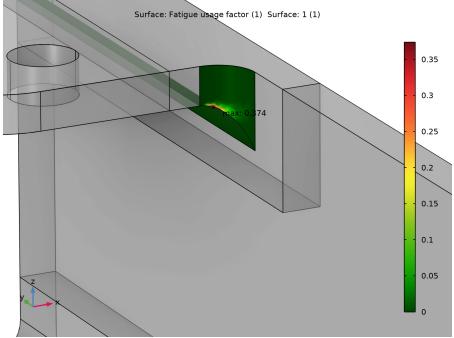


Figure 3: The calculated fatigue usage factor resulting from the frequency sweep.

Application Library path: Fatigue_Module/Harmonic_Vibration/ bracket_fatigue_harmonic_vibration

Modeling Instructions

ROOT

In this example you will start from an existing model from the Structural Mechanics Module.

APPLICATION LIBRARIES

- I From the File menu, choose Application Libraries.
- 2 In the Application Libraries window, select Structural Mechanics Module>Tutorials> bracket_static in the tree.
- 3 Click Open.

RESULTS

Stress (solid)

Click the **Zoom Extents** button in the **Graphics** toolbar.

SOLID MECHANICS (SOLID)

In the Model Builder window, expand the Component I (compl) node.

Linear Elastic Material I

In the Model Builder window, expand the Solid Mechanics (solid) node, then click Linear Elastic Material I.

Dambing I

- I In the Physics toolbar, click 📃 Attributes and choose Damping.
- 2 In the Settings window for Damping, locate the Damping Settings section.
- 3 From the Damping type list, choose Isotropic loss factor.

Boundary Load I

The default boundary system is in the deformed configuration. This would make the load behave as a follower load when used in a geometrically nonlinear context. Change to a fixed coordinate system.

- I In the Model Builder window, under Component I (compl)>Solid Mechanics (solid) click Boundary Load 1.
- 2 In the Settings window for Boundary Load, locate the Coordinate System Selection section.
- 3 Click **Go to Source** for Coordinate system.

DEFINITIONS

Boundary System I (sys I)

- I In the Model Builder window, under Component I (compl)>Definitions click Boundary System I (sysI).
- 2 In the Settings window for Boundary System, locate the Settings section.

3 From the Frame list, choose Reference configuration.

SOLID MECHANICS (SOLID)

Base Excitation 1

- I In the Physics toolbar, click **Global** and choose Base Excitation.
- 2 Right-click Base Excitation I and choose Harmonic Perturbation.
- 3 In the Settings window for Base Excitation, locate the Base Excitation section.
- **4** Specify the **a**_b vector as

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select Preset Studies for Selected Physics Interfaces>Eigenfrequency, Prestressed.
- 4 Click Add Study in the window toolbar.

STUDY 2

Steb 2: Eigenfrequency

- I In the Model Builder window, under Study 2 click Step 2: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.
- 3 Select the Modify model configuration for study step check box.
- 4 In the tree, select Component I (compl)>Solid Mechanics (solid), Controls spatial frame> Linear Elastic Material I>Damping I.
- 5 Right-click and choose Disable.
- 6 In the Home toolbar, click **Compute**.

ADD STUDY

- I Go to the Add Study window.
- 2 Find the Studies subsection. In the Select Study tree, select More Studies> Frequency Domain, Prestressed, Modal.
- 3 Click Add Study in the window toolbar.

STUDY 3

- I In the Model Builder window, under Study 3 click Step 2: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.
- 3 Select the Modify model configuration for study step check box.
- 4 Right-click and choose **Disable**.

First perform a frequency response analysis at the natural frequencies. This is to understand which frequencies must be resolved adequately in the subsequent frequency sweep computation.

Step 3: Frequency Domain, Modal

- I In the Model Builder window, click Step 3: Frequency Domain, Modal.
- 2 In the Settings window for Frequency Domain, Modal, locate the Study Settings section.
- **3** In the **Frequencies** text field, type 114.61 115.82 290.55 308.79 365.79 583.91.

Solution 4 (sol4)

- I In the Study toolbar, click Show Default Solver.
- 2 In the Model Builder window, expand the Solution 4 (sol4) node, then click Modal Solver 1.
- 3 In the Settings window for Modal Solver, click to expand the Values of Linearization Point section.
- 4 Select the Store linearization point and deviation in output check box.
- 5 In the Study toolbar, click **Compute**.

ADD STUDY

- I Go to the Add Study window.
- 2 Find the Studies subsection. In the Select Study tree, select More Studies> Frequency Domain, Prestressed, Modal.
- **3** Click **Add Study** in the window toolbar.
- 4 In the Study toolbar, click Add Study to close the Add Study window.

STUDY 4

Step 2: Eigenfrequency

- I In the Model Builder window, under Study 4 click Step 2: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.

- 3 Select the Modify model configuration for study step check box.
- 4 Right-click and choose **Disable**.

An investigation of the von Mises peak stress suggests the need to resolve the frequency response about 115 and 366 Hz, respectively.

Step 3: Frequency Domain, Modal

- I In the Model Builder window, click Step 3: Frequency Domain, Modal.
- 2 In the Settings window for Frequency Domain, Modal, locate the Study Settings section.
- **3** In the **Frequencies** text field, type range (100,5,600) range (0.9,0.01,1.1)*115 range(0.9,0.01,1.1)*366.

Solution 7 (sol7)

- 2 In the Model Builder window, expand the Solution 7 (sol7) node, then click Modal Solver 1.
- 3 In the Settings window for Modal Solver, locate the Values of Linearization Point section.
- 4 Select the Store linearization point and deviation in output check box.
- 5 In the Study toolbar, click **Compute**.

ADD PHYSICS

- I In the Home toolbar, click and Physics to open the Add Physics window.
- 2 Go to the Add Physics window.
- 3 In the tree, select Structural Mechanics>Fatigue (ftg).
- 4 Click Add to Component I in the window toolbar.
- 5 In the Home toolbar, click Add Physics to close the Add Physics window.

FATIGUE (FTG)

Harmonic Vibration 1

- I Right-click Component I (compl)>Fatigue (ftg) and choose the boundary evaluation Harmonic Vibration.
- 2 Select Boundaries 24, 25, 70, and 71 only.
- 3 In the Settings window for Harmonic Vibration, locate the Solution Field section.
- 4 From the Physics interface list, choose Solid Mechanics (solid).
- 5 Locate the Load History Definition section. From the Frequency history list, choose Linear frequency sweep.

6 Locate the **Fatigue Evaluation Parameters** section. Find the **Direction** subsection. From the σ list, choose **Signed von Mises**.

GLOBAL DEFINITIONS

Interpolation I (int I)

- I In the Home toolbar, click f(X) Functions and choose Global>Interpolation.
- 2 In the Settings window for Interpolation, locate the Definition section.
- 3 From the Data source list, choose File.
- 4 Click **Browse**.
- **5** Browse to the model's Application Libraries folder and double-click the file bracket_fatigue_harmonic_vibration_sn_curve.txt.
- 6 Click | Import.
- 7 Locate the **Units** section. In the **Function** table, enter the following settings:

Function	Unit
intl	Pa

8 In the **Argument** table, enter the following settings:

Argument	Unit
Argument I	1
Argument 2	1

FATIGUE (FTG)

Harmonic Vibration I

- I In the Model Builder window, under Component I (compl)>Fatigue (ftg) click Harmonic Vibration I.
- 2 In the Settings window for Harmonic Vibration, locate the Fatigue Evaluation Parameters section.
- **3** Find the **Material** subsection. From the $f_{SN}(R,N)$ list, choose **intl**.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select
 Preset Studies for Selected Physics Interfaces>Fatigue>Fatigue.

- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 5

Step 1: Fatigue

- I In the Settings window for Fatigue, locate the Values of Dependent Variables section.
- 2 Find the Values of variables not solved for subsection. From the Settings list, choose User controlled.
- 3 From the Method list, choose Solution.
- 4 From the Study list, choose Study 4, Frequency Domain, Modal.
- 5 In the Home toolbar, click **Compute**.