

# DC Characteristics of a MESFET

This model compares the current-voltage characteristics of a MESFET using the majority carrier only formulation.

## Introduction

MOSFETs and MESFETs (metal-semiconductor field-effect transistor) work very similarly. In a MESFET, the gate forms a rectifying junction that controls the opening of the channel by varying the depletion width of the junction.

In this model we simulate the response of a n-doped GaAs MESFET to different drain and gate voltages. For a n-doped material the electron concentration is expected to be orders of magnitude larger than the hole concentration. Accordingly, it is possible to use the majority carrier option to compute an accurate solution with less degrees of freedom then it would normally be needed using the electrons and holes formulation.

# Model Definition

The model compares the effect of the carrier formulation on the solution of a 2D MESFET biased with different gate (0, 1, and 2 V) and drain (from 0 to 10 V) voltages.

The geometry is composed of a block of 4 by 0.5 µm. The Schottky contact (gate) has a length of 1  $\mu$ m. The source (top left) and drain (top right) have both a length of 0.5  $\mu$ m. Figure 1 shows the model's geometry.




Figure 1: Geometry of the modeled MESFET.

## Results and Discussion

Figure 2 plots the drain current as a function of the drain voltage for both studies (electrons and holes and majority carrier only). The result is identical. Note that the number of degrees of freedom used for the first study (electrons and holes) is 1.5 times larger than the number of degrees of freedom used for the second study (majority carrier only).

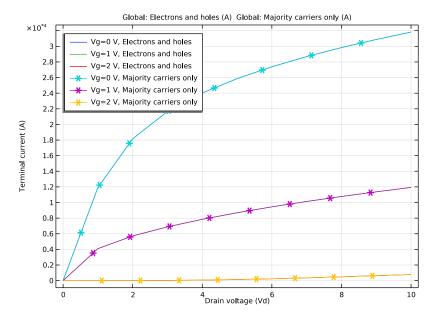


Figure 2: Drain current as a function of the drain voltage for the electrons and holes and for the majority carrier only (asterisk).

# **Application Library path:** Semiconductor\_Module/Transistors/mesfet

# Modeling Instructions

From the File menu, choose New.

## NEW

In the New window, click Model Wizard.

# MODEL WIZARD

- I In the Model Wizard window, click **Q** 2D.
- 2 In the Select Physics tree, select Semiconductor>Semiconductor (semi).
- 3 Click Add.
- 4 Click Mone.

### **GLOBAL DEFINITIONS**

### Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
L	1 [ um ]	IE-6 m	Gate length
Wd	4[um]	4E-6 m	Device width
Hd	0.5[um]	5E-7 m	Device height
Ws	1 [ um ]	IE-6 m	Source width
Wdd	1 [ um ]	IE-6 m	Drain width
Vg	0[V]	0 V	Gate voltage
Vd	0[V]	0 V	Drain voltage
Vs	0[V]	0 V	Source voltage
Nd	1e16[1/cm^3]	IE22 I/m³	Doping

### GEOMETRY I

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Units section.
- 3 From the Length unit list, choose  $\mu m$ .

# Rectangle I (rI)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type Wd.
- 4 In the **Height** text field, type Hd.
- **5** Locate the **Position** section. In the **x** text field, type -Wd/2.

Add points to define the source, drain and gate contacts.

# Point I (ptl)

- I In the Geometry toolbar, click Point.
- 2 In the Settings window for Point, locate the Point section.
- 3 In the x text field, type -Wd/2+Ws/2 -L/2 L/2 Wd/2-Ws/2.
- 4 In the y text field, type Hd Hd Hd.
- 4 | DC CHARACTERISTICS OF A MESFET

5 Click Build All Objects.

## ADD MATERIAL

- I In the Home toolbar, click 🤼 Add Material to open the Add Material window.
- 2 Go to the Add Material window.
- 3 In the tree, select Semiconductors>GaAs Gallium Arsenide.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click **‡ Add Material** to close the **Add Material** window.

# SEMICONDUCTOR (SEMI)

#### Metal Contact 1

- I In the Model Builder window, under Component I (compl) right-click Semiconductor (semi) and choose Metal Contact.
- 2 In the Settings window for Metal Contact, locate the Contact Type section.
- 3 From the Type list, choose Ideal Schottky.
- 4 Select Boundary 5 only.
- **5** Locate the **Terminal** section. In the  $V_0$  text field, type -Vg.

## Metal Contact 2

- I In the Physics toolbar, click Boundaries and choose Metal Contact.
- **2** Select Boundary 3 only.
- 3 In the Settings window for Metal Contact, locate the Terminal section.
- **4** In the  $V_0$  text field, type Vs.

# Metal Contact 3

- I In the Physics toolbar, click Boundaries and choose Metal Contact.
- **2** Select Boundary 7 only.
- 3 In the Settings window for Metal Contact, locate the Terminal section.
- **4** In the  $V_0$  text field, type Vd.

## Analytic Doping Model I

- I In the Physics toolbar, click Domains and choose Analytic Doping Model.
- 2 Select Domain 1 only.
- 3 In the Settings window for Analytic Doping Model, locate the Impurity section.
- 4 From the Impurity type list, choose Donor doping (n-type).

**5** In the  $N_{D0}$  text field, type Nd.

Trap-Assisted Recombination I

- I In the Physics toolbar, click Domains and choose Trap-Assisted Recombination.
- 2 Select Domain 1 only.
- 3 In the Settings window for Trap-Assisted Recombination, locate the Shockley-Read-Hall Recombination section.
- 4 From the  $\tau_n$  list, choose User defined. From the  $\tau_p$  list, choose User defined.

Adjust the mesh slightly.

#### MESH I

In the Model Builder window, under Component I (compl) right-click Mesh I and choose Edit Physics-Induced Sequence.

Size 2

- I In the Model Builder window, under Component I (compl)>Mesh I click Size 2.
- 2 In the Settings window for Size, locate the Element Size section.
- 3 From the Predefined list, choose Finer.
- 4 Click Build All.

## ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

### STUDY I

Step 1: Stationary

Set up an auxiliary continuation sweep for the 'Vd' parameter.

- I In the Settings window for Stationary, click to expand the Study Extensions section.
- 2 Select the Auxiliary sweep check box.
- 3 Click + Add.

**4** In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
Vg (Gate voltage)		V

- 5 Click + Add.
- **6** In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
Vg (Gate voltage)	0 1 2	V
Vd (Drain voltage)	range(0,1,10)	V

- 7 From the Sweep type list, choose All combinations.
- 8 From the Reuse solution from previous step list, choose Auto.
- 9 In the Home toolbar, click **Compute**.

#### RESULTS

Net Dopant Concentration (semi)

The model has a uniform n-doping therefore, we remove the generated default plot, Net Dopant Concentration.

I In the Model Builder window, under Results right-click Net Dopant Concentration (semi) and choose Delete.

ID Plot Group 4

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, locate the Legend section.
- **3** From the **Position** list, choose **Upper left**.

Global I

- I Right-click ID Plot Group 4 and choose Global.
- 2 In the Settings window for Global, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Semiconductor> Terminals>semi.l0\_3 - Terminal current - A.
- 3 Locate the y-Axis Data section. In the table, enter the following settings:

Expression	Unit	Description
semi.IO_3	A	Electrons and holes

4 In the ID Plot Group 4 toolbar, click Plot.

# ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click  $\overset{\frown}{\downarrow}$  Add Study to close the Add Study window.

### STUDY 2

Step 1: Stationary

- I In the Settings window for Stationary, locate the Study Extensions section.
- 2 Select the Auxiliary sweep check box.
- 3 Click + Add.
- 4 In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
Vg (Gate voltage)		V

- 5 Click + Add.
- **6** In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
Vg (Gate voltage)	0 1 2	V
Vd (Drain voltage)	range(0,1,10)	V

- 7 From the Sweep type list, choose All combinations.
- 8 From the Reuse solution from previous step list, choose Auto.

## SEMICONDUCTOR (SEMI)

- I In the Model Builder window, under Component I (compl) click Semiconductor (semi).
- 2 In the Settings window for Semiconductor, locate the Model Properties section.
- 3 From the Solution list, choose Majority carriers only.

## STUDY 2

In the **Home** toolbar, click **Compute**.

#### RESULTS

Net Dopant Concentration (semi)

The model has a uniform n-doping therefore, we remove the generated default plot, Net Dopant Concentration.

I In the Model Builder window, under Results right-click Net Dopant Concentration (semi) and choose Delete.

#### Global I

In the Model Builder window, under Results>ID Plot Group 4 right-click Global I and choose Duplicate.

## Global 2

- I In the Model Builder window, click Global 2.
- 2 In the Settings window for Global, locate the Data section.
- 3 From the Dataset list, choose Study 2/Solution 2 (sol2).
- 4 Locate the y-Axis Data section. In the table, enter the following settings:

Expression	Unit	Description
semi.IO_3	Α	Majority carriers only

- **5** Click to expand the **Coloring and Style** section. Find the **Line markers** subsection. From the **Marker** list, choose **Asterisk**.
- 6 From the Positioning list, choose Interpolated.

## ID Plot Group 4

- I In the Model Builder window, click ID Plot Group 4.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- **3** Select the **x-axis label** check box. In the associated text field, type Drain voltage (Vd).
- 4 Select the **y-axis label** check box. In the associated text field, type Terminal current (A).
- 5 In the ID Plot Group 4 toolbar, click Plot.