

# Stefan Tube

This example illustrates the use of the Maxwell-Stefan diffusion model available with the Transport of Concentrated Species interface. It models multicomponent gas-phase diffusion in a Stefan tube in 1D. In this case, it is a liquid mixture of acetone and methanol that evaporates into air.

The concentration profiles are modeled at steady-state and validated against experimental data by Taylor and Krishna (Ref. 6).

# Model Definition

The Stefan tube, shown in Figure 1, is a simple device used for measuring diffusion coefficients in binary vapors.

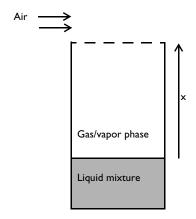


Figure 1: Schematic diagram of a Stefan tube.

At the bottom of the tube is a pool of mixture. The vapor that evaporates from this pool diffuses to the top of the tube, where a stream of air, flowing across the top of the tube, keeps the mole fraction of diffusing vapor there to be zero. The mole fraction of vapor above the liquid interface is at equilibrium. Because there is no horizontal flux inside the tube, you can analyze the problem using a 1D model geometry representing the distance between the liquid mixture surface and the top of the tube. The system composition of acetone, methanol, and air has been extensively investigated; both diffusion coefficients and composition have been measured at various positions within Stefan tubes. This makes it an ideal system for this model.

As a comparison, one experiment measured the mole fraction at the liquid interface to be  $x_{Ac} = 0.319$  and  $x_{Me} = 0.528$  where the pressure, p, was 99.4 kPa and the temperature, T, was 328.5 K. The length of the diffusion path was 0.238 m. The respective Maxwell-Stefan diffusion coefficients,  $D_{ij}$ , of the three binary pairs were calculated and are used in the model according to Table 1.

TABLE I: LABELS AND MAXWELL-STEFAN DIFFUSION COEFFICIENTS.

COMPONENT	LABEL	$D_{ij}$	VALUE
Acetone	1	$D_{12}$	8.48·10 <sup>-6</sup> m <sup>2</sup> /s
Methanol	2	$D_{13}$	13.72·10 <sup>-6</sup> m <sup>2</sup> /s
Air	3	$D_{23}$	19.91·10 <sup>-6</sup> m <sup>2</sup> /s

To model this problem, use the Transport of Concentrated Species interface with the Maxwell-Stefan diffusion model. It solves for the fluxes in terms of mass fractions for two of the three components. The mass fraction of the third,  $\omega_3$ , is given by the two other ones. The three governing equations are:

$$\nabla \cdot \left[ -\rho \omega_1 \sum_k D_{1k} \left[ \nabla x_k + (x_k - \omega_k) \frac{\nabla p_{\rm A}}{p_{\rm A}} \right] + D_1^{\rm T} \left( \frac{\nabla T}{T} \right) \right] = R_1 - \rho (\mathbf{u} \cdot \nabla) \omega_1$$

$$\nabla \cdot \left[ -\rho \omega_2 \sum_k D_{2k} \left[ \nabla x_k + (x_k - \omega_k) \frac{\nabla p_{\rm A}}{p_{\rm A}} \right] + D_2^{\rm T} \left( \frac{\nabla T}{T} \right) \right] = R_2 - \rho (\mathbf{u} \cdot \nabla) \omega_2$$

$$\omega_3 = 1 - \omega_1 - \omega_2$$

where  $D_{ij}$  are the multicomponent Fick diffusivities (SI unit:  $m^2/s$ ),  $p_A$  is the absolute pressure (SI unit: Pa), T is the temperature (SI unit: K),  $D_i^T$  is the thermal diffusion coefficient (SI unit:  $kg/(m\cdot s)$ ), and  $\mathbf{u}$  is the mixture averaged velocity (SI unit: m/s). Species mole fractions and mass fractions are denoted by x and w respectively, and the mixture density, p (SI unit:  $kg/m^3$ ), is a function of the average mixture mole fraction,  $M_{mix}$  (SI unit: kg/mol), according to Equation 2:

$$M_{\text{mix}} = \sum_{i} x_i M_i \tag{1}$$

$$\rho = \frac{p}{RT} M_{\text{mix}} \tag{2}$$

In this case, there is no imposed fluid velocity. However, a mixture velocity will result due to the mass transfer from liquid mixture. At the top of the tube the mass fractions are fixed,

with the fraction of air being unity. At the bottom (at the liquid interface), the fractions are also fixed according to the previously mentioned experimental conditions. The fact that there is no air flux at the interface results in the following relation for the convective velocity, at steady state:

$$u = \frac{j_{\text{diff},3}}{\omega_3 \rho}$$

where  $j_{{
m diff},3}$  is the diffusive mass flux of air (SI unit: kg/(m $^2$ ·s)).

#### Results

Both the modeled and experimental steady-state mole fractions as a function of position are shown in Figure 2.

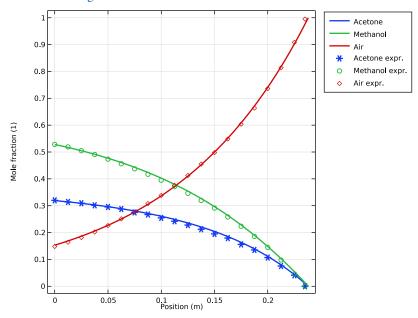


Figure 2: Modeled and experimental (Ref. 6) steady-state mole fractions of: acetone, methanol, and air, in the Stefan tube.

We can see that the model reproduces the results from Ref. 6 well, which means the Maxwell-Stefan equations can describe the mass transport process in the system accurately.

The Maxwell-Stefan diffusion formulation includes the conservation of mass. In the absence of chemical reactions (source terms) and convective contributions, the MaxwellStefan formulation results in zero net mass flux. In this example, the convective term is included, which you can see in the velocity profile in Figure 3.

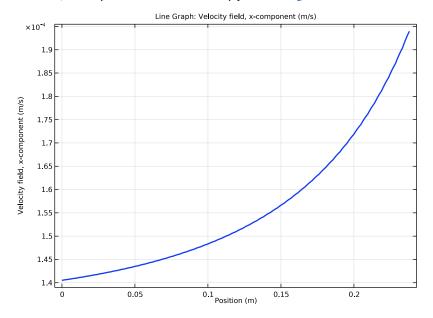


Figure 3: Velocity of the gas mixture in the Stefan tube.

# References

- 1. C.F. Curtiss and R.B. Bird, "Multicomponent diffusion," *Ind. Eng. Chem. Res.*, vol. 38, p. 2515, 1999.
- 2. R.B. Bird, W. Stewart, and E. Lightfoot, *Transport Phenomena*, John Wiley & Sons, New York, 1960.
- 3. G.A.J. Jaumann, Wien. Akad. Sitzungsberichte (Math.-Naturw. Klasse), vol. 120, p. 385, 1911.
- 4. J.O. Hirschfelder, C.F. Curtiss, and R.B. Bird, *Molecular Theory of Gases and Liquids*, Wiley, USA, 1954.
- 5. E.N. Fuller, P.D. Schettler, and J.C. Giddings, Ind. Eng. Chem., vol. 58, p. 19, 1966.
- 6. R. Taylor and R. Krishna, *Multicomponent Mass Transfer*, John Wiley & Sons, NY, p. 21, 1993.

Application Library path: Chemical Reaction Engineering Module/

Mixing\_and\_Separation/stefan\_tube

# Modeling Instructions

From the File menu, choose New.

#### NEW

In the New window, click Model Wizard.

#### MODEL WIZARD

- I In the Model Wizard window, click ID.
- 2 In the Select Physics tree, select Chemical Species Transport> Transport of Concentrated Species (tcs).
- 3 Click Add.
- 4 Click + Add Mass Fraction.
- 5 In the Mass fractions (I) table, enter the following settings:

w1 w2 w3

- 6 Click  $\bigcirc$  Study.
- 7 In the Select Study tree, select General Studies>Stationary.
- 8 Click **Done**.

#### **GLOBAL DEFINITIONS**

Next, add a set of model parameters by importing their definitions from a data text file provided with the Application Library.

#### Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.

**4** Browse to the model's Application Libraries folder and double-click the file stefan\_tube\_parameters.txt.

#### **GEOMETRY I**

Interval I (i1)

- I In the Model Builder window, under Component I (compl) right-click Geometry I and choose Interval.
- 2 In the Settings window for Interval, locate the Interval section.
- **3** In the table, enter the following settings:

Coordinates (m)		
0		
0.238		

4 Click Build All Objects.

## TRANSPORT OF CONCENTRATED SPECIES (TCS)

- I In the Model Builder window, under Component I (compl) click
  Transport of Concentrated Species (tcs).
- 2 In the Settings window for Transport of Concentrated Species, locate the Transport Mechanisms section.
- 3 From the Diffusion model list, choose Maxwell-Stefan.
- 4 Locate the Species section. From the From mass constraint list, choose w3.
- 5 Click to expand the Discretization section. From the Mass fraction list, choose Quadratic.

Species Molar Masses 1

- I In the Model Builder window, under Component I (compl)>
  Transport of Concentrated Species (tcs) click Species Molar Masses I.
- 2 In the Settings window for Species Molar Masses, locate the Molar Mass section.
- 3 In the  $M_{\rm w1}$  text field, type M\_ace.
- **4** In the  $M_{\rm w2}$  text field, type M\_met.
- **5** In the  $M_{\rm w3}$  text field, type M\_air.

Transport Properties 1

- I In the Model Builder window, click Transport Properties 1.
- 2 In the Settings window for Transport Properties, locate the Model Input section.
- **3** From the T list, choose **User defined**. In the associated text field, type T0.

- **4** From the  $p_A$  list, choose **User defined**. In the associated text field, type p0.
- **5** Locate the **Convection** section. Specify the **u** vector as

**6** Locate the **Diffusion** section. In the table, enter the following settings:

Species I	Species 2	Diffusivity	Diffusion coefficient (m^2/s)
wl	w2	User defined	D12
wl	w3	User defined	D13
w2	w3	User defined	D23

#### Initial Values 1

- I In the Model Builder window, click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- 3 In the  $\omega_{0.w1}$  text field, type w\_ace0.
- 4 In the  $\omega_{0,w2}$  text field, type w\_met0.

#### Mass Fraction 1

- I In the Physics toolbar, click Boundaries and choose Mass Fraction.
- 2 Select Boundary 1 only.
- 3 In the Settings window for Mass Fraction, locate the Mass Fraction section.
- 4 Select the Species w1 check box.
- **5** In the  $\omega_{0,w1}$  text field, type w\_ace0.
- 6 Select the Species w2 check box.
- 7 In the  $\omega_{0.w2}$  text field, type w\_met0.

#### Mass Fraction 2

- I In the Physics toolbar, click Boundaries and choose Mass Fraction.
- 2 Select Boundary 2 only.
- 3 In the Settings window for Mass Fraction, locate the Mass Fraction section.
- 4 Select the **Species w1** check box.
- 5 Select the Species w2 check box.

#### MESH I

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.

- 3 From the Element size list, choose Extra fine.
- 4 Click Build All.

#### STUDY I

In the **Home** toolbar, click **Compute**.

#### RESULTS

Experimental Mole Fractions

- In the **Results** toolbar, click **Table**.

  Import the experimental data for comparison.
- 2 In the Settings window for Table, type Experimental Mole Fractions in the Label text field.
- 3 Locate the Data section. Click | Import.
- **4** Browse to the model's Application Libraries folder and double-click the file stefan\_tube\_exp.csv.

In order to reproduce the plot in Figure 2, do the following:

Mole Fractions Compared with Experimental Data

- I In the Results toolbar, click  $\sim$  ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Mole Fractions Compared with Experimental Data in the Label text field.
- 3 Locate the Plot Settings section.
- 4 Select the x-axis label check box. In the associated text field, type Position (m).
- 5 Locate the Legend section. From the Layout list, choose Outside graph axis area.

Line Graph 1

- I Right-click Mole Fractions Compared with Experimental Data and choose Line Graph.
- 2 In the Settings window for Line Graph, locate the Selection section.
- 3 From the Selection list, choose All domains.
- 4 Click to expand the Title section. Click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>
  Transport of Concentrated Species>Species wl>tcs.x\_wl Mole fraction I.
- **5** Locate the **Title** section. From the **Title type** list, choose **None**.
- 6 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- 7 In the Expression text field, type x.

- 8 Click to expand the Coloring and Style section. From the Width list, choose 2.
- **9** Click to expand the **Legends** section. Select the **Show legends** check box.
- 10 From the Legends list, choose Manual.
- II In the table, enter the following settings:

#### Legends

Acetone

12 Right-click Line Graph I and choose Duplicate.

# Line Graph 2

- I In the Model Builder window, click Line Graph 2.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Transport of Concentrated Species>Species w2>tcs.x\_w2 - Mole fraction - 1.
- **3** Locate the **Legends** section. In the table, enter the following settings:

# Legends

Methanol

4 Right-click Line Graph 2 and choose Duplicate.

# Line Graph 3

- I In the Model Builder window, click Line Graph 3.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Transport of Concentrated Species>Species w3>tcs.x\_w3 - Mole fraction - 1.
- **3** Locate the **Legends** section. In the table, enter the following settings:

# Legends

Air

Table Graph 1

- In the Model Builder window, right-click Mole Fractions Compared with Experimental Data and choose Table Graph.
- 2 In the Settings window for Table Graph, locate the Data section.
- 3 From the x-axis data list, choose Distance from surface (m).
- 4 Locate the Coloring and Style section. Find the Line markers subsection. From the Marker list, choose Cycle.

- **5** Find the **Line style** subsection. From the **Line** list, choose **None**.
- 6 From the Color list, choose Cycle (reset).
- 7 Click to expand the **Legends** section. Select the **Show legends** check box.
- 8 Find the Prefix and suffix subsection. In the Suffix text field, type expr..

Use a **Comparison** node to quantify the difference between the computed mole fractions and the experimental data.

#### Comparison I

- I In the Model Builder window, right-click Line Graph I and choose Comparison.
- 2 In the Settings window for Comparison, locate the Reference Data section.
- 3 From the Column list, choose Acetone.
- 4 Locate the Comparison section. From the Metric list, choose RMS.
- 5 In the Mole Fractions Compared with Experimental Data toolbar, click  **Plot**.

# Comparison I

- I In the Model Builder window, right-click Line Graph 2 and choose Comparison.
- 2 In the Settings window for Comparison, locate the Reference Data section.
- 3 From the Column list, choose Methanol.
- 4 Locate the Comparison section. From the Metric list, choose RMS.
- 5 In the Mole Fractions Compared with Experimental Data toolbar, click Plot.

#### Comparison I

- I In the Model Builder window, right-click Line Graph 3 and choose Comparison.
- 2 In the Settings window for Comparison, locate the Reference Data section.
- 3 From the Column list, choose Air.
- 4 Locate the Comparison section. From the Metric list, choose RMS.
- 5 In the Mole Fractions Compared with Experimental Data toolbar, click Plot.

  It can be noted that the root-mean square difference for all three mole fractions is around 0.006.

To reproduce Figure 3, proceed as follows:

#### Velocity Field

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Velocity Field in the Label text field.
- 3 Locate the Plot Settings section.

4 Select the x-axis label check box. In the associated text field, type Position (m).

# Line Graph I

- I Right-click Velocity Field and choose Line Graph.
- 2 Select Domain 1 only.
- 3 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Transport of Concentrated Species>Velocity field - m/s>tcs.u - Velocity field, x-component.
- 4 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- **5** In the **Expression** text field, type x.
- 6 Locate the Coloring and Style section. From the Width list, choose 2.
- 7 In the **Velocity Field** toolbar, click  **Plot**.