Venus838FLPx GPS Receiver

Data Sheet



10mmx 10mm

Venus838FLPx-L / Venus838FLPx-D

FEATURES

- 50Hz maximum update rate
- -148dBm cold start sensitivity
- -165dBm tracking sensitivity
- 29 second cold start TTFF
- 3.5 second TTFF with AGPS
- 1 second hot start
- 2.5m accuracy
- Multipath detection and suppression
- Jamming detection and mitigation
- QZSS and SBAS support
- 7-day extended ephemeris AGPS
- Self-aided ephemeris estimation
- 74mW full power navigation
- Works directly with active or passive antenna
- Supports external SPI flash memory data logging
- Complete receiver in 10mm x 10mm x 1.3mm size
- Contains LNA, SAW Filter, TCXO, RTC Xtal, LDO
- Pb-free RoHS compliant

Venus838FLPx is a high performance, low cost, single chip GPS receiver targeting mobile consumer and cellular handset applications. It offers very low power consumption, high sensitivity, and best in class signal acquisition and time-to-first-fix performance.

Venus838FLPx contains all the necessary components of a complete GPS receiver, includes 1.2dB cascaded system NF RF front-end, GPS baseband signal processor, 0.5ppm TCXO, 32.768kHz RTC crystal, RTC LDO regulator, and passive components. It requires very low external component count and takes up only 100mm² PCB footprint.

Dedicated massive-correlator signal parameter search engine within the baseband enables rapid search of all the available satellites and acquisition of very weak signal. An advanced track engine allows weak signal tracking and positioning in harsh environments such as urban canyons and under deep foliage.

The self-contained architecture keeps GPS processing off the host and allows integration into applications with very little resource.

Venus838FLPx is very easy to use, minimizes RF layout design issues and offers very fast time to market.

Product Series	Product Description
Venus838FLPx-L	Flash version GPS receiver (internal 1.2V LDO version)
	Suitable for lower cost application using internal 1.2V supply
Venus838FLPx-D	Flash version GPS receiver (external 1.2V version)
	Suitable for lower power application using external 1.2V supply

TECHNICAL SPECIFICATIONS

Receiver Type L1 C/A code

GPS QZSS SBAS 65-channel architecture 167 channel Venus 8 engine

Accuracy Position 2.5m CEP

Velocity 0.1m/sec Timing 10ns

Open Sky TTFF 29 second cold start

3.5 second with AGPS 1 second hot start

Reacquisition < 1s

Sensitivity -165dBm tracking

-148dBm cold start

Update Rate 1 / 2 / 4 / 5 / 8 / 10 / 20 / 25 / 40 / 50 Hz (default 1Hz)

Dynamics 4G

Operational Limits Altitude < 18,000m^{*1}, Velocity < 515m/s^{*1}

Datum Default WGS-84

Interface UART LVTTL level

Baud Rate 4800 / 9600 / 38400 / 115200

Protocol NMEA-0183 V3.01, GGA, GLL, GSA, GSV, RMC, VTG, ZDA

SkyTraq Binary

Main Supply Voltage 2.8V ~ 3.6V (Venus838FLPx-L)

2.8V ~ 3.6V, 1.08V ~ 1.32V (Venus838FLPx-D)

Backup Voltage 2.5V ~ 3.6V

Current Consumption

	Enhanced Acquisition	Low Power Acquisition	Tracking
Venus838FLPx-L	50mA @ 3.3V	38mA @ 3.3V	32mA @ 3.3V
Venus838FLPx-D	20mA @ 3.3V	20mA @ 3.3V	20mA @ 3.3V
	30mA @ 1.2V	18mA @ 1.2V	12mA @ 1.2V

Assuming 90% efficiency switch-mode 3.3V-to-1.2V regulator is used, then

	Enhanced Acquisition	Low Power Acquisition	Tracking
Venus838FLPx-D	32mA @ 3.3V	27mA @ 3.3V	25mA @ 3.3V


Operating Temperature -40 ~ +85 deg-C

Storage Temperature -40 ~ +125 deg-C

Package LGA69 10mm x 10mm x 1.3mm, 0.8mm pitch

^{*1:} COCOM limit, either may be exceeded but not both

BLOCK DIAGRAM

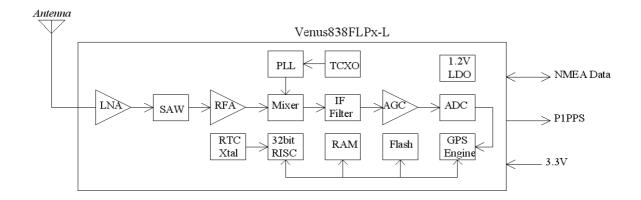

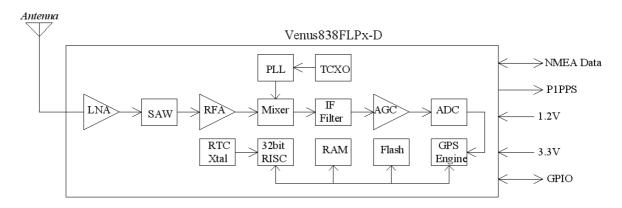


Figure-1 GPS Receiver based on Venus838FLPx

Venus838FLPx PIN-OUT DIAGRAM

Venus838FLPx-L / Venus838FLPx-D Top View

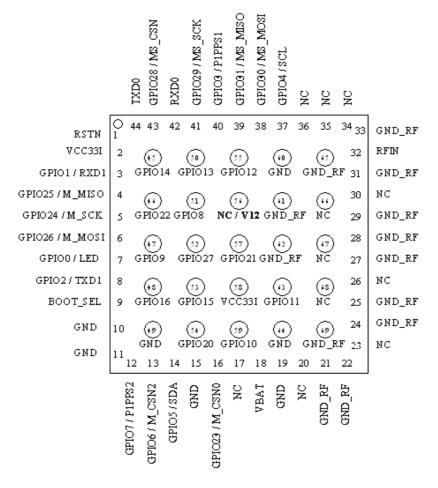


Figure-2 Venus838FLPx Pin-Out Diagram

Venus838FLPx PIN DEFINITION

Pin Number	Signal Name	Type	Description
1	RSTN	Input	Active LOW reset input, 3.3V LVTTL
2	VCC33I	Power Input	Main voltage supply input, 2.8V ~ 3.6V
3	GPIO1 / RXD1	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or receive input of the asynchronous UART port
			Default not used
4	GPIO25 / M_MISO	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or SPI master input
			Default not used
5	GPIO24 / M_SCK	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or SPI master clock
			Default not used
6	GPIO26 / M_MOSI	Bidir	General purpose I/O pin, 3.3V LVTTL
		Didii	Or SPI master output
			Default not used
7	LED / GPIO0	Bidir	Navigation status indicator (default)
		Didii	Or General purpose I/O. 3.3V LVTTL
8	GPIO2 / TXD1	Bidir	General purpose I/O pin. 3.3V LVTTL
		D.dii	Or transmit output of the asynchronous UART port
			Default not used

9	BOOT_SEL	Bidir	Boot mode selection. Pull-high or pull-low
		Diuli	1: execute from internal Flash
			0: execute from internal ROM
			This is opposite of Venus638FLPx
10	GND	Power	
			System ground
11	GND	Power	System ground
12	GPIO7 / P1PPS2	Bidir	General purpose I/O pin, 3.3V LVTTL
			Second P1PPS output
			Default unused
13	GPIO6 / M_CSN2	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or SPI master chip select #2
			Default not used
14	GPIO5 / SDA	Bidir	General purpose I/O pin, 3.3V LVTTL
14	GPIO5 / SDA	DIUII	
			Or I2C serial data
			Default not used
15	GND	Power	System ground
16	GPIO23 / M_CSN0	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or SPI master chip select #0
			Default not used
17	NC		Not connected, empty pin
18	VBAT	Power Input	Supply voltage for internal RTC and backup SRAM, 2.5V ~ 3.6V.
10	VBAI	r ower input	
			VBAT should be powered by non-volatile supply voltage to have
			optimal performance. Maximum VBAT current draw when VCC33I
			is removed is 35uA. If VBAT is connected to VCC33I, powered off
			as VCC33I power is removed, then it'll cold start every time. For
			applications that do not care lesser performance cold starting
			every time, this pin can be connected to VCC33I. Must not be left
			unconnected.
19	GND	Power	System ground
20	NC NC	1 0 1 0 1	Not connected, empty pin
		D	
21	GND_RF	Power	RF section system ground
22	GND_RF	Power	RF section system ground
23	NC		Not connected, empty pin
24	GND_RF	Power	RF section system ground
25	GND RF	Power	RF section system ground
26	NC		Not connected, empty pin
27	GND_RF	Dower	
		Power	RF section system ground
28	GND_RF	Power	RF section system ground
29	GND_RF	Power	RF section system ground
30	NC		Not connected, empty pin
31	GND_RF	Power	RF section system ground
32	RFIN	Input	GPS signal input, connect to GPS antenna.
33	GND_RF	Power	RF section system ground
	_	i owei	
34	NC NC		Not connected, empty pin
35	NC		Not connected, empty pin
36	NC		Not connected, empty pin
37	GPIO4 / SCL	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or I2C SCL clock
			Default not used
38	GPIO30 / MS_MOSI	Bidir	General purpose I/O pin, 3.3V LVTTL
	31 1000 / IVIO_IVIOOI	Didii	Or SPI master/slave data output
	ODIO0: /!!5 :::::		Default not used
39	GPIO31 / MS_MISO	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or SPI master/slave data input
			Default not used
40	P1PPS / GPIO3	bidir	1 pulse per second output. Active after position fix; goes HIGH for
			about 4msec, 3.3V LVTTL (default)
			Or general purpose I/O pin
41	GPIO29 / MS_SCK	Output	General purpose output pin, 3.3V LVTTL
41	GFIOZS/ NO_SCK	Output	
			Or SPI master/slave clock
			Default not used
42	RXD0	Input	Received input of the asynchronous UART port. Used to input
			binary command to the GPS receiver. 3.3V LVTTL
43	GPIO28 / MS_CSN	Bidir	General purpose I/O pin, 3.3V LVTTL
1			Or SPI master/slave chip select
			Default not used
			Doladit not dood
1			

44	TXD0	Output	Transmit output of the asynchronous UART port. Used to output
			standard NMEA-0183 sentence or response to input binary command. 3.3V LVTTL
45	GPIO14	Bidir	General purpose I/O pin, 3.3V LVTTL
			Default not used
46	GPIO22 / M_CSN1	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or SPI master chip select #1
			Default not used
47	GPIO9	Bidir	General purpose I/O pin, 3.3V LVTTL
			Default not used
48	GPIO16	Bidir	General purpose I/O pin, 3.3V LVTTL
			Default not used
49	GND		System ground
50	GPIO13	Bidir	General purpose I/O pin, 3.3V LVTTL
			Default not used
51	GPIO8	Bidir	General purpose I/O pin, 3.3V LVTTL
			Default not used
52	GPIO27	Input	General purpose I/O pin, 3.3V LVTTL
			Default not used
53	GPIO15	Bidir	General purpose I/O pin, 3.3V LVTTL
			Default not used
54	GPIO20 / PWM0	Bidir	General purpose I/O pin, 3.3V LVTTL
			Or PWM output #0
			Default not used
55	GPIO12	Bidir	General purpose I/O pin, 3.3V LVTTL
			Default not used
56	NC / V12		NC pin for Venus838FLPx-L
	ODIO04 / DIAM44	2	1.2V supply input pin for Venus838FLPx-D
57	GPIO21 / PWM1	Output	General purpose I/O pin, 3.3V LVTTL
			Or PWM output #1
	1/00001	D 1 (Default not used
58	VCC33I	Power Input	Main voltage supply input, 2.8V ~ 3.6V
59	GPIO10	Bidir	General purpose I/O pin, 3.3V LVTTL
00	OND	D	Default not used
60	GND	Power	System ground
61	GND_RF	Power	RF section system ground
62	GND_RF	Power	RF section system ground
63	GPIO11	Bidir	General purpose I/O pin, 3.3V LVTTL
64	GND	Dawar	Default not used
		Power	System ground
65	GND_RF	Power	RF section system ground
66,67,68	NC OND. DE	D	Not connected, empty pin
69	GND_RF	Power	RF section system ground


When using Venus838FLPx-L to replace Venus634FLPx, pin-45 \sim pin-69 can all be left unconnected. When using Venus838FLPx-D, 1.2V need to be supplied at pin-56 The NC pins are to be left unconnected.

DC CHARACTERISTICS OF DIGITAL INTERFACE

Below is when VCC3I is at nominally 3.3V

Parameter	Min.	Тур.	Max.	Units
Input Low Voltage			0.8	Volt
Input High Voltage	2.0			Volt
Output Low Voltage, Iol = 4 ~ 7.8mA			0.4	Volt
Output High Voltage, Ioh = 4.6 ~ 15.4mA	2.4			Volt

MECHANICAL DIMENSION

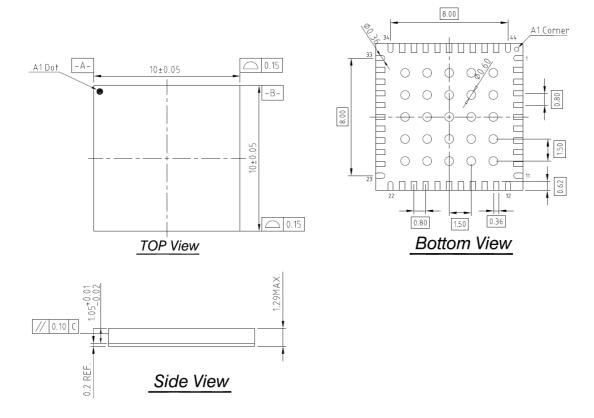

RECOMMENDED PCB FOOTPRINT

Package size = 10 mm x 10mm x1.3 mm Package Pad = 15 x 21 mil Package Pitch= 0.8 mm


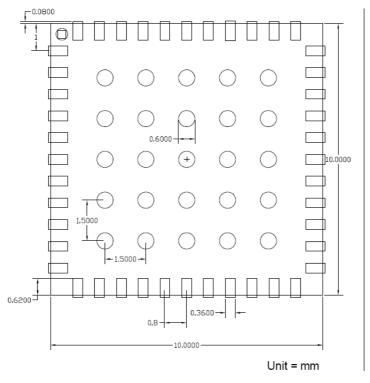


Figure-3 Recommended PCB Footprint.


RECOMMENDED REFLOW PROFILE

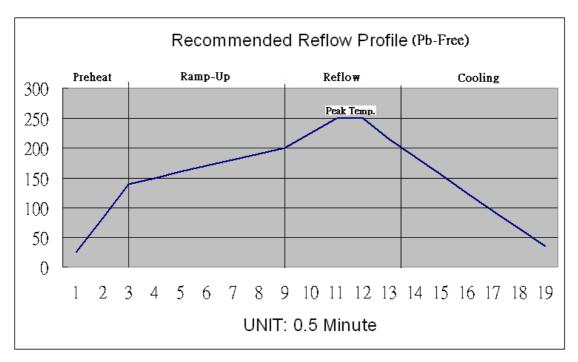


Temperature (°C)	25	82.5	140	150	160	170	180	190	200	225	250	250	215	185	155	125	95	65	35
Time(minute)	0	0.5	1	1.5	2	2.5	3	3.5	4	4.5	5	5.5	6	6.5	7	7.5	8	8.5	9

Profile Description	SnPb Eutectic Process	Lead Free Process						
Preheat								
Maximum Temperature	100+/-10 ℃	140+/-10 °C						
$Time(\DeltaT)$	40~60s	50~70s						
Ramp-Up								
Ramp-Up Rate	1 °C/s Max.	1 °C/s Max.						
$Time(\DeltaT)$	120~150s	160~200s						
Reflow								
Maximum Temperature	Peak Temp.	Peak Temp.						
Minimum Temperature	180+/-5℃	200+/-10°C						
Peak Temperature	220+/-2 ℃	250+/-2 ℃						
Time(∆T) during Peak	10~30s	20~40s						
Temp.+/-2°℃								
Reflow Time(Δ T)	120~150s	120~150s						
Cooling	Cooling							
Cooling Rate	1.5 °C/s Max	1.5 °C/s Max						
$Time(\Delta T)$	60~120s	150~180s						

VENUS838FLPx-L APPLICATION CIRCUIT

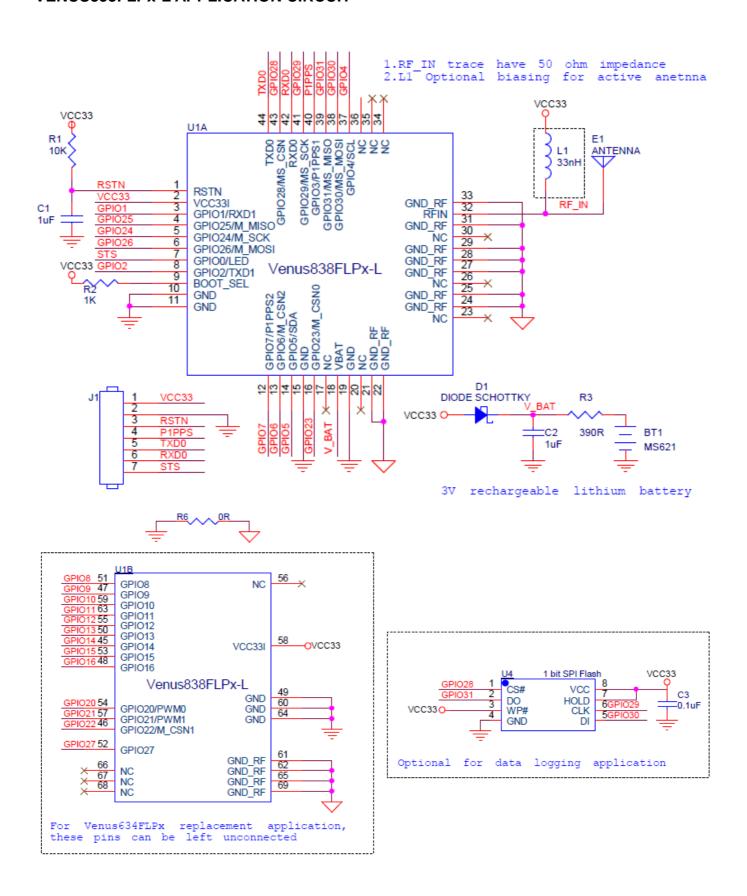

VENUS838FLPx-D APPLICATION CIRCUIT

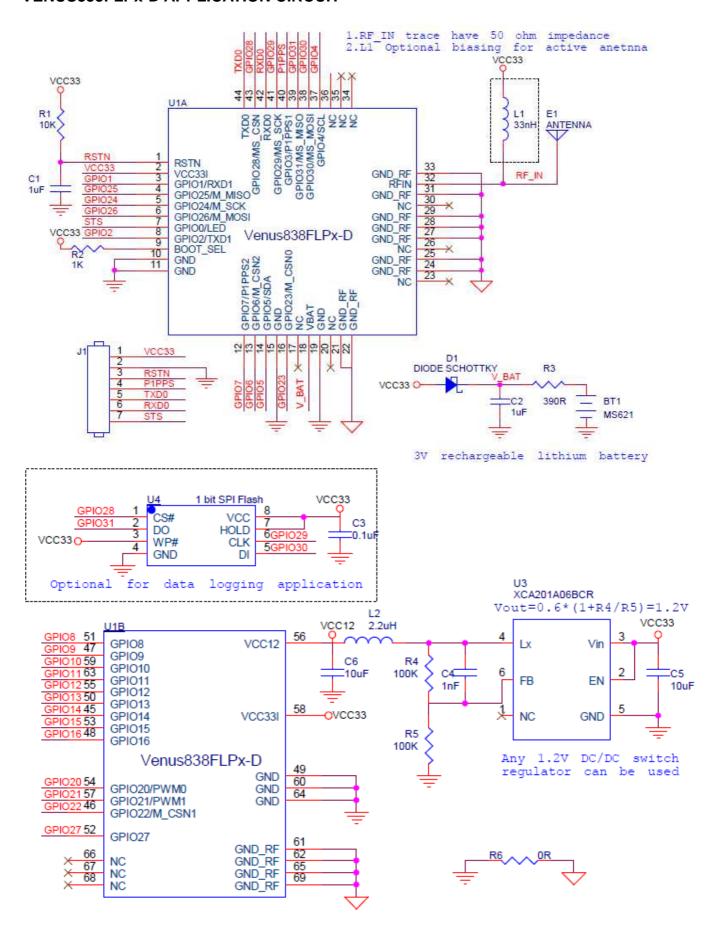

APPLICATION CIRCUIT INTERFACE SIGNALS

STS: Signal to indicate GPS position status, 3.3V LVTTL.

Active low for no-fix, toggle every second after position fix.

P1PPS: 1 pulse per second time-mark (3.3V LVTTL)

RSTN: Active low reset input

VCC33: 3.3V power input

RXD0: UART input (3.3V LVTTL)

TXD0: UART output (3.3V LVTTL)

APPLICATION INFORMATION


- 1. For fast-rising power supply, a simple series R/C reset delay to pin-1, RSTN, as indicated in the application circuit is suitable. For system having slow-rising power supply, a reset IC providing 2~5ms reset duration may be necessary.
- 2. The RF input of Venus838FLPx is already matched to 50-ohm. Passive antenna matched to 50-ohm can be directly applied.
- 3. For using Venus838FLPx with active antenna, one with gain in range of 10~30dB and noise figure < 2dB can be used. Power to the active antenna needs to be applied externally.
- 4. Pin-18 VBAT supplies backup power to the real-time clock and backup SRAM for fast startup. For portable applications where there is battery with voltage in range of 2.5V ~ 3.6V as the main source, the VBAT pin can be directly connected to it. If VBAT is connected to main power as pin-2, no supply voltage as Venus838FLPx is powered off, then it'll cold start every time and GPS performance will not be optimal.
- 5. Like BGA device, the Venus838FLPx is moisture sensitive. It needs to be handled with care to void damage from moisture absorption and SMT re-flow. The device should be baked for 24 hours at 125-degC before mounting for SMT re-flow if it has been removed from the protective seal for more than 48^{*1}hours.
- 6. If hot plug/remove power and UART serial interface, add at least 1K-ohm series resistor to pin-42 RXD0 and pin-44 TXD0 to improve ESD protection.
- 7. The supported SPI Flash memory verified for data logging application are:

Manufacturer	Device ID	Size
EON	EN25F040	4Mbit
EON	EN25F080	8Mbit
MXIC	MX25L400	4Mbit
MXIC	MX25L800	8Mbit
MXIC	MX25L1605	16Mbit
MXIC	MX25L3205	32Mbit
MXIC	MX25L6405	64Mbit
WINBOND	W25X40	4Mbit
WINBOND	W25X80	8Mbit
WINBOND	W25X16	16Mbit
WINBOND	W25X32	32Mbit
WINBOND	W25X64	64Mbit
SST	SST25LF040	4Mbit
SST	SST25LF080	8Mbit
SST	SST25VF016	16Mbit
SST	SST 25VF032	32Mbit


^{*1:} Actual will be longer, moisture sensitivity level still undergoing verification.

SLEEP MODE

For application requiring sleep mode, it can be implemented using regulator with enable control as below figure shows. To put Venus838FLPx to sleep, the power to Venus838FLPx is cut off by disabling the regulator via host processor GPIO pin. In sleep mode, VBAT consume less than 40uA. Fast start up operation is provided by keeping supply voltage to VBAT constant, retaining the internal data and keep RTC running while Venus838FLPx is put to sleep or when supply 3.3V power is removed.

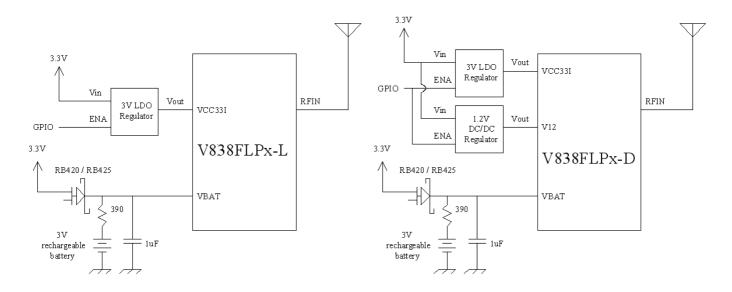



For applications needing sleep mode but cannot have extra cost of adding a rechargeable backup supply battery, it can be implemented as below figure shows. It will provide fast start up when Venus838FLPx is put to sleep and awakened, but will cold start every time when the 3.3V supply voltage is removed and re-applied again.

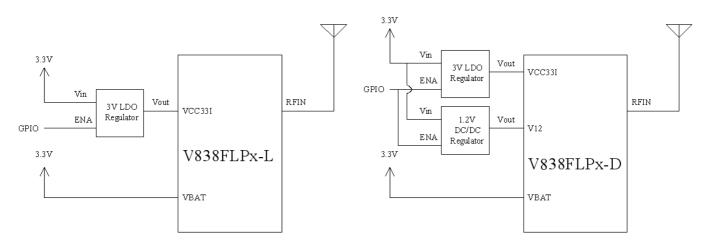

When using sleep mode, add 10K ~ 20K series resistor on pin-42 RXD0 to reduce leakage current.

PACKAGE

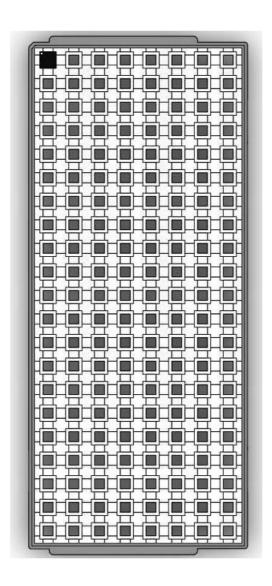

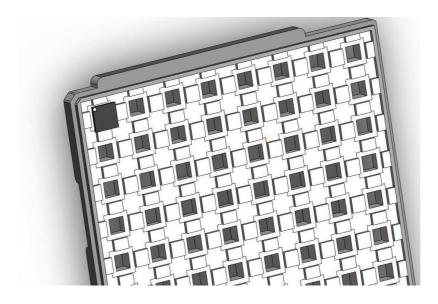

NMEA MESSAGES

The full descriptions of supported NMEA messages are provided at the following paragraphs.

GGA - Global Positioning System Fix Data

Time, position and fix related data for a GPS receiver.

Structure:

\$GPGGA,hhmmss.sss,ddmm.mmmm,a,dddmm.mmmm,a,x,xx,x.x,x.x,M,,,,xxxx*hh<CR><LF>

1 2 3 4 56789 10 11

Example:

\$GPGGA,111636.932,2447.0949,N,12100.5223,E,1,11,0.8,118.2,M,,,,0000*02<CR><LF>

Field	Name	Example	Description
1	UTC Time	111636.932	UTC of position in hhmmss.sss format, (000000.000 ~ 235959.999)
2	Latitude	2447.0949	Latitude in ddmm.mmmm format
			Leading zeros transmitted
3	N/S Indicator	N	Latitude hemisphere indicator, 'N' = North, 'S' = South
4	Longitude	12100.5223	Longitude in dddmm.mmmm format
			Leading zeros transmitted
5	E/W Indicator	Е	Longitude hemisphere indicator, 'E' = East, 'W' = West
6	GPS quality	1	GPS quality indicator
	indicator		0: position fix unavailable
			1: valid position fix, SPS mode
			2: valid position fix, differential GPS mode
			3: GPS PPS Mode, fix valid
			4: Real Time Kinematic. System used in RTK mode with fixed integers
			5: Float RTK. Satellite system used in RTK mode. Floating integers
			6: Estimated (dead reckoning) Mode
			7: Manual Input Mode
			8: Simulator Mode
7	Satellites Used	11	Number of satellites in use, $(00 \sim 12)$
8	HDOP	0.8	Horizontal dilution of precision, (00.0 \sim 99.9)
9	Altitude	108.2	mean sea level (geoid), (-9999.9 ~ 17999.9)
10	DGPS Station ID	0000	Differential reference station ID, 0000 ~ 1023
			NULL when DGPS not used
11	Checksum	02	

GLL - Latitude/Longitude

Latitude and longitude of current position, time, and status.

Structure:

GPGLL,ddmm.mmm,a,dddmm.mmmm,a,hhmmss.sss,A,a*hh<CR><LF>

1 2 3 4 5 678

Example:

\$GPGLL,2447.0944,N,12100.5213,E,112609.932,A,A*57<CR><LF>

Field	Name	Example	Description
1	Latitude	2447.0944	Latitude in ddmm.mmmm format
			Leading zeros transmitted
2	N/S Indicator	N	Latitude hemisphere indicator
			'N' = North
			'S' = South
3	Longitude	12100.5213	Longitude in dddmm.mmmm format
			Leading zeros transmitted
4	E/W Indicator	E	Longitude hemisphere indicator
			'E' = East
			'W' = West
5	UTC Time	112609.932	UTC time in hhmmss.sss format (000000.000 ~
			235959.999)
6	Status	А	Status, 'A' = Data valid, 'V' = Data not valid
7	Mode Indicator	А	Mode indicator
			'N' = Data not valid
			'A' = Autonomous mode
			'D' = Differential mode
			'E' = Estimated (dead reckoning) mode
			'M' = Manual input mode
			'S' = Simulator mode
8	Checksum	57	

GSA - GNSS DOP and Active Satellites

GPS receiver operating mode, satellites used in the navigation solution reported by the GGA or GNS sentence and DOP values.

Structure:

Example:

\$GPGSA,A,3,05,12,21,22,30,09,18,06,14,01,31,,1.2,0.8,0.9*36<CR><LF>

Field	Name	Example	Description
1	Mode	А	Mode
			'M' = Manual, forced to operate in 2D or 3D mode
			'A' = Automatic, allowed to automatically switch 2D/3D
2	Mode	3	Fix type
			1 = Fix not available
			2 = 2D
			3 = 3D
3	Satellite used 1~12	05,12,21,22,3	Satellite ID number, 01 to 32, of satellite used in solution,
		0,09,18,06,14,	up to 12 transmitted
		01,31,,	
4	PDOP	1.2	Position dilution of precision (00.0 to 99.9)
5	HDOP	0.8	Horizontal dilution of precision (00.0 to 99.9)
6	VDOP	0.9	Vertical dilution of precision (00.0 to 99.9)
7	Checksum	36	

GSV - GNSS Satellites in View

Number of satellites (SV) in view, satellite ID numbers, elevation, azimuth, and SNR value. Four satellites maximum per transmission.

Structure:

\$GPGSV,x,x,xx,xx,xx,xx,xx,xx,xx,xx,xx *hh < CR > < LF > 1 2 3 4 5 6 7 4 5 6 7 8

Example:

\$GPGSV,3,1,12,05,54,069,45,12,44,061,44,21,07,184,46,22,78,289,47*72<CR><LF>
\$GPGSV,3,2,12,30,65,118,45,09,12,047,37,18,62,157,47,06,08,144,45*7C<CR><LF>
\$GPGSV,3,3,12,14,39,330,42,01,06,299,38,31,30,256,44,32,36,320,47*7B<CR><LF>

Field	Name	Example	Description
1	Number of message	3	Total number of GSV messages to be transmitted (1-3)
2	Sequence number	1	Sequence number of current GSV message
3	Satellites in view	12	Total number of satellites in view (00 ~ 12)
4	Satellite ID	05	Satellite ID number, GPS: 01 \sim 32, SBAS: 33 \sim 64 (33 =
			PRN120)
5	Elevation	54	Satellite elevation in degrees, (00 ~ 90)
6	Azimuth	069	Satellite azimuth angle in degrees, (000 ~ 359)
7	SNR	45	C/No in dB (00 ~ 99)
			Null when not tracking
8	Checksum	72	

RMC - Recommended Minimum Specific GNSS Data

Time, date, position, course and speed data provided by a GNSS navigation receiver.

Structure:

1 2 3 4 5 678 9 1011

Example:

\$GPRMC,111636.932,A,2447.0949,N,12100.5223,E,000.0,000.0,030407,,,A*61<CR><LF>

Field	Name	Example	Description
1	UTC time	0111636.932	UTC time in hhmmss.sss format (000000.00 ~
			235959.999)
2	Status	А	Status
			'V' = Navigation receiver warning
			`A' = Data Valid
3	Latitude	2447.0949	Latitude in dddmm.mmmm format
			Leading zeros transmitted
4	N/S indicator	N	Latitude hemisphere indicator
			'N' = North
			'S' = South
5	Longitude	12100.5223	Longitude in dddmm.mmmm format
			Leading zeros transmitted
6	E/W Indicator	E	Longitude hemisphere indicator
			'E' = East
			'W' = West
7	Speed over ground	0.000	Speed over ground in knots (000.0 ~ 999.9)
8	Course over ground	0.000	Course over ground in degrees (000.0 ~ 359.9)
9	UTC Date	030407	UTC date of position fix, ddmmyy format
10	Mode indicator	А	Mode indicator
			'N' = Data not valid
			`A' = Autonomous mode
			'D' = Differential mode
			'E' = Estimated (dead reckoning) mode
			'M' = Manual input mode
			'S' = Simulator mode
11	checksum	61	

VTG - Course Over Ground and Ground Speed

The Actual course and speed relative to the ground.

Structure:

 $\mathsf{GPVTG}, \mathsf{x}.\mathsf{x}, \mathsf{T}, \mathsf{,M}, \mathsf{x}.\mathsf{x}, \mathsf{N}, \mathsf{x}.\mathsf{x}, \mathsf{K}, \mathsf{a*hh} < \mathsf{CR} > < \mathsf{LF} >$

1 2 3 4 5

Example:

\$GPVTG, 000.0,T,,M,000.0,N,0000.0,K,A*3D<CR><LF>

Field	Name	Example	Description
1	Course	0.000	True course over ground in degrees (000.0 ~ 359.9)
2	Speed	0.000	Speed over ground in knots (000.0 ~ 999.9)
3	Speed	0000.0	Speed over ground in kilometers per hour (0000.0 ~ 1800.0)
4	Mode	A	Mode indicator 'N' = not valid 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode 'M' = Manual input mode 'S' = Simulator mode
5	Checksum	3D	

ZDA - Time & Date

UTC, day, month, year and local time zone.

Structure:

GPZDA,hhmmss.sss,xx,xx,xxx,xx,xx*hh<CR><LF>

1 234567

Example:

\$GPZDA,052633.376,13,07,2012,00,00*51<CR><LF>

Field	Name	Example	Description
1	UTC time	0111636.932	UTC time in hhmmss.sss format (000000.000 ~
			235959.999)
2	Day	13	Day, 01 to 31
3	Month	07	Month, 01 to 12
4	Year	2012	Year in yyyy format
5	Local zone hours	00	Local zone hours, 00 to +/- 13 hrs
6	Local zone minutes	00	Local zone minutes, 00 to +59
7	checksum	51	

ORDERING INFORMATION

Part Number	Description
Venus838FLPx-L	Flash version GPS receiver (internal 1.2V LDO version)
Venus838FLPx-D	Flash version GPS receiver (external 1.2V version)

SkyTraq Technology, Inc.

4F, No.26, Minsiang Street, Hsinchu, Taiwan, 300

Phone: +886 3 5678650 Fax: +886 3 5678680 Email: info@skytraq.com.tw

© 2013 SkyTraq Technology Inc. All rights reserved.

Not to be reproduced in whole or part for any purpose without written permission of SkyTraq Technology Inc ("SkyTraq"). Information provided by SkyTraq is believed to be accurate and reliable. These materials are provided by SkyTraq as a service to its customers and may be used for informational purposes only. SkyTraq assumes no responsibility for errors or omissions in these materials, nor for its use. SkyTraq reserves the right to change specification at any time without notice.

These materials are provides "as is" without warranty of any kind, either expressed or implied, relating to sale and/or use of SkyTraq products including liability or warranties relating to fitness for a particular purpose, consequential or incidental damages, merchantability, or infringement of any patent, copyright or other intellectual property right. SkyTraq further does not warrant the accuracy or completeness of the information, text, graphics or other items contained within these materials. SkyTraq shall not be liable for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials.

SkyTraq products are not intended for use in medical, life-support devices, or applications involving potential risk of death, personal injury, or severe property damage in case of failure of the product.

Change Log

Version 0.4, March 7, 2014

1. Pin-36 changed to NC

Version 0.3, February 24, 2014

- 2. Updated DC characteristics
- 3. Added ZDA

Version 0.2, February 19, 2014

- 1. Fixed RF input schematic error
- 2. Updated VBAT description

Version 0.1, December 25, 2013

1. Initial release