

#### Name

- STM32G474\_MB1303\_SRC\_VDM
- STM32G474\_MB1303\_SRC\_ONLY\_noRTOS
- STM32G474\_MB1303\_SRC\_ONLY
- STM32G474\_MB1303\_SNK\_VDM
- STM32G474\_MB1303\_SNK\_ONLY\_noRTOS
- STM32G474\_MB1303\_SNK\_ONLY
- STM32G474\_MB1303\_DRP\_VDM
- STM32G474\_MB1303\_DRP\_SRCING\_DEV
- STM32G474\_MB1303\_DRP\_ONLY\_noRTOS
- STM32G474\_MB1303\_DRP\_ONLY
- STM32G474\_MB1303\_DRP\_2PORTS



### STSW-STUSB014

## Firmware package documentation

V1.1



STUSB



### **Table of Content**

4 Folder view

9 Shield MCU setup

<u>Compiler</u>

10 <u>GPIO\_FOR\_SRC</u>

6 Project Type

11 \_VVAR\_FLASH

7 Compilation switches

Projects Overview





### Overview

The software library includes 8 different software frameworks already optimized to address most common application scenario:

	Project	Typical Application
#1	STM32G474_MB1303_SRC_ONLY (*)	Provider / SOURCE (power management)
#2	STM32G474_MB1303_SRC_VDM	Provider / SOURCE (power management) + extended message support + UFP support (Billboard class)
#3	STM32G474_MB1303_SNK_ONLY (*)	Consumer / SINK (power management)
#4	STM32G474_MB1303_SNK_VDM	Consumer / SINK (power management) + extended message support + UFP support (Billboard class)
#5	STM32G474_MB1303_DRP_ONLY (*)	Dual Role Port (power management)
#6	STM32G474_MB1303_DRP_VDM	Dual Role Port (power management) + extended message support + UFP support (Billboard class)
#7	STM32G474_MB1303_DRP_2PORTS	2 x Dual Role Port (power management) + dead battery mode + extended message support + UFP support (HID class)
#8	STM32G474_MB1303_DRP_SRCING_DEV	Dual Role Port requesting PR_swap when attached in Sink or DR_swap when attached in Source + UFP support (HID class)



- project annotated with a (\*) are available with and without RTOS support

<sup>-</sup> by default, all projects are packaged with RTOS support



### Folder view

 Projects folder provides different application examples in which each project name is prefix with MCU name:

STSW_STUSB014_v1.1 > Projects > STM32G474RE-Nucleo >	Appli > usbpd
Name	Туре
STM32G474_MB1303_SRC_VDM	File folder
STM32G474_MB1303_SRC_ONLY_noRTOS	File folder
STM32G474_MB1303_SRC_ONLY	File folder
STM32G474_MB1303_SNK_VDM	File folder
STM32G474_MB1303_SNK_ONLY_noRTOS	File folder
STM32G474_MB1303_SNK_ONLY	File folder
STM32G474 MB1303 DRP_VDM	File folder
STM32G474_MB1303 DRP SRCING_DEV	File folder
STM32G474_MB1303_DRP_ONLY_noRTOS	File folder
STM32G474_MB1303_DRP_ONLY	File folder
STM32G474_MB1303_DRP_2PORTS	File folder




Project name is build as: MCUname\_shieldref\_TypeCrole\_type



## Compiler

### Projects can be compiled with either:

- IAR 8.x,
- GCC using GNU Arm Embedded Toolchain (version used: 9 2020-q2-update with GNU make-4.3),
- STM32CubeIDE (download <u>here</u>).

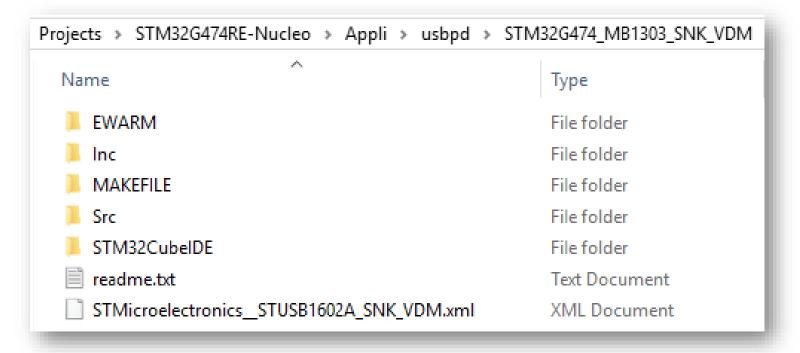





## Project Type

### Type = ONLY

Those projects are simple ones. Only mandatory features are present, with RTOS

### Type = ONLY\_noRTOS

Those projects are simple ones. Only mandatory features are present, without RTOS

### Type = VDM

 Those projects are complex ones. Lot of optional features are present and could be disabled/enabled by compilation switch

### Type = SRCING\_DEVICE

 This project is DRP sourcing device: application always try to achieve power role as source and data role as UFP





## Compilation switches (1/2)

ONLY	ONLY_noRTOS	VDM	2PORTS	SRCING_DEVICE	Switch name	Comment
✓	✓	✓	✓	✓	_TRACE	Trace enabled for debug using UART
✓	✓	✓	✓	✓ _ERROR_RECOVERY		Enable error_recovery in lib stack.  Mandatory for DRP compliance
✓	✓	✓	✓	✓	_VCONN_SUPPORT	Enabled in SRC and DRP project for cable messaging
X	X	$\checkmark$	✓	✓	_SRC_CAPA_EXT	Enable source extended capability messages
X	X	✓	✓	✓	_ADC_MONITORING	Enable MCU ADC usage for voltage reporting.
X	X	✓	✓	✓	_VDM	Enable VDM messages possibility and needed for cable messages
☼	<b>#</b>	**	₩	<b>\(\phi\)</b>	SPI_ONE_LINE	Disabled by default. Allow to merge MOSI and MISO pins
X	X	<b>*</b>	*	<b>\(\frac{\frac{1}{3}}{3}\)</b>	_MANU_INFO	Disabled by default. Used to send/reply to manufacturer info messages
X	X	✓	✓	✓	_ALERT	Allow to send Alert messages
X	X	✓	✓	✓	_STATUS	Allow to send Status messages





## Compilation switches (2/2)

ONLY	ONLY_no RTOS	VDM	2PORTS	SRCING_ DEVICE	Switch name	Comment
X	X	<b>\(\phi\)</b>	<b>‡</b>	₩	_BATTERY	Disabled by default. Used to send/reply to battery messages
X	X	✓	✓	✓	USBPD_DATA	To setup and initialize USB IP in peripheral.  Disabled by default on 'SRC' project
X	X	<b>\(\phi\)</b>	✓	✓	_CLASS_HID	To configure descriptor class in HID
X	X	✓	<b>\(\phi\)</b>	<b>\(\Delta\)</b>	_CLASS_BB	To configure descriptor class in BillBoard
X	X	<b>*</b>	<b>\(\psi\</b>	✓	SOURCING_DEVICE	Application requests PR_swap when attached in Sink or DR_swap when attached in Source
X	X	✓	*	<b>*</b>	UNCHUNKED_SUPPORT	Allow support of unchunked messages
✓	X	✓	✓	✓	USBPD_LED_SERVER	To enable LED server for VBUS/CC/role toggling
<b>\(\psi\</b>	<b>*</b>	<b>\(\bar{\pi}\)</b>	<b>*</b>	<b>\(\frac{\dagger}{\pi}\)</b>	_GPIO_FOR_SRC	To drive 2 other voltages on top of 5V, in Source or DRP, using OpenDrain GPIOs (see <a href="here">here</a> )
₩	<b>\(\phi\)</b>	<b>*</b>	₩	<b>\(\bar{\pi}\)</b>	_VVAR_FLASH	Allows to output DAC on ADD0 pin. DAC output value is always 1/10 of VBUS value

Not supported and can't be enabled in current project

Supported by default (and can be disabled) in current project




Not supported by default but can be enabled in current project



## Shield-MCU setup

 MCU and board related settings are part of BSP folder. MCU name is found in folder name: see stm32G474 example below

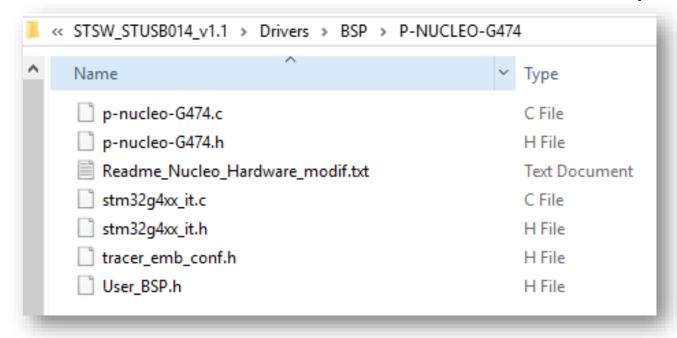


 In BSP file, Readme\_Nucleo\_Hardware\_modif.txt file gives instructions on modifications to be done on Nucleo board used in order to use MB1303 shield





## \_GPIO\_FOR\_SRC

Hardware implementation proposal using \_GPIO\_FOR\_SRC switch.

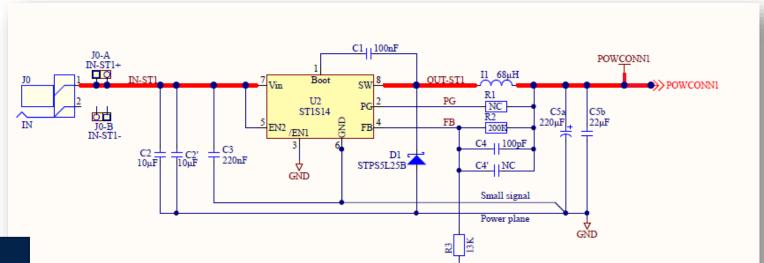

It proposes total 3 PDOs: 5V-9V-15V toggling PB6 and PB7 defined as OpenDrain GPIOs using NUCLEO-G474RE




≪Nucleo PB6



## \_VVAR\_FLASH

Hardware implementation proposal using \_VVAR\_FLASH switch.

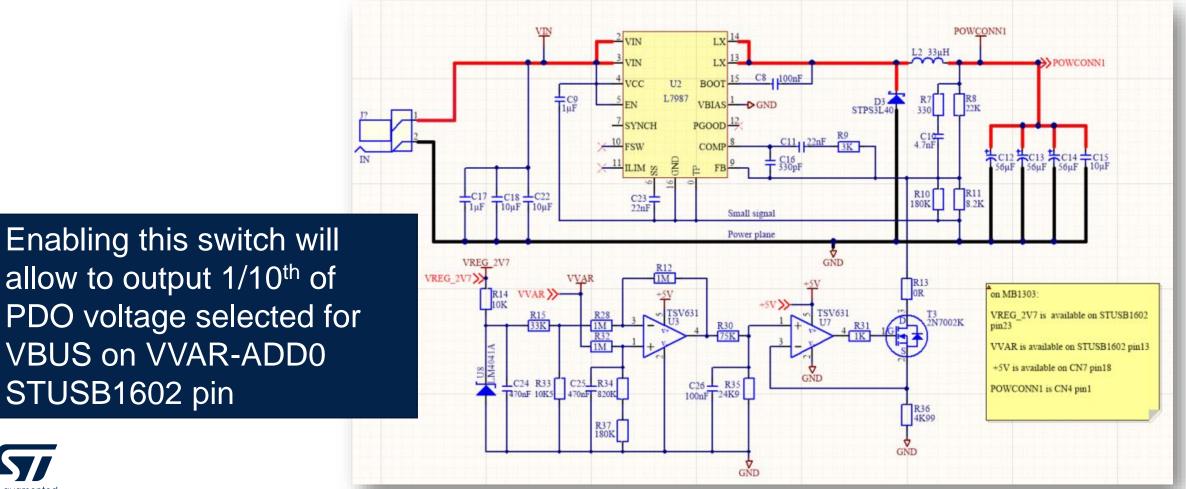



STUSB1602 pin



# #1 - MB1303\_SRC\_ONLY overview

- This is the typical framework for SOURCE only applications, implementing USB PD power negotiation.
- The code provided includes 1 PDO including EMCA support: when used with 3A only cables, maximum current advertised by the SOURCE is bounded to 3A for those PDO which normally support more than 3A.
- Default profiles is:
  - PDO1: 5V, 3A

#### NB:





## #2 - MB1303\_SRC\_VDM overview

- This is the typical framework for SOURCE only applications, implementing USB PD power negotiation and supporting optional extended messages.
- The code provided includes 1 PDO (including EMCA support), and is able to answer to the following messages:
  - Manufacturer info
  - Discover identity
  - Unchunked extended messages
- Defaults profiles is:
  - PDO1: 5V 3A

#### NB:





# #3 - MB1303\_SNK\_ONLY overview

- This is the typical framework for SINK only applications, implementing USB PD power negotiation.
- The code provided includes 2 PDOs (max power has priority),
- Defaults profiles are:

PDO1: 5V - 1.5A

PDO2: 9V - 1.5A





## #4 - MB1303\_SNK\_VDM overview

- This is the typical framework for SINK only applications, implementing USB PD power negotiation and supporting optional extended messages. Project is defined as an Alternate Mode Adapter: it is able to enter alternate as a Display Port and enumerate as Billboard otherwise.
- The code provided includes 2 PDOs, and is able to answer:
  - Manufacturer info
  - Discover identity
  - Unchunked extended messages
- Defaults profiles are:
  - PDO1: 5V 1.5A
  - PDO2: 9V 1.5A





# #5 - MB1303\_DRP\_ONLY overview

- This is the typical framework for Dual Role Port applications, such as Power bank applications.
- By default, the port connects as a SINK when application is not supplied (dead Battery mode), and supports both power and data role swap (PR\_SWAP and DR\_SWAP) and EMCA.
- Defaults profiles are:
  - Source:
    - PDO1: 5V 3A
  - Sink:
    - PDO1: 5V 1.5A
    - PDO2: 9V 1.5A

#### NB:





# #6 - MB1303\_DRP\_VDM overview

- This is the typical framework for Dual Role Port supporting alternate mode in UFP.
- By default, the port connects as a SINK when application is not supplied (dead Battery mode), and supports both power and data role swaps (PR\_SWAP and DR\_SWAP). It implements USB PD power negotiation for both SOURCE (including EMCA support) and SINK, and supports optional PD3 features like:
  - Manufacturer info, Discover identity, Unchunked extended messages
  - Alternate mode:
    - Enters DP mode
    - Enumerate as Billboard if needed
- Defaults profiles are:
  - Source:
    - PDO1: 5V 3A
  - Sink:
    - PDO1: 5V 1.5A
    - PDO2: 9V 1.5A

NB:





# #7 - MB1303\_DRP\_2ports overview

- This is the typical framework for dual port applications with Dual Role Port capability supporting extended messages and UFP.
- It can be used typically for dual DRP applications, sourcing devices or sinking host
- By default, each port connects as a SINK when application is not supplied (dead Battery mode), and supports both power and data role swaps (PR\_SWAP and DR\_SWAP). It implements USB HID device for port #0, and USB PD power negotiation for both SOURCE (including EMCA support) and SINK, and supports optional PD3 features.
- Defaults profiles are:
  - Source:
    - PDO1: 5V 3A
  - Sink:
    - PDO1: 5V 1.5A
    - PDO2: 9V 1.5A

#### NB:





# #8 - MB1303\_DRP\_SRCING\_DEVICE overview

- This is the typical framework for single port application with Dual Role Port capability supporting extended messages and UFP.
- It can be used typically for applications acting as a power SOURCE and as a PERIPHERAL for USB data.
- At the connection, the port connects either as a SINK or as a SOURCE (depending on counterpart device role). When contract is established as aSINK (so by default UFP), it requests a POWER\_SWAP to become a SOURCE/UFP (HID). At the opposite, when contract is established as a SOURCE (so by default DFP), it requests a DATA\_SWAP to become a SOURCE/UFP (HID)
- Defaults profiles are:
  - Source:
    - PDO1: 5V 3A
  - Sink:
    - PDO1: 5V 1.5A
    - PDO2: 9V 1.5A

#### NB:

