
# Step 7


# Enabling a new Switch PIN to OpenHAB

To add our newly flashed (kamoteq) esp8266 nodeMCU to the OpenHAB follow the below steps


Click Settings > and Things

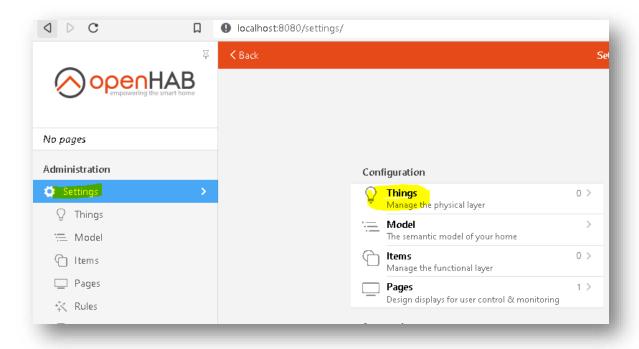

Click the newly added ESP device

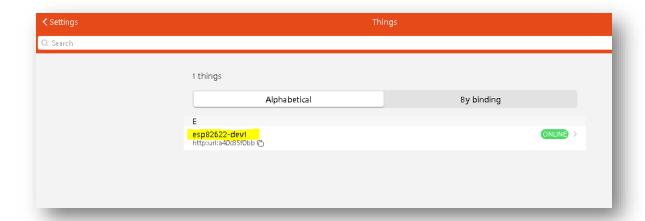

## Click the "Code" tab

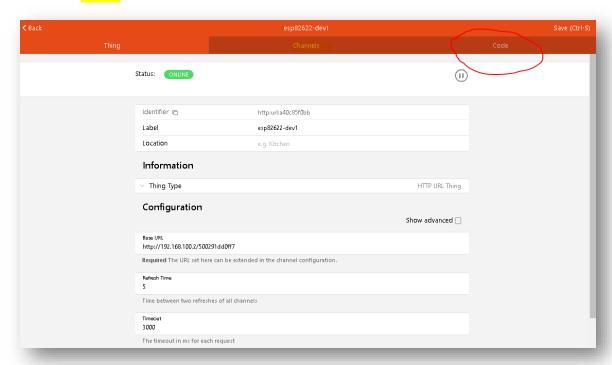

This will display the editing window

```
≺ Back

                                                                          esp82622-dev1
      UID: http:url:a40c85f0bb
      label: esp82622-dev1
      thingTypeUID: http:url
3
     configuration:
        authMode: BASIC
        ignoreSSLErrors: false
        baseURL: http://192.168.100.2/500291dd0ff7
        delay: 0
9
       stateMethod: GET
       refresh: 5
10
        commandMethod: GET
11
       timeout: 3000
12
        bufferSize: 2048
13
14
```

Add these lines of codes and change the <changeme> with the pin number you want to use

Available pins for output switches are GPIO 4,5,12,13 & 14

```
-----code ------channels:
```

```
- id: nu_pin<a href="changeme">channelTypeUID: http:switch
label: nu_pin<a href="changeme">changeme</a>
description: null
configuration:
onValue: "1"
offValue: "0"
stateExtension: /?req=stat&pin=<a href="changeme">changeme</a>
commandExtension: /?req=set&pin=<a href="changeme">changeme</a>
stateTransformation: JSONPATH:$.status
```

```
----- code -----
```

Or use this (since the setup lab used pin 14/D5 for testing)

```
channels:
- id: nu_pin 14
channelTypeUID: http:switch
label: nu_pin 14
description: null
configuration:
onValue: "1"
offValue: "0"
stateExtension: /?req=stat&pin=14
commandExtension: /?req=set&pin=14 &mode=%2$s
stateTransformation: JSONPATH:$.status
```

[can't copy the code above?] Click this < link > to get the text format file

NOTE! channels: must be on the same line as the configuration inside the editor


```
UID: http:url:a40c85f0bb
label: esp82622-dev1
thingTypeUID: http:url
configuration:
  authMode: BASIC
  ignoreSSLErrors: false
  baseURL: http://192.168.100.2/500291dd0ff7
  stateMethod: GET
  refresh: 5
  commandMethod: GET
  timeout: 3000
  bufferSize: 2048
channels:
  - id: nu_pin14
    channelTypeUID: http:switch
    label: nu_pin14
    description: null
    configuration:
     onValue: "1"
      offValue: "0"
     stateExtension: /?req=stat&pin=14
     commandExtension: /?req=set&pin=14&mode=%2$s
      stateTransformation: JSONPATH: $.status
```

Warning! Alignment or indentation on the source code is very important otherwise this will throw an error


If you want to add more switches, just copy and update the pin number on just make sure you follow the Correct indentations for the coding

Once you confirmed you're done, then you can go ahead and save the changes by clicking the button "Save (Ctrl+S)" on The far upper right side


### Now click the Tab "Channels" and click the newly created channel

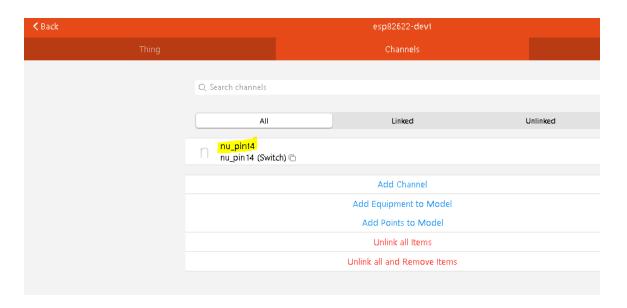


Click "Add Link to Item"

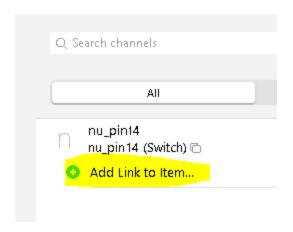


### Select the "Create a new Item"

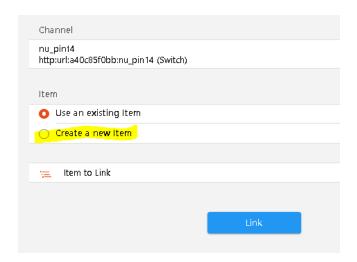


In the Category entry type "switch" and click the Link button to finish

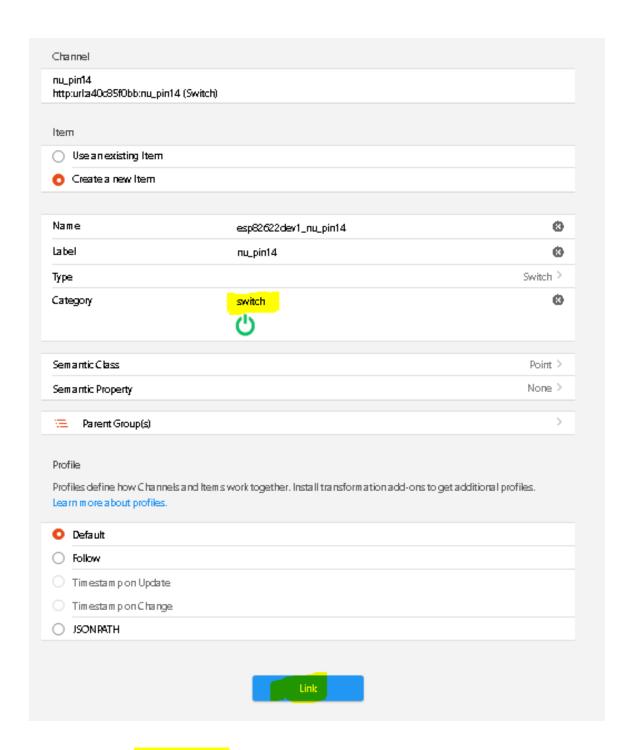

Click the new Switch Point

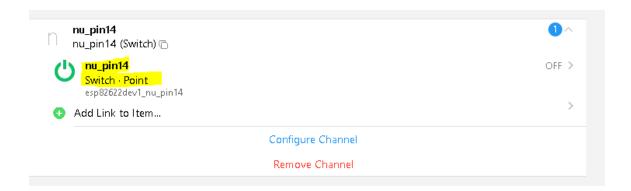

On this page, you can test the new switch functionality by clicking the button on/off

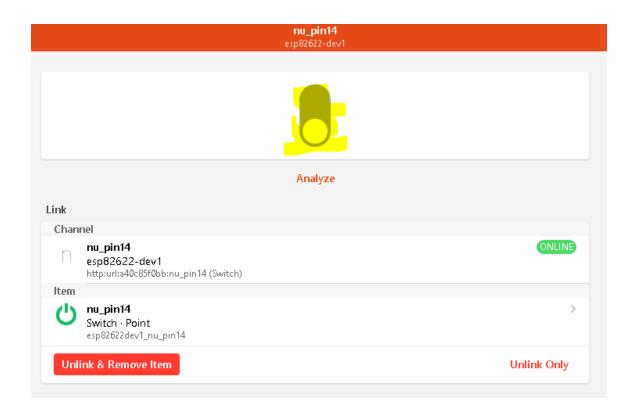

This completes STEP 7 (Enabling a new Switch PIN to OpenHAB)

Congratulations!

Proceed to STEP 8 (Add DHT Sensor Channels)

End