# Section 7 LOCKOUT AND TAGOUT

# **General Requirements**

The procedures outlined below are intended to prevent injury or death to employees by requiring certain procedures be taken before working on equipment. Unless it is not feasible (i.e., inspecting, troubleshooting, observing, etc.), employees shall not perform any work on equipment where there is a potential to be exposed to energized mechanical or electrical hazards until all sources of energy have been de-energized, grounded or quarded.


Equipment variations require the mechanic to know what car controls are available and operating; the mechanic must know what safety methods will be employed to gain control of the car. Never access the hoistway unless you have control of the car.

All forms of potential energy including electrical, mechanical, hydraulic, pneumatic, kinetic, gravity, etc. shall be controlled to prevent inadvertent movement of a unit or piece of equipment being worked on.

#### 7.1 Procedures

- (a) Understand the equipment; be aware of its potential hazards. If it is not understood, or if you have a question, contact your Superintendent/Manager immediately before proceeding.
- (b) Where the accidental starting of the equipment would create a hazard deactivate mainline disconnect switch to shut off the power. CAUTION: Do not stand directly in front of the mainline disconnect when operating (stand off to the side of the disconnect). Each employee shall apply to the disconnect switch a personal lock and a "Do Not Start" tag with the employee's name (Section 5.3).

- (c) Some components (capacitors, MG sets, etc.) often store residual energy, even though power is shut off. The stored energy can result in electrical shock or unintended movement of equipment. Before working on equipment with these components, discharge the stored energy to ground.
- (d) When it is impossible to lock the switch, assurances shall be made that the circuit is deactivated and tagged out.

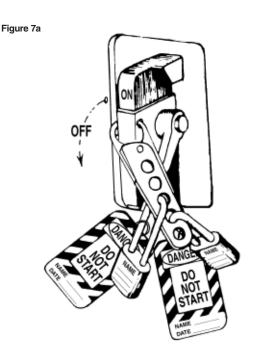

- (e) CAUTION: It is possible to have electrical energy on a controller that has had the mainline-disconnect switch deactivated. After initiating lockout and tagout, the lighting circuit may still be energized.
- (f) Once the system has been locked out, verify with the appropriate test equipment that the system has been de-energized. (see Section 5.3)
- (g) Before working on mechanical systems, make sure the system is understood. If there are any questions, get answers before proceeding. Such systems often store energy, even though the electrical power is shut off. The stored energy can result in violent movement of a machine part, such as a plunger or piston rod, when work is done on another portion of the equipment. If the portion of the system to be worked on can be isolated and the pressure in that portion of the system released by bleeding, it is not necessary to shut down the entire system. However, the valves and controls which could readmit pressure to the system being worked on shall be identified with "Do Not Start" tags and locked out. If a lockout is not possible, other positive action shall be taken to ensure that the equipment will not be energized. Check flanged connections, cylinder heads or plate-mounted components. The sticking of a gasket can hold the parts together, while bolts are removed, and then can come apart violently due to stored pressure.
- (h) When working under a hydraulic elevator, devices such as jacks, pipe stands, etc. shall be installed to prevent the elevator from injuring workers in the pit.
- (i) Each employee who performs duties described above will be provided with an individually keyed or combination lockout device and tags. If more than one employee is assigned to a task, each employee shall be responsible for placing their own lock and "Do Not Start" tag, so the controls cannot be operated.

- If controls are so located that only one lock can be accommodated, a multiple lockout device shall be used.
- (k) Lockout devices shall be made available for locking out additional equipment.
- (I) Where special devices are required to lockout circuit breakers, they shall be available and used.
- (m) Lockout devices shall be returned to the Company when an employee transfers to other assignments or terminates.
- (n) When switches are deactivated for service, repairs or alterations, they shall be locked out and tagged out.
- (o) Before starting work on any equipment that is out of service, make a thorough check of all electrical control and starting devices. When any part of such equipment is remotely controlled, lockout and tagout the mainline disconnect and confirm that the system is de-energized [Section 7.1(f)].

### 7.1.1 Shift Changes

- (a) When employees are ending their shift and/or other employees will continue work on the machine or equipment, the employees shall attach the company locks and tags and then shall remove their personal locks and tags.
- (b) The new shift employees shall apply their personal locks and tags before beginning work on the machine or equipment. After the employees have placed their personal lockout mechanism and tag, and have verified that the system is de-energized the company locks and tags shall be removed.

## 7.1.2 Restoring Equipment and Machines to Normal Service

(a) All tools shall be removed, all guards and covers shall be reinstalled and the area shall be checked to insure that no personnel are exposed to the equipment or machine.