## First order instrument

$\tau \frac{dq_O}{dt} + q_O = K q_i$	$\frac{\rho CpV}{hA_S} \frac{dx}{dt} + x = \frac{\beta V}{A_C} T_f - \text{Thermometer}$
Step response	Ramp response
$\frac{q_o(t)}{q_{is}} = K \left(1 - e^{-\frac{t}{\tau}}\right)$	$q_o(t) = Kq_{is}\left(-\tau + t + \tau e^{-\frac{t}{\tau}}\right)$
Frequency response	Impulse function
$ \left  \frac{q_o}{Kq_i} \right  = \frac{1}{\sqrt{1 + \tau^2 \omega^2}} $	$q_o(t) = \frac{KA}{T} \left( 1 - e^{-\frac{t}{\tau}} \right) $ for $t < T$
$\phi = Tan^{-1}(-\tau\omega)$	$q_o = \frac{KA\left(1 - e^{-\frac{T}{\tau}}\right)}{\frac{T}{-T}} e^{-\frac{t}{\tau}} \text{ for } t > T$
	$Te^{\frac{-\tau}{\tau}}$

Fourier Coefficients for Functions Having Arbitrary Period  $T = 2\pi/\omega$ 

$$y(t) = A_0 + \sum_{n=1}^{\infty} (A_n \cos n\omega t + B_n \sin n\omega t); \ A_0 = \frac{1}{T} \int_{-T/2}^{T/2} y(t) dt; \ A_n = \frac{2}{T} \int_{-T/2}^{T/2} y(t) \cos n\omega t dt;$$
$$B_n = \frac{2}{T} \int_{-T/2}^{T/2} y(t) \sin n\omega t dt$$

If function is even, 
$$y(t) = \sum_{n=1}^{\infty} A_n \cos n\omega t = \sum_{n=1}^{\infty} A_n \cos \frac{2\pi nt}{T}$$

If function is odd, 
$$y(t) = \sum_{n=1}^{\infty} B_n \sin n\omega t = \sum_{n=1}^{\infty} B_n \sin \frac{2\pi nt}{T}$$

	f(t)	$\mathscr{L}(f)$		f(t)	$\mathcal{L}(f)$
1	1	1/s	7	cos ωt	$\frac{s}{s^2+\omega^2}$
2	f	1/s²	8	sin ωt	$\frac{\omega}{s^2+\omega^2}$
3	t <sup>2</sup>	2!/s³	9	cosh <i>at</i>	$\frac{s}{s^2-a^2}$
4	$(n=0,1,\cdots)$	$\frac{n!}{s^{n+1}}$	10	sinh <i>at</i>	$\frac{a}{s^2-a^2}$
5	t <sup>a</sup> (a positive)	$\frac{\Gamma(a+1)}{s^{a+1}}$	11	$e^{at}\cos \omega t$	$\frac{s-a}{(s-a)^2+\omega^2}$
6	$e^{at}$	$\frac{1}{s-a}$	12	e <sup>at</sup> sin ωt	$\frac{\omega}{(s-a)^2+\omega^2}$

### Second order instrument

$$\frac{1}{\omega_n^2} \frac{d^2 x}{dt^2} + \frac{2\xi}{\omega_n} \frac{dx}{dt} + x = KF(t)$$

$$\frac{1}{\omega_n^2} \frac{d^2 V_o}{dt} + \frac{2\xi}{\omega_n} \frac{dV_o}{dt} + V_o = KV(t)$$

$$\xi = \frac{C}{2\sqrt{mK_s}}; \omega_n = \sqrt{\frac{K_s}{m}}; K = \frac{1}{K_s}$$
Sping mass damper
$$\xi = \frac{R}{2} \sqrt{\frac{C}{L}} \qquad \omega_n = \frac{1}{\sqrt{LC}} \qquad K = 1$$

Step response

$$\frac{q_o(t)}{Kq_{is}} = 1 - \frac{e^{-\xi\omega_n t}}{\sqrt{1-\xi^2}} Sin\left(\omega_d t + Tan^{-1}\left(\frac{\sqrt{1-\xi^2}}{\xi}\right)\right)$$
for underdamped system

$$\frac{q_o(t)}{Kq_{is}} = 1 - e^{-\omega_n t} (1 + \omega_n t)$$
 for critically damped system


$$\frac{q_o(s)}{Kq_{is}} = 1 + \frac{1}{2\sqrt{\left(\xi^2 - 1\right)}\!\left(\xi + \sqrt{\left(\xi^2 - 1\right)}\right)}e^{-\left(\xi + \sqrt{\left(\xi^2 - 1\right)}\right)\omega_n t} - \frac{1}{2\sqrt{\left(\xi^2 - 1\right)}\!\left(\xi - \sqrt{\left(\xi^2 - 1\right)}\right)}e^{-\left(\xi - \sqrt{\left(\xi^2 - 1\right)}\right)\omega_n t} \text{ for overdamped system}$$

Frequency response

$$\left|\frac{q_{o}}{|Kq_{i}|}\right| = \sqrt{\frac{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right)^{2} + \left(\frac{2\xi\omega}{\omega_{n}}\right)^{2}}{\left[\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right)^{2} + \left(\frac{2\xi\omega}{\omega_{n}}\right)^{2}\right]^{2}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}}\right)^{2}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}}\right)^{2}}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}}\right)^{2}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}}\right)^{2}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}}\right)^{2}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}^{2}}\right)^{2}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}^{2}}\right)^{2}}}} = \frac{1}{\sqrt{\left(1 - \frac{\omega^{2}}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}^{2}}\right) + \left(\frac{2\xi\omega}{\omega_{n}^{$$

Step response for second order instrument

Frequency response of second order instrument

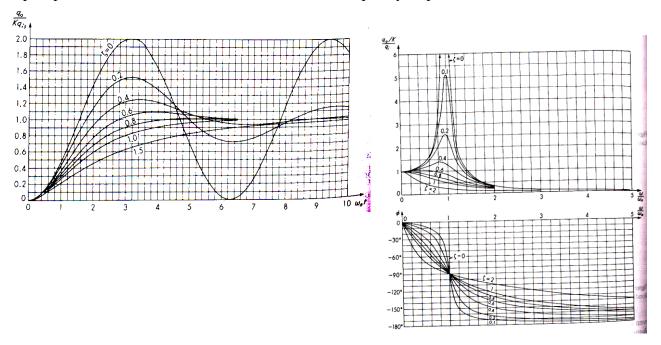

	f(t)	e(t)	
	v	i	
$M\frac{dv}{dt}$	М	L	$L\frac{di}{dt}$
Bv	В	R	iR
$K \int v dt$	K	$\frac{1}{C}$	$\frac{1}{C}\int idt$

	f(t)	i(t)	
	υ	е	
$M\frac{dv}{dt}$	М	С	$C\frac{de}{dt}$
Bv	В	$\frac{1}{R}$	$\frac{e}{R}$
$K \int v dt$	K	$\frac{1}{L}$	$\frac{1}{L}\int edt$

#### **TEMPERATURE**

**Thermocouple** 
$$\alpha_{AB} = \left(\frac{\partial (emf)}{\partial T}\right)_{open\ circuit}$$

# Thermocouple laws

- 1. Emf of Thermocouple with junction at T1 and T2 unaffected by temperature elsewhere in circuit
- 2. Third homogenous inserted in either wires does not affect emf if new junctions are isothermal
- 3. LAW OF INTERMEDIATE MATERIALS: Metal is inserted between junctions, influence is absent if new junctions are isothermal
- 4. Thermal emf of metals A, C is  $E_{AC}$  is  $E_{BC}$  then emf for AB is  $E_{AC} + E_{CB}$
- 5. Thermal emf with junctions at  $T_1$  and  $T_2$  is  $E_1$  and with  $T_2$  and  $T_3$  is  $E_2$  then for Junctions at  $T_1$ ,  $T_2$  Emf =  $E_1 + E_2$

## Response characteristics of thermocouple

$$\frac{T - T_i}{T_{\infty} - T_i} = 1 - exp \left[ -\frac{t}{\tau} \right]$$

## Response time of a thermowell

$$\tau_{w}\tau_{s}\frac{d^{2}T_{s}}{dt^{2}} + \frac{dT_{s}}{dt}\left(\tau_{s} + \tau_{w} + \frac{m_{s}C_{ps}}{h_{w}A_{w}}\right) + T_{s} = T_{\infty}$$

### **Compensating circuits**

$$V_i I_3$$
 $I_2$ 
 $R$ 
 $I_1$ 
 $R$ 
 $R$ 
 $R$ 
 $R$ 
 $R$ 

$$\frac{\mathbf{V}_{o}(s)}{\mathbf{V}_{o}} = \frac{\alpha K}{1 + \tau_{o} \alpha s}$$

## **Resistance temperature detectors**

$$R \approx R_o (1 + \alpha (T - T_o))$$
  
**Thermistors**

$$\beta \left( \frac{1}{T} - \frac{1}{T_O} \right)$$

$$R = R_O e$$

### Radiation effect in temperature measurements

$$T_{f} = T_{th} + \underbrace{\frac{\mathcal{E}_{th}\sigma(T_{th}^{4} - T_{w}^{4})}{h}}_{Radiation\ effect\ correction\ term}$$

## **Recovery Errors in Temperature Measurement**

$$T_{\infty} = T_p - r \frac{U^2}{2C_p}$$

#### **PRESSURE**

$$P_1 - P_2 = \gamma h = \rho g h$$

$$h = \frac{2\sigma\cos\theta}{\gamma R}$$

### Dynamic response of manometer

$$\frac{\ddot{x}}{\frac{3g}{2L}} + \frac{4\mu L}{R^2 \rho g} \dot{x} + x = \frac{\Delta p}{2\rho g}; \qquad K = \frac{1}{2\rho g}; \qquad \omega_n = \sqrt{\frac{3g}{2L}}; \qquad \xi = \frac{2.45 \mu}{R^2 \rho} \sqrt{\frac{L}{g}}$$

### Rise time and peak time

$$t_{r} = \frac{\pi - Tan^{-1} \left(\frac{\sqrt{1 - \xi^{2}}}{\xi}\right)}{\omega_{n} \sqrt{\left(1 - \xi^{2}\right)}} \qquad t_{p} = \frac{\pi}{\omega_{n} \sqrt{\left(1 - \xi^{2}\right)}}$$

# Liquid Systems, Heavily Damped, Slow Acting - Transducer Tubing Model

$$\frac{C_{vp} 128 \mu L}{\pi d^4} \frac{dP_m}{dt} + P_m = P_i$$

## Liquid Systems, Moderately Damped, Fast Acting

$$[M + M_e]\ddot{x} + B\dot{x} + K_s x = A\Delta P$$

$$K_{s} = \frac{\pi^{2} d_{p}^{4}}{16C_{vp}}; \quad M_{e} = \frac{\pi \rho L d_{p}^{4}}{3d_{t}^{2}}; \quad \omega_{n} = \sqrt{\frac{3\pi d_{t}^{2}}{16\rho L C_{vp}}}; \quad B = 8\pi \mu L \frac{d_{p}^{4}}{d_{t}^{4}}; \quad \omega_{n,t} = \sqrt{\frac{K_{s}}{M}}$$

$$\xi = \frac{64\mu L}{\pi d_{t}^{4} \sqrt{\left(\frac{1}{\omega_{n,t}^{2}} + \left(\frac{16\rho LC_{vp}}{3\pi d_{t}^{2}}\right)\right)}}$$


#### For gases

$$C_{vp} = \frac{V}{E_m}; K_s = \frac{\pi^2 d_p^4 E_m}{16V}; \xi = \frac{16\mu}{d_t^3} \sqrt{\frac{3LV}{\pi \rho E_m}};$$

$$c = \sqrt{\frac{E_m}{\rho}} = \sqrt{\gamma RT}; \quad \omega_n = \sqrt{\frac{3\pi d_t^2 c^2}{16L\Psi}}; \quad \xi = \frac{16\mu}{d_t^3} \sqrt{\frac{3L\Psi}{\pi c^2 \rho^2}}; \quad K_s = \frac{\pi^2 d_p^4 c^2 \rho}{16\Psi}$$

### **Pitot Static Tube**

$$K = \frac{P_{total} - P_{static}}{\frac{1}{2} \rho V^2}; \quad \frac{u_{avg}}{u_c} = \frac{2n^2}{(n+1)(2n+1)}$$

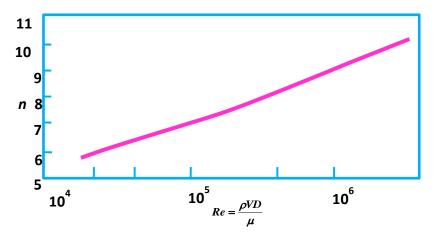

$$\frac{p_2 - p_1}{p_1} = \frac{\gamma M_1^2}{2} \left( 1 + \frac{1}{4} M_1^2 + \frac{2 - \gamma}{24} M_1^4 + \dots \right)$$