Customize Switch with Network modules using Cisco Packet Tracer

EXPN	O:06	S KEERTHANA	
DATE	E:29.08.2024	231901022	
AIM:			
To Cu	stomize Switch with Network Modules using Cisc	o Packet Tracer	
1. Ope	en Cisco Packet Tracer		
	Launch Cisco Packet Tracer on your computer.		
	d a Switch to Your Workspace In the device of the screen), locate the "Switches" section.	ce toolbar (usually on the left	
	Drag and drop a switch model onto the workspace model like the "2950" or "2960."	e. For instance, you might choose a	
3. Acc	ess the Switch's Physical Layout		
•	Click on the switch in the workspace to open its on Navigate to the "Physical" tab to see the switch's	_	
4. Add	l Network Modules		
•	In the "Physical" tab, you might see options to ad Click on the slot where you want to add a module modules such as different types of Ethernet or Fit Drag the module from the list of available module switch.	e. You can choose from available ber modules.	
5. Cor	nfigure the Modules \Box After adding the module, s	switch to the "Config" tab in the	
sw	vitch's configuration window.		
	Here, you can configure the ports provided by the addresses, VLAN configurations, and other setting	* · ·	IF
6. Con	nfigure the Switch Ports		
•	Switch to the "Config" tab to configure ports on to parameters for each port. Select the specific port or range of ports you wants such as VLAN assignments, port descriptions, and the configure ports.	t to configure. You can set paramete	ers
•	Switch to the "Config" tab to configure ports on to parameters for each port. Select the specific port or range of ports you want	t to configure. You can set paran	nete

o To configure a port to be in a specific VLAN:

description for the port:

Select the port or range of ports.

Assign the VLAN ID under the VLAN settings. o To set a

COMPUTER NETWORKS

Enter a description in the "Description" field.

7. Using the CLI for Detailed Configuration

- Switch to the "CLI" tab for command-line interface access.
- Enter configuration commands to set up the switch. Here's an example of how to configure VLANs and interface settings via CLI:

```
bash
                                                                           (T) Copy code
Switch> enable
Switch# configure terminal
! Configure VLAN
Switch(config)# vlan 10
Switch(config-vlan)# name Sales
Switch(config-vlan)# exit
! Configure VLAN interface
Switch(config)# interface vlan 10
Switch(config-if)# ip address 192.168.10.1 255.255.255.0
Switch(config-if)# no shutdown
Switch(config-if)# exit
! Assign ports to VLAN
Switch(config)# interface range fa0/1 - 24
Switch(config-if-range)# switchport mode access
Switch(config-if-range)# switchport access vlan 10
Switch(config-if-range)# exit
! Save the configuration
Switch# write memory
```

8. Save Your Configuration

☐ Once you've configured the modules and ports, be sure to save your configuration. Use commands in the CLI (Command Line Interface) if you're using a model that supports CLI commands.


For example:


```
Copy code
bash
Switch> enable
Switch# configure terminal
Switch(config)# interface range fa0/1 - 24
Switch(config-if-range)# description Connected to LAN
Switch(config-if-range)# no shutdown
Switch(config-if-range)# exit
Switch(config)# vlan 10
Switch(config-vlan)# name Sales
Switch(config-vlan)# exit
Switch(config)# interface vlan 10
Switch(config-if)# ip address 192.168.10.1 255.255.255.0
Switch(config-if)# no shutdown
Switch(config-if)# exit
Switch# write memory
```

9. Test Your Configuration

- Use the simulation mode to test the network configuration.
- Add devices (PCs, routers, etc.) and connect them to the switch to ensure that everything is working as expected.

Output:

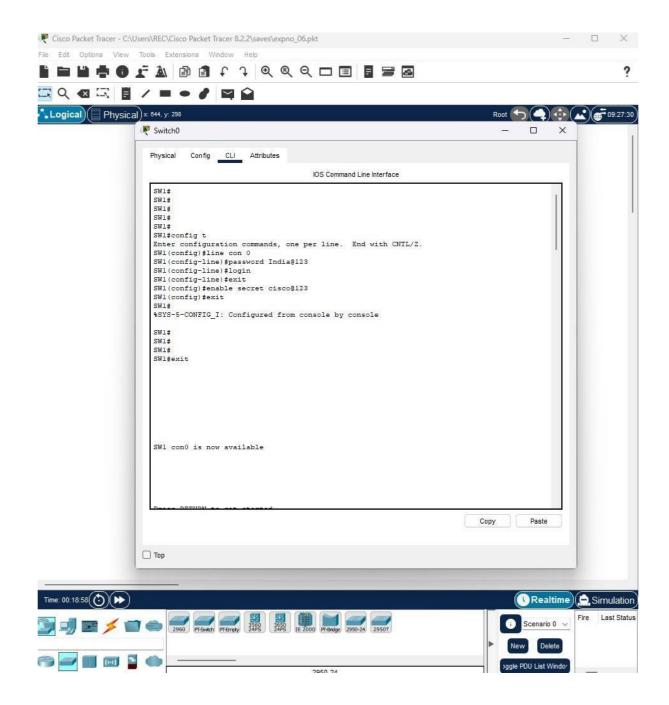

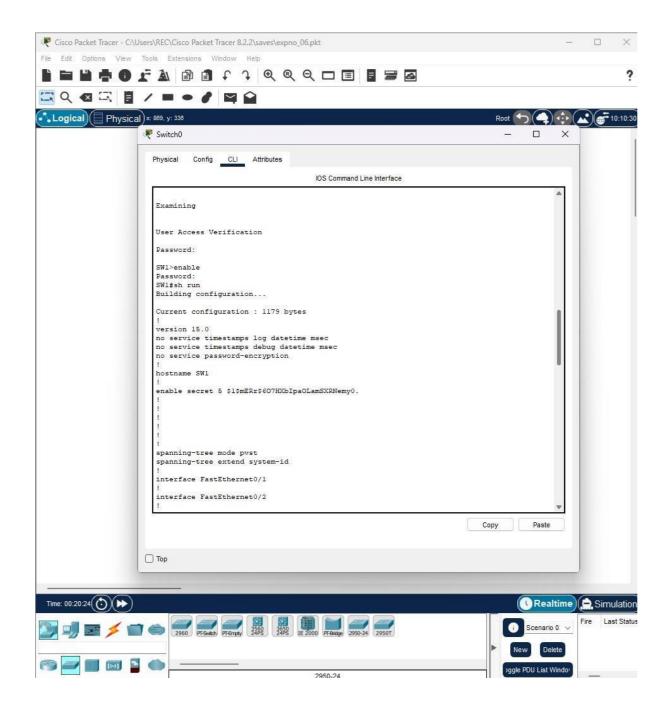

```
Switch0
                                                                                                 X
                                                                                       Physical
           Config CLI Attributes
                                        IOS Command Line Interface
   ^C
  line con 0
   password India@123
   login
  line vty 0 4
   login
  line vty 5 15
   login
  end
  SW1#
  SWl#copy run startup-config
  Destination filename [startup-config]?
  Building configuration...
  [OK]
  SW1#
                                                                               Сору
                                                                                          Paste
□ Тор
```

Result:

Switch with Network Modules using Cisco Packet Tracer is Customized.