

SP] [SD DIY KIT assembly guide



Store page:

<https://en.infinityproducts.co.jp/product-page/sp2sd-diykit-bare-pcb-board-a-b>

GitHub:


https://github.com/kerokero5150/SP2SD_DIY_KIT

Blog:

<https://ameblo.jp/keroxiee1016/entry-12819341808.html>

KIT CONSTRUCTION


Please make sure the following items are included in the kit. If you want to prepare the kit by yourself, please purchase the parts referring to this [BOM](#).

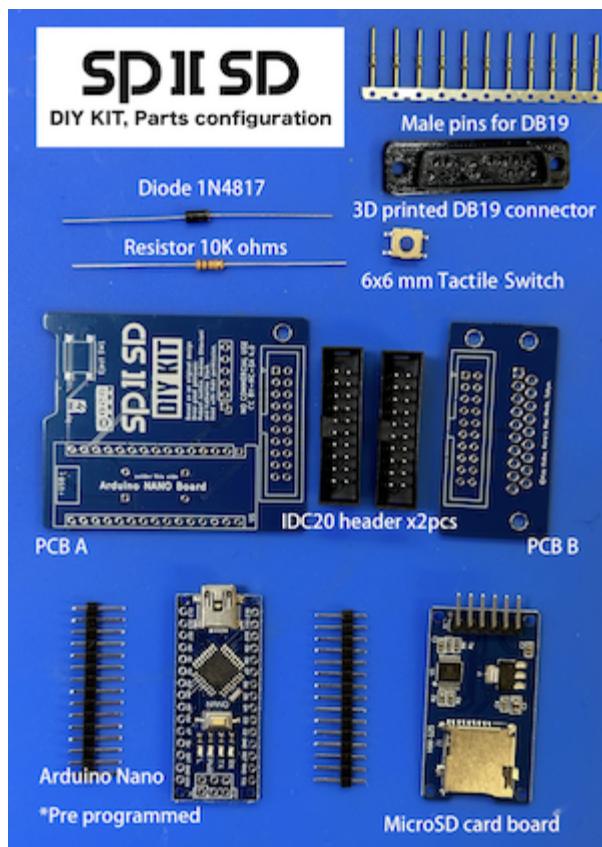


*The 20-pin cable not included in the kit can be purchased on eBay or Amazon.

How to build the SP][SD DIY kit


1. First, you need to work on PCB A, which will be the main board. Solder the switches first. This kit is for surface mounting. First, solder only one of the legs and position it, then apply an appropriate amount of flux and solder the remaining three legs.

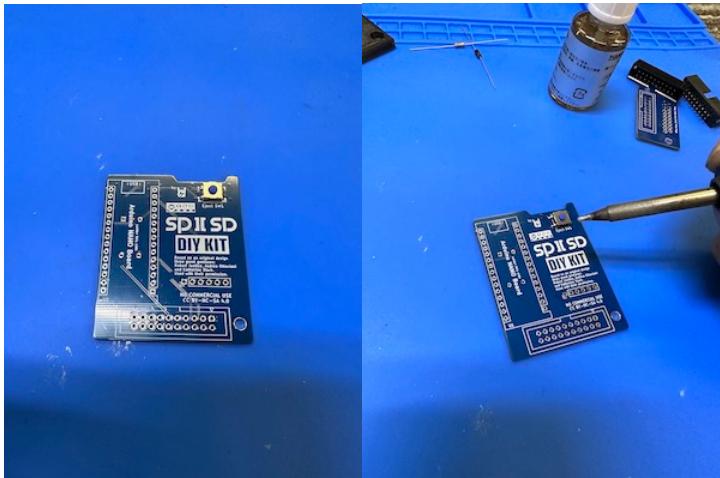

2, Next, solder a $10\text{K}\Omega$ resistor and a diode 1N4817. The resistor has no polarity, but the diode is cathode in the right direction. Install the diode so that the lines on the body of the diode match the lines on the silk screen. If the lines are reversed, the diode will not malfunction, but it will not function because +5v will not be energized. After soldering, trim the excess legs.

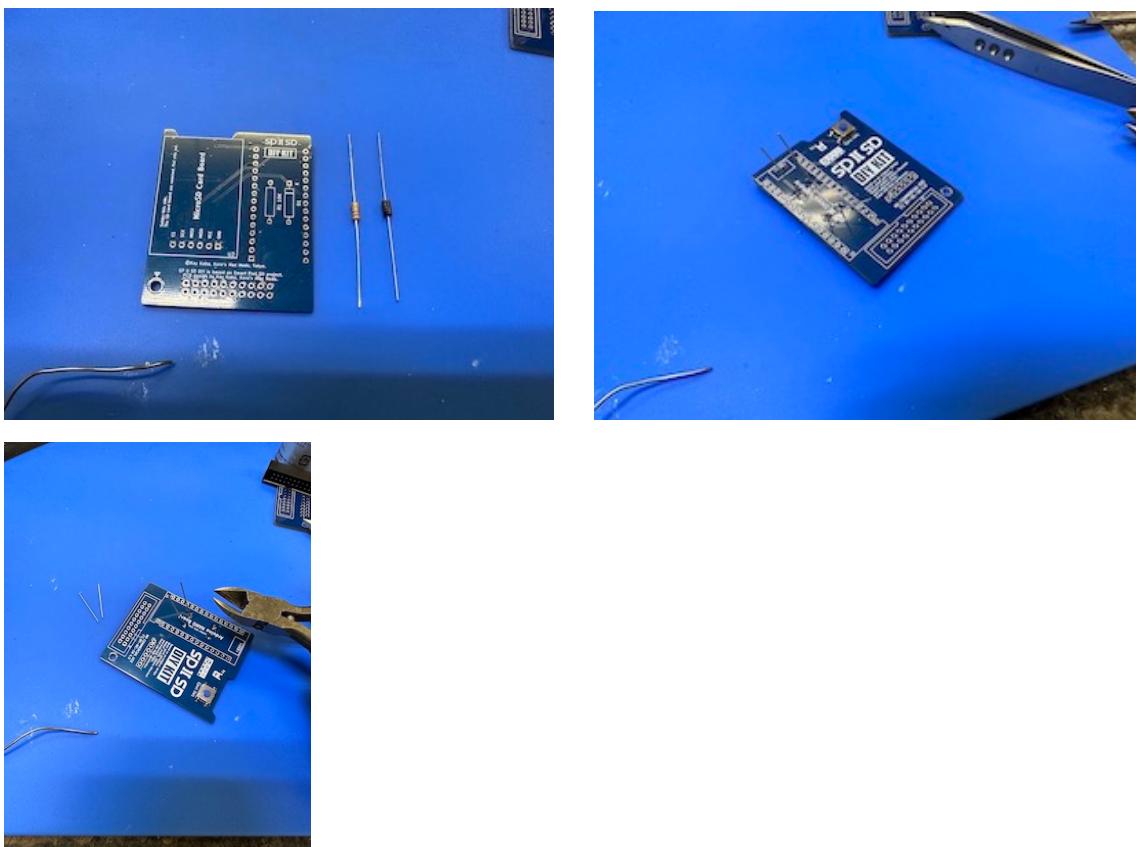


3, Install the SD card board. This board is a little tricky, as it has a right-angle pin header. This time, the connection with PCB A will be straight, so straighten the pins.

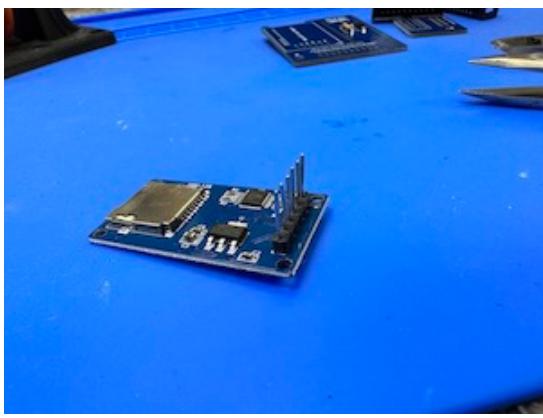


Place a little thick double-sided tape over the IC to hold it in place with PCB A. The pins will be soldered, so use the double-sided tape as a supplement.



4. Once all pins are straight, solder the pins so that the silkscreen on PCB A matches the silkscreen on the SD card board. trim any excess pins.

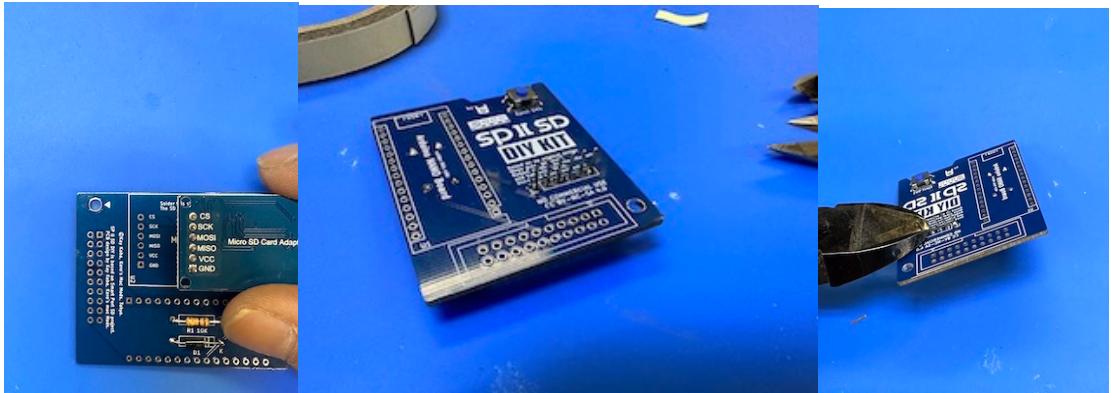


4, Attach two pin headers to the Arduino Nano board. Be careful not to tilt the pins.

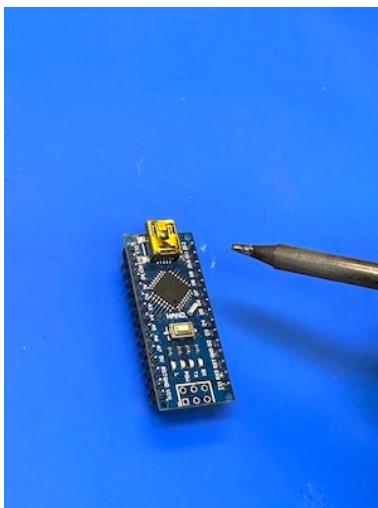

6, Solder the Arduino Nano board to PCB A.

When soldering directly, the USB connector should be on top. This is critical if you make a mistake; it is difficult to easily remove the 30 pins.

Once soldered, trim any excess pins.

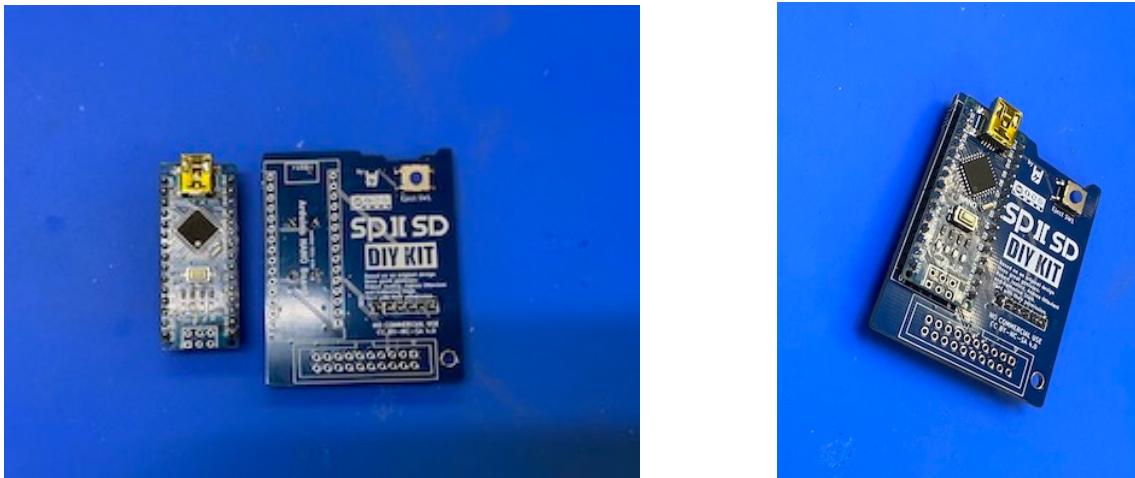




Tips: If you are unsure at this point, you can use an IC socket; the IC socket is not in the kit, but use the 32-pin socket and remove the pins since you will not be using 2 pins. Place them as shown in the picture.




*By attaching an IC socket, the Arduino can be instantly replaced in the event of a defect.

7. Solder the IDC20 box pin headers. Make sure the part comes to the silkscreen side with the pin header picture on it.

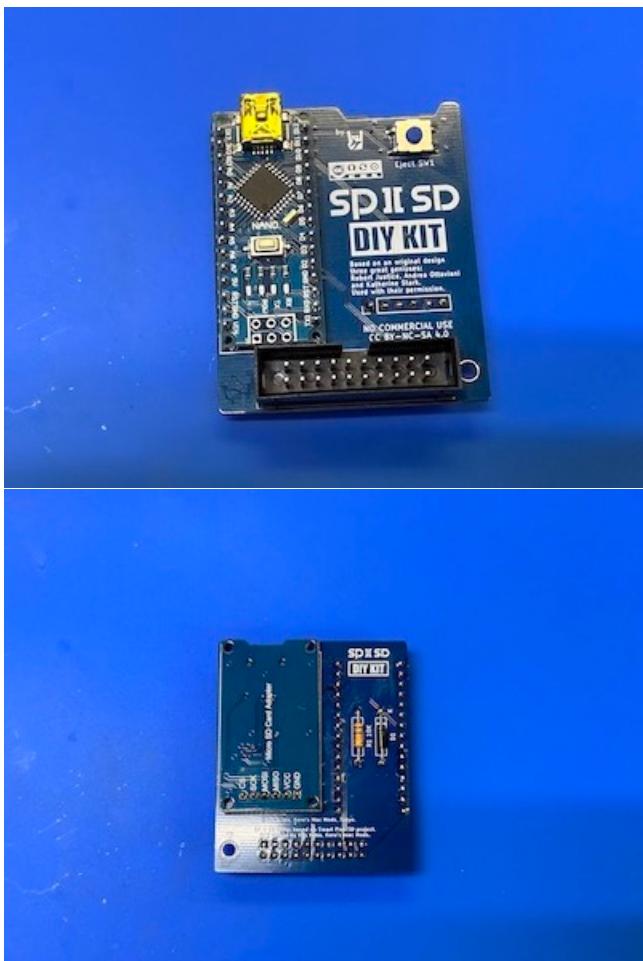


Another way to create this is to use a 2x10 pin header. In this case, make sure that the 3mm holes and ▼ match up. In this case, SP][SD will be placed on the back of the Apple without the use of cables.

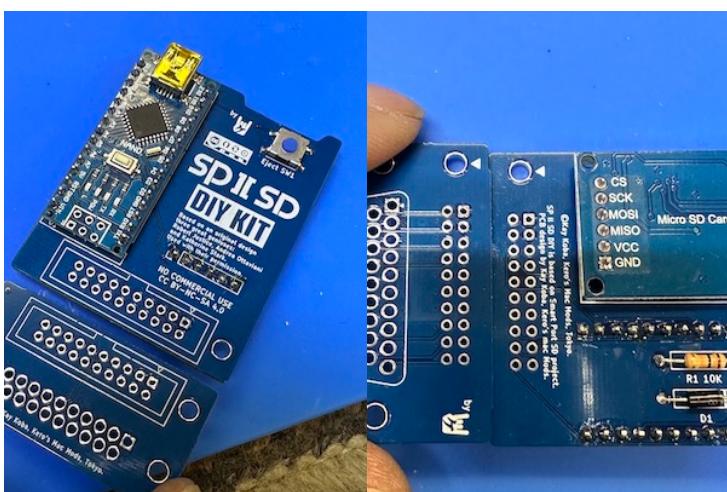




8, Next, make an adapter for db19 and IDC20 on PCB B.

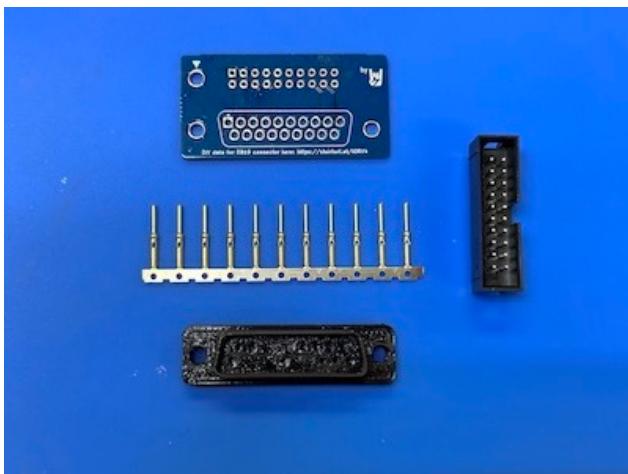


9, Plant the 11 pins into the 3D printed connector. If you 3D printed it yourself, compensate the holes with 2mm and 1mm drill bits. If you bought the kit it is corrected by us.

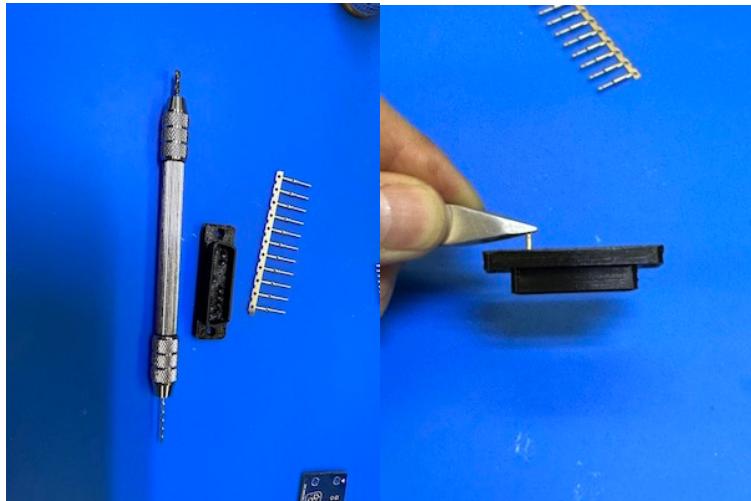

The pins are easier to insert into the PCB when hemmed on the outside.



10, Place the connector on the db19 ring side of the PCB silkscreen.

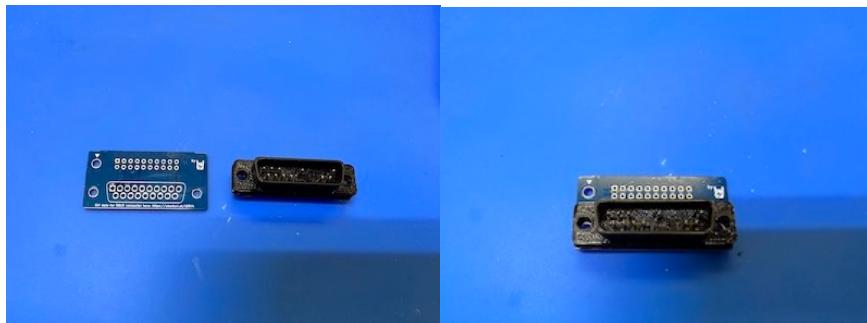

Solder pins to PCB. Make sure that all 11 pins are the same height.

Then, do not apply the soldering iron for more than 2 seconds. The solder temperature is about 350 degrees Celsius.



11. Then solder the IDC20 box header. Make sure the part comes to the silkscreen side with the pin header picture on it.



Check for bridges or lack of solder and you are done. Finally, clean it up with isopropyl alcohol.



if all goes well you'll be an Apple II master!

©Kay Koba, Kero's Mac Mods. All right reserved.