



MC5.07.23.24_NaCl (MC5.07.23.24) · poly1: $B(c) = \beta_0 + \beta_1 \cdot c$ · $\beta_0 \times \sigma$ square slice (B as a function of interfacial conc.)


1. mass
[g²]

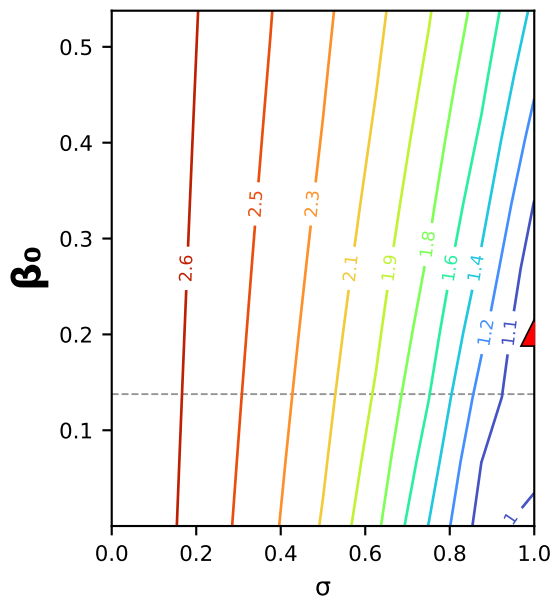


2. ICP retentate conc.
[mM²]

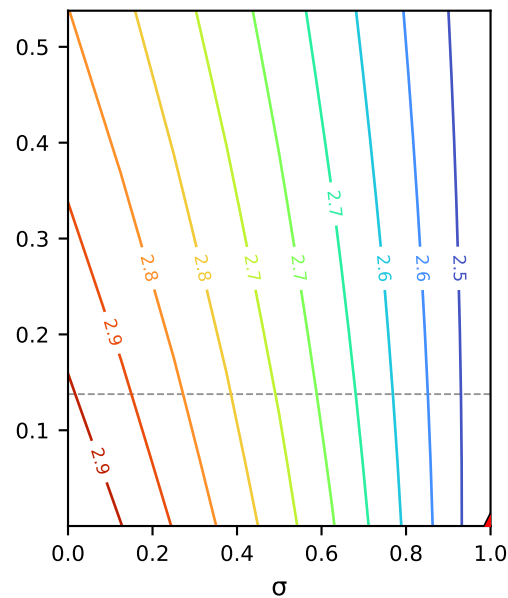


3. ICP permeate conc.
[mM²]

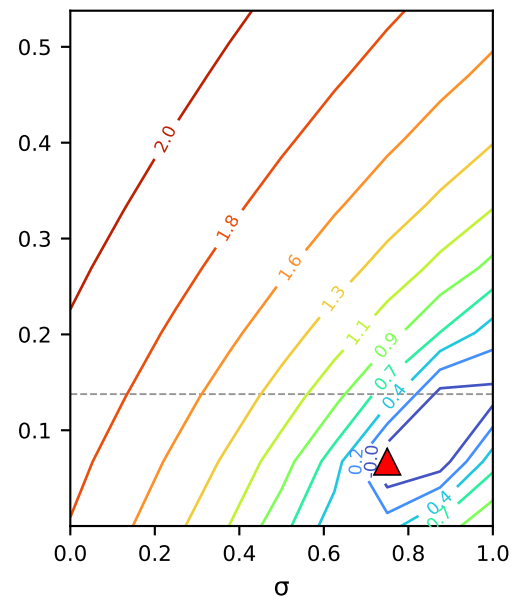


4. conductivity-probe retentate
[μS²]

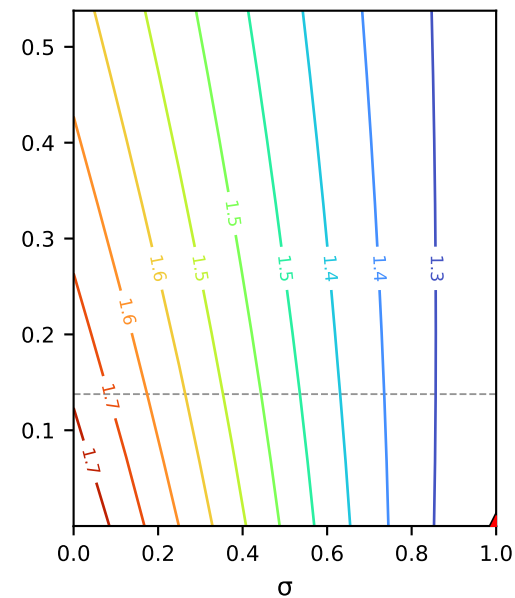


5. conductivity-probe permeate
[μS²]

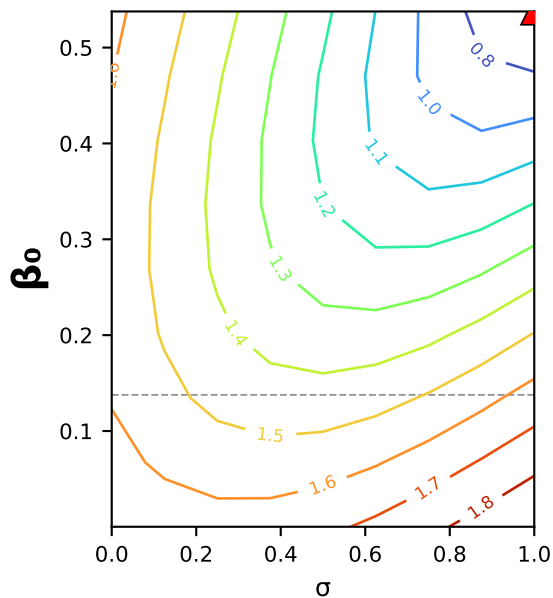

6. cond.-derived retentate conc.
[mM²]

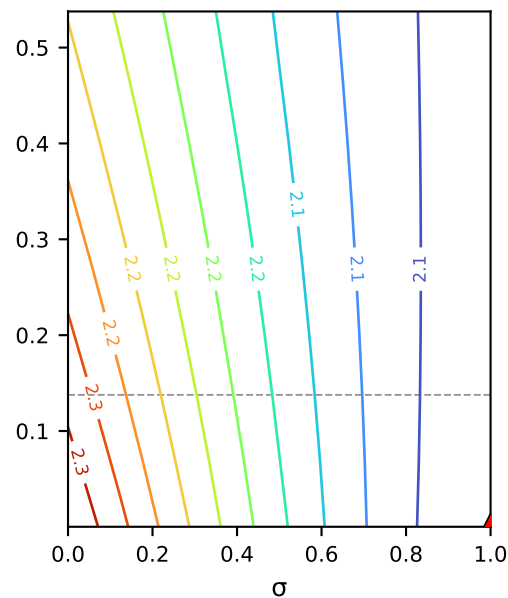

7. cond.-derived permeate conc.
[mM²]

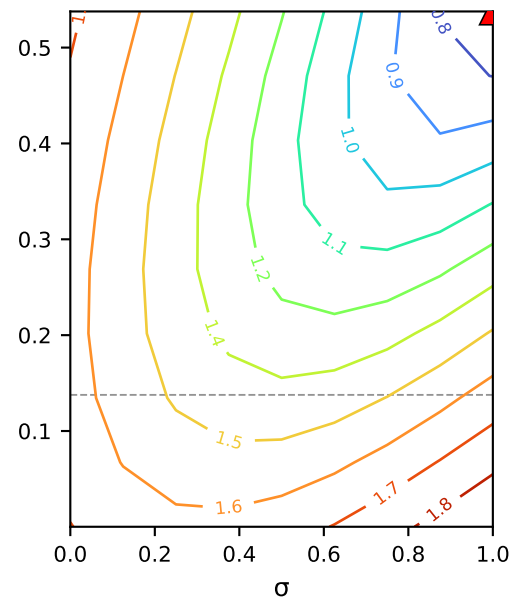


MC5.07.23.24_NaCl · poly1
 $B(c) = \beta_0 + \beta_1 \cdot c$

Axis: β_0 (y) $\times$ σ (x)
 $L_p = 9.83$ fixed
other coeffs held at the
poly1 fit (warm start).


▲ = per-channel optimum
-- = fitted β_0 value
lines = log₁₀ WSSE

Square forward-solve slice
(no per-node optimization).
Blank panels = the pinned
coefficients drive $B(c)$ out of
the physical region (no
feasible square solve there).


MC5.07.23.24_NaCl (MC5.07.23.24) · poly1: $B(c) = \beta_0 + \beta_1 \cdot c \cdot \beta_1 \times \sigma$ square slice (B as a function of interfacial conc.)

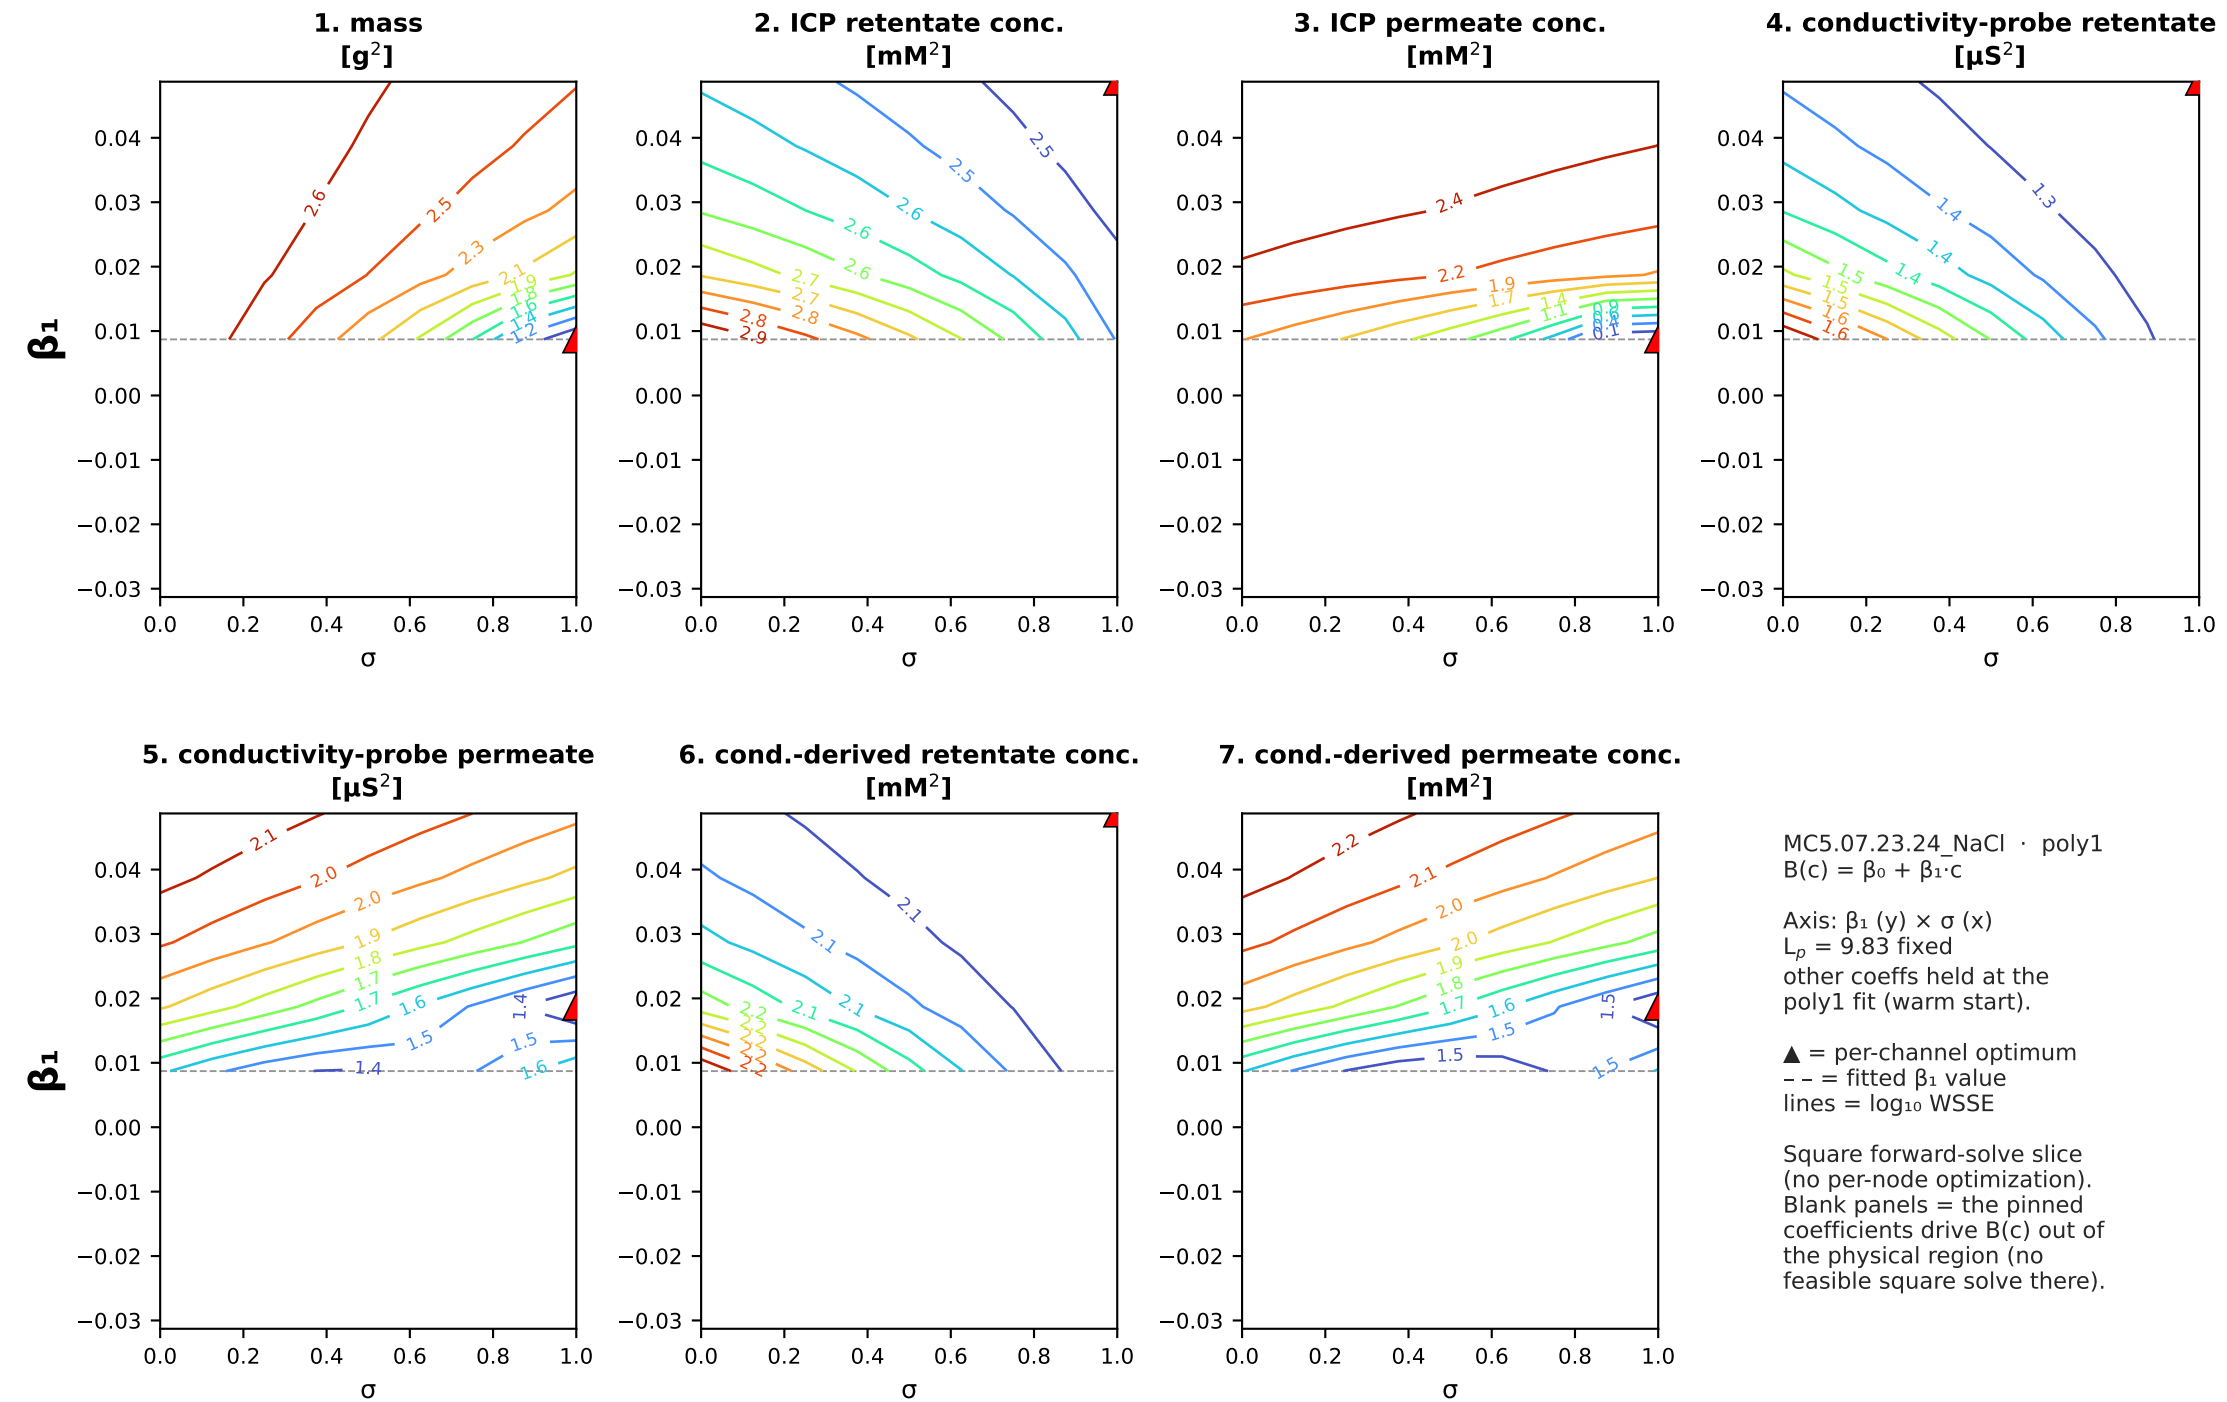

MC5.07.23.24_NaCl (MC5.07.23.24) · poly2: $B(c) = \beta_0 + \beta_1 \cdot c + \beta_2 \cdot c^2$ · $\beta_0 \times \sigma$ square slice (B as a function of interfacial conc.)

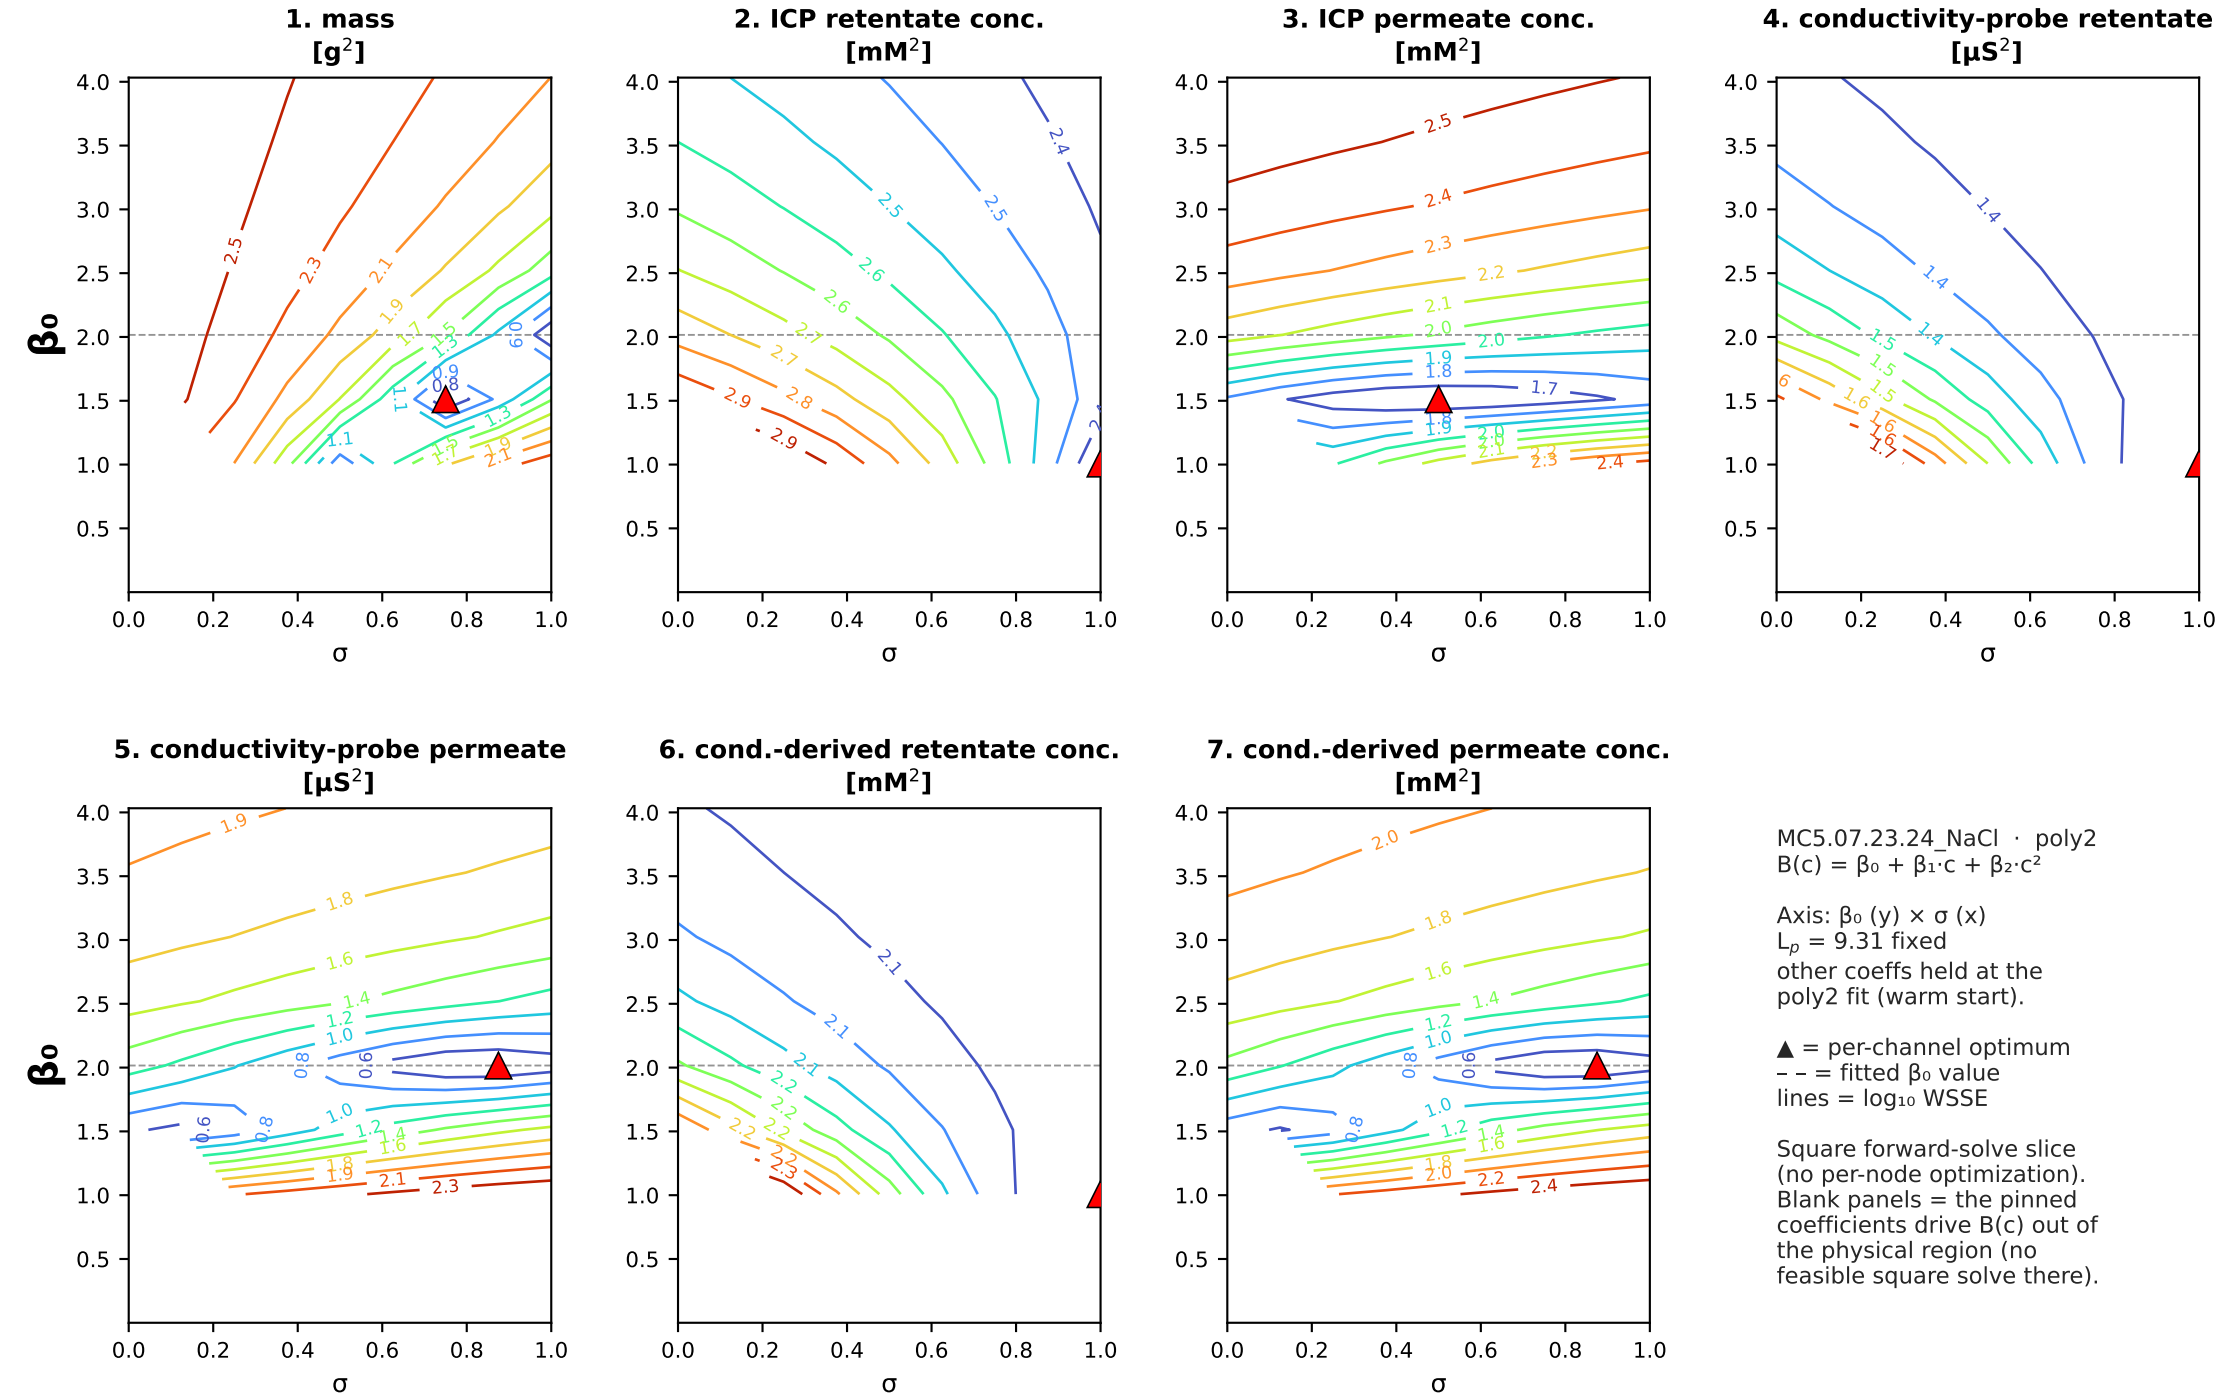

MC5.07.23.24_NaCl (MC5.07.23.24) · poly2: $B(c) = \beta_0 + \beta_1 \cdot c + \beta_2 \cdot c^2 \cdot \beta_1 \times \sigma$ square slice (B as a function of interfacial conc.)

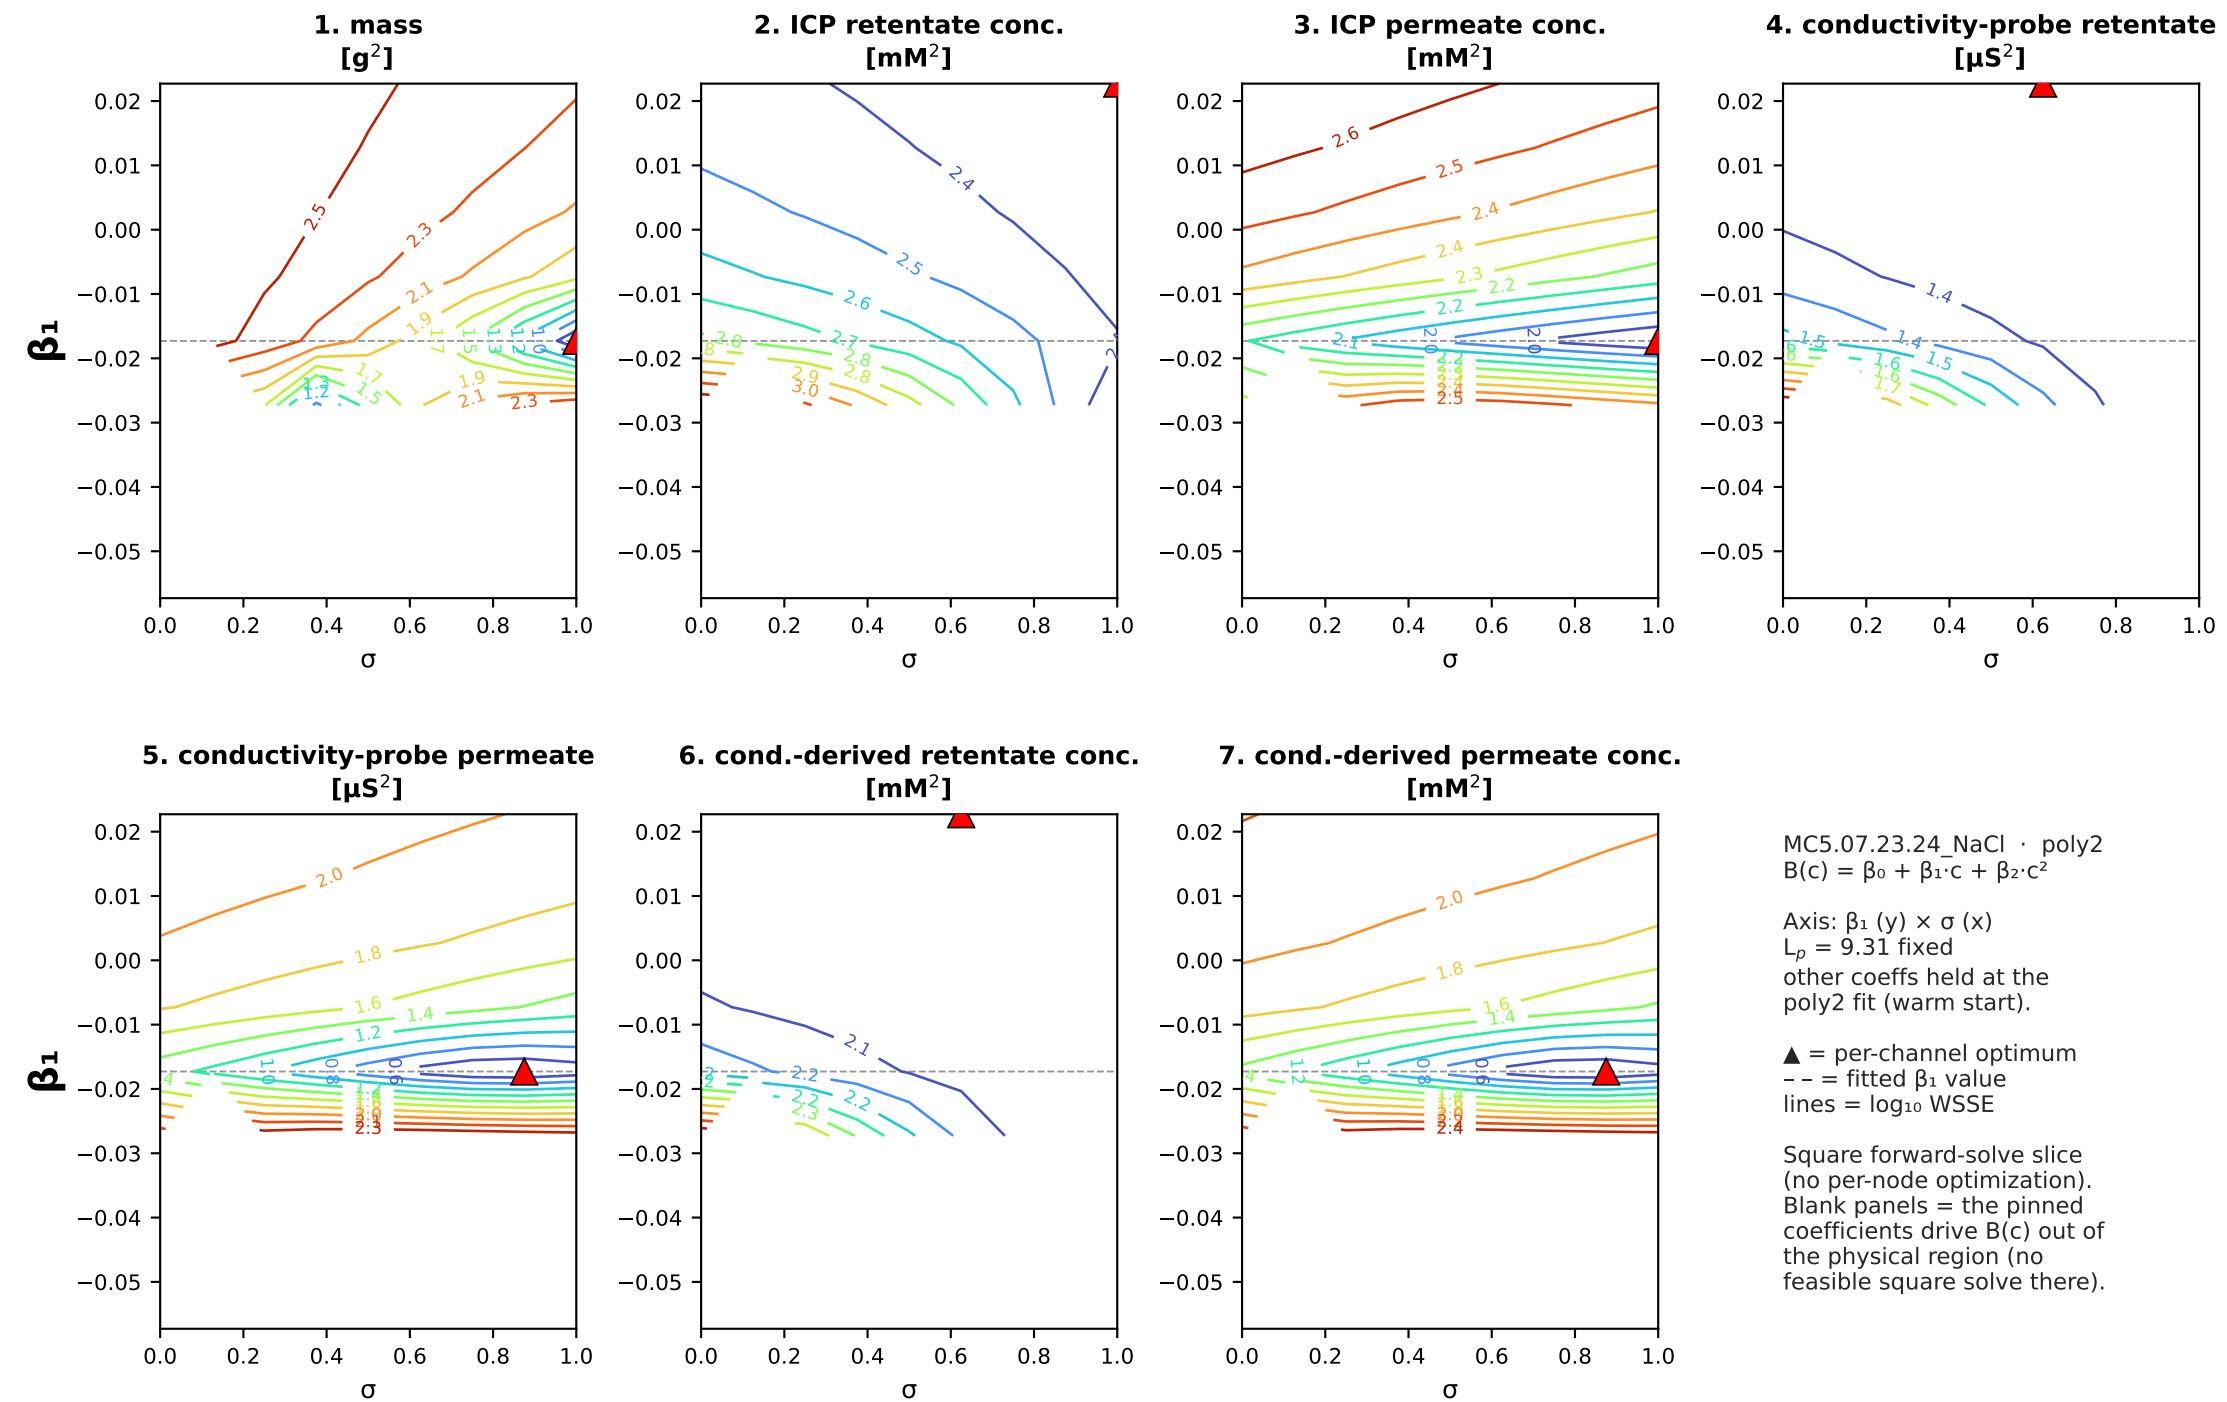





MC5.07.23.24_NaCl (MC5.07.23.24) · poly2: $B(c) = \beta_0 + \beta_1 \cdot c + \beta_2 \cdot c^2 \cdot \beta_2 \times \sigma$ square slice (B as a function of interfacial conc.)

1. mass
[g²]

2. ICP retentate conc.
[mM²]

3. ICP permeate conc.
[mM²]




4. conductivity-probe retentate
[μS²]

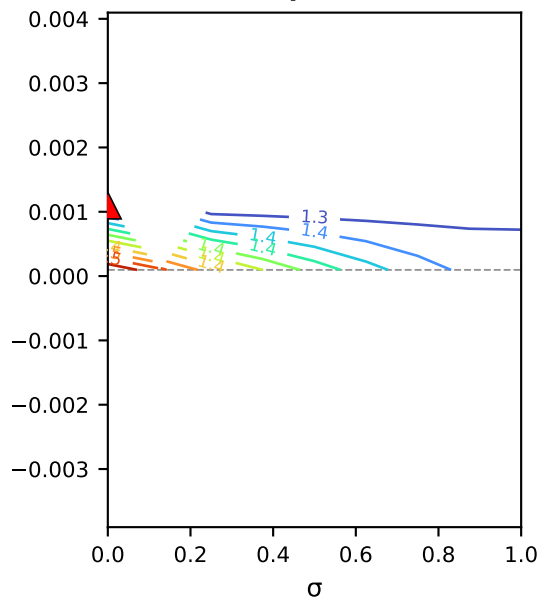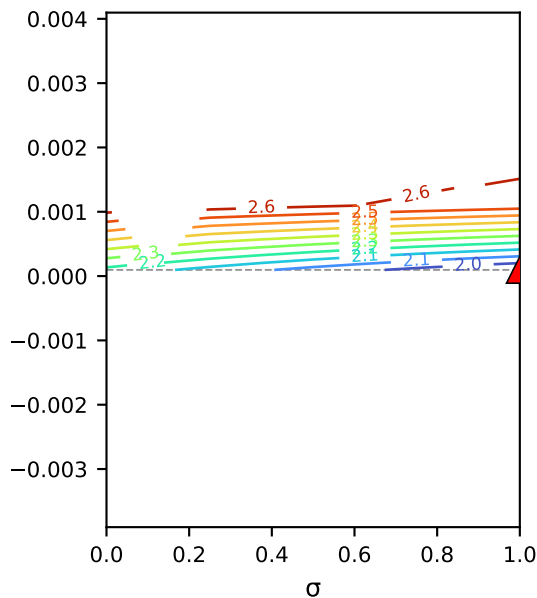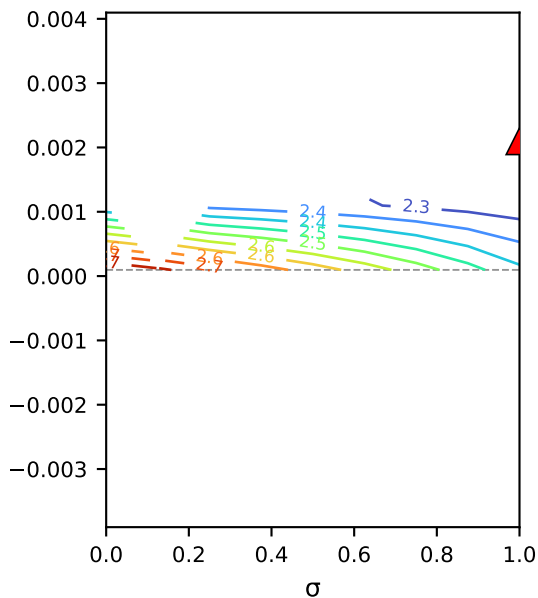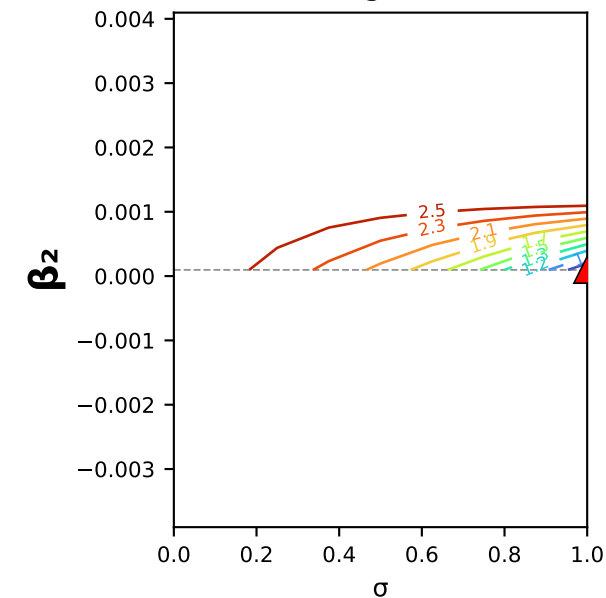

5. conductivity-probe permeate
[μS²]

6. cond.-derived retentate conc.
[mM²]

7. cond.-derived permeate conc.
[mM²]

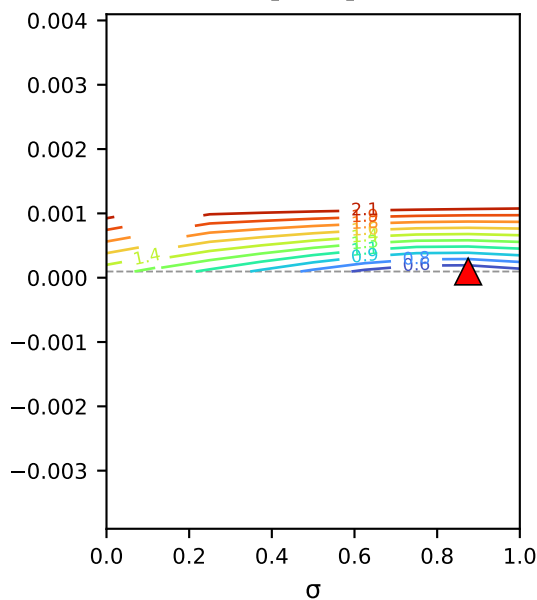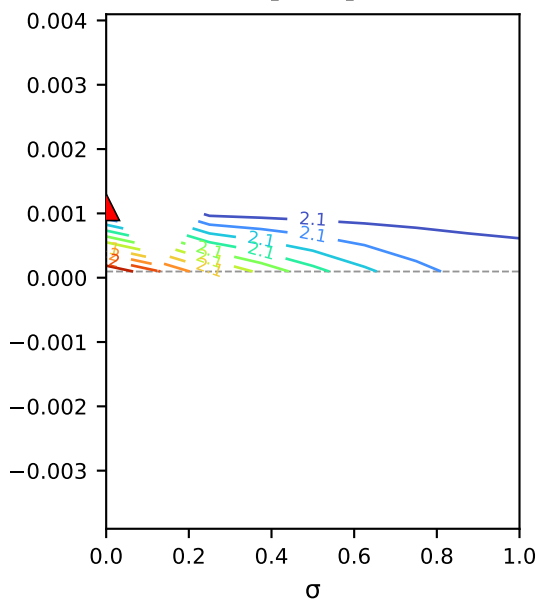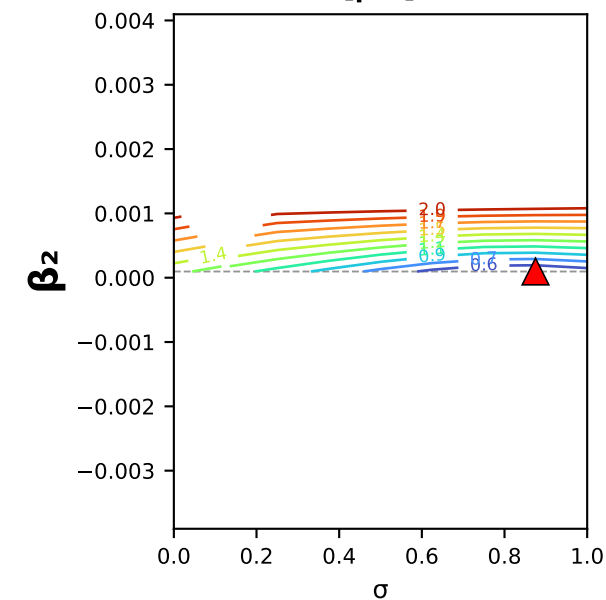

MC5.07.23.24_NaCl · poly2
 $B(c) = \beta_0 + \beta_1 \cdot c + \beta_2 \cdot c^2$

Axis: β_2 (y) × σ (x)
 $L_p = 9.31$ fixed
other coeffs held at the
poly2 fit (warm start).

▲ = per-channel optimum
-- = fitted β_2 value
lines = $\log_{10}$ WSSE

Square forward-solve slice
(no per-node optimization).
Blank panels = the pinned
coefficients drive $B(c)$ out of
the physical region (no
feasible square solve there).