

AI-BMT Alpha Version User Manual

March 2025

Contents

1	Introduction	3
2	Installation and Setup	3
2.1	System Requirements	3
2.2	Installation Steps	3
3	Key Features and Workflows	4
3.1	Benchmarking Pipeline	4
3.2	Step-by-Step Usage Guide	4
3.2.1	Accessing the WAS	4
3.2.2	How to start	5
3.2.3	GitHub Page	6
3.2.4	Cloning the Git Repository	7
3.2.5	Interface Implementaion	8
3.2.6	Build and Execution	9
3.2.7	GUI Options (1)	10
3.2.8	GUI Options (2)	11
3.2.9	GUI Options (3)	12
3.2.10	Resizable application window	13
3.2.11	Start BMT & Authentication	14
3.2.12	Dataset Validation	15
3.2.13	Model & Dataset Download	16
3.2.14	Benchmark Log Message (1)	17
3.2.15	Benchmark Log Message (2)	18
3.2.16	Benchmark Log Message (3)	19
3.2.17	Log Viewer	20
3.2.18	Data Analysis (App)	21

3.2.19	Data Analysis (WAS)	22
4	Required Preprocessing For Each Model	23
4.1	Classification(Imagenet2012 Validation Dataset)	23
4.2	Object Detection(Coco17 Validation Dataset)	23
5	Known Limitations and FAQs	24
5.1	Current Limitations	24
5.2	Frequently Asked Questions	24
6	Support Contact	25

1 Introduction

AI-BMT is a benchmarking platform designed to evaluate AI workloads on various hardware configurations. This manual provides detailed instructions for installation, usage, and troubleshooting of the Alpha version.

2 Installation and Setup

2.1 System Requirements

- OS & CPU: Windows 10/11 (x86_64), Linux (x86_64 or ARM64).
- CPU RAM: Minimum 2GB

Note: For Linux(ARM64), GLIBC version 2.38 or higher is required. For example, Ubuntu 24.04 uses GLIBC 2.39(≥ 2.38) and therefore compatible with our platform.

2.2 Installation Steps

- **Windows:** It is recommended to use the current project setup and Visual Studio as the IDE.
- **Ubuntu:** Open a terminal and run the following commands to install CMake, g++ compiler, Ninja Build System, and EGL Library.

```
sudo apt update
sudo apt install cmake
sudo apt install build-essential
sudo apt-get install ninja-build
sudo apt install libgl1 libgl1-mesa-dev
sudo apt install unzip
```

- **Details:** For more details about how to build and run the Program please refer to:
 - Windows(x86_64): https://github.com/kinsingo/SNU_BMT_GUI_Submitter_Windows/blob/main/ReadMe.md
 - Linux(x86_64): https://github.com/kinsingo/SNU_BMT_GUI_Submitter_Linux/blob/main/README.md
 - Linux(ARM64):https://github.com/kinsingo/SNU_BMT_GUI_Submitter_Linux_ARM64/blob/main/README.md

3 Key Features and Workflows

3.1 Benchmarking Pipeline

- **Model&Dataset Preparation:** Download from the app or WAS.
- **Interface Implementation:** Implement the provided interface.
- **Build&Execution:** Runs AI workloads on the target hardware.
- **Results Visualization:** View evaluation result from the app or WAS.

3.2 Step-by-Step Usage Guide

3.2.1 Accessing the WAS

Visit *ai-bmt.com* to access the Web Application Server.

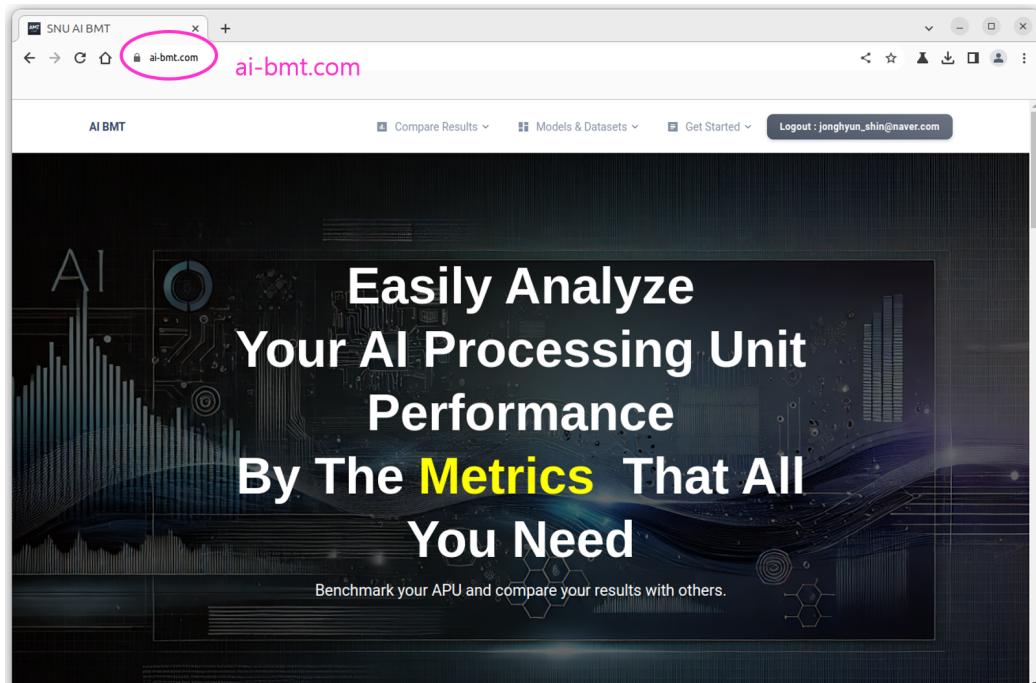


Figure 1: WAS

3.2.2 How to start

Scroll down to the **How to Start** section, then select the target operating system and CPU architecture. In this demonstration, an Orange Pi 5 Plus running Ubuntu 24.04 is used to evaluate the NPU; therefore, the rightmost option is selected to navigate to the corresponding GitHub page.

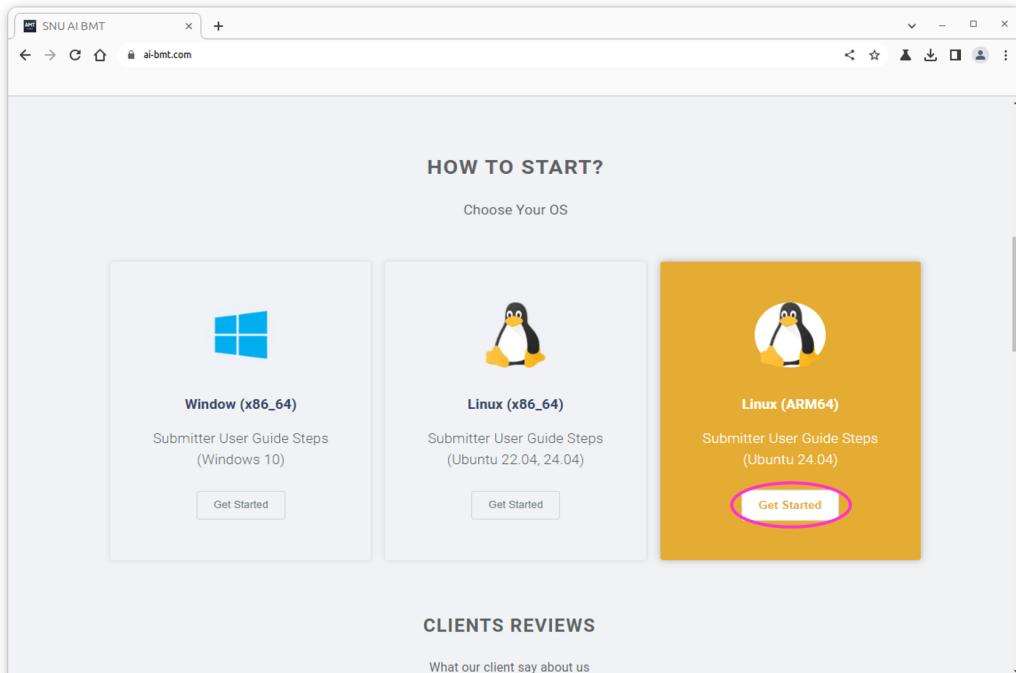


Figure 2: How to start

3.2.3 GitHub Page

As shown in Figure 3, you can copy the repository address from the navigated GitHub page to clone it later. For instructions on how to build and run the program, please refer to the **README.md** file on the GitHub page.

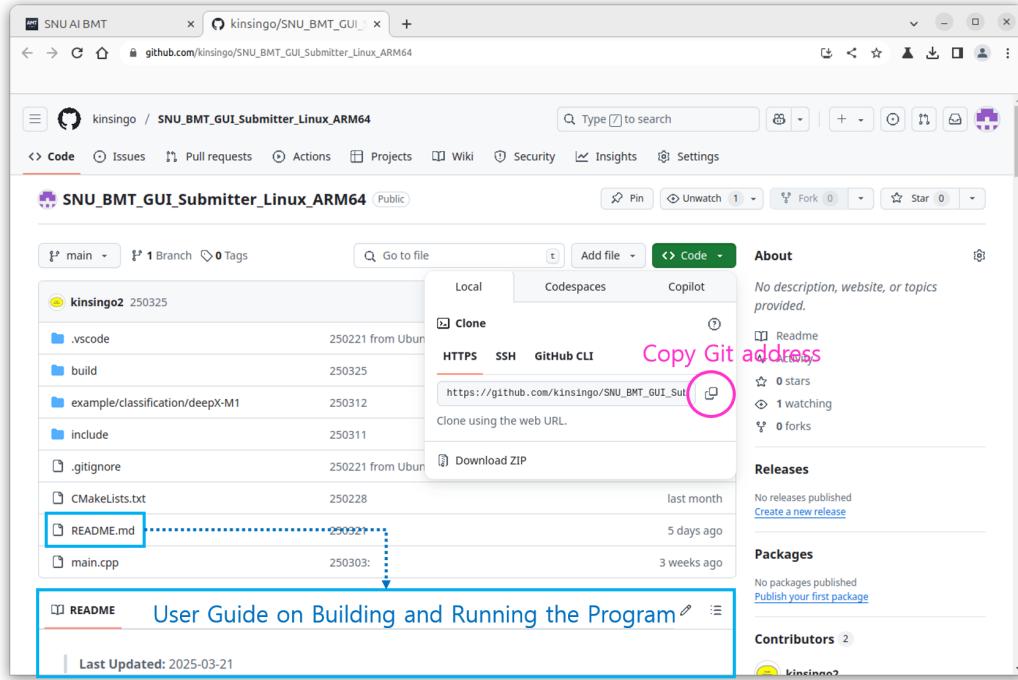


Figure 3: Github Page

3.2.4 Cloning the Git Repository

As shown in Figure 4, clone the copied Git repository address into your preferred directory.

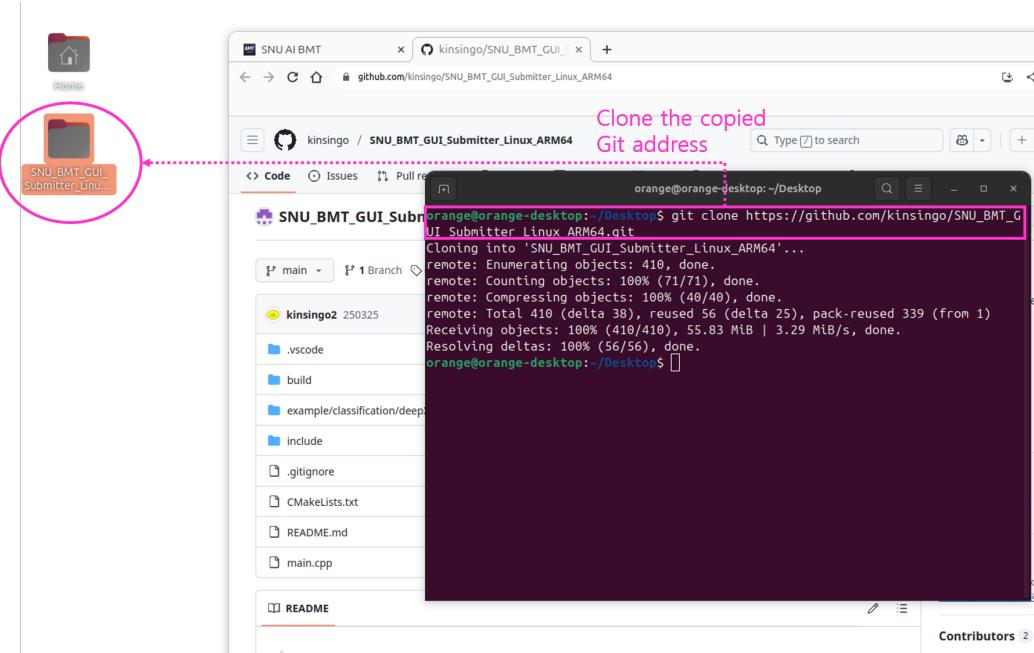


Figure 4: Cloning the Git Repository

3.2.5 Interface Implementaion

Implement **SNU_BMT_Interface** by inheriting and overriding its virtual methods. User can directly implement **Virtual_Submittter_Implementation** class in main.cpp, which is then passed to the GUI caller object. Additionally, the model path should be correctly provided to check that the model file exists at the specified location before the evaluation start. You may refer to the files in the example folder for a reference implementation

```

SNU_BMT_GUI_Submitter_Lin... ① ② ③ ④
> .vscode
> build
example/classification/deepX-M1
> cmake
< classification/multiCore_callBack.cpp
< classification/multiCore_wait.cpp
< classification/singleCore.cpp
M CMakeLists.txt
< main.cpp
> include
< .gitignore
M CMakeLists.txt
< main.cpp
① README.md

main.cpp > main(int, char*[])
1 #include "snu_bmt/gui_caller.h"
2 #include "snu_bmt/interface.h"
3 #include <filesystem>
4
5 using BMTDataType = vector<float>;
6
7 class SNU_BMT_Interface : public Virtual_Submitter_Implementation { // Implement this interface for your hardware
8 {
9     string modelPath;
10 public:
11     Virtual_Submitter_Implementation(string modelPath) -> Model > Classification
12     {
13         string modelPath = "resnet50_v2_opset10_dynamicBatch.onnx"; // Please ensure that the model exists at this path
14         filesystem::path exePath = filesystem::absolute(argv[0]).parent_path(); // Get the current executable file path
15         filesystem::path modelPath = exePath / "Model" / "resnet50_v2_opset10_dynamicBatch.onnx";
16     }
17     virtual VariantType convertToPreprocessedDataForInference(const string& imagePath) override -> VariantType
18     {
19         return VariantType();
20     }
21     virtual vector<BMTResult> runInference(const vector<VariantType>& inputs) override -> vector<BMTResult>
22     {
23         return vector<BMTResult>();
24     }
25 }
26
27 int main(int argc, char* argv[])
28 {
29     shared_ptr<SNU_BMT_Interface> interface = make_shared<Virtual_Submitter_Implementation>(modelPath);
30     SNU_BMT_GUI_CALLER caller(interface, modelPath);
31     return caller.callBMT(argc, argv);
32 }
33 catch (const exception& ex)
34 {
35     cout << ex.what() << endl;
36 }
37
38 }
```

Implement this interface for your hardware

Model > Classification

resnet50_v2_opset10_dynamicBatch.onnx

Figure 5: Interface Implementaion

3.2.6 Build and Execution

As shown in Figure 6, the program can be built and executed by following the commands provided in **README.md**. After running these commands, the GUI will launch.

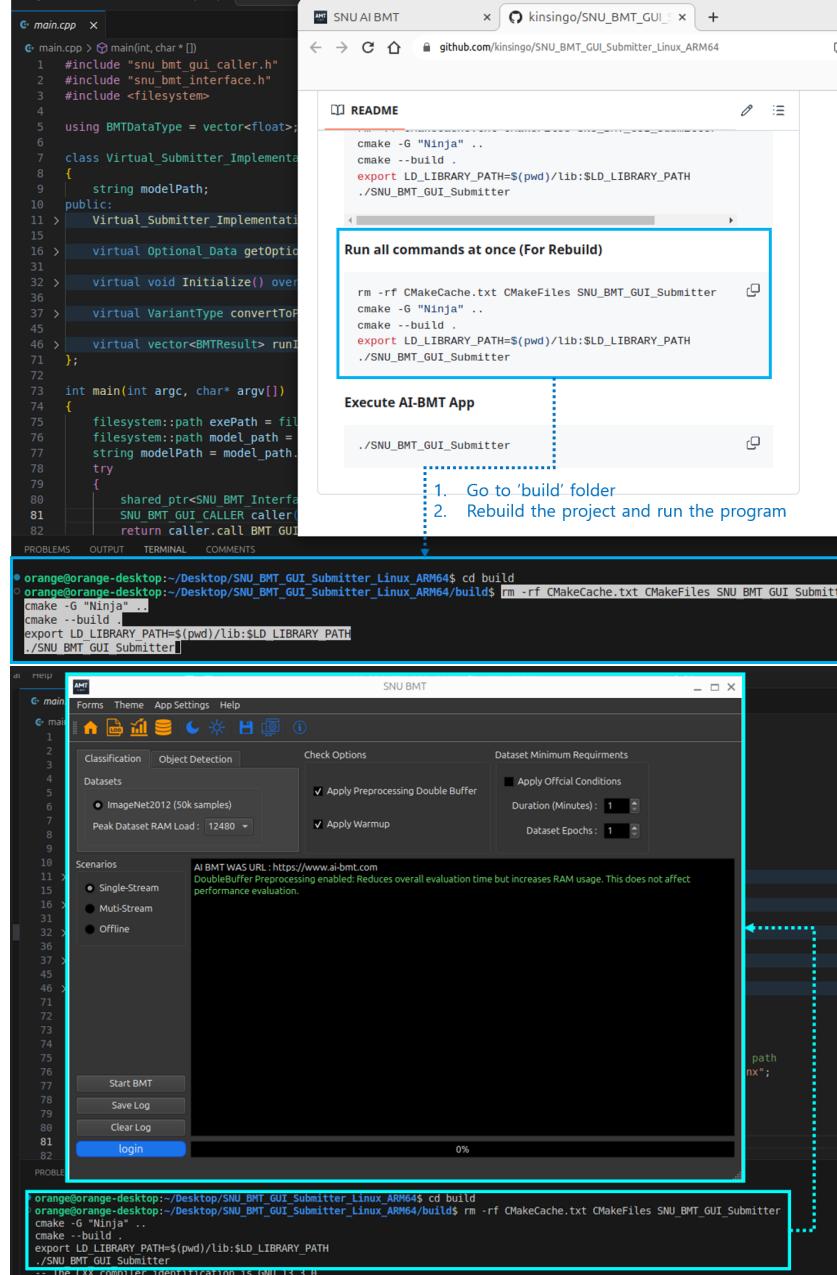


Figure 6: Build and Execution

3.2.7 GUI Options (1)

As illustrated in Figure 7, the GUI offers intuitive controls for customizing benchmark settings. The numbered components are described as follows:

1. **Task Selection:** Select either **Image Classification** or **Object Detection**.
2. **RAM Allocation:** Specify the number of samples to be loaded into RAM at once. A smaller number is recommended to ensure sufficient memory for enabling Double Buffering.
3. **Check Options: Double Buffering** reduces evaluation time by overlapping preprocessing and inference and **Warm-Up** stabilizes hardware before benchmarking.
4. **Minimum Requirements:** If apply official condition, will fix **Min Duration** as 10 minutes and **Min Epochs** as 3.
5. **Scenario Selection:** Choose among **Single-Stream**, **Multi-Stream**, and **Offline** scenarios.
6. **Evaluation Status Panel:** Displays benchmarking logs and status messages in real time.

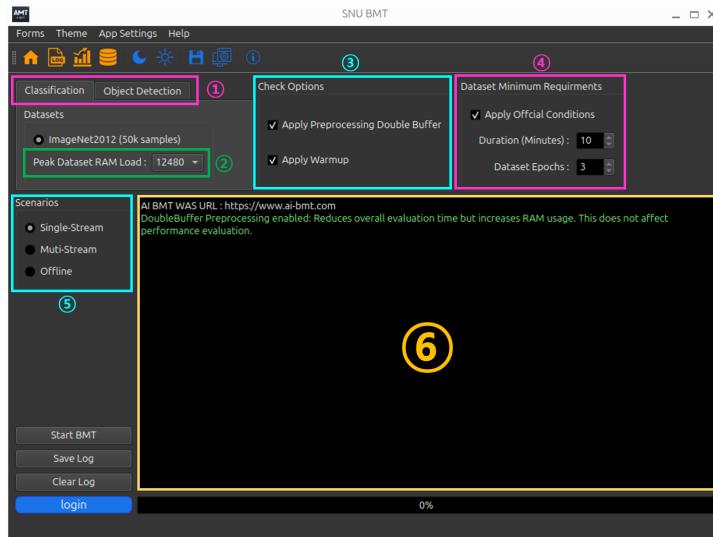


Figure 7: GUI Options (1)

3.2.8 GUI Options (2)

As shown in Figure 8, the GUI includes additional features for usability and benchmarking control. The numbered components are:

1. **Page Navigation:** The leftmost tab is the **Main Page**, followed by the **Log Viewer**, **Data Analysis**, and **Model/Dataset Download** pages. These will be explained in detail later.
2. **Theme Selection:** Allows users to switch between dark and light themes based on personal preference.
3. **Option Save/Load:** Saves the current GUI configuration or loads previously saved settings. The saved options are automatically applied upon restarting the app.
4. **Control Panel:** User can start evaluation by clicking **Start BMT** button. also can save or clear the log messages in **Evaluation Status Panel**. To access private database, user can login using **login** button.
5. **Progress Bar:** Displays the progress of time-consuming processes such as dataset validation and epoch evaluations.

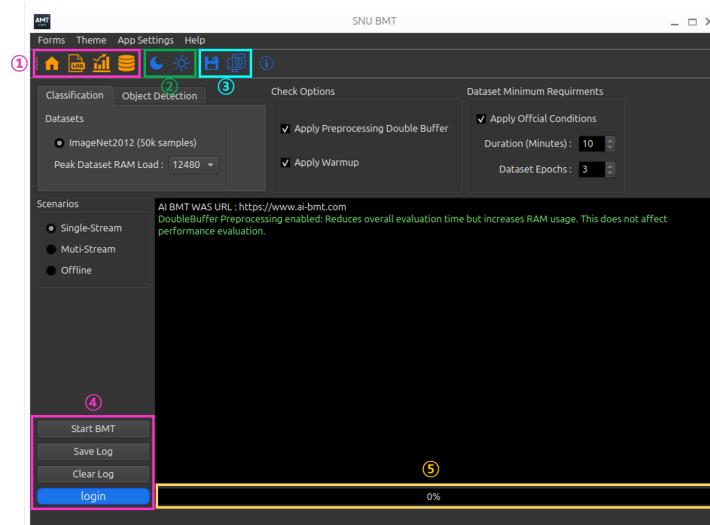


Figure 8: GUI Options (2)

3.2.9 GUI Options (3)

As shown in Figure 9, the GUI provides debugging-oriented options to support rapid development and testing of the benchmarking interface by submitters. Notable features include:

1. **Dataset Selection for Debugging:** The GUI offers two types of datasets — a full **Evaluation Set** (ImageNet2012, 50000 images) and a compact **Test Set** (ImageNet2012, 120 images). The Test Set, consisting of only 120 representative samples, allows a complete epoch to be executed quickly. This facilitates interface debugging by reducing evaluation time and resource consumption.
2. **Skip For Debugging Options:** To streamline testing, the GUI allows users to skip stages such as **Model Validation**, **Dataset Validation**, and **Database Upload**. In particular, skipping database upload removes the need for login credentials, enabling evaluations to run in an unauthenticated state.
3. **Stop BMT:** The GUI includes a **Stop** button that allows users to terminate the evaluation process mid-way.

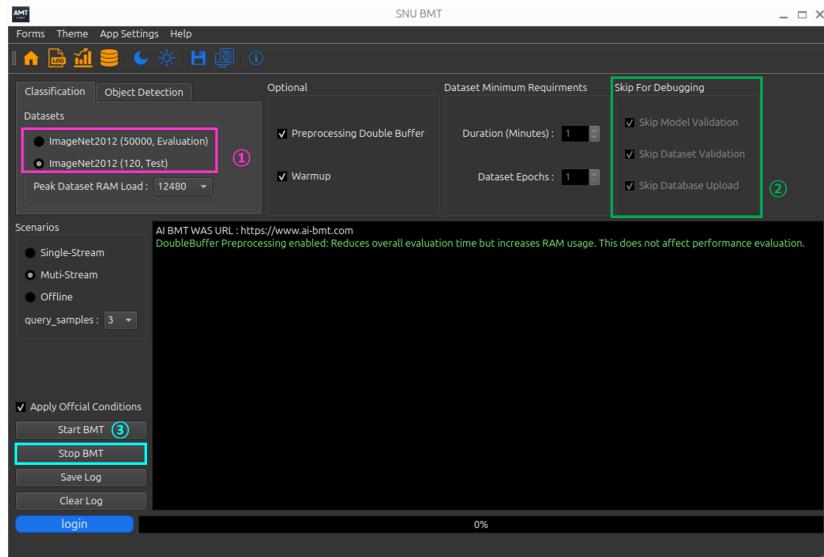


Figure 9: GUI Options (3)

3.2.10 Resizable application window

As shown in Figure 10, the application window can be resized to suit user preferences. The selected window size is also saved when using the **Option Save** feature, and automatically restored upon restarting the application.

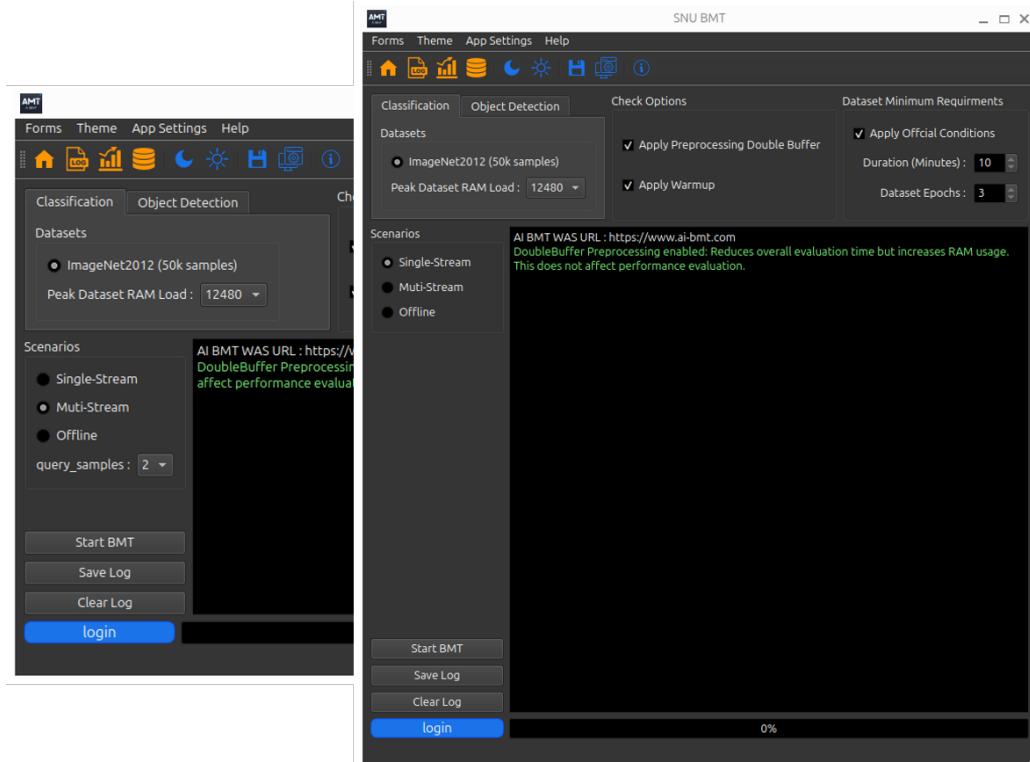


Figure 10: Resizable application window

3.2.11 Start BMT & Authentication

As shown in Figure 11, when the **Start BMT** button is clicked, the user is required to log in before the evaluation begins, if not already authenticated. If the user does not have an account, clicking the **Sign up** link will navigate to the registration page on ai-bmt.com.

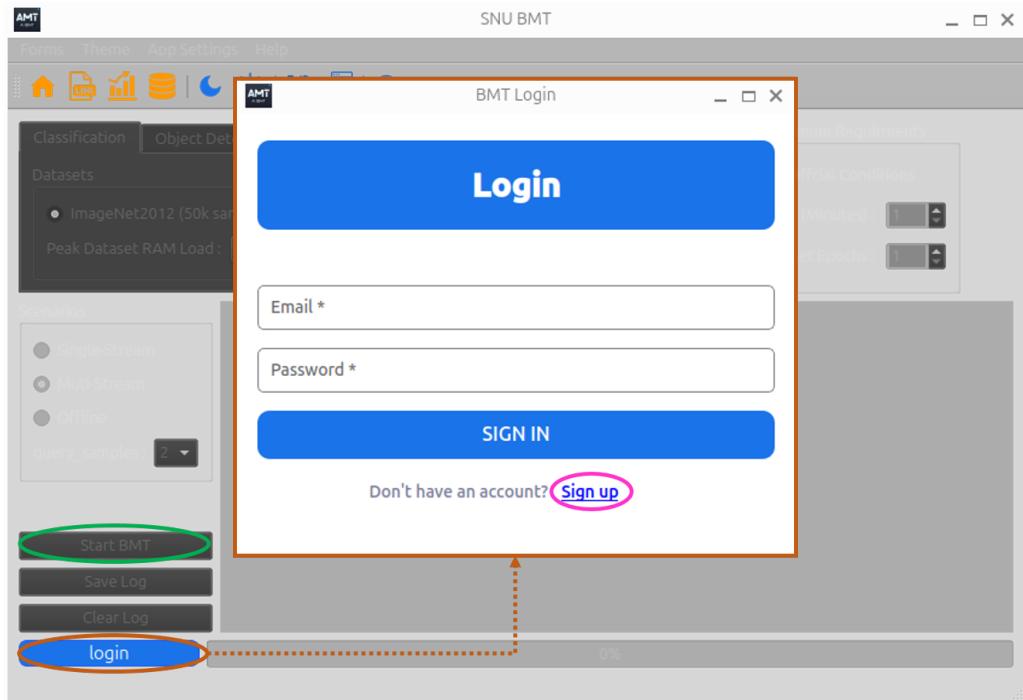


Figure 11: Start BMT & Authentication

3.2.12 Dataset Validation

As shown in Figure 12, if the required dataset for the selected task is missing, the application displays an error message and terminates the evaluation process. In this example, the model file exists and passes the validation check. If the model file was missing, a separate error message would be shown accordingly.

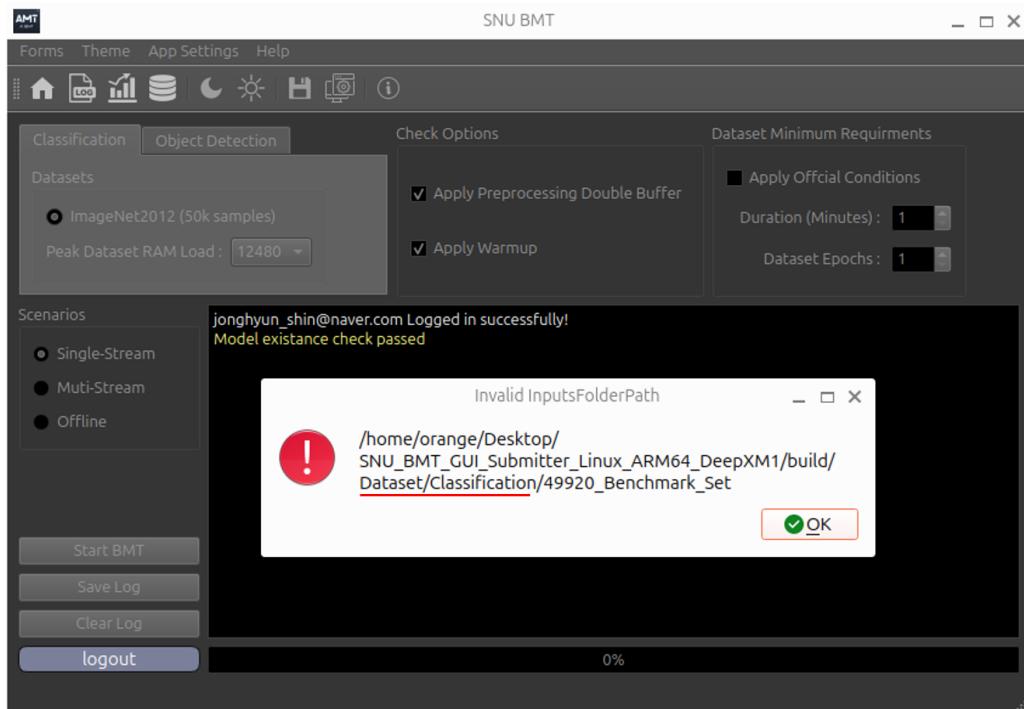


Figure 12: Error message for missing dataset

3.2.13 Model & Dataset Download

As shown in Figure 13, users can download the required model or dataset for each task by clicking the corresponding button. For example, clicking the **Imagenet2012 (50000ea)** button automatically downloads the dataset and label files, extracts them to a predefined directory, and prepares them for evaluation. This entire process, including downloading and extraction, is handled automatically.

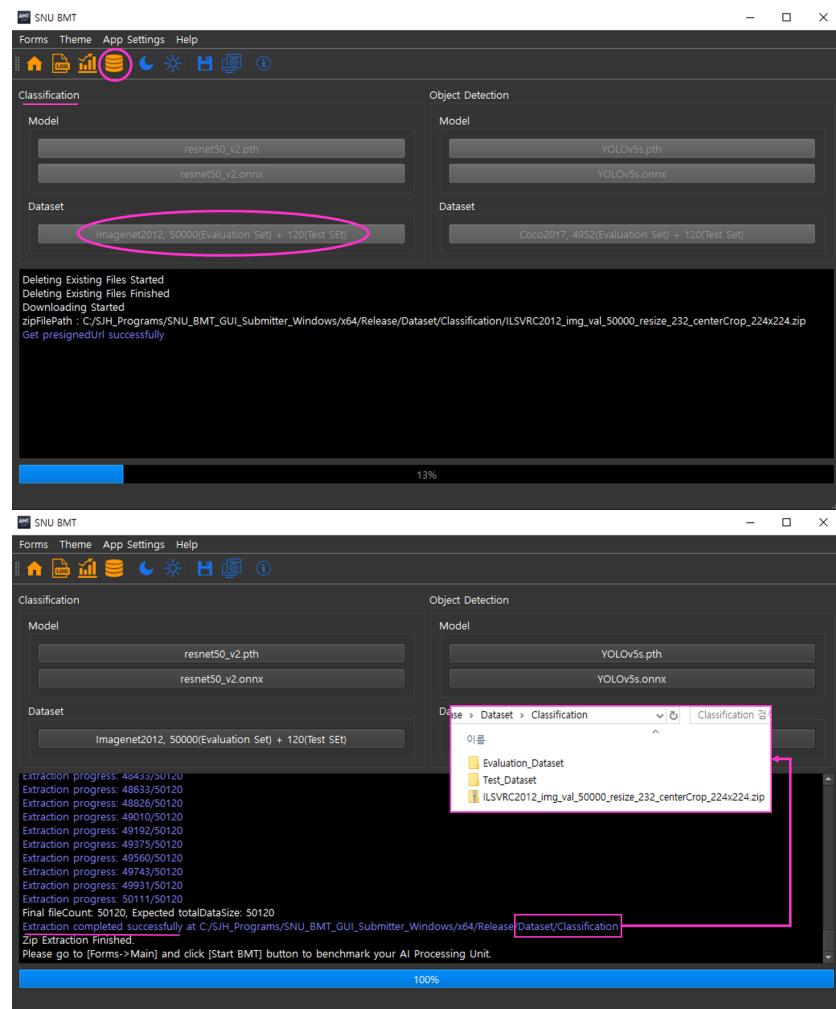


Figure 13: Model & Dataset Download

3.2.14 Benchmark Log Message (1)

As shown in Figure 14, if the **dataset and label validation** and **model existence check** pass, the evaluation begins with the **Warm-Up** process if enabled. In this example, the RAM allocation is set to 4992 samples. Once the first 4992 samples are processed, current evaluation results are displayed, and the system proceeds to the next 4992 samples.

Because **Double Buffering** is enabled, the next 4952 samples are preprocessed and loaded into a separate buffer during the inference of the current 4952 samples. This overlap reduces total evaluation time by avoiding idle periods between data preprocessing and inference.

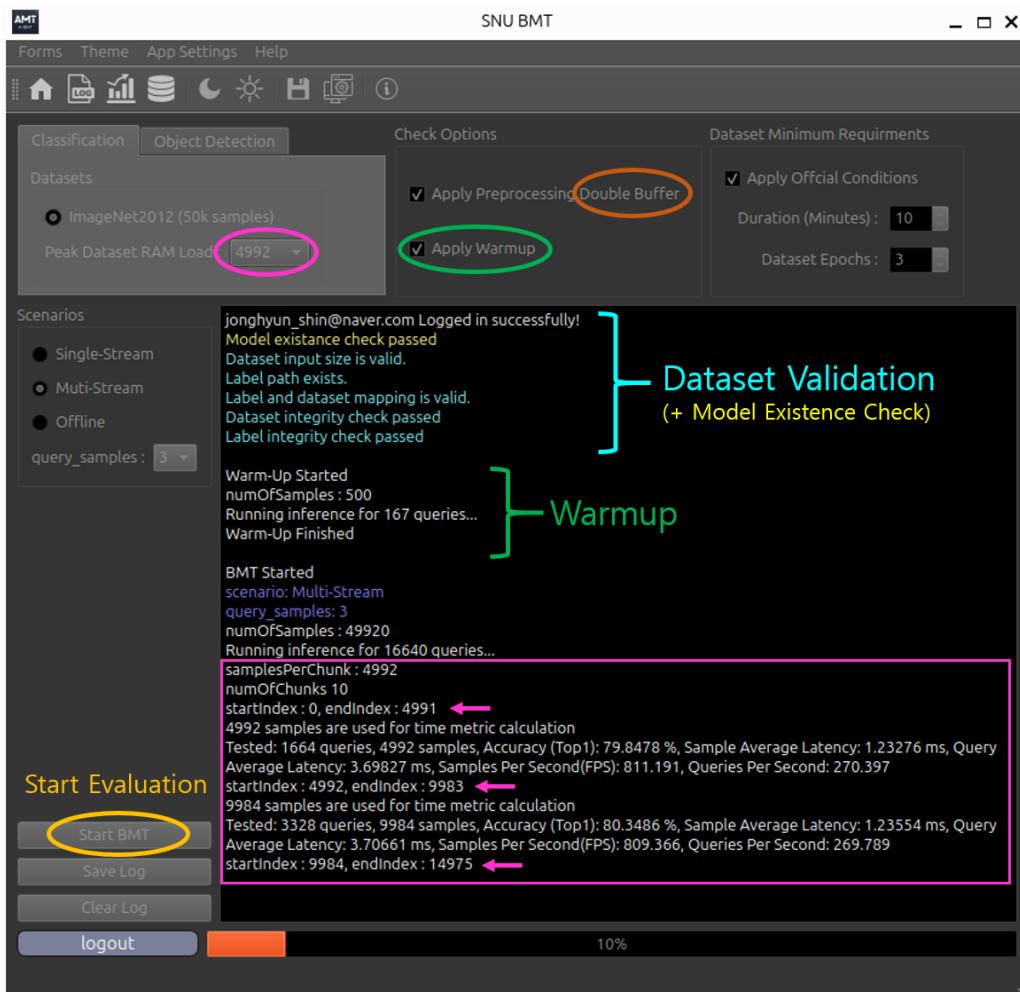


Figure 14: Benchmark Log Message (1)

3.2.15 Benchmark Log Message (2)

As shown in Figure 15, once the first epoch evaluation is completed, the system displays a summary of the current epoch results. It then checks whether the **minimum dataset requirements** are met. Since neither the epoch count nor the time condition is satisfied in this case, a new epoch evaluation is initiated automatically.

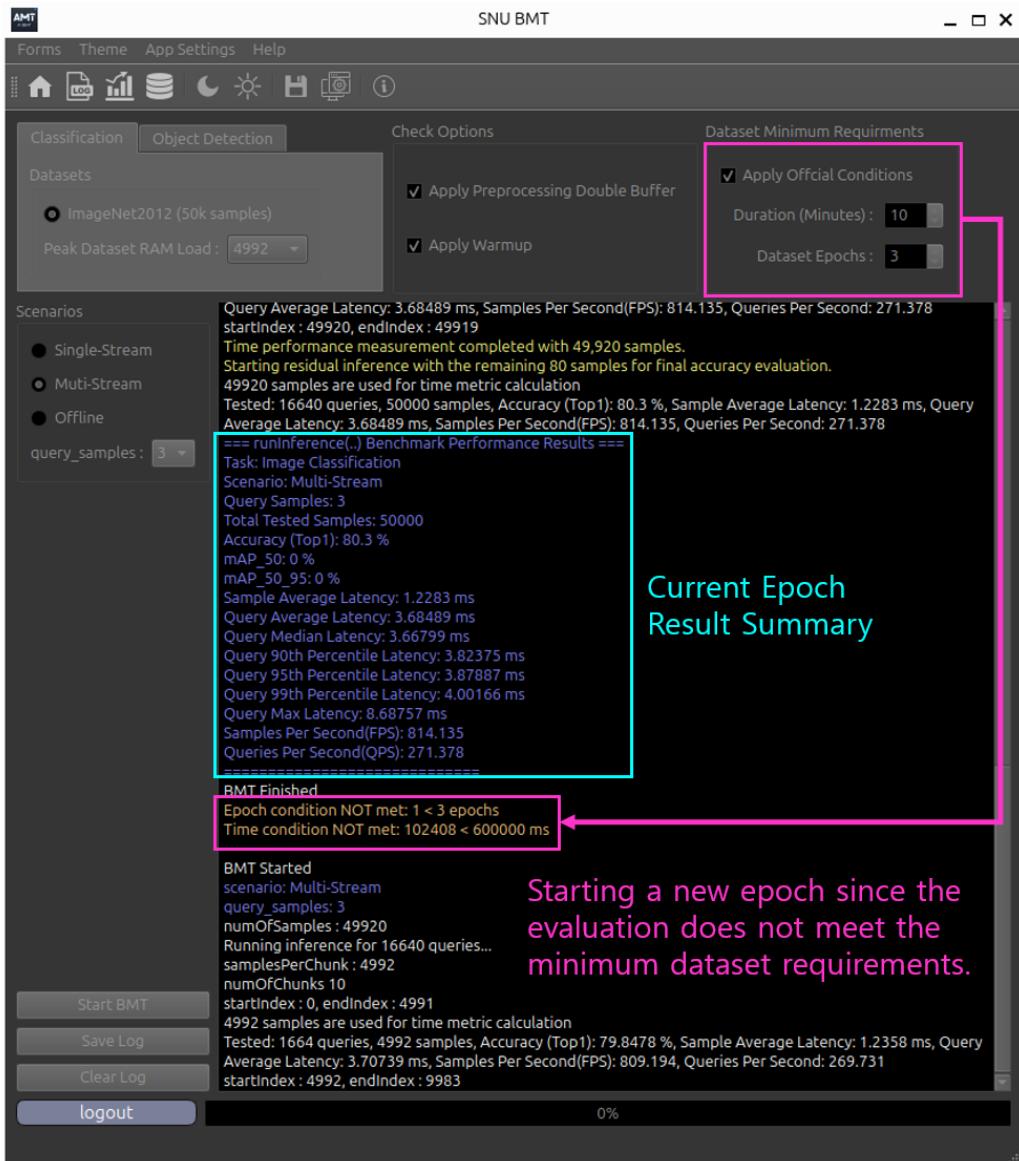


Figure 15: Benchmark Log Message (2)

3.2.16 Benchmark Log Message (3)

As shown in Figure 16, once both the **epoch count** and **time condition** are satisfied after several epochs, the evaluation process is completed. The system then displays the summary of overall performance metrics and uploads the results to the private database associated with the logged-in account.

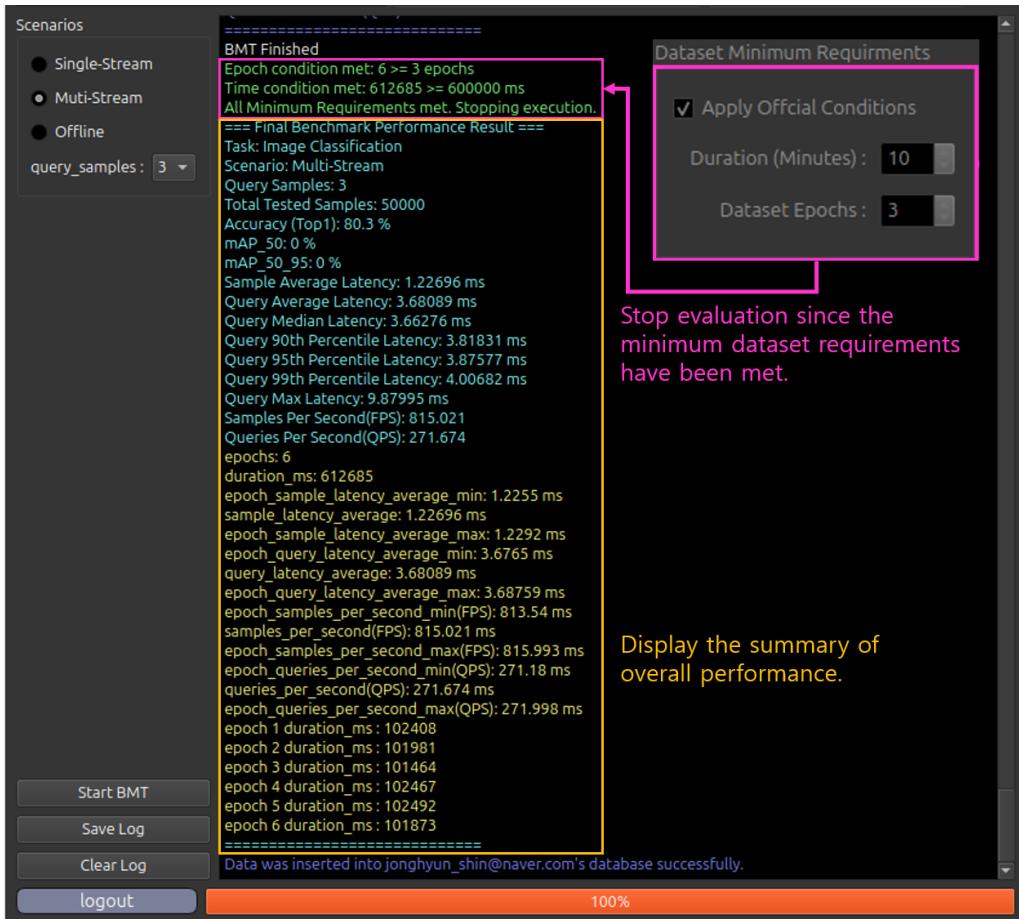


Figure 16: Benchmark Log Message (3)

3.2.17 Log Viewer

As shown in Figure 17, users can save the log messages from the **Evaluation Status Panel** by clicking the **Save Log** button. The log file is stored in the **Logs** directory with a timestamp-based filename. Saved logs can later be viewed within the application using the **Log Viewer** tab.

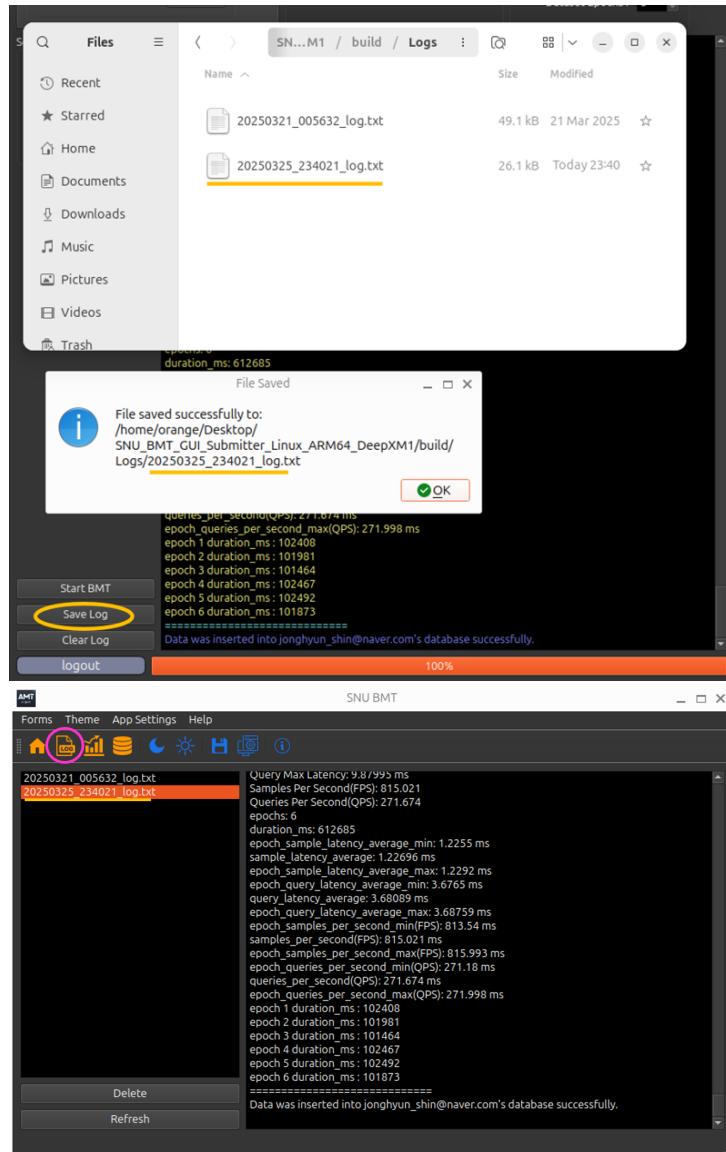


Figure 17: Log Viewer

3.2.18 Data Analysis (App)

As shown in Figure 18, users can analyze their evaluation results retrieved from the database. To access this feature, users can click the **Data Analysis** tab. The most recent evaluation result appears at the top row of the table. Users can **double-click a specific row to delete it**, or **click on a column header to sort the data** in either ascending or descending order. In addition, users can copy selected rows (including headers) using **Ctrl+C**, and paste them into spreadsheet software (e.g., Excel) for further analysis. Alternatively, the entire set of results can be saved as a CSV file using the **Save as CSV file** button.

The figure consists of two screenshots of a software application window titled "SNU BMT".

Top Screenshot: A confirmation dialog box titled "Confirm Deletion" is overlaid on the main table. It asks, "Are you sure you want to delete this data?". There are two buttons: "No" (red) and "Yes" (green). The "Yes" button is circled in green.

Bottom Screenshot: A success message box titled "SUCCESS" is overlaid on the main table. It says, "Data successfully saved as CSV." There is an "OK" button. Below the message, a status bar indicates: "Data was retrieved from jonghyun_shin@naver.com's database successfully. Number of records: 241. To copy the table data, select the rows and press Ctrl+C. The copied data includes headers. CSV File saved successfully: /home/orange/Desktop/data".


Buttons and Icons:

- Top Screenshot Buttons:** "Read Data From WAS" (left), "Save as csv file" (right).
- Bottom Screenshot Buttons:** "Read Data From WAS" (left), "Save as csv file" (right).
- Icons:** A blue info icon is located in the bottom right corner of the main table area.

Figure 18: Data Analysis (App)

3.2.19 Data Analysis (WAS)

As shown in Figure 19, users can also analyze their evaluation results through the web-based interface provided by the WAS ([ai-bmt.com](https://www.ai-bmt.com/result/private)). By selecting the **My Results (Private)** tab under the **Compare Results** menu, users can view their personal benchmark history. The entire set of results can be downloaded as a CSV file using the **Download Data as CSV** button.

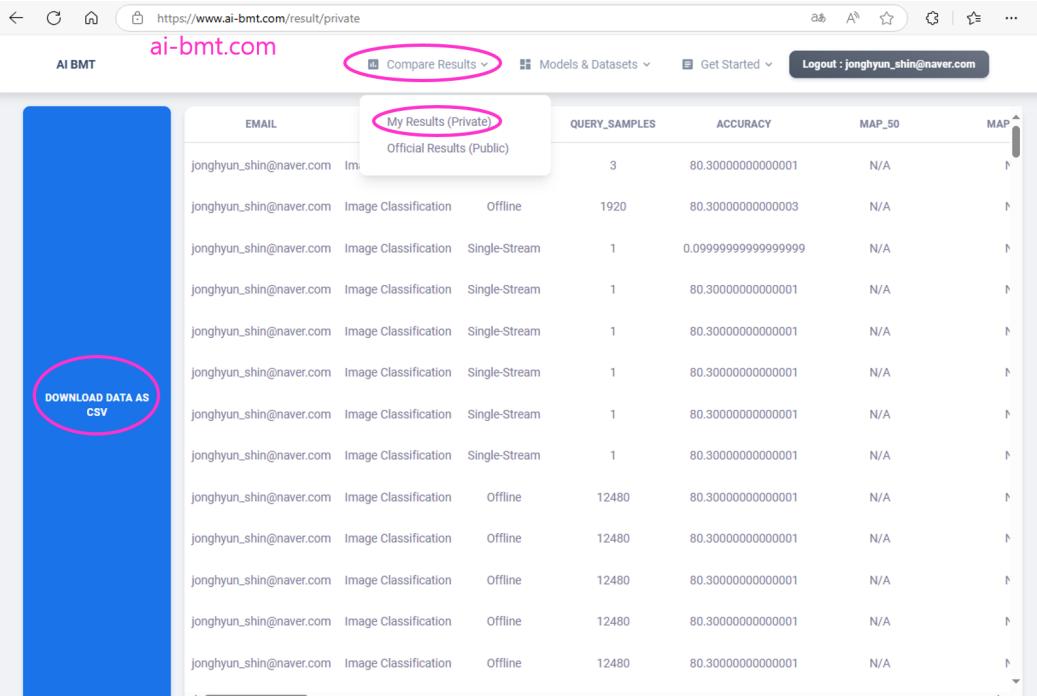

The screenshot shows a web browser displaying the AI-BMT Data Analysis (WAS) interface at the URL <https://www.ai-bmt.com/result/private>. The page has a header with the AI-BMT logo, a navigation bar with 'Compare Results' (circled in pink), 'Models & Datasets', 'Get Started', and a 'Logout' link. The main content is a table of evaluation results. The first column is 'EMAIL', the second is 'My Results (Private)' (circled in pink), and the third is 'Official Results (Public)'. The table has columns for 'QUERY_SAMPLES', 'ACCURACY', 'MAP_50', and 'MAP'. A large blue sidebar on the left contains a 'DOWNLOAD DATA AS CSV' button, which is also circled in pink.

EMAIL	My Results (Private)	Official Results (Public)	QUERY_SAMPLES	ACCURACY	MAP_50	MAP
jonghyun_shin@naver.com	Image Classification	Offline	3	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Single-Stream	1920	80.30000000000003	N/A	↑
jonghyun_shin@naver.com	Image Classification	Single-Stream	1	0.0999999999999999	N/A	↑
jonghyun_shin@naver.com	Image Classification	Single-Stream	1	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Single-Stream	1	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Single-Stream	1	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Single-Stream	1	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Offline	12480	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Offline	12480	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Offline	12480	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Offline	12480	80.30000000000001	N/A	↑
jonghyun_shin@naver.com	Image Classification	Offline	12480	80.30000000000001	N/A	↑

Figure 19: Data Analysis (WAS)

4 Required Preprocessing For Each Model

For implementation reference, please refer to the provided example code.

4.1 Classification(Imagenet2012 Validation Dataset)

All below models require normalization using `mean = [0.485, 0.456, 0.406]` and `std = [0.229, 0.224, 0.225]`. No resizing or cropping is necessary, as the provided dataset has already undergone such preprocessing.

The classification models listed below are provided in both `.pth` and `.onnx` formats. The Top-1 Accuracy shown in the table is consistent across both formats, with a maximum deviation of 0.005%. The same preprocessing pipeline was applied during their training.

Model	Top-1 Accuracy (%)	# Parameters
ResNet50	80.41	25.56M
ResNet101	81.55	44.55M
MobileNet_V2	71.95	3.50M
MobileNet_V3_Large	75.10	5.48M
RegNet_X_400MF	74.56	5.50M
RegNet_Y_400MF	75.66	4.34M
RegNet_X_800MF	77.10	7.26M
RegNet_Y_800MF	78.68	6.43M
ResNeXt50_32x4d	80.88	25.03M
Wide_ResNet50_2	81.21	68.88M

4.2 Object Detection(Coco17 Validation Dataset)

- **YOLOv5s:** This model requires the input image to be resized to a fixed resolution of 640×640 , while maintaining the original aspect ratio. This is achieved using the `LetterBox` transformation, which resizes the image and applies padding. In addition, pixel values are normalized to the range $[0.0, 1.0]$ by dividing by 255. These preprocessing steps are consistent with the default implementation used in the official YOLOv5 repository. For more detail, refer to the example code provided.

5 Known Limitations and FAQs

5.1 Current Limitations

- **Manual model validation:**

The platform currently requires a manual audit process to ensure that model weights remain unchanged. This highlights the need for automated validation methods to ensure fairness and reduce the audit workload.

- **Limited model support per task:**

The platform currently supports only one model per task. More representative models will be added in future updates.

- **Limited language support for benchmarking logic:**

Benchmarking platform is only available in C++, which restricts accessibility for users who prefer other programming environments such as Python.

- **Online-only benchmarking:**

The current version supports only online benchmarking, which requires a stable internet connection and strict adherence to the official evaluation workflow.

- **Lack of power and thermal efficiency metrics:**

Power consumption and thermal behavior are not yet supported. These features require the development of dedicated hardware modules and integration with the BMT application.

5.2 Frequently Asked Questions

- **Does the platform support auto-login?**

No. This feature is not currently supported, but it will be added in a future update. (Auto-login will be available after the first-time login)

- **Is there a debug mode available?**

Currently, no. The platform is intended for official use only. For example, only fixed models and datasets for specific tasks are allowed. An internet connection and login are required because, at the end of the evaluation, the results are uploaded to a private database linked to each individual account. However, there are plans to add an offline mode, which will serve as a type of debug mode. This will allow users to test any model or dataset, even without an internet connection.

6 Support Contact

For further assistance, contact me at `jonghyun_shin@capp.snu.ac.kr` or +82 10-9211-5031.