

Mega Media Broadcasting Network SMS Gateway interface definition V 020601

IN CONFIDENCE TO Shriley Hsu

This document contains confidential and privileged information.

The reproduction of any part of the document is strictly prohibited without the prior written consent of Nagravision S.A.



1. IN	TRODUCTION	8
1.1	Summary	8
1.2	Document History	8
1.3	Trademarks	8
1.4	Acronyms and Definitions	9
1.5	IDs	10
2. TH	HEORY OF OPERATION	12
2.1	Product Terminology	12
2.2	Assumptions and Restrictions	12
2.3	Additional Functionality	12
3. IN	TERFACE SPECIFICATIONS	13
3.1 3.1	Description 1.1 SMS-SMS Gateway connections	13 13
3.2 3.2	2.2 CONTROL Command Section 2.3 PRODUCT_DEF Command Section 2.4 FEEDBACK Commands Section 2.5 SMS OPERATION Commands	17 18 20 21 21 21 22
3.3 3.3 3.3 3.3	3.2 Error codes extension 3.3 Command root header error codes and extensions	25 25 26 28 29
3.4	EPG Data Feed Errors Specification	29
4. SC	CENARIO FOR USE	30
4.1	Creating a Physical Transmission Channel	30
4.2	Creating a service	30
4.3	Updating a service definition	30



4.4	Deleting a service	30
4.5	Creating a service package product	30
4.6	Creating an event package product	31
4.7	Creating an event product	32
4.8	Updating an event	32
4.9	Updating the schedule of an event product	32
4.10	Updating the schedule of an event in an event package product	32
4.11	Deleting an event	33
4.12	Subscriber creation	33
4.12		33
	2.2 ICC/STB Pairing	33
4.12	2.3 Entering subscriber information	33
4.13	Callback	34
4.14	ICC - Lost/Stolen/Deleted	35
4.15	Grant the subscriber the rights to a product	35
4.16	Subscriber suspension	35
4.17 4.17		35
4.18	Deleting a subscriber	36
4 19	Event Product Purchase	36
4.19	4	37
4.19	, , , , , , , , , , , , , , , , , ,	38
4 20	Blackout	38
4.20		38
4.20		39
4.20		39
4.20		39
4.20		39
		39
4.20		
4.20	D.7 Zip Code Information Update	40
	_ \	
4.21	Event runs late	40
4.22	Changing to/from daylight savings time	40
4.23	Tokens (FUTURE)	40



4.24	SMS vs ICC customer data discrepancy	40
5. AP	PPENDIX: SMS EMM COMMANDS	41
5.1	Command 2: Add Product	41
5.2	Command 3: Product Renewal	42
5.3	Command 4: Product Suspension	43
5.4	Command 5: Product Reactivation	44
5.5	Command 6: Product Cancellation	45
5.6	Command 7: All products cancellation	46
5.7	Command 8: Credit management	47
5.8	Command 9: Update Credit Threshold	48
5.9	Command 10: Add Event Product	49
5.10	Command 13: Create Credit for Impulse Purchase	50
5.11	Command 14: Suspend impulse purchase	51
5.12	Command 15: Reactivate impulse purchase	52
5.13	Command 20: Suspend subscriber ICC	53
5.14	Command 21: Reactivate subscriber ICC	54
5.15	Command 22: Reserved	54
5.16	Command 30: Reserved	54
5.17	Command 31: Reserved	54
5.18	Command 32: Reserved	54
5.19	Command 48: Set Zip code	55
5.20	Command 49: Set Callback phone number	56
5.21	Command 50 Cancel ICC	57
5.22	Command 51: Initialize Card	58
5.23	Command 52: Pair the ICC with the STB	59
5.24	Command 53: Clear PIN code	60



5.2	5 Command 54: Set Callback IP address	61
5.20	6 Command 60: Immediate Call Back	62
5.27	7 Command 61: Enable Automatic Call Back	63
5.28	B Command 62: Disable Automatic Call Back	64
5.29	9 Command 63: Reserved	64
5.30	0 Command 64: Update event right	65
5.3	1 Command 65 to 68: Reserved	66
5.32	2 Command 69: Send Generic IRD Command	67
5.33	3 Command 70: Reserved	68
5.34	4 Command 71: Get Products	68
5.3	5 Command 72: Set Products	69
5.36	6 Command 73: Add ALC product	71
5.37	7 Command 74: Modify ALC product	72
5.38	B Command 75: Renew ALC product	73
5.39	9 Command 76: ALC product Suspension	73
5.40	0 Command 77: ALC product Reactivation	74
5.4	1 Command 78: ALC product Cancellation	74
5.42	2 Command 79: Force Tune (future use)	75
5.43	3 Command 80: Send message (future use)	76
5.44	4 Command 90: Reserved	76
5.4	5 Command 91: Reserved	77
5.40	6 Command 92: Purge old Products (future use)	77
5.47	7 Command 93: Reserved	77
6 ^	ADDENDIY, SMC CONTROL COMMANDS	70
	APPENDIX: SMS CONTROL COMMANDS	79
6.1	Command 100: Redefine Credit Limit	79
6.2	Command 101: Set Authorized Phone Number	80





6.3	Command 104: Create ICC On Call Collector	81
6.4	Command 105: Cancel ICC On Call Collector	82
6.5	Command 110: EMM cleanup	83
6.6	Command 111: Get History From Call Collector	84
7. AF	PPENDIX: SMS FEEDBACK COMMANDS	85
7.1	Command 200: Low credit alarm	85
7.2	Command 201: Current Debit and Credit	86
7.3	Command 202: PPV Purchase List	87
7.4	Command 205: Phone Discrepancies	88
7.5	Command 206: STU Responding Status	89
7.6	Command 207: ICC Memory Full Alarm	90
7.7	Command 208: Event definition error	91
7.8	Command 209: Null Event error	92
7.9	Command 210: EPG data feed format error	93
7.10	Command 211: Start of Report	94
7.11	Command 212: End of Report	95
7.12	Command 213: Event Product Schedule Change	96
7.13	Command 214: Event remove error	97
7.14	Command 215: Products List	97
8. AF	PPENDIX: SMS PRODUCT_DEF COMMANDS	99
8.1	Command 300: Create event product	99
8.2	Command 301: Remove product	101
8.3	Command 302: Modify event product	102
8.4	Command 303: Create service product	104
8.5	Command 304: modify service product	105
8.6	Command 305: Create service package product	106



8.7	Command 306: modify service package product	108
8.8	Command 307: Create event package product	110
8.9	Command 308: modify event package product	112
8.10	Command 309: Update event PPV number	114
9. AP	PENDIX: SMS OPERATION COMMANDS	115
9.1	Command 1000: Acknowledge Command	115
9.2	Command 1001: Non-acknowledge Command	116
9.3	Command 1002: No Command	117
10. <i>A</i>	APPENDIX: DEVICE_IO PROTOCOL	118
10.1	Overview	118
10.	/ / /	
10.		/ 120
10.	1.3 Status code table	/ 120
10.2	Example: connecting to a Device_IO server	121



1. Introduction

1.1 Summary

This document describes the work of the SMS gateway and in particular its role as:


- the interface in between the SMS and the SAS,
- the interface in between the SMS and the Call Collector,
- the interface in between the SMS and IMS.

1.2 Document History

See SasGwySpe020600.hst.doc

1.3 Trademarks

All company and product names used herein may be the trademarks or registered trademarks of their respective companies.

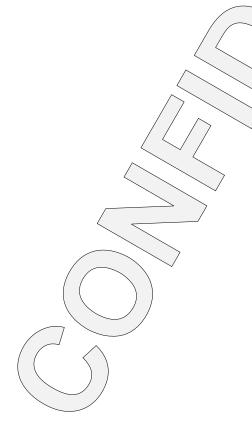



1.4 Acronyms and Definitions

Access right Entitlement to watch a product.

ANI Automatic Number Identification, (Also known as/caller-id):

CA Conditional Access— system.

CC Call Collector or the system, which runs on the same computer as the SAS and the

SMS-Gateway is used to upload information from the ICC into the CC database, e.g.,

a list of expired impulsively purchased PPV event products. The uploaded information is subsequently transmitted through the SMS-Gateway to the SMS.

Cryptoperiod The amount of time between CW changes.

Control Word, used to scramble the MPEG data stream and unscramble the stream

in the STB. CWs are changed periodically.

Device IO Nagravision proprietary protocol based on TCP/IP

ECE ECM Encryptor. A UNIX machine that takes ECM data from the IMS and creates a

properly formatted ECM stream for transmission to the demultiplexer.

Entitlement Control Message. This encrypted message contains the CW and right

descriptor for services.

EMM Broadcaster. A UNIX machine that takes EMM data from the SAS and creates

properly formatted EMM packets for transmission to the multiplexer.

EMM Encryptor. & UNIX machine that takes EMM data and prepares encrypted

messages. This encryption unit makes also decryption of messages coming from

STB through modem lines.

Entitlement Management Message. Carries data from the system to one or many

smart cards.

EPG Electronic Program Guide.

Event Time slice of a service.

Free access A broadcast mode that transmits a signal to make material available to all bearers of

a valid ICC.

ICC Integrated Circuit Card (I.e., a smart card).

Impulse EMM Broadcaster. A UNIX machine that takes IEMM data from the SAS and

creates properly formatted IEMM packets for transmission to the multiplexer.

Impulsive EMM (Carries the data related to products that may be impulsively

purchased).

IMS Information Management System. The computer that maintains the product and

event databases and provides ECM data to the ECE.

IPPV / A PPV event product, which can be impulsively purchased through the STB and

results in the acquisition of an IEMM acquired for processing in the ICC.

MOP /Management OPerator. The commercial program provider who manages subscribers

and subscriptions.

NVOD Near Video On Demand.

PDL Parameter Definition Language. A macro language used for building messages.

PPV Pay Per View.



Preview Time The amount of time at the beginning of an event during which the event is broadcast

in free access mode.

Product A single or group of services or events that may be purchased as a single entity.

UA Unique Address for a smart card. This address identifies a particular smart card in

the field.

UI User Interface.

SAS Subscriber Authorization System or the system in charge of sending the commands

to the subscriber smart-card (ICC). ICC commands are sent by way of EMM and

IEMM streams.

SCC System Control Computer used to configure the MREG program encoders and

multiplexers.

Service TV Channel such as CNN or TNT

SMS Subscriber Management System

Special PPV Event An event impulsively purchased which will initiate an automatic call back once it has

been watched. This event among others will be feed back to the SMS, enabling it to

estimate the audience.

STB Set-top box
STU See STB

Watched Criterion The number of cryptoperiods that have to be processed before an event is

considered as watched.


1.5 IDs

This section contains descriptions of all identifiers used throughout this document:

ID	Definition		
circuit_ID A number uniquely identifying a video/audio/data stream.			
command_ID	The identifier of a SMS command, this field is part of the command. It is		
	documented by the SMS for all commands except the FEEDBACK commands		
	that are documented for the IMS or the CC.		
dest_ID	Identifier of the addressed SMS command. It is entered at the time of system		
	configuration.		
IMS_event_ID / /	An IMS generated identifier for each event. Entered through the IMS editor or		
	generated when processing the EPG data feed.		
IMS_product_ID \ The identifier of a product in the IMS. This identifier is determined at the time.			
	product creation (Command 300). It is the only product identifier known to the		
	IMS. When a product is created, the SMS_product_ID must be given, it is		
	returned along with the newly created product_ID to enable mapping between		
	both IDs to be performed by the SMS.		
MOP_PPID	The identifier of the management operator. This identifier is provided at system		
	configuration time by: Nagravision.		
NASP_SID	A service identifier used for conditional access.		
network_id	Corresponds to the network_id as described in the DVB Network Information		
	Table (NIT).		
pattern_ID	An identifier for blackout patterns (a blackout category and subcategory		
	definition). This identifier is entered at the time of blackout pattern definition		



ID	Definition
	through the IMS interface.
PPV_number	A PPV identifier provided by the SMS. It is entered in the system through the SMS gateway commands: 300, 302, 307 and 308
right_ID	The identifier of an entitlement. It is generated by the IMS at the time of product creation.
Service_ID	An identifier for a service. This is the identifier that users of the service will know (the virtual channel number). It may change over time. It is entered in the system through the IMS editor at the time when services are defined. It corresponds to the service_id as described in the DVB Service Description Table (SDT). It may also correspond to the program number found in the MPEG Program Map Table (PMT).
service_UID	An identifier for a service. This identifier must not change. It always represents the same service in the IMS. This is not a number that users will see. It is entered in the system at the time when the system is configured. A mapping between service_ID and service_UID must be managed by the SMS.
SMS_event_ID	An event identifier provided by the SMS
SMS_product_ID	A product identifier for the SMS. It is provided and managed by the SMS. It is entered in the system when the SMS Gateway through commands: 300, 303, 305 or 307.
source_ID	An identifier for the source of SMS commands. This identifier is entered in the system at the time of system configuration.
STB serial number	The set-top box hardware serial number.
STU_number	This Nagravision STB number is used to identify the set-top box in the CA system for pairing purposes.
transport_id	Corresponds to the network_id as described in the DVB Network Information Table (NIT).

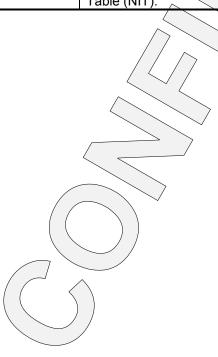



2. Theory of Operation

2.1 Product Terminology

SMS products are composed of four types of products:

Service Product A service is a single channel (audio plus video). A service product contains the

right to view one single service. For instance, WRC is a service. Services will

be initially defined on the IMS Editor, then re-keyed into the SMS.

Event Product An event is a broadcast with a defined start and end time. An event product

contains the right to view a single event. An example is a PPV event such as a single football game. Events can be ordered in advance, or can be impulse-purchased through the STB. Events are normally defined through the EPG stream, but predefinition of events that are outside the range of EPG can be

done via the SMS.

Package of Service

Product

Groups of services defined as a single product. A package of service products

contains the rights to view all services of the package. For instance, a

subscriber might buy Cinemax and HBO as a single unit. Packages of services

are defined via the SMS/

Package of Event Product Like services, events can be grouped into a single product. A package of

events product contains the rights to view all events of the package. Packages of events are defined via the SMS. If some events of the package are outside the range of the EPG, they are predefined and final definition of the event

occurs when the corresponding EPG feed comes.

2.2 Assumptions and Restrictions

- Service ID will be keyed in the IMS and in the SMS.
- All PPV and NVOD events are definable through the EPG data feed.
- The SMS event ID is unique in the IMS database.
- An event belonging to a package product and not existent in the IMS database will be created as a placeholder. The ERG data feed (when available) will finalize the event's definition.
- There will be no package containing both events and services.
- Service and event packages are not impulsively purchasable.
- Subscriptions per themes and level are not supported.
- PPV per token subscriptions are not supported.

2.3 Additional Functionality

• The SMS PRODUCT_DEF commands that create or modify products contain a parameter called "reference number" to ease a subscriber's purchase of a product by telephone. The SMS is responsible for the provision of this reference number.



3. Interface Specifications

3.1 Description

The SMS Gateway is the interface between the SMS and the CA system. It manages the data flow between the:

- SMS and the SAS: grant/remove entitlements, initialise subscriber, etc.
- SMS and the Call Collector: configure subscriber profile, get the purchase history, etc.
- Call Collector and the SMS: report purchase information, etc.
- SMS and the IMS (depending on the product management, create product, change product, etc.).

The SMS Gateway interface consists of text based commands transmitted over device IO, a proprietary protocol that is layered above TCP/IP. The SMS Gateway commands are grouped in 4 different categories:

- Subscriber related commands: add, cancel and suspend subscription. (All handled by the SAS.)
- Call Collector related commands: add a subscriber to the Call Collector database, request list of purchase, etc. (All handled by the Call Collector).
- Feedback commands: these provide the SMS with different kinds of information. Which also include message acknowledgements, a complete list of purchases from the Call Collector or IMS errors depending on the system configuration.
- Product management commands, depending on the system configuration.

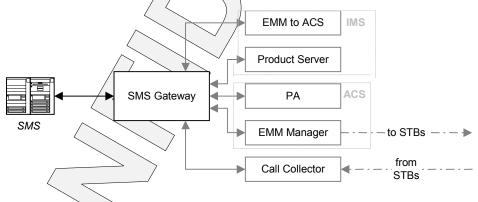


Figure 3.1

Figure 3.1 depicts the major data flows.

Note 1: Depending on the system configuration two more IMS processes could be present: "3nn" for product management and "SMS router" for feedback management. (Although, these processes are tending to be obsolete today.).


Note 2: SMS gateway currently uses GMT time as time reference.

3.1.1 SMS-SMS Gateway connections

There are 2 connections between one SMS and the SMS Gateway: one dedicated to commands from the SMS to the SMS Gateway (command numbers 0 to 199), the other dedicated to feedback commands from the SMS Gateway to the SMS (command numbers 200 to 299). Commands 1000 and 1001 are used as acknowledge messages and are exchanged in the opposite direction at each connection. That is, commands from the SMS to the SMS Gateway are acknowledged by the SMS Gateway using command 1000 or 1001 (depending on successful command completion) on the same connection the command from the SMS was received. The




1000 and 1001 commands are sent in an asynchronous way. The same applies to the SMS that must acknowledge feedback commands on the same connection it receives them on. See § 9.3 for usage of command 1002.

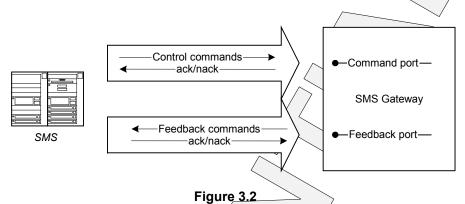

These connections occur on two different TCP ports, however, the SMS initiates both connections, regardless of the main data flow.

3.1.1.1 Connection establishment

Both connections are established in the same manner. Noting that, in order to route SMS Gateway commands in a multi-SMS environment, at the end of the **connection establishment sequence** an additional mandatory step is required—defined in § 10 (Note: The syntax of all device IO messages are already defined).

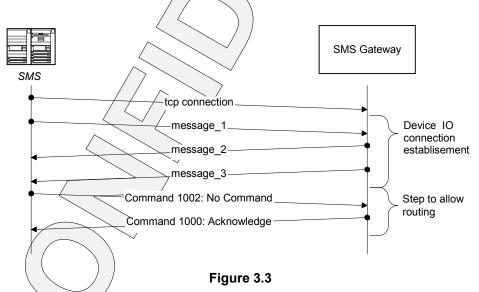


The step consists of the exchange of a command 1002: No Command. This step is necessary for the SMS Gateway to associate a source-id with the connection. This is mostly important for the feedback connection.

The SMS gateway still supports a single SMS connection.



Here are the specifications for a multiple SMS connection versus a single SMS connection:

Multiple SMS connections	Single SMS connection
a SMS must connect using the relating connection protocol described above. The SMS gateway routing table is then updated.	a single SMS simply connects device IO without using the multi SMS connection protocol.
a SMS must send a #104 command with the correct SMS Id, this value will then be kept in the CC record.	
if a SMS is disconnected, the SMS gateway routing table is then of no use, the related feedback commands will be logged.	if the SMS is disconnected, the related feedback commands are held in the CC.

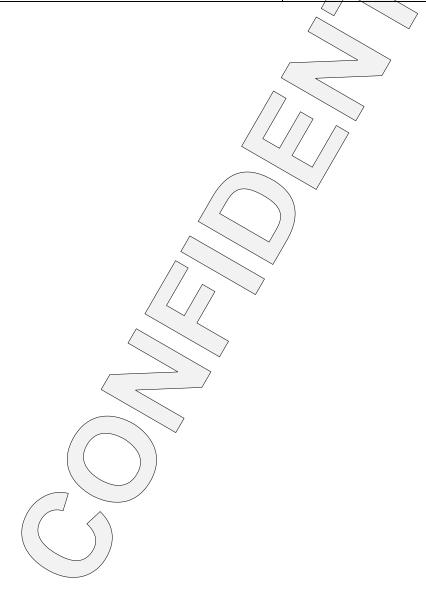

CH - 1033 Cheseaux, Switzerland.

①+41.21.732.03.11



3.1.1.2 Command syntax

If wanted, the SMS may send packets of commands to the SMS Gateway, provided the protocol and device IO layer are respected.

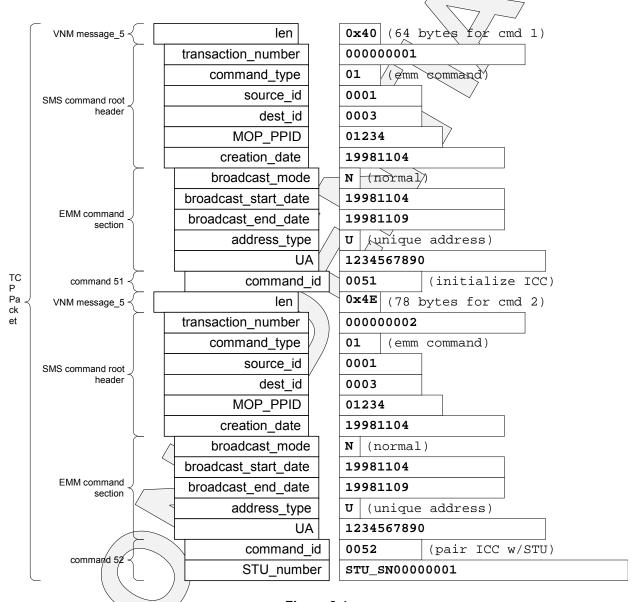


Figure 3.4

Apart from correctly formatting the command, this includes adding the 2-bytes len field at the top of every command sent, as shown in Figure 3.4.



3.2 SMS Gateway Commands

There are five types of SMS commands: EMM, CONTROL, PRODUCT_DEF, FEEDBACK, and OPERATION.

EMM, CONTROL, and PRODUCT_DEF commands are generated by the SMS and sent to the SMS Gateway. FEEDBACK commands are generated by the IMS, SAS or CC and sent to the SMS Gateway. OPERATION commands can be generated on either side.

The syntax of a SMS command is as follows:

SMS command := SMS command root header

SMS command section

SMS command root header

Field	Size	Format	Description
transaction_number	9	000000000 to 999999999	Number used to uniquely identify a transaction across the interface for each source.
command_type	2	00 to 99	Command type can be EMM, CONTROL, PRODUCT_DEF, FEEDBACK or OPERATION.
source_ID	4	0000 to 9999	A number that identifies a source such as the SMS or IMS (this number is provided by Nagravision)
dest_ID	4	0000 to 9999	Identifier of the addressed SMS. This number is defined at system configuration.
MOP_PPID	5	00000 to 99999	Identifier of the technical management operator. This number is provided at system configuration by: Nagravision.
creation date	8	YYYYMMØD,	Creation date of the command.

SMS command section

```
if ( command type == EMM command )
{
    EMM command section
}
    elsif ( command type == CONTROL command )
{
        CONTROL command section
}
    elsif ( command type == PRODUCT_DEF command )
{
        PRODUCT_DEF command section
}
    elsif ( command type == FEEDBACK command )
{
        FEEDBACK command section
}
    elsif( command type == OPERATION command )
{
        OPERATION command section
}
else
{
        return error
}
```

EMM commands are always addressed to a unique ICC or a set of ICCs.



- CONTROL commands are sent to the SAS or to the Call Collector (CC) requesting a special operation (Note: CONTROL commands do not affect ICCs).
- PRODUCT_DEF commands are used to send products definitions, updates and cancellations from the SMS to the IMS database.
- FEEDBACK commands provide information pertaining to a particular ICC status
- OPERATION commands provide gateway transaction synchronization and handshaking.

NOTE:

- SMS commands are completely defined by the format given in this section for the root header.
- Command headers' format is given in the next sections and by the parameter data structures defined for each individual command (See § 5 and above).
- Terminators are not used either for records or individual fields.
- Fields are all of fixed length.
- The SMS Gateway ID (used as the value for the above dest_id and source_id fields) is defined as 0002.
- The CC ID (used as the value for the above dest_id and source_id fields) is defined as 0003 for one CC configuration.

3.2.1 EMM Command Section

EMM command section of SMS commands contains parameters used to send commands of type EMM to the ICC. The syntax is as follows:

EMM command section :=


EMM command header EMM command parameters

EMM command header

Field	Size	Format	Description
broadcast_mode	1	N or B	Normal Standard broadcasting mode.
			Batch Command with a lower priority
broadcast_start_date	8	YYYYM MDD	Broadcast start date. The command must be sent to the ICC from this date ¹
broadcast_end_date	8	YYYYMMDD	Broadcast end date. The command must be sent to the ICC until this date
address_type	1	U or G	EMM addressing mode for EMM commands Unique (U) - An ICC is addressed by its unique address (UA). Global (G) - All ICCs of the MOP are addressed
<pre>if (address_type == U) { UA } elsif (address_type == G) { void } else { return error</pre>			UA The Unique Address of the card for which the command is intended

¹ The broadcast start and end date is defined by the SMS or by the CA system when setting up the system.



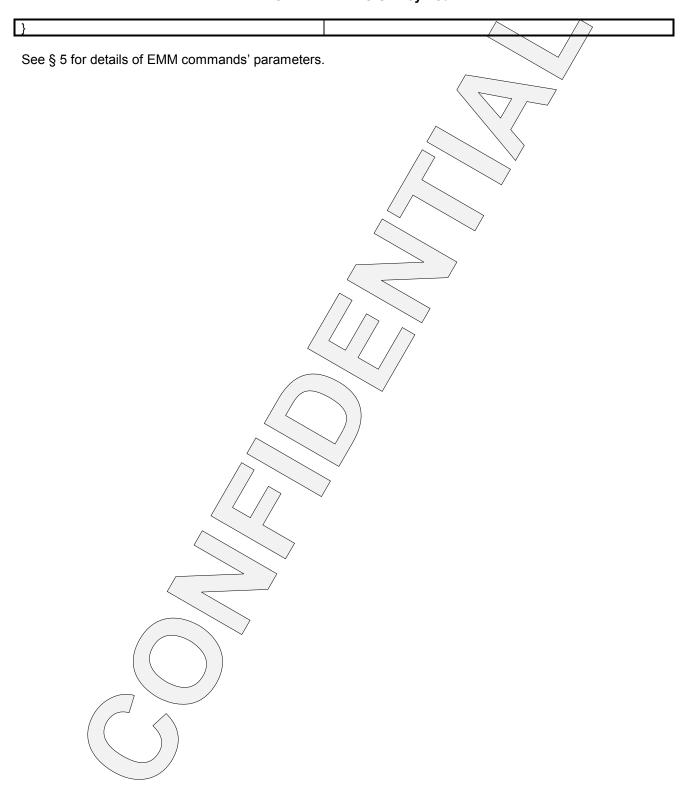



3.2.2 CONTROL Command Section

CONTROL command section of SMS commands contains parameters used to send commands to the Call Collector. The syntax is as follows:

CONTROL command section :=

CONTROL command header CONTROL command parameters

CONTROL command header

Field	Size	Format	Description
broadcast_mode	1	N or B	Normal Standard broadcasting mode.
_			Batch Command with a lower priority
broadcast_start_date	8	YYYYMMDD	Broadcast start date.
broadcast_end_date	8	YYYYMMDD	Broadcast end date.
address_type	1	U or G	EMM addressing mode for EMM commands
			Unique (U) - An ICC is addressed by its unique address (UA).
			Global (G) All ICCs of the MOP are addressed
if (address_type == U)		/	UA The address of the ICC to which the command refers.
{ UA			
}			\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
elsif (address type == G)			~ /
[{			
void			
}		/	
else			
{			
return error			
}			~

The fields of CONTROL command headers must be documented as follows:

Field	Value
broadcast_mode	N
broadcast_start_date	current date
broadcast_end_date	current_date /
address_type	¥ \
UA	000000000 to 4294967295, the UA of the
	ICC to which this command refers.

See § 6 for details of the CONTROL commands' parameters.





3.2.3 PRODUCT_DEF Command Section

PRODUCT_DEF command section of SMS commands contains parameters used to send commands to the IMS. The syntax is as follows:

PRODUCT_DEF command section := PRODUCT_DEF command parameters

See § 8 for details of the PRODUCT DEF commands' parameters.

3.2.4 FEEDBACK Commands Section

FEEDBACK command section of SMS commands contains parameters used to send commands to the SMS. The syntax is as follows:

FEEDBACK command section :=

FEEDBACK command header
FEEDBACK command parameters

FEEDBACK command header

Field	Size	Format	Description
UA	10	0000000000 to	ICC unique address
		4294967/295	Note: commands 208, 209 and 210 UA = 0000000000

See § 7 for details of the FEEDBACK commands' parameters.

3.2.5 SMS OPERATION Commands

These are the commands used for sending acknowledgments or non-acknowledgments. OPERATION commands section of SMS commands contains parameters used to send commands back and forth between the SMS and the SMS Gateway. The syntax is as follows:

OPERATION command section := OPERATION command parameters

See § 9 for details of the OPERATION commands' parameters.



3.2.6 SMS Commands: field size and format

All fields are in ASCII format. They are described here below:

- Numeric types are decimal, 0 filled and right justified. For example, the value 3 for a LENGTH field will coded 003
- Alpha/Num are left aligned, blank padded, capitalized. For example, the value NASPv1.0 for a ICC_version field will be coded "NASPv1.0" (two spaces at the end)


Names	Size	Туре	Format		
abnormal_phone	16	Alpha/Num			
		+ trailing			
		spaces			
address_type	1	Alpha	U=UNIQUE or G=GLOBAL		
all dates	8	Num /	date in format YYYYMMDD. The value Forever is		
			20201231.		
all duration	4		0000 to 9999		
all lengths (except	3	Num / /	000 to 999/		
length_event_name)					
all times	6		⊬́НММŞ∕S (i.e. 000000 to 235959).		
blackout_subtype	3		061/to/128		
blackout_type	2		00 to 12, where 00 means no blackout.		
broadcast_mode		Alpha	N=NORMAL or B=BATCH		
call_freq	2/	Num	01=annual		
	_		02=semi-annual		
			03=quarterly		
			04=monthly		
	/ /		05=bimonthly		
			1n=every n days (note: 1 should be considered as a flag)		
	4//	/	n should be 1 to 9 or A to F (10 to 15 in Hexadecimal)		
cc_number	<u>~16</u>	Alpha/Num	call collector phone number		
cc_port		Num	call collector TCP/IP port		
command_ID		Num	0000 to 9999		
command_type	2	Num	01=EMM command		
			02=CONTROL command		
			03=PRODUCT_DEF command		
			04=FEEDBACK command		
	<u> </u>		05=OPERATING command		
credit	7		0000000 to 6553599 meaning \$00000.00 to \$65535.99		
credit_limit	7	Num	0000000 to 6553599 meaning \$00000.00 to \$65535.99		
credit_mode	2	Num	01=ADD		
			02=SUBTRACT		
			03=SET CREDIT		
			04=SET BALANCE (reset debit to zero and set credit limit) 05=SUB OFFSET (subtract offset from debit and credit)		
debit	7	Num	0000000 to 6553599 meaning \$00000.00 to \$65535.99		
description		Num Alpha/Num	บบบบบบบ เบ ชออออลล เมเษสเมเทิ		
description dest ID		Num	0000 to 9999		
	4		0000 to 9999		
error_code		Num	0000 to 9999		
error_code_ext			0000 10 3333		
event_name		Alpha/Num	000 to 000		
event_number	3	Num	000 to 999		



Names	Size	Туре	Format
force_emm	1		Y=YES or N=NO
free_preview_time	2	Num	00 to 98, 99 means inherit value from free_preview_time
	_		defined for the service.
id	4	0000	unique message identifier
	-	9999	
impulse purchase	1	Alpha	Y=YES or N=NO
impulse purchase allowed	1	Alpha	Y=YES or N=NO
IMS_product_ID	12		000000000000 to 999999999999 (IMS product ID)
ip address	15	Alpha/Num	000.000,000.000 to 255.255.255.255 (valid IP address)
IRD command id	3		00 to 99
IRD data		Alpha/Num	Hexadecimal
IRD data len	2		00 to 96
IRD operation	3		00 to 99
kind	1	09	message kind (e.g advertisement, warning etc),
		· · · · ·	to be defined between the SMS and the STB provider
			0 is the default value
length event name	2	Num	00 to 17
lid	3		language code compliant with ISO639_2
message	up to		/message for mail
ssags	999		
mode	1	01	display mode (0 => normal, 1 => fingerprint)
MOP PPID	5	Num	90000 to 65535
nack status	1	Num	1=REJECTED or 2=POSTPONED
name	80/		
nb of products	2		00 to 99
nb_of_subtypes	/3		000 to 128
network ID	_ 5	Num	00000 to 65535
number of IPPV	/ / 2	Num	00 to 99, the number of IPPV reported in a callback
original transaction number /	9		000000000 to 99999999
phone number n	< 16	Alpha/Num	phone number stored in the CC (n is 1 to 3)
PPV number	7	Num	0000000 to 9999999
price	5		00000 to 99999 meaning \$000.00 to \$999.99
priority	1	0 1	message priority (0 => low, 1 => high)
purge_mode	> 1	0 9	0 => purge only rights marked as call collected
			1 => purge only rights marked as non-call collected
			2 => purge both kind of rights
			3 9 => future use
range	7 1	Alpha	Y=YES or N=NO
reference number	4	Num	0000 to 9999
responding	1	Alpha	Y=YES or N=NO
reverse_blackout_flag	1	Alpha	Y=YES or N=NO
service_ID	3	Num	000 to 999
service_ID	5	Num	00000 to 65535
service_number	3		000 to 999
service_UID	5	Num	00000 to 99999
SMS_event_ID	12	Num	00000000000 to 99999999999
SMS_product_ID		Num	00000000000 to 99999999999
source_ID	4		0000 to 9999
special_PPV	1	Alpha	Y=YES or N=NO
special PPV event		Alpha	Y=YES or N=NO
STU number		Num	Serial Number of set-top box unit.



Names	Size	Туре	Format	
suspend_ICC	1	Alpha	Y=YES or N=NO	
suspend_product	1	Alpha	Y=YES or N=NO	
threshold_credit	7	Num	0000000 to 6553599 meaning \$00000.00 to \$65535.99	
tokens	4	Num	0000 to 9999	
transaction_number	9	Num	000000000 to 999999999	
transport_ID	5	Num	00000 to 65535	
type_of_products	1	Alpha	S or E or B which stand for Service, Event and Both	
UA	10	Num	Unique address range is 0000000000 to 4294967295	
version	2	00 99	message version	
watched_criterion	3	Num	000 to 255, 999 means inherit watched_criterion value	
_			from service watched_criterion	
watched_status	1	Alpha	Y=YES or N=NO	
zip_code	5	Num	00000 to 99999. Used for example for US zip code	
zip_code	10	Alpha/Num	a z, A Z, 0 9 and space. Used for example for UK	
		,	postzip code /	

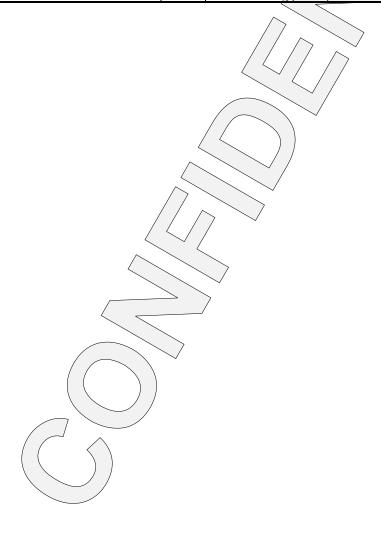



3.3 SMS Error Codes

If an error occurs when executing a SMS command, it is reported by the use of an error code and an error code extension. Where the code indicates an error category and the extension giving more presise detail concerning the error source (e.g., an incorrectly specified field or value exceeded etc.)

3.3.1 Error codes

An error code is always followed by an error code extension (possibly extension 0000). NO_EXTENDED_ERROR_CODE). The available error codes and extensions are indicated in the following tables.

FATAL_ERROR	0000	The Oracle database interface returns an
		exception as database error or protocol error due
		to a non-understood field in the SMS command. All
		SMS EMM commands might generate such
	l —	FATAL ERROR.
BAD_ROOT_HEADER_SYNTAX	0001	The syntax of the command root header is not
//		correct. See error code extension
BAD_HEADER_SYNTAX	0002	The syntax of the command header is not correct.
	/ / / /	See error code extension
BAD COMMAND SYNTAX	0003	The syntax of the command is not correct. See
B/18_00/M/// (18_01/M///	0090/	error code extension.
DATABASE_ERROR	0004	An error occurred during an IMS database query
Britishez_Entron	0004	processing.
MESSAGE_NOT_FOUND	0005	The message referenced in the command does not
	0003	exist.
PRODUCT_NOT_FOUND	0006	The product_ID used in the command does not
		exist in the IMS database.
CANCELED_CARD	0007	The ICC referenced in the command has been
		canceled.
UA_NOT_FOUND	8000	The ICC UA referenced in the command does not
		exist
PPV_IN_THE_PAST	0009	The command attempts to access a PPV whose
		validity is expired.
STU_ALREADY_EXISTS/	0010	The command attempts to create an ICC in the CC
		database, but the ICC is bound to an already
		existing STB.
SERVICE_NOT_FOUND	0011	The service referenced in the command does not
		exist in the IMS database.
TOO_MANY_RIGHT\$	0012	The command attempts to create a package
		whose number of item cause the number of rights
		exceeding the maximum value allowed (3).
PRODUCT_ALREADY_EXISTS	0013	The command attempts to create an already
		existing product.
UA_ALREADY_EXIST\$	0014	The command attempts to create in the CC
	55.1	database an ICC that already exists.
BAD_EPG_FORMAT	0015	The format of the EPG data feed is not correct.
SMS_EVENT_ID_NOT_FOUND	0016	The command references a SMS event ID that
		does not exist in the IMS database.
PRODUCT_ON_NON_PPV_EVENT	0017	The command attempts to create a product
		containing a non-PPV event.
EVENT_ALREADY_IPPV	0018	The command creates an impulsive event product



		with an event aready used in an impulsive event product.
BLACKOUT_TYPE_OR_SUBTYPE_NOT_FOUND	0019	The blackout type or subtype referenced in the command does not exist in the IMS database.
EVENT_WITH_PPVNB_ALREADY_PROGRAMMED	0020	The command attempts to create an event product on an event with a different ppv number than the one already set.
DB_INCONSISTENT_TOO_MANY_ROWS	0021	Inconsistency in the IMS database
DB_INCONSISTENT_INVALID_PRODUCT	0022	Inconsistency in the IMS database
MUTLTIPLE_EVENTS_WITH_SAME_PPVNB_ON_IP PV	0023	There are many events with the same ppv number when modifying a ppv product to an impulsive ppv product.
PRODUCT_INCONSISTENT	0024	There is an inconsistency between the received product definition and the internal SMS Gateway product database.
TOO_MANY_ITEMS	-0025	Too many items are given in the list.

3.3.2 Error codes extension

	/ / /	
NO_EXTENDED_ERROR_CODE	0000	No error code extension is available for the error
	/	code specified.
BAD_DEBIT_FORMAT	0001	The command contains a debit field whose format
		is incorrect.
BAD_CREDIT_FORMAT / \(\)	0002	The command contains a credit field whose format
	l/	is incorrect.
BAD CREDIT MODE	0003	The command contained a credit mode field
		whose value is not one of the authorized ones.
BAD_DATE_FORMAT	0004	The command contains a date whose format is
		incorrect.
BAD_DATE_SEQUENCE / / /	0005	The command contains a begin date and an end
		date that are out of sequence.
BAD_FREQUENCY_FORMAT	0006	The field call freq of the command contains a
		value whose format is incorrect.
BAD_STU_NUMBER_FORMAT	0007	The format of the STB number specified in the
		command is incorrect.
BAD_IMS_PRODUCT_ID_FORMAT	8000	The format of the IMS_product_ID of the command
		is incorrect.
BAD_SMS_PRODUCT_ID_FORMAT	0009	The format of the SMS product ID contained in
		the command is incorrect.
BAD_MESSAGE_NUMBER_FORMAT	0010	The value of the message_number field of the
		command is incorrect.
BAD_PHONE_NUMBER_FORMAT	0011	The format of the value of a phone_number field of
		the command is incorrect.
BAD_SMS_EVENT_ID_FORMAT	0012	The value of a SMS_event_ID field of the
	00.2	command is incorrect.
BAD_PRICE_FORMAT	0013	The value of the price field of the command is
BAD_I MOL_I OMADAI	0013	incorrect.
BAD_THRESHOLD_CREDIT_FORMAT	0014	The value of the threshold_credit field of the
	55.1	command is incorrect.
BAD_UA_FORMAT	0015	The value of the UA field of the command is
S. IS_G. (_! O'\\\)	30.3	incorrect.
BAD ZIP CODE FORMAT	0016	The value of the zip code field of the command is
DUD_TII _OODE_I OINWAI	0010	The value of the zip code held of the collinations



		incorrect.
DIFFERENT_PRODUCTS	0017	The command attempts to define a product with a
DII I EKENI_I KODOOTO	0017	product_ID already attributed to a different product.
IDENTICAL PRODUCTS	0018	The command attempts to define a product already
IDENTICAL_FRODUCTS	0010	existing in the IMS database with an identical
		definition.
BAD_BROADCAST_MODE	0019	The format of the value of the broadcast_mode
BAD_BROADCAST_WODE	0019	field of the command is incorrect.
BAD_ADDRESS_TYPE	0020	The format of the value of the address_type field of
BAD_ADDRESS_TTPE	0020	the command is incorrect.
BAD_MOP_PPID	0021	The MOP PPID indicated in the command is not
BAD_WOT_FFID	0021	yalid.
BAD DEST ID	0022	The dest id indicated in the command is not valid.
BAD_SOURCE_ID	0023	The source id indicated in the command is not
BAD_GOOKGE_ID	0023	valid.
BAD COMMAND TYPE	0024	
BAD_COMMAND_ID	0025	3.7
BAD_COMMAND_ID	0020	not exist.
BAD_VERSION_FORMAT	0026	The version number of the EPG data feed is not in
BAD_VERSION_I ORWAT	0020	the correct format.
BAD NUMBER FORMAT	0027/	A non-numerical character was found in the
BAD_NOMBER_I ORMAI	2021/	content of a Num field.
BAD_FLAG_FORMAT	0028	A value different from Y or N was found in a FLAG
BAB_I EAG_I ONWAI	0020	field.
BAD_TIME_FORMAT	0029	The format of the time specified in the EPG data
Brid_Time_r ordinati	0020	feed is incorrect.
BAD_RATING_FORMAT	0030	The format of the value of a 'rating' field is
	, 0000	incorrect.
BAD CRC 32	0031	The CRC of the EPG data feed indicates an error.
BAD_ERROR_CODE	0032	The error code specified in the command does not
		exist (section 8)
BAD_ERROR_CODE_EXT	0033	The error code extension specified in the command
		does not exist (section 8).
CREDIT_THRESHOLD_TOO_HIGH	0034	The value of the threshold_credit field of the
		command is too high.
BAD PPV NUMBER FORMAT	0035	The format of the value of the PPV number field is
		incorrect.
BAD_REFERENCE_NUMBER_FORMAT	0036	The format of the value of the reference_number
		field of the command is incorrect.
BAD_BLACKOUT_TYPE_FORMAT	0037	The format of the value of the blackout_type field of
		the command is incorrect.
BAD_NB_OF_SUBTYRES_FORMAT	0038	The format of the value of the nb_of_subtypes field
		in the command is incorrect.
BAD_BLACKOUT_SUBTYPE_FORMAT	0039	The format of the value of a blackout_subtype field
		of the command is incorrect.
BAD_SERVICE_UID_PORMAT	0040	The format of the value of a service_UID field of
		the command is incorrect.
BAD_SERVICE_NUMBER_FORMAT	0041	The format of the value of the service_number field
		of the command is incorrect.
BAD_TOKEN_NUMBER_FORMAT	0042	The format of the value of the token field of the
		command is incorrect.
BAD_EVENT_NUMBER_FORMAT	0043	The format of the value of the event_number field
		of the command is not correct.



BAD_NUMBER_OF_IPPV_FORMAT	0044	The format of the number_of_IPPV field in the
		command is incorrect.
BAD_IP_ADDRESS_FORMAT	0045	The format of the IP address in the command is
		incorrect.
BAD_DEAS_MESSAGE_FORMAT	0046	The DEAS message format is incorrect.
BAD_FIPS_FORMAT	0047	The FIPS number format is incorrect.
EXTERNAL_SYSTEM_NOT_RESPONDING	0048	The external system is not responding.
EXTERNAL_SYSTEM_ERROR	0049	The external system has not processed the
		command, an error/has occurred during its
		treatment.
TOO_MANY_ROWS	0050	A query returns many rows while only one is
		expected
INVALID PRODUCT	0051	The referenced product is incomplete (no right or
		no PPV number or no event or no service).
BAD_SERVICE_ID_FORMAT		The format of the service ID is incorrect.
BAD_TRANSPORT_ID_FORMAT	∕ 0053	The format of the transport ID is incorrect.
BAD_NETWORK_ID_FORMAT	0054	The format of the network ID is incorrect.
BAD_LID_FORMAT	0055	The format of the lid is incorrect.
BAD_PRIORITY_FORMAT //	0056	The format of the priority is incorrect.
BAD_MODE_FORMAT //	00/57	The format of the mode is incorrect.
LENGTH_TOO_LONG	Ø058/	The length is out of range.
BAD_FLAG_VALUE	6059	The flag value is not recognized.
BAD_CC_PORT_FORMAT	0060	The format of the CC port is incorrect.
BAD_TRANSACTION_NUMBER_FORMAT/	0061	The format of the transaction number is incorrect.
BAD_PURGE_MODE_FORMAT	0062	The format of the purge mode is incorrect.

3.3.3 Command root header error codes and extensions

Among the error codes and extensions defined above, those that are applicable to report errors in the root header fields are:

Error code	Error codes extensions
BAD_ROOT_HEADER_SYNTAX	⊳BAD, COMMAND_TYPE
	BAD_SOURCE_ID
	BAD DEST ID
	BAD MOP PPID
	√BAD_DATE_FORMAT

The error code and error code extension are used in the following way:

Field	Error codes	Error codes extension
transaction_number	BAD_ROOT_HEADER_SYNTAX	NO_EXTENDED_ERROR
command_type	BAD_ROOT_HEADER_SYNTAX	BAD_COMMAND_TYPE
source_ID	BAD_ROOT_HEADER_SYNTAX	BAD_SOURCE_ID
dest_ID	BAD_ROOT_HEADER_SYNTAX	BAD_DEST_ID
MOP_PPID	BAD_ROOT_HEADER_SYNTAX	BAD_MOP_PPID
creation_date	BAD_ROOT_HEADER_SYNTAX	BAD_DATE_FORMAT



3.3.4 Command header error codes and extensions

Error code	Error codes extensions
BAD_HEADER_SYNTAX	BAD_BROADCAST_MODE <
	BAD_ADDRESS_TYPE
	BAD_DATE_SEQUENCE _
	BAD_DATE_FORMAT
UA_NOT_FOUND	NO_EXTENDED_ERROR_CODE
CANCELED_CARD	NO_EXTENDED_ERROR_CODE

The error codes and error code extensions are used in the following way to report errors in command header fields (when applicable, that is when the header contains the specified field, see § 3.3.1 and § 3.3.2:

Field	Error codes	Error codes extension
broadcast_mode	BAD_HEADER_SYNTAX	BAD_BROADCAST_MODE
broadcast_start_date	BAD_HEADER_SYNTAX	BAD_DATE_FORMAT
		BAD_DATE_SEQUENCE
broadcast_end_date	BAD_HEADER_SYNTAX//	BAD_DATE_FORMAT
		BAD_DATE_SEQUENCE
address_type	BAD_HEADER_SYNTAX //	BAD_ADDRESS_TYPE
UA	UA_NOT_FOUND	NO_EXTENDED_ERROR_CODE
	CANCELED_CARD	NO_EXTENDED_ERROR_CODE
	BAD_HEADER_SYNTAX	BAD_UA_FORMAT

3.4 EPG Data Feed Errors Specification

Errors found in the EPG data feed are reported to the SMS through FEEDBACK commands 208, 209, and 210.

- Command 208 is used/to/report overlapping events.
- Command 209 is used to report the presence of an event of duration 0 (zero) in the data feed.
- Command 210 is used to report format errors in the EPG data feed, the error codes and error code extensions used are:

Error code	Error codes extensions
BAD EPG FORMAT	BAD DATE FORMAT
DAD_EPG_FORWAT	
	BAD_VERSION_FORMAT
	BAD_SMS_EVENT_ID_FORMAT
	BAD_FLAG_FORMAT
	BAD_TIME_FORMAT
	BAD_RATING_FORMAT
	BAD_CRC_32



4. Scenario for Use

4.1 Creating a Physical Transmission Channel

All PTCs have to be created in the IMS using the IMS editor, before creating services.

4.2 Creating a service

Services have to be created before events can be scheduled for them. Each service is entered manually with the IMS editor.

A service is always linked to a PTC that has circuits connected to it. The circuits are either entered manually with the IMS editor or attached automatically by the SCC automation interface (description of SCC automation interface to be provided by DiviCom).

4.3 Updating a service definition


A service definition can be updated through the IMS editor interface.

4.4 Deleting a service

A service is deleted with the IMS editor. A service cannot be deleted when it has events, products or circuits attached. The service should be deleted on the SMS as well.

4.5 Creating a service package product

Here is a pictorial flow diagram

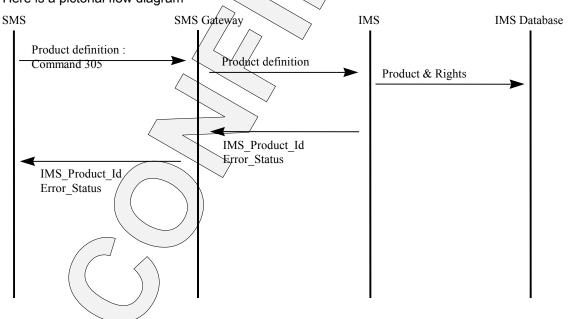

A package is identified by an IMS_product_ID, and contains a list of services.

A command (Command 305) is sent to the SMS gateway to create the product in the IMS database.




If a product with the same reference number is found in the IMS database, the two products are compared. The command is NACKed and the message returned reflects whether the products were the same or not.

If one service of the list is not found in the IMS database, the command is NACKed.

If there are too many items in the package (the package requires more than a given predefined number (3) of rights on the ICC), the command is NACKed, returning the maximum number of items allowed. The maximum number of rights is a parameter set through the PDL interface.

If the product does not exist and all services have been found in the IMS database, the product is created and the command is ACKnowledged

4.6 Creating an event package product

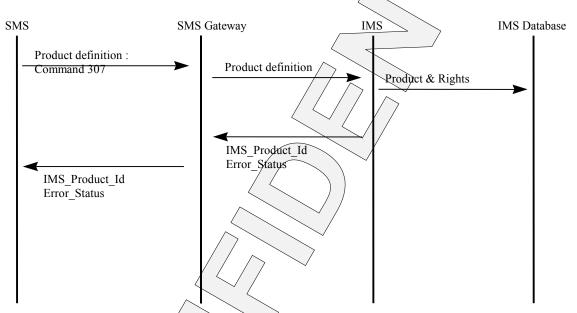

A package is identified by an IMS product \D, and contains a list of events.


A command (Command 307) is sent to the SMS gateway to create the product in the IMS database.

If a product with the same reference number already exists, the two products are compared. The command is NACKed and the message returned reflects whether the products were the same or not.

If there are too many items in the package (the package requires more than a given predefined number of rights on the ICC), the command is NACKed, returning the maximum number of items allowed. The maximum number of rights is a parameter set through the PDL interface.

If the product does not exist it is created and the command is ACKnowledged.



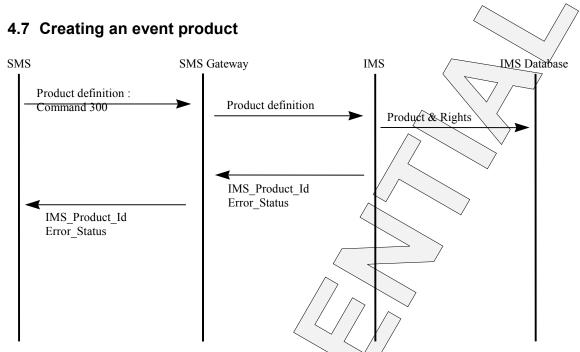

Issuing Command 300 creates an event product. It contains a PPV number provided by the SMS and the SMS_event_ID (also provided by the SMS) identifies it. This event will be impulsively purchasable unless specified otherwise in the Command 300 parameters.

If an event with the same SMS_event_ID does not exist in the IMS database, a placeholder for the event is created. The placeholder will be subsequently replaced by the actual event definition from the EPG data feed.

4.8 Updating an event

An event may be updated automatically by the EPG event feed. It may also be updated manually with the IMS editor in case of emergency. All fields may be modified, as long as these integrity rules are not violated:

- The SMS event ID must be unique.
- Date and time cannot overlap with another event.
- The service carrying the event must be defined in the IMS database.

4.9 Updating the schedule of an event product

If the End_date of the event product changes, then Command 64 (Update event right) is issued automatically. This command will update the rights in the ICCs that contained the rights for the original product. This mechanism is applied for updates coming from the EPG data feed or from the IMS editor.

Command 302 (Modify event product) should be issued by the SMS to update the validity dates of the event product.

4.10 Updating the schedule of an event in an event package product

If the End_date of an event changes to a date beyond the validity_end_date of the event package product, then Command 64 (Update event right) is issued automatically. This command will update the rights in the ICCs that contained the rights for the original product. This mechanism is applied for updates coming from the EPG data feed or from the IMS editor.



Command 308 (Modify event package product) should be issued by the SMS to update the validity dates of the event package product.

4.11 Deleting an event

Events are automatically deleted from the IMS database a certain number of days after their expiration. This number of days is a parameter of the IMS entered through interface of the IMS editor. Events can also be removed manually with the IMS editor.

4.12 Subscriber creation

Creating a subscriber in the system means completing the following process:

- Initialization of the subscriber's ICC.
- Pairing of the ICC with the STB.
- Entering subscriber information in the system.

The steps have to be done in sequence. Note that the first and the third one should be done as closely as possible as it does not make sense to have initialized ICCs that are not associated with any subscriber, nor does it make sense to have an information on a subscriber who does not have a card.

4.12.1 ICC Initialization

The initialization of an ICC is performed with the SMS Command 51. The information available to the SMS must be the Unique Address of the ICC to initialize. An ICC can be initialized several times without altering the content of the ICC.

4.12.2 ICC/STB Pairing

To be able to unscramble, a STB must be paired with a given ICC. The pairing process will (1) enable the ICC and the STB to operate together, and (2) will bind the ICC with the STB so that the ICC can only be used with the STB it has been paired with. Unless pairing data is overwritten on the ICC, the ICC is permanently paired to the STB.

In order to pair an ICC with an STB, the following information must be available at the SMS:

- the Unique Address of the card
- the serial number of the STB

Then Command 52 must be issued.

In almost all cases, pairing of the STB with an ICC will take place at the time of subscriber creation. However, in the case where a subscriber's ICC or STB cannot be operated any longer, pairing may have to be performed again.

Specifically, if a STB ceased to operate and were replaced, the subscriber could still use the same ICC with the new STB, but the STB having changed, the ICC would have to be repaired to enable unscrambling with the new STB. In such a case, only the pairing information on the ICC has to be updated, the ICC will afterwards operate just as with the previous STB.

If a subscriber lost his/her ICC but kept the same STB, then a new card will be issued, it will have to be initialized and paired.

4.12.3 Entering subscriber information

At the time a subscriber is created in the system, the following information must be available to the SMS:

• The UA (Unique address = ID) of his/her ICC (this information is printed on the ICC)



- The ZIP code
- Phone number(s) (unnecessary if ANI not supported)
- · Values for initial credit and threshold
- The phone number and/or the network address of the call collector the LCC will report to
- The date of his first callback
- The period between two callbacks

The subscriber creation process includes the following operations (in sequence)

•	Command 104	Add ICC to Call Collector database in/order for callbacks to be processed.
•	Command 48	Send EMM to ICC with Zip Code. The ICC must know its location Zip Code
		since time information and possibly blackout information is based on the
		card's location.
•	Command 13	Send EMM to ICC with credit and threshold values. Create Credit for Impulse
		Purchase (optional), to enable impulsive purchases.
•	Command 100	Update Call Collector database with credit limit for the ICC.
•	Command 101	Update Call Collector database with up to 3 phone numbers from which this
		STB is allowed to call from (optional).
•	Command 49	Send EMM to ICC with callback phone number or callback IP address.
or	Command 54	

Enable Automatic Call Back (optional). This command includes call time

4.13 Callback

When does callback occur?

Command 61

In general, the occurrence of callback depends on the type of circumstances generating the callback. A callback belongs to one of three categories: automatic, on command, and event based. In typical cases, callbacks will take approximately 1 minute to complete full data transfer from the ICC to the CC.

calculation by the Call Collector.

<u>Automatic</u> - Automatic callbacks are strategically scheduled to occur during the night to minimize phone rates and phone line contention. These are setup at the Call Collector and may be scheduled by ICC UA.

On-Command - On-Command calls are generated for various reasons at the head-end site dependent on necessary conditions defined by the billing center. These callbacks will be performed immediately upon reception of the EMM generated by the SMS command 60. Callback data to the call collector will typically be received within 10 minutes after issuing the SMS command.

Event based - Event based callbacks occur as soon as one or more of the following conditions are satisfied:

- Threshold Limit The available credit falls below the threshold limit stored in the ICC. During this callback, expired PPV events (whose end times are prior to the actual time) will be reported. Credit is restored to the credit limit.
- Memory Full The ICC memory is full. Upon callback, the call collector will collect expired PPV events and send a reclaim memory command to the ICC. Credit is restored to the credit limit.
- Special Event: A special event is an event defined as such by the SMS. When an event is defined as special, a callback will be triggered at the end of the event if the event has been watched (as defined by the watched flag in the smart card) and purchased impulsively.

SasGwySpe020601.Pub.doc 28 Nov 00

①+41 21 732 03 11

The following steps occur/during the callback process (the order of the various steps may change):

- · verify phone number if ANI enabled.
- get current debit and credit.
- get list of expired impulsively purchased event products and not call collected already.
- · reset credit in the ICC.
- cleanup of rights expired for more than 30 days.
- Set up the new callback date and time in the ICC



4.14 ICC - Lost/Stolen/Deleted

An ICC cancellation is performed each time a card is removed from a customer account because it has been stolen lost or is defective. In addition the ICC is flagged as canceled and deactivated in the SAS database.

The operations necessary to cancel an ICC are the following (in sequence):

- Command 50 Cancel ICC.
- Command 105 Cancel ICC On Call Collector.

Although the ICC has been canceled, all expired IPPVs may still be retrieved (special equipment needed) if the ICC is physically returned to the SMS. The ICC may be reused only after being reinitialized by Nagravision.

4.15 Grant the subscriber the rights to a product

First the command 2, Add product, must be issued to grant the subscriber the rights to access the product. The command 3, Product renewal, allows extending the product end date.

4.16 Subscriber suspension

Rights stored on an ICC can be temporarily suspended in three different ways:

- Command 4: Product suspension. This command allows the SMS to suspend rights for an individual product.
- Command 14: Suspend Impulse Purchase. This command is used to suspend the right to perform impulsive purchases of PPV event products. The subscriber may still call the SMS to order event products.
- Command 20: Suspend subscriber ICC. This command temporarily disables all rights, including the right to perform impulsive purchases of PPV event products.

Rights or ICC suspension do not prevent callbacks from occurring. In addition a suspended right or ICC can be restored to its original state with respectively Command 5, Command 15 and Command 21.

4.17 ICC Credit management

A new ICC does not contain any credit. During initialization, a command 13 "Create Credit for Impulse Purchase" is sent to the card. This creates a record in the ICC containing the amount specified in the command's parameter. It defines also the amount of money under which a callback is triggered (threshold). The ICC is now enabled to purchase products impulsively.

A command 100 is also sent at initialization time that defines the credit limit for this subscriber in the call collector database.

4.17.1 Credit Allowance

Credit is provided to customers through the entitlement mechanism. Credit levels may be issued on an individual subscriber basis or on a system wide basis. To ensure that sufficient credit is always available on the ICC, a credit threshold is defined to trigger callback.


The ICC stores a credit value and a debit value. The available credit is the difference of both values. When a purchase is performed, instead of subtracting the price from the credit, the price is added to the debit. When the credit is restored by the CC, the CC will add a value to the credit such that the difference between the credit and the debit (balance) equals the credit limit.



The outcomes and actions are given below:

Condition	Action
Purchase Price > Balance	Purchase Refused
Purchase Price < Balance and	Purchase Allowed, Callback triggered
(Balance - Purchase Price) < Threshold	
Purchase Price < Balance	Purchase Allowed

When a callback is triggered the credit limit is restored and the expired PPVs are reported. To avoid overflow of the debit and credit counters (maximum of \$65,536.99), the SMS should issue Command 8 to set the debit counter to 0 and the credit counter to the credit limit.

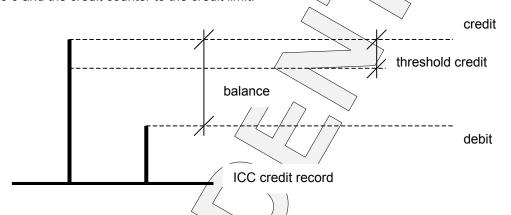

In summary, the ICC credit record is created when the command 13, Create credit for impulse purchase, is issued, the credit as well as the threshold credit will then be defined. The command 8, Credit management, and the command 9, Update threshold credit, can be used to update these values, the only restriction is the ICC credit record can be updated only once per day (GMT day).

The command 100, Redefine credit limit, will update the Call Collector related UA record credit limit field. There is no restriction for this command, this is the command to use for credit tuning. The new ICC credit value after a callback is the current debit plus the Call Collector credit limit.

4.18 Deleting a subscriber

To delete a subscriber from the system, the following commands must be issued:


- Command 50, Cancel ICC, to flag the ICC as canceled in the SAS database.
- Command 105 to remove the ICC from the CC database.

All expired IPPVs may still be retrieved (special equipment needed) if the ICC is physically returned to the SMS. The ICC may be reused only after being reinitialized by Nagravision.


4.19 Event Product Purchase

To create an impulsively purchasable event, command 300 must be executed for the event with the impulse_purchase_allowed field set to Y.




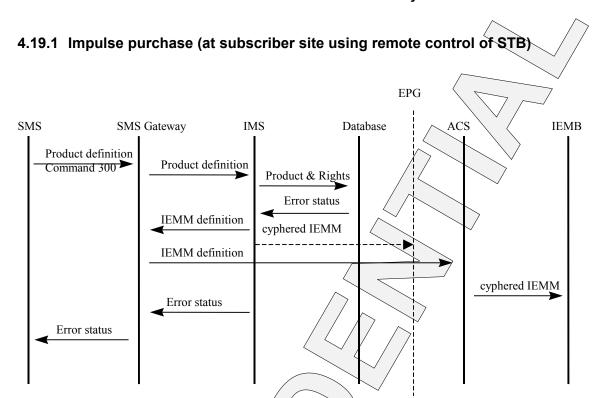

When an event product has been created as impulsively purchasable, a subscriber may purchase the event through the STB. The IEMM is broadcast either through the EPG (DVB SI) or through the IEMM data stream generated by the IEMB (NB. The former is the preferred method). Once the purchase is confirmed, the rights for the event product are stored in the ICC, and the price of the event product is added to the debit. Such purchases are operations local to the STB and do not cause any message to be sent to the SMS. Expired event products will be reported to the SMS through callbacks (the structure of the data reported is described in § 7). An event product expires at midnight of the end date.

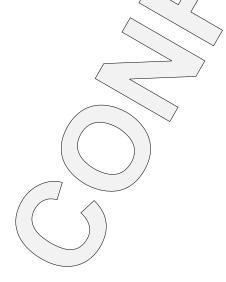



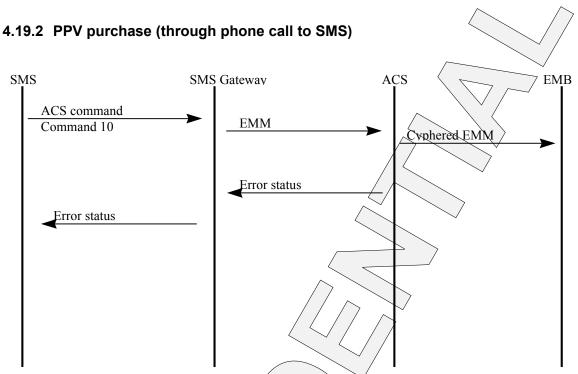

Calling the SMS may always purchase a PPV event product. The SMS will then send a Command 10 (Create PPV) through the SMS. This command will be translated into a regular EMM and sent to the subscriber's ICC. There is no modification of the debit and credit amounts contained in the ICC, because the purchase is already recorded at the SMS.

Event products purchased through the SMS may be canceled by calling the SMS. Event products purchased through the SMS are not reported in callbacks.

4.20 Blackout

For a number of reasons (such as agreements with service providers), certain events or services should be denied, or blacked out, in particular areas. This means that subscribers living in the blacked out areas would not be allowed to view the blacked out event or service.

A blackout capability is supported in the conditional access system. To make use of this capability, three general functions must be performed:

- 1. Blackout types and subtypes must be defined.
- ICCs must be associated with blackout types and subtypes.
- 3. Events or services must be associated with blackout types and subtypes.

When these functions are completed, ICCs associated with any particular blackout type and subtype would not be allowed to view any event or service assigned the same blackout values. For example, any viewer assigned to blackout type 7 and subtype 23 would not be able to view any event also assigned blackout type 7 and subtype 23.

4.20.1 Blackout Type and Subtype definition

The first step in making use of the blackout feature is to define blackout types and subtypes. Up to 12 blackout types are supported. These types can be associated to a category of event such as NFL Football or boxing. Blackout types are defined through the IMS editor. Their assigned number solely represents blackout types. Blackout types and subtypes can be updated through the IMS editor. Blackout subtype modifications,



performed at the IMS editor, involve updating the blackout subtype information on all ICCs and therefore, this is a lengthy process.

For each of the 12 blackout types, up to 128 subtypes can be defined. Each of these subtypes defines a "geographic" area by associating each of the sub-types with a group of zip codes.

For example.

- 1. Blackout type 1 is based on state; an event must be blacked out in Texas. In this case 50 subtypes must be defined, one for each state. Representing each state with its number in the alphabetical order, subtype 1 represents Alabama, ...
- 2. Blackout type 12 is NHL games blackout. In this type 26 subtypes must be defined, one for each NHL stadium location (assuming that blackouts have to be enforced in the area surrounding each stadium). Subtype 1 represents Anaheim, subtype 2 represents Boston, etc

In summary, up to 12 blackout types can be defined. For each type, up to 128 subtypes can be defined. Black out geographic areas are then defined by associating zip codes or state number to each blackout subtype. Zip codes give the finest geographic granularity for blackout areas.

4.20.2 Assigning blackout type and subtype to an ICC

The second step in making use of the blackout capability is to ensure that each ICC is assigned the proper blackout subtype for each of the blackout types. Periodically (at least once a month) the IMS generates and sends EMM to all ICCs to update their blackout information according to the blackout types and subtypes definitions. Should the zip code information be updated on an ICC, the blackout information on the ICC would be updated accordingly within 72 hours.

If a new zip code is created by the postal service, it should be input into the IMS at least two month before it can be used.

4.20.3 Event or service blackout type and subtype assignment

The third and final step in making use of the blackout capability is to assign a predefined blackout type and subtype to an event or a service. For instance, in the examples, an NHL game will be given the type 12 and the subtype representing the area where this game is actually taking place, for instance subtype 2 for a game taking place in Boston. An event of service is associated to predefined blackout types and subtypes through the IMS editor.

4.20.4 Blackout operation

Along with the event, data are broadcast that define the blackout type and subtype. Upon reception of that information the ICC will compare it with its own blackout information, and if both pieces match, the event is not unscrambled.

4.20.5 Blackout Over Free Access Precedence

Even for event or services in free access mode (they can be viewed by all valid ICC bearers) blackouts are enforced exactly as described above.

4.20.6 Reverse Blackout

The opposite operation to blackout is supported in the system. The blackout type and subtypes used to blackout a certain set of areas can be used instead to enable these areas and blackout all the others.



4.20.7 Zip Code Information Update

New Zip code information should be provided to the IMS at least 2 months before being used by the SMS.

4.21 Event runs late

In case an event runs late (overtime in sport event for instance), this constitutes an emergency for which events have to be modified at the Event editor console. Modifying the event over the EPG data feed is possible but it would take much more time before the change is really effective in the database. Then one must notify the change to the broadcast manager so that the IMS regenerates at once the EPG data, but more importantly it continues sending the ECM attached to the same event and not/the following one (which may prevent the subscriber from viewing the overtime...).

To avoid overwriting the emergency change with the EPG data feed, the MS operator must lock all events modified through the IMS editor. The services carrying those events will not be updated by EPG data feeds until all locked events are in the past.

4.22 Changing to/from daylight savings time

The STB always keeps track of the current local time thanks to information provided by the EPG and by the ICC. The IMS generates batch EMMs containing time zone information per zip code. These EMMs are sent continuously to all ICCs. Furthermore, the EPG will carry the GMT and the information whether daylight savings time is currently in effect or not. This data allow the STB to always know the current local time.

4.23 Tokens (FUTURE)

Tokens are elementary units that can be used to impulsively purchase events within an event package. Tokens are prepaid and are associated to event package products. If a customer purchases an event package product, the right received contains the quartity of tokens associated with the package. Then events in the package are impulsively purchasable by the customer using tokens, as long as there are enough tokens left. A number of tokens is associated with an event package product through Command 307, and can be modified with Command 308.

Because event packages are ordered by calling the SMS, the list of the events purchased is not reported during callback.

4.24 SMS vs ICC customer data discrepancy

If a discrepancy is suspected between customer data as it is known by the SMS and as it is in the ICC, the following commands must be issued:

EMM cleanup Command 110

All products cancellation. During the period when this EMM is broadcast Command 7 (about 4 hours), the subscriber will not have any rights on the ICC.

Subsequently, the SMS must resend products to this customer. This sequence of commands will cause all products to be erased, including all future IPPVs. It is the responsibility of the customer to purchase these event products again, either impulsively (IPPVs) or through the SMS. The credit data of the customer will be restored during the next callback.



5. Appendix: SMS EMM Commands

5.1 Command 2: Add Product

Description

Used to add a new product (service product, non-impulsively purchasable event product and package product) to an ICC. This command must not be used to renew an existing product or to send an impulsively purchasable event product to a subscriber. Command 3 must be used to renew an existing product and Command 10 to send an impulsively purchasable event product (which will then appear in the purchase list).

Syntax

Command 2: Add Product			
Field	byte	format	Description
command_ID	4	0002	command_ID = 2
IMS_product_ID	12	000000000000	IMS/prøduct ID
		to 999999999999	
begin_date	8	YYYYMMDD	Subscription begin date. Subscription is not valid before this date.
end_date	8	YYYYMMDD	Subscription end date. Subscription is not valid after this date.

SMS Acknowledge

Field	Error codes /	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE
begin_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE

Gateway interface concerned

SMS and SAS

SasGwySpe020601.Pub.doc 28 Nov 00

①+41.21.732.03.11



5.2 Command 3: Product Renewal

Description

Used to indicate that the subscriptions included in the product have been renewed up to a specified date. All subscription services included in the product are renewed to the same date.

Syntax

Command 3: Product Renewal			
Field	byte	format	Description
command_ID	4	0003	command_ID ≠ 3
IMS_product_ID	12	000000000000 to 9999999999999	IMS Product ID
end_date	8	YYYYMMDD	Subscription end date. Subscription is not valid after this date.

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_CØMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE
end_date	BAD_COMMAND_SYNTAX	₿AD_DATE_FORMAT
_	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE

Gateway interface concerned





5.3 Command 4: Product Suspension

Description

Suspends the subscription to services of the product. The subscriber will not be able to watch the product until a product reactivation command is sent. This command may be used when there is a payment problem with the subscriber. This command does not impact callbacks.

Syntax

Command 4: Product Suspension			
Field	byte	format	Description
command_ID	4	0004	command_ID = 4
IMS_product_ID	12	00000000000	IMS Product ID
		99999999999	

SMS Acknowledge

Field	Error codes Error codes extension
command_ID	BAD_COMMAND_SYNTAX BAD_COMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT NOT FOUND NO EXTENDED ERROR CODE

Gateway interface concerned





5.4 Command 5: Product Reactivation

Description

Grants access to all the subscriptions included in the product that has been previously suspended. The subscriber will be able to watch the product again. Used after *command 4: Product/Syspension*.

Syntax

Command 5: Product Reactivation			
Field	byte	format	Description
command_ID	4	0005	command_JD ≠ 5
IMS_product_ID	12	000000000000 99999999999	IMS Product ID

SMS Acknowledge

Field	Error codes	/Error/codes/extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE

Gateway interface concerned





5.5 Command 6: Product Cancellation

Description

Allows the SMS to remove the product (subscription services) from the ICC in case of error or if a subscriber asked for a cancellation. Event products (purchased through the SMS) which have been purchased with a viewing time in the future may also be canceled through this command. The cancellation of a non-impulsively purchased event product has no impact on the subscriber's credit in the ICC.

Syntax

Command 6: Product Cancellation			
Field	byte	format Description	
command_ID	4	0006	command_ID = 6
IMS_product_ID	12	000000000000 999999999999	IMS Product ID

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NÒ_EXTENDED_ERROR_CODE


Gateway interface concerned:





5.6 Command 7: All products cancellation

Description




Syntax

Command 7: All	product	s cancellation	
Field	byte	format	Description
command_ID	4	0007	command_ID = 7

SMS Acknowledge

Field	Error codes	Error codes extension
command ID	BAD COMMAND SYNTAX	BAD COMMAND ID

Gateway interface concerned

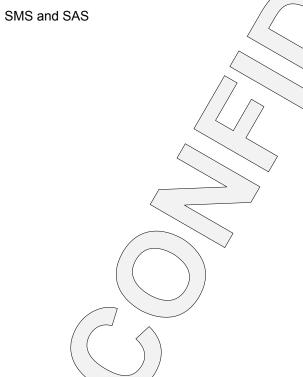



5.7 Command 8: Credit management

Description

This command is used to manage an existing credit reserved for impulse-pay-per-view on the ICC. The credit is downloaded the first time through the *command 13:Create credit for impulse purchase*. This command may be used, for instance, to update immediately the credit limit of a subscriber's ICC.

Important remark

The credit information of a smartcard can be modified only once per day (GMT day). If a second modification is sent to the smartcard, it will be ignored. The credit update during a callback must also be taken into account.

Syntax

Command 8: C	Command 8: Credit management			
Field	byte	format	Description	
command_ID	4	0008	command_ID = 8	
credit_mode	2	01 = ADD 02 = SUBTRACT 03 = SET CREDIT 04 = SET BALANCE 05 = SUB OFFSET	Increase the credit. Exceptionally used to add credit to all subscribers or group of subscribers. The credit being usually handled with mode SET CREDIT or SET BALANCE. Decrease the credit. Used in case of error correction. Set the new credit value. Set the debit to 0 and the credit to the new value. Subtract the debit and credit by the same amount. Used to avoid counters overflow on the ICC.	
credit	7	0000000	Credit amount (in the local currency) representing the range \$00000.00 to \$65535.99	

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
credit_mode	BAD_COMMAND_SYNTAX	BAD_CREDIT_MODE
credit	BAD_COMMAND_SYNTAX	BAD_CREDIT_FORMAT

Gateway interface concerned



5.8 Command 9: Update Credit Threshold

Description

Updates the impulse credit threshold value below which the ICC should call back the Call Collector. This command should **not** be used to initialize the Credit Threshold value. The initialization must be done through the *command 13: Create Credit For Impulse Purchase*. If the credit threshold (field threshold_credit) is set to 0 (zero), then no callback will be issued when the threshold limit is reached.


Syntax

Command 9: Update Credit Threshold			
Field	byte	format	Description
command_ID	4	0009	command_HQ = 9
threshold credit	7	00000006553599	Lower limit under which the ICC must do a low credit call back representing the range \$000.00 to \$65535.99

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
threshold credit	BAD_COMMAND_SYNTAX	BAD_THRESHOLD_CREDIT_FORMAT
	BAD_COMMAND_SYNTAX	CRÉDIT_THRESHOLD_TOO_HIGH


Gateway interface concerned





5.9 Command 10: Add Event Product

Description

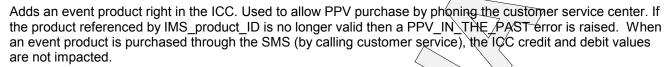

Syntax

Command 10: Add Ev	ent Produc	t	
Field	byte	format	Description
command_ID	4	0010	command_ID = 10
IMS_product_ID	12	000000000000	IMS Product ID
		99999999999	
length_event_name	2	Up to 17 characters	Length of event_name
event_name	32	Alpha/Num / /	Event name as displayed in the PPV
			purchase history.
price	5	00000 to 99999 / /	Price of the product, representing
			/\$000.00 to \$999.99

SMS Acknowledge

Field	Error codes	Érror codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX PRODUCT_NOT_FOUND PPV_IN_THE_PAST	BAD_IMS_PRODUCT_ID_FORMAT NO_EXTENDED_ERROR_CODE NO_EXTENDED_ERROR_CODE
length_event_name	BAD_COMMAND_SYNTAX BAD_COMMAND_SYNTAX	LENGTH_TOO_LONG BAD_NUMBER_FORMAT
price	BAD_CQMMAND_SYNTAX	BAD_PRICE_FORMAT

Note

The event_name field must be filled in as indicated in section 3.4, left aligned, blank padded and capitalized. Its length is always 32 bytes.

Gateway interface concerned



5.10 Command 13: Create Credit for Impulse Purchase

Description

This command creates the initial right to allow the subscriber to perform impulse PPV purchase. This command is sent only at the ICC initialization process. If threshold_credit is equal to 0 (zero)—No callback will be issued when the threshold limit is reached.

Syntax

Command 13: C	reate Cı	redit for Impulse Purcha	se
Field	byte	format	Description
command_ID	4	0013	command_ID = 13
credit	7	00000006553599	Credit amount (in the local currency). Representing \$000.00 to \$65535,99.
threshold_credit	7	00000006553599	Lower limit under which the ICC must initiate a low credit call back. Representing \$000.00 to \$65535.99.

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
credit	BAD_COMMAND_SYNTAX	BAD_CREDIT_FORMAT
threshold_credit	BAD_COMMAND_SYNTAX	BAD_THRESHOLD_CREDIT_FORMAT
_	BAD_COMMAND_SYNTAX	CREDIT_THRESHOLD_TOO_HIGH

Gateway interface concerned

SMS and SAS



±+41.21.732.03.00

①+41.21.732.03.11



5.11 Command 14: Suspend impulse purchase

Description

This command suspends the privilege of making impulse purchases. Reactivation of impulse purchases may be completed using *command 15: Reactivate impulse purchase*. This command has no impact on callback operations.

Syntax

Command 14: Suspend Impulse Purchase			
Field	byte	format	Description
command_ID	4	0014	command ID = 14

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	/BAD_COMMAND_ID

Gateway interface concerned



5.12 Command 15: Reactivate impulse purchase

Description

Reactivates the privilege of making impulse purchases. Used after command 14: Suspend impulse purchase.

Syntax

Command 15: Reactivate Impulse Purchase			
Field byte format			Description
command_ID	4	0015	command_ID = 15

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned



5.13 Command 20: Suspend subscriber ICC

Description

Suspends all subscriptions on the ICC and the impulse purchase capability. The SMS can still continue to send EMM command to a deactivated ICC (no error returned). To reactivate the subscriber ICC use command 21: Reactivate subscriber ICC. This command does not impact callback operations.

Syntax

Command 20: Suspend subscriber ICC			
Field	byte	format	Description
command_ID	4	0020	command ID = 20

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned



5.14 Command 21: Reactivate subscriber ICC

Description

Grants access to all the subscriptions again. Used after command 20: Suspend subscriber ICC.

Syntax

Command 21: Reactivate subscriber ICC			
Field	byte	format	Description
command_ID	4	0021	commang_ID = 21

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned

SMS and SAS

5.15 Command 22: Reserved

Description

This command is reserved for Nagravision usage.

5.16 Command 30: Reserved

Description

This command is reserved for Nagravision usage.

5.17 Command 31: Reserved

Description

This command is reserved for Nagravision usage.

5.18 Command 32: Reserved

Description

This command is reserved for Nagravision usage.



5.19 Command 48: Set Zip code

Description

Sets or updates the Zip code on the ICC. This should also be used when the subscriber moves to another location. Zip code information is used for blackout and time zone management.

Syntax

Command 48: Set Zip code			
Field	byte	format	Description
command_ID	4	0048	command_ID = 48
zip_code	5	0000099999	subscriber's zip code ²

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX/	BAD_COMMAND_ID
zip_code	BAD_COMMAND_SYNTAX	BAD_ZIP_CODE_FORMAT

Gateway interface concerned

SMS and SAS

SasGwySpe020601.Pub.doc 28 Nov 00 ①+41.21.732.03.11

 $^{^{2}}$ This is the US zip code format, the UK 10 alpha/num format is as well supported. This is configured at the system setup.



5.20 Command 49: Set Callback phone number

Description

Sets or updates the ICC field containing the phone-number or MAC address to be used to call back the Call Collector.

The number can be a phone number or a MAC address. The STB will determine itself how the number must be interpreted:

- If it is a phone number, 18005551212 (with 5 trailing spaces) represents 1-800-555-1212.
- If it is a MAC address in decimal, 281474976710655 (with 1 trailing space) represents the MAC address FFFFFFFFF.

To set an IP address, command 54 (Set Callback IP address) must be used.

Syntax

Command 49: Set Call	Command 49: Set Callback phone number			
Field	byte	format / /	Description	
command_ID	4	0049 / /	command_ID = 49	
cc_number_1	16	Alpha/Num	Call Collector phone number. This	
			field must be padded with trailing	
			ASCII space characters for	
			numbers not requiring 16 digits.	
			Example: 18005551212 (with 6	
			leading spaces) represents 1-800-	
			555-1212	

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
cc_number_1	BAD_COMMAND_SYNTAX	BAD_PHONE_NUMBER_FORMAT

Gateway interface concerned



5.21 Command 50: Cancel ICC

Description

An ICC cancellation is performed when a card is removed from operation (stolen, lost, or presumed failed for example). Because the ICC *is not recoverable* after such operation, the SMS is not allowed to reuse the ICC. In addition the ICC is flagged as canceled and deactivated in the SAS database.


Syntax

Command 50: Cancel	ICC		
Field	byte	format	Description
command_ID	4	0050	command_ID = 50

SMS Acknowledge

Field	Error codes	Error codes extension
command ID	BAD COMMAND SYNTAX	BÁD CØMMAND ID

Gateway interface concerned

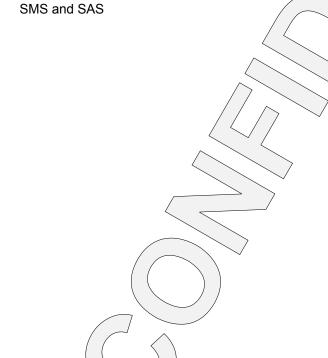



5.22 Command 51: Initialize Card

Description

Initializes the Management Operator (MOP) zone of a new ICC. This command is used when a new ICC is registered in the SMS. In addition the ICC is flagged as initialized in the SAS database. This command must be performed before subscriptions will be allowed on the ICC. Initialization of an ICC can occur several times and has no effect on the rights stored in the ICC.


Syntax

Command 51: Initialize Card			
Field	byte	format	Description
command_ID	4	0051	command_ID = 51

SMS Acknowledge

Field	Error codes	Error codes extension
command ID	BAD COMMAND SYNTAX /	BAD/COMMAND ID

Gateway interface concerned

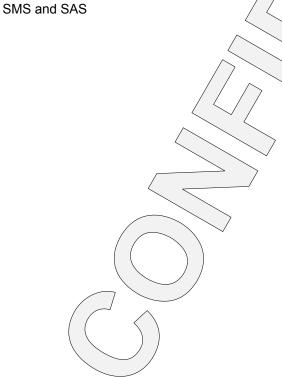



5.23 Command 52: Pair the ICC with the STB

Description

Used to pair an ICC with the STB. This command is mandatory before any services may be authorized. The ICC must have previously been initialized with *command 51: Initialize ICC* before pairing can take place. This command may be issued several times to pair an ICC with a different STB.

Important remark

The pairing-key process is limited to a 4 bytes value, which is converted in decimal, the STU_number will be then a 10 digits string followed by four (4) space characters.

Syntax

Command 52: Pair the ICC with the STB				
Field	byte	format		Description
command_ID	4	0052	\wedge	command_ID = 52
STU_number	14	Num		Nagravision STB serial number in decimal.

SMS Acknowledge

Field	Error codes / /		Error codes extension
command_ID	BAD_COMMAND_SYN	XAT	BAD_COMMAND_ID
STU_number	BAD_COMMAND_SYN	TAX	BAD_STU_NUMBER_FORMAT

Gateway interface concerned





5.24 Command 53: Clear PIN code

Description

Clears the PIN code. This command is used when the subscriber requests a PIN code reset. It is the responsibility of the customer service center to check the authority of the person asking for the cancellation.

Syntax

Command 53: Clear Pl	N code		
Field	byte	format	Description
command_ID	4	0053	command_ID = 53

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned



5.25 Command 54: Set Callback IP address

Description

Sets or updates the ICC field containing the IP-address / phone-number of the Call Collector.


Syntax

Command 54: Set Call	back IP		
Field	byte	format	Description
command_ID	4	0054	command_ID = 54
ip_address	15	Alpha/Num	Call Collector IP address. Field format is 000.000.000.000 to 255.255.255.255. The length is fixed to 15 bytes and
CC port	5	Num	the sub-addresses are filled with leading "0" characters. Example: "001.112.025.002" Call Collector TCP/IP port.

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
ip_address	BAD_COMMAND_SYNTAX	BAD_IP_ADDRESS_FORMAT
CC port	BAD COMMAND SYNTAX	BAD CC PORT FORMAT

Gateway interface concerned

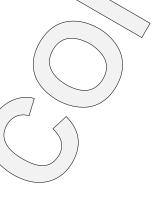



5.26 Command 60: Immediate Call Back

Description

Requests an immediate feedback information from an ICC. 4 separate FEEDBACK commands will be generated and sent to the SMS:

Command 201: Current credit and debit

Command 202:PPV purchase list

Command 205: Calling phone discrepancies (if ANI is enabled)/

Command 206:STU Responding Status (responding = Y)

Command 211: Start of report Command 212: End of report

In the event the STB does not phone back within the designated time defined by the call collector the following FEEDBACK command will be generated:

Command 206: STU Responding Status (responding = N)

Syntax

Command 60: Immedia	te Call	Back		
Field	byte	format		Description
command_ID	4	0060 /		command_ID = 60

SMS ACK Acknowledge

Field	Error codes /		Error codes extension
command_ID	BAD_COMMAND	SYNTAX	BAD_COMMAND_ID

Gateway interface concerned





5.27 Command 61: Enable Automatic Call Back

Description

Turns on the automatic feedback feature of the STB. Starting from there, the STB will call at the given date and after every given period. Automatic callback timing is not impacted by event or immediate generated callbacks. 4 separate FEEDBACK commands will be generated and sent to the SMS:

Command 201: Current credit and debit

Command 202: PPV purchase list

Command 205: Calling phone discrepancies (if ANI is enabled)

Command 206: STU Responding Status (responding = Y)

In the event the STB does not phone back within the designated time defined by the call collector the following FEEDBACK command will be generated by the SMS.

Command 206: STU Responding Status (responding = N)

Syntax

Command 61: Enable Automatic Call Back			
Field	byte	format	Description
command_ID	4	0061	command_ID = 61
call_freq	2	01 //	annual
		02	şemi-annual
		03	/quarterly
		04	monthly
		05	bi-monthly
		1m // >	every m days (1 should be considered as a flag)
date first call	8	YYYYMMDØ /	first date on which the ICC should call back.

SMS Acknowledge

Field	Error/codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
call_freq	BAD_COMMAND_SYNTAX	BAD_FREQUENCY_FORMAT
date first call	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT

Gateway interface concerned



5.28 Command 62: Disable Automatic Call Back

Description

Disables automatic call back for an ICC. Callbacks triggered by Memory_full, threshold limit reached, special events, or callback on demand will still occur.

Syntax

Command 62: Disable	Automa		
Field	byte	format	Description
command_ID	4	0062	command_ID = 62

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned

SMS and SAS

5.29 Command 63: Reserved

Description

This command is reserved for Nagravision.



5.30 Command 64: Update event right

Description

This command updates the End_date for event products and event package products in the ICCs. It is generated automatically by the IMS when an event schedule change is detected for an event product or for an event belonging in an event package product.

Syntax

Command 64: Update event right			
Field	byte	format	Description
command_ID	4	0064	command_ID = 64
IMS_product_ID	12	000000000000	IMS Product ID that covers the data stream.
		99999999999	
End_date	8	YYYYMMDD	The new end date of the event product.


IMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IMS_product_ID	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE
End_date	BAD_COMMAND_SYNTAX / /	BAD_DATE_FORMAT

Gateway interface concerned





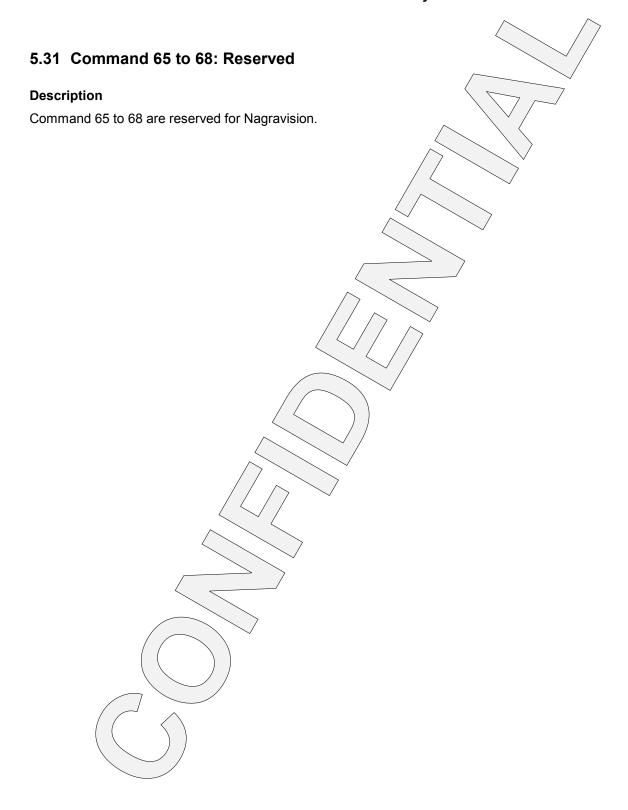



5.32 Command 69: Send Generic IRD Command

Description

This command allows SMS to send any command to the STB. In this way, the CA system provides a secure transport mechanism between the head-end and the STB.

The data received by the STB consists of the following data structure. The SMS Gateway calculates the field's sequence number and checksum for the convenience of SMS.

Command definitions are STB's responsibility.

Syntax

Command 69: Send Generic IRD Command			
Field	byte	format	Description
command_ID	4	0069	command_ID = 69
IRD_command_id	3	Mum	command_id field of IRD command_body (0255)
IRD_operation	3 (Num//	operation field of IRD command_body (0255)
IRD_data_length	2	Mam	length in bytes of useful part of IRD_data field (048)
IRD_data	96	Alpha/Num	data field coded in ASCII format. The complete string must be transferred (96 chars representing 48 bytes). However, only the first left IRD_data_length bytes will be included in the data field of the IRD command_body.

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IRD_command_id	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT
IRD_operation	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT
IRD_data_length	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT

Gateway interface concerned



5.33 Command 70: Reserved

Description

Command 70 is reserved for Nagravision.

5.34 Command 71: Get Products

Description

This command allows SMS to retrieve all the non-impulsive products (subscriptions or PPV) known to the CA system for a subscriber. The information comes from the CA system databases. The products are returned asynchronously in command 215: Products List.

Impulsively purchasable products can be retrieved in the same way using command 111: Get History From Call Collector.

Syntax

Command 71: Get Pro	ducts		
Field	byte	format	Description
command_ID	4	0071	command_ID = 71

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned





5.35 Command 72: Set Products

Description

This command allows modifying the list of products on the subscriber smart card. This command operates in conjunction with the known data in Positive Addressing to send only the minimum required EMMs.

The following is a summary of the command algorithm. The update of the known state is never mentioned, but of course occurs as necessary.

- Check the command syntax and semantics³. If bad, send NACK and stop
- 2. Remove duplicate entries in the command product list.

 If two entries have the same product-id but another field is different, send NACK and stop
- 3. Check that all the IMS-product-ids in the command product list exist and are of the correct type If not, send NACK and stop
- 4. If the force-EMM flag is set, send commands unconditionally according to the command content.
- 5. If the command suspend-ICC flag is set and different from the known state, produce the equivalent of command 20: Suspend subscriber ICC
- 6. If the command suspend-ICC flag is not set and different from the known state, produce the equivalent of command 21: Reactivate subscriber ICC
- 7. If the nb-of-products field is 0 and the type of products field is B (empty command list), produce an equivalent of command 7: All products cancellation
- 8. For all subscription products in the command that are known to Positive Addressing, all fields taken into account:

 Refresh the subscription on the card if the validity dates are different.
- 9. For all products in the command that are not/known to Positive Addressing, taking the type into account: Produce an equivalent of command/2: Add Product
- 10. For all products known to Positive Addressing that are not in the command, taking the type into account: Produce an equivalent of command 6: Product Cancellation
- 11. For all products known to Positive Addressing that are in the command, taking the type into account:

 If the suspend-product flag is different, produce the equivalents of commands 4: Product Suspension and/or 5: Product Reactivation as necessary.

Note: If for some reason, the command is NACKed by the SMS Gateway, it needs to be sent again with the force-EMM\flag set.



³ Explicitly, this means subscription_begin_date and subscription_end_date must be valid dates, that subscription_end_date is in the future and that subscription_begin_date < subscription_end_date.

_



Syntax

Command 72: Set Products	Command 72: Set Products				
Field	byte	format	Description		
command_ID	4	0072	command_ID = 72		
force_emm	1	YN	It set to Y, EMMs are sent unconditionally		
suspend_ICC	1	YN	CC Suspension status		
type_of_products	1	S, E or B	Types of products defined in this command: S: Service products E: Event products B: Both event and service products		
begin_date	8	YYYYMMDD	Subscriptions begin date. Subscriptions are not valid before this date. For event products, this date is ignored.		
end_date	8	YYYYMMDD	Subscriptions end date. Subscriptions are not valid after this date. For event products, this date is ignored.		
nb_of_products	2	0099	Number of products defined in this command		
for(i=0;i <nb_of_products;i++) td="" {<=""><td>3</td><td>Num</td><td>IRD command length</td></nb_of_products;i++)>	3	Num	IRD command length		
IMS_product_ID	12	00000000000000000000000000000000000000	IMS product ID Products must be of the type specified above The same product may occur multiple times		
suspend_product	1	YN	Product suspension status		
}	>				



SAS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
suspend_ICC	BAD_COMMAND_SYNTAX	BAD_FLAG_VALUE
type_of_products	BAD_COMMAND_SYNTAX	BAD_FLAG_VALUE
nb_of_products	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT
IMS_product_ID	BAD_COMMAND_SYNTAX PRODUCT_NOT_FOUND PRODUCT_ALREADY_EXISTS PRODUCT_INCONSISTENT	BAD_IMS_PRODUCT_ID_FORMAT NO_EXTENDED_ERROR_CODE DIFFERENT_PRODUCTS NO_EXTENDED_ERROR_CODE
suspend_product	BAD_COMMAND_SUNTAX	BAD_FLAG_VALUE
begin_date	BAD_COMMAND_SYNTAX BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT BAD_DATE_SEQUENCE
end_date	BAD_COMMAND_SYNTAX BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT BAD_DATE_SEQUENCE
	CANCELED_CARD	NO_EXTENDED_ERROR_CODE

Gateway interface concerned

SMS and SAS

5.36 Command 73: Add ALC product

Description

Used to add a new "à la carte" product to an ICC. This allows the subscriber to pick up m services amongst n.

Syntax

Command 73: Ad			
Field	byte	format	Description
command_ID	4	0073	command_ID = 73
IMS_product_ID	12	00000000000000000000000000000000000000	IMS product ID
begin_date	8	YYYYMMDD	Subscription begin date. Subscription is not valid before this date.
end_date	8	YYYYMMDD	Subscription end date. Subscription is not valid after this date.
service_number	3//	000 to 999	Number of services in the product
for (I=1; I<=number_services; I++) {		es; I++) {	
service_UID	5	00000 99999	IMS service UID
}			



SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID/
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE
begin_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT \ \ \ \ \ \
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE \
end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
_	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
service_number	BAD_COMMAND_SYNTAX	BAD_SERVICE_NUMBER_FORMAT
	TOO_MANY_ITEMS	maximum item #
service_UID	BAD_COMMAND_SYNTAX	BAD_SERVICE_UID_FORMAT
	SERVICE_NOT_FOUND	NO_EXTENDED_ERROR_CODE

Gateway interface concerned

SMS and SAS

5.37 Command 74: Modify ALC product

Description

Used to modify a "à la carte" product in an ICC. Syntax

Command 74: Modify ALC Product			
Field	byte	format /	Description
command_ID	4	0074	command_ID = 74
IMS_product_ID	12	999999999999 tø 0000000000000	IMS product ID
begin_date	8	YYYYMMDD	Subscription begin date. Subscription is not valid before this date.
end_date	8	YYYYMMDD	Subscription end date. Subscription is not valid after this date.
service_number	3	000 to 999	Number of services in the product
for (I=1; I<=number_services; I++) {		ces; I++) {	
service_UID	5	00000 99999	IMS service UID
}			

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE
begin_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD COMMAND SYNTAX	BAD DATE SEQUENCE



end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT /
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE /
service_number	BAD_COMMAND_SYNTAX	BAD_SERVICE_NUMBER_FORMAT
	TOO_MANY_ITEMS	maximum item #
service_UID	BAD_COMMAND_SYNTAX	BAD_SERVICE_UID_FQRMAT
	SERVICE_NOT_FOUND	NO_EXTENDED_ERROR_CODE

Gateway interface concerned

SMS and SAS

5.38 Command 75: Renew ALC product

Description

Used to renew the "à la carte" subscription in the ICC up to the end_date.

Syntax

Command 75: Renew ALC Product			
Field	byte	format Description	
command_ID	4	0075 command_YD = 75	
end_date	8	YYYYMMDD Subscription end date. Subscription is not valid after this date.	

SMS Acknowledge

Field	Error codes/ / /	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE

Gateway interface concerned

SMS and SAS

5.39 Command 76; ALC product Suspension

Description/

Suspends the subscription to services of the "à la carte" product. The subscriber will not be able to watch the product until a product reactivation command is sent. This command may be used when there is a payment problem with the subscriber.

Syntax

Command 76: Suspend ALC Product



Field	byte	format	Description	
command_ID	4	0076	command_ID = 76	

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned

SMS and SAS

5.40 Command 77: ALC product Reactivation

Description

Grants access to all the subscriptions included in the "à la carte" product that has been previously suspended. The subscriber will be able to watch the product again. Used after command 76: ALC Product Suspension.

Syntax

Command 77: Activate ALC Product <				
Field	byte	format	\wedge	Description
command_ID	4	0077		command_ID = 77

SMS Acknowledge

Field	Error codes	Error codes extension
command ID	BAD COMMAND SYNTAX	BAD COMMAND ID

Gateway interface concerned

SMS and SAS

5.41 Command 78: ALC product Cancellation

Description

Allows the SMS to remove the "à la carte" product from the ICC in case of error or if a subscriber asked for a cancellation.



Syntax

Command 78: Suspend ALC Product				
Field	byte	format	Description	
command_ID	4	0078	command_ID = 78	

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID

Gateway interface concerned

SMS and SAS

5.42 Command 79: Force Tune (future use)

Description

Forces the STB to tune a desired service.

Syntax

Command 79: Fo	rce Tun	ie /	
Field	byte	format	Description
command_ID	4	0079	command_ID = 79
network_id	5	00000//65535	corresponds to the network_id as described in the DVB
			Network Information Table (NIT).
transport_id	5	00000 65535	corresponds to the network_id as described in the DVB
. —			Network Information Table (NIT).
service_id	5	09000 65535	corresponds to the service_id as described in the DVB
_			Service
			Description Table (SDT). It may also correspond to the
	_		program number found in the MPEG Program Map Table (PMT)

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
network_id//	BAD_COMMAND_SYNTAX	BAD_NETWORK_ID_FORMAT
transport_id /	BAD_COMMAND_SYNTAX	BAD_TRANSPORT_ID_FORMAT
service_id	BAD_COMMAND_SYNTAX	BAD_SERVICE_ID_FORMAT

Gateway interface concerned

SMS and SAS



5.43 Command 80: Send message (future use)

Description

Allows the SMS to send message and fingerprints to a STB.

Syntax

Command 80: Send	messag	е	
Field	byte	format	Description /
command_ID	4	0080	command_JD = 80
id	4	0000 9999	unique message identification
lid	3	aaa zzz	language code compliant with ISO639_2
version	2	00 99	message version
priority	1	01	message pr iority (0 => 1 ow, 1 => high)
mode	1	01	display mode (0 => normal, 1 => fingerprint)
kind	1	09	message kind (e.g. advertisement, warning etc),
			to be defined between the SMS and the STB provider
			∕0 is thé défault value
validity_start_date	8	YYYYMMDD	message validity start date
validity_start_time	4	HHMM	message validity start time
validity_end_date	8	YYYYMMDØ	message validity end date
validity_end_time	4	HHMM / /	message validity end time
length	3	000 999 🔍	message length
message		alpha/num	message

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
lid	BAD_CQMMAND_SYNTAX	BAD_LID_FORMAT
priority	BAD_COMMAND_SYNTAX	BAD_PRIORITY_FORMAT
mode	BAD _COMMAN D_SYNTAX	BAD_MODE_FORMAT
kind	BAQ_CQ MMAND_S YNTAX	BAD_NUMBER_FORMAT
id	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT
version	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT
validity_start_date /	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_start_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
validity_end_date \	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_enø_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
length (RAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT

Gateway interface concerned

SMS and SAS

5.44 Command 90: Reserved



Description

Command 90 is reserved for Nagravision.

5.45 Command 91: Reserved

Description

Command 91 is reserved for Nagravision.

5.46 Command 92: Purge old Products (future use)

Description

Purges the ICC database from old rights. This command is usually used in a system with impulse purchase capability without return path. Only the rights with end date in the past are purged.

Syntax

Command 92: purge old Products			
Field	byte	format	Description
command_ID	4	0092	command_ID = 92
purge_mode	1	09	0 => purge only rights marked as call collected
			1 => purge only rights marked as non-call collected
		_	2 => purge both kind of rights
			3 9 => future use
date		09//	Q≠> purge only rights marked as call collected

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
mode	BAD_COMMAND_SYNTAX	BAD_PURGE_MODE_FORMAT

Gateway interface concerned


SMS and SAS

5.47 Command 93: Reserved

Description

This command is reserved for Nagravision usage.



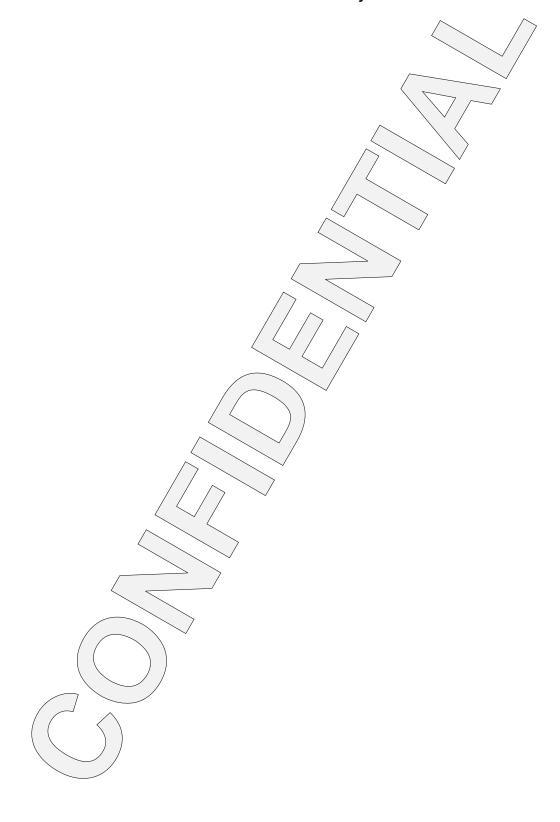

①+41.21.732.03.11



6. Appendix: SMS CONTROL Commands

6.1 Command 100: Redefine Credit Limit

Description

Tells the Call Collector which credit limit for impulse purchase will be associated to an ICC. The Call Collector will restore the ICC credit to the sum of this value and the current debit at each billing date. The new credit limit will be communicated to the ICC during the next callback from the STB. If an immediate update on the ICC is required, the SMS should send a command 100 followed by command 8.


Syntax

Command 100: Redefine Credit Limit				
Field	byte	format	Description	
command_ID	4	0100	command_ID = 100	
credit_limit	7	0000000 6553599	the credit limit representing the range \$000.00 to \$65535.99	

SMS Acknowledge

Field	Error codes Error codes extension
command_ID	BAD_COMMAND_SYNTAX BAD_COMMAND_ID
credit limit	BAD COMMAND SYNTAX BAD CREDIT FORMAT

Gateway interface concerned

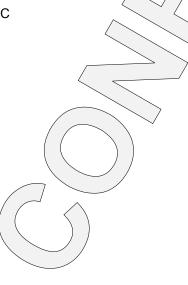



6.2 Command 101: Set Authorized Phone Number

Description

Sets or updates the Call Collector database with the phone numbers an ICC is allowed to use as caller id. These will be checked upon each callback. Command 205 will be generated from the SMS in case there is a difference.

The number can be a phone number, or an IP address or a MAC address. See command 49 for the exact description.

Syntax

Command 101: S	Command 101: Set Authorized Phone Number			
Field	byte	format	Description	
command_ID	4	0101	command_lD = 101	
phone_number_1	16	Num + trailing spaces	Primary phone number. This field must be	
		/> `	padded with trailing ASCII space characters	
			for numbers not requiring 16 digits.	
phone_number_2	16	Num + trailing spaces/ /	Alternate phone number. This field must be	
			padded with trailing ASCII space characters	
			for numbers not requiring 16 digits.	
phone_number_3	16	Num + trailing spaces	Alternate phone number. This field must be	
			padded with trailing ASCII space characters	
			for numbers not requiring 16 digits.	

SMS Acknowledge

Error codes / />	Error codes extension
BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
BAD_COMMAND_SYNTAX	BAD_PHONE_NUMBER_FORMAT
BAD_COMMAND_SYNTAX	BAD_PHONE_NUMBER_FORMAT
BAD_COMMAND_SYNTAX	BAD_PHONE_NUMBER_FORMAT
	BAD_COMMAND_SYNTAX BAD_COMMAND_SYNTAX BAD_COMMAND_SYNTAX

Gateway interface concerned



6.3 Command 104: Create ICC On Call Collector

Description

Creates a new ICC record in the CC database. The correctly paired STB serial number must be provided for proper operation.


Syntax

Command 104: Create ICC On Call Collector			
Field	byte	format	Description
command_ID	4	0104	command_ID = 104
STU_number	14	Num	Nagravision STB serial number

SMS Acknowledge

Field	Error codes	Error/codes extension
command_ID	BAD_COMMAND_SYNTAX /	BAD COMMAND ID
STU_number	BAD_COMMAND_SYNTAX	BAD_STU_NUMBER_FORMAT
	STU_ALREADY_EXISTS	NO_EXTENDED_ERROR_CODE

Gateway interface concerned

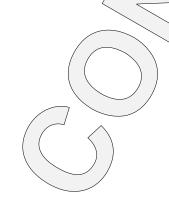



6.4 Command 105: Cancel ICC On Call Collector

Description

Cancels an existing ICC in the CC database. This command should be issued when the ICC is deleted from the SMS database.

Syntax

Command 105: Cancel ICC On Call Collector			
Field	byte	format	Description
command_ID	4	0105	command_ID = 105

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX /	BAD_COMMAND_ID

Gateway interface concerned



6.5 Command 110: EMM cleanup

Description

Erases all EMMs in the SAS and EMM broadcaster for one ICC. This command has to be used if a discrepancy is suspected between SMS customer data and EMMs for this customer.

Syntax

Command 110: EMM cleanup			
Field	byte	format	Description
command_ID	4	0110	command_ID = 110

SAS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX/	/BAD_COMMAND_ID

Gateway interface concerned

SMS and SAS



6.6 Command 111: Get History From Call Collector

Description

Allows the SMS to retrieve a two-month history of IPPV information stored in the Call Collector. Each PPV record will generate a separate Command 202: PPV Purchase List command from the SMS.

Syntax

Command 111: Get History From Call Collector			
Field	byte	format	Description
command_ID	4	0111	command_ID = 111

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX /	BAD_COMMAND_ID

Gateway interface concerned



7. Appendix: SMS Feedback Commands

7.1 Command 200: Low credit alarm

Description

The credit level in the ICC is under the threshold credit. At the time when the SMS is made aware of this alarm, the credit has already been restored by the CC.


Syntax

Command 200: Low credit alarm			
Field	byte	format	Description
command_ID	4	0200	command_ID = 200
STU_number	14	Num	Nagravision STB serial number
credit	7	0000000	Credit amount representing
		6553599	\$000.00 to \$65535.99
debit	7	0000000	Debit amount representing \$000.00
		6553599 / /	/to/\$65535.99

Gateway interface concerned

CC and SMS

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX >	BAD_COMMAND_ID
STU_number	BAD_COMMAND_SYNTAX	BAD_STU_NUMBER_FORMAT
credit	BAD_COMAMNO_SYNTAX	BAD_CREDIT_FORMAT
debit	BAD COMMAND SYNTAX	BAD DEBIT FORMAT

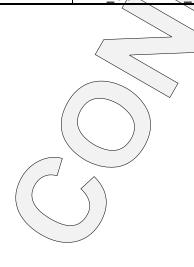



7.2 Command 201: Current Debit and Credit

Description

Sends the credit and debit reported by the ICC.


Syntax

Command 201: Current Debit and Credit			
Field	byte	format	Description
command_ID	4	0201	command_ID = 201
STU_number	14	Num	Nagravision STB serial number
credit	7	0000000	Credit amount representing
		6553599	\$000.00 to \$65535.99
debit	7	0000000	Debit amount representing \$000.00
		6553599 /	to \$65535.99

Gateway interface concerned

CC and SMS

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
STU_number	BAD_COMMAND_SYNTAX	BAD_STU_NUMBER_FORMAT
credit	BAD_COMAMND_SYNTAX	BAD_CREDIT_FORMAT
debit	BAD COMMAND SYNTAX	BAD DEBIT FORMAT

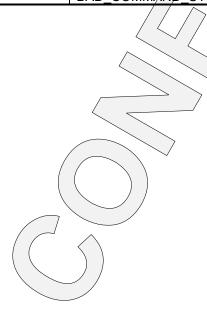



7.3 Command 202: PPV Purchase List

Description

Sends a single IPPV record to allow detailed billing.


Syntax

Command 202: PPV Purchase List			
Field	byte	format	Description
command_ID	4	0202	command_1D = 202
STU_number	14	Num	Nagravision STB serial number
IMS_product_ID	12	00000000000	tMS_product_ID of the event
		99999999999	product purchased impulsively
			through the EPG
purchase_date	8	YYYYMMDD (date of IPPV purchase
watched_status	1	Y or N	Indicates if the IPPV has been
		/ / .	watched (Y) or (N). The IPPV is
			watched if the accumulated viewing
			time exceeds the limit defined for
			the event or the limit predefined for
			the service carrying the event (see
			sections 4.1.2 and 4.1.4).

Gateway interface concerned

CC and SMS

Field	Error codes / /	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
STU_number	BAD_COMMAND_SYNTAX	BAD_STU_NUMBER_FORMAT
IMS_product_ID	BAD_COMAMND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
purchase_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
watched status	BAD COMMAND SYNTAX	BAD FLAG FORMAT

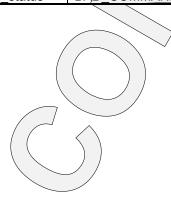



7.4 Command 205: Phone Discrepancies

Description

Sends to the SMS any phone discrepancy information. Occurs if the phone number (caller ID) of the customer does not match any authorized phone numbers for that given customer.

The number can be a phone number, or an IP address or a MAC address. See command 49 and command 54 for the exact description.


Syntax

Command 205: Phone Discrepancies			
Field	byte	format	Description
command_ID	4	0205	command_ID = 205
STU_number	14	Num	Nagravision STB serial number
phone_number_1	16	Alpha/Num	first phone number stored in the CC
phone_number_2	16	Alpha/Num	second phone number stored in the CC
phone_number_3	16	Alpha/Num	third phone number stored in the CC
abnormal_phone	16	Alpha/Num + trailing	number used by STB to call CC
		spaces / /	

Gateway interface concerned

CC and SMS

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
STU_number	BAD_COMMAND_SYNTAX	BAD_STU_NUMBER_FORMAT
phone_number_1	BAD_COMAMND_SYNTAX	BAD_PHONE_NUMBER_FORMAT
phone_number_2	BAD_COMMAND_SYNTAX	BAD_PHONE_NUMBER_FORMAT
phone_number_3	BAD_COMMAND_SYNTAX	BAD_PHONE_NUMBER_FORMAT
abnormal_phone	BAD_COMMAND_SYNTAX	BAD_PHONE_NUMBER_FORMAT

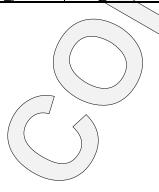



7.5 Command 206: STU Responding Status

Description

Sends to the SMS the new STB responding status. This command is generated upon every successful callback as well as callbacks that are expected but not received. A non-responding STB is defined by the call collector's callback expiration parameter (typically 3 days). Automatic callbacks and immediate callbacks requested from the SMS will always generate the STB Responding Status command. Alarm based callbacks and Special event callbacks will never generate a STU Responding Status with responding = N.


Syntax

Command 206: STU Responding Status			
Field	byte	format	Description
command_ID	4	0206	command_ID = 206
STU_number	14	Num /	Nagravision STB serial number
responding	1	Y N	A STB may be responding (Y) or not (N).

Gateway interface concerned

CC and SMS

Field	Error codes
command_ID	BAD_COMMAND_SYNTAX BAD_COMMAND_ID
STU_number	BAD_COMMAND_SYNTAX BAD_STU_NUMBER_FORMAT
responding	BAD COMAMNO SYNTAX / BAD FLAG FORMAT

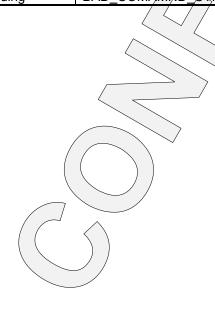



7.6 Command 207: ICC Memory Full Alarm

Description

Forwards to the SMS a message sent by the ICC: memory full. This information is retrieved by the CC during the callback. The ICC will remove all obsolete data (expired subscriptions).


Syntax

Command 207: ICC Memory Full Alarm			
Field	byte	format	Description
command_ID	4	0207	command_ID = 207
STU_number	14	Num	Nagravision STB serial number

Gateway interface concerned

CC and SMS

Field	Error codes Error codes extension
command_ID	BAD_COMMAND_SYNTAX BAD_CØMMAND_ID
STU number	BAD COMMAND SYNTAX BAD STU NUMBER FORMAT

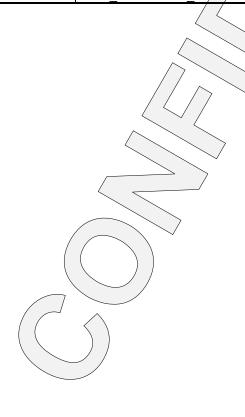



7.7 Command 208: Event definition error

Description

Returned when an event overlapping is detected while loading a new version of the EPG data feed. All events validly defined in the EPG data feed are stored in the IMS database.


Syntax

Command 208: Event of	definitio		
Field	byte	format	Description
command_ID	4	0208	command_ID = 208
SMS_event_ID_1	12	000000000000 to	SMS event ID which caused the
		99999999999	error
SMS_event_ID_2	12	000000000000 to	SMS event ID which already exist
		99999999999 /	in the IMS database.

Gateway interface concerned

IMS and SMS

Field	Error codes extension
command_ID	BAD_COMMAND_SYNTAX /BAD_COMMAND_ID
SMS_event_ID_1	BAD_COMMAND_SYNTAX BAD_SMS_EVENT_ID_FORMAT
SMS event ID 2	BAD COMMAND SYNTAX BAD SMS EVENT ID FORMAT

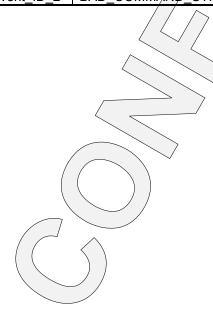



7.8 Command 209: Null Event error

Description

Returned when an event in the IMS database has a duration of zero and a validity_start_date within the next 7 days. This can happen if an event product or an event package product referring to a non-existent event (outside of EPG range) is created through the SMS. In this case, a placeholder event is created in the IMS database with zero duration. This error is reported each time there is a new version of the EPG data feed and the problem is not solved.


Syntax

Command 209: Null Event error			
Field	byte	format	Description
command_ID	4	0209	command_ID = 209
SMS_event_ID	12	Num	SMS event ID of the event.

Gateway interface concerned

IMS and SMS

Field	Error codes Error codes extension
command_ID	BAD_COMMAND_SYNTAX BAD_COMMAND_ID
SMS event ID	BAD COMMAND SYNTAX RAD SMS EVENT ID FORMAT

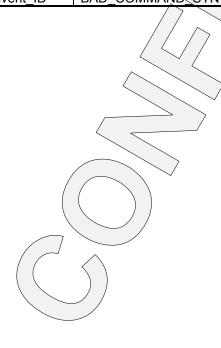



7.9 Command 210: EPG data feed format error

Description

This command is used by the IMS to report EPG data feed format errors to the SMS. The field's error_code and error_code_ext must be used as indicated in § 3.3.


Syntax

Command 210: EPG data feed format error					
Field	byte	format	Description		
command_ID	4	0210	command_ID = 210		
error_code	4	0000 9999	BAD_EPG_FORMAT		
error_code_ext	4	0000 9999	BAD_DATE_FORMAT		
			BAD_VERSION_FORMAT		
		/	BAD_SMS_EVÉNT_ID_FORMAT		
			BAD_FLAG_FORMAT		
		/ >	BAD_TIME_FORMAT		
			BAD_RATING_FORMAT		
			BAD_CRC_32		

Gateway interface concerned

IMS and SMS

Field	Error codes/	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
error_code	BAD_COMMAND_SYNTAX	BAD_ERROR_CODE
error code ext	BAD COMMAND SYNTAX	BAD ERROR CODE EXT

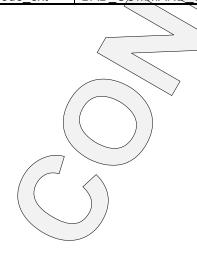



7.10 Command 211: Start of Report

Description

This command is used by the CC to signal the beginning of a call collector report. This command is sent as the first command of a call collector report (for the ICC whose UA is in the command header).


Syntax

Command 211: Start of	Repor		
Field	byte	format	Description
command_ID	4	0211	command_1D = 211
STU_callback_date	8	YYYYMMDD	date of the callback being reported
STU_callback_time	6	000000 235959	time of the callback being reported

Gateway interface concerned

CC and SMS

Field	Error codes		Error codes extension
command_ID	BAD_COMMAND_SY	NTAX	BAD_COMMAND_ID
STU_callback_date	BAD_COMMAND_SY	XATŃ	/BAD_DATE_FORMAT
STU_callback_time	BAD_COMMAND_SY	$\lambda XY M$	BAD_TIME_FORMAT

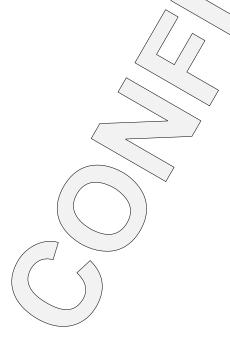



7.11 Command 212: End of Report

Description

This command is used by the CC to signal the end of a call collector report. This command is sent as the last command after all call collector information (for the ICC whose UA is in the command header) is sent to the SMS.

Syntax

Command 212: End of Report			
Field	byte	format	Description
command_ID	4	0212	command_ID = 212
number_of_IPPV	2	00 99	The number of IPPV reports (occurrences of command 202) that should have been sent in this report.

Gateway interface concerned

CC and SMS

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	₹ BAD_COMMAND_ID
number_of_IPPV	BAD_COMMAND_SYNTAX	⟨ BAD_NUMBER_OF_IPPV_FORMAT



7.12 Command 213: Event Product Schedule Change

Description

This command is used by the IMS to indicate that the schedule of an event, referenced by one or more event products has changed. The command is issued after processing the EPG data feed.

Syntax

Command 213: Event Product Schedule Change					
Field	byte	format	Description		
command_ID	4	0213	command_1D = 213		
SMS_event_ID	12	00000000000	SMS_event_ID of the event		
		99999999999			
Previous_start_date	8	YYYYMMDD	original start date of the event		
Previous_start_time	6	HHMMSS /	original start time of the event		
Previous_duration	4	0000 9999	original length of the event		
			(00009999 minutes)		
New_start_date	8	YYYYMMDD / /	new start date of the event		
New_start_time	6	HHMMSS / /	new start time of the event		
New_duration	4	0000 9999	new length of the event		
			(0000.9999 minutes)		

Gateway interface concerned

IMS and SMS

Field	Error codes	Error codes extension
command_ID	BAD_CQMMAND_SYNTAX	BAD_COMMAND_ID
SMS_event_ID	BAD_COMMAND_SYNTAX	BAD_SMS_EVENT_ID_FORMAT
Previous_start_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
Previous_start_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
Previous_duration	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT
New_start_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
New_start_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
New_duration /	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT



7.13 Command 214: Event remove error

Description

Returned when the IMS detects that an event referenced by one or more event products is no longer in the EPG data feed. In this case, a placeholder is created in the IMS database. This command is issued after processing the EPG data feed and only if the event was to occur within the next X days.

If the event was not in the 7 days time frame, then the placeholder is still created, but Command 214 will not be reported. The placeholder is used to allow the reporting of command 209 if the problem subsists.

Syntax

Command 214: Event r	emove	error	
Field	byte	format	Description
command_ID	4	0214	command_ID = 214
SMS_event_ID	12	Num	SM S event ID of the event.

Gateway interface concerned

IMS and SMS


Errors must be reported by the SMS using the following table:

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
SMS_event_ID	BAD_COMMAND_SYNTAX	BAD_SMS_EVENT_ID_FORMAT

7.14 Command 215: Products List

Description

This command reports the list of products known to the CA system for one particular subscriber. It is sent asynchronously in answer from command 11: Get Products, and contains the transaction-number of the received instance of this last command as a reference.

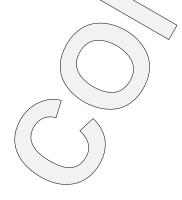



Syntax

Command 215: Products List			
Field	byte	format	Description
command_ID	4	0215	command_ID = 215
original_transaction_number	9	Num	Transaction number of the command 71 that triggered the generation of this command
STU_number	14	Num	Nagravision STB serial number
ICC_suspended	1	YN	ICC suspend state
nb_of_products	2	0099	Number of products returned in this command
for(i=0;i <nb_of_products;i++) td="" {<=""><td>3</td><td>Num</td><td></td></nb_of_products;i++)>	3	Num	
IMS_product_ID	12	99999999999999999999999999999999999999	IMS product ID
product_suspended	1	YN /	Product suspend state
}			

SMS Acknowledge

Field	Error codes	Error codes extension
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
original_transaction_number	BAD_COMMAND_SYNTAX	BAD_TRANSACTION_NUMBER_FOR MAT
STU_number	BAD_COMMAND_SYNTAX	BAD_STU_NUMBER_FORMAT
ICC_suspended	BAD_COMMAND_SYNTAX	BAD_FLAG_FORMAT
nb_of_products	BAD_COMMAND_SYNTAX	BAD_NUMBER_FORMAT
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
product_suspended	BAD_COMMAND_SYNTAX	BAD_FLAG_FORMAT

Gateway interface concerned

SMS and SAS



8. Appendix: SMS PRODUCT_DEF Commands

8.1 Command 300: Create event product

Description

The event product is created in the IMS database. When the command is acknowledged the IMS product ID associated to this event by the IMS is returned in the IMS_product_ID field of acknowledge command (command 1000).

If there is no SMS_event_ID defined in the IMS database when the EPG enters the date frame delimited by the validity dates then command 209 (null event error) is reported to the SMS.

In addition to the errors that may occur because of a command's parameters, errors solely due to the database (impossibility to establish a connection to the database,...) are reported back with the error code DATABASE ERROR. Such errors are not associated with any command parameter.

Syntax

Command 300: Create event produ	Command 300: Create event product			
Field	byte	format //	Description	
command_ID	4	0300	command_ID = 300	
SMS_product_ID	12 /	000000000000	SMS product ID	
	/ /	to		
		99999999999		
PPV_number	7	0000000/to	Pay per view number	
		9999999	0110	
SMS_event_ID	12	00000000000000000	SMS event ID	
/ /		to > 999999999999		
reference_number	4	0000 to 9999	Reference number for customer	
Telefelice_lidilibei	1	0000 10 9999	order	
name	80	Alpha/Num	Product's name	
description	250	Alpha/Num	Product's description	
validity_start_date	8	YYYYMMDD	Validity start date.	
validity start time	6	HHMMSS	Validity start time.	
validity end date	8	YYYYMMDD	Validity end date. The SAS raises a	
	}		PPV IN THE PAST error if a	
			command 10: Create PPV is	
			received after this date.	
validity_end_time \	6	HHMMSS	Validity end time. The SAS raises a	
			PPV_IN_THE_PAST error if a	
			command 10: Create PPV is	
	_	00000	received after this time.	
price (()	5	00000	Price of the product representing	
anacial DDV avent	1	99999	the range \$000.00 to \$999.99	
special_PPV_event	1	Y N	define a special PPV (originating an immediate call back)	
impulse purchase allowed	1	Y N	YES is the default	
impulse_purchase_allowed watched criterion	3	000 999	Amount of time (in cryptoperiods)	
watched_chtenon	٥	. 999	that must be spent on the event	
			before it is considered as watched.	
	I		perore it is considered as watched.	



free_preview_time	2	00 99	Length of the free preview (in minutes) at the beginning of the event.
reverse_blackout_flag	1	Y N	N is the default
blackout_type	2	00 99	number of the blackout type to enforce for this event.
nb_of_subtypes	3	000 999	number of subtypes defined for this event.
for (I=1; I<=nb_of_subtypes; I++) {			
blackout_subtype	3	000 999	subtype number for each subtype belonging to the blackout type.
}			

SMS Acknowledge

-		
Field	Error codes	Error codes extension
	DATABASE_ERROR	
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
SMS_product_ID	PRODUCT_ALREADY_EXISTS	IDENTICAL_PRODUCTS
	PRODUCT_ALRÉADY_EXISTS /	DIFFERENT_PRODUCTS
	BAD_COMMAND_SYNTAX / /	BAD_SMS_PRODUCT_ID_FORMAT
PPV_number	BAD_COMMAND_SYNTAX /	BAD_PPV_NUMBER_FORMAT
SMS_event_ID	BAD_COMMAND_SYNTAX	BAD_SMS_EVENT_ID_FORMAT
	PRODUCT_ON_NON_PRV_EVENT	NO_EXTENDED_ERROR_CODE
reference_number	BAD_COMMAND_SYNTAX	BAD_REFERENCE_NUMBER_FORMAT
validity_start_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_start_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
validity_end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_CØMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_end_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
price	BAD_COMMAND_SYNTAX	BAD_PRICE_FORMAT
Special_PPV_event	BAD_COMMAND_SYNTAX	BAD_FLAG_FORMAT
impulse_purchase_allowed	BAD_COMMAND_SYNTAX	BAD_FLAG_FORMAT
watched_criterion	BAD_COMMAND_SYNTAX	BAD_FLAG_FORMAT
free_preview_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
reverse_blackout_flag	BAD_COMMAND_SYNTAX	BAD_FLAG_FORMAT
blackout_type	BAD_COMMAND_SYNTAX	BAD_BLACKOUT_TYPE_FORMAT
nb_of_subtypes / /	BAD_COMMAND_SYNTAX	BAD_NB_OF_SUBTYPES_FORMAT
blackout_subtype	BAD_COMMAND_SYNTAX	BAD_BLACKOUT_SUBTYPE_FORMAT

Gateway interface concerned



8.2 Command 301: Remove product

Description

Removes the product from the IMS database. It is not removed from the ICCs. It is the responsibility of the SMS to manage the case of customers having already purchased the product.

Syntax

Command 301: F	Remove	product	
Field	byte	format	Description
command_ID	4	0301	command_ID =/301
IMS_product_ID	12	000000000000	IMS Product 1D
		99999999999	

SMS Acknowledge

Field	Error codes	Error codes extension
	DATABASE_ERROR / / /	
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE

Gateway interface concerned



8.3 Command 302: Modify event product

Description

The event product is modified in the IMS database.

Syntax


Command 302: Modify event product				
Field	byte	format	Description	
command_ID	4	0302	command_ID = 302	
IMS_product_ID	12	0000000000000000	IMS Product ID	
		99999999999		
reference_number	4	0000 9999	Reference number for customer order	
validity_start_date	8	YYYYMMDD	<u>Validit</u> ý start date.	
validity_start_time	6	HHMMSS	Validity start time.	
validity_end_date	8	YYYYMMDD	Validity end date. The SAS raises a	
			PPV_IN_THE_PAST error if a	
			command 10: Create PPV is received	
	_		after this date.	
validity_end_time	6	HHMMSS	Validity end time. The SAS raises a	
			PPV_IN_THE_PAST error if a	
	/ /		command 10: Create PPV is received	
		20000	after this time.	
price	5	00000//99999	Price of the product representing the	
anasial DDV syent	1	Y N	range \$000.00 to \$999.99	
special_PPV_event		Y (V	define a special PPV (originating an immediate call back)	
impulse_purchase_allowed	1/>	Y N	YES is the default	
watched criterion	3	000 999	Amount of time (in cryptoperiods) that	
watched_criterion	/3/	000 999	must be spent on the event before it is	
			considered as watched.	
free_preview_time	2	00 99	Length of the free preview (in minutes)	
I II GO_proviow_time	_ ~	00 00	at the beginning of the event.	
reverse_blackout_flag /	1/	Y N	N is the default	
blackout type	2	00 99	number of the blackout type to enforce	
	\ \		for this event.	
nb of subtypes	3	000 999	number of subtypes defined for this	
			event.	
for (I=1; I<=nb_of_subtypes; I++) {				
blackout_subtype	3	000 999	subtype number for each subtype	
			belonging to the blackout type.	
}				



SMS Acknowledge

Field	Error codes	Error codes extension
	DATABASE_ERROR	
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND/ID
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE
reference_number	BAD_COMMAND_SYNTAX	BAD_REFERENCE_NUMBER_FORMAT
validity_start_datedate	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX /	BAQ_DATE_SEQUENCE
validity_start_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
validity_end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_end_time	BAD_COMMAND_SYNTAX	BAD_TIME_FORMAT
price	BAD_COMMAND_SYNTAX <	BAD_PRICE_FORMAT
Special_PPV_event	BAD_COMMAND_SYNT/AX	BAD_FLAG_FORMAT
impulse_purchase_allow	BAD_COMMAND_SYNTAX 🦳 🗋	BAD_FLAG_FORMAT
ed		
watched_criterion	BAD_COMMAND_SYNTAX / /	BAD_FLAG_FORMAT
free_preview_time	BAD_COMMAND_SYNTAX //	BAD_TIME_FORMAT
reverse_blackout_flag	BAD_COMMAND_SYNTAX	BAD_FLAG_FORMAT
blackout_type	BAD_COMMAND_SYNTAX	BAD_BLACKOUT_TYPE_FORMAT
nb_of_subtypes	BAD_COMMAND_SYNTAX	BAD_NB_OF_SUBTYPES_FORMAT
blackout_subtype	BAD_COMMAND_SYNTAX	BAD_BLACKOUT_SUBTYPE_FORMAT







8.4 Command 303: Create service product

Description

The product based on a service is automatically created in the IMS database. Command 1000 is returned with the IMS product ID.

Syntax

Command 303: Create service product				
Field	byte	format	Description	
command_ID	4	0303	command_1D = 303	
SMS_product_ID	12	00000000000 to	SMS product ID	
		99999999999		
service_UID	5	00000 99999	IMS service_UID	
reference_number	4	0000 9999 /	Reference number for customer	
			order	
name	80	Alpha/Num	Product name	
description	250	Alpha/Num / /	Product description	
validity_start_date	8	YYYYMMDD / /	Validity start date	
validity_end_date	8	YYYYMMDD	Validity end date	
price	5	00000 99999	Price of the product representing	
			the range \$000.00 to \$999.99	

SMS Acknowledge

Field	Error codes	Error codes extension
	DATABASE/_E/RROR	
command_ID	BAD_COMMAND_\$YNTAX	BAD_COMMAND_ID
SMS_product_ID	BAD_C@MMAND_SYNTAX	BAD_SMS_PRODUCT_ID_FORMAT
	PRODUCT_ALRÉADY_EXISTS	IDENTICAL_PRODUCTS
	PRODUCT_ALREADY_EXISTS	DIFFERENT_PRODUCTS
service_UID	BAD_COMMAND_SYNTAX	BAD_SERVICE_UID_FORMAT
	S ERVICE_NO T_FOUND	NO_EXTENDED_ERROR_CODE
reference_number	BAD_G OMMAND _SYNTAX	BAD_REFERENCE_NUMBER_FORMAT
validity_start_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_end_date /	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
price	BAD_COMMAND_SYNTAX	BAD_PRICE_FORMAT

Gateway interface concerned



8.5 Command 304: modify service product

Description

The product based on a service is modified in the IMS database.

Syntax

Command 304: Modify service product				
Field	byte	format	Description	
command_ID	4	0304	command_ID = 304	
IMS_product_ID	12	00000000000	IMS product ID	
		99999999999		
service_UID	5	00000 99999	IMS service UID	
reference_number	4	0000 9999	Reference number for	
		_	customer order	
name	80	Alpha/Num	Product name	
description	250	Alpha/Num / /	Product description	
validity_start_date	8	YYYYMMDD/ />	Validity start date	
validity_end_date	8	YYYYMM/DIQ / /	Validity end date	
price	5	00000 99999 /	Price of the product	
			representing the range	
			\$000.00 to \$999.99	

Note: IMS_product_ID identifies the product; service_UID allows to change the service the product is based on.

SMS Acknowledge

Field	Error codes	Error codes extension	
	DATABASE_ERROR		
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID	
IMS_PRODUCT_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT	
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE	
service_UID	BAD_COMMAND_SYNTAX	BAD_SERVICE_UID_FORMAT	
	SERVICE_NOT_FOUND	NO_EXTENDED_ERROR_CODE	
reference_number	BAD_COMMAND_SYNTAX	BAD_REFERENCE_NUMBER_FORMAT	
validity_start_date/	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT	
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE	
validity_end_date \	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT	
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE	
price	BAD_COMMAND_SYNTAX	BAD_PRICE_FORMAT	

Gateway interface concerned



8.6 Command 305: Create service package product

Description

The product that is a package of services is created in the IMS database. Command 1000 is returned with IMS_product_ID. The number of services and their values is constrained by the fact that a product may require up to 3 rights.

Syntax

Command 305: Create service package product			
Field	byte	format	Description
command_ID	4	0305 /	command_ID = 305
SMS_product_ID	12	000000000000 to 9999999999999	SMS_package_ID
reference_number	4	0000 9999	Reference number for customer order
name	80	Alpha/Num	Product name
description	250 /	Alpha/Num	Product description
validity_start_date	8 / (YYYYMMDD	Validity start date
validity_end_date	8	YYYYMMDD	Validity end date
price	5	00000//99999	Price of the product representing the range \$000.00 to \$999.99
service_number	3	000 500	Number of services included in the package
for (I=1; I <= service_number; I++) {		Y /	
Service_UID	5	√00000 99999	IMS service UID
}			

SMS Acknowledge

Field	Error codes	Error codes extension
	DATABASE_ERROR	
command_ID	BAD_G QMMAND _SYNTAX	BAD_COMMAND_ID
SMS_product_ID	BAD_COMMAND_SYNTAX	BAD_SMS_PRODUCT_ID_FORMAT
	PRODUCT_ALREADY_EXISTS	IDENTICAL_PRODUCTS
	PRODUCT_ALREADY_EXISTS	DIFFERENT_PRODUCTS
reference_number /	BAD_COMMAND_SYNTAX	BAD_REFERENCE_NUMBER_FORMAT
validity_start_date \(\)	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
price	BAD_COMMAND_SYNTAX	BAD_PRICE_FORMAT
service_number	BAD_COMMAND_SYNTAX	BAD_SERVICE_NUMBER_FORMAT
	TOO_MANY_ITEMS	maximum item #
service_UID	BAD_COMMAND_SYNTAX	BAD_SERVICE_UID_FORMAT
	SERVICE_NOT_FOUND	NO_EXTENDED_ERROR_CODE







8.7 Command 306: modify service package product

Description

The product that is a package of services is modified in the IMS database. The number of services and their values is constrained by the fact that a product may require up to 3 rights.

Syntax

Command 306: Modify service package product				
Field	byte	format	Description	
command_ID	4	0306	command_ID = 306	
IMS_product_ID	12	000000000000	1MS product ID	
		to		
		99999999999		
reference_number	4	0000 9999	Reference number for	
			customer order	
name	80	Alpha/Num	Product name	
description	250 /	/Alp/na/Num	Product description	
validity_start_date	8 / (YYYYMMDD	Validity start date.	
validity_end_date	8	YYYYMMDD	Validity end date.	
price	5	00000//99999	Price of the product	
			representing the range	
			\$000.00 to \$999.99	
service_number /	3	000 999	Number of services	
			included in the package	
for (I=1; I <= service_number; I++) {		/ /		
Service_UID	5	√00000 99999	IMS service UID	
}				



IMS Acknowledge

Ē			
Field	Error codes		Error codes extension
	DATABASE_ERROR		
command_ID	BAD_COMMAND_SYNTAX		BAD_COMMAND_ID_
IMS_product_ID	BAD_COMMAND_SYNTAX		BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND		NO_EXTENDED_ERROR_CODE
reference_number	BAD_COMMAND_SYNTAX		BAD_REFERENCE_NUMBER_FORMAT
validity_start_date	BAD_COMMAND_SYNTAX		BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX		BAD_DATE_SÈQUENCE
validity_end_date	BAD_COMMAND_SYNTAX		BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX		BAD_DATE_SEQUENCE
price	BAD_COMMAND_SYNTAX		BAD_PRICE_FORMAT
service_number	BAD_COMMAND_SYNTAX		BAD_SERVICE_NUMBER_FORMAT
	TOO_MANY_ITEMS		maximum item #
service_UID	BAD_COMMAND_SYNTAX	_	BAD_SERVICE_UID_FORMAT
	SERVICE_NOT_FOUND		NO_EXTENDED_ERROR_CODE





8.8 Command 307: Create event package product

Description


The product that is a package of events is created in the IMS database. The validity start_date and validity end_date are stored in the IMS database. Then the command 1000 is returned with IMS_product_ID.

If for any reason, when the EPG enters the validity dates and range, and there is no event with the SMS_event_ID, then Command 209 (null event error) is reported to the SMS.

The number of events and their values is constrained by the fact that a product may require up to 3 rights.

Syntax

Command 307: Create event package product				
Field	byte	format	Description	
command_ID	4 /	0307	command_ID = 307	
SMS_product_ID	12	00000000000	SMS product ID	
		to		
		99999999999		
reference_number	4 /	9000/9999	Reference number for	
			customer order	
name	80	Alpha/Num	Product name	
description	250	Alpha/Num	Product description	
validity_start_date //	8	YYYYMMDD	Validity start date.	
validity_end_date / <	8	YYYYMMDD	Validity end date.	
price	5	00000 99999	Price of the product	
	\sim /		representing the range	
			\$000.00 to \$999.99	
event_number	3	000 999	Number of events	
	\searrow		included in the package	
for (I=1; I <= event_number; I++/) { / /				
SMS_event_ID	12	00000000000	SMS event ID	
		to		
		99999999999		
}				
tokens	4	0000 to 9999	Number of available prepaid tokens	

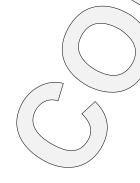




SMS Acknowledge

	1_	
Field	Error codes	Error codes extension /
	DATABASE_ERROR	
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID_FORMAT
SMS_product_ID	BAD_COMMAND_SYNTAX	BAD_SMS_PRODUCT_ID_FORMAT
	PRODUCT_ALREADY_EXISTS	IDENTICAL_PRODUCTS
	PRODUCT_ALREADY_EXISTS	DIFFERENT_PRODUCTS
reference_number	BAD_COMMAND_SYNTAX	BAD_REFERENCE_NUMBER_FORM
		AT/ /
validity_start_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_end_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
price	BAD_COMMAND_SYNTAX	BAD_PRICE_FORMAT
event_number	BAD_COMMAND_SYNTAX	BAD_EVENT_NUMBER_FORMAT
_	TOO_MANY_ITEMS	maximum item #
PPV_number	BAD_COMMAND_SYNTAX />	BAD_PPV_NUMBER_FORMAT
SMS_event_ID	BAD_COMMAND_SYNTAX//	BAD_SMS_EVENT_ID_FORMAT
	SMS_EVENT_ID_NOT_FØUND/ /	NO_ERROR_CODE_EXTENSION
	PRODUCT_ON_NON_PPV_EVENT	NØ_ERROR_CODE_EXTENSION
tokens	BAD_COMMAND_SYNTAX	BAD_TOKEN_NUMBER_FORMAT








8.9 Command 308: modify event package product

Description

The product that is a package of events is modified in the IMS database.

Syntax

Command 308: Modify event package product			
Field	byte	format / <	Description
command_ID	4	0308	command_ID = 308
IMS_product_ID	12	000000000000	TMŞ product ID
		to	
		99999999999	
reference_number	4	0000 9999	Reference number for
			customer order
name	80	Alpha/Num	Product name
description	250	Alpha/Num	Product description
validity_start_date	8 / /	YYYYMMDD	Validity start date.
validity_end_date	8 / (YYYYMMDD	Validity end date.
price	5	0000//99999	Price of the product
		/	representing \$000.00 to \$999.99
avant number	/2	000 999	•
event_number	/3/	000 999	Number of events included in the package
for (I=1; I <= event_number; I++) {)	included in the package
SMS_event_ID	12	000000000000	SMS event ID
		to	
		99999999999	
}	>		
tokens	4	0000 to 9999	Number of available
			prepaid tokens

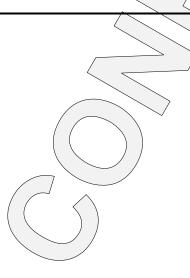




SMS Acknowledge

Field	Error codes	Error codes extension
	DATABASE_ERROR	
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID_FORMAT
IMS_product_ID	BAD_COMMAND_SYNTAX	BAD_IMS_PRODUCT_ID_FORMAT
	PRODUCT_NOT_FOUND	NO_EXTENDED_ERROR_CODE
reference_number	BAD_COMMAND_SYNTAX	BAD_REFERENCE_NUMBER_FORMAT
validity_start_date	BAD_COMMAND_SYNTAX	BAD_DATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
validity_end_date	BAD_COMMAND_SYNTAX	BAØ_ØATE_FORMAT
	BAD_COMMAND_SYNTAX	BAD_DATE_SEQUENCE
price	BAD_COMMAND_SYNTAX	BAD_PRICE_FORMAT
event_number	BAD_COMMAND_SYNTAX	BAD_EVENT_NUMBER_FORMAT
	TOO_MANY_ITEMS	maximum item #
PPV_number	BAD_COMMAND_SYNTAX <	BAD_PPV_NUMBER_FORMAT
SMS_event_ID	BAD_COMMAND_SYNTAX /	BAD_EVENT_ID_FORMAT
	SMS_EVENT_ID_NOT_FOUND	NO_ERROR_CODE_EXTENSION
tokens	BAD_COMMAND_SYNTAX / /	BAD_TOKEN_NUMBER_FORMAT







8.10 Command 309: Update event PPV number

Description

Update the event PPV_number in the IMS database. If the PPV_number is set to 0 (zero), then the PPV_number cannot be used in any event product or event package product.

This command must be used to set the PPV_number to 0 (zero) when all event products and packages have been removed by the SMS for this event. Failing to do so may cause the event to be broadcast as a PPV, while no event product and no event package exists for this event.


Syntax

Command 309: Update event PPV number				
Field	byte	format / Description /		
command_ID	4	0309 command_ID = 309		
SMS_event_ID	12	000000000000 to SMS event ID 99999999999999999999999999999999999		
PPV_number	7	0000000 to Pay per view number 9999999		

SMS Acknowledge

Field	Error codes	Error codes extension
	DATABASE_ERROR / /	
command_ID	BAD_COMMAND_SYNTAX	BAD_COMMAND_ID
SMS_event_ID	BAD_COMMAND_SYNTAX /	/BAD_SMS_EVENT_ID_FORMAT
PPV number	BAD COMMAND SYNTAX	BAD PPV NUMBER FORMAT

Gateway interface concerned

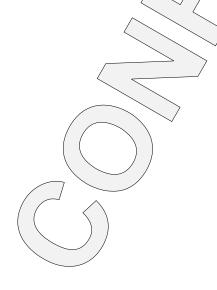



9. Appendix: SMS OPERATION Commands

9.1 Command 1000: Acknowledge Command

Description


The command specified has been completed without error. If the command being acknowledged with the command 1000 contained a SMS_product_ID, the fields IMS_product_ID and SMS_product_ID of the acknowledgment command will be documented. In all other cases, these fields will be set respectively to 000000000000 and 00000000000.

Syntax

Command 1000: Acknowledge Command				
Field	byte	format Description		
command_ID	4	1000command_ID = 1000		
transaction_ number	9	000000000 to transaction number acknowledged		
IMS_product_ID (if applicable)	12	000000000000 to IMS product ID 99999999999999999999999999999999999		
SMS_product_ID (if applicable)	12	00000000000000000000000000000000000000		

Gateway interface concerned

ΑII

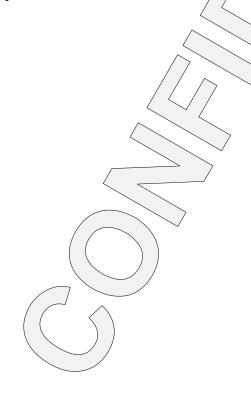



9.2 Command 1001: Non-acknowledge Command

Description


The command specified could not be completed.

Syntax

Command 1001: Non-Acknowledge Command				
Field	byte	format	Description	
command_ID	4	1001	command ID = 1001	
transaction_ number	9	000000000	transaction_number acknowledged	
		999999999		
nack_status	1	1 2	1 = REJECTED means that the command	
		_	has been rejected.	
			2 = POSTPONED means that the command	
			could not be completed because of a	
		/ >	technical problem in the addressable system	
		// /	(SMS, SAS, CC or IMS database).	
		/ / /	In this case, the command should be	
			resubmitted after a time delay.	
error_code	4	0000 9999	Main error code	
			(PRODUCT_NOT_FOUND,	
			BAD_COMMAND_SYNTAX,)	
error_code_ext	4	0000 / Ø999	Extension error code	
			BAD_DATE_FORMAT,	
			BAD_IMS_PRODUCT_ID_FORMAT,)	
length_of_command_b	3	000 999		
ody				
command_section	/		command section of the command that	
		K / /	caused the error.	



All

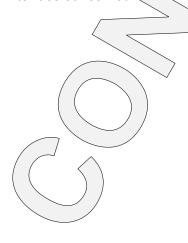




9.3 Command 1002: No Command

Description

This command will be transmitted when no other commands are sent. It allows both systems SMS and SMS Gateway to check anytime the communication layer.

Syntax

Command 1002:	No Cor	nmand	
Field	byte	format	Description
command_ID	4	1002	command_ID \(\preceq 1/002\)

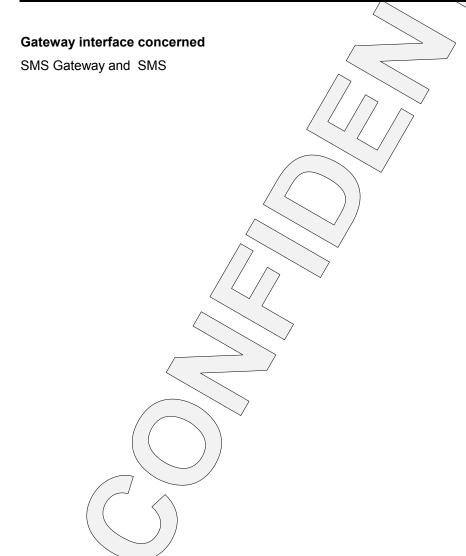



10. Appendix: Device_IO Protocol

10.1 Overview

The Device_IO protocol manages communications between applications running on the same or on different machines. It is based on the notion of server. Device IO is a protocol that runs on top of TCP/IP.

Communications are established through entry points called services. An application wishing to establish a communication with another one must specify the service name it wants to communicate through.

For Device_IO communications between applications running on different machines, a communication must first be established at the TCP/IP transport level.

To manage a communication between two systems the following questions must be addressed:

- How to establish the communication with a Device_IO server and how to indicate for which internal client the communication is intended.
- How to transmit and receive data to or from a Device 10 server.

Nagravision will provide two IP port numbers created by the SMS Gateway process. The first will be used to send commands from SMS to the SMS-Gateway as EMM commands, control commands and product definition commands. The second one will be used to receive commands from the SMS-Gateway, as feedback commands.

In the following description, the commands used (open, send, receive, listen, close) are the commands of the underlying transport protocol used (TCP/IP). Device_IO does not redefine these commands. The names used below, open, send, receive, listen and close are generic names representing the corresponding available system calls. Consequently, the calls described below only show their Device_IO parameters. Transport protocol parameters (like socket pointers for instance) are not shown in the generic description of the calls. An example of how a client can initiate a connection (on top of TCP) is given in section 121.

Parameter description

call_address	Full address of the Device_IO server entry point. The call address contains the full specification of the server machine address (node name) and the TCP-IP port			
	number.			
len	length of the message to be sent or received (in bytes) following the length field. The first transmitted byte is the most significant byte. Len = (MSB, LSB).			
data	user data to send or receive during normal information exchanges (after connection			
data	setup). data is a string of bytes of length at least 0 and at most 32767.			
op mode	Data transfer operation mode			
'-	0 = Normal data transfer (allow message tracing)			
	1 = Fast-data transfer (do not allow message tracing)			
obj_name_len /	Length of the object name attribute (in bytes).			
obj name /	Name of the applicative service to which the connection should be made. Obj name			
	must be a string of bytes at least one byte long and at most 32 byte long:			
	1 <= obj_name_len <= 32. This Name is compulsory but its content is up to the client.			
user_data_c	User data supplied by the client to the server. May contain information to help the server			
	deciding whether the communication should be accepted or rejected. user data c is a			
	string of bytes whose length is at least 0 and at most 1024.			
connect_status	Connection status (see the connection status code table)			
answer_code	Specify whether the communication is accepted or rejected (only if the			
_	connection status is success)			



	0 = call accepted 1 = call rejected	
user_data_s	User data sent by the Device_IO server to user_data_c is a string of bytes whose length is	

10.1.1 Establishing a connection with a Device IO server

To open a communication with a Device_IO server, an application must call the Device_IO server. Two parameters must be given:

- 1. The machine name on which the server is running
- 2. The port number (TCP-IP) corresponding to the Device_IO server.

Once the communication with the server has been established, the name of the target service possibly along with user data, should be communicated to the Device_IO server in order to establish a link between the calling client and the requested service.

As a reply the server will send one or two messages. The first message contains a connection status and, if the communication attempt has been successful, a second message will specify whether the call has been accepted or rejected.

10.1.1.1 Operations

To open a communication with the Device_IO server, the following operations must be done in sequence by the client application.

10.1.1.1.1 call the server

open <call address> send message_1

Syntax of message 1

Syntax	Bits	Format
len	16	uimsbf
op_mode	8	uimsbf
ob_name_len	8	uimsbf
for (I=0; I <ob_name_len; [i]="" i++)="" obj_name="" td="" {="" }<=""><td>8</td><td>uimsbf</td></ob_name_len;>	8	uimsbf
for (J=I; I <len-2; [j]="" i++,="" j++)="" td="" user_data_c="" {="" }<=""><td>8</td><td>uimsbf</td></len-2;>	8	uimsbf

10.1.1.1.2 wait for the answer

receive message 2

if status = success :

receive message 3



Syntax of message 2

Syntax	Bits	Format
len	16	'000000000000 0000 1'
connect_status	8	uimsbf

Syntax of message 3

Syntax	Bits Format
len	16 uimsbf
answer_code	/ / 8 uimsbf
ob_name_len	8 ujmsbf
for (I=0; Ien-1; I++) {	
user_data_s [l]	8 uimsbf
}	

The first answer is generally immediate as it comes directly from the Device_IO server itself (within a second). The second answer may take longer as it comes from the client application.

10.1.2 Data exchange between client and server

10.1.2.1 Operations

10.1.2.1.1 send data toward the Device 10 server

send message 5

Syntax of message 5

Syntax	Bits	Format
len	16	uimsbf
for (I=0;I<=len-1; I++) { data [I] }	8	uimsbf

10.1.2.1.2 receive data from the Device_IO server

receive message_5

10.1.3 Status code table

Connection status identifier	Code (hex)	Description
CONNECT_FAILURE	00	The connection has failed for any unexpected reason.
ERROR_PROROCOL	02	There was a protocol error during the communication establishment or during data transfer (see the remark below).
LINK_HANDLER_BUSY	04	The link handler is busy. The communication cannot be established at this moment



NO_FREE_LINK	05	There is no available free link.
SUCCESS	06	The operation has been successfully done.
UNKNOWN SERVICE	09	The specified service is unknown

The protocol error status is returned for any of the following event:

- 1) The data length field does not match the actual data length.
- 2) The operation mode, the answer code or the connection status has an unexpected value.
- 3) Any situation that would raise an error on received or transmitted data (message too long...).

10.2 Example: connecting to a Device_IO server

An example of a client opening a connection with a Device_IQ server from a C program follows:

```
struct device_call {
                                                          define the structure needed to hold the parameters
            short int
                                                          to send messages.
                                len:
            unsigned char
                                op_mode;
            unsigned char
                                obj name len;
            char
                                obj_name[32];
                                user_data[255];
            char
}
struct device_call device_call;
struct device_status {
                                                   define the structure needed to hold the device io status
            short int
                                len;
            unsigned char
                                status
}
struct device_status device_status
struct device answer {
                                                   define the structure needed to hold data received
                                                   from the Device IO link when the server is first answering
            short int
                                len;
            unsigned char
                                code:
            char
                                data[1025]
}
struct device_answer device_answer;
struct device data {
                                                   define the structure needed to hold data received
            short int
                                                   from the Device IO link during subsequent communication
                                len;
                                data[1025];
            char
                                                   exchanges.
}
struct device data device data;
main ..... {
int I, channel, status:
tcp_connect ("machine1", "TCP_IP_SERVICE", &channel, &status);
                                                                create a TCP-IP socket, pass the name of the
```



machine and the name of the service with which a communication must be established. device call.op mode = 0; choose normal data transfer. strcpy (device call.obj name, "SERVICE NAME"); and device call.obj name len = strlen (device call.obj name); document the device call structure len = device call.obj name len + 1 + 1; I = write (channel, &device call, len); write the device_call structure. recv (channel, &device_status, 3, 0); receive from the device_server a device_status. read (channel, &device_answer, sizeof (struct device_answer)); assuming the status indicated a success, receive from the server the first answer. read (channel, &device data, sizeof (struct device data)); Past the first answer, read data sent from the Device IO server into the device data structure. Send data to the Device_IO server. write (channel, &device_data, sizeof (struct device_data));