Project Documentation

Commodore 1541 VIA/Parallel-Adapter

Project number: 148

Revision: 0

Date: 19.08.2020

Commodore 1541 VIA/Parallel-Adapter Rev. 0

Module Description

Introduction

This adapter board serves as a VIA (6522) adapter for a parallel connection for SpeedDOS in conjunction with a suitable ribbon cable and the User Port Parallel-Adapter (Project 150).

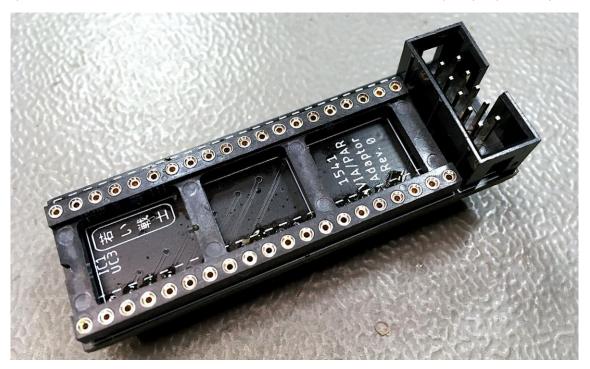


Figure 1: Commodore 1541 VIA/Parallel-Adapter

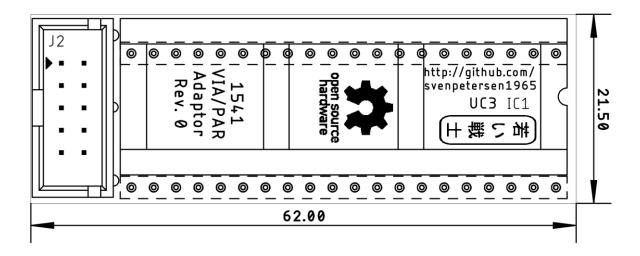


Figure 2: Dimensions

The box connector (2x5 way, 2.54mm pitch) has the following pinout:

VIA (pin)	J2	J2	VIA (pin)
CA2 (39)	1	2	PA0 (2)
PA1 (3)	3	4	PA2 (4)
PA3 (5)	5	6	PA4 (6)
PA5 (7)	7	8	PA6 (8)
PA7 (9)	9	10	CB1 (18)

The via for the parallel data transmission in a 1541 is UC3.



Figure 3: VIA-Parallel-Adapter installed in a 1541

Installation

Three issues have to be taken care of, when installing the VIA-Parallel-Adapter:

- The VIA (UC3) should be socketed
- The adapter has to be oriented properly (align the notch of the IC, the adapter and the socket on the 1541 PCB
- The pins of box connector on the solder side must not make contact with any component leads

The latter issue can be caused by the leads of C28. This is a 100n capacitor, which can be replaced with a smaller, modern capacitor. In case it is a disc capacitor like in Figure 3, it can be bent over. The adapter has to sit firmly in the socket, though.



Figure 4: Secured ribbon cable

19.08.2020 14:08

Doc.-No.: 148-6-01-00

It is a good idea to secure the ribbon cable with an adhesive cable post and a cable tie for strain relief, after the configuration is fully functional (Figure 4). A ribbon cable exiting the case through the breakout for the fuse is pretty common, I did not experience any problems with it, but one person reported a possible source of problems, here.

An alternative way of exiting the case is the left side of the case. A breakout for the ribbon cable has to be filed into the case, though.

The cable making with IDC connectors does not require any special tools, except a (small) vice for compressing the connector after the ribbon cable was inserted properly. In case you don not feel comfortable with this work, consult this write up about cable making: http://tech.guitarsite.de/cable_making.html#Ribbon%20Cables

Assembly

The Assembly of the VIA-Parallel-Adapter is fairly simple. The precision round pin headers on the solder side need to be aligned to be straight and in the proper distance. For this purpose, the cut strips have to be inserted into the DIP-socket before soldering. Their alignment needs to be checked. They should be fully inserted into the socket and the PCB should be perpendicular. After soldering the pin stripes, the DIP-40 socket can be removed and soldered in on the top side. Some of soldered pins of the pin strips might require to be shortened. The DIP-40 socket should sit straight on the PCB.

Finally, the box connector can be soldered.

The pins of the precision pin strips are pretty delicate and brittle. They should not be bent much, so care must be taken before and while installing them in the socket of the 1541. Square headers must not be used instead, because those might break the sockets and do not sit well in the socket, either.


Revision History

Rev. 0


 Prototypes fully functional. For testing consult the documentation of the User Port/Parallel Adapter (Project 150).

19.08.2020 14:08


Doc.-No.: 148-6-01-00

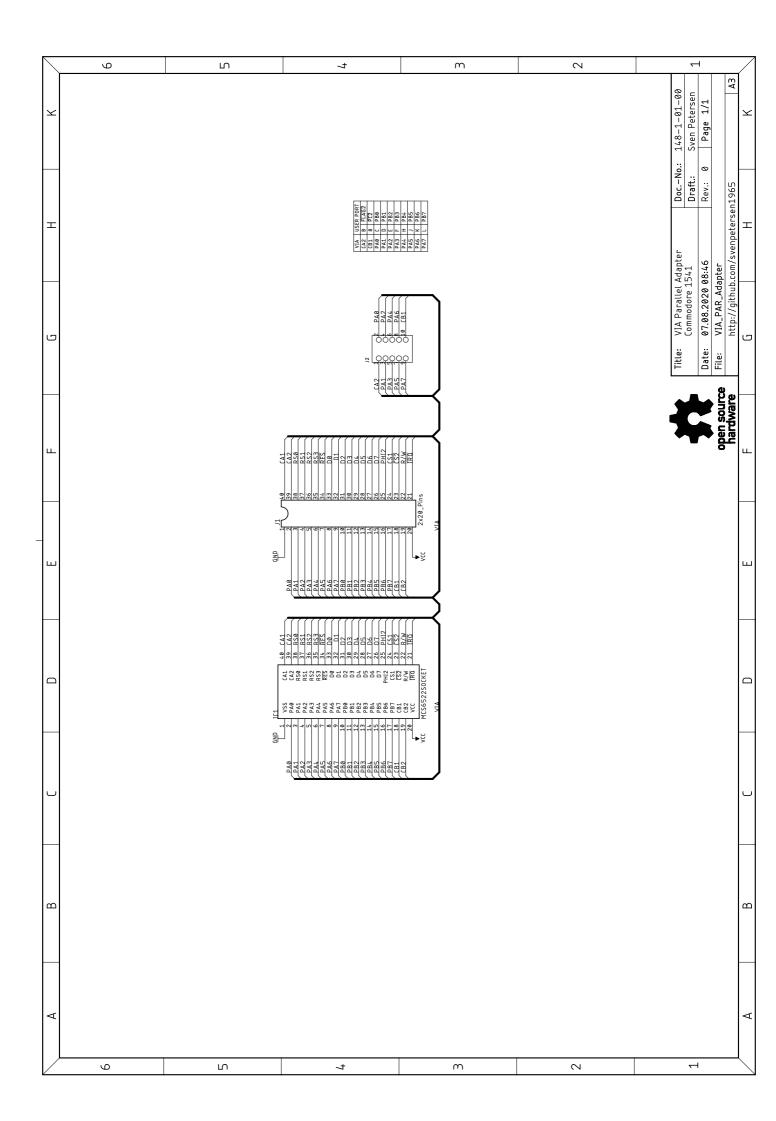


Sven Petersen	DocNo.: 1	48-2-01-00
2020	Cu: 35µm	Cu-Layers: 2
VIA_PAR_Adapter		
07.08.2020 08:52		Rev.: 0
placement component	side	

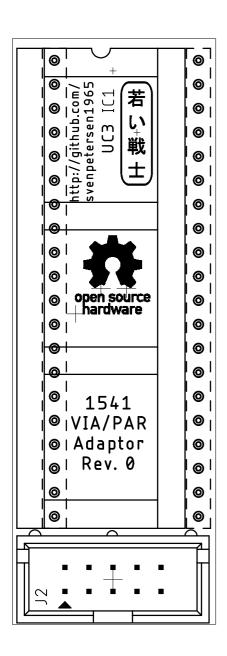


Sven Petersen	DocNo.: 1	48-2-01-00
2020	Cu: 35µm	Cu-Layers: 2
VIA_PAR_Adapter		
07.08.2020 08:52		Rev.: 0
	e sarid e	placement æ ørlide

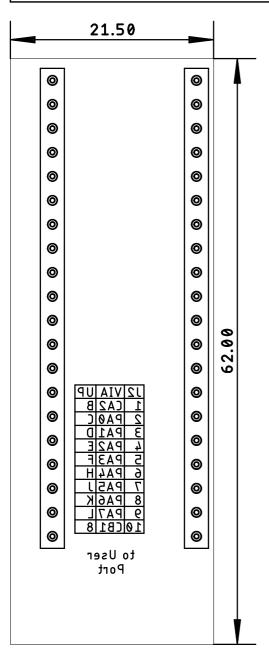


Sven Petersen	DocNo.:	148-2-01-00
2020	Cu: 35µm	Cu-Layers: 2
VIA_PAR_Adapter		
06.06.2020 14:36		Rev.: 0
top		

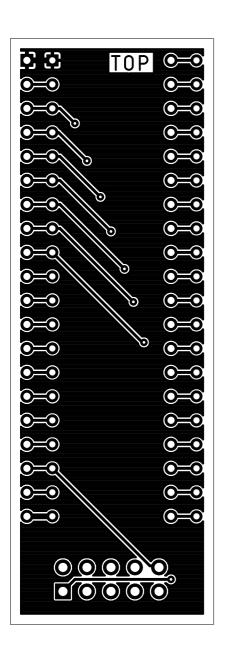

Sven Petersen	Doc	No.: 1	48-2-	01-00
2020	Cu:	$35\mu m$	Cu-La	yers: 2
VIA_PAR_Adapter				
06.06.2020 14:36			Rev.:	0
bottom				

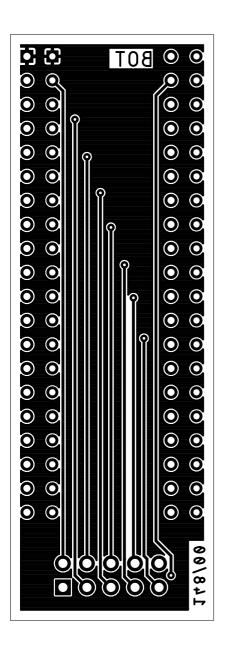


Sven Petersen	DocNo.: 1	48-2-01-00
2020	Cu: 35µm	Cu-Layers: 2
VIA_PAR_Adapter		
06.06.2020 14:40		Rev.: 0
stopmask component	side	

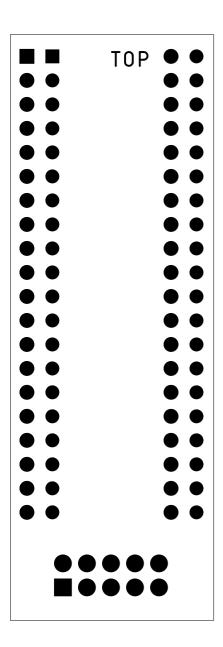


Sven Petersen	Doc	No.: 1	48-2-	01-00
2020	Cu:	$35\mu m$	Cu-La	yers: 2
VIA_PAR_Adapter				
06.06.2020 14:40			Rev.:	0
stopmask solder side				

	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •
• •	• •

Sven Petersen	DocNo.: 1	48-2-01-00
2020	Cu: 35µm	Cu-Layers: 2
VIA_PAR_Adapter		
07.08.2020 08:52		Rev.: 0
placement component	:side mea	sures

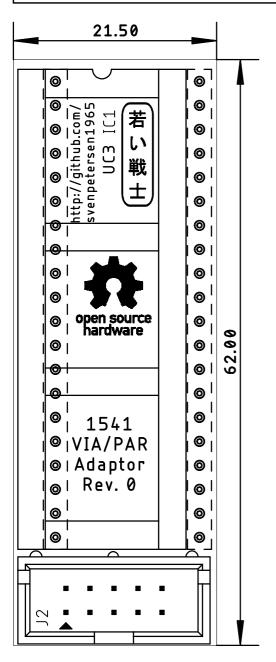

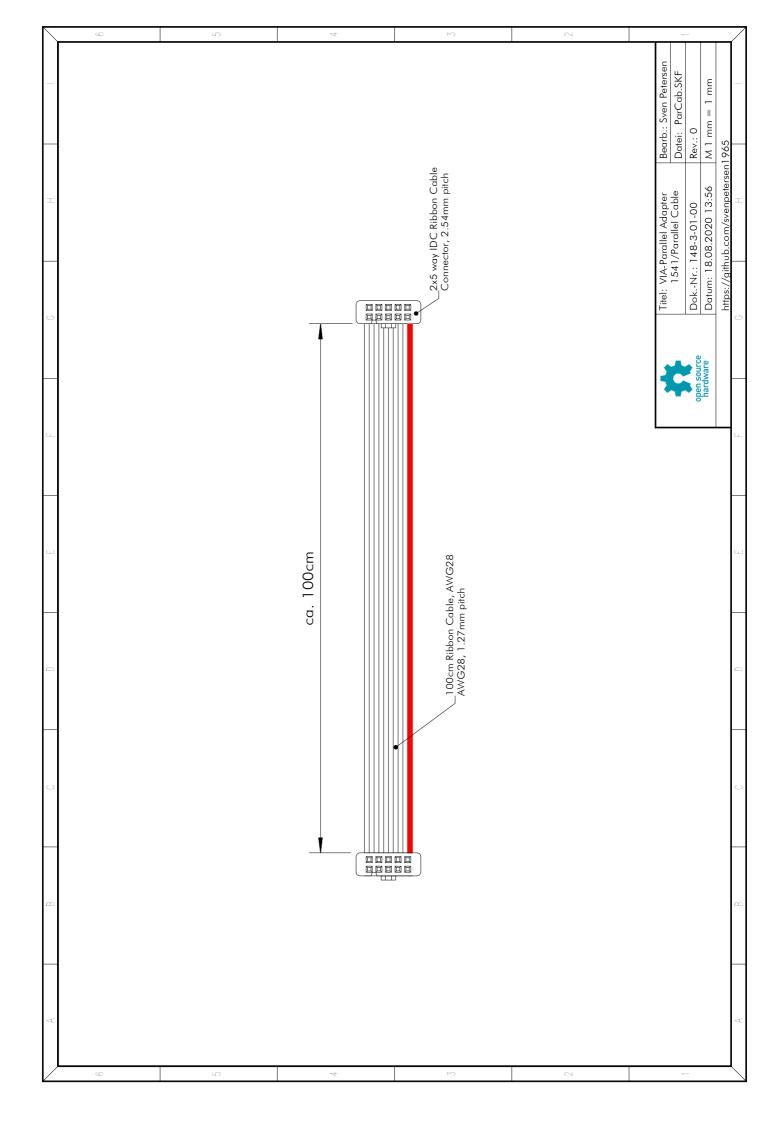

Commodore 1541 VIA/Parallel-Adapter Rev. 0 Bill of Material Rev. 0.0

Pos.	Qty Value	Footprint	RefNo.	Comment
_	1 148-2-01-00	2 Layer	PCB Rev. 0	2 layer, Cu 35µ, HASL, 62.0mm × 21.5mm, 1.6mm FR4
2	1 2x5 box connector	2X05WV	J2	e.g. Reichelt WSL 10G
က	1 two Pinstrip, precision	DIL40_PINS_SS	11	Precision Round pins mandatory! E.g. Reichelt BKL
	round pins, cut to 20 pins			10120540 or
	length			
4				10PCS Single Row 40Pin 2.54mm Round Male Pin Header
				machined
2	1 40p DIP Socket	GS40P	IC1	Dual In Line Socket, e.g. Reichelt: GS40P
9	2 10p IDC receptable,		(12)	e.g. Reichelf RND 205-00682
	2,54mm			
7 1m	10p/AWG28/1,27mm			Ribbon cable. See drawing 148-3-01-**

19.08.2020 14:38 Doc.No.: 148-5-01-00.0