



Hadron Energy

OPERATIONAL SAFETY BRIEFING

# Boiling Crisis & Subchannel Analysis

Engineering & Safety

PREPARED BY:  
**Lander Ibarra**

DATE:  
**February 10, 2026**

## Briefing Objectives

- **Define the Threat:** Physics of boiling crisis (PWR DNB vs BWR Dryout).
- **Quantify Margins:** Deconstruct DNBR/CPR and statistical limits.
- **Methodology:** 3-Field discretization in modern subchannel codes.

## Key Deliverables

- Technical alignment for engineering & operations.
- Validated transient response workflow.

## Operational State

**STATUS: GREEN**  
Normal Operation

**STATUS: YELLOW**  
Margin Erosion

**STATUS: RED**  
Limit Exceeded

**The Definition:** A sudden transition from efficient nucleate boiling to an inefficient film boiling regime, causing a rapid, potentially destructive cladding temperature excursion.

## Primary Drivers:

- **Heat Flux ↑:** Power maneuvers, peaking factors, crud.
- **Cooling ↓:** Flow coastdown, depressurization, loss of subcooling.
- **Geometry:** Spacer grid deformation, flow blockage.

## Critical Terminology

Nucleate Boiling → Film Dryout → Wall Superheat. *The transition is non-linear and cliff-like.*

## Safety Targets:

- Cladding Integrity (PCT Limits).
- Fuel Rod Geometry (No ballooning).
- Regulatory Compliance (GDC).

# CHF vs. Boiling Crisis


## Terminology

- **CHF (Critical Heat Flux):** The maximum heat flux where the wall maintains continuous liquid contact.
- **Boiling Crisis:** The post-CHF regime characterized by vapor blanketing.

## Regime Classification:

PWR: **DNB** (Departure from Nucleate Boiling). Subcooled/Low quality.

BWR: **Dryout**. High quality annular flow (liquid film depletion).

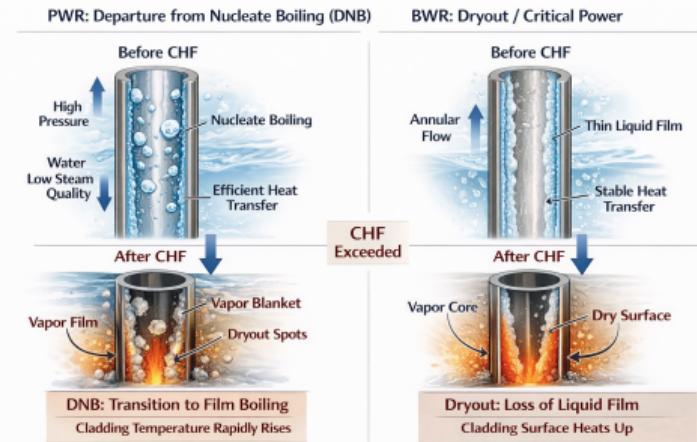

Reference <https://nuclear-power.com/wp-content/uploads/2016/06/Dryout-DNB-min.png>

Comparison of bubble dynamics (Source: nuclear-power.com)

## Governing Physics

- 1 **Pressure:** Influences saturation temp, fluid properties, and bubble dynamics.
- 2 **Mass Flux ( $G$ ):** Drives convective cooling, entrainment, and rewetting.
- 3 **Quality ( $x$ ) / Subcooling:** Defines the thermodynamic state along the boiling curve.

## Heuristics:

- **PWR DNB:** Driven by local heat flux vs. bubble crowding.
- **BWR Dryout:** Driven by integral power vs. film inventory.

## Control Room Monitors

- Pressurizer Pressure
- Loop/Core Flow
- Axial Flux Difference (AFD)
- $F_{\Delta H} / F_Q$


RULE: Margin  $\downarrow$  if Power  $\uparrow$  or Flow  $\downarrow$

## Mechanism:

- Intense nucleate boiling creates bubble crowding at the wall.
- Liquid supply to the surface is choked off.
- Vapor blanket insulates the rod, causing temperature excursion.

## Location:

- Hot channel (highest radial peaking).
- Usually slightly downstream of peak power (enthalpy effect).

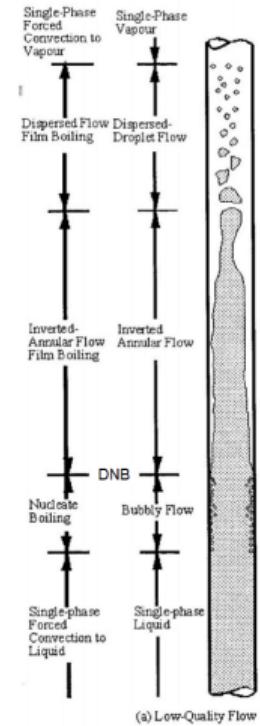


## Mechanism:

- Annular flow regime: Vapor core, liquid film on wall.
- Film is depleted by evaporation and entrainment (droplet stripping).
- When film thickness  $\rightarrow 0$ , dryout occurs.

## Location:

- Typically near the top of the bundle (highest quality).
- Strongly dependent on spacer grid "rewetting" effects.

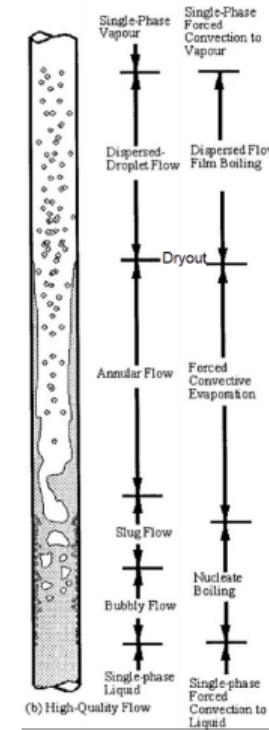


# The Heat Transfer Cliff

## Why CHF Matters:

- **Pre-CHF:** Nucleate boiling provides high Heat Transfer Coefficient (HTC).
- **At CHF:** Critical limit is reached.
- **Post-CHF:** Film boiling (vapor insulation) drops HTC by orders of magnitude.

**CRITICAL**  
Small hydraulic change = Large  $\Delta T$

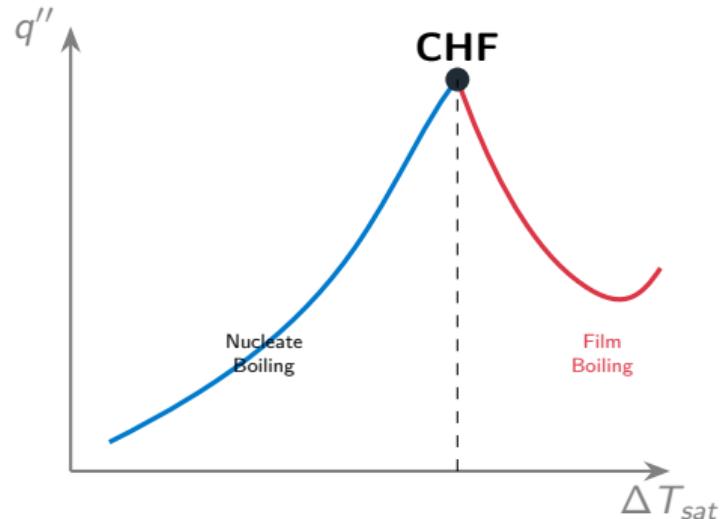

## PWR: DNBR (Ratio)

$$\text{DNBR} = \frac{\text{Predicted CHF}}{\text{Actual Heat Flux}}$$

- **Goal:** Maintain > Limit (e.g., 1.30).
- *Physical Meaning:* Margin against rewet failure.

## BWR: CPR (Ratio)

$$\text{CPR} = \frac{\text{Critical Power}}{\text{Bundle Power}}$$


- **Goal:** Maintain > OLMCPR.
- *Physical Meaning:* Margin against film dryout.

Action: Investigate any downward trend.

**The Resolution Requirement:** Core and assembly-level thermal-hydraulics "smear" properties, masking the local extremes where DNB actually occurs. To accurately model safety limits, the resolution must be refined.

## Nodalization Hierarchy:

- 1 **Core Level:** Coarse nodes (1 node/assembly).  
Sets global Pressure & Flow boundary conditions.
- 2 **Assembly Level:** Identifies the "Hot Assembly" but misses intra-assembly flow redistribution.
- 3 **Subchannel Level:** The required scale to capture **complex local effects**:
  - Local mixing from mixing vanes.
  - Radial crossflows within and between assemblies.

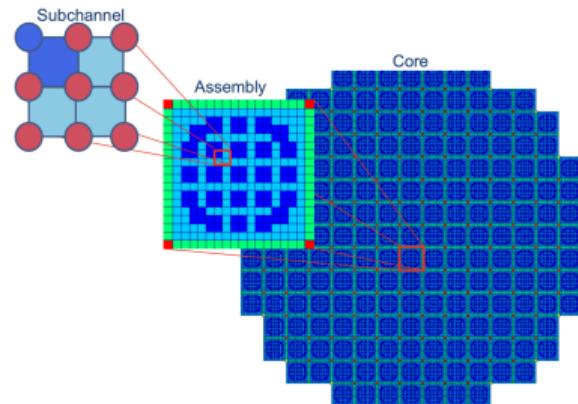


Integrated Scaling Hierarchy

## Definitions:

- **Subchannel ( $i$ ):** The flow area between rods (Control Volume).
- **Gap ( $k$ ):** Lateral connection between subchannels where crossflow ( $w_{ij}$ ) occurs.
- **Rod:** Heat source ( $q''$ ).

*Subchannel codes discretize the entire core into thousands of these parallel channels to find local limits.*

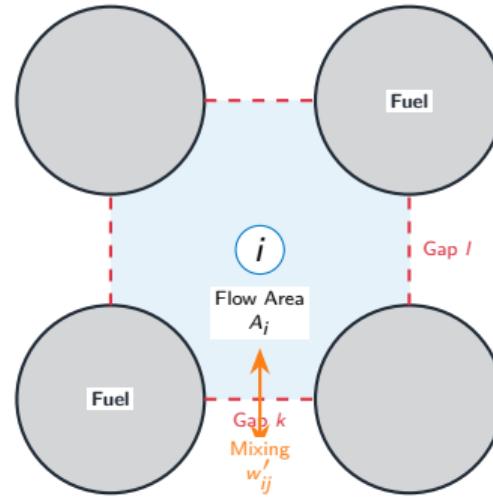

**Overview:** A thermal-hydraulic modeling approach that discretizes fuel assemblies into parallel, coupled flow channels ("subchannels") to solve conservation equations.

## Advantages over CFD:


- Computational efficiency allows full-core analysis.
- Validated correlations for mixing and CHF.
- Industry standard (VIPRE, COBRA, CTF).

## Key Outputs

- Minimum DNBR/MCPR
- Local Quality/Void
- Mass Velocity ( $G_{local}$ )

"Bundle Weather Forecast"


## System Level (RELAP/TRACE)

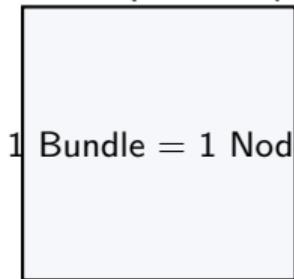

Values are smeared  
average of 200+ rods

- **Resolution:** Coarse (1-D flow).
- **Use Case:** LOCA, plant transients.
- **Blind Spot:** No local peaking visibility.

## Subchannel (VIPRE/CTF)

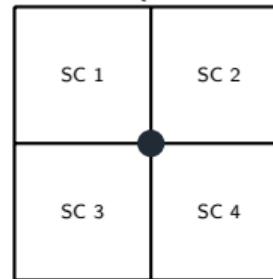


Explicit rod-to-coolant  
heat transfer

- **Resolution:** Fine (pin-level).
- **Use Case:** DNB/Dryout margin.
- **Key Physics:** Turbulent mixing.

**Beyond Homogeneous Equilibrium:** Standard models assume liquid and vapor move together. For BWR dryout, we need more physics.

## The 3 Fields:

- 1 **Continuous Liquid:** The film on the wall.
- 2 **Entrained Liquid:** Droplets in the core.
- 3 **Vapor:** The gaseous core.

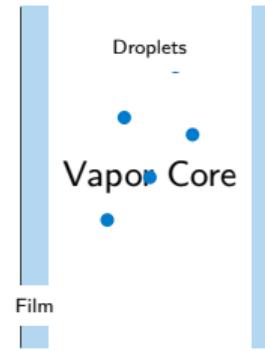

Three separate mass balances per node:

## 1. Vapor Mass

$$\frac{\partial(\alpha_v \rho_v)}{\partial t} + \nabla \cdot (\alpha_v \rho_v \vec{v}_v) = \Gamma_{vap}$$

Vapor generation from evaporation.

## 2. Liquid Film Mass

$$\frac{\partial(\alpha_f \rho_f)}{\partial t} + \nabla \cdot (\alpha_f \rho_f \vec{v}_f) = D - E - \Gamma_{film}$$

D: Deposition of drops to film. E: Entrainment of film to drops.

## 3. Entrained Droplet Mass

$$\frac{\partial(\alpha_d \rho_d)}{\partial t} + \nabla \cdot (\alpha_d \rho_d \vec{v}_d) = E - D - \Gamma_{drops}$$

Dryout happens when Film Mass  $\rightarrow 0$ .

**Momentum Complexity:** We solve momentum for each field, allowing different velocities ( $v_v \neq v_d \neq v_f$ ).

### Interfacial Drag

The fields interact through drag forces:

$$F_i = C_D \frac{1}{2} \rho(v_{rel}) |v_{rel}| A_{int}$$

- Vapor drags droplets up.
- Vapor shears the film surface.

### Operational Impact

If vapor velocity is very high, it shears the film surface, increasing **Entrainment (E)**.

High Entrainment  $\rightarrow$  Thinner Film  $\rightarrow$  Earlier Dryout.

Where does the heat go?

## Film Energy Equation

Heat from the rod enters the liquid film.

- If  $T_{film} < T_{sat}$ : Sensible heating.
- If  $T_{film} = T_{sat}$ : Evaporation ( $\Gamma_{film}$ ).

## Vapor/Droplet Energy

Typically, droplets are assumed to be at  $T_{sat}$ . Vapor can become **superheated** even if droplets exist (non-equilibrium), but in standard dryout analysis, we focus on the film depletion limit.

Critical Logic: Dryout = Integrated Film Depletion

## Conservation Laws (Control Volume $i$ ):

### Mass Conservation

$$\frac{\partial \rho_i}{\partial t} + \frac{\partial(\rho_i u_i)}{\partial z} + \sum_j w_{ij} = 0$$

### Key Terms

- $w_{ij}$ : Diversion crossflow (driven by  $\Delta P$ ).
- $w'_{ij}$ : Turbulent mixing (driven by  $\Delta h$ ).
- $f, K$ : Friction & Form loss.

### Momentum Conservation (Axial)

$$\frac{\partial P}{\partial z} = -\frac{\partial(\rho u^2)}{\partial z} - \left[ \frac{f}{D_h} + K \right] \frac{\rho u^2}{2} - \rho g - \sum_j w_{ij} u^*$$

### Energy Conservation

$$\frac{\partial(\rho_i h_i)}{\partial t} + \frac{\partial(\rho_i u_i h_i)}{\partial z} = q'_{rod} - \sum_j (w_{ij} h^* + w'_{ij} \Delta h)$$

The accuracy of a 3-field code (like COBRA-TF) depends entirely on these empirical models:

## Entrainment (E)

- **Driver:** Vapor shear vs. Surface tension.
- **Effect:** Rips liquid off the wall.
- **Bad for margins.**

## Deposition (D)

- **Driver:** Turbulent diffusion of drops.
- **Effect:** Returns liquid to the wall.
- **Good for margins.**

**Spacer Grids:** Modern spacers are designed to maximize **D** (Deposition) to replenish the film.


## Turbulent Mixing ( $w'$ )

Net zero mass exchange ( $\dot{m}_{net} = 0$ ). Swaps energy and momentum. *Effect:* Cools the hot pin by sharing heat with cooler neighbors.

## Diversion Crossflow ( $w$ )

Net mass movement ( $\dot{m}_{net} \neq 0$ ) driven by pressure gradients (e.g., blockage, boiling expansion).

**Schematic Key:** The top arrow ( $w$ ) shows mass physically leaving one channel for another (Crossflow). The bottom arrows ( $w'$ ) show turbulence swapping equal pockets of fluid (Mixing).

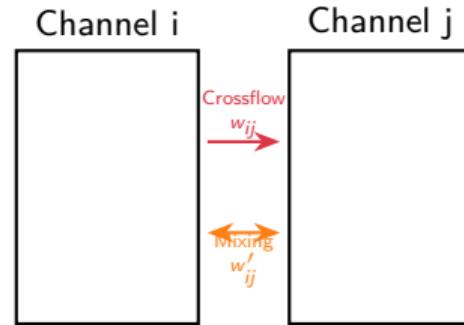


# The Uncertainty Challenge

**The Problem:** Calculating CHF with "nominal" values assumes a perfect world.

## Sources of Uncertainty:

- **Plant Data:** Power, Flow, Temp ( $\pm 2\%$ ).
- **Manufacturing:** Rod pitch, Diameter.
- **Code/Model:** Correlation scatter.

**Plot Meaning:** The solid blue line is the "Perfect" distribution. The dashed red line is the "Real World" distribution. Variances widen the bell curve, pushing the "tail" closer to the failure point (Limit), eating up margin.

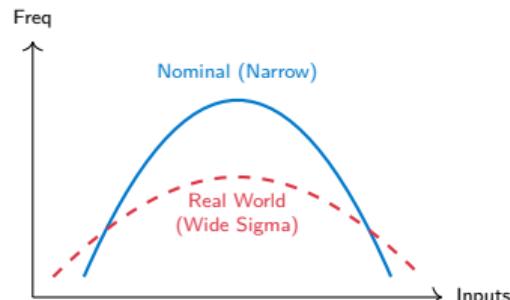


**Impact:** Margin ↓ significantly

## RTDP (Revised Thermal Design Procedure)

- Used in PWRs.
- Combines uncertainties using Root Sum Square (RSS) statistics.
- Result: A single "Design Limit DNBR" (e.g., 1.25).

## Monte Carlo Sampling

- Run subchannel code 1000s of times.
- Randomly sample inputs from PDFs.
- Determine true failure probability.

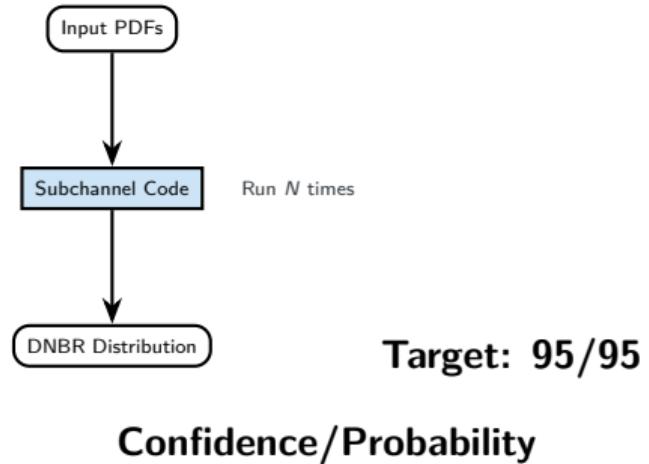

# Operational Response Workflow



P, Flow, Power  
Axial Shape

Run 3-Field Code  
Check Min Film Mass

Margin < Limit?  
Adjust Flow/Power

**Principle: Proactive Margin Management**

## Immediate Actions (Control Room)

- **Reduce Power:** Direct heat flux reduction.
- **Increase Flow:** Improves rewetting and entrainment margin.
- **Shape Control:** Use rods to flatten axial peaks.

## Long-Term Engineering

- **Spacer Design:** Enhance deposition (mixing vanes).
- **Fuel Cycle:** Load patterns to minimize peaking.
- **Chemistry:** Prevent crud buildup.

- **Physics:** It's about liquid contact. DNB (bubbles blocking) vs Dryout (film exhaustion).
- **Modeling:** 3-Field models are essential for high-quality BWR analysis to track the film.
- **Safety:** Margins are statistical. We operate far from the cliff to account for uncertainty.



Hadron Energy Operations

## Key Technical Resources

### ■ Textbooks:

- Todreas, N.E. & Kazimi, M.S. *Nuclear Systems Vol I.*
- Lahey, R.T. & Moody, F.J. *Thermal-Hydraulics of a BWR.*

### ■ Methodology:

- "COBRA-TF: A Three-Field Two-Fluid Model."
- EPRI Reports on CHF correlations.

## Industry Codes

VIPRE-01

COBRA-TF (CTF)

RELAP5-3D