
Department of Computer Science National Tsing Hua University EECS403000 Computer Architecture

Spring 2024, Homework 2 Due date: **April 11, 2024 23:59 pm**


To inspect the Assembly code of the program, follow the steps below.

- (1) Build the program with the Debug configuration.
- (2) Start debugging * the desired program as an Application Program.
- (3) Navigate to the Disassembly view to examine the generated assembly code.
- (4) To insert breakpoints, double-click on the Assembly code or the corresponding C code lines on the left.
- (5) Press Resume in the debug window to proceed to the next breakpoint.

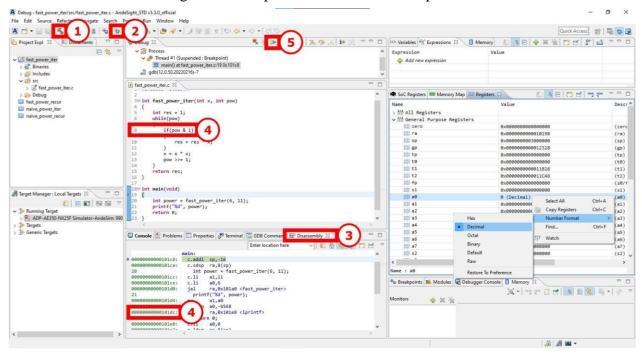

To observe register value changes, Start Debugging * as an Application Program and follow the steps:

- (1) Access the Registers tab and expand the General Purpose Registers section to view their current values.
- (2) Customize the Number format by right-clicking a register and choosing the desired format.
- (3) Add a register to the Expressions tab for convenient monitoring by right-clicking it and selecting Watch.

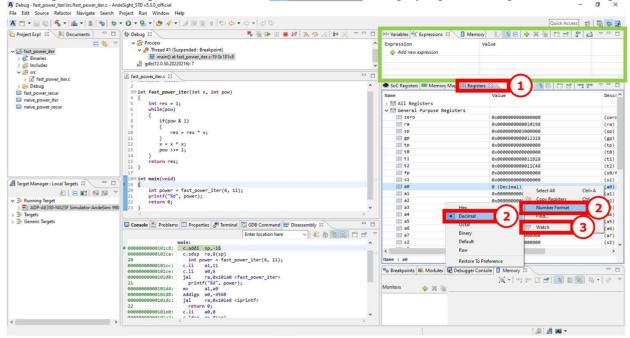

1. (35 points)

This question explores the fast power algorithm implemented in two ways (iterative and recursive) using AndeSightTM with the setup similar to Homework 1. We will analyze the source code for <code>fast_power_iter.c</code> and <code>fast_power_recur.c</code>. The default optimization level is -Og by default unless stated otherwise. For each question, attach screenshots of AndeSightTM to support your answer. No points will be given if the screenshot is missing. Hint: Use the "Debug" button in the toolbar and carefully insert breakpoints in between instructions. Press the "Resume" button in the debug window to move to the next breakpoint. You can also refer to the RISC-V Specs document if you encounter some difficulty understanding the Assembly code generated by AndeSightTM.

(a) (5 points) RISC-V Calling Convention

Compilers typically translate functions into subroutine and perform function calls using a jump instruction following a calling convention. While function calls can be inefficient, they are essential in programming. Locate the starting and ending memory addresses of the code memory allocated to the <code>fast_power_recur</code> and <code>fast_power_iter</code> subroutines by examining the Assembly code. Identify how these subroutines are called within main and write them down in the Reference field in the table.

Subroutine	Starting memory address	Ending memory address	Reference
fast_power_recur	0000000000104a8	0000000000104e0	<pre>jal ra,0x104a8 <fast_power_recur></fast_power_recur></pre>
fast_power_iter	0000000000104a8	0000000000104c4	jal ra,0x104a8 <fast iter="" power=""></fast>

if(pow == 0)
fast_power_recur:

```
00000000000104a8: c.bnez al,0x104b0 <fast_power_recur+8>
                                                                                           return 1:
                                                                   00000000000104aa:
                  main:
                                                                   00000000000104ac:
                                                                                     ret
000000000000104e4: c.addi sp,-16
                                                                                   {
000000000000104e6: c.sdsp ra,8(sp)
                                                                   000000000000104b0: c.addi sp,-32
                      int power = fast_power_recur(6, 11);
                                                                   0000000000104b2:
                                                                                     c.sdsp ra,24(sp)
000000000000104e8: c.li al,11
                                                                   00000000000104b4:
                                                                                     c.sdsp s0,16(sp)
                                                                   00000000000104b6:
                                                                                     c.sdsp s1,8(sp)
00000000000104ea:
                    c.li a0,6
                                                                   000000000000104b8: c.mv s0,al
00000000000104ec: jal ra,0x104a8 <fast_power_recur>
                                                                   00000000000104ba:
                                                                                    c.mv sl,a0
                      printf("%d", power);
                                                                                       int m = fast_power_recur(x, pow >> 1);
00000000000104f0: c.mv al,a0
                                                                   00000000000104bc:
                                                                                     sraiw al, al, 0x1
000000000000104f2: addi a0,gp,-8
                                                                   00000000000104c0: jal ra,0x104a8 <fast_power_recur>
00000000000104f6:
                    jal ra,0x105b0 <printf>
                                                                                       if (pow & 1)
                                                                   00000000000104c4: bbs s0,0,0x104d8 <fast_power_recur+48>
23
                                                                                       return m * m;
000000000000104fa: c.li a0,0
                                                                   15
                                                                   00000000000104c8:
                                                                                     mulw a0.a0.a0
000000000000104fc: c.ldsp ra,8(sp)
                                                                   16
00000000000104fe:
                    c.addi sp.16
                                                                   000000000000104cc: c.ldsp ra,24(sp)
0000000000010500:
                    c.jr ra
                                                                   00000000000104ce:
                                                                                     c.ldsp s0,16(sp)
0000000000010502:
                                                                   00000000000104d0:
                                                                                     c.ldsp sl.8(sp)
                                                                   00000000000104d2:
                                                                                     c.addil6sp sp,32
                                                                   00000000000104d4:
                                                                                     ret
                                                                                           return x * m * m;
                                                                   00000000000104d8:
                                                                                     mulw sl,sl,a0
                                                                   000000000000104dc:
                                                                                     mulw a0,s1,a0
                                                                   000000000000104e0:
                                                                                     j 0x104cc <fast power recur+36>
                                                                                     fast power iter:
                    main:
                                                                  000000000000104a8: c.mv a5,a0
000000000000104c8: c.addi sp,-16
                                                                                        int res = 1;
                                                                   00000000000104aa:
00000000000104ca:
                    c.sdsp ra,8(sp)
                                                                                      c.li a0,1
                                                                                        while (pow)
                        int power = fast power iter(6, 11);
                                                                   00000000000104ac:
                                                                                      j 0x104b8 <fast power iter+16>
00000000000104cc:
                     c.li al,ll
                                                                                           x = x * x;
00000000000104ce:
                      c.li a0,6
                                                                   00000000000104b0:
                                                                                      mulw a5,a5,a5
00000000000104d0:
                      jal ra,0x104a8 <fast power iter>
                                                                   13
                                                                                           pow >>= 1;
                       printf("%d", power);
                                                                   00000000000104b4:
                                                                                      sraiw al.al.0x1
                                                                                       while (pow)
00000000000104d4:
                    c.mv al,a0
                                                                   00000000000104b8:
                                                                                      c.beqz a1,0x104c4 <fast_power_iter+28>
00000000000104d6:
                     addi a0,gp,-8
                                                                                           if(pow & 1)
00000000000104da:
                      jal ra,0x10592 <printf>
                                                                                      bbc al,0,0x104b0 <fast_power_iter+8>
                                                                   00000000000104ba:
                                                                                               res = res * x;
000000000000104de: c.li a0,0
                                                                   00000000000104be:
                                                                                      mulw a0,a5,a0
                                                                   00000000000104c2:
                                                                                      c.j 0x104b0 <fast_power_iter+8>
000000000000104e0: c.ldsp ra,8(sp)
000000000000104e2: c.addi sp,16
                                                                  00000000000104c4:
000000000000104e4: c.jr ra
```

(b) (10 points) RISC-V Calling Convention

The RISC-V calling convention requires the callee to preserve the values of specific registers across function calls. Examine the Assembly code for <code>fast_power_recur</code> function. Find and record the instructions (and the memory locations) that save these registers. Extend the table below to show how these instructions affect the stack. Include the saved register names and corresponding stack offsets. Order the table by the increasing order of stack offset.

Code memory address	Instruction	Saved register	Stack offset
0000000000104b6	c.sdsp s1,8(sp)	s1	8
000000000010464	c.sdsp s0,16(sp)	s0	16
0000000000104b2	c.sdsp ra,24(sp)	ra	24

```
000000000000104a6: c.jr ra
                            if(pow == 0)
                      fast_power_recur:
00000000000104a8: c.bnez al,0x104b0 <fast_power_recur+8>
                                return 1;
000000000000104aa: c.li a0,1
00000000000104ac:
                         ret
00000000000104b0:
                        c.addi sp,-32
000000000000104b2: c.sdsp ra,24(sp)
000000000000104b4: c.sdsp s0,16(sp)
000000000000104b6: c.sdsp s1,8(sp)
000000000000104b8: c.mv s0,al
000000000000104ba: c.mv s1,a0
                           int m = fast_power_recur(x, pow >> 1);
00000000000104bc: sraiw al,al,0xl
000000000000104c0: jal ra,0x104a8 <fast_power_recur>
                           if(pow & 1)
00000000000104c4: bbs s0,0,0x104d8 <fast_power_recur+48>
                          return m * m;
00000000000104c8: mulw a0,a0,a0
000000000000104cc: c.ldsp ra,24(sp)
00000000000104ce: c.ldsp s0,16(sp)
000000000000104d0: c.ldsp s1,8(sp)
000000000000104d2: c.addil6sp sp,32
000000000000104d4: ret
000000000000104d8: mulw sl,sl,a0
000000000000104dc: mulw a0,s1,a0
00000000000104e0:
                         j 0x104cc <fast_power_recur+36>
```

(c) (10 points) Effects of the compiler on RISC-V Assembly Code

To make common cases fast, compilers can allocate application program variable to processor registers, which are much faster than memory. Compile both <code>fast_power_iter</code> and <code>fast_power_recur</code> functions with -O0 optimization flag and answer the following questions:

- (i) Just before jumping to the corresponding subroutine from main, which registers hold the parameters **x** and **pow**, and what values do they contain?
- (ii) Immediately after returning from the subroutine (i.e. just before the next instruction after the jump), which register stores the return value, and what is its value?

Function	Param	eter x	Paramet	ter pow	Return value		
Tunction	Register	Value	Register	Value	Register	Value	
fast_power_iter	a0	6	a1	11	a0	362797056	
fast_power_recur	a0	6	a1	11	a 0	362797056	

```
main:
0000000000010514:
                    c.addi sp,-32
0000000000010516:
                     c.sdsp ra,24(sp)
0000000000010518:
                     c.sdsp s0,16(sp)
0000000000001051a: c.addi4spn s0,sp,32
                        int power = fast_power_iter(6, 11);
0000000000001051c: c.li al,11
000000000001051e:
                     c.li a0,6
0000000000010520:
                     jal ra,0x104a8 <fast_power_iter>
0000000000010524:
                      c.mv a5,a0
0000000000010526:
                      sw a5,-20(s0)
                       printf("%d", power);
21
000000000001052a:
                     lw a5,-20(s0)
0000000000001052e:
                     c.mv al,a5
00000000000010530:
                     addi a0,gp,-8
0000000000010534:
                     jal ra,0x105f0 <printf>
                       return 0:
0000000000010538:
                    c.li a5.0
23
0000000000001053a: c.mv a0,a5
000000000001053c: c.ldsp ra,24(sp)
000000000001053e: c.ldsp s0,16(sp)
00000000000010540: c.addil6sp sp,32
0000000000010542: c.jr ra
```

```
main:
0000000000010530:
                    c.addi sp,-32
00000000000010532:
                    c.sdsp ra,24(sp)
                    c.sdsp s0,16(sp)
0000000000010534:
0000000000010534: c.sdsp s0,16(sp)
0000000000010536: c.addi4spn s0,sp,32
                      int nower = fast_power_recur(6, 11);
20
00000000000010538: c.li al,11
000000000001053a:
0000000000001053c:
                   c.li a0,6
                   jal ra,0x104a8 <fast power recur>
0000000000010540:
                    c.mv a5,a0
0000000000010542: sw a5,-20(s0)
                     printf("%d", power);
0000000000010546: lw a5,-20(s0)
000000000001054a:
                    c.mv al,a5
0000000000001054c: addi a0,gp,-b
0000000000010554: c.li a5,0
23
```

	fast power iter:
00000000000104a8:	c.addil6sp sp,-48
00000000000104aa:	c.sdsp s0,40(sp)
00000000000104ac:	c.addi4spn s0,sp,48
00000000000104ae:	c.mv a5,a0
00000000000104b0:	c.mv a4,al
00000000000104b2:	sw a5,-36(s0)
00000000000104b6:	c.mv a5,a4
0000000000010468:	sw a5,-40(s0)
5	int res = 1;
00000000000104bc:	c.li a5,1
00000000000104be:	sw a5,-20(s0)
6	while (pow)
00000000000104c2:	<pre>c.j 0x104fc <fast_power_iter+84></fast_power_iter+84></pre>
8	if(pow & 1)
00000000000104c4:	lw a5,-40(s0)
00000000000104c8:	c.andi a5,1
00000000000104ca:	bfos a5,a5,31,0
00000000000104ce:	<pre>c.beqz a5,0x104e0 <fast_power_iter+56></fast_power_iter+56></pre>
10	res = res * x;
00000000000104d0:	lw a4,-20(s0)
00000000000104d4:	lw a5,-36(s0)
00000000000104d8:	mulw a5,a4,a5
00000000000104dc:	sw a5,-20(s0)
12	x = x * x;
00000000000104e0:	lw a4,-36(s0)
00000000000104e4:	lw a5,-36(s0)
00000000000104e8:	mulw a5,a4,a5
00000000000104ec:	sw a5,-36(s0)
13	pow >>= 1;
00000000000104f0:	lw a5,-40(s0)
00000000000104f4:	sraiw a5,a5,0x1
00000000000104f8:	sw a5,-40(s0)
000000000000104fc:	while (pow) lw a5,-40(s0)
00000000000010412:	bfos a5,a5,31,0
00000000000010500:	c.bnez a5,0x104c4 <fast_power_iter+28></fast_power_iter+28>
15	return res;
0000000000010506:	lw a5,-20(s0)
16	}
000000000001050a:	c.mv a0,a5
000000000001050c:	c.ldsp s0,40(sp)
000000000001050e:	c.addil6sp sp,48
0000000000010510:	ret

```
fast power recur:
000000000000104a8: c.addil6sp sp,-48
00000000000104aa:
                  c.sdsp ra,40(sp)
c.sdsp s0,32(sp)
00000000000104ac:
000000000000104ae: c.addi4spn s0,sp,48
                  c.mv a5,a0
00000000000104b0:
00000000000104b2: c.mv a4,a1
00000000000104b4:
                  sw a5,-36(s0)
000000000000104b8: c.mv a5,a4
00000000000104ba:
                  sw a5,-40(s0)
                    if(pow == 0)
00000000000104be:
                  lw a5,-40(s0)
000000000000104c2: bfos a5,a5,31,0
00000000000104c6: c.bnez a5,0x104cc <fast_power_recur+36>
                         return 1:
000000000000104c8: c.li a5,1
00000000000104ca:
                  c.j 0x10524 <fast power recur+124>
                     int m = fast_power_recur(x, pow >> 1);
10
00000000000104cc:
                   lw a5,-40(s0)
00000000000104d0:
                   sraiw a5,a5,0x1
00000000000104d4:
                   bfos a4,a5,31,0
00000000000104d8:
                  lw a5.-36(s0)
00000000000104dc:
                   c.mv al.a4
00000000000104de:
                   c.mv a0.a5
00000000000104e0:
                   jal ra,0x104a8 <fast_power_recur>
00000000000104e4:
                   c.mv a5,a0
00000000000104e6: sw a5,-20(s0)
                     if(pow & 1)
000000000000104ea: lw a5,-40(s0)
00000000000104ee:
                   c.andi a5,1
000000000000104f0: bfos a5,a5,31,0
00000000000104f4: c.beqz a5,0x10514 <fast_power_recur+108>
                         return x * m * m;
13
00000000000104f6: lw a4,-36(s0)
00000000000104fa:
                   lw a5,-20(s0)
00000000000104fe:
                  mulw a5,a4,a5
0000000000010502:
                   bfos a5.a5.31.0
0000000000010506:
                  lw a4,-20(s0)
000000000001050a:
                   mulw a5,a4,a5
000000000001050e:
                  bfos a5.a5.31.0
0000000000010512: c.j 0x10524 <fast_power_recur+124>
                     return m * m;
1.5
0000000000010514:
                  lw a4,-20(s0)
0000000000010518:
                   lw a5,-20(s0)
0000000000001051c: mulw a5,a4,a5
0000000000010520:
                  bfos a5,a5,31,0
16
0000000000010528:
                   c.ldsp s0,32(sp)
000000000001052a:
                   c.addil6sp sp,48
00000000001052c:
```

0101	0.0000000000000000000000000000000000000
1919 fp	0x0000000000000000
1010 0101 s1	0x0000000000000000
1010 aO	362797056 (Decimal)
1010 a1	0x0000000000000000

aini de	0.0000000000000000000000000000000000000
1010 0101 s1	0x000000000000000
1010 a0	362797056 (Decimal)
1010 a1	0x0000000000000000
1010 a2	0x000000000000000

(d) (10 points) Effects of great ideas on performance

Pipeline execution and parallelization are two key techniques for enhancing performance. Consider <code>fast_power_iter.c</code> and disregard overheads from parallelization and data transmission. Here's an approach for pipelined execution and parallelization using three cores and a two-stage pipeline. Assume that each core fetches and executes the instructions sequentially.

Core A (Pipeline Stage 1): Calculates $\mathbf{x} \leftarrow \mathbf{x} \star \mathbf{x}$, and passes the new \mathbf{x} to Core C.

Core B (Pipeline Stage 1): Calculates pow ← pow >> 1, and passes the new pow to Core C.

Core C (Pipeline Stage 2): Checks if pow is zero. If true, execute a jump and there is nothing left to do. Otherwise, it calculates res \leftarrow res * x if pow is odd, where res and pow are results from Core A and Core B in the previous cycle.

Time axis \rightarrow

Core A & B	Core C						
	Core A & B	Core C					
		Core A & B	Core C				
			Core A & B	Core C			
				Core A & B	Core C		
					Core A & B	Core C	
						Core A & B	•••
							•••

In other words, Cores A and B operate in parallel, while Core C processes their results in a pipeline fashion. Analyze the code of **fast_power_iter** function in **fast_power_iter.c**, identify the instructions for each core, and record their cycle counts. Explain whether achieving a speedup of 2 for the pipelined parallelized function is possible.

Core C: 6					
	Core A: 4 Core B: 1	Core C: 3			
		Core A: 1 Core B: 1	Core C: 2		
			Core A: 4 Core B: 1	Core C: 3	
				Core A: 1 Core B: 1	Core C: 1


No pipline:


total cycle counts = 6+4+1+3+1+1+2+4+1+3+1+1+1 = 29


With pipeline:

total cycle counts = 6+4+3+4+3+1 = 21

21+n > 29/2+n (n 是無法被優化部分的cycle counts) 優化後的cycle count > 優化前cycle counts的一半 -> It is impossible to achieve a speedup of 2.

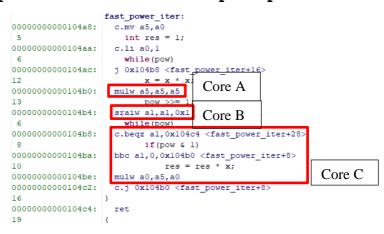

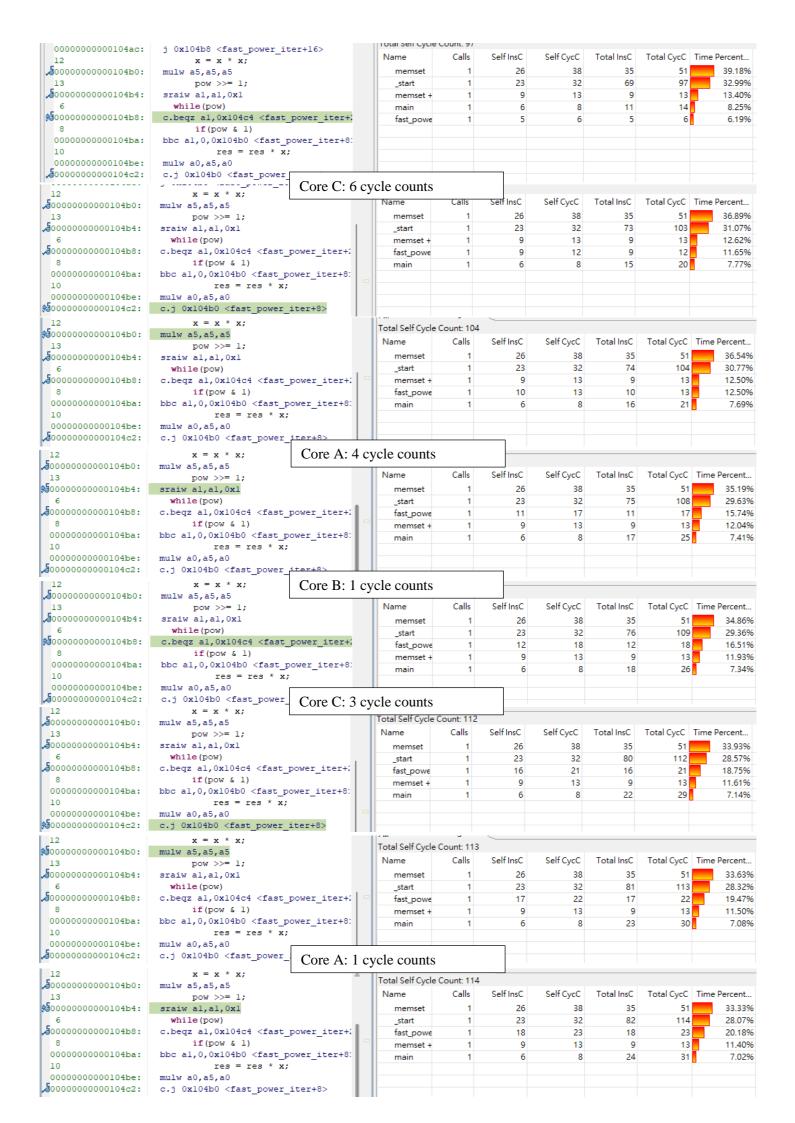

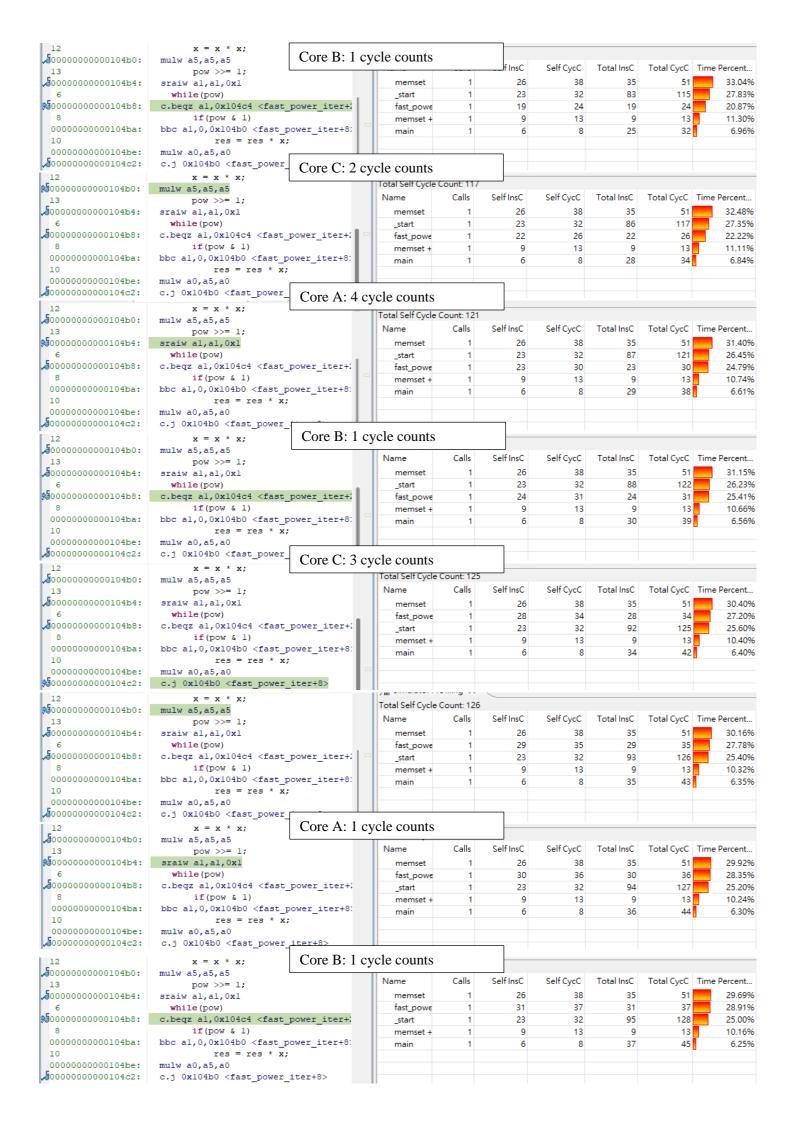

√500000000000104b0:	mulw a5,a5,a5 pow >>= 1;	Core C: 1 c	Total Self Cycle C	Count: 129					
√500000000000104b4:	sraiw al,al,0xl		Name	Calls	Self InsC	Self CycC	Total InsC	Total CycC	Time Percent
_ 6	while (pow)		memset	1	26	38	35	51	29.469
√300000000000104b8:	c.beqz al,0x104c4 <fast< td=""><td>_power_iter+:</td><td>fast_powe</td><td>1</td><td>32</td><td>38</td><td>32</td><td>38</td><td>29.469</td></fast<>	_power_iter+:	fast_powe	1	32	38	32	38	29.469
8	if(pow & 1)		_start	1	23	32	96	129	24.819
00000000000104ba:	bbc al,0,0x104b0 <fast_1< td=""><td>_</td><td>memset +</td><td>1</td><td>9</td><td>13</td><td>9</td><td>13</td><td>10.089</td></fast_1<>	_	memset +	1	9	13	9	13	10.089
10 00000000000104be:	res = res * x	•	main	1	6	8	38	46	6.209
5000000000000104be: 16	<pre>mulw a0,a5,a0 c.j 0x104b0 <fast_power pre="" }<=""></fast_power></pre>	_iter+8>							
₺ 0000000000104c4:	ret								

2. (30 points) RISC-V Assembly Code

Consider a little-endian 64-bit RISC-V sequential processor with the following contents in the register set, data memory, and code memory. Assume that the current PC has the value 0x0000 0000 0001 00B0.

Reg.	Iı	nitial v	alue		Reg.	I	nitial v	alue		Memory address				Initial v	value
x 0	0x0000	0000	0000	0000	x 16	0x0000	0000	0000	0004	0x0000	003E	FF20	13C0	0x0000	0055
x 1	0x0000	0000	0001	00B0	x 17	0x0000	0000	0000	0020	0x0000	003E	FF20	13C4	0x0000	0000
x 2	0x0000	003E	FF20	13E0	x 18	0x0000	0000	0000	0003	0x0000	003E	FF20	13C8	0x0A0C	0345
x 3	0x0000	0000	0001	0000	x 19	0x0000	0000	0000	0040	0x0000	003E	FF20	13CC	0x0450	0000
x4	0x0000	003E	FF20	13C0	x 20	0x0000	0000	0000	0000	0x0000	003E	FF20	13D0	0x000D	0000
x 5	0x0000	0000	0000	8000	x21	0x0000	0000	0000	0000	0x0000	003E	FF20	13D4	0x0A00	0010
x 6	0x0000	0000	0000	0004	x 22	0x1111	FFFF	0000	5555	0x0000	003E	FF20	13D8	0x0020	0000
x 7	0x0000	0000	0000	003A	x 23	0x0000	0000	0000	0000	0x0000	003E	FF20	13DC	0x4000	0000
x 8	0x0000	003E	FF20	1400	x24	0x0000	0000	0000	0000	0x0000	003E	FF20	13E0	0x8000	A000
x 9	0x0000	0000	0000	0007	x 25	0x0000	0000	0000	0034	0x0000	003E	FF20	13E4	0xA800	3F10
x 10	0x0000	0000	0000	0050	x 26	0x0000	003E	FF20	13F0	0x0000	003E	FF20	13E8	0x0091	0000
x11	0x0000	003E	FF20	1530	x 27	0x0000	003E	FF20	13FC	0x0000	003E	FF20	13EC	0x0000	0000
x12	0x0000	0000	0000	1AF3	x 28	0x0000	FFFF	0000	FFFF	0x0000	003E	FF20	13F0	0x00C1	A000
x 13	0x0000	0000	0000	0000	x 29	0x0000	0000	0000	000A	0x0000	003E	FF20	13F4	0x0130	00F0
x14	0x0000	F94E	17CC	B154	x 30	0x0000	0000	00F0	0000	0x0000	003E	FF20	13F8	0x0041	0000
x 15	0xCCCC	0000	0000	0000	x 31	0x0000	00F0	0000	0000	0x0000	003E	FF20	13FC	0x0A0B	0130

Note : for cor	ivenience,	there is a u	nique :	instruc	tion ID	for each i	nstructio	on in the o	code memory.
Instruction ID	Label	C	ode ad	dress				Instruc	tion
1		0x0000	0000	0001	00B0	sub	ж7,	ж5,	x 6
2		0x0000	0000	0001	00B4	sd	x2,	16(x2)
3		0x0000	0000	0001	00B8	jal	ж1,	BEGIN	
4		0x0000	0000	0001	00BC	lw	ж6,	4(x2)	
5		0x0000	0000	0001	00C0	0x0040	8067		
6	BEGIN:	0x0000	0000	0001	00C4	0xFF84	3283		
7		0x0000	0000	0001	00C8	and	x 5,	ж30,	x 5
8		0x0000	0000	0001	00CC	0x4142	D293		
9		0x0000	0000	0001	00D0	add	ж0,	x 5,	x 7
10		0x0000	0000	0001	00D4	add	x28,	ж0,	x 2
11		0x0000	0000	0001	00D8	1b	ж7,	10 (x2	8)
12		0x0000	0000	0001	00DC	bge	ж7,	x29,	END
13		0x0000	0000	0001	00E0	jalr	ж1,	0(x1)	
14	END:	0x0000	0000	0001	00E4	addi	ж7,	ж7,	-16
15		0x0000	0000	0001	00E8	xor	ж7,	ж6,	x 7
16		0x0000	0000	0001	00EC	srai	ж7,	ж7,	16
17		0x0000	0000	0001	00F0	addi	ж31,	ж6,	1000
18		0x0000	0000	0001	00F4	srai	ж31,	ж31,	16
19		0x0000	0000	0001	00F8	sb	ж5,	-8 (x8)
20		0x0000	0000	0001	00FC	sd	ж31,	-24(x	8)

(a) (5 points) Decode instructions with instruction IDs 5, 6, and 8. Then, briefly explain their functionalities.

(5 points) L	5 points) becode instructions with instruction 105 5, 6, and 6. Then, otherly explain their functionalities								
Instruction ID	Hexadecimal Encoded instruction	Decoded instruction and brief explanation							
5	0x0040 8067	jalr x0,4(x1) 跳回 x1+4 那個 address 存的指令 然後將下一行的 address 放進 x0 (但 x0 永遠為 0)							
6	0xFF84 3283	ld x5,-8(x8) 將 x8-8 所存的 double word load 進 x5							
8	0x4142 D293	srai x5,x5,20 將 x5 做算術右移 20 位							

(b) (15 points) Trace the execution flow of the assembly code. Extend the table below. For each executed instruction, record its ID, any updated registers and/or memory cells, and their new values (if any) in hexadecimal representation. Annotate updated memory values per 32-bit word. The first three instructions have been completed for you.

Instruction ID	Updated register	Updated memory	
1	x7 <- x5-x6 = 0x0000 0000 0000 0004		
2		MEM[0x0000 003E FF20 13F0] <- 0xFF20 13E0 MEM[0x0000 003E FF20 13F4] <- 0x0000 003E	
3	x1 <- PC+4 = 0x0000 0000 0001 00BC		
6	x5 < -8(x8) = 0x0A0B 0130 0041 0000		
7	x5 < -x5&x30 = 0x0000 0000 0040 0000		
8	x5 <- x5>>20 = 0x0000 0000 0000 0004		
9			
10	x28 <- x0+x2 = 0x0000 003E FF20 13E0		
11	x7 <- 10(x28) 0xFFFF FFFF FFFF FF91		
12			
13	x1 <- PC+4 = 0x0000 0000 0001 00E4		
4	x6 <- 4(x2) = 0xFFFF FFFF A800 3F10		
5			
15	x7 <- x6^x7 = 0x0000 0000 57FF C081		
16	x7 <- x7>>16 = 0x0000 0000 0000 57FF		
17	x31 <- x6+1000 = 0xFFFF FFFF A800 42F8		
18	x31 <- x31>>16 = 0xFFFF FFFF FFFF A800		
19		MEM[0x0000 003E FF20 13F8] <- 0x0041 0004	
20		MEM[0x0000 003E FF20 13E8] <- 0xFFFF A800 MEM[0x0000 003E FF20 13EC] <- 0xFFFF FFFF	

⁽c) (5 points) Once you have completed the execution flow table, count the total number of memory accesses (excluding register accesses) performed throughout the code.

(d) (5 points) Suppose you want to insert an instruction after instruction ID 20. This instruction should use a **blt** to jump to the label **BEGIN** if the value in register **x31** is less than **x7**. Complete the table below with the instruction. Show how you convert the Assembly instruction into its hexadecimal representation. Moreover, will the branch be taken?

Code address	Assembly instruction	Hexadecimal encoded instruction	Taken?
0x0000 0000 0001 0100	blt x31,x7,BEGIN	0xFC7FC2E3	Yes

opcode: 1100011

imm[4:1,11]: 00101

func3: 100
rs1: 11111
rs2: 00111

imm[12,10:5]: 1 111110 (imm: 1 1111 1100 0100)

instruction: 1 111110 00111 11111 100 0010 1 1100011

3. (10 points) RISC-VAssembly to C

Translate the following RISC-V Assembly code to the equivalent C code. Indicate the corresponding C code for each line of Assembly. Assume that variables, m, i, j, and total are stored in registers x3, x10, x11, and x12, respectively. MemArray is an array (consisting of 4-byte integers as its elements) with its base address stored in register x13.

```
addi x10, x0, 0
     addi x28, x13, 0
LOOPI:
     bge x10, x3, ENDI
     addi x11, x0, 0
     addi x12, x0, 0
     lw x29, 0(x28)
     addi x30, x0, 32
LOOPJ:
     bge x11, x30, ENDJ
     srl x31, x29, x11
     andi x31, x31, 1
     add x12, x12, x31
     addi x11, x11, 1
     jal x0, LOOPJ
ENDJ:
     sw x12, 0(x28)
     addi x10, x10, 1
     addi x28, x28, 4
     jal x0, LOOPI
ENDI:
```

```
addi x10, x0, 0
                                   i = 0
                               1
 1
         addi x28, x13, 0
 2
                               2
                                   // set x28 point to MemArray[0]
        bge x10, x3, ENDI
                               3
                                   while (i < m) {
 3
         addi x11, x0, 0
                               4
 4
                                       j = 0;
         addi x12, x0, 0
                               5
 5
                                       total = 0;
 6
         lw x29, 0(x28)
                               6
                                       // load MemArray[i] to x29
 7
         addi x30, x0, 32
                               7
                                       // set x30 = 32
    LOOPJ:
        bge x11, x30, ENDJ
                               8
                                       while (j < 32) {
 8
 9
         srl x31, x29, x11
                                           unsigned int tmp = MemArray[i];
                               9
                                           // 因為是 srl 所以要先存成 unsigned, tmp >> j
         andi x31, x31, 1
                              10
                                           // (tmp >> j) & 1
10
         add x12, x12, x31
11
                              11
                                           total += (tmp >> j) & 1;
         addi x11, x11, 1
12
                              12
                                           j++;
13
         jal x0, LOOPJ
                              13
    ENDJ:
14
         sw x12, 0(x28)
                              14
                                       MemArray[i] = total;
         addi x10, x10, 1
                              15
15
                                       i++;
         addi x28, x28, 4
                                       // 同為上一行的 i++
16
                              16
17
         jal x0, LOOPI
                              17
                                   }
    ENDI:
```

4. (10 points) C to RISC-VAssembly

For the following C statement, write the corresponding RISC-V Assembly code. Assume that the base addresses of arrays **A** and **B** are in registers **x5** and **x6**, respectively, and the variables **i** and **j** are assigned to registers **x7** and **x11**, respectively.

$$j = B[A[i*4 + 1]] + B[i]$$

(a) (5 points) Assume that the elements of the arrays **A** and **B** are 4-byte words.

```
# 將 x28 設成 i*4
slli x28,x7,2
add x29,x28,x6
                 # 將 x29 指到 B[i]
                # 將 B[i] load 進 x31
lw
    x31,0(x29)
                 # 將 x28 設成 (i*4) + 1
addi x28,x28,1
                 # 因為是 4-byte word,所以將 x28 * 4 算出 offset
slli x28,x28,2
add x28,x28,x5
                # 將 x28 指到 A[i*4 + 1]
                 # 將 A[i*4 + 1] load 進 x29
    x29,0(x28)
                 # 因為是 4-byte word, 所以將 x29 * 4 算出 offset
slli x29,x29,2
                # 將 x29 指到 B[A[i*4 + 1]]
add x29,x29,x6
    x30,0(x29)
                 # 將 B[A[i*4 + 1]] load 進 x30
lw
                # 將 x11 設成 B[A[i*4 + 1]] + B[i]
add x11,x30,x31
```

(b) (5 points) Assume that the elements of the arrays **A** and **B** are 8-byte words.

```
slli x28,x7,2
                # 將 x28 設成 i*4
addi x28,x28,1
                # 將 x28 設成 i*4 + 1
                # 因為是 8-byte word,所以將 x28 * 8 算出 offset
slli x28,x28,3
add x28,x28,x5
                # 將 x28 指到 A[i*4 + 1]
ld
    x29,0(x28)
                # 將 A[i*4 + 1] load 進 x29
slli x29,x29,3
                # 因為是 8-byte word,所以將 x29 * 8 算出 offset
slli x28,x7,3
                # 因為是 8-byte word,所以將 x7 * 8 算出 offset
add x29,x29,x6
                # 將 x29 指到 B[A[i*4 + 1]]
                # 將 x28 指到 B[i]
add x28,x28,x6
ld x30,0(x29)
                # 將 B[A[i*4 + 1]] load 進 x30
                # 將 B[i] load 進 x31
ld
    x31,0(x28)
add x11,x30,x31 # 將 x11 設成 B[A[i*4 + 1]] + B[i]
```

5. (15 points) RISC-V Calling Convention

Implement the following C code in RISC-V Assembly. Note the RISC-V Spec: "In the standard RISC-V calling convention, the stack grows downward and the stack pointer is always kept 16-byte aligned." Moreover, write down comments to describe the Assembly code clearly.

```
Moreover, write down comments to describe the Assembly code clearly.
long long int Func(int n)
     \{ if (n == 0) \}
          return 0;
     }
     if ((n & 1) != 0) {
          return n + Func(n >> 1);
     } else {
          return Func(n >> 1);
     }
}
Func:
                      # 將 x2 往下移 16
   addi x2,x2,-16
                      # 把 x1 的值存進 8(x2)
        x1,8(x2)
    sd
                      # 把 n 的值存進 0(x2)
        x10,0(x2)
    sd
   bne x10,x0,Odd
                      # 若 n != 0 則跳至 Odd
                      # 將 x10 設成 0
   addi x10,x0,0
    addi x2,x2,16
                      # 將 x2 往上移 16
                      # return 回去上一層 function
    jalr x0,0(x1)
Odd:
   andi x28,x10,1
                      # x28 <- n & 1
   beq x28,x0,Even
                      # 若 (n & 1) == 0 則跳到 Even
                      # x10 <- n >> 1
    srai x10,x10,1
                      # 呼叫 Func(n >> 1)
    jal x1,Func
                      # 將 0(x2) 的值 load 到 x29 (原本這層 n 的值)
        x29,0(x2)
    ld
                      # 將 8(x2) 的值 load 回 x1 (以 return 回正確的地方)
    ld
        x1,8(x2)
   add x10,x10,x29
                      # 將 return value 設成 n + Func(n >> 1)
    addi x2,x2,16
                      # 將 x2 往上移 16
                      # return 回去上一層 function
    jalr X0,0(x1)
Even:
```

```
      srai x10,x10,1
      # x10 <- n >> 1

      jal x1,Func
      # 呼叫 Func(n >> 1)

      ld x1,8(x2)
      # 將 8(x2) 的值 load 回 x1 (以 return 回正確的地方)

      addi x2,x2,16
      # 將 x2 往上移 16

      jalr x0,0(x1)
      # return 回去上一層 function
```