# Physics of Quantum Devices

## Kinetic Theory of Gases

**Kinetic theory** is concerned with the marcoscopic properties of large numbers of particles, starting from their classical equations of motion. This course then goes on to develop the semiclassical, and quantum pictures.

Phenomenological thermodynamics is fine and all, but there is a way of creating a much more satisfactory *emergent* theory. The following need to be outlined

- definition of "equilibrium" for moving particles
- whether all systems evolve towards equilibrium
- time evolution of non-equilibrium systems

Start with something like the ideal gas. N-particle system, generalized coordinates  $\{\vec{q}_i(t), \vec{p}_i(t)\} \forall i \in N$ . A microstate  $\mu(t) \in \Gamma$ , where  $\Gamma$  is the 6N-dimensional phase space, evolves according to

$$\begin{cases}
\frac{d\vec{q}_i}{dt} = \frac{d\mathcal{H}}{d\vec{p}_i}, \\
\frac{d\vec{p}_i}{dt} = -\frac{d\mathcal{H}}{d\vec{q}_i},
\end{cases} (1)$$

An important fact to keep in mind is that the microscopic equations of motion 1 have time reversal symmetry,  $:: \mathcal{H}$  is invariant under the transformation  $T(\mathbf{p}, \mathbf{q}) \to (-\mathbf{p}, \mathbf{q})$ 

Representing macrostates requires the introduction of ensembles of a system.

# **Boltzmann Transport Equation**

What exactly does it mean to describe a condensed matter system outside equilibrium? Reminding us of the Fermi-Dirac distro, in equilibrium

$$f(\varepsilon) = \frac{1}{1 + \exp((\varepsilon - \mu)\beta)}$$
 (2)

In equilibrium,  $\mu(T=0)=\varepsilon_F$ , where  $\mu$  is the electrochemical potential.  $\varepsilon_F$  reflects the carrier density. If your carrier density varies, then your electrochemical potential  $\mu$  has spatiotemporal varitaion.

A non-equilibrium with the distribution still having the same functional form would have some spatiotemporal variation

$$f(k, \vec{r}, t) = \frac{1}{1 + \exp\left(\left(\varepsilon(k) - \mu(\vec{r}, t)\right)\beta(\vec{r}, t)\right)}.$$
 (3)

Note that the quantities  $T, \mu$  et cetera are defined in equibrium and do not have any meaning outside of equilibrium. So, the current problem at hand could use the *local equilibrium approximation*.

In this approximation, we define the equilibrium functions only in infinitesimal volume elements of the system. Once we are assuming that there are temperature and carrier concentration gradients, we can at best define particle distribution in a small volume of the phase space. The form of the function remains the same, which is basically representative of us taking a local-equilibrium approximation, and not going too far from equilibrium.

The Fermi energy  $\epsilon_F$  is a measure of the carrier density;  $\epsilon_F$  is higher for greater carrier density. Any gradient in the carrier concentration means that there is going to be a corresponding gradient in the electrochemical potential.

Now, how would you go about defining current density  $\vec{j}$ ? Remember Drude model?

$$\mathbf{j} = nev_d \tag{4}$$

Start by calculating the current density being contributed by a small region of the reciprocal space, estimate the number density occupying that region using the density of states and then multiply by the velocity. Integrate over the whole k-space to get the total current density.

A general non-equilibrium system would have spatiotemporally varying n,  $v_d$  and all. We can arrive at a current density expression using the density of states and the distribution function by filling up the bandstructure/energy levels. We consider the contribution of electrons from a small volume element of phase space  $\mathrm{d}^3k$ . So, we start with the product of the spin degeneracy, the density of states in the k-space, the carrier charge, the density of states and the velocity. Integrate.

$$\mathbf{j} = (-e)2 \times \frac{1}{8\pi^3} \int f(k, \mathbf{r}, t) v_n(k) d^3k$$

$$\implies \mathbf{j} = -\frac{1}{4\pi^3} \int d^3k f(k, \mathbf{r}, t) \mathbf{v}_n(k)$$
(5)

Note that  $f = f(k, \mathbf{r}, t)$  is not the equilibrium quantity. This procedure is fairly general, this we have calculated the charge current density. Calculation of, say, energy current density would proceed in a similar manner, i.e. local equilibrium approximation, contribution from small volume element in the k-space and integrate over the whole k-space.

So, we want the 'dynamics of the phase space' now that we are out of equilibrium.

$$\frac{\mathrm{d}f}{\mathrm{d}t} = \frac{\partial f}{\partial t} + \dot{\mathbf{r}} \cdot \nabla f + \dot{\mathbf{k}} \cdot \nabla f \tag{6}$$

We know that the expression for velocity in our model is

$$\mathbf{v}(\mathbf{k}) = \frac{1}{\hbar} \nabla_k \varepsilon(\mathbf{k})$$
OR  $\dot{\mathbf{r}} = \frac{1}{\hbar} \nabla_k \epsilon(\mathbf{k}),$  (7)

and the external force is modelled as

$$\hbar \dot{\mathbf{k}} = \mathbf{F} \tag{8}$$

Substituting equations 8 and 7 into equation 6, we get

$$\frac{\mathrm{d}f}{\mathrm{d}t} = \frac{\partial f}{\partial t} + \mathbf{v}(\mathbf{k}) \cdot \nabla_r f + \frac{\mathbf{F}}{\hbar} \cdot \nabla_k f \tag{9}$$

How does one define steady state? We expect the distribution to remain static in the steady state, as in

$$\frac{\mathrm{d}f}{\mathrm{d}t} = 0. \tag{10}$$

It is easy to see that the first and second terms on the right side of equation 9 are zero in steady state. What about the last one, the force term? Even in equilibrium,  $f = f(\mathbf{k})$ , and if we apply some non-zero  $\mathbf{F}$ , we will have a non-zero term

Think about it this way; if we apply a uniform electric field on an electron in some band of a nice crystal, will a steady-state be acheived?

The answer is very clearly no, there are no dissipative terms in equation 9. Practical systems have dissipations and all, scattering off of ions. We could empirically add a collision terms.

To account for collisions we define

$$\frac{\partial f}{\partial t} + \vec{v}(\vec{k}) \cdot \nabla_r f + \frac{\vec{F}}{\hbar} \cdot \nabla_k f - \frac{\partial f}{\partial t} \bigg|_{\text{coll}} = \frac{\mathrm{d}f}{\mathrm{d}t},\tag{11}$$

which at steady state becomes

$$\frac{\partial f}{\partial t} + \mathbf{v}_k \cdot \nabla_r f + \frac{\mathbf{F}}{\hbar} \cdot \nabla_k f = \frac{\partial f}{\partial t} \bigg|_{\text{coll}}$$
(12)

This is the equation that we have to solve for different questions. Now, recall that we did a problem that showed Bloch oscillations. We had the Bloch frequency

$$\omega_B = \left(\frac{eE}{\hbar}a\right) \tag{13}$$

For the parameters  $E=10 {\rm kV/cm},~a=1 {\rm Angstrom},$  we get  $\omega_B\sim 10^{12}$  Hertz. So one would expect a condition like

$$\omega_B \tau \gg 1$$
.

in order observe Bloch oscillations. At room temperature, relaxation times are typically  $\sim 10^{-15}$  or so. In the problem, we did not take into account scattering. How would one observe Bloch oscillations? You would have to measure some local volatages. How would you go about placing probes at a distance a apart?

It is possible to have artificial materials wherein a can be increased artificially, something- something multilayer systems. You can artifically tweak the product  $\omega_B \tau$  to your liking.

### Relaxation time approximation

$$\frac{\partial f}{\partial t}\Big|_{\text{collisions}} = -\frac{\delta f}{\tau}$$
 (14)

where  $\delta f = f - f^0$ , is the difference between noneq. and eq. disros. Basically we are introducing an empirical restoring force.  $\tau(\varepsilon)$  is the relaxation time.

We are not at equilibrium at t = 0 and we want to look at the transient response of the system/distribution, i.e. when the other terms have died out

$$\frac{\mathrm{d}f}{\mathrm{d}t} = \left(-\frac{\delta f}{\tau} + (0) + (0) + (0)\right). \tag{15}$$

As  $t \to \infty$ ,  $f \to f^0$ .

$$f(t) = f_0 + C \exp\left(-\frac{t}{\tau}\right) \tag{16}$$

So, this is how the relaxation time approximation works. You can expect to capture some phenomena using this simple approximation.

Coming back to the problem at hand with our new approximation scheme, we have end up with

$$\frac{\partial f}{\partial t} + \mathbf{v}_k \cdot \nabla_r f + \frac{\mathbf{F}}{\hbar} \cdot \nabla_k f = -\frac{\delta f}{\tau}$$
 (17)

### Case 1: $\vec{E} \neq 0$ , no gradients

No gradients anywhere, steady state. Only the third term survives.

$$\frac{q\mathbf{E}}{\hbar} \cdot \nabla_k f = -\frac{\delta f}{\tau}.\tag{18}$$

We want to find the current density  $\mathbf{j}$ , and hopefully it will have the form of Ohm's law, like so

$$\vec{j}_q = \sigma \mathbf{E} \tag{19}$$

Now,  $\delta f = f - f^0$ , so from equation 18

$$\frac{q\mathbf{E}}{\hbar} \cdot \nabla_k (f^0 + \delta f) = -\frac{\delta f}{\tau}$$

$$\Rightarrow \frac{q\mathbf{E}}{\hbar} \cdot \nabla_k f^0 = -\frac{\delta f}{\tau}$$

$$\Rightarrow \delta f = -\frac{q\tau}{\hbar} \mathbf{E} \cdot \nabla_k f^0$$
(20)

We end up with a nice looking equation

$$\implies f = f^0 - \frac{q\tau}{\hbar} \mathbf{E} \cdot \mathbf{\nabla}_k f^0 \tag{21}$$

Note the approximation made in going to the second equation in the steps 20. In essence, we can equate the k-gradient of f with that of  $f^0$  if we are not too far from equilibrium.

If you stare at equation 21 intently, you might draw the following comparison

$$-\frac{q\mathbf{E}\tau}{\hbar} = \delta\mathbf{k} = \dot{\mathbf{k}}\delta t \tag{22}$$

so that

$$f = f^{0} + \delta \mathbf{k} \cdot \nabla_{k} f^{0}$$
  
=  $f^{0}(\mathbf{k} + \delta \mathbf{k}),$  (23)

Looks like the distribution shifted in the k-space from the origin through  $\delta \mathbf{k} = -q\mathbf{E}\tau/\hbar$  in the presence of a static electric field. Consider for example the free electron case, whose distribution form a Fermi sphere. See figure 1. The occupancy of states has changed in such a way that the net flux of carriers is not balanced.

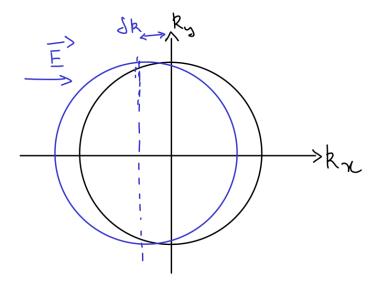


Figure 1: Distribution of free electrons in a uniform electric field

Now that we have some expression for the energy distribution of charge carriers, we can move on to calculating the current density.

#### Current Density in the relaxation time approximation

From equation 5, we have

$$\mathbf{j} = \int d^3k \frac{e}{4\pi^3} f \mathbf{v}(\mathbf{k})$$

$$= \frac{q}{4\pi^3} \int d^3k \mathbf{v}_k (f^0 + \delta f)$$

$$= \frac{q}{4\pi^3} \int d^3k \mathbf{v}_k f^0 + \frac{q}{4\pi^3} \int d^3k \mathbf{v}_k \delta f$$
(24)

The first term is just the equilibrium current density, which is zero. So, we have

$$\mathbf{j} = 0 + \frac{q}{4\pi^3} \int d^3k \mathbf{v}_k \delta f \tag{25}$$

So, we started from Bloch electrons, applied and electric field on those electrons. If we plug in f as the FD distro, we should be able to derive Ohm's law.

Also, even if you didn't have a very nice Fermi sphere, the same procedure holds for calculating the current density for a more general Fermi sphere.

We have the FD distro

$$f^{0} = \frac{1}{1 + \exp((\varepsilon - \mu)\beta)}$$
 (26)

and its derivative

$$\frac{\partial f^0}{\partial \varepsilon} = -\beta f^0 (1 - f^0) \tag{27}$$

or in the vector form

$$\nabla_k f^0 = -\beta f^0 (1 - f^0) \hbar \mathbf{v}_k \tag{28}$$

From (20), we can rewrite (25) as

$$\mathbf{j} = \frac{q}{4\pi^3} \int d^3k \mathbf{v}_k \left( -\frac{q\mathbf{E}\tau}{\hbar} \cdot \mathbf{\nabla}_k f \right). \tag{29}$$

Since we are close to equilibrium, as mentioned earlier, we can approximate  $\nabla_k f = \nabla_k f^0$ . So, we have

$$\mathbf{j} = \frac{q}{4\pi^3} \int d^3k \mathbf{v}_k \left( -\frac{q\mathbf{E}\tau}{\hbar} \cdot \mathbf{\nabla}_k f^0 \right). \tag{30}$$

Substituting equation (28) into this, we get

$$\frac{q}{4\pi^3} \int d^3k \mathbf{v}_k \left( \frac{q\tau}{\hbar} \beta f^0 \left( 1 - f^0 \right) \hbar \mathbf{E} \cdot \mathbf{v}_k \right) \tag{31}$$

Take a look at figure 2. It approaches a  $\delta$ -function as  $\beta \to 0$ .

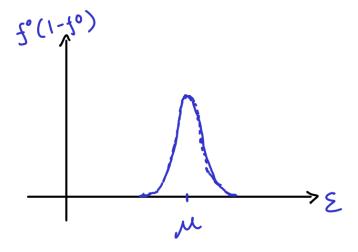


Figure 2: Derivative of the Fermi-Dirac distribution

We want to recover Drude conductivity

$$\varepsilon(k) = \frac{\hbar^2 k^2}{2m} \tag{32}$$

$$\vec{v_k} = \frac{\hbar k}{m} \tag{33}$$

((((( Couldn't keep up today.))))) Plug in  $g(\varepsilon)$  for free electrons/Sommerfeld metal  $(g(\varepsilon) \sim \sqrt{\varepsilon})$ 

$$\sigma_{xx} = \sigma_{yy} = \sigma_{zz} = \frac{ne^2\tau}{m} \tag{34}$$

Nice. We started with Bloch electrons and were able to derive Drude conductivity. Getting a feel for the power of this method? The generality?