## **OPERATING INSTRUCTIONS**

The video input is auto video sensing, when your additional source is switched on the picture will override the navigation map picture. It will revert back to the navigation picture when your source is switched off.

The second input (Camera Input) is activated when the Blue cable is made live (adding a 12v+ supply) This input will override the additional source or the navigation map when activated.





# **NAV-INMIT**

VIDEO INPUT
MITSUBISHI L200 / SHOGUN
Without TV Tuner

NAV TV (Europe) LTD



#### NAV TV (Europe) LTD

Distribution Centre Unit 21B Vale Business Park Llandow, Vale of Glamorgan CF71 7PF

Telephone: + 44 (0)8445 783 783 Fax: + 44 (0)1446 77 22 47


technical@nav.tv

# **LOCATION & REMOVAL**

Ensure the vehicle is equipped with Navigation


All the wires can be accessed at the Navigation computer located under the front seat for L200, and at the WHITE PLUG in the steel box (fig 1 & 2 below) attached to the Navigation computer which is located under the glove box area of the dashboard for other models.



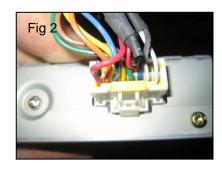

## INSTALLATION

Locate the cable which connects the Navigation computer with the monitor. Within this cable you will find the cable colours given opposite. You will then need to cut open the these cables and connect the input and output cables from the supplied harness as the diagram below shows.

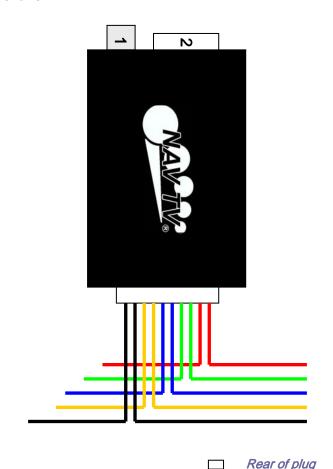

NAV (Input) SCREEN (Out)

16	15	14	13	12	11	10	9
8	7	6	5	4	3	2	1

### INSTALLATION

#### L200

The following colours are found in the Screen to Navigation cable.

	NAV-INMIT
to	Red
to	Blue
to	Green
to	Shield
to	Yellow
	to to to

THE BLUE JUMPER INSIDE INTERFACE WILL NEED TO BE REMOVED

#### SHOGUN / PAJERO

CAR HARNESS	NAV-INMIT	
Blue	to	Red
White	to	Green
Red	to	Blue
Shield	to	Shield
Green	to	NOT USED
NOT USED	to	Yellow

THE BLUE JUMPER INSIDE INTERFACE WILL NEED TO BE RETAINED

#### Other connections

YELLOW to 12v+ ignition / acc

BLACK to 12v- Ground

BLUE to 12v+ to activate camera input