INSTALLATION

Other connections (on all cars)

YELLOW to 12v+ ignition / accessory

BLACK to 12v- ground

BLUE to 12v+ to activate camera input

Rear of supplied plug

NAV (Input) SCREEN (Out)



OPERATING INSTRUCTIONS

The video input is auto video sensing, when your additional source is switched on the picture will override the navigation map picture. It will revert back to the navigation picture when your source is switched off.

The second input (Camera Input) is activated when the Blue cable is made live (adding a 12v+ supply) This input will override the additional source or the navigation map when activated.



NAV-INNISUNI

VIDEO INPUT
ALL NISSAN
Without TV Tuner

NAV TV (Europe) LTD



NAV TV (Europe) LTD


Distribution Centre Unit 21B Vale Business Park Llandow, Vale of Glamorgan CF71 7PF

Telephone: + 44 (0)8445 783 783 Fax: + 44 (0)1446 77 22 47

technical@nav.tv

LOCATION & REMOVAL

Locate the cable which connects the Navigation computer with the monitor. Within this cable you will find the cable colours given opposite. You will then need to cut open the these cables and connect the input and output cables from the supplied harness as the diagram below shows.

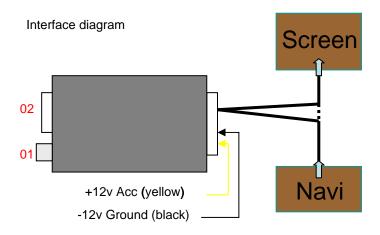

INSTALLATION

PRIMERA 2006 on

All the wires can be accessed at the SCREEN at 2 grey screened cables

GREEN TAPED GREY CABLE;

Car harness		NAV-INNIS	
GREEN	to	BLUE	
BLACK	to	GREEN	
WHITE	to	RED	
BLACK TAPED GREY CABLE			
GREEN	to	YELLOW	
RED	to	PURPLE	

INSTALLATION

THE BLUE JUMPER INSIDE INTERFACE WILL NEED TO BE REMOVED

NAVARA / PATHFINDER / 350z

All the wires can be accessed at the SCREEN which is located in the centre dash.

The following colours are to be used:

Car Harness		NAV-INNIS
GREEN (pin24)	to	Red
RED (pin23)	to	Green
WHITE (pin22)	to	Blue
Shield	to	Shield
		Yellow not used
		Purple not used

XTRAIL

All the wires can be accessed at the Navigation computer which is located in the compartment above the glove-box

Braided cable

Car Harness		NAV-INNIS
BROWN (pin 7)	to	Red
WHITE (pin 8)	to	Green
RED (pin 6)	to	Blue
BLUE (pin 22)	to	Yellow
BLACK/YELLOW (pin 23)	to	Shield
YELLOW	to	Purple

THE BLUE JUMPER INSIDE INTERFACE WILL NEED TO BE REMOVED

INSTALLATION

PRIMERA up to 2006

All the wires can be accessed at the Navigation computer which is located in the centre dash.

Braided cable


	NAV-INNIS
to	Red
to	Green
to	Blue
to	Yellow
to	Shield
to	Purple
	to to to

THE BLUE JUMPER INSIDE INTERFACE WILL NEED TO BE REMOVED

MURANO / 350z import/ PATROL

All the wires can be accessed at the grey plug at the screen which is located in the front of the car. Layout of the plug is as follows;

i to rea	z to green	3 to blue
4 to yellow	5 to purple	back of plug

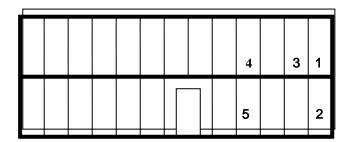

THE BLUE JUMPER INSIDE INTERFACE WILL NEED TO BE REMOVED