

VIMCANROV-RR

VIDEO INMOTION RANGE ROVER With TV Tuner

NAV TV (Europe) LTD



NAV TV (Europe) LTD

Distribution Centre Unit 21B Vale Business Park Llandow, Vale of Glamorgan CF71 7PF

Telephone: + 44 (0)8445 783 783 + 44 (0)1446 77 22 47 Fax:

technical@nav.tv

LOCATION & REMOVAL

Removing screen and locating IHU unit up to 2006

- 1.Remove the air vents L and R by pulling 4 tabs inside the vent (*see fig 1*)
- 2. Pull the dash side panels (trim clips only)
- 3.Remove 4 screws each side securing the wood trim panels,
- 4.Remove the wood trim panels and unplug lights and headlight switches,
- 5.Unclip the centre speaker grille on the dash to access screws (*see fig 2*)
- 6.Remove all exposed screws on top part of dash and pull away from windscreen (no need to unscrew centre speaker)
- 7.Unplug centre speaker and remove top part of dash completely (*see fig3*)
- 8.Take out 4 screws at top of screen and 2 at either side behind wood trim (deep reach screwdriver needed)









INSTALLATION


FOR 2007:

Installation has to be done at the IHU behind lower glove box. Remove glove box and plug in at IHU unit

FOR 2005/2006

Installation has to be done behind the front screen at the IHU unit, not at the radio screen

Plug the black plug from the IHU unit into the female side of the supplied harness, then plug in the male side of the supplied harness to the IHU unit. Plug in and mount the interface. (see fig 4)

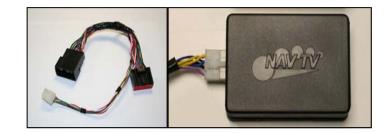

OPERATING INSTRUCTIONS

The "video in motion" feature can be deactivated (and activated) by pressing and holding the "track down" button on the car steering wheel controls.

