gen_regs_py

Generated: May 05, 2020

Contents

W	Velcome to gen_regs_py's documentation!	1
	Overview	2
	Running the Script (Options)	2
	Methodology	5
	Input Register File	6
	Syntax	6
	Register Declaration	6
	Bitfield Declaration	6
	Comments	7
	Putting it all together	7
	Register/Bitfield Types	8
	RW (Read/Write) Bitfield	8
	RW (Read/Write) Bitfield with Mux Override	9
	RO (Read-Only) Bitfield	10
	W1C (Write-One-to-Clear) Bitfield	10
	WFIFO Bitfield	12
	RFIFO Bitfield	14
	Advanced Features	16
	DebugBus	16
	DV Files	17
	NO_REG_TEST	18
	DFT Features	18
	DFT Modes	18
	Declaring Bitfield Values in DFT	18
	DFT Priority	19
	RTL Generation	20
	Examples	20
	DFT Mux Overrides	20
	Boundary Scan Stitching	22

Welcome to gen_regs_py's documentation!

Here we talk about gen_regs_py, a tool for creating registers

Overview

gen_regs_py is a Python based Register RTL generation tool. The aim of gen_regs_py is to automate the register design and creation process, resulting in quicker RTL development and fewer bugs along the way.

Using simple text file input, a designer can quickly develop registers. No clunky spreadsheets, no crazy syntaxes, just simple text files.

The tool will create a register block that has a APB/AHB slave interface to be used for transactions

Running the Script (Options)

-h, --help

Shows the HELP message

-i, -input_file (REQUIRED)

Input file to be used for parsing. There are no requirements on the file extention

-p, -prefix (REQUIRED)

PREFIX NAME to be used. This has no effect on the bitfield names in the RTL

-b, -block (REQUIRED)

BLOCK NAME to be used. This has no effect on the bitfield names in the RTL

-ahb (Optional)

Creates the register block with an AHB-Lite supported interface.

Note

Register operation is not changed by interface type.

-sphinx (Optional)

Prints out a Sphinx formatted table for documentation purposes.

-dv (Optional)

Creates 'DV' related files that are used for DV and/or fed into the gen_uvm_reg_model script.

-dbg (Optional)

Prints some info to the console during building. Can be used to track down any incorrect input file setup

Note

The **PREFIX** and **BLOCK** names are used to *uniquify* the design. For the RTL the only place these are seen is in the output RTL and module name. During DV, these are used as qualifiers to specific blocks.

After running the script, provided no errors for setup, you should receive a verilog file in the following format: <prefix>_<block>_regs_top.v

Here is an example of an input file

```
REG1 RW
bf1 5'b0 Some description1
bf1_mux 1'b1 Some description2
bf2 5'b0 Some description1
bf2_mux 1'b1 Some description1
bf3_mux 1'b1 Some description2
bf3 4'ha
bf3longname 5'd10

AREADONLYREG RO
some_status_in 1'b0 A signal I want to observe
```

And here is what part of the output Verilog would look like

```
// REG1
// bf1 - Some description1
// bf1_mux - Some description2
// bf1_max = Some description2
// bf2 - Some description1
// bf2_mux - Some description2
// bf3 -
// bf3longname -
//-
wire [31:0] REG1_reg_read;
reg [4:0] reg_bf1;
reg [4:0] reg_bf2;
reg [3:0] reg_bf3;
reg [4:0] reg_bf3longname;
always @(posedge RegClk or posedge RegReset) begin
  if(RegReset) begin
                                                     <= 5'h0;
     reg bf1
                                                     <= 1'h1;
<= 5'h0;
     reg_bf1_mux
     reg bf2
                                                    <= 1'h1;
<= 4'ha;
     reg_bf2_mux
     reg bf3
     reg_bf3longname
  <= RegWrData[11];
<= RegWrData[15:12];</pre>
     reg_bf2_mux
     reg_bf3
     reg_bf3longname
                                                    <= RegWrData[20:16];
  end else begin
reg_bf1
                                                    <= reg_bf1;
     reg_bf1_mux
reg_bf2
                                                    <= reg_bf1_mux;
<= reg_bf2;
     reg_bf2_mux
                                                    <= reg_bf2_mux;
                                                    <= rea bf3;
     rea bf3
     reg_bf3longname
                                                    <= reg_bf3longname;
assign REG1_reg_read = {11'h0,
         reg_bf3longname,
          reg bf3,
          reg_bf2_mux,
          reg_bf2,
reg_bf1_mux,
         reg_bf1};
wire [4:0] swi_bf1_muxed_pre;
wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf1[4:0] (
.clk0 (bf1 ),
.clk1 (reg_bf1 ),
.sel (reg_bf1_mux ),
  .clk_out ( swi_bf1_muxed_pre
assign swi_bf1_muxed = swi_bf1_muxed_pre;
//-----
wire [4:0] swi_bf2_muxed_pre;
wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf2[4:0] (
 .clk0 (bf2
.clk1 (reg_bf2
.sel (reg_bf2_mux
                                                           )):
  .clk_out ( swi_bf2_muxed_pre
assign swi_bf2_muxed = swi_bf2_muxed_pre;
assign swi_bf3 = reg_bf3;
assign swi_bf3longname = reg_bf3longname;
// AREADONLYREG
// some_status_in - A signal I want to observe
wire [31:0] AREADONLYREG_reg_read;
```

Overview

```
assign AREADONLYREG_reg_read = {31'h0,
    some_status_in};
```

Methodology

gen_regs_py builds software registers by using the following methodology of "Classes":

Register Blocks |-- Registers |-- Bitfields

Bitfields

Bitfields are individual "flops" that are usually used for some specific purpose. For example, you have a software bit that is used to enable a piece of logic. You name this logic_enable. While only a singlebit, there is still room in the 32bit register for additional logic. Bitfields can be upto 32 bits in size. If you need control over a signal larger than this, you will need to create multiple bitfields across registers.

Registers

Registers are a collection of bitfields that comprise a 32bit sfotware register. Registers can be upto 32bits in size, but are not required to be. For example, if you define a single 16bit bitfield in a register, and no other bitfields, only the lower 16 bits are accessible. Any reads will result in the top 16 bits returning 16'd0.

Register Blocks

Register Blocks are a collection of Registers and is the essential output of the gen_regs_py. The Register Block is the actual RTL that you will instantiate in your design. These Register Blocks are then used in other register flows for DV and SW register generation.

Note

When creating registers, you are really creating each bitfield and grouping them in a collection, which is a register. And this collection of registers is what constitutes the register block

Input Register File

gen_regs_py uses basic text files for describing registers. There are no requirements for file extensions, only that the file is readable.

Syntax

The gen_regs_py utilizes a flexible syntax strategy to allow for simple to complex register schemes to be implemented.

Note

For simplicity sake, we will show the most common register formats here and describe more complex usage scenarios in the register/bitfields types page

Register Declaration

A register declaration will follow this syntax

```
<REGNAME> <REGTYPE> <{NO_REG_TEST}> <DESCRIPTION>
```

REGNAME	Required	Name of the register. Must be unique to all other register for this block
REGTYPE	Required	Base type of register. Must be RW or RO and denotes the <i>default</i> bitfield types
{NO_REG_TEST}	Optional	When {NO_REG_TEST} is defined, DV output files will result in this register being excluded from register testing
DESCRIPTION	Optional	Description of register. Must be on one line

Note

You may notice that there is no **address** declaration. This is because gen_regs_py will automatically assign addresses based on the location of the register in the file. The first register is assigned address 0x00, the second, address 0x04, and so on.

If a user wants to place certain registers at certain addresses, the user would want to manually place the registers in the correct order. Reserved registers can be created by declaring a register and setting one or more bits as "reserved".

```
REG1 RW
bf1 1'b0

RSVRD0 RW //No registers are generated but the space is reserved
reserved 1'b0

REG_AT_X8 RW
bf2
```

Bitfield Declaration

A bitfield declaration will follow this syntax

```
    <BFNAME>
    <BFTYPE> <{DFT}> <DESCRIPTION>

    BFNAME
    Required
    Name of the bitfield. Must be unique to all other bitefields for this block
```

Input Register File

BFRESET	Required	Denotes the width and reset value of this bitfield. Number prior to radix denotes the width, while the value after the width is assigned the reset value.
BFTYPE	Optional	Allows user to force a particular bitfield type for this register, regardless of how the REGTYPE is defined.
{DFT}	Optional	Creates DFT related overrides
DESCRIPTION	Optional	Description of bitfield. Not required. Must be on one line

Note

Bitfields defined with BFNAME reserved are treated as reserved bitfield allocations. gen_regs_py will not create a bitfield for these location, and these locations always read back all zeros. The reserved bitfield keyword can be used multiple times.

Comments

Lines beginning with # are treated as comments and not parsed

Putting it all together

This is the general structure of each register in the input file

```
        <REGNAME>
        <REGTYPE>
        <{NO_REG_TEST}>
        <DESCRIPTION>

        <BFNAME>
        <BFTYPE>
        <{DFT}>
        <DESCRIPTION>

        <BFNAME>
        <BFTYPE>
        <{DFT}>
        <DESCRIPTION>

        <BFNAME>
        <BFRESET>
        <BFTYPE>
        <{DFT}>
```

Here is a simple example of a register block with three registers being created. We have REG1 in which we define as RW and define two bitfields, which are each RW. We have AREADONLYREG which we define as RO and define a single bitfield which in turn is a RO bitfield. And finally we have RWREG_WITH_RO which we have defined as RW, however we also define a bitfield as RO which will force the bitfield somerobf to a RO bitfield

```
REG1 RW This is the first register
bf1 5'b0 A description
bf2 4'h3 Look how I use 'h

AREADONLYREG RO
some_status_in 1'b0 A signal I want to observe

RWREG_WITH_RO RW
somerwbf 1'b0 This is a RW bitfield
somerobf 3'd0 RO But this one is read-only
```

Register/Bitfield Types

gen_regs_py supports the following register/bitfield types:

- RW Read/Write
- RW with Mux Override A Read/Write register that can use the signal value from external design or be forced through a SW register
- RO Read-Only
- W1C Write-One-to-Clear
- WFIFO Creates a FIFO Write Interface
- RFIFO Creates a FIFO Read Interface

Most bitfield types will create one or more input/output ports with the name of the bitfield .

RW (Read/Write) Bitfield

A RW Bitfield is a typical bitfield which can be read and written via the APB interface. gen_regs_py will create an output port named:

• SWi_<BFNAME> (Output) - Writes to this bitfield will cause a transition on the output port.

Here is an example RW bitfield declaration:

```
1 REG1 RW
2 bf1 5'b0 My read-write bitfield
```


Here is the Verilog output ports for this register block

```
1 module rw_reg_example_regs_top #(
                     ADDR_WIDTH =
      parameter
      //REG1
 6 output wire [4:0] swi_bf1,
 8 //DFT Ports (if used)
10 // APB Interface
11 input wire RegReset,
12 input wire RegClk,
13 input wire PSEL,
     input wire PENABLE,
input wire PWRITE,
15
     output wire PSLVERR,
output wire PREADY,
     input wire [(ADDR_WIDTH-1):0] PADDR,
input wire [31:0] PWDATA,
19
      output wire [31:0] PRDATA
21);
23 // ...excluded for clarity 24
27 // bf1 - My read-write bitfield
29 wire [31:0] REG1_reg_read;
30 reg [4:0]
                 reg_bf1;
32 always @(posedge RegClk or posedge RegReset) begin
33 if(RegReset) begin
                if(RegAddr == 'h0 && RegWrEn) begin
<= RegWrData[4:0];
        reg_bf1
        reg_bf1
37
     end else begin
       reg_bf1
                                                       <= reg_bf1;
    end
40 end
42 assign REG1_reg_read = {27'h0,
             reg_bf1};
```

```
45 //-----46 assign swi_bf1 = reg_bf1;
```

RW (Read/Write) Bitfield with Mux Override

This type of bitfield structure will create a register that can be used to "override" a particular signal. This is often used in cases where you may be getting a signal from another block and want to have a way to control that signal through software. For example, you have a calibration state machine that has an *enable* signal which is set from some controller. During testing, you want to be able to control that enable with software, but in normal usage want it to be controlled via the logic. This allows the user to take control without the need to add any additional logic.

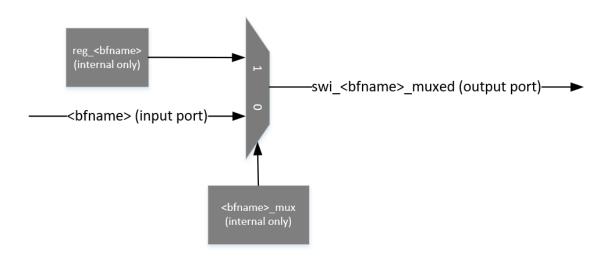

A user can describe this structure by defining a bitfield along with another bitifled with _mux appended to the end of the name. This will trigger gen_regs_py to construct this type of structure.

gen_regs_py will create two ports for this structure:

- <BFNAME> (input) External logic connection.
- Swi_<BFNAME>_muxed (output) Result of the register/mux override.

Here is an example

```
1 REG1 RW
2 bf1 5'b0 My read-write bitfield
3 bf1_mux 1'b0 Mux register select
```

And here is the Verilog output

```
1 module rw_reg_mux_example_regs_top #(
     parameter
parameter
                      ADDR_WIDTH = 8,
STDCELL = 1
 4 )(
      //REG1
     input wire [4:0] bf1,
output wire [4:0] swi_
 6
                              swi_bf1_muxed,
     //DFT Ports (if used)
10
11
      // APB Interface
12
      input wire RegReset,
13
14
     input wire RegClk,
input wire PSEL,
16
      input wire PWRITE.
      output wire PSLVERR,
     output wire PREADY,
```

```
input wire [(ADDR_WIDTH-1):0] PADDR,
input wire [31:0] PWDATA,
     output wire [31:0] PRDATA
23
24 // ...excluded for clarity
26 //Regs for Mux Override sel
27 reg reg_bf1_mux;
28
29
30
31 //---
32 // REG1
33 // bf1 - My read-write bitfield
34 // bf1_mux - Mux register select
35 //---
36 wire [31:0] REG1_reg_read;
37 reg [4:0] reg_bf1;
39 always @(posedge RegClk or posedge RegReset) begin
40 if(RegReset) begin
       reg_bf1_mux
42
    end else if(RegAddr == 'h0 && RegWrEn) begin
reg_bf1 <= F
                              <= RegwrData[5];
                                                   <= RegWrData[4:0];
       reg_bf1_mux
    end else begin
reg_bf1
reg_bf1_mux
46
                                                   <= reg bf1;
47
                                                   <= reg_bf1_mux;
     end
49
51
52 assign REG1_reg_read = {26'h0,
     reg_bf1_mux,
54
            reg_bf1};
56 //----
58 wire [4:0] swi_bf1_muxed_pre;
59 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf1[4:0] (
    .clk0 ( bf1
.clk1 ( reg_bf1
.sel
    .clk0
                                                         ),
),
     .sel (reg_bf1_mux
.clk_out (swi_bf1_muxed_pre
                                                         ));
65 assign swi_bf1_muxed = swi_bf1_muxed_pre;
67 //-----
```

As you can see, there is an input port named bf1 and an output port named Swi_bf1_muxed. The input port would be the signal from some external logic, where as the output port is overridden value.

Note

The bitfield and bitfield_mux bitfields do not need to be in the same regsiter.

RO (Read-Only) Bitfield

A Read-Only bitfield is a bitfield which can only be read. When a RO bitfield is created, gen_regs_py will create the following port:

<BFNAME> (input) - Connection to observe logic

Warning

RO bitfields are treated as asynchronous to gen_regs_py. If you need SW to sample stable inputs, a demet or other external logic to the output register verilog is required.

W1C (Write-One-to-Clear) Bitfield

Register/Bitfield Types


A W1C bitfield is generally used in cases similar to interrupts (although not required). gen_regs_py will create the following:

- w1c_in_<BFNAME> (input) Input from external logic
- w1c_out_<BFNAME> (output) Output of the W1C bitfield, post rising edge detection
- A rising edge detection circuit

Note


W1C bitfields are currently limited to single-bit width

Here is schematic representation of the W1C register logic

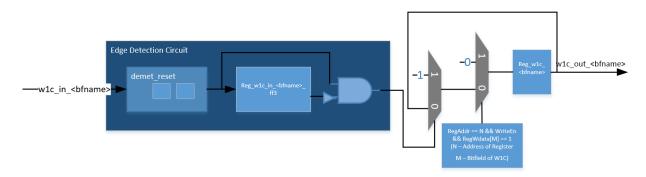


The input signal is sampled with a demet, then sent through a rising edge detection. On the rising edge the output register is set. The register will remain in this state until a 1 is written.

Example of the waveform when the input signal sets the regsiter

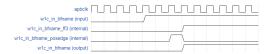

Exmample of the waveform when the register is written to clear

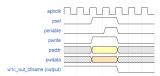

Here is an example of declaring this bitfield

```
1 REG1 RW
2 bf1 5'b0 My read-write bitfield
3 bf1_mux 1'b0 Mux register select
4
5
6 REG_WITH_W1C RW
7 myinterrupt 1'b0 W1C Using this like an interrupt
```

And here is the Verilog output

```
1 module wic_example_regs_top #(
2 parameter ADDR_WIDTH = 8,
3 parameter STDCELL = 1
4 )(
5 //REG1
```

```
input wire [4:0]
output wire [4:0]
                                 bf1.
                                 swi_bf1_muxed,
 8
      //REG_WITH_W1C
                                 w1c_in_myinterrupt,
10
      output wire
                                 w1c_out_myinterrupt,
11
      //DFT Ports (if used)
13
      // APB Interface
      input wire RegReset,
input wire RegClk,
15
16
17
      input wire PSEL,
input wire PENABLE,
18
      input wire PWRITE,
output wire PSLVERR,
19
20
      output wire PREADY,
input wire [(ADDR_WIDTH-1):0] PADDR,
input wire [31:0] PWDATA,
22
24
      output wire [31:0] PRDATA
25 );
26
27 // ...excluded for clarity
29 //-----
30 // REG_WITH_W1C
31 // myinterrupt - Using this like an interrupt
33 wire [31:0] REG_WITH_W1C_reg_read;
                     reg_w1c_myinterrupt;
reg_w1c_in_myinterrupt_ff2;
34 req
36 reg
                     reg_w1c_in_myinterrupt_ff3;
38 // myinterrupt W1C Logic
39 always @(posedge RegClk or posedge RegReset) begin
40 if(RegReset) begin
       reg_w1c_myinterrupt
41
         reg_w1c_in_myinterrupt_ff3 <= 1'h0;</pre>
43
                                             <= RegWrData[0] && reg_w1c_myinterrupt &&
  (RegAddr == 'h4) && RegWrEn ? 1'b0 :
  (reg_w1c_in_myinterrupt_ff2 & ~reg_w1c_in_myinterrupt_ff3 ? 1'b1 :</pre>
       reg_w1c_myinterrupt
45
46
        reg_w1c_in_myinterrupt_ff3 <= reg_w1c_in_myinterrupt_ff2;
47
48
49 end
50 end
52 demet\_reset\ u\_demet\_reset\_myinterrupt (
     .clk (RegClk
.reset (RegReset
.sig_in (w1c_in_myinterrupt
.sig_out (reg_w1c_in_myinterrupt_ff2
56
58 assign REG_WITH_W1C_reg_read = {31'h0,
59
              reg_w1c_myinterrupt};
62 assign w1c_out_myinterrupt = reg_w1c_myinterrupt;
```

Note

To create an interrupt that is later sent out to an external IP (such as a CPU), a user can create the W1C bitfield and an associated RW bitfield to act as an enable:

```
INTERRUPT_ENABLES RW
int_en_trans_complete 1'b1 0-trans_complete doesn't assert the interrupt out, 1-asserts

INTERRUPT_STATUS R0
int_trans_complete 1'b0 W1C Asserts when a transaction is compelte
```

And in the user logic, simply AND the output of the W1C with the interrupt enable to gate:

WFIFO Bitfield

Register/Bitfield Types

The WFIFO bitfield type is generally used in a case where you want to write to a specific address location that results in a FIFO being written.

gen_regs_py will create two ports for this bitfield type:

- wfifo_<BFNAME> The data written to the FIFO
- wfifo_winc_<BFNAME> A write increment/valid signal to the FIFO

Note

There are actually no flops instantiated for this bitfield type. It is mainly a direct connection between the APB interface and the FIFO. For this reason, any reads to this bitfield will result in all zeros being read back.

Warning

There is no FULL check added in the register block on the FIFO being written. A user should check FIFO state prior to writing the FIFO.

Eample input file:

```
1 REG1 RW
2 bf1 5'b0 My read-write bitfield
3 bf1_mux 1'b0 Mux register select
4
5 6 REG_WITH_WFIFO RW
7 write_data 8'b0 WFIFO Writes to the FIFO
```

And an example of the Verilog output:

```
1 module wfifo_example_regs_top #(
                         ADDR_WIDTH =
                      STDCELL
 3
      parameter
3 ptr. 4 )(
5 //REG1
6 input wire [4:0] bf1,
7 output wire [4:0] swi_bf1_muxed,
      output wire [7:0] wfifo_write_data,
output wire wfifo_winc_write_data,
10
      output wire
11
12
     //DFT Ports (if used)
13
     // APB Interface
15
      input wire RegReset,
input wire RegClk,
     input wire PSEL,
input wire PENABLE,
input wire PWRITE,
output wire PSLVERR,
17
18
19
20
      output wire PREADY,
input wire [(ADDR_WIDTH-1):0] PADDR,
input wire [31:0] PWDATA,
21
22
      output wire [31:0] PRDATA
24
26
27 // ...excluded for clarity
29 //---
30 // REG_WITH_WFIFO
31 // write_data - Writes to the FIFO
33 wire [31:0] REG_WITH_WFIFO_reg_read;
35 assign wfifo_write_data = (RegAddr == 'h4 && RegWrEn) ? RegWrData[7:0] : 'd0;
36 assign wfifo_winc_write_data = (RegAddr == 'h4 && RegWrEn);
37 assign REG_WITH_WFIFO_reg_read = {24'h0,
38
              8'd0}; //Reserved
40 //-----
```

RFIFO Bitfield

The RFIFO bitifled type is similar to the WFIFO, except that this is for reading from a FIFO.

gen_regs_py will create two ports for this bitfield type:

- rfifo_<BFNAME> The data read from the FIFO
- rfifo_rinc_<BFNAME> A read increment/valid signal to the FIFO

Note

There are actually no flops instantiated for this bitfield type. It is mainly a direct connection between the APB interface and the FIFO. Writes are essentially ignored for this bitfield.

Warning

There is no EMPTY check added in the register block on the FIFO being read. A user should check FIFO state prior to reading the FIFO.

Eample input file:

```
1 REG1 RW
2 bf1 5'b0 My read-write bitfield
3 bf1_mux 1'b0 Mux register select
4
5
6 REG_WITH_RFIFO RO
7 read_data 8'b0 RFIFO Reads from the FIFO
```

And an example of the Verilog output:

```
1 module rfifo_example_regs_top #(
2 parameter ADDR_WIDTH = 8,
3 parameter STDCELL = 1
      parameter
//REG_WITH_RFIFO
input wire [7:0] rfifo_read_data,
     output wire
                                 rfifo_rinc_read_data,
12
     //DFT Ports (if used)
13
     // APB Interface
     input wire RegReset,
input wire RegClk,
15
16
     input wire RegClk,
input wire PSEL,
input wire PENABLE,
input wire PWRITE,
output wire PSLVERR,
output wire PREADY,
input wire [(ADDR_WIDTH-1):0] PADDR,
input wire [31:0] PWDATA,
output wire [31:0] PRDATA
17
18
20
22
24
25 );
26
27
28 // ...excluded for clarity
31 // REG WITH RFIFO
32 // read_data - Reads from the FIFO
34 wire [31:0] REG WITH RFIFO reg read:
36 assign rfifo_rinc_read_data = (RegAddr == 'h4 && PENABLE && PSEL && ~(PWRITE || RegWrEn));
37 assign REG_WITH_RFIFO_reg_read = {24'h0,
38
             rfifo_read_data};
40 //-----
```

Register/Bitfield Types

Advanced Features

There are several features to gen_regs_py which either happen behind the scenes or may be needed in certain circumstances.

- DebugBus An auto-generated set of registers that allows the user to 'probe' signals that implement the Mux Override bitfield type
- DV Files Files needed for DV or for designer testing
- NO_REG_TEST Excludes this register from register testing
- DFT Features Logic settings for various DFT modes

DebugBus

gen_regs_py will create two additional registers if any Mux Override bitfield types are instantiated in the register block: * DEBUG_BUS_CTRL_SEL - Select signal for DEBUG_BUS_CTRL * DEBUG_BUS_CTRL_STATUS - Status output for DEBUG_BUS_STATUS

Note

The signals corresponding to the DEBUG_BUS* registers are completely internal to the register block

A Mux structure will be created so that a user can select the '_muxed' output to observe. DEBUG_BUS_CTRL_SEL is used to select the signal, and DEBUG_BUS_CTRL_STATUS can be read to see the value of the signal.

DEBUG_BUS_CTRL_SEL width is determined by the number of muxed overrides. (e.g. 7 muxed overrides would result in the bitfield being 3bits in width).

Warning

Currently the debugbus would only support up to 2^32 overrides. If you need more than this, well, I don't know what to tell you, but you may want to re-evaluate what you are trying to do.

Each '_muxed' output is given it's own select value, and the position is based on the location of the '_muxed' output in the register file. If the length of the '_muxed' output is smaller than 32bits, zeros are appended to the value.

Here is an example of the DEBUG_BUS registers in the RTL:

```
2 // DEBUG_BUS_CTRL
3 // DEBUG_BUS_CTRL_SEL - Select signal for DEBUG_BUS_CTRL
5 wire [31:0] DEBUG_BUS_CTRL_reg_read;
6 reg [2:0]
            reg_debug_bus_ctrl_sel;
8 always @(posedge RegClk or posedge RegReset) begin
  if(RegReset) begin
   end
13
     reg_debug_bus_ctrl_sel
                                       <= reg_debug_bus_ctrl_sel;
   end
16 end
18 assign DEBUG_BUS_CTRL_reg_read = {29'h0,
         reg_debug_bus_ctrl_sel};
20
22 assign swi_debug_bus_ctrl_sel = reg_debug_bus_ctrl_sel;
24
```

```
25
27
28 //-----
29 // DEBUG_BUS_STATUS
30 // DEBUG_BUS_CTRL_STATUS - Status output for DEBUG_BUS_STATUS
32 wire [31:0] DEBUG_BUS_STATUS_reg_read;
33 reg [31:0] debug_bus_ctrl_status;
35 //Debug bus control logic
36
      always @(*) begin
  case(swi_debug_bus_ctrl_sel)
             ase(swi_debug_bus_ctrl_sel)
'd0 : debug_bus_ctrl_status = {swi_dac0_therm_lo_muxed};
'd1 : debug_bus_ctrl_status = {1'd0, swi_dac0_therm_hi_muxed};
'd2 : debug_bus_ctrl_status = {26'd0, swi_dac0_bin_muxed};
'd3 : debug_bus_ctrl_status = {swi_dac1_therm_lo_muxed};
'd4 : debug_bus_ctrl_status = {1'd0, swi_dac1_therm_hi_muxed};
'd5 : debug_bus_ctrl_status = {26'd0, swi_dac1_bin_muxed};
default : debug_bus_ctrl_status = 32'd0;
39
41
43
46 end
48 assign DEBUG_BUS_STATUS_reg_read = {
                                                                                                      debug bus ctrl status};
```

DV Files

If a user passes the -dv flag, two additional files will be created: * <prefix>_<block>_dv.txt - Used by gen_uvm_reg_model for UVM DV flows * <prefix>_<block>_addr_defines.vh - Potentually used by DV and can be used for normal verilog simulations

Note

cprefix>_<block>_addr_defines.vh will create a list of Verilog `defines that can be used for DV
functions. Users will generally use these defines for simple Verilog test benches to keep up with addresses/bitfield
slices. Larger DV environments can continue to use these where needed.

Registers

Registers will be defined with the following format:

```
<PREFIX>_<BLOCK>_<REGNAME> <ADDRESS>
```

Bitfields

Bitfields will be defined with the following format (note the double underscore):

Reset Value

The Reset value will be defined with the following format (note the tripple underscore):

Here is an example of the defines from the RFIFO example:

```
define RFIFO EXAMPLE REG1
                                                                                         'h00000000
    define RFIFO_EXAMPLE_REG1__BF1_MUX
    define RFIFO_EXAMPLE_REG1__BF1
                                                                                                4:0
                                                                                       32 h00000000
    `define RFIFO EXAMPLE REG1 POR
                                                                                         'h00000004
   `define RFIFO EXAMPLE REG WITH RFIFO
    define RFIFO_EXAMPLE_REG_WITH_RFIFO__READ_DATA
                                                                                       32 h00000000
    `define RFIFO EXAMPLE REG WITH RFIFO
10 `define RFIFO_EXAMPLE_DEBUG_BUS_CTRL
11 `define RFIFO_EXAMPLE_DEBUG_BUS_CTRL__DEBUG_BUS_CTRL_SEL
                                                                                         'h00000008
   `define RFIFO_EXAMPLE_DEBUG_BUS_CTRL_
                                                                                       32'h00000000
                                                                                         'h0000000C
    define RFIFO_EXAMPLE_DEBUG_BUS_STATUS
    define RFIFO EXAMPLE DEBUG BUS STATUS DEBUG BUS CTRL STATUS
15
                                                                                       32'h00000000
    define RFIFO_EXAMPLE_DEBUG_BUS_STATUS___POR
```

NO_REG_TEST

Occasionally there are registers in the design that are required to be excluded from normal register testing as they may interfere with other logic. To work around this, NO_REG_TEST can be added to registers during declaration. This will signal to gen_uvm_reg_model that this register should be added to the exclusion list. There is no effect on the RTL for declaring a register as NO_REG_TEST.

To exclude a register, simply add {NO_REG_TEST} to the register declaration line, after the REGTYPE, but prior to the description (if there is a description). Below is an example:

DFT Features

Since many designs will place registers driving vital components (analog, resets, etc.) into certain states during DFT, there may be cases where a user wants to have control over the output value during various DFT modes. To accomplish this without the need to extra external logic, gen_regs_py allows a user to denote the value of a bitfield during specific DFT modes, and optionally add a Boundary SCAN Drive/Capture flop.

DFT Modes

Currently, gen_regs_py supports controls for the following DFT modes/settings:

- CORESCAN DFT core scan mode for flop related testing (e.g. stuck-at)
- IDDQ IDDQ Mode
- HIZ Highz Mode
- BSCAN Boundary Scan

Note

These DFT *modes* are not required to be a one-to-one match. If you wanted to use IDDQ as some type of global power down setting, you are free to do that. The naming is meant to give users a match to typical DFT modes if they are required for their design.

Declaring Bitfield Values in DFT

A user would declare a bitfield to have a DFT value by using the following syntax:

```
<BFNAME> <BFRESET> <BFTYPE> <{DFT}> <DESCRIPTION>
```

The <{DFT}> portion of the bitfield declaration is actually expandable to allow a user to describe multiple DFT mode values.

The main syntax for each mode would be as follows:

```
CORESCAN:<VAL> - Value during core_scan mode

IDDQ:<VAL> - Value during iddq mode

HIZ:<VAL> - Value during highz mode

BSCAN:<VAL> - Value during bscan mode

DFT:<VAL> - Value during all DFT modes, unless explicity set

BFLOP - Instantiate a BSCAN Flop. If bitfield is RW then this is a drive flop

if bitfield is RO then this is capture flop
```

A special note about the DFT: <VAL> setting. This is used for cases where a user wants to say that any DFT mode not defined will have this value. It can be thought of as a "catch-all" for the DFT modes, and keep the input file

Advanced Features

simple. However, if you define DFT: <VAL> with any other DFT mode setting, the explicity value will be used in the respective mode.

Note

Each instance is to be separated by a 'pipe' character, and all enclosed in curly brackets. Example: {DFT:<VAL>|IDDQ:<VAL>}

Note

If declaring DFT modes for a bitfield that has a mux override, declare the DFT modes on the bitfield without the mux

Warning


RO registers can **ONLY** have Boundary Scan Flops inserted as they drive no logic in the design. Any additional DFT modes are ignored.

DFT Priority

When declaring a bitfield for having DFT overrides, if more than one DFT mode is assigned, then the following priority is used:

- 1. BFLOP If a Boundary Scan Flop is instantiated, it is last in the DFT override chain
- 2. BSCAN
- 3. HIZ
- 4. IDDQ
- 5. CORESCAN
- 6. Normal register operation

Below is an example of the circuit when all DFT modes are in effect.

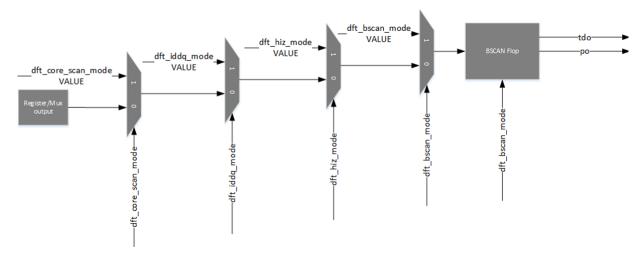

Note

Only modes that are supported for each bitfield will have a DFT mux override instantiated. For example, you have a CORE_SCAN mode and a BFLOP set. You will only have the CORE_SCAN mux override and a final BFLOP.

RTL Generation

If no DFT modes are set for any of the bitfields, there are no additional ports on the top level Verilog. If DFT modes are set, the additional ports are determined by modes needed for each bitfield.

This is a list of all the DFT related ports, and what would cause them to be instantiated:

```
1 //DFT Ports (if used)
2 input wire dft_core_scan_mode,
3 input wire dft_iddq_mode,
4 input wire dft_bscan_mode,
5 input wire dft_bscan_mode,
6 // BSCAN Shift Interface
7 input wire dft_bscan_tck,
8 input wire dft_bscan_trstn,
9 input wire dft_bscan_capture,
10 input wire dft_bscan_shift,
11 input wire dft_bscan_tdi,
13 output wire dft_bscan_tdo, //Assigned to last in chain
```

- dft_core_scan_mode If CORESCAN is used, OR if DFT is used
- dft_iddq_mode If IDDQ is used, OR if DFT is used
- dft_hiz_mode If HIZ is used, OR if DFT is used
- dft_bscan_mode If BSCAN is used, if BFLOP is used, OR if DFT is used
- dft_bscan_* (shift interface) If BFLOP is used

Internally the muxes that are used will follow a naming convention of clock_mux_<BFNAME>_<DFTMODE>. Any BFLOPS are given the name jtag_bsr_<BFNAME>. Since bitfield names are required to be unique, there is no concern of modules with the same name.

Examples

DFT Mux Overrides

While there are several combinations of valid descriptions, here are a few examples with respective comments for what the user can expect:

```
1 REG1 RW
2 bf1 4'h3 {DFT:0} Global setting of 0 during DFT modes
3 bf2 5'b0 {HIZ:1} Put DFT on the non-mux. Only active in Hiz mode
4 bf2_mux 1'b0
5 bf3 1'b1 {IDDQ:0|DFT:1} Set to 0 in IDDQ, but 1 in all other modes
6 set_core_scan 1'b0 {CORESCAN:1} Set to 1 in CORESCAN mode
```

And this is what the RTL internals would look like:

```
13 reg
                  reg_set_core_scan;
15 always @(posedge RegClk or posedge RegReset) begin
16 if(RegReset) begin
 17
         reg_bf1
                                                          <= 4'h3;
                                                          <= 5'h0;
         reg bf2
 18
                                                         <= 1'h0;
<= 1'h1;
 19
         reg_bf2_mux
 20
         reg bf3
 21
         reg_set_core_scan
                                                          <= 1'h0;
      end else if(RegAddr == 'h0 && RegWrEn) begin
reg_bf1 <= F</pre>
 22
 23
                                                          <= RegWrData[3:0];
                                                         <= RegWrData[8:4];
<= RegWrData[9];</pre>
 24
         reg_bf2
 25
         reg_bf2_mux
                                                          <= RegWrData[10];
 26
         reg_bf3
         reg_set_core_scan
 27
                                                         <= RegWrData[11];
      end else begin
reg_bf1
 29
                                                         <= rea bf1:
 30
         reg_bf2
                                                         <= reg_bf2;
 31
         reg_bf2_mux
                                                         <= reg_bf2_mux;
 32
         reg_bf3
                                                         <= reg_bf3;
 33
34
         reg_set_core_scan
                                                         <= reg_set_core_scan;
      end
 35 end
 36
 37 assign REG1_reg_read = {20'h0,
             reg_set_core_scan, reg_bf3,
 38
 39
 40
              reg_bf2_mux,
 41
              reg bf2,
 42
              reg_bf1};
 43
 44 //-----
 45
 46 wire [3:0] reg_bf1_core_scan_mode;
48 wire [s:0] reg_oil_core_scan_mode;
47 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf1_core_scan_mode[3:0] (
48 .clk0 ( reg_bf1 ),
49 .clk1 ( 4'd0 ),
50 .sel ( dft_core_scan_mode ),
      .clk_out ( reg_bf1_core_scan_mode
 51
 52
 53
 54 wire [3:0] reg_bf1_iddq_mode;
55 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf1_iddq_mode[3:0] (
      .clk0 (reg_bf1_core_scan_mode ),
.clk1 (4'd0 ),
.sel (dft_iddq_mode ),
.clk_out (reg_bf1_iddq_mode ));
     .clk0
.clk1
 56
 57
                                                                ));
 59
 61
 62 wire [3:0] reg_bf1_hiz_mode;
.clk_out ( reg_bf1_hiz_mode
 68
 70 wire [3:0] reg_bf1_bscan_mode;
71 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf1_bscan_mode[3:0] (
     .clk0 ( reg_bf1_hiz_mode
.clk1 ( 4'd0
.sel ( dft_bscan_mode
 72
                                                              ),
),
 73
 75
      .clk_out ( reg_bf1_bscan_mode
                                                                ));
 76
 77 assign swi_bf1 = reg_bf1_bscan_mode;
 78
 79 //-----
 80
80 Wire [4:0] swi_bf2_muxed_pre;

82 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf2[4:0] (

83 .clk0 ( bf2 ),

84 .clk1 ( reg_bf2 ),

85 .sel ( reg_bf2_mux ),
 86
     .clk_out ( swi_bf2_muxed_pre
 87
 88
 89 wire [4:0] reg_bf2_hiz_mode;
90 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf2_hiz_mode[4:0] (
    .clk0 (swi_bf2_muxed_pre
.clk1 (5'd1
.sel (dft_hiz_mode
.clk_out (reg_bf2_hiz_mode
 91
                                                                ),
),
 92
 93
 94
                                                                ));
 95
 96 assign swi_bf2_muxed = reg_bf2_hiz_mode;
 98 //----
 99 //----
100
101 wire
                   reg bf3 core scan mode;
102 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf3_core_scan_mode (
```

```
103
      .c1k0
                ( reg_bf3
      .clk1
105
       .sel
                  dft core scan mode
      .clk_out ( reg_bf3_core_scan_mode
106
107
108
109 wire reg_bf3_iddq_mode;
110 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf3_iddq_mode (
     .clk0
                ( reg_bf3_core_scan_mode
112
      .c1k1
                ( dft_iddq_mode
113
      .sel
114
      .clk_out ( reg_bf3_iddq_mode
115
116
117 wire
                 rea bf3 hiz mode:
118 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bf3_hiz_mode (
119 .clk0 ( reg_bf3_iddq_mode ),
120 .clk1 ( 1'd1 ),
                ( dft_hiz_mode
121
     .sel
     .clk_out ( reg_bf3_hiz_mode
122
                                                        ));
123
124
125 wire
                 reg_bf3_bscan_mode;
126 way clock mux #(.STDCELL(STDCELL)) u way clock mux bf3 bscan mode (
    .clk0
                ( reg_bf3_hiz_mode
     .clk1
128
                ( dft_bscan_mode
129
130
      .clk_out ( reg_bf3_bscan_mode
131
132 assign swi_bf3 = reg_bf3_bscan_mode;
133
135
136 wire
                 reg set core scan core scan mode;
137 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_set_core_scan_core_scan_mode (
    .clk0
138
                ( reg set core scan
                                                        ),
139
     .clk1
                ( dft core scan mode
140
      .sel
      .clk_out ( reg_set_core_scan_core_scan_mode
142
143 assign swi_set_core_scan = reg_set_core_scan_core_scan_mode;
```

As you can see, bf1 is set to be 'd0 in all DFT modes, so each DFT mux is instantiated with 'd0 as the value during the respective mode.

bf2 is only to be controlled in the HIZ mode, so only a mux override for HIZ mode is instantiated. Also note that the mux overrides for DFT occur *after* the software controlled mux override.

bf3 is set to be 'd0 in IDDQ and 'd1 in all other modes. You can see that all modes have 'd1 except for the IDDQ mux input.

Boundary Scan Stitching

Here is an example of a user wanting to instantiate BFLOPs for several bitfields in the input file:

```
REG_WITH_BSCAN_FLOP RW
bscan_flop_drive 1'b0 {CORESCAN:1|BFLOP} First in the chain since first in the file
bscan_flop_capture 3'b0 RO {BFLOP} 2nd, 3rd, 4th in chain

LAST_BSCAN_FLOP RW
last_one_in_chain 1'b0 {BFLOP} Last one in the chain
```

And here is the output Verilog:

```
17 end
19 assign REG_WITH_BSCAN_FLOP_reg_read = {28'h0,
       bscan_flop_capture,
21
             reg_bscan_flop_drive};
22
 23 //-----
 24
 25 wire
                 reg_bscan_flop_drive_core_scan_mode;
26 wav_clock_mux #(.STDCELL(STDCELL)) u_wav_clock_mux_bscan_flop_drive_core_scan_mode (
27 .clk0 (reg_bscan_flop_drive ),
28 .clk1 (1'd1 ),
29 .sel (dft_core_scan_mode ),
 30
      .clk_out ( reg_bscan_flop_drive_core_scan_mode
                                                                ));
31
 32 wire bscan_flop_drive_tdo;
33
 34 wire bscan_flop_drive_bscan_flop_po;
35 wav_jtag_bsr u_wav_jtag_bsr_bscan_flop_drive (
36 .i_tck ( dft_bscan_tck
    .i_tck
                       ( dft_bscan_trstn
( dft_bscan_mode
 37
     .i_trst_n
 38
      .i bsr mode
 39
      .i_capture
                         dft_bscan_capture
                       ( dft bscan shift
40
      .i shift
                                                                 ),
                       ( dft_bscan_update
      .i_update
                       ( reg_bscan_flop_drive_core_scan_mode ( bscan_flop_drive_bscan_flop_po
42
      .i_pi
 43
      .o_po
44
      .i_tdi
                       ( dft_bscan_tdi
45
                      ( bscan_flop_drive_tdo
      .o_tdo
46
47
48 assign swi_bscan_flop_drive = bscan_flop_drive_bscan_flop_po;
49
50 //--
 51 wire [2:0] bscan_flop_capture_tdo;
 52
 53 wav_jtag_bsr u_wav_jtag_bsr_bscan_flop_capture[2:0] (
     .i_tck
54
                  ( dft_bscan_tck
( dft_bscan_trstn
      .i_trst_n
 55
56
      .i bsr mode
                         dft bscan mode
      .i_capture
                       ( dft_bscan_capture
 57
 58
      i shift
                         dft bscan shift
                         dft_bscan_update
 59
      .i update
 60
                       ( bscan_flop_capture
      .i_pi
61
      .o po
                         /*noconn*/
      .i_tdi
                       ( {bscan_flop_capture_tdo[1],
                          bscan_flop_capture_tdo[0],
bscan_flop_drive_tdo}
63
                       bscan_flop_drive_tdo} )
( {bscan_flop_capture_tdo[2],
  bscan_flop_capture_tdo[1],
 65
      .o_tdo
66
67
                          bscan_flop_capture_tdo[0]}
                                                              ));
68
 69
 70
 72
 73
 74 //-----
75 // LAST_BSCAN_FLOP
76 // last_one_in_chain - Last one in the chain
77 //-----
 78 wire [31:0] LAST_BSCAN_FLOP_reg_read;
 79 reg
                 reg_last_one_in_chain;
 80
81 always @(posedge RegClk or posedge RegReset) begin
82 if(RegReset) begin
     83
84
     end else begin
86
        reg_last_one_in_chain
 87
                                                    <= reg_last_one_in_chain;</pre>
    end
88
89 end
 90
91 assign LAST_BSCAN_FLOP_reg_read = {31'h0,
            reg_last_one_in_chain};
93
95 wire last_one_in_chain_tdo;
97 wire last_one_in_chain_bscan_flop_po;
98 wav_jtag_bsr u_wav_jtag_bsr_last_one_in_chain (
 99
                         dft_bscan_tck
      .i trst n
                         dft_bscan_trstn
100
101
      .i_bsr_mode
                         dft_bscan_mode
102
       .i_capture
                         dft_bscan_capture
                       ( dft_bscan_shift
( dft_bscan_update
( reg_last_one_in_chain
103
      .i_shift
104
       .i_update
105
      .i pi
106
       .o_po
                       ( last_one_in_chain_bscan_flop_po
```

Advanced Features

Since bscan_flop_drive is the first bitfield defined as a BFLOP, it will be the first one in the chain. The user also declared that this bitfield should be driven to a different value in CORESCAN mode, so a mux override for CORESCAN was placed prior to the BFLOP.

You can then see that bitfield bscan_flop_capture is next in the input file, so it is placed in the 2nd, 3rd, and 4th locations in the chain (since it is multi-bit). You can see that gen_regs_py has automatically stitched these next flops in. The PO of the BFLOP is not connected for RO bitfields, as this is taken directly to the APB read interface.

The last bitfield last_one_in_chain is also defined as a BFLOP and is stitched in as the last location in the chain. Since it is the last one, it is connected to dft_bscan_tdo, which is then connected to the next level of the design.