

## UM1606 User manual

## STMTouch driver user manual

#### Introduction

The document covers the following touch sensing library product codes:

- STM8L-TOUCH-LIB
- STM8TL-TOUCH-LIB
- 32L1-TOUCH-LIB
- 32F0-TOUCH-LIB
- 32F3-TOUCH-LIB

#### The STMTouch driver includes:

- A complete register address mapping with all bits, bitfields and registers declared in C.
   This avoids a cumbersome task and more importantly, it brings the benefits of a bug free reference mapping file, speeding up the early project phase.
- A collection of routines and data structures covering all functions to manage the touch sensing technology.

The STMTouch driver source code is developed using the ANSI-C standard. It is fully documented and is MISRA®-C 2004 compliant. Writing the whole library in 'Strict ANSI-C' makes it independent from the development tools. Only the start-up files depend on the development tools.

Run-time failure detection is also implemented by checking the input values for all library functions. Such dynamic checking contributes towards enhancing the robustness of the firmware. Run-time detection is suitable for user application development and debugging. It adds an overhead which can be removed from the final application code to minimize code size and execution speed. For more details refer to Section 1.4: Run-time checking.

Since the STMTouch driver is generic and covers many functionalities and devices, the size and/or execution speed of the application code may not be optimized. For many applications, the STMTouch driver may be used as is. However, for applications having tough constraints in terms of code size and/or execution speed, the STMTouch driver may need to be fine tuned.

Note:

Additional information on the STMTouch driver functions, variables and parameters can be found in the CHM user manual present in the STMTouch Library installation folder.

Contents UM1606

## **Contents**

1	Cod	ing rule	es and conventions	. 9	
	1.1	Glossa	ary	. 9	
	1.2	Namin	ng conventions	10	
	1.3	Coding	g rules	10	
		1.3.1	General	10	
		1.3.2	Variable types	10	
		1.3.3	Peripheral registers	10	
	1.4	Run-ti	me checking	10	
	1.5	MISRA	A-C 2004 compliance	.11	
		1.5.1	Generalities	11	
		1.5.2	Compliance matrix	11	
2	STM	Touch	driver	14	
	2.1	Suppo	orted devices and development tools	14	
		2.1.1	Supported devices	14	
		2.1.2	Development tools	15	
	2.2	Packa	ge description	15	
	2.3	Main features			
	2.4	Archite	ecture	17	
		2.4.1	Overview	17	
		2.4.2	STMTouch driver layers	17	
		2.4.3	Acquisition and processing layers	18	
		2.4.4	Header files inclusion	20	
	2.5	Chanr	nel	20	
		2.5.1	Principle	20	
		2.5.2	Resources	21	
		2.5.3	Parameters	21	
		2.5.4	Usage example	21	
	2.6	Bank		22	
		2.6.1	Principle	22	
		2.6.2	Resources	23	
		2.6.3	Parameters	23	
		2.6.4	Usage example	23	



2.7	Zone .	
	2.7.1	Principle
	2.7.2	Resources
	2.7.3	Parameters
	2.7.4	Usage example
2.8	Objects	
	2.8.1	Principle
	2.8.2	Resources
	2.8.3	Parameters
	2.8.4	Usage example
2.9	Touchke	ey sensor
	2.9.1	Principle
	2.9.2	Resources
	2.9.3	Parameters
	2.9.4	Usage example
2.10	Linear a	and rotary sensors
	2.10.1	Principle
	2.10.2	Number of channels
	2.10.3	Delta coefficient table
	2.10.4	Electrodes placement
	2.10.5	Resources
	2.10.6	Parameters
	2.10.7	Usage example
2.11	Main sta	ate machine
2.12	Sensors	s state machine
	2.12.1	Overview
	2.12.2	States constant table
	2.12.3	States detail
	2.12.4	Calibration state
	2.12.5	RELEASE state
	2.12.6	Proximity state
	2.12.7	DETECT state
	2.12.8	TOUCH state
	2.12.9	ERROR state
	2.12.10	OFF state
	2.12.11	Debounce states

	2.12.12	Reading the current state	. 43
	2.12.13	Accessing a specific state	. 43
2.13	Environ	ment Change System (ECS)	44
	2.13.1	Principle	. 44
	2.13.2	Resources	. 44
	2.13.3	Parameters	. 45
	2.13.4	Usage example	. 45
2.14	Detection	on Exclusion System (DXS)	46
	2.14.1	Principle	. 46
	2.14.2	Resources	. 47
	2.14.3	Parameters	. 48
	2.14.4	Usage example	. 48
2.15	Detection	on Time Out (DTO)	48
	2.15.1	Principle	. 48
	2.15.2	Resources	. 49
	2.15.3	Parameters	. 49
	2.15.4	Usage	. 49
2.16	Noise fi	Iters	49
	2.16.1	Principle	. 49
	2.16.2	Resources	. 49
	2.16.3	Parameters	49
	2.16.4	Usage	. 50
2.17	Timing i	management	50
	2.17.1	Principle	. 50
	2.17.2	Resources	. 50
	2.17.3	Parameters	. 50
	2.17.4	Usage	. 50
2.18	Parame	eters	51
2.19	STM8L	1xx devices	51
	2.19.1	Acquisition	. 51
	2.19.2	Timings	. 52
	2.19.3	Parameters	. 52
	2.19.4	Memory footprint	. 53
	2.19.5	MCU resources	. 54
	2.19.6	STM8L available touch-sensing channels	. 54
	2.19.7	Hardware implementation example	62

UM1606 Contents

<b>\7</b> /			DocID024201 Rev 4	5/125
		3.1.1	Toolchain compiler preprocessor section	114
	3.1	Create	your application	
3	Getti	ng start	ted	114
		۷.۷۵.۱	naroware implementation example	
		2.23.6 2.23.7	STM32L1xx available touch-sensing channels	
		2.23.5	MCU resources	
		2.23.4	Memory footprint	
		2.23.3	Parameters	
		2.23.2	Timings	
		2.23.1	Acquisition	
	2.23		PL1xx devices	
	0.00	2.22.7	Hardware implementation example	
		2.22.6	STM32F3xx available touch-sensing channels	
		2.22.5	MCU resources	
		2.22.4	Memory footprint	
		2.22.3	Parameters	
		2.22.2	Timings	
		2.22.1	Acquisition	
	2.22		PF3xx devices	
		2.21.7	Hardware implementation example	
		2.21.6	STM32F0xx available touch-sensing channels	
		2.21.5	MCU resources	
		2.21.4	Memory footprint	
		2.21.3	Parameters	
		2.21.2	Timings	
		2.21.1	Acquisition	
	2.21	STM32	PF0xx devices	
		2.20.8	Hardware implementation example	
		2.20.7	STM8TL5x available touch-sensing channels	
		2.20.6	MCU resources	
		2.20.5	Acquisition timings	
		2.20.4	Memory footprint	
		2.20.3	Parameters	64
		2.20.2	Timings	64
		2.20.1	Acquisition	64
	2.20	STM8T	TL5x devices	64

		<b>-</b>	
	3.1.2	The tsl_conf file	114
	3.1.3	The main file	114
	3.1.4	The tsl_user file	114
3.2	Debug	g with STM Studio	
3.3	Low-p	ower strategy	
3.4	Main d	differences with previous library	
	3.4.1	Files	118
	3.4.2	Channels, banks and sensors configuration	118
	3.4.3	Parameters configuration	
	3.4.4	Usage	119
	3.4.5	Variables monitoring	120
3.5	Tips a	nd tricks	123
	3.5.1	Bank definition	123
	3.5.2	Channel assignment	123
	3.5.3	IO Default state parameter	123
4 Revi	ision his	story	124

UM1606 List of tables

## List of tables

Table 1.	Terms and Acronyms	9
Table 2.	MISRA-C 2004 rules not followed	12
Table 3.	Supported linear and rotary sensors	31
Table 4.	Detailed sensors states 1/2	40
Table 5.	Detailed sensors states 2/2	41
Table 6.	STM8L101 memory footprint with software acquisition	53
Table 7.	STM8L15x memory footprint with hardware acquisition	
Table 8.	STM8L15x memory footprint with software acquisition	53
Table 9.	MCU resources used on STM8L1xx with hardware acquisition	54
Table 10.	MCU resources used on STM8L1xx with software acquisition	
Table 11.	Available touch-sensing channels for STM8L101	
Table 12.	Available touch-sensing channels for STM8L15x / STM8L16x (table 1/2)	56
Table 13.	Available touch-sensing channels for STM8L15x / STM8L16x (table 2/2)	58
Table 14.	STM8TL5x memory footprint without proximity	65
Table 15.	STM8TL5x memory footprint with proximity	
Table 16.	STM8TL5x acquisition timings	
Table 17.	STM8TL5x MCU resources used	
Table 18.	Available touch-sensing channels for STM8TL5x	
Table 19.	STM32F0xx memory footprint without proximity	
Table 20.	STM32F0xx memory footprint with proximity	
Table 21.	STM32F0xx MCU resources used	
Table 22.	Available touch sensing channels for STM32F042	
Table 23.	Available touch sensing channels for STM32F051 and STM32F072	
Table 24.	STM32F30x memory footprint	
Table 25.	STM32F37x memory footprint	
Table 26.	STM32F3xx MCU resources used	
Table 27.	Available touch sensing channels for STM32F30x	
Table 28.	Available touch sensing channels for STM32F37x	
Table 29.	STM32L1xx_HD memory footprint without proximity	
Table 30.	STM32L1xx_HD memory footprint with proximity	
Table 31.	STM32L1xx_MDP memory footprint without proximity	
Table 32.	STM32L1xx_MDP memory footprint with proximity	
Table 33.	STM32L1xx_MD memory footprint without proximity	
Table 34.	STM32L1xx_MD memory footprint with proximity	
Table 35.	MCU resources used on STM32L1xx with hardware acquisition	
Table 36.	MCU resources used on STM32L1xx with software acquisition	
Table 37.	Available touch sensing channels for STM32L1xx 512K	
Table 38.	Available touch sensing channels for STM32L1xx 384K	
Table 39.	Available touch sensing channels for STM32L1xx 256K (table 1/2)	
Table 40.	Available touch sensing channels for STM32L1xx 256K (table 2/2)	
Table 41.	Available touch sensing channels for STM32L15x 32K to 128K	
Table 42.	Document revision history	124



List of figures UM1606

# List of figures

Figure 1.	Installation folder 1/2	15
Figure 2.	Installation folder 2/2	
Figure 3.	STMTouch driver architecture overview	17
Figure 4.	STMTouch driver detailed layers	18
Figure 5.	Acquisition and processing layers	19
Figure 6.	Header files inclusion	
Figure 7.	Channels arrangement	22
Figure 8.	Electrodes designs	30
Figure 9.	Positions 0 and 255	31
Figure 10.	Main state machine	
Figure 11.	Example of main state machine	36
Figure 12.	Simplified sensors state machine	37
Figure 13.	DXS principle	46
Figure 14.	DXS example 1	47
Figure 15.	DXS example 2	47
Figure 16.	STM8L101 hardware implementation example	63
Figure 17.	Simplified acquisition sequencing	66
Figure 18.	STM8TL5x hardware implementation example	72
Figure 19.	STM32F0xx hardware implementation example	80
Figure 20.	STM32F3xx hardware implementation example	89
Figure 21.	STM32L1xx hardware implementation example	113
Figure 22.	STM Studio snapshot	116
Figure 23.	Low_power strategy	117
Figure 24.	Debug of TSL_ChannelData_T structure	120
Figure 25.	Debug of TSL_TouchKeyData_T structure	
Figure 26.	Debug of TSL_LinRotData_T structure	121
Figure 27.	Debug of TSL_TouchKeyParam_T	121
Figure 28	Debug of TSL LinRotParam T structures	122



## 1 Coding rules and conventions

## 1.1 Glossary

The table below summarizes all the terms and acronyms used inside this user manual.

**Table 1. Terms and Acronyms** 

Table 1. Terms and Actoriyms				
Name	Definition			
Bank	A group of channels acquired simultaneously			
Channel	Elementary acquisition item			
Cs	Charge-Transfer sampling capacitor or capacitance			
Ct	Equivalent touch capacitance			
СТ	Charge-Transfer acquisition principle			
Сх	Equivalent sensor capacitance			
Delta	Difference between the Measure and the Reference (for PXS acquisition)			
DTO	Detection Time Out			
DXS	Detection Exclusion System			
ECS	Environment Change System			
Linear sensor	Multi-channels sensor with the electrodes positioned in a linear way			
LinRot sensor	A linear or rotary touch sensor			
Measure or Meas	Current signal measured on a channel			
PXS	ProxSense acquisition peripheral used in STM8TL5x devices			
Reference or Ref	Measure of reference initialized during calibration and then regularly updated by the ECS			
Rotary	Multi-channels sensor with the electrodes positioned in a circular way			
Rs	ESD protection serial resistor			
Sensor or Object	Any touch sensor (touchkey, linear, rotary,)			
Timer acquisition mode	Acquisition using two timers and PWM signals. Also called hardware acquisition mode. Available on STM32L1xx devices			
Touchkey or TKey sensor	Single channel sensor			
Zone	An ordered set of banks			

## 1.2 Naming conventions

The following naming conventions are used in the STMTouch driver source files:

- Source and header files are in lower-case and preceded by 'tsl' or 'tsl'.
- The microcontroller family is added at the end of the file name if needed.
- Functions, globals, typedefs and defines are preceded by 'TSL'.
- Constants are written in upper case and preceded by 'TSLPRM\_'.
- Constants used in one file are defined within this file only.
- Constants used in more than one file are defined in a header file.
- Typedef names are suffixed with '\_T'.
- Enum typedefs are suffixed with ' enum T'.
- Functions are preceded 'TSL\_[module]\_[function]'.
  - [module]: abbreviation of the file (acq, tim, dxs, etc...)
  - [function]: the first letter in each word is in upper case

## 1.3 Coding rules

This section describes the coding rules used in the STMTouch driver source files.

#### 1.3.1 General

- Source code complies with ANSI C standard.
- No warning after compilation. Any warnings that cannot be eliminated are commented in the source code.
- ANSI standard data types are used and defined in the ANSI C header file <stdint.h>.
- No blocking code is present and all required waiting loops (polling loops) are controlled by a timeout.

### 1.3.2 Variable types

Specific variable types are already defined with a fixed type and size.

- The types that are used by all modules are defined in the tsl\_types.h file.
- Other variable types are defined in their corresponding module header file.

#### 1.3.3 Peripheral registers

The peripheral registers are accessed using the pointers described in the standard peripherals library mapping file.

## 1.4 Run-time checking

The STMTouch driver implements run-time failure detection by checking the functions input parameters. The run-time checking is achieved using the **assert\_param** macro defined in the standard peripherals library configuration file. It is enabled when the preprocessor constant **USE\_FULL\_ASSERT** is defined.

10/125 DocID024201 Rev 4



Because of the overhead it introduces, it is recommended to use run-time checking during application code development and debugging, and to remove it from the final application to improve code size and speed.

However if you want to keep this functionality in your final application, reuse the assert\_param macro defined in the standard peripherals library to test the parameter values before calling the STMTouch driver functions.

Please see the standard peripherals library user manual for more informations.

## 1.5 MISRA-C 2004 compliance

#### 1.5.1 Generalities

The C programming language is growing in importance for embedded systems. However, when it comes to developing code for safety-critical applications, this language has many drawbacks. There are several unspecified, implementation-defined, and undefined aspects of the C language that make it unsuited for developing safety-critical systems.

The motor industry software reliability association's guidelines for the use of the C language in critical systems (MISRA-C 2004 [1]) describe a subset of the C language well suited for developing safety-critical systems.

The STMTouch driver has been developed to be MISRA-C 2004 compliant.

The following section describes how the STMTouch driver complies with MISRA-C 2004 (as described in section 4.4 Claiming compliance of the standard [1]):

- A compliance matrix has been completed which shows how compliance has been enforced.
- The whole STMTouch driver source code is compliant with MISRA-C 2004 rules.
- Deviations are documented. A list of all instances of rules not being followed is being maintained, and for each instance there is an appropriately signed-off deviation.
- All the issues listed in section 4.2 "The programming language and coding context of the standard" [1], that need to be checked during the firmware development phase, have been addressed during the development of the STMTouch driver and appropriate measures have been taken.

### 1.5.2 Compliance matrix

The compliance of the STMTouch driver with MISRA-C 2004 has been checked in two ways:

- using PC-lint tool for C/C++ (NT) vers. 8.00v, copyright gimpel software 1985-2006
- performing regular code reviews.

The following table lists the MISRA-C 2004 rules that are frequently violated in the code:



Table 2. MISRA-C 2004 rules not followed

MISRA-C 2004 rule number	Required/ advisory	Summary	Reason of deviance
1.1 1.2	Required	All code shall conform to ISO 9899:1990 standard C, with no extensions permitted.	Compilers extensions are enabled. Comments starting with "//" symbol for code readability.
5.4	Required	A tag name shall be a unique identifier.	Due to the usage of objects methods.
8.1	Required	No prototype seen. Functions shall always have prototype declarations and the prototype shall be visible at both the function definition.	This rule is violated as there is no functions prototypes for the objects methods.
10.1 10.2	Required	The value of an expression of integer/floating type shall not be implicitly converted to a different underlying type.	Code complexity
10.3	Required	The value of a complex expression of integer type may only be cast to a type that is narrower and of the same signedness as the underlying type of the expression.	Code complexity
10.5	Required	If the bitwise operators are applied to an operand of underlying type unsigned char or unsigned short, the result shall be immediately cast to the underlying type of the operand.	Use shift on signed quantity for the linear/rotary position
11.3	Advisory	A cast should not be performed between a pointer type and an integral type.	Needed when addressing memory mapped registers.
12.7	Required	Bitwise operators shall not be applied to operands whose underlying type is signed.	Shift of signed value needed



Table 2. MISRA-C 2004 rules not followed (continued)

MISRA-C 2004 rule number	Required/ advisory	Summary	Reason of deviance
14.3	Required	Before preprocessing, a null statement shall only occur on a line by itself.	Usage of macros to simplify the code
14.5	Required	The continue statement shall not be used.	Used to optimize the code speed execution.
19.11	Required	All macro identifiers in preprocessor directives shall be defined before use, except in ifdef and ifndef preprocessor directives and the defined() operator.	All parameters are checked in the check_config files



## 2 STMTouch driver

## 2.1 Supported devices and development tools

#### 2.1.1 Supported devices

This STMTouch driver version supports the following devices and acquisition modes:

- Support of STM8L1xx devices
  - Surface charge-transfer acquisition principle managed by:
  - Two timers + routing interface (hardware acquisition mode, supported only by STM8L15x low-density devices)
  - GPIOs + routing interface (software acquisition mode, supported by all STM8L devices)
  - Up to 6 channels with up to 2 channels acquired simultaneously for the STM8L101 devices (see *Table 11* for more details)
  - Up to 20 channels with up to 8 channels acquired simultaneously for the STM8L15x/16x devices (see *Table 12* and *Table 13* for more details)
- STM8TL5x devices using the embedded ProxSense™ patented acquisition technology.
  - Projected ProxSense™ acquisition principle
  - Up to 300 channels
  - Up to 10 channels can be acquired simultaneously (see Table 18 for more details)
  - Integrated sampling capacitor
  - Electrode parasitic capacitance compensation (EPCC)
  - On-chip integrated voltage regulator
- Support of STM32L1xx devices
  - Surface charge-transfer acquisition principle managed by:
  - Two timers + routing interface (hardware acquisition mode). This mode is not supported on Medium-density devices.
  - GPIOs + routing interface (software acquisition mode). This mode is supported by all devices.
  - Up to 34 channels
  - Up to 11 channels can be acquired simultaneously (see *Table 37*, *Table 38*, *Table 39*, *Table 40* and *Table 41* for more details)
- STM32F0xx and STM32F3xx devices using the embedded touch sensing controller IP (TSC).
  - Surface charge-transfer acquisition principle managed by the touch sensing controller
  - Up to 24 channels
  - Up to 8 channels can be acquired simultaneously (see *Table 22*, *Table 23*, *Table 27* and *Table 28* for more details)
  - Spread spectrum feature
  - Programmable charge transfer frequency and max count value

14/125 DocID024201 Rev 4



## 2.1.2 Development tools

The STM8 and STM32 microcontrollers are supported by a full range of development solutions from lead suppliers that deliver start-to-finish control of application development from a single integrated development environment.

The STMTouch driver has been developed with the following toolchains and compilers:

- STVD (STMicroelectronics) + Raisonance and Cosmic compilers
- EWSTM8 and EWARM (IAR)
- MDK-ARM (Keil)
- Tasking (Altium®)
- TrueSTUDIO®-C (Atollic®)
- Ride7 / RKit-Arm (Raisonance)

For more details about the compilers versions used, please see the STMTouch driver release note (present in the STMTouch Library installation folder).

## 2.2 Package description

The STMTouch driver is not supplied by itself. It is delivered instead inside each device STMTouch library (STMTouch\_Driver folder present in the Libraries folder).

The following snapshots show an example of installation.

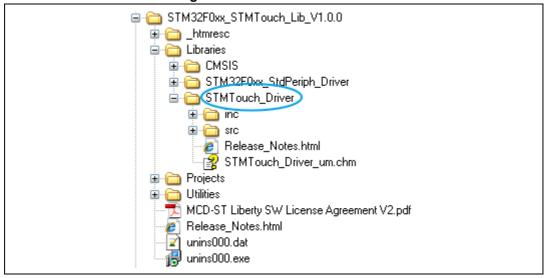


Figure 1. Installation folder 1/2

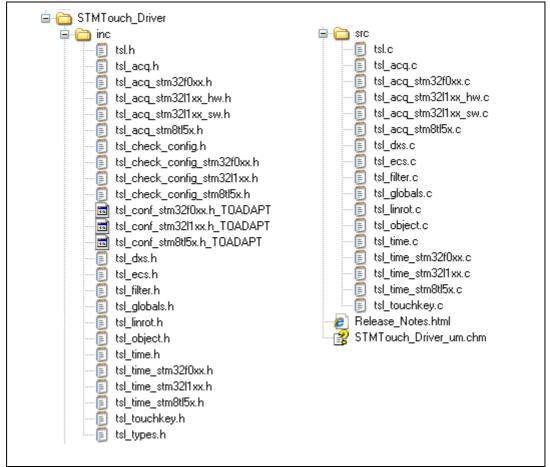


Figure 2. Installation folder 2/2

### 2.3 Main features

- Environment Change System (ECS)
- Detection Time Out (DTO)
- Detection Exclusion System (DXS)
- Noise filter
- Supports proximity, touchkeys and linear touch sensors
- Unlimited number of sensors
- Modular architecture allowing easy addition of new acquisitions or sensors
- Each sensor can have its own state machine
- Simplified timing management
- Run-time checking of functions parameters
- Management of error during acquisition

### 2.4 Architecture

#### 2.4.1 Overview

The following figure shows the interactions between the STMTouch driver and the other firmware layers.

Application layer

Hardware abstraction layer (HAL)

Standard peripherals library

Hardware layer

MCU

MSv31728V1

Figure 3. STMTouch driver architecture overview

The HAL is the hardware abstraction layer (HAL) which controls the device itself through hardware registers.

It is composed of different components:

- The STMTouch driver
- The standard peripherals library
- The CMSIS firmware (for STM32 devices only)
- Utilities and third-parties firmwares

The STMTouch driver can access directly to the MCU hardware registers using the map file provided by the standard peripherals library.

### 2.4.2 STMTouch driver layers

The following figure shows a more detailed view of the different STMTouch driver layers.

Note:

Application User application layer Processing layer **ECS Filters** STMTouch driver Acquisition MCU2 Acquisition MCU2 Acquisition layer Standard peripherals library MSv31729V1

Figure 4. STMTouch driver detailed layers

The STMTouch driver is composed of three main layers:

- The acquisition layer
- The processing layer
- The configuration layer

The configuration layer corresponds to what the user needs to write in its application code in order to use correctly the STMTouch driver. This includes all the channels and sensors declaration, the parameters, etc...

The acquisition and processing layers are described more in detail below.

## 2.4.3 Acquisition and processing layers

The following figure details the acquisition and processing layers and the different elements used in each layer.

**T** 

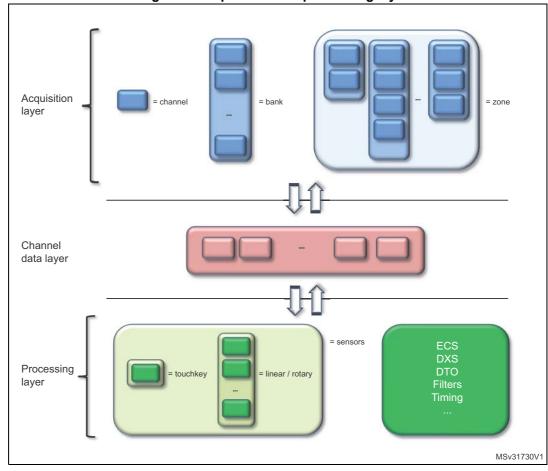


Figure 5. Acquisition and processing layers

The **acquisition layer** role is to perform the acquisition of the different channels. The result of the acquisition (measure and flags) is stored inside the channel data layer. These informations will be accessed by the processing layer.

The acquisition layer has only access to the channel, bank and zone elements. It does not have access to the sensor elements.

The **channel data layer** role is to share information between the acquisition and processing layers. It stores the result of the acquisition (measure) for each channel and store different informations coming from the processing layer (reference, delta, flags, etc...).

Located in RAM, the ChannelData structure is the only interface between the acquisition and processing layers.

This **processing layer** consists in executing each sensors state machine, executing the different data processing like ECS, DXS, DTO and storing any useful information for the acquisition layer inside the channel data area.

The processing layer does not have direct access to the channels, banks and zones. This access is made through the sensors.

#### 2.4.4 Header files inclusion

The figure below provides a global view of the STMTouch driver usage and the interaction between the different header files.

Note:

To simplify the drawing, only the most important links are shown. For example the tsl\_globals.h file is also included in different files.

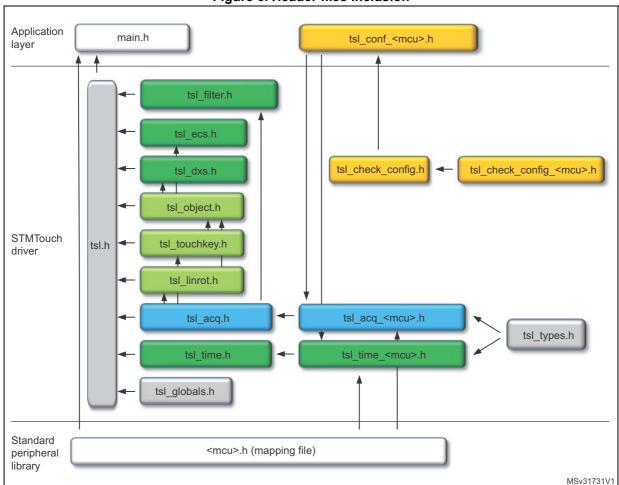


Figure 6. Header files inclusion

## 2.5 Channel

## 2.5.1 Principle

A channel is the basic element that is used to store several information like:

- where the source measurement can be found after the acquisition is performed (i.e. RX registers for STM8TL5x devices or TSC\_IOGxCR registers for STM32F0xx/STM32F3xx devices)
- where are stored the measure, the reference, the delta, flags etc...

#### 2.5.2 Resources

A channel is defined by 3 data structures:

• TSL\_ChannelSrc\_T: contains all information about the source measurement (index of the register containing the measurement, masks,...)

- TSL\_ChannelDest\_T: contains all information about the measurement destination (index in the channel data array).
- TSL\_ChannelData\_T: contains all data for the channel (measure, delta, reference, ...)

The channel depends on the acquisition technology. This is why the contents of this structures are not common for all acquisitions. They are declared in each acquisition header files (tsl acq <mcu>.h):

- tsl\_acq\_stm8l\_hw.h for STM8L devices using hardware acquisition mode
- tsl\_acq\_stm8l\_sw.h for STM8L devices using software acquisition mode
- tsl\_acq\_stm8tl5x.h for STM8TL5x devices
- tsl\_acq\_stm32l1xx\_hw.h for STM32L1xx devices using the hardware acquisition mode
- tsl\_acq\_stm32l1xx\_sw.h for STM32L1xx devices using the software acquisition mode
- tsl\_acq\_stm32f0xx.h for STM32F0xx devices
- tsl\_acq\_stm32f3xx.h for STM32F3xx devices

The maximum number of channels is only limited by the device (memory size and channels supported).

The user must declare all the channels array in its application code. It can be done directly in the main.c file or in any other file.

#### 2.5.3 Parameters

TSLPRM\_TOTAL\_CHANNELS

### 2.5.4 Usage example

The 3 channels structures must be declared in the application code.

Example of **channel source** array declaration for STM32F0xx devices. This structure must always be placed in ROM.

```
const TSL_ChannelSrc_T MyChannels_Src[TSLPRM_TOTAL_CHANNELS] =
{     CHANNEL_0_SRC },
     { CHANNEL_1_SRC },
     { CHANNEL_2_SRC }};
```

Example of **channel destination** array declaration for STM32F0xx devices. This structure must always be placed in ROM.

```
const TSL_ChannelDest_T MyChannels_Dest[TSLPRM_TOTAL_CHANNELS] =
{     CHANNEL_0_DEST },
     { CHANNEL_1_DEST },
     { CHANNEL_2_DEST }};
```



Note:

The "CHANNEL\_x\_SRC" and "CHANNEL\_x\_DEST" are "#define" constants and are used for readability. The values are acquisition dependant.

Example of **channel data** array declaration (i.e. channel data layer). This structure must always be placed in RAM.


```
TSL_ChannelData_T MyChannels_Data[TSLPRM_TOTAL_CHANNELS];
```

Warning:

When several banks are present, it is mandatory to declare all channels of each bank consecutively in the source and destination structures.

#### Example:



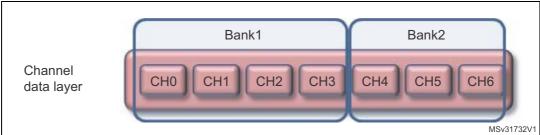

#### Example of **channel source** array declaration for STM32F0xx devices.

```
CONST TSL_ChannelSrc_T MyChannels_Src[TSLPRM_TOTAL_CHANNELS] =
{
   // Bank 1
{    CHANNEL_0_SRC, CHANNEL_0_IO_MSK, CHANNEL_0_GRP_MSK },
{    CHANNEL_1_SRC, CHANNEL_1_IO_MSK, CHANNEL_1_GRP_MSK },
{    CHANNEL_2_SRC, CHANNEL_2_IO_MSK, CHANNEL_2_GRP_MSK },
{    CHANNEL_3_SRC, CHANNEL_3_IO_MSK, CHANNEL_3_GRP_MSK },
    // Bank 2
{    CHANNEL_4_SRC, CHANNEL_4_IO_MSK, CHANNEL_4_GRP_MSK },
{    CHANNEL_5_SRC, CHANNEL_5_IO_MSK, CHANNEL_5_GRP_MSK },
{    CHANNEL_6_SRC, CHANNEL_6_IO_MSK, CHANNEL_6_GRP_MSK }
};
```

#### 2.6 Bank

## 2.6.1 Principle

A bank is a group of channels that are acquired simultaneously. The number of channels in the bank is variable.

22/125 DocID024201 Rev 4

#### 2.6.2 Resources

The bank data are held by only one structure:

- TSL Bank T
- The bank depends also on the acquisition technology. These structures are declared in each acquisition header files (tsl\_acq\_<mcu>.h):

The maximum number of banks is only limited by the device.

The user must declare all the banks array in its application code. It can be done directly in the main.c file or in any other file.

The banks are used mainly by the functions described below. Some functions are common whatever the device and acquisition technology. Some others are dependent on the device.

Common functions:

- TSL\_acq\_BankGetResult()
- TSL\_acq\_BankCalibrate()

Device dependent functions:

- TSL\_acq\_BankConfig()
- TSL\_acq\_BankStartAcq()
- TSL\_acq\_BankWaitEOC()

#### 2.6.3 Parameters

TSLPRM\_TOTAL\_BANKS

#### 2.6.4 Usage example

Example of 2 banks declaration for STM8TL5x devices:

```
// Always placed in ROM
const TSL_Bank_T MyBanks[TSLPRM_TOTAL_BANKS] =
  // Bank 0
  &MyChannels_Src[0],
  &MyChannels_Dest[0],
 MyChannels_Data,
  BANK_0_NBCHANNELS,
  // For STM8TL5x acquisition only
  BANK_0_MSK_CHANNELS,
  BIT_MASK_TX(BANK_0_TX),
  BANK_0_GROUP,
\#if (BANK_0_MSK_TX < 0x8000) // a TX pin is used as transmitter
  BANK_0_MSK_CHANNELS,
#else // a RX pin is used as transmitter
  (BIT_MASK_RX(BANK_0_TX) | BANK_0_MSK_CHANNELS),
#endif
  // Bank 1
```

```
&MyChannels_Dest[4],
&MyChannels_Dest[4],
MyChannels_Data,
BANK_1_NBCHANNELS,
// For STM8TL5x acquisition only
BANK_1_MSK_CHANNELS,
BIT_MASK_TX(BANK_1_TX),
BANK_1_GROUP,
#if (BANK_1_MSK_TX < 0x8000) // a TX pin is used as transmitter
BANK_1_MSK_CHANNELS,
#else // a RX pin is used as transmitter
(BIT_MASK_RX(BANK_1_TX) | BANK_1_MSK_CHANNELS),
#endif
};
```

The "BANK\_x\_NBCHANNELS", "BANK\_x\_MSK\_CHANNELS", "BIT\_x\_MASK\_TX", etc... are defines and are used for readability. These values are for STM8TL5x devices acquisition only.

#### Example of 3 banks declaration for STM32F0xx devices:

```
CONST TSL_Bank_T MyBanks[TSLPRM_TOTAL_BANKS] = {
    {&MyChannels_Src[0], &MyChannels_Data,
BANK_0_NBCHANNELS, BANK_0_MSK_CHANNELS, BANK_0_MSK_GROUPS},
    {&MyChannels_Src[1], &MyChannels_Dest[1], MyChannels_Data,
BANK_1_NBCHANNELS, BANK_1_MSK_CHANNELS, BANK_1_MSK_GROUPS},
    {&MyChannels_Src[2], &MyChannels_Dest[2], MyChannels_Data,
BANK_2_NBCHANNELS, BANK_2_MSK_CHANNELS, BANK_2_MSK_GROUPS}
}:
```

### 2.7 Zone

#### 2.7.1 Principle

A zone is an ordered group of banks. It is used to easily cascade the acquisition of many banks. The acquisition of the next bank in a zone is launched directly in the interrupt routine managing the acquisition result of the current acquired bank.

### 2.7.2 Resources

This feature is optional and is enabled/disabled using the TSLPRM\_USE\_ZONE parameter.

The zone data are held by only one structure:

TSL\_Zone\_T

The zones are used mainly by the function:

TSL\_acq\_ZoneConfig()

57

#### 2.7.3 Parameters

TSLPRM\_USE\_ZONE

## 2.7.4 Usage example

Example of a zone declaration containing 3 banks:

```
TSL_tIndex_T MyBankSorting[TSLPRM_TOTAL_BANKS] = {2, 0, 1, 3, 4, 5};
TSL_Zone_T MyZone = {
   MyBankSorting,
   0,
   3 // Number of Banks in the Zone
};
```

In this example the "MyBankSorting" array contains the list of the banks indexes to acquire. And only the 3 first Banks will be acquired (indexes 2, 0 and 1).

## 2.8 Objects

## 2.8.1 Principle

The term "object" or "sensor" stands for any sensors type (touchkeys, linear and rotary touch sensors, etc...) supported by the STMTouch driver.

#### 2.8.2 Resources

All processing that affect the sensors in general are defined in:

- tsl object.c
- tsl\_object.h

The functions are:

- TSL\_obj\_GroupInit()
- TSL obj GroupProcess()
- TSL\_obj\_SetGlobalObj()

A sensor is described by the structures:

- TSL Object T
- TSL\_ObjectGroup\_T

#### 2.8.3 Parameters

TSLPRM TOTAL OBJECTS

### 2.8.4 Usage example

First, all touchkeys, linear and rotary touch sensors (described after) used in the application must be described first as 'generic' sensor or object.

#### Example:

```
// Mix of touchkeys and Linear touch sensors
```

```
const TSL_Object_T MyObjects[TSLPRM_TOTAL_OBJECTS] =
{
    // TKeys
    { TSL_OBJ_TOUCHKEYB, (TSL_TouchKeyB_T *)&MyTKeys[0] },
    { TSL_OBJ_TOUCHKEYB, (TSL_TouchKeyB_T *)&MyTKeys[1] },
    // Linear touch sensors
    { TSL_OBJ_LINEARB, (TSL_LinRotB_T *)&MyLinRots[0] }
};
```

These objects must be placed in ROM memory.

Once this done, it is necessary to create at least one group of sensors. These groups will be used by the different processing routines (ECS, DXS, etc...).

These groups of objects must placed in RAM.

#### Example:

```
TSL_ObjectGroup_T MyObjGroup_All = {
  MyObjects,
  3,
  0,
  TSL_STATE_NOT_CHANGED
};
```

Then, all the sensors must be initialized and "processed". This is done in the main function of the application:

```
int main(void) {
    ...
    TSL_obj_GroupInit(&MyObjGroup_All);
    ...
    while (1) {
        ...
        TSL_obj_GroupProcess(&MyObjGroup_All);
        ...
    }
}
```

## 2.9 Touchkey sensor

### 2.9.1 Principle

The touchkey sensor is composed of only one channel. It acts as a simple "button" with two states RELEASE and DETECT (or TOUCH if DXS is enabled).

#### 2.9.2 Resources

All the functions related to this sensor are described in the files:

- tsl\_touchkey.c
- tsl\_touchkey.h

577

Two types of touchkey sensor are available:

- Basic: defined by the TSL\_TouchKeyB\_T structure
- Extended: defined by the TSL\_TouchKey\_T structure

Two functions (called methods) are used to initialized the sensor parameters and to run the sensor state machine:

- TSL\_tkey\_Init()
- TSL\_tkey\_Process()

The difference between the "basic" and "extended" concerns the usage of the methods and sensor state machine.

For the "basic" sensor, the methods and state machine are those used in the **TSL\_Params** structure.

For the "extended" sensor, the methods and state machine are those declared in their own structure.

### 2.9.3 Parameters

TSLPRM\_TOTAL\_TKEYS

#### 2.9.4 Usage example

The user must declared these methods in the application code.

Note:

One can also use its own initialization and process functions instead:

```
const TSL_TouchKeyMethods_T MyTKeys_Methods =
{
   TSL_tkey_Init,
   TSL_tkey_Process
};
```

The declaration of the touchkey sensor is done by the user in the application code:

Example with "basic" sensor:

```
{ &MyTKeys_Data[2], &MyTKeys_Param[2], &MyChannels_Data[2], MyTKeys_StateMachine, &MyTKeys_Methods } };
```

## 2.10 Linear and rotary sensors

## 2.10.1 Principle

The linear and rotary sensors are like a touchkey sensor except that they are composed of a variable number of channels. The difference between the linear and rotary touch sensors is how the electrodes are organized together.

The linear and rotary sensors have additional fields in their structure compared to touchkey sensors:

- Number of channels
- Delta coefficient table
- Position offset table
- Sector computation parameter
- Position correction parameter for linear sensor

The last 3 fields are used to calculate the position.

#### 2.10.2 Number of channels

Only 1, 3, 4, 5 and 6 channels are supported today by the STMTouch driver. Additional number of channels can be added by the end-user. See the *Position offset table* bullet below for more detail.

Note:

A Linear sensor with 1 channel is equivalent to one touchkey sensor. When an application uses both touchkey sensor and linear and rotary sensor, it is better to use touchkeys with a 1-channel linear touch sensor. In this case the gain in memory size is important as the touchkey sensor state machine is not used.

#### 2.10.3 Delta coefficient table

The delta coefficient table is used to adjust each channel of the linear and rotary sensors. Each value is a 16-bit integer. The MSB is the integer part, the LSB is the real part.

Examples:

To apply a factor of 1.10:

- MSB equal 0x01
- LSB equal 0x1A (0.10 x 256 = 25.6 -> rounded to 26 = 0x1A)

To apply a factor 1.00:

- MSB equal 0x01
- LSB equal 0x00

To apply a factor 0.90:

- MSB equal 0x00
- LSB equal 0xE6 (0.90 x 256 = 230.4 -> rounded to 230 = 0xE6)

57

This results in the following delta coefficient table:

```
CONST uint16_t MyLinRot0_DeltaCoeff[3] = {0x011A, 0x0100, 0x00E6};
```

The number of delta coefficient table is not limited. The same delta coefficient table can be shared by several linear and rotary sensors.

### 2.10.4 Electrodes placement

The placement (design) of the electrodes can be done in three different manners:

1. Mono electrode design

The number of electrodes is equivalent to the number of channels. This design is used for linear and rotary sensors.

Abbreviations: LIN\_M1, LIN\_M2 and ROT\_M

Examples:

- CH1 CH2 CH3
- CH1 CH2 CH3 CH4
- CH1 CH2 CH3 CH4 CH5
- 2. Dual electrode design

All the electrodes are duplicated and interlaced together in order to increase the touch area.

This design is used for linear and rotary sensors composed with at least 5 channels.

Abbreviation: LIN\_D and ROT\_D

Examples with 5 channels:

- CH1 CH2 CH3 CH4 CH5 CH1 CH3 CH5 CH2 CH4
- CH1 CH2 CH3 CH4 CH5 CH2 CH4 CH1 CH3 CH5
- CH1 CH2 CH3 CH4 CH5 CH3 CH1 CH4 CH2 CH5
- Half-ended electrode design

The first electrode is duplicated and the replica is placed at the end. The size of the first and last electrode is **half the size** of the other electrodes. This design is used for **linear sensors only**. The 0 and 255 positions are obtained more easily compared to the Mono electrodes design.

Abbreviation: LIN\_H

Examples:

- ch1 CH2 CH3 ch1
- ch1 CH2 CH3 CH4 ch1
- ch1 CH2 CH3 CH4 CH5 ch1

The following figure summarizes the different electrodes designs we can have on linear and rotary sensors:

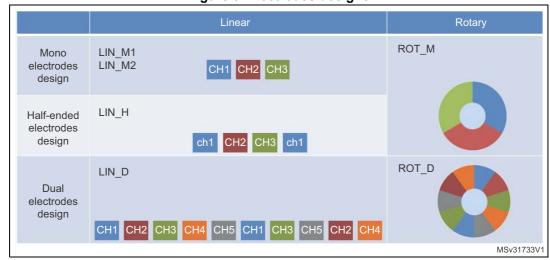


Figure 8. Electrodes designs

#### Positions 0 and 255

Special care must be taken for the 0 and 255 positions on linear sensors. These positions are placed differently depending on the electrodes design used:

- **LIN\_M1**: the 0 and 255 positions are placed completely at the sensor's **extremities**. These positions can be obtain with difficulty if the electrodes are too big or if they are separated by an important space.
- LIN\_M2, LIN\_H and LIN\_D: the 0 position is placed between the first and second electrodes. The 255 position is placed between the last two electrodes.
- ROT\_M and ROT\_D: the 0 and 255 positions are always placed between the first and the last electrodes.

The following figures summarizes the different placements of the 0 and 255 positions with 4 channels sensors:

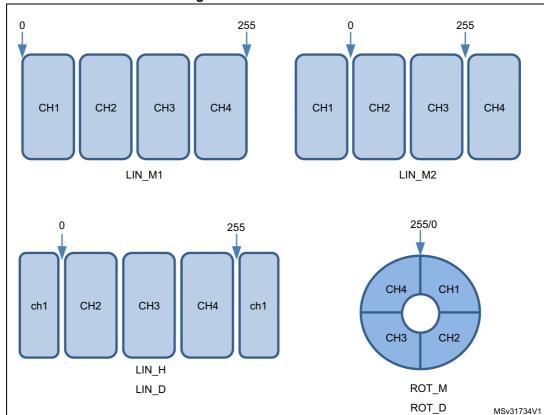


Figure 9. Positions 0 and 255

The following table summarizes the different linear and rotary sensors electrodes designs supported by the STMTouch driver:

Number LIN\_M1 LIN\_M2 LIN\_H LIN\_D ROT\_M ROT\_D of Channels 3 Yes Yes Yes No Yes No No 4 Yes Yes Yes No Yes 5 Yes Yes Yes No Yes Yes 6 Yes Yes Yes No Yes No

Table 3. Supported linear and rotary sensors

Each supported electrode design is described by 3 fields in the  ${\sf TSL\_LinRot\_T}$  or  ${\sf TSL\_LinRotB\_T}$  structures:

- Position offset table
- Sector computation parameter
- Position correction parameter for linear sensor

These 3 fields are defined in the **tsl\_linrot.c** and **tsl\_linrot.h** files and follow the naming convention:

Position offset table: TSL\_POSOFF\_nCH\_[LIN|ROT]\_[M1|M2|H|D]

Sector computation parameter: TSL\_SCTCOMP\_nCH\_[LIN|ROT]\_[M1|M2|H|D]

Position correction parameter for linear sensor: TSL\_POSCORR\_nCH\_LIN\_[M1|M2|H|D]

#### With:

- n = number of channels
- LIN = linear sensor
- ROT = rotary sensor
- M1 = mono electrodes design with 0/255 position at extremities
- M2 = mono electrodes design
- H = half-ended electrodes design
- D = dual electrodes design

In order to gain memory space, each table is only compiled if its corresponding parameter is set in the configuration file:

TSLPRM\_USE\_nCH\_[LIN|ROT]\_[M1|M2|H|D]

#### 2.10.5 Resources

All the functions related to this sensor are described in the files:

- tsl linrot.c
- tsl\_linrot.h

Two types of linear and rotary sensor are available:

- basic: defined by the TSL\_LinRotB\_T structure
- extended: defined by the TSL\_LinRot\_T structure

The difference between "basic" and "extended" is the same as for the touchkey sensor.

Three functions (called methods) are used to initialized the sensor parameters, run the sensor state machine and calculate the position.

- TSL\_linrot\_lnit()
- TSL linrot Process()
- TSL\_linrot\_CalcPos()

#### 2.10.6 Parameters

TSLPRM TOTAL LINROTS

#### 2.10.7 Usage example

The user must declared these methods in the application code.

Note:

One can also use its own initialization and process functions instead:

```
CONST TSL_LinRotMethods_T MyLinRots_Methods =
{
   TSL_linrot_Init,
   TSL_linrot_Process,
   TSL_linrot_CalcPos
};
```

5/

The declaration of the linear and rotary sensor is done by the user in the application code in the same manner as for touchkey sensor.

Example with 2 "basic" linear touch sensors, one with 3 channels half-ended and the other with 5 channels mono electrodes design:

```
CONST TSL_LinRotB_T MyLinRots[2] =
  // LinRot sensor 0
  &MyLinRots_Data[0],
  &MyLinRots_Param[0],
  &MyChannels_Data[CHANNEL_9_DEST],
  3, // Number of channels
 MyLinRotO_DeltaCoeff, // Delta coefficient table
  (TSL_tsignPosition_T *)TSL_POSOFF_3CH_LIN_H, // Position table
 TSL_SCTCOMP_3CH_LIN_H, // Sector compensation
 TSL_POSCORR_3CH_LIN_H, // Position correction
  // LinRot sensor 1
  &MyLinRots_Data[1],
 &MyLinRots_Param[1],
  &MyChannels_Data[CHANNEL_12_DEST],
  5, // Number of channels
 MyLinRot1_DeltaCoeff, // Delta coefficient table
  (TSL_tsignPosition_T *)TSL_POSOFF_5CH_LIN_M2, // Position table
 TSL_SCTCOMP_5CH_LIN_M2, // Sector compensation
 TSL_POSCORR_5CH_LIN_M2 // Position correction
};
```

Example of one "extended" (i.e. having its own state machine and methods) linear touch sensor with 3 channels half-ended:

```
CONST TSL_LinRot_T MyLinRots[1] =
{
    // LinRot sensor 0
    &MyLinRots_Data[0],
    &MyLinRots_Param[0],
    &MyChannels_Data[CHANNEL_0_DEST],
    3, // Number of channels
    MyLinRot0_DeltaCoeff,
    (TSL_tsignPosition_T *)TSL_POSOFF_3CH_LIN_H,
    TSL_SCTCOMP_3CH_LIN_H,
    TSL_POSCORR_3CH_LIN_H,
    MyLinRots_StateMachine, // Specific state machine
    &MyLinRots_Methods // Specific methods
};
```

Example of one "extended" rotary touch sensor with 3 channels mono electrode design:

```
CONST TSL_LinRot_T MyLinRots[0] =
{
```



```
// LinRot sensor 0
&MyLinRots_Data[0],
&MyLinRots_Param[0],
&MyChannels_Data[CHANNEL_0_DEST],
3, // Number of channels
MyLinRot0_DeltaCoeff,
(TSL_tsignPosition_T *)TSL_POSOFF_3CH_ROT_M,
TSL_SCTCOMP_3CH_ROT_M,
0, // No position correction needed on a Rotary sensor
MyLinRots_StateMachine, // Specific state machine
&MyLinRots_Methods // Specific methods
};
```

#### 2.11 Main state machine

The main state machine is managed by the user in the application layer. A set of functions are available to accomplish this task. The main state machine can be defined with polling or with interrupt modes, using one or several banks. The modularity of the STMTouch driver allows also the application code to be inserted between acquisition and processing tasks. Several examples are given below.

The functions to use for the acquisition are:

- TSL\_acq\_BankConfig()
- TSL\_acq\_BankStartAcq()
- TSL\_acq\_BankWaitEOC()
- TSL\_acq\_BankGetResult()

These functions are device dependent and are described in the tsl\_acq\_<mcu>.c files.

The functions to use for the processing are:

- TSL\_obj\_GroupProcess()
- TSL ecs Process()
- TSL\_dxs\_FirstObj()

Other functions that can be used during the processing:

- TSL\_tim\_CheckDelay\_ms()
- TSL\_obj\_SetGlobalObj()
- TSL\_tkey\_GetStateId()
- TSL\_tkey\_GetStateMask()
- TSL\_linrot\_SetStateOff()
- TSL\_linrot\_SetStateCalibration()

The main state machine principle is illustrated by the figure below:

47/

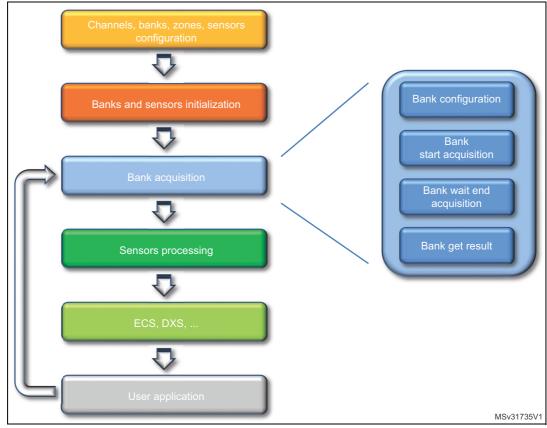


Figure 10. Main state machine

The main state machine steps are:

- The channels, banks, zones and sensors configuration step are used to declare all
  the different elements. This is done in the global declaration section in the main
  application file. See the section associated to each element for more details.
- The banks and sensors initialization step is used to initialize the STMTouch driver modules. The sensors parameters are initialized with their default value defined in the configuration files.
- 3. **The banks acquisition** step is used to perform the acquisition of the banks. It is composed of 4 sub-steps:
  - configuration: used to configure all channels of the bank
  - start acquisition: used to launch the measurement on all channels of the bank
  - wait end acquisition: used to wait the end of acquisition of all channels of the bank
  - get result: used to read all the channels measurements and to store them in the channel data layer.
- 4. **The sensors processing** step is used to execute the state machine of the sensors.

Note:

The debouncing, Detection Time Out and re-calibration are automatically performed inside this step.

5. The **ECS**, **DXS** step is used to execute other algorithms that are not performed in the sensor state machine like the ECS, DXS, other filters, etc... This step is optional and it can be executed at certain time intervals (mainly for ECS).

6. The **user application** step is used to execute the application layer (read the sensors state, decide which actions to perform, manage ERROR states, etc...). The user application can also be placed between other steps, for example it can be done between the "sensors processing" step and the "ECS/DXS".

There are multiple manners to perform the main state machine. The following figures show some examples with two banks.

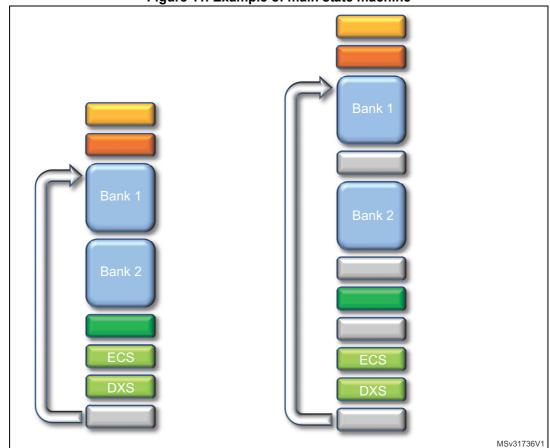


Figure 11. Example of main state machine

#### 2.12 Sensors state machine

#### 2.12.1 Overview

The state machine is managed in the files:

- tsl\_touchkey.c and tsl\_touchkey.h for the touchkey sensors
- tsl\_linrot.c and tsl\_linrot.h for the linear and rotary sensors

57/

36/125 DocID024201 Rev 4

There is a total of 20 states defined in the TSL StateId enum T structure.

The following figure shows the simplified state machine used by any sensor (for clarity not all the connections between states are shown).

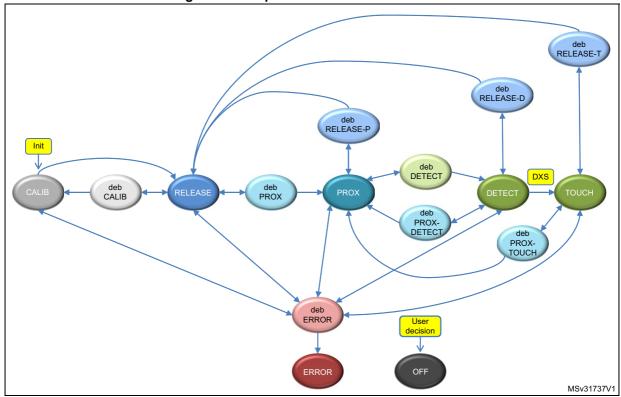


Figure 12. Simplified sensors state machine

# 2.12.2 States constant table

Each state ID is associated to a mask and a function. The association STATE\_ID-mask-function is made in the user application code using a constant table of the **TSL\_State\_T** type. The name of this table is free and user can give any name he wants. If no function is needed simply put a zero instead of the function name.

Here below an example of touchkey sensors state machine:

```
/* 3 */ { TSL STATEMASK DEB RELEASE PROX,
TSL_tkey_DebReleaseProxStateProcess },
#else
/* 3 */ { TSL_STATEMASK_DEB_RELEASE_PROX, 0 },
/* 4 */ { TSL_STATEMASK_DEB_RELEASE_DETECT,
TSL_tkey_DebReleaseDetectStateProcess },
/* 5 */ { TSL_STATEMASK_DEB_RELEASE_TOUCH,
TSL_tkey_DebReleaseTouchStateProcess },
#if TSLPRM_USE_PROX > 0
// Proximity states
/* 6 */ { TSL_STATEMASK_PROX,
                                             TSL_tkey_ProxStateProcess },
/* 7 */ { TSL_STATEMASK_DEB_PROX,
                                            TSL_tkey_DebProxStateProcess },
/* 8 */ { TSL_STATEMASK_DEB_PROX_DETECT,
TSL_tkey_DebProxDetectStateProcess },
/* 9 */ { TSL_STATEMASK_DEB_PROX_TOUCH,
TSL_tkey_DebProxTouchStateProcess },
#else
/* 6 */ { TSL_STATEMASK_PROX,
                                             0 },
/* 7 */ { TSL_STATEMASK_DEB_PROX,
                                             0 },
/* 8 */ { TSL_STATEMASK_DEB_PROX_DETECT,
                                             0 },
/* 9 */ { TSL_STATEMASK_DEB_PROX_TOUCH,
                                             0 },
#endif
// DETECT states
/* 10 */ { TSL_STATEMASK_DETECT,
                                             TSL_tkey_DetectStateProcess },
/* 11 */ { TSL_STATEMASK_DEB_DETECT,
                                            TSL_tkey_DebDetectStateProcess
},
// TOUCH state
/* 12 */ { TSL_STATEMASK_TOUCH,
                                             TSL_tkey_TouchStateProcess },
// ERROR states
/* 13 */ { TSL_STATEMASK_ERROR,
                                             MyTKeys_ErrorStateProcess },
/* 14 */ { TSL_STATEMASK_DEB_ERROR_CALIB,
                                             TSL_tkey_DebErrorStateProcess
},
/* 15 */ { TSL_STATEMASK_DEB_ERROR_RELEASE,
                                             TSL_tkey_DebErrorStateProcess
},
/* 16 */ { TSL_STATEMASK_DEB_ERROR_PROX,
                                             TSL_tkey_DebErrorStateProcess
},
/* 17 */ { TSL_STATEMASK_DEB_ERROR_DETECT,
                                             TSL_tkey_DebErrorStateProcess
},
/* 18 */ { TSL_STATEMASK_DEB_ERROR_TOUCH,
                                             TSL_tkey_DebErrorStateProcess
// Other states
/* 19 */ { TSL_STATEMASK_OFF,
                                             MyTKeys_OffStateProcess }
```

The STMTouch driver contains all the functions needed to manage each state. However the user can copy and adapt one or several functions to fit its application requirements.

Example:



```
/* 0 */ { TSL_STATEMASK_CALIB, MyTkeys_CalibrationStateProcess },
```

Note:

The two functions used to manage the ERROR and OFF states are not part of the STMTouch driver. These functions are managed by the application.

For linear and rotary sensor state machine, it is the same principle. The functions used to manage each state start with the prefix "TSL\_linrot\_":

```
CONST TSL_State_T MyLinRots_StateMachine[] =
{
    // Calibration states
    /* 0 */ { TSL_STATEMASK_CALIB, TSL_linrot_CalibrationStateProcess },
```

# 2.12.3 States detail

The two tables below show the detail of how each state is entered following the thresholds measured.

Table 4. Detailed sensors states 1/2

			Table 4. D	etanieu sensu	13 States 1/2				
Previous state	all excepted 13	all excepted	2p,10p,12p,3, 4p,5p,7,8,9, 11p	2,4,11	2p,6,4p,7,8,11 p	DXS,5	DXS,5p,9	2,2p,1	2,2p,6,10, 10p,12,12p, 0,1418
state nb	2	2p	6	10	10p	12	12p	0	13
Current state	RELEASE	RELEASE with PROX	PROX	DETECT	DETECT with PROX	тоисн	TOUCH with PROX	CALIB	ERROR
Delta									
DETECT IN Th	deb DETECT or DETECT+DTO	deb DETECT or DETECT+DTO	deb DETECT or DETECT+DTO	same or	same or	same or	same or		
		deb PROX		CALIB if DTO	CALIB if DTO	CALIB if DTO	CALIB if DTO		
DETECT OUT Th  PROX IN Th	same	or PROX+DTO	same or CALIB if DTO		deb PROX- DETECT		deb PROX- TOUCH	RELEASE or	same
	Same	same		deb RELEASE- DETECT	or PROX+DTO	deb RELEASE- TOUCH	or PROX+DTO	ERROR	Same
PROX OUT Th		Same	deb RELEASE- PROX	or RELEASE	deb RELEASE- DETECT	or RELEASE	deb RELEASE- TOUCH		
CALIB Th	deb CALIB or CALIB	deb CALIB or CALIB	or RELEASE		or RELEASE		or RELEASE		
if ACQ ERROR	deb ERROR or ERROR	deb ERROR or ERROR	deb ERROR or ERROR	deb ERROR or ERROR	deb ERROR or ERROR	deb ERROR or ERROR	deb ERROR or ERROR	deb ERROR or ERROR	same



	15
l	- 1

				Tabl	e 5. Detaile	ed sensors	s states 2/	2				
Previous state	6	10	10p,8	12	12p,9	2p,11p	10p	12p	2	2p,6,7	2,2p	2,2p,6,10, 10p,12,12p ,0
state nb	3	4	4p	5	5p	7	8	9	11	11p	1	1418
Current state	deb RELEASE- PROX	deb RELEASE- DETECT	deb RELEASE- DETECT with PROX	deb RELEASE- TOUCH	deb RELEASE- TOUCH with PROX	deb PROX	deb PROX- DETECT	deb PROX- TOUCH	deb DETECT	deb DETECT with PROX	deb CALIB	deb ERROR
Delta			<u>I</u>		<u>I</u>			<u>I</u>				
DETECT IN Th		DETECT	DETECT	TOUCH	TOUCH	deb DETECT or DETECT+ DTO	DETECT	тоисн	same or DETECT+ DTO	same or DETECT+ DTO		
	PROX					same or				deb PROX or PROX+		
DETECT OUT Th PROX IN Th			PROX		PROX	PROX+ DTO	same or	same or		DTO	RELEASE	RELEASE PROX DETECT
		same		same			PROX+ DTO	PROX+ DTO	RELEASE			TOUCH CALIB
PROX OUT Th	same or	or RELEASE	same or	or RELEASE	same or	RELEASE	deb RELEASE- DETECT	deb RELEASE- TOUCH		RELEASE		
CALIB Th	RELEASE		RELEASE		RELEASE		or RELEASE	or RELEASE			same or CALIB	
if ACQ ERROR	PROX	DETECT	DETECT	TOUCH	TOUCH	RELEASE	DETECT	TOUCH	RELEASE	RELEASE	RELEASE	ERROR

### 2.12.4 Calibration state

It consists in calculating the reference for all the channels of a sensor. An average of a certain number of measurements is done.

The number of measurement samples to use for the calibration is defined by the **TSLPRM\_CALIB\_SAMPLES** parameter.

After reset the initialization method of each object is called. This method initializes the sensor parameters and then goes in the calibration state. After the calibration is done, the sensor goes in the RELEASE state or ERROR state except if an error occurred.

#### Related functions:

- TSL tkey CalibrationStateProcess()
- TSL linrot CalibrationStateProcess()
- TSL\_tkey\_SetStateCalibration()
- TSL\_linrot\_SetStateCalibration()

### **Calibration delay**

If a noise filter is used it should be necessary to wait a certain amount of measurement samples before to start the reference calculation. This number of samples to wait is defined by the **TSLPRM\_CALIB\_DELAY** parameter.

### Re-calibration

If the calibration threshold is reached while in RELEASE state, a new calibration is performed. This "re-calibration" prevents the application to get stuck if something touches permanently the sensor like a drop of water for example.

#### 2.12.5 RELEASE state

Corresponds to the "idle" state of the sensor when no presence is detected.

#### Related functions:

- TSL\_tkey\_ReleaseStateProcess()
- TSL\_linrot\_ReleaseStateProcess()

### 2.12.6 Proximity state

This state is optional and is enabled or disabled using the **TSLPRM\_USE\_PROX** parameter.

### Related functions:

- TSL\_tkey\_ProxStateProcess()
- TSL linrot ProxStateProcess()

### 2.12.7 DETECT state

It is the "normal" state when the sensor is touched.

#### Related functions:

- TSL tkey DetectStateProcess()
- TSL\_linrot\_DetectStateProcess()

57

#### 2.12.8 TOUCH state

Same as DETECT state excepted that it is entered only by the DXS processing. If the DXS is not used this state is never entered.

Related functions:

- TSL tkey TouchStateProcess()
- TSL linrot TouchStateProcess()

### 2.12.9 ERROR state

It is used to catch all acquisition errors detected in the other states.

The management of this state must be performed at application level.

### 2.12.10 OFF state

It is used to inform the acquisition module to stop the burst and/or acquisition on the sensor's channels.

The management of this state must be performed at application level.

### 2.12.11 Debounce states

The debounce is optional and is enabled/disabled using the different debounce counters parameters: TSLPRM\_DEBOUNCE\_PROX, TSLPRM\_DEBOUNCE\_DETECT, TSLPRM\_DEBOUNCE\_RELEASE, TSLPRM\_DEBOUNCE\_CALIB, TSLPRM\_DEBOUNCE\_ERROR

The debounce is off if the corresponding parameter is equal to zero.

# 2.12.12 Reading the current state

The current state can be obtained by using the functions:

For touchkey sensor:

- TSL tkey GetStateId()
- TSL\_tkey\_GetStateMask()

For linear and rotary sensor:

- TSL\_linrot\_GetStateId()
- TSL\_linrot\_GetStateMask()

The functions TSL\_tkey\_lsChanged() or TSL\_linrot\_lsChanged() allows to check if a sensor state has changed.

You can also directly read the state inside the sensor data structure:

if MyTKeys[0].p\_Data->StateId == TSL\_STATEID\_DETECT)

# 2.12.13 Accessing a specific state

It is possible to enter directly in the calibration, OFF and "burst only" states. The "burst only" state consists in only bursting the electrode without performing acquisition on it. It can be used in specific cases to improve the robustness against noise.

Note: This feature is not available for STM8TL5x devices.



This is done by using the following functions:

For touchkey sensor:

- TSL tkey SetStateCalibration()
- TSL\_tkey\_SetStateOff()
- TSL\_tkey\_SetStateBurstOnly()

For linear and rotary sensor:

- TSL\_linrot\_SetStateCalibration()
- TSL linrot SetStateOff()
- TSL\_linrot\_SetStateBurstOnly()

# 2.13 Environment Change System (ECS)

### 2.13.1 Principle

Power supply voltage, temperature and air humidity, may induce a slow variation of the measured signal. The Environment Change System (ECS) is used to adapt the reference to these environment changes.

The ECS processing is based on an infinite response digital low pass filter of the first order (IIR filter):

$$Y(n) = K \times X(n) + (1 - K) \times Y(n - 1)$$

with:

Y = reference

X = acquisition value (last measurement)

K = coefficient.

The higher value is K, the faster is the response time. Two default K coefficients are available to obtain fast and slow responses.

The sampling frequency is programmable using a timing utility routine (see example below).

If the sensor is in PROX, DETECT or TOUCH states, the ECS is disabled for the duration of the detection timeout or for the duration of the touch (whichever ends first).

When the ECS is disabled, Yn=Yn-1

As soon as the recalibration times out or the detection ends, the filter is set active again.

### 2.13.2 Resources

The ECS functions are provided in the files:

- tsl\_ecs.c
- tsl\_ecs.h

The functions are:

- TSL\_ecs\_Process(): main function to be used by the user
- TSL\_ecs\_CalcK(): additional function
- TSL\_ecs\_ProcessK(): additional function

#### 2.13.3 Parameters

- TSLPRM\_ECS\_K\_FAST
- TSLPRM\_ECS\_K\_SLOW
- TSLPRM\_ECS\_DELAY

# 2.13.4 Usage example

The ECS processing is usually performed in the main state machine at regular time intervals defined by the user. But it can be done also in interrupt routines. It must be performed after the sensors state machine is processed.

The ECS is activated only when all the sensors are in RELEASE, ERROR or OFF states, with at least one sensor in RELEASE state. It can also be delayed from milli-seconds to few seconds.

The ECS processing is performed on a group of sensors defined by the user. Different groups can be created and ECS applied on these groups with different K coefficients.

It's up to the user to decide the best thing to do for its application.

The simplest way is to call the **TSL\_ecs\_Process()** function in the main application loop using the default K coefficients defined in the configuration file:

```
TSL_ecs_Process(&MyObjGroup);
```

To call this functions at regular time intervals you can use the provide timing routine TSL\_tim\_CheckDelay\_ms().

Example with ECS executed every 100ms:

```
TSL_tTick_ms_T time_ECS_tick;
int main(void) {
  while (1) {
    ...
    // ECS every 100 ms
    if (TSL_tim_CheckDelay_ms(100, &time_ECS_tick) == TSL_STATUS_OK)
    {
        TSL_ecs_Process(&MyObjGroup);
    }
    ...
}
```

The **TSL\_ecs\_ProcessK()** function allows to use a K coefficient different than the default value:

```
if (TSL_tim_CheckDelay_ms(100, &time_ECS_tick) == TSL_STATUS_OK)
{
   if ((MyObjGroup->StateMask & TSL_STATE_RELEASE_BIT_MASK) &&
     !(MyObjGroup->StateMask & TSL_STATEMASK_ACTIVE))
   {
     TSL_ecs_ProcessK(&MyObjGroup, 120);
   }
}
```

# 2.14 Detection Exclusion System (DXS)

# 2.14.1 Principle

The DXS processing is used to prevent several sensors to be in the DETECT state at the same time. This could happen if the sensors are closed to each other or if their sensitivity is too high. This can be useful also in some applications to prevent the user to touch at the same time several sensors with "opposite" meaning (volume up and volume down for example).

The first sensor in the group of sensors has the priority and enters in the DETECT state (with the DxSLock flag set). The other sensors are "blocked" and enter instead in the TOUCH state.

Note:

A particular care must be taken when designing sensors that are shared between multiple DXS groups. The sensor that will be assigned in the DETECT state depends on the sensors position in the DXS groups and also on the order of the DXS groups processing. See the examples 1 and 2 for more detail.

The figure below illustrates the difference in behavior for a group of 3 sensors (touchkeys) when the DXS is OFF and ON. The three touchkeys are part of the same DXS group.

Note: The touchkeys can be replaced by a linear or a rotary sensor.

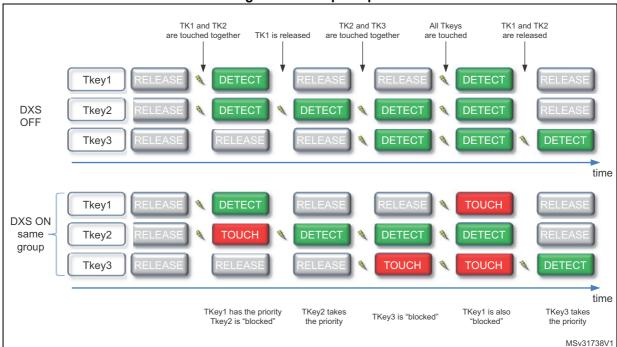


Figure 13. DXS principle

# **Example 1: 3 sensors with one shared between two groups.**


In this example the group1 is composed of the two sensors s1 and s2 in this order and the group2 of the two sensors s2 and s3 in this order.

The DXS groups are processed in this order: group1 first and then group2.

5//

We can see in the step DXS5 that the sensor 2 (s2) goes in DETECT state instead of the sensor 3 (s3). This is simply because s2 is placed first in the group2.

Figure 14. DXS example 1

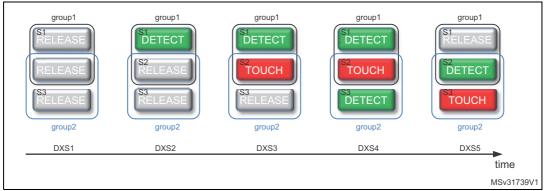

### Example 2: 4 sensors with one share between three groups.

In this example the group1 is composed of the two sensors s1 and s2 in this order, the group2 of the two sensors s2 and s3 in this order and the group3 of the two sensors s2 and s4 in this order.

The DXS groups are processed in this order: group1 first, then group2 and finally group3.

We can see in the step DXS2 that the sensor 2 takes the priority over the sensors 3 and 4.

To summarize, the decision to be in DETECT state depends on the sensors placement inside the group and also on the order of the groups processing.

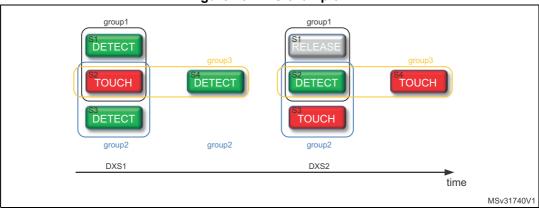


Figure 15. DXS example 2

# 2.14.2 Resources

The DXS functions are provided in the files:

- tsl dxs.c
- tsl\_dxs.h

The functions to use are:

TSL\_dxs\_FirstObj()

### 2.14.3 Parameters

TSLPRM USE DXS

### 2.14.4 Usage example

The DXS processing is performed usually in the main state machine but it can also be done in interrupt routines.

Warning:

The DXS must be absolutely performed after the sensors state machine is processed, that is after the call to the TSL\_obj\_GroupProcess() function (see the main state machine for more details).

The DXS processing is performed on a **group of sensors** defined by the user. Different groups of DXS can be created.

It's up to the user to decide the best partitioning for his application.

#### Example:

```
int main(void) {
  while (1) {
    ...
    TSL_obj_GroupProcess(&MyObjGroup1);
    TSL_obj_GroupProcess(&MyObjGroup2);
    TSL_dxs_FirstObj(&MyObjGroup1);
    TSL_dxs_FirstObj(&MyObjGroup2);
    ...
}
```

# 2.15 Detection Time Out (DTO)

# 2.15.1 Principle

The Detection Time Out (DTO) introduces a simple way to cope with water film and any obstacle that may come in contact with a sensor. It introduces a maximum duration for the 'detected' state of any sensor called the Detection Time Out (DTO).

After this period of time, the sensor is automatically recalibrated. This allows to make the sensor touch sensitive again, even if the obstacle or the liquid film is still present on the board.

This feature is application dependent and the time out must be tuned according to the user interface specifications.

The DTO is applied on the PROX, DETECT and TOUCH states and can be disabled.

5/

### 2.15.2 Resources

The DTO functions are provided in the files:

- tsl\_touchkey.c
- tsl\_touchkey.h
- tsl\_linrot.c
- tsl\_linrot.h

The functions used by the DTO are:

- TSL\_tkey\_DTOGetTime()
- TSL\_linrot\_DTOGetTime()
- TSL\_tim\_CheckDelay\_sec()

Note: The user doesn't need to call these functions to perform the DTO.

### 2.15.3 Parameters

TSLPRM\_DTO

# 2.15.4 Usage

The DTO is automatically performed inside the sensor state machine. The user doesn't need to call any function in the application code.

The DTO is disabled by writing zero in the TSLPRM\_DTO parameter.

### 2.16 Noise filters

# 2.16.1 Principle

The STMTouch driver has been designed to facilitate the implementation of different noise filters. These filters can be used for many purpose and can range from very simple design to very complicated.

# 2.16.2 Resources

The filters are defined in the files:

- tsl\_filter.c
- tsl\_filter.h

Each filter is described by a function:

- TSL\_filt\_MeasFilter(): filter on measurement values
- TSL\_filt\_DeltaFilter(): filter on delta values

### 2.16.3 Parameters

There is no parameter for the filter module.

# 2.16.4 Usage

The filter functions can be called at anytime in the main application. In order to speed-up the execution time and to gain RAM space, the measure and delta filters are called by the **TSL acq BankGetResult()** function.

Examples:

```
// Apply a filter on the measures only
TSL_acq_BankGetResult(0, TSL_filt_MeasFilter, 0);
// Get the measures without applying any filter
TSL_acq_BankGetResult(0, 0, 0);
```

Note:

The user can also create its own filter functions.

# 2.17 Timing management

## 2.17.1 Principle

The STMTouch driver needs an internal clock ("timing"), in particular for the ECS and DTO processings. This timing can be also used by the application layer for any purpose (LEDs blinking for example).

The timing process consists in incrementing a global variable at a regular interval. Different functions are then used to compare the current "time" and to check if a certain delay has elapsed.

### 2.17.2 Resources

The common timing routines are described in the files:

- tsl time.c
- tsl time.h

The initialization of the timing is made using hardware timer, systick, etc... and is implemented differently on each device. This is described in the files:

- tsl time <mcu>.c
- tsl\_time\_<mcu>.h

#### Functions:

- TSL tim ProcessIT()
- TSL\_tim\_CheckDelay\_ms()
- TSL tim CheckDelay sec()

### 2.17.3 Parameters

TSLPRM\_TICK\_FREQ

### 2.17.4 Usage

The timing is started when the function TSL\_Init() is called.

The function **TSL\_tim\_CheckDelay\_ms()** can be used in the main application code to execute some code (for example the ECS) at a regular interval.

DocID024201 Rev 4

#### Example:

```
TSL_tTick_ms_T time_ECS_tick;
TSL_tTick_ms_T time_LED_tick;
int main(void) {
  TSL_Init(MyBanks); // The timing starts...
  while (1) {
    // Launch the ECS every 100 ms
    if (TSL_tim_CheckDelay_ms(100, &time_ECS_tick) == TSL_STATUS_OK)
      TSL_ecs_Process(&MyObjGroup);
    }
    // Toggle LED every 500 ms
    if (TSL_tim_CheckDelay_ms(500, &time_LED_tick) == TSL_STATUS_OK)
    {
      ToggleLED();
    }
  }
}
```

## 2.18 Parameters

All the parameters are described in the tsl\_conf\_<mcu>.h file.

Note:

The **tsl\_conf\_<mcu>.h\_TOADAPT** file present in the STMTouch\_Driver/inc folder must be copied in the application project (inc folder) and adapted to your application.

The structure **TSL\_Params\_T** is used to hold certain parameters that are common to all sensors. These parameters can be changed by the user while the application is running.

### Parameters checking

All common parameters are verified (presence and value range) in the file:

• tsl\_check\_config.h

All device specific parameters are verified in the tsl\_check\_config\_<mcu>.h file.

# 2.19 STM8L1xx devices

# 2.19.1 Acquisition

The STM8L1xx devices hardware acquisition mode (using two timers) is done in the files:

- tsl\_acq\_stm8l\_hw.c
- tsl\_acq\_stm8l\_hw.h

Warning: This acquisition mode is available for the STM8L15x Low-density devices only.

The STM8L1xx devices **software acquisition mode** is done in the files:

- tsl\_acq\_stm8l\_sw.c
- tsl acq stm8l sw.h

This acquisition is available for all STM8L1xx devices.

Note:

The hardware acquisition mode is selected per default for the STM8L15x Low-density and devices. If you want to use the software acquisition mode you must add the following constant in the toolchain compiler preprocessor:

TSLPRM STM8L1XX SW ACQ

Functions used by the application layer and that are device dependent:

- TSL\_acq\_BankConfig()
- TSL\_acq\_BankStartAcq()
- TSL\_acq\_BankWaitEOC()
- TSL\_acq\_GetMeas()

The other functions in this file are for internal use and the user doesn't need to call them directly.

# **2.19.2** Timings

The STM8L1xx devices timing management is done in the files:

- tsl\_time\_stm8l.c
- tsl\_time\_stm8l.h

The **TIM4** is used to generate a timebase for the ECS and DTO modules.

Warning:

The auto reload counter is calculated for a  $F_{CPU}$  equal to 16 MHz. If you use another  $F_{CPU}$  value in your application you must change the ARR value inside the TSL\_tim\_Init() function.

Functions used:

TSL\_tim\_Init()

### 2.19.3 Parameters

The parameters specific to the STM8L1xx devices are described in the file:

tsl\_conf\_stm8l.h

and are checked in the file:

tsl\_check\_config\_stm8l.h

# 2.19.4 Memory footprint

### **Conditions**

- Cosmic STM8 C compiler 32K version v4.3.6
- Compiler options: +modsl0 -pxp +compact +split -pp
- · Cosmic library not counted
- STMTouch driver default options: ECS=ON, DTO=OFF, PROX=OFF
- Each sensor has its own parameters, all parameters placed in RAM

The following tables summarize the memory footprint taken by the STMTouch driver with different STM8L devices, acquisition mode and sensors:

Table 6. STM8L101 memory footprint with software acquisition<sup>(1)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)	Specific options
3	2	3 TKeys	~5.3	~160	ZONE=OFF DXS=ON

<sup>1.</sup> The content of this table is provided for information purposes only.

Table 7. STM8L15x memory footprint with hardware acquisition<sup>(1)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)	Specific options
1	1	1 TKey	~5.2	~140	ZONE=OFF DXS=OFF
10	2	10 TKeys	~5.4	~300	ZONE=ON DXS=ON
16	2	10 TKeys 1 Linear-3ch 1 Rotary-3ch	~7.4	~450	ZONE=ON DXS=ON

<sup>1.</sup> The content of this table is provided for information purposes only.

Table 8. STM8L15x memory footprint with software acquisition<sup>(1)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)	Specific options
1	1	1 TKey	~4.6	~130	ZONE=OFF DXS=OFF
10	2	10 TKeys	~4.8	~280	ZONE=OFF DXS=ON
16	2	10 TKeys 1 Linear-3ch 1 Rotary-3ch	~6.9	~430	ZONE=OFF DXS=ON

<sup>1.</sup> The content of this table is provided for information purposes only.

### 2.19.5 MCU resources

The tables below show the peripherals that are used by the STMTouch driver on STM8L1xx devices. Care must be taken when using them to avoid any unwanted behavior.

Table 9. MCU resources used on STM8L1xx with hardware acquisition

Peripheral	Function
GPIOs	Acquisition
TIM4	Time base for ECS and DTO
TIM2, TIM3	Acquisition
Routing interface	Acquisition

Table 10. MCU resources used on STM8L1xx with software acquisition

Peripheral	Function
GPIOs	Acquisition
TIM4	Time base for ECS and DTO
Routing interface	Acquisition

# 2.19.6 STM8L available touch-sensing channels

The tables below provide an overview of the available touch sensing channels for the STM8L1xx devices.

Note1: The following tables are not restrictive in term of part numbers supported by the STMTouch driver. The STMTouch driver can be used on any new device that may become available as part of ST microcontrollers portfolio. Please contact your ST representative for support.

Note2: For n available pins in an I/O group, one pin is used as sampling capacitor and n-1 pins are used as channels.

The I/O group cannot be used if the number of available pins in less or equal to one.



Table 11. Available touch-sensing channels for STM8L101

	Subfamily	,					S	ΓM8L101							
	Packages		TSSOP20 / UFQFPN20 UFQFPN28								UFQFPN32 / LQFP32				
	STM8L101F[23]U								2011	071101 1011/01117					
Pa	art numbe	rs	STM8L101F[23]P					STM8L101G[	23]U		STM8L101K3	נוטון			
Analog I/O group	Gx_IOy	GPIO	Pin TSSOP	Pin UFQFPN	Number of available pins	Usage	Pin	Number of available Usage pins		Pin	Number of available pins	Usage			
	G1_IO1			12		3 channels	13		3 channels						
Croun1	G1_IO2	PB1	11	8	3	2 channels with 1	13	4	with 1 sampling	14	4	with 1 sampling			
Group1	G1_IO3	PD0	9	6	3	sampling	8			9	7				
	G1_IO4	PD1	-	-		capacitor	9		capacitor -	10		capacitor			
	G2_IO1	PB2	12	9		4 . 1 1	14		0 1	15		0 1			
0	G2_IO2	PB3	13	10	2	1 channel with 1	15	1	3 channels with 1	16	1	3 channels with 1			
Group2		PD2	-	-	2	sampling	10	4	sampling	11	4	sampling capacitor			
	G2_IO4 PD3		-	-		capacitor	11	1	capacitor -	12					
Maximum number of channels 3 with 2 sa					mpling capaci	tors	6 with	n 2 sampling o	apacitors	6 with 2 sampling capacitors					

Table 12. Available touch-sensing channels for STM8L15x / STM8L16x (table 1/2)

	Subfamily				STM8L15	51F			STM8L1	51G	STM8L151K UFQFPN32 / LQFP32			
	Packages			UF	QFPN20 / T	SSOP20		U	FQFPN28 / \	NLCSP28				
_			STM8L151F[23]U <sup>(1)</sup> (UFQFPN)					5	STM8L151G (UFQFI		STM8L152K[46][UT]			
F	Part numbers	s			STM8L15					51G[46]Y CSP)	31W0L132K[40][U1]			
Analog I/O group	Gx_IOy	GPIO	Pin	Pin	Number of available pins	Usage	Pin	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	
	G1_IO1	PA6	-	-			-	-			6			
Group 1	G1_IO2	PA5	-	-	0	cannot be used for	5	D4	2	1 channel with 1 sampling	5	3	2 channels with 1 sampling	
Group i	G1_IO3	PA4	-	-	U	touch sensing	4	D3	2	capacitor	4		capacitor	
	G1_IO4	PA7	-	-			-	-			-			
	G2_IO1	PC7	-	-			-	-			-			
Group 2	G2_IO2	PC4	17	20	1	cannot be used for	25	C2	2	1 channel with 1 sampling	29	2	1 channel with 1 sampling	
Group 2	G2_IO3	PC3	-	-	'	touch sensing	24	A2		capacitor	28		capacitor	
	G2_IO4	PE7	-	-			-	-			-			
	G3_IO1	PC2	-	-		cannot be used	23	B2		cannot be used	27		2 channels with	
Group 3	G3_IO2	PD7	-	-	0	for	-	-	1	for	24	3	1 sampling	
	G3_IO3	PD6	-	-		touch sensing	-	-		touch sensing	23		capacitor	
	G4_IO1	PD5	-	-		cannot be used	-	-		1 channel with	22		2 channels with	
Group 4	G4_IO2	PD4	-	-	1	for	20	C1	2	1 sampling	21	3	1 sampling	
	G4_IO3	PB7	14	17		touch sensing	19	E1		capacitor	20		capacitor	



Table 12. Available touch-sensing channels for STM8L15x / STM8L16x (table 1/2) (continued)

	Subfamily				STM8L15	51F			STM8L1	51G	STM8L151K				
	Packages			UF	QFPN20 / T	SSOP20		U	FQFPN28 / \	NLCSP28	UFQFPN32 / LQF				
_				S	TM8L151F[ (UFQFP			8	STM8L151G (UFQFI		STM8L152K[46][UT]				
P	art numbers	S			STM8L15					51G[46]Y CSP)					
Analog I/O group	Gx_IOy	GPIO	Pin	Pin	Number of available pins	Usage	Pin	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage		
	G5_IO1	PB6	13	16		2 channels	18	F1		2 channels with	19		2 channels with		
Group 5	G5_IO2	PB5	12	15	3	with1 sampling	17	D1	3	1 sampling	18	3	1 sampling		
	G5_IO3	PB4	11	14		capacitor	16 D2 capacito	capacitor	17		capacitor				
	G6_IO1	PB3	10	13		2 channels with	15	E2		2 channels with	16		2 channels with 1 sampling		
Group 6	G6_IO2	PB2	9	12	3	1 sampling	14	F2	3	1 sampling	15	3			
	G6_IO3	PB1	8	11		capacitor	13	G1		capacitor	14		capacitor		
	G7_IO1	PB0	7	10			12	E3			13				
Group 7	G7_IO2	PD3	-	-	1	cannot be used for	11	F3	3	2 channels with 1 sampling	12	3	2 channels with 1 sampling		
Group 7	G7_IO3	PD2	-	-	'	touch sensing	10	E4	3	capacitor	11	3	capacitor		
	G7_IO4	PE3	-	-			-	-			-				
	G8_IO1	PD1	-	-			9	G2			10				
Group 8	G8_IO2	PD0	6	9	1	cannot be used for	8	G3	2	1 channel with 1 sampling	-	1	cannot be used for		
Group o	G8_IO3	PE5	-	-	_ '	touch sensing	-	-		capacitor	-	'	touch sensing		
	G8_IO4 PE4			-			_	-	_		-				
Maximun	Maximum number of channels			ls 4 channels with 2 sampling capacitors				7	10 channe sampling c		13 channels with 7 sampling capacitors				

<sup>1.</sup> The product has an hardware acceleration cell for touch sensing.

Table 13. Available touch-sensing channels for STM8L15x / STM8L16x (table 2/2)

S	Subfamily	,		STM8L151K					nedium/med STM8L151 STM8L1520 STM8L162	C/R/M		STM8L151C low density			
F	Packages			UFQFPN	132 / LQFP32	U	FQFP	N48 /	LQFP48 / I	LQFP64 / LQFP80		LQFP48			
									M8L151C[4 M8L152C[4 (48 pins	168][UT]					
Pa	rt numbe	rs			L151K3U <sup>(1)</sup>  51K[46][UT]		STM8L151R[68]T STM8L152R[68]T STM8L162R8T (64 pins)					STM8L151C3T <sup>(1)</sup>			
								STM8L151M8T STM8L152M8T STM8L162M8T (80 pins)							
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Pin	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage		
	G1_IO1	PA6	6			7	7	11			7				
Group 1	G1_IO2	PA5	5	3	2 channels with 1 sampling	6	6	10	3	2 channels with 1 sampling	6	4	3 channels with 1 sampling		
Group 1	G1_IO3	PA4	4		capacitor	5	5	9		capacitor	5		capacitor		
	G1_IO4 PA7 G2_IO1 PC7	PA7	-			(2)	(2)	(2)			8				
		PC7	-			46	62	74			46				
Group 2	G2_IO2	PC4	29	2	1 channel with 1 sampling	43	59	71	3	2 channels with 1 sampling		4	3 channels with 1 sampling		
	G2_IO3	PC3	28	_	capacitor	42	58 70		0	capacitor			1 sampling capacitor		
	G2_IO4	PE7	-	(2) (2)						48					



1	

Table 13. Available touch-sensing channels for STM8L15x / STM8L16x (table 2/2) (continued)

Subfamily STM8L151K						STI	M8L1		nedium/me STM8L151 STM8L1520 STM8L162	C/R/M	STM8L151C low density			
F	Packages			UFQFPN	132 / LQFP32	UFQFPN48 / LQFP48 / LQFP64 / LQFP80						LQFP48		
Pa	rt numbe	rs			L151K3U <sup>(1)</sup> I51K[46][UT]			STM8L151C[468][UT] STM8L152C[468][UT] (48 pins)  STM8L151R[68]T STM8L152R[68]T STM8L162R8T (64 pins)  STM8L151M8T STM8L152M8T STM8L152M8T STM8L162M8T			STM8L151C3T <sup>(1)</sup>			
Analog I/O group	Gx_lOy	GPIO	Pin	Number of available pins	Usage	Pin	Pin	Pin	Number of available pins	0 pins) Usage	Pin	Number of available pins	Usage	
	G3_IO1	PC2	27		2 channels with	41	57	69		2 channels with	41		1 channel with	
Group 3	G3_IO2	PD7	24	3	1 sampling	36	48	60	3	1 sampling	36	3	1 sampling	
	G3_IO3	PD6	23		capacitor	35	47	59		capacitor	35		capacitor	
	G4_IO1	PD5	22		2 channels with	34	46	58		2 channels with	34		2 channels with	
Group 4	G4_IO2	PD4	21	3	1 sampling	33	45	57	3	1 sampling	33	3	1 sampling	
	G4_IO3	PB7	20		capacitor	31	38	46		capacitor	31		capacitor	
	G5_IO1	PB6 19 2 channel		2 channels with	30	37	45		2 channels with	30		2 channels with		
Group 5	Group 5 G5_IO2		18	3	1 sampling	29	36	44	3	1 sampling	29	3	1 sampling	
	G5_IO3	PB4	17		capacitor 28 35		43		capacitor	28		capacitor		

Table 13. Available touch-sensing channels for STM8L15x / STM8L16x (table 2/2) (continued)

s	Subfamily	,	STM8L151K				M8L1		nedium/me STM8L15 <sup>2</sup> STM8L1520 STM8L162	C/R/M	STM8L151C low density			
F	Packages UFQFPN32 / LQFP32					U	FQFF	PN48 /	LQFP48 /	LQFP64 / LQFP80		L	QFP48	
STM8L15					M8L151C[4 M8L152C[4 (48 pin									
Pa	rt numbe	rs			L151K3U <sup>(1)</sup> I51K[46][UT]	STMR1 162DRT   STMR1 161C2T\!				L151C3T <sup>(1)</sup>				
								STM8L151M8T STM8L152M8T STM8L162M8T (80 pins)						
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Pin	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	
	G6_IO1	PB3	16		2 channels with	27	34	42		2 channels with	27		2 channels with	
Group 6	G6_IO2	PB2	15	3	1 sampling capacitor	26	33	41	3	1 sampling capacitor	26	3	1 sampling capacitor	
	G6_IO3	PB1	14		Сарасног	25	32	40		Сарасног	25		Сарасноі	
	G7_IO1	PB0	13			24	31	39			24			
Group 7	G7_IO2	PD3	12	3	2 channels with 1 sampling	23	28	32	3	2 channels with 1 sampling	23	4	3 channels with 1 sampling capacitor	
	G7_IO3	PD2	11		capacitor	22	27	31		capacitor	22			
	G7_IO4	PE3	-			(2)	(2) (2) (2)				17			



Table 13. Available touch-sensing channels for STM8L15x / STM8L16x (table 2/2) (continued)

Subfamily STM8L151K						STM8L151C medium/medium+/high density STM8L151R/M STM8L152C/R/M STM8L162R/M						STM8L151C low density							
F	Packages			UFQFPN	132 / LQFP32	UFQFPN48 / LQFP48 / LQFP64 / LQFP80						LQFP48							
Pa	rt numbe	rs			L151K3U <sup>(1)</sup> I51K[46][UT]				STM8	468][UT] s) 51R[68]T 52R[68]T 162R8T	•								
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Pin	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage						
	G8_IO1	PD1	10			21	26	30			21								
Group 8	G8_IO2	PD0	9	2	1 channel with 1 sampling						1 channel with 20	20	25	29	3	2 channels with 1 sampling	20	4	3 channels with 1 sampling
J. Cap C	G8_IO3	PE5	-	_	capacitor	19	24	28		capacitor	19	.	capacitor						
	G8_IO4	PE4	PE4 - (2) (2) (2)								18								
	num numb channels	er of	14 channels with 8 sampling capacitors						16 channels sampling ca		20 channels with 8 sampling capacitors								

<sup>1.</sup> The product has an hardware acceleration cell for touch sensing.

<sup>2.</sup> This IO does not belong to the analog IO group.



# 2.19.7 Hardware implementation example

Figure 16 shows an example of hardware implementation on STM8L1xx devices.


### Recommendations to increase the noise immunity on the PCB

To ensure a correct operation in noisy environment, the floating nets must be avoided (tracks, copper elements, conductive frames, etc...).

As a consequence:

- All unused touch controller I/Os must be either configured to output push-pull low or externally tied to GND.
- The parameter TSLPRM\_IODEF should also be configured to the output push-pull low state
- We recommend to drive the sampling capacitor common node using a standard I/O of the touch controller configured in output push-pull low mode.



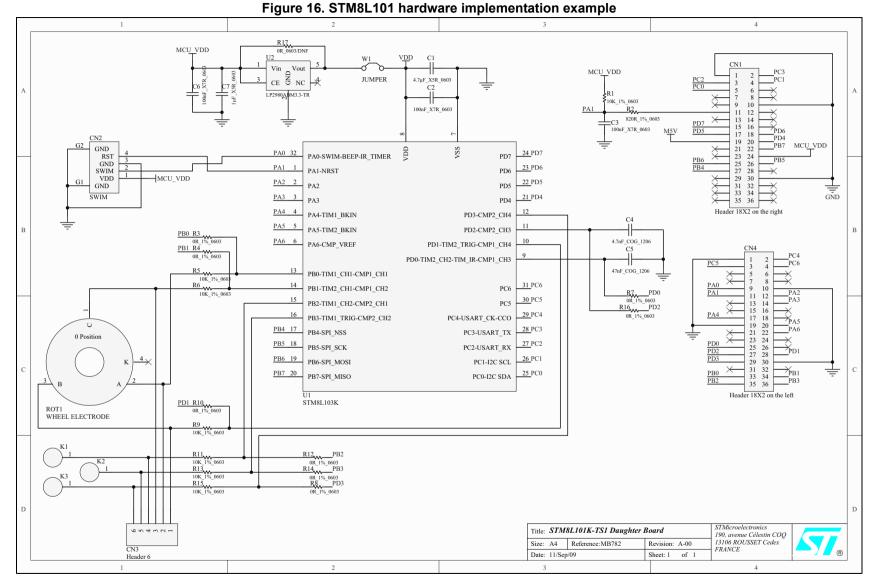



### 2.20 STM8TL5x devices

# 2.20.1 Acquisition

The STM8TL5x devices acquisition is done in the files:

- tsl acq stm8tl5x.c
- tsl\_acq\_stm8tl5x.h

Functions used by the application layer and that are device dependent:

- TSL acq BankConfig()
- TSL\_acq\_BankStartAcq()
- TSL acq BankWaitEOC()
- TSL acq GetMeas()

The other functions in this file are for internal use and the user doesn't need to call them directly.

# **2.20.2** Timings

The STM8TL5x devices timing management is done in the files:

- tsl\_time\_stm8tl5x.c
- tsl\_time\_stm8tl5x.h

The **TIM4** is used to generate a timebase for the ECS and DTO modules.

Warning:

The auto reload counter is calculated for a  $F_{CPU}$  equal to 16 MHz. If you use another  $F_{CPU}$  value in your application you must change the ARR value inside the TSL\_tim\_Init() function.

Functions used

- TSL tim Init()
- TSL\_Timer\_ISR()

### 2.20.3 Parameters

The parameters specific to the STM8TL5x devices are described in the file:

tsl\_conf\_stm8tl5x.h

and are checked in the file:

tsl\_check\_config\_stm8tl5x.h

# 2.20.4 Memory footprint

### **Conditions**

- Cosmic STM8 C compiler 32K version v4.3.6
- Compiler options: +modsl0 -pxp +compact +split -pp
- · Cosmic library not counted
- STMTouch driver default options: ECS=ON, DTO=ON, ZONE=OFF, DXS=ON (excepted if only one sensor is used)
- Each sensor has its own parameters, all parameters placed in RAM

The following tables summarize the memory footprint with different configurations:

Table 14. STM8TL5x memory footprint without proximity<sup>(1)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
1	1	1 TKey	~4.3	~70
3	1	3 TKeys	~4.4	~110
19	4	19 TKeys	~4.7	~440
26	6	16 Linears-1ch 2 Linears-5ch	~6.2	~680
26	6	16 TKeys 2 Linears-5ch	~7.8	~570

<sup>1.</sup> The content of this table is provided for information purposes only.

Table 15. STM8TL5x memory footprint with proximity<sup>(1)</sup>

rable for Crimer Lex memory receptions with proximity											
Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)							
1	1	1 TKey	~5.2	~70							
3	1	3 TKeys	~5.4	~110							
19	4	19 TKeys	~5.6	~490							
26	6	16 Linears-1ch 2 Linears-5ch	~7.0	~730							
26	6	16 TKeys 2 Linears-5ch	~9.5	~620							

<sup>1.</sup> The content of this table is provided for information purposes only.

# 2.20.5 Acquisition timings

The following figure shows the **simplified** sequencing for a 2 bank acquisition.

Hardware ECS proc. Meas. storing Acq. init. Full proc. Sensor proc. Run Active-halt Run Active-halt Initialization of a bank acquisition Hardware acquisition, the CPU can enter in low power mode (WFI, WFE, active-halt) Measurement storing for each enabled receivers of the bank just acquired Sensor processing can be split in different functions (touchkeys, linear or rotary sensors, ...) ECS processing not performed after each set of acquisitions but executed sequentially after a delay elapsed MSv31741V1

Figure 17. Simplified acquisition sequencing

### **Conditions**

- Cosmic STM8 C compiler 32K version v4.3.6
- Compiler options: +modsl0 -pxp +split -pp
- STMTouch driver default options: ECS=ON, DTO=ON, DXS=ON (excepted if one channel is used)
- Each sensor has its own parameters, all parameters placed in RAM

The following table summarizes the timings measured for the different acquisition sequences:

rabio 10. 01 mo 120x acquiotion anningo												
Process	Function	Conditions	Duration (us)	Comment								
Startup before main()		Any	~60000	Compiler dependent								
TOU SHIP ATTACK	TSL_obj_GroupInit()	3 touchkeys / 1bank	~7500	Time before the driver is ready to								
TSL initialization	TSL_Init()	19 touchkeys / 4banks	~30000	report a touch including the calibration								
Acquisition Initialization	TSL_acq_BankConf ig()	Any	66	This must be repeated for each bank								

Table 16. STM8TL5x acquisition timings<sup>(1)</sup>

Table 16. STM8TL5x acquisition timings<sup>(1)</sup> (continued)

Process	Function	Conditions	Duration (us)	Comment
		UP = 1, PASS = 1	~125	Reference target set to 500
Hardware acquisition	None	UP = 1, PASS = 2	~187	whatever the number of enabled receivers
Hardware acquisition	None	UP = 2, PASS = 2	~250	PXS_CKCR1 = 0x70 (i.e. HSI_PXS
		UP = 3, PASS = 3	~350	= 16 MHz)
Measurement storing		3 receivers	81	
	TSL_acq_BankGet	5 receivers	135	
	Result()	by enabled receiver	~27	
Toughkov processing	TSL_obj_GroupProc	3 touchkeys	63	One object group
Touchkey processing	ess()	19 touchkeys	460	Two object groups
		3 touchkeys	302	Including hardware acquisition but
Full processing	TSL_action()	19 touchkeys	1680	without the ECS which is executed each 100 ms
		3 touchkeys	220	
ECS processing	TSL_ecs_Process()	19 touchkeys	1400	Not performed after each acquisition but on scheduling
		by touchkey	~75	

<sup>1.</sup> The content of this table is provided for information purposes only.

### 2.20.6 MCU resources

The table below shows the peripherals that are used by the STMTouch driver on STM8TL5x devices. Care must be taken when using them to avoid any unwanted behavior.

Table 17. STM8TL5x MCU resources used

Peripheral	Function						
GPIOs	Acquisition						
8-bit timer (TIM 4)	Time base for ECS and DTO						
ProxSense (PXS)	Acquisition						

# 2.20.7 STM8TL5x available touch-sensing channels

The table below provides an overview of the available touch sensing channels for the STM8TL5x devices.

Note:

The following table is not restrictive in term of part numbers supported by the STMTouch driver. The STMTouch driver can be used on any new device that may become available as part of ST microcontrollers portfolio. Please contact your ST representative for support.




Table 18. Available touch-sensing channels for STM8TL5x

Sub	family		STM8TL5x									
Pac	kages			Т	SSOP20		U	FQFPN28	UFQFPN48			
				STN	18TL52F4P		STN	/18TL52G4U				
Part r	numbers	S	STM8TL53F4P				STM8TL53G4U			- STM8TL53C4U		
PXS function GPIO		Pin	Pin	Usage	Pin	Pin	Pin Usage		Usage			
	RX0a	-	11	11		10	10		13			
	RX1a	-	12	12		11	11		15			
	RX2a	-	13	13		12	12		17			
Receiver	RX3a	-	-	-	5 Receivers / Transmitters	13	13		19			
	RX4a	-	-	-		14	14	8 Receivers / Transmitters	21	10 Receivers / Transmitters		
A <sup>(1)</sup>	RX5a	-	-	-		15	15		23			
	RX6a	-	14	14		16	16		25			
	RX7a	-	15	15		17	17		27			
	RX8a	-	-	-		-	-		29			
	RX9a	-	-	-		-	-		31			
	RX0b	-	-	-		-	-		14			
	RX1b	-	-	-		-	-		16			
	RX2b	-	-	-		-	-		18			
	RX3b	-	-	-		-	-		20			
Receiver	RX4b	-	-	-	0 Receivers /	-	-	0 Receivers /	22	10 Receivers /		
B <sup>(1)</sup>	RX5b	-	-	-	Transmitters	-	-	Transmitters	24	Transmitters		
	RX6b	-	-	-		-	_		26			
	RX7b	-	-	-		-	-		28			
	RX8b	-	-	-		-	-		30			
	RX9b	-	-	-		-	-		32			

Table 18. Available touch-sensing channels for STM8TL5x (continued)

Sub	family		STM8TL5x									
Pac	kages			Т	SSOP20		U	FQFPN28	UFQFPN48			
D. J.				STN	/18TL52F4P		STN	/18TL52G4U				
Part n	umbers	5	STM8TL53F4P			-	STM8TL53G4U			STM8TL53C4U		
PXS func	tion	GPIO	Pin	Pin	Usage	Pin	Pin	Usage	Pin	Usage		
	TX0	PD0	16	16		18	18		33			
	TX1	PD1	17	17	STM8TL52F4P: - 2 Transmitters	19	19	1	34			
	TX2	PD2	-	-		20 <sup>(2)</sup>	20		35			
	TX3	PD3	-	-		21 <sup>(2)</sup>	21	STM8TL52G4U: 2 Transmitters	36			
	TX4	PD4	18 <sup>(2)</sup>	18		22 <sup>(2)</sup>	22		39			
	TX5	PD5	19 <sup>(2)</sup>	19		23 <sup>(2)</sup>	23		40			
	TX6	PD6	20 <sup>(2)</sup>	20		24 <sup>(2)</sup>	24		41			
Transmitter	TX7	PD7	-	-		27 <sup>(2)</sup>	27		42	15 Transmitters		
	TX8	PB0	-	-	STM8TL53F4P: 5 Transmitters	28 <sup>(2)</sup>	28		43			
	TX9	PB1	-	-	5 Transmillers	-	-	9 Hansilillers	44			
	TX10	PB2	-	-		-	-		45			
	TX11	PB3	-	-		-	-		46			
	TX12	PB4	-	-		-	-		47			
	TX13	PB5	-	-		-	-		48			
	TX14	PB6	-	-		-	-		1			
Maximum number		STM8TL52F4P: 12 channels with a 4RX*3TX matrix					2G4U: 25 channels 5RX*5TX matrix	300 channels with a				
or cn	annels		_		BF4P: 25 channels BRX*5TX matrix	_	-	3G4U: 72 channels 3RX*9TX matrix	20RX*15TX matrix			

<sup>1.</sup> The receivers can also be used as transmitters. This is used to define the square matrix to address the maximum number of channels (please refer to product datasheet for further information).

<sup>2.</sup> On STM8TL52 devices, this GPIO is present but does not support the PXS alternate function.

# 2.20.8 Hardware implementation example

Figure 18. shows an example of hardware implementation on STM8TL5x devices.


# Recommendations to increase the noise immunity on the PCB:

To ensure a correct operation in noisy environment, the floating nets must be avoided (tracks, copper elements, conductive frames, etc...).

As a consequence:

All unused touch controller I/Os must be either configured to output push-pull low or externally tied to GND.

The parameters TSLPRM\_PXS\_INACTIVE\_TX and TSLPRM\_PXS\_INACTIVE\_RX should also be configured to the Grounded state.

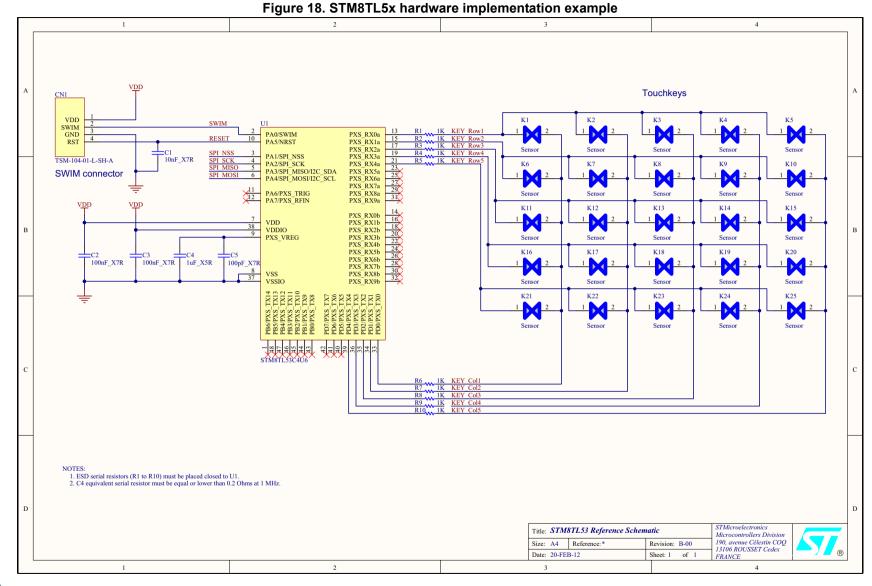



### 2.21 STM32F0xx devices

# 2.21.1 Acquisition

The STM32F0xx devices acquisition is done in the files:

- tsl acq stm32f0xx.c
- tsl acq stm32f0xx.h

Functions used by the application layer and that are device dependent:

- TSL acq BankConfig()
- TSL\_acq\_BankStartAcq()
- TSL acq BankWaitEOC()
- TSL acq GetMeas()

The other functions in this file are for internal use and the user doesn't need to call them directly.

# **2.21.2** Timings

The STM32F0xx devices timing management is done in the files:

- tsl\_time\_stm32f0xx.c
- tsl\_time\_stm32f0xx.h

The **systick** is used to generate a timebase for the ECS and DTO modules.

Functions used:

• TSL\_tim\_Init()

#### 2.21.3 Parameters

The parameters specific to the STM32F0xx devices are described in the file:

tsl\_conf\_stm32f0xx.h

and are checked in the file:

tsl\_check\_config\_stm32f0xx.h

## 2.21.4 Memory footprint

#### **Conditions**

- IAR ANSI C/C++ Compiler V6.40.1 for ARM®
- Compiler options: optimization high-balanced
- IAR library not counted
- STMTouch driver default options: ECS=ON, DTO=ON, ZONE=OFF, DXS=ON (excepted if only one sensor is used)
- Each sensor has its own parameters, all parameters placed in RAM

The following tables summarize the memory footprint with different configurations:

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
3	3	3 TKeys	~3.9	~130
3	3	1 Linear-3ch	~4.9	~120
15	6	9 TKeys 1 Linear-3ch 1 Rotary-3ch	~7.7	~350

Table 19. STM32F0xx memory footprint without proximity<sup>(1)</sup>

Table 20. STM32F0xx memory footprint with proximity<sup>(1)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
3	3	3 TKeys	~4.7	~140
3	3	1 Linear-3ch	~5.8	~130
15	6	9 TKeys 1 Linear-3ch 1 Rotary-3ch	~9.5	~390

<sup>1.</sup> The content of this table is provided for information purposes only.

#### 2.21.5 MCU resources

The table below shows the peripherals that are used by the STMTouch driver on STM32F0xx devices. Care must be taken when using them to avoid any unwanted behavior.

Table 21. STM32F0xx MCU resources used

Peripheral	Function
GPIOs	Acquisition
Systick	Time base for ECS and DTO
Touch sense controller (TSC)	Acquisition

# 2.21.6 STM32F0xx available touch-sensing channels

The tables below provide an overview of the available touch sensing channels for the STM32F0xx devices.

- Note 1: The following tables are not restrictive in term of part numbers supported by the STMTouch driver. The STMTouch driver can be used on any new device that may become available as part of ST microcontrollers portfolio. Please contact your ST representative for support.
- Note2: For n available pins in an I/O group, one pin is used as sampling capacitor and n-1 pins are used as channels.

The I/O group cannot be used if the number of available pins in less or equal to one.

577

74/125 DocID024201 Rev 4

<sup>1.</sup> The content of this table is provided for information purposes only.



Table 22. Available touch sensing channels for STM32F042

S	ubfamily									S1	ΓM32F042							
F	ackages			TSSOP2	20		UFQFPN	128		LQFP3	2 / UFQFPN:	32		WLCSP	36	L	.QFP48 / UF	QFPN48
Flash	memory	size				ı			ı	4=1	16K, 6=32K							
Pa	rt number	's	5	STM32F042	F[46]		STM32F042	2G[46]		STM3	32F042K[46]			STM32F042	2T[46]	STM32F042C[46]		
Analog I/O group	Gx_IOy	GPIO	Pin	Number of availabl e pins	Usage	Pin	Number of available pins	Usage	Pin LQFP	Pin UFQFP N	Number of available pins	Usage	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage
	G1_IO1	PA0	6		3	6			6	6			F6		3	10		
Group 1	G1_IO2	PA1	7	4	channels with 1	7	4	3 channels with 1	7	7	4	3 channels with 1	D4	4	channels	11	4	3 channels with 1
Group 1	G1_IO3	PA2	8	_	sampling	8		sampling capacitor	8	8		sampling capacitor	E4	4	with 1 sampling	12	_	sampling capacitor
	G1_IO4	PA3	9		capacitor	9			9	9			F5		capacitor	13		
	G2_IO1	PA4 <sup>(1)</sup>	10		3	10		3 channels	10	10	4	3 channels	C3		3	14		2 obonnolo
Group 2	G2_IO2	PA5 <sup>(1)</sup>	11	4	channels with 1	11	4	with 1	11	11		with 1	D3	4	channels with 1	15	4	3 channels with 1 sampling capacitor
	G2_IO3	PA6	12		sampling capacitor	12		sampling capacitor	12	12		sampling capacitor	E3	,	sampling	16		
	G2_IO4	PA7	13		oupuo.to.	13			13	13			F4		capacitor	17		
	G3_IO1	-	-		Cannot be	-		1 channel	-	-		1/2	-		2channels	-		2 channels
Group 3	G3_IO2	PB0	-	1	used for touch	14	2	with 1	14	14	2/3	channels with 1	F3	3	with 1	18	3	with 1 sampling
	G3_IO3	PB1	14		sensing	15		capacitor	15	15	-	sampling capacitor	F2		sampling capacitor	19		capacitor
	G3_IO4	PB2	- (2)			- (0)			-	16		Сарасноі	C2			20		
	G4_IO1	PA9	17 <sup>(2)</sup>		1 channel	19 <sup>(2)</sup>		1 channel	19	19	-	3 channels	D1		3	30		3 channels
Group 4	G4_IO2	PA10	18 <sup>(2)</sup>	2	with 1 sampling	20 <sup>(2)</sup>	2	with 1 sampling	20	20	4	with 1 sampling	D2	4	channels with 1	31	4	with 1 sampling
	G4_IO3	PA11	17 <sup>(2)</sup>		capacitor	19 <sup>(2)</sup>		capacitor	21	21	-	capacitor	C1		sampling capacitor	32		capacitor
	G4_IO4		PA12 18 <sup>(2)</sup>						22	22			A1		- capacito:	33		
	G5_IO1	PB3	-		Cannot be	24		3 channels	26	26	-	3 channels	B3		3	39		3 channels
Group 5	G5_IO2	PB4 PB6	-	0	used for touch sensing	25	25 with 1	27	27	4	with 1	1 A3 4	4	channels with 1	40	4	with 1 sampling	
	G5_IO3							capacitor	29	29	_	capacitor	C4		sampling capacitor	42		capacitor
	G5_IO4	PB7	-			28			30	30			A4			43		

S	ubfamily									ST	M32F042								
F	ackages			TSSOP	20		UFQFPN	128		LQFP32 / UFQFPN32				WLCSP36			LQFP48 / UFQFPN48		
Flash	memory	size								4=1	6K, 6=32K		•						
Pai	rt number	's	ç	STM32F042	2F[46]		STM32F042	2G[46]		STM3	32F042K[46]			STM32F042	2T[46]	[46] STM32F042C[46]			
Analog I/O group	Gx_IOy	GPIO	Pin	Number of availabl e pins	Usage	Pin	Number of available pins	Usage	Pin LQFP	Pin UFQFP N	Number of available pins	Usage	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	
			1		0	-		0	-	ı		0	-		0	-		0	
Group 6			ı	0	Cannot be used for	-	0	Cannot be used for	-	-	0	Cannot be used for	-	0	Cannot be used for	-	0	Cannot be used for	
Group o	- 0		touch sensing	-		Touch sensing	-	-		Touch sensing	-		Touch sensing	-	J	Touch sensing			
			-		Ū	-			-	-			-			-		_	
			-			-			-	-			-			-			
Group 7	not ava	واطوان	-	0	Cannot be used for	-	0	Cannot be used for	-	-	0	Cannot be used for	-	0	Cannot be used for	-	0	Cannot be used for	
Group 7	not ava	illable	ı		Touch sensing	-		Touch sensing	-	-		Touch sensing	-		Touch sensing	-		Touch sensing	
			ı		_	1		_	-	ı		_	-		-	-		_	
			ı		_	-			-	-			-			-			
Group 8			-		Cannot be used for	-	0	Cannot be used for	-	-	0	Cannot be used for	-	0	Cannot be used for	-	0	Cannot be used for	
Group 6	ih o		-	0	Touch sensing	-		Touch sensing	-	-		Touch sensing	-		Touch sensing	-		Touch sensing	
	-				-		Scribing	-	-			-			-		J		
_	Maximum number of channels 7 with 3 sampling capacitors		11 with 5 sampling capacitors			13/14 with 5 sampling capacitors			14 with 5 sampling capacitors			14 with 5 sampling capacitors							

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.



<sup>2.</sup> Pin pair PA11/PA12 can be remapped instead of pin pair PA9/PA10 using SYS\_CTRL register.



Table 23. Available touch sensing channels for STM32F051 and STM32F072

5	Subfamily							STM	132F051/STM	32F072	2				
F	Packages			LQFP32	/UFQFPN32	2		LQFP	48		LQFP6	64		LQFP1	00
Flash	n memory s	size						4=16K, 6=32	2K, 8=64K, B=	128K,	C=256K				
Pa	rt numbers	6	STM32F051K[468]				STM32F051C[468B] STM32F051R[468B] STM32F072C[8B]						STM32F051VB STM32F052V[8B]		
Analog I/O group	Gx_IOy   GPIO   PIN		Pin UFQFPN	Number of available pins	Usage	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	
	G1_IO1	PA0	6	6		3 channels	10		3 channels	14		3 channels	23	4	3 channels with 1
Group 1	G1_IO2	PA1	7	7	4	with 1		4	with 1	15	4	with 1	24		
	G1_IO3	PA2	8	8		sampling capacitor	12		sampling capacitor	16	-	sampling capacitor	25		sampling capacitor
	G1_IO4	PA3	9	9			13			17		Capacitor	26		,
	G2_IO1	PA4 <sup>(1)</sup>	10	10		3 channels	14		3 channels	20		3 channels	29		3 channels
Group 2	G2_IO2	PA5 <sup>(1)</sup>	11	11	4	with 1	15	4	with 1	21	4	with 1	30	4	with 1
Croup 2	G2_IO3	PA6	12	12		sampling capacitor	16	·	sampling capacitor	22	_	sampling capacitor	31	·	sampling capacitor
	G2_IO4	PA7	13	13		образион	17			23		Сарасноі	32		
	G3_IO1	PC5	-	-		1/2	-		2 channels	25		3 channels	34		3 channels
Group 3	G3_IO2	PB0	14	14	2/3	channels with 1	18	3	with 1	26	4	with 1	35	4	with 1
Croup o	G3_IO3	PB1	15	15	270	sampling	19		sampling capacitor	27	4	sampling	36	7	sampling capacitor
	G3_IO4	PB2	-	16		capacitor	20			28		capacitor	37		
	G4_IO1	PA9	19	19		3 channels	30		3 channels	42		3 channels	68		3 channels
Group 4	G4_IO2	PA10	20	20	4	with 1	31	4	3 channels with 1	43	4	with 1	69	4	with 1
Gloup 4	G4_IO3	PA11	21	21		sampling capacitor	32	4		44	4	sampling	70	7	sampling capacitor
	G4_IO4	PA12	22	22		Supuditor	33		Japaonoi	45		capacitor	71		capacitor

Table 23. Available touch sensing channels for STM32F051 and STM32F072 (continued)

S	Subfamily							STM	132F051/STM3	32F072	2				
F	Packages			LQFP32	/UFQFPN32	2		LQFP	48		LQFP6	4		LQFP1	00
Flash	memory s	size						4=16K, 6=32	2K, 8=64K, B=	128K,	C=256K				
Pa	rt numbers	6		STM32	F051K[468]		STM32F051C[468B] STM32F072C[8B]			STM32F051R[468B] STM32F072R[8B]			STM32F051VB STM32F052V[8B]		
Analog I/O group	Gx_IOy	GPIO	Pin LQFP	Pin UFQFPN	Number of available pins	Usage	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage
	G5_IO1	PB3	26	26		3 channels	39		3 channels	55		3 channels	89		3 channels
Group 5	G5_IO2	PB4	27	27	4	with 1		4	with 1	56	4	with 1	90	4	with 1
Croup c	G5_IO3	PB6	29	29		sampling capacitor	42	·	sampling capacitor	58		sampling capacitor	92	7	sampling capacitor
	G5_IO4	PB7	30	30			43			59		Сарасноі	93		Сарасноі
_	G6_IO1	PB11	-	-		Cannot be used for touch sensing	22	4	3 channels	30		3 channels	48		3 channels
Group 6	G6_IO2	PB12	-	-	0		25		with 1	33	4	with 1	51	4	with 1 sampling capacitor
5.55p	G6_IO3	PB13	-	-			26		sampling capacitor	34		sampling capacitor	52		
	G6_IO4	PB14	-	-			27			35		Capacitor	53		Capacitoi
	G7_IO1	PE2	-	-		Cannot be	-		Cannot be	-		Cannot be	1		3 channels
Group 7	G7_IO2	PE3	-	-	0	used for	-	0	used for	-	0	used for	2	4	with 1
э. э. р	G7_IO3	PE4	-	-		Touch sensing	-		Touch sensing	-		Touch sensing	3		sampling capacitor
	G7_IO4	PE5	-	-		Ŭ	-			-			4		
	G8_IO1	PD12	-	-		Cannot be	-		Cannot be	-		Cannot be	59		3 channels
Group 8	G8_IO2	PD13	-	-	0	used for	-	0	used for	-	0	used for	60	4	with 1
2.0up 0	G8_IO3	PD14	-	-	U	Touch sensing	-		Touch sensing	-		Touch sensing	61		sampling capacitor
	G8_IO4	PD15	-	-		sensing	-			-			62	<u>;                                    </u>	
Maximum number of channels		1	13/14 with 5 sampling capacitors				17 with 6 sampling capacitors			vith 6 samplin	g capacitors	24 with 8 sampling capacitors			

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.



# 2.21.7 Hardware implementation example


Figure 19 shows an example of hardware implementation on STM32F0xx devices.

#### Recommendations to increase the noise immunity on the PCB

To ensure a correct operation in noisy environment, the floating nets must be avoided (tracks, copper elements, conductive frames, etc...).

#### As a consequence:

- All unused touch controller I/Os must be either configured to output push-pull low or externally tied to GND.
- The parameter TSLPRM\_TSC\_IODEF should also be configured to the output pushpull low state.
- We recommend to drive the sampling capacitor common node using a standard I/O of the touch controller configured in output push-pull low mode.
- It may also be required to add a capacitor-input filter (pi filter) on each channel line.

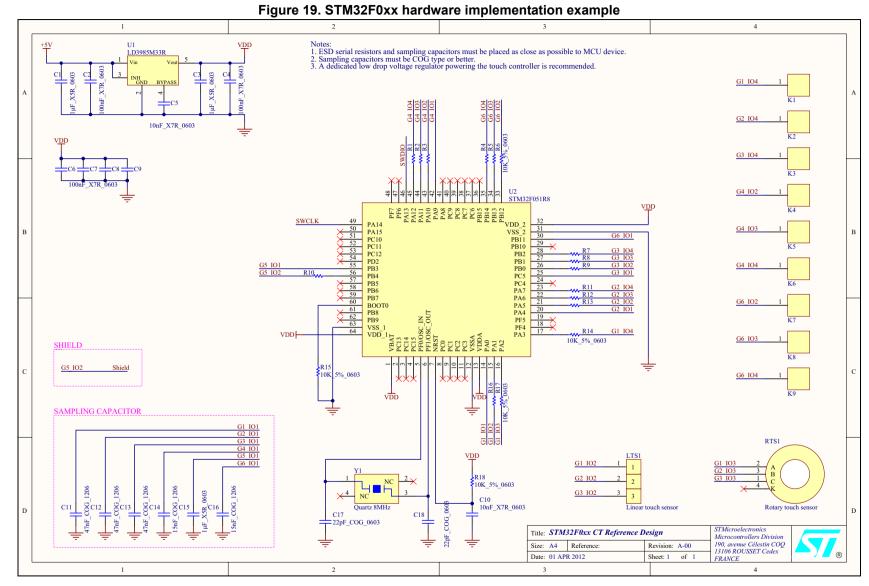



### 2.22 STM32F3xx devices

## 2.22.1 Acquisition

The STM32F3xx devices acquisition is done in the files:

- tsl acq stm32f3xx.c
- tsl\_acq\_stm32f3xx.h

Functions used by the application layer and that are device dependent:

- TSL acq BankConfig()
- TSL\_acq\_BankStartAcq()
- TSL acq BankWaitEOC()
- TSL acq GetMeas()

The other functions in this file are for internal use and the user doesn't need to call them directly.

# **2.22.2** Timings

The STM32F3xx devices timing management is done in the files:

- tsl\_time\_stm32f3xx.c
- tsl time stm32f3xx.h

The **systick** is used to generate a timebase for the ECS and DTO modules.

Functions used:

TSL\_tim\_Init()

#### 2.22.3 Parameters

The parameters specific to the STM32F3xx devices are described in the file:

tsl\_conf\_stm32f3xx.h

and are checked in the file:

tsl\_check\_config\_stm32f3xx.h

## 2.22.4 Memory footprint

#### **Conditions**

- IAR ANSI C/C++ Compiler V6.40.1 for ARM<sup>®</sup>
- Compiler options: optimization high-balanced
- IAR library not counted
- STMTouch driver default options: ECS=ON, DTO=ON, PROX=OFF, ZONE=OFF, DXS=OFF
- Each sensor has its own parameters, all parameters placed in RAM

The following tables summarize the memory footprint with different configurations:

Table 24.	STM32F30x	memory	footprint <sup>(1)</sup>
-----------	-----------	--------	--------------------------

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
2	2	2 TKeys	~3.2	~120

<sup>1.</sup> The content of this table is provided for information purposes only.

Table 25. STM32F37x memory footprint<sup>(1)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
3	3	3 TKeys	~3.3	~140
3	3	1 Linear-3ch	~4.3	~130

<sup>1.</sup> The content of this table is provided for information purposes only.

#### 2.22.5 MCU resources

The table below shows the peripherals that are used by the STMTouch driver on STM32F3xx devices. Care must be taken when using them to avoid any unwanted behavior.

Table 26. STM32F3xx MCU resources used

Peripheral	Function
GPIOs	Acquisition
Systick	Time base for ECS and DTO
Touch sense controller (TSC)	Acquisition

# 2.22.6 STM32F3xx available touch-sensing channels

The tables below provide an overview of the available touch sensing channels for the STM32F30x and STM32F37x devices.

- Note 1: The following tables are not restrictive in term of part numbers supported by the STMTouch driver. The STMTouch driver can be used on any new device that may become available as part of ST microcontrollers portfolio. Please contact your ST representative for support.
- Note2: For n available pins in an I/O group, one pin is used as sampling capacitor and n-1 pins are used as channels.

The I/O group cannot be used if the number of available pins in less or equal to one.



Table 27. Available touch sensing channels for STM32F30x

S	ubfamily							STM	132F30	х					
Р	ackages			L	QFP32		L	QFP48		LO	QFP64		L	QFP100	
Pai	t numbers		STM32F301K[468] STM32F302K[468] STM32F303K[468] STM32F333K[468]			STM32F301C[468] STM32F302C[468BC] STM32F303C[468BC] STM32F333C[468]			STM32F301R[468] STM32F302R[468BC] STM32F303R[468BC] STM32F333R[468]				STM32F302V[BC] STM32F303V[BC]		
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Number of availabl e pins	Usage	Pin	Number of available pins	Usage	Pin	Number of availabl e pins	Usage	
	G1_IO1	PA0	7			10			14			23			
Group 1	G1_IO2	PA1	8	4	3 channels with 1 sampling capacitor	11	4	3 channels with 1 sampling capacitor	15	4	3 channels with	24	4	3 channels with	
Group 1	G1_IO3	PA2	9	·		12	<u>'</u>		16	<u>'</u>	1 sampling capacitor	25		1 sampling capacitor	
	G1_IO4	PA3	10			13			17			26			
	G2_IO1	PA4 <sup>(1)</sup>	11			14		3 channels with	20		3 channels with	29			
Group 2	G2_IO2	PA5 <sup>(1)</sup>	12	4	3 channels with	15	4		21	4		30	4	3 channels with	
	G2_IO3	PA6	13		1 sampling capacitor	16		1 sampling capacitor	22		1 sampling capacitor	31		1 sampling capacitor	
	G2_IO4	PA7	14			17			23			32			
	G3_IO1	PC5	-			-			25			34			
Group 3	G3_IO2	PB0	15	1	Cannot be used for	18	3	2 channels with	26	4	3 channels with	35	4	3 channels with	
·	G3_IO3	PB1	-	=	touch sensing	19		1 sampling capacitor	27		1 sampling capacitor	36		1 sampling capacitor	
	G3_IO4	PB2	-			20			28			37			
	G4_IO1	PA9	19	4		30			42			68			
Group 4	G4_IO2	PA10	20		3 channels with 1 sampling capacitor	31	4	3 channels with	43	4	3 channels with	69	4	3 channels with	
i i	G4_IO3	PA13	23			34	]	1 sampling capacitor 4	46		1 sampling capacitor	72		1 sampling capacitor	
	G4_IO4	PA14	24			37	,		49			76			

Table 27. Available touch sensing channels for STM32F30x (continued)

s	Subfamily							STM	132F30	x	· · · · · · · · · · · · · · · · · · ·			
Р	Packages			L	QFP32		L	QFP48		LC	PFP64		L	QFP100
Part numbers				STM32 STM32	F301K[468] F302K[468] F303K[468] F333K[468]		STM32F STM32F	2F301C[468] 302C[468BC] 303C[468BC] 2F333C[468]		STM32F3 STM32F3	F301R[468] 102R[468BC] 103R[468BC] F333R[468]		STM32F302V[BC] STM32F303V[BC]	
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Number of availabl e pins	Usage	Pin	Number of available pins	available Usage I		Number of availabl e pins	Usage
	G5_IO1 PB3 26			39			55			89				
Group 5	G5_IO2	PB4	27	4	3 channels with	40	4	3 channels with	56	4	3 channels with	90	4	3 channels with
J. 2.2	G5_IO3	PB6	29		1 sampling capacitor	42		1 sampling capacitor	58	·	1 sampling capacitor	92		1 sampling capacitor
	G5_IO4	PB7	30			43			59			93		
	G6_IO1	PB11	-		Cannot be used for touch sensing	22		3 channels with 1 sampling capacitor	30			48		
Group 6	G6_IO2	PB12	-	0		25	4		33	4	3 channels with	51	4	3 channels with 1 sampling capacitor
	G6_IO3	PB13	-			26			34		1 sampling capacitor	52		
	G6_IO4	PB14	-			27			35			53		
	G7_IO1	PE2	-			-			-			1		
Group 7	G7_IO2	PE3	-	0	Cannot be used for touch sensing	-	0	Cannot be used for	-	0	Cannot be used for	2	4	3 channels with
	G7_IO3	PE4	-		touch sensing	-		touch sensing	-		touch sensing	3		1 sampling capacitor
	G7_IO4	PE5	-			-			-			4		
	G8_IO1	PD12	-			-			-			59		
Group 8	G8_IO2	PD13	-	0	Cannot be used for touch sensing	-	0	Cannot be used for touch sensing	-	0	Cannot be used for touch sensing	60	4	3 channels with 1 sampling capacitor
	G8_IO3	PD14	-		louch sensing	-		. Such conomy	-		todon ochomy	61		i sampling capacitor
	G8_IO4 mum number f channels	PD15 er	-	12 with 4 sa	mpling capacitors	-	17 with 6 sa	impling capacitors	-	18 with 6 san	npling capacitors	62	24 with 8 sa	ampling capacitors

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.



M	

	-			Ta	able 28. Available to	uch	sensing cl	hannels for STM32F	37x			
s	ubfamily							STM32F37x				
Р	ackages			ı	_QFP48		L	QFP64		L	.QFP100 / L	JFBGA100
Flash	memory s	ize		8=64K, B=128K, C=256K								
Par	t numbers	3	STM32F373C[8BC]			STM32F373R[8BC]			STM32F373V[8BC]			
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	LQFP Pin	BGA Pin	Number of available pins	Usage
	G1_IO1	PA0	10		3 channels with 1 sampling capacitor	14	4	3 channels with 1 sampling capacitor	23	L2		3 channels with 1 sampling capacitor
Group 1	G1_IO2	PA1	11	4		15 16			24	M2	4	
Gloup	G1_IO3	PA2	12						25	K3		
	G1_IO4	PA3	13			18			26	L3		
	G2_IO1	PA4 <sup>(1)</sup>	14			20			29	М3		
Group 2	G2_IO2	PA5 <sup>(1)</sup>	15	3	2 channels with	21	4	3 channels with	30	K4	4	3 channels with
Group 2	G2_IO3	PA6 <sup>(1)</sup>	16		1 sampling capacitor	22	7	1 sampling capacitor	31	L4	_	1 sampling capacitor
	G2_IO4	PA7	-			23			32	M4		
	G3_IO1	PC4	-			24			33	K5		3 channels with 1 sampling capacitor
Group 3	G3_IO2	PC5	-	2	1 channel with	25	4	3 channels with 1 sampling capacitor	34	L5	4	
Group 3	G3_IO3	PB0	18	_	1 sampling capacitor	26			35	M5		
	G3_IO4	PB1	19			27			36	M6		

Table 28. Available touch sensin	channels for S	TM32F37x (continued)
----------------------------------	----------------	----------------------

s	ubfamily			STM32F37x									
Р	ackages			L	_QFP48		L	.QFP64		L	QFP100 / I	JFBGA100	
Flash	memory s	ize					8=64	K, B=128K, C=256K					
Par	Part numbers			STM32F373C[8BC]			STM32F373R[8BC] STM32F373V[8BC]						
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	LQFP Pin	BGA Pin	Number of available pins	Usage	
	G4_IO1	PA9	30		3 channels with 1 sampling capacitor	42			68	D10			
Group 4	G4_IO2	PA10	31	4		43 46 49	4	3 channels with	69	C12	4	3 channels with	
Group 4	G4_IO3	PA13	34				1 sampling capacitor	72	A11		1 sampling capacitor		
	G4_IO4	PA14	37					76	A10				
	G5_IO1	PB3	39			55			89	A8			
Group 5	G5_IO2	PB4	40	4	3 channels with	56	4	3 channels with	90	A7	4	3 channels with	
Group 5	G5_IO3	PB6	42	4	1 sampling capacitor	58	4	1 sampling capacitor	92	B5	7	1 sampling capacitor	
	G5_IO4	PB7	43			59			93	B4			
	G6_IO1	PB14	26			34			53	K11			
Group 6	G6_IO2	PB15	27	3	2 channels with	35	3	2 channels with 1 sampling capacitor	54	K10	4	3 channels with 1 sampling capacitor	
Gloup 6	G6_IO3	PD8	28		1 sampling capacitor	36			55	K9	<b>-</b>		
	G6_IO4	PD9	-			-			56	K8			



Table 28. Available touch sensing channels for STM32F37x (continued)

s	ubfamily				5. Available touch 3			STM32F37x		,			
Р	ackages			L	-QFP48		L	.QFP64		L	QFP100 / U	JFBGA100	
Flash	memory s	ize		8=64K, B=128K, C=256K									
Part numbers		3		STM32F373C[8BC]			STM32F373R[8BC]			STM32F373V[8BC]			
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	Pin	Number of available pins	Usage	LQFP Pin	BGA Pin	Number of available pins	Usage	
	G7_IO1	PE2	-			-	-	Cannot be used for	1	B2		3 channels with 1 sampling capacitor	
Group 7	G7_IO2	PE3	-	0	Cannot be used for	-	0		2	A1	4		
Group 7	G7_IO3	PE4	-	O O	touch sensing	-	O	touch sensing	3	B1			
	G7_IO4	PE5	-			-			4	C2			
	G8_IO1	PD12	-			-			59	J10			
Group 8	G8_IO2	PD13	-	0	Cannot be used for	-	0	Cannot be used for	60	H12	4	3 channels with	
Group 6	G8_IO3	PD14	-	U	touch sensing	-	U	touch sensing	61	H11	4	1 sampling capacitor	
	G8_IO4	PD15	-			-	-		62	H10			
-	Maximum number of channels			14 with 6 sa	ampling capacitors		17 with 6 sa	ampling capacitors		24 v	vith 8 samp	ling capacitors	

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.



# 2.22.7 Hardware implementation example


Figure 20 shows an example of hardware implementation on STM32F3xx devices.

#### Recommendations to increase the noise immunity on the PCB

To ensure a correct operation in noisy environment, the floating nets must be avoided (tracks, copper elements, conductive frames, etc...).

As a consequence:

- All unused touch controller I/Os must be either configured to output push-pull low or externally tied to GND.
- The parameter TSLPRM\_TSC\_IODEF should also be configured to the output pushpull low state.
- We recommend to drive the sampling capacitor common node using a standard I/O of the touch controller configured in output push-pull low mode.
- It may also be required to add a capacitor-input filter (pi filter) on each channel line.

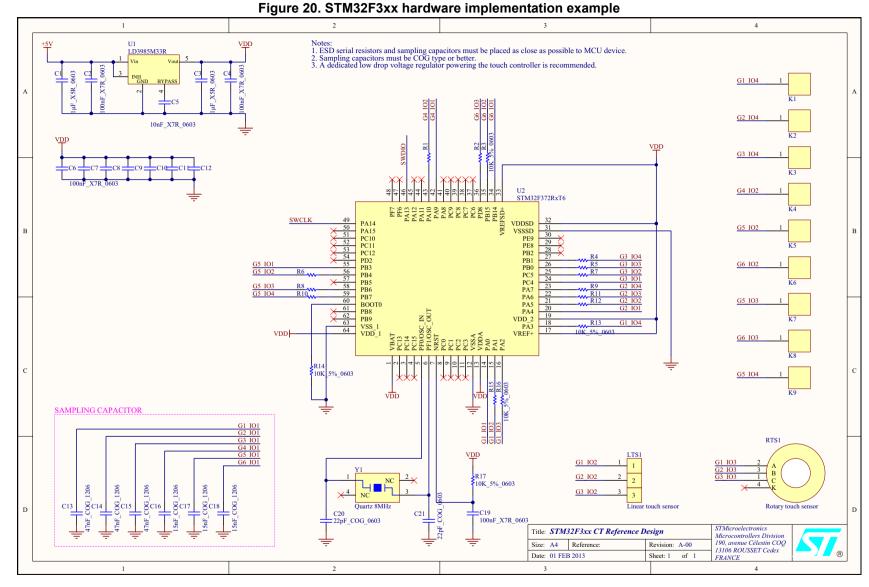



### 2.23 STM32L1xx devices

#### 2.23.1 Acquisition

The STM32L1xx devices **hardware acquisition mode** (using two timers) is done in the files:

- tsl acq stm32l1xx hw.c
- tsl acq stm32l1xx hw.h

Warning: This acquisition mode is available for the STM32L1xx Highdensity and STM32L1xx Medium-density Plus devices only.

The STM32L1xx devices software acquisition mode is done in the files:

- tsl\_acq\_stm32l1xx\_sw.c
- tsl acq stm32l1xx sw.h

This acquisition is available for all STM32L1xx devices.

Note:

The hardware acquisition mode is selected per default for the STM32L1xx High-density and Medium-density Plus devices. If you want to use the software acquisition mode you must add the following constant in the toolchain compiler preprocessor:

TSLPRM STM32L1XX SW ACQ

Functions used by the application layer and that are device dependent:

- TSL acq BankConfig()
- TSL acq BankStartAcq()
- TSL\_acq\_BankWaitEOC()
- TSL acq GetMeas()

The other functions in this file are for internal use and the user doesn't need to call them directly.

## **2.23.2** Timings

The STM32L1xx devices timing management is done in the files:

- tsl time stm32l1xx.c
- tsl time stm32l1xx.h

The **systick** is used to generate a timebase for the ECS and DTO modules.

Functions used:

TSL\_tim\_Init()

#### 2.23.3 Parameters

The parameters specific to the STM32L1xx devices are described in the file:

tsl conf stm32l1xx.h

and are checked in the file:

tsl\_check\_config\_stm32l1xx.h

57/

## 2.23.4 Memory footprint

#### **Conditions**

- IAR ANSI C/C++ Compiler V6.30.1 for ARM®
- Compiler options: optimization high-balanced
- IAR library not counted
- STMTouch driver default options: ECS=ON, DTO=ON, ZONE=OFF, DXS=ON (excepted if only one sensor is used)
- Each sensor has its own parameters, all parameters placed in RAM

The following tables summarize the memory footprint taken by the STMTouch driver using the **hardware acquisition mode** (using Timers) on **STM32L1xx High-density devices**:

Table 29. STM32L1xx\_HD<sup>(1)</sup> memory footprint without proximity<sup>(2)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
3	3	3 TKeys	~6.2	~370
3	3	1 Linear-3ch	~7.2	~360
16	3	10 TKeys 1 Linear-3ch 1 Rotary-3ch	~9.1	~630

<sup>1.</sup> See Section 3.1.1: Toolchain compiler preprocessor section for definition of STM32L1xx\_HD.

Table 30. STM32L1xx HD<sup>(1)</sup> memory footprint with proximity<sup>(2)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
3	3	3 TKeys	~7.0	~380
3	3	1 Linear-3ch	~8.1	~370
16	3	10 TKeys 1 Linear-3ch 1 Rotary-3ch	~10.9	~680

<sup>1.</sup> See Section 3.1.1: Toolchain compiler preprocessor section for definition of STM32L1xx\_HD.

The following tables summarize the memory footprint taken by the STMTouch driver using the **software acquisition mode** on **STM32L1xx Medium-density Plus devices**:

<sup>2.</sup> The content of this table is provided for information purposes only.

<sup>2.</sup> The content of this table is provided for information purposes only.

Table 31. STM32L1xx MDP<sup>(1)</sup> memory footprint without proximity<sup>(2)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
2	2	2 TKeys	~5.9	~350

- 1. See Section 3.1.1: Toolchain compiler preprocessor section for definition of STM32L1xx\_MDP.
- 2. The content of this table is provided for information purposes only

Table 32. STM32L1xx\_MDP<sup>(1)</sup> memory footprint with proximity<sup>(2)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
2	2	2 TKeys	~6.7	~360

- 1. See Section 3.1.1: Toolchain compiler preprocessor section for definition of STM32L1xx\_MDP.
- 2. The content of this table is provided for information purposes only.

The following tables summarize the memory footprint taken by the STMTouch driver using the **software acquisition mode** on **STM32L1xx Medium-density devices**:

Table 33. STM32L1xx\_MD<sup>(1)</sup> memory footprint without proximity<sup>(2)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
2	2	2 TKeys	~5.2	~400
3	3	1 Linear-3ch	~6.2	~420
16	3	10 TKeys 1 Linear-3ch 1 Rotary-3ch	~8.7	~690

- 1. See Section 3.1.1: Toolchain compiler preprocessor section for definition of STM32L1xx\_MD.
- 2. The content of this table is provided for information purposes only.

Table 34. STM32L1xx\_MD<sup>(1)</sup> memory footprint with proximity<sup>(2)</sup>

Channels	Banks	Sensors	ROM (Kbytes)	RAM (bytes)
2	2	2 TKeys	~6.0	~400
3	3	1 Linear-3ch	~7.2	~420
16	3	10 TKeys 1 Linear-3ch 1 Rotary-3ch	~10.4	~730

- 1. See Section 3.1.1: Toolchain compiler preprocessor section for definition of STM32L1xx\_MD.
- 2. The content of this table is provided for information purposes only.

92/125 DocID024201 Rev 4

#### 2.23.5 MCU resources

The tables below show the peripherals that are used by the STMTouch driver on STM32L1xx devices. Care must be taken when using them to avoid any unwanted behavior.

Table 35. MCU resources used on STM32L1xx with hardware acquisition

Peripheral	Function
GPIOs	Acquisition
Systick	Time base for ECS and DTO
2 Timers (TIM9, TIM11)	Acquisition
Routing interface	Acquisition

Table 36. MCU resources used on STM32L1xx with software acquisition

Peripheral	Function
GPIOs	Acquisition
Systick	Time base for ECS and DTO
Routing interface	Acquisition

## 2.23.6 STM32L1xx available touch-sensing channels

The tables below provide an overview of the available touch sensing channels for the STM32L1xx devices.

Note1: The following tables are not restrictive in term of part numbers supported by the STMTouch driver. The STMTouch driver can be used on any new device that may become available as part of ST microcontrollers portfolio. Please contact your ST representative for support.

Note2: For n available pins in an I/O group, one pin is used as sampling capacitor and n-1 pins are used as channels. The I/O group cannot be used if the number of available pins in less or equal to one.

Table 37. Available touch sensing channels for STM32L1xx 512K

S	Subfamily							STM	132L1xx 51	2K					
F	Packages			LQFP64	ļ		LQFP100	/ WLCSP1	04		UFBGA1	32		LQFP14	4
Pa	rt numbers	s	,	STM32L151 STM32L152 STM32L162	2RE		STM3	2L151VE 2L152VE 2L162VE			STM32L15 STM32L15 STM32L16	2QE	;	STM32L15 STM32L15 STM32L16	2ZE
Analog I/O group	Gx_IOy	GPIO	LQFP pin	Number of available pins	Usage	LQFP Pin	WLCSP ball	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G1_IO1	PA0	14		3	23	K9		3	L2		3	34		3
	G1_IO2	PA1	15	4	channels with	24	L9	]	channels with	M2		channels with	35	] _	channels with
Group 1	G1_IO3	PA2	16		1	25	J8	4	1	K3	4	1	36	4	1
	G1_IO4	PA3 <sup>(1)</sup>	17		sampling capacitor	26	H7		sampling capacitor	L3		sampling capacitor	37		sampling capacitor
	G2_IO1	PA6	22		1	31	H6		1	L4		3	42		3
	G2_IO2	PA7	23		channel	32	K7		channel	J5		channels	43		channels
Group 2	G2_IO3	PF15	-	2	with 1	-	-	2	with 1	J9	4 <sup>(2)</sup>	with 1	55	4 <sup>(2)</sup>	with 1
	G2_IO4	PG0 <sup>(3)</sup>	-		sampling	-	-		sampling	Н9		sampling	56		sampling
	G2_IO5	PG1 <sup>(3)</sup>	-		capacitor	-	-		capacitor	G9		capacitor	57		capacitor
	G3_IO1	PB0 <sup>(1)</sup>	26		2	35	J6		2	M5		4	46		4
	G3_IO2	PB1	27		channels	36	K6	1	channels	М6		channels	47	1	channels
Group 3	G3_IO3	PB2	28	3	with 1	37	M6	3	with 1	L6	5	with 1	48	5	with 1
	G3_IO4	PF11	-		sampling	-	-		sampling	K6		sampling	49		sampling
	G3_IO5	PF12	-		capacitor	-	-	1	capacitor	J7		capacitor	50	1	capacitor





Table 37. Available touch sensing channels for STM32L1xx 512K (continued)

S	Subfamily			710 071 AV					132L1xx 51		<u> </u>				
F	Packages			LQFP64			LQFP100	/ WLCSP1	04		UFBGA1	32		LQFP14	4
Pa	rt numbers	6	,	STM32L151 STM32L152 STM32L162	2RE		STM3	2L151VE 2L152VE 2L162VE			STM32L15 STM32L15 STM32L16	2QE	;	STM32L15 STM32L15 STM32L16	2ZE
Analog I/O group	Gx_IOy	GPIO	LQFP pin	Number of available pins	Usage	LQFP Pin	WLCSP ball	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G4_IO1	PA8	41		2	67	F3		2	D11		2	100		2
Group 4	G4_IO2	PA9	42	3	channels with	68	F1	3	channels with	D10	3	channels with	101	3	channels with
Gloup 4	G4_IO3	PA10	43	3	1 sampling capacitor	69	F2	3	1 sampling capacitor	C12	3	1 sampling capacitor	102	3	1 sampling capacitor
	G5_IO1	PA13	46		. 2	72	E3		2	A11		2	105		2
Crown F	G5_IO2	PA14	49		channels with	76	D3		channels with	A10	3	channels with	109	_	channels with
Group 5	G5_IO3	PA15	50	3	1 sampling capacitor	77	B1	3	1 sampling capacitor	A9	3	1 sampling capacitor	110	3	1 sampling capacitor
	G6_IO1	PB4	56		. 3	90	A5		. 3	A7		. 3	134		. 3
Croup 6	G6_IO2	PB5	57		channels with	91	A6	4	channels with	C5	4	channels with	135	4	channels with
Group 6	G6_IO3	PB6	58	4	1 sampling	92	C5	4	1 sampling	B5	4	1 sampling	136	4	1 sampling
	G6_IO4	PB7	59		capacitor	93	C7		capacitor	B4		capacitor	137		capacitor

Table 37. Available touch sensing channels for STM32L1xx 512K (continued)

S	Subfamily						<u>-</u>	STN	//32L1xx 51	I2K	-	-			
F	Packages			LQFP64			LQFP100	/ WLCSP1	04		UFBGA1	32		LQFP14	4
Pa	rt numbers	6	;	STM32L151 STM32L152 STM32L162	2RE		STM3	2L151VE 2L152VE 2L162VE			STM32L15 STM32L15 STM32L16	2QE	;	STM32L15 STM32L15 STM32L16	2ZE
Analog I/O group	Gx_IOy	GPIO	LQFP pin	Number of available pins	Usage	LQFP Pin	WLCSP ball	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G7_IO1	PB12	33			51	J4			L12			73		
	G7_IO2	PB13	34		3	52	J3		3	K12		4	74		4
	G7_IO3	PB14	35		channels	53	L1		channels	K11		channels	75		channels
Group 7	G7_IO4	PB15	36	4	with 1	54	K2	4	with 1	K10	5 <sup>(2)</sup>	with 1	76	5 <sup>(2)</sup>	with 1
	G7_IO5	PG2 <sup>(3)</sup>	-		sampling capacitor	-	-		sampling capacitor	G10		sampling capacitor	87		sampling capacitor
	G7_IO6	PG3 <sup>(3)</sup>	ı		capacitoi	-	ı		Capacitor	F9		capacitoi	88		Сарасног
	G7_IO7	PG4 <sup>(3)</sup>	1			-	1			F10			89		
	G8_IO1	PC0	8		3	15	F6		3	H1		3	26		3
Group 8	G8_IO2	PC1	9	4	channels with	16	H9	4	channels with	J2	4	channels with	27	4	channels with
Group 6	G8_IO3	PC2	10	4	1 sampling	17	G9	4	1 sampling	J3	4	1 sampling	28	4	1 sampling
	G8_IO4	PC3	11		capacitor	18	G8		capacitor	K2		capacitor	29		capacitor
	G9_IO1	PC4	24		1	33	L7		1	K5		3	44		3
Croup 0	G9_IO2	PC5	25	2	channel with	34	M7	]	channel with	L5	4	channels with	45	4	channels with
Group 9	G9_IO3	PF13	ı	2	1 sampling	-	-	2	1 campling	K7	4	1 sampling	53	4	1 sampling
	G9_IO4	PF14	-		capacitor	-	-		sampling capacitor	J8		sampling capacitor	54		capacitor



18

Table 37. Available touch sensing channels for *STM32L1xx 512K* (continued)

S	Subfamily							STM	/132L1xx 51	2K					
F	Packages			LQFP64			LQFP100	/ WLCSP1	04		UFBGA1	32		LQFP14	4
Pa	rt numbers	6		STM32L151 STM32L152 STM32L162	2RE		STM3	2L151VE 2L152VE 2L162VE			STM32L15 STM32L15 STM32L16	2QE	;	STM32L15 <sup>2</sup> STM32L15 <sup>2</sup> STM32L16 <sup>2</sup>	2ZE
Analog I/O group	Gx_IOy	GPIO	LQFP pin	Number of available pins	Usage	LQFP Pin	WLCSP ball	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G10_IO1	PC6	37		3	63	H1		3	E12		3	96		3
C 10	G10_IO2	PC7	38		channels with	64	G1		channels with	E11		channels with	97	4	channels with
Group 10	G10_IO3	PC8	39	4	1 sampling	65	G2	4	1 sampling	E10	4	1 sampling	98	4	1 sampling
	G10_IO4	PC9	40		capacitor	66	F4		capacitor	D12		capacitor	99		capacitor
	G11_IO1	PF6	-			1	-			G3		3	18		4
	G11_IO2	PF7	-		Cannot be used	-	-		Cannot be used	G4		channels	19		channels
Group 11	G11_IO3	PF8	-	0	for	-	-	0	for	H4	4	with 1	20	5	with 1
	G11_IO4	PF9	-		touch sensing	-	-		touch sensing	J6		sampling	21		sampling
	G11_IO5	PF10				-	-					capacitor	22		capacitor
	Maximum number of channels			channels w				nels with 10 g capacitors			S channels was		_	channels w	

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.

<sup>2.</sup> Not all the pins are available simultaneously on this group.

<sup>3.</sup> This GPIO can only be configured as sampling capacitor I/O when using HW acquisition mode and as channel I/O when using SW acquisition mode.

Table 38. Available touch sensing channels for STM32L1xx 384K

S	Subfamily							STI	//32L1xx 3	84K					
F	Packages			LQFP64	/ WLCSP6	4		LQFP10	0		UFBGA1	32		LQFP14	4
Pa	rt numbers	6		STM3	32L151RD 32L152RD 32L162RD		;	STM32L15 <sup>2</sup> STM32L152 STM32L162	2VD		STM32L15 STM32L15 STM32L16	2QD	;	STM32L15 STM32L15 STM32L16	2ZD
Analog I/O group	Gx_IOy	GPIO	LQFP pin	WLCSP ball	Number of available pins	Usage	LQFP Pin	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G1_IO1	PA0	14	F6		3	23		3	L2		3	34		3
	G1_IO2	PA1	15	E6		channels with	24		channels with	M2		channels with	35		channels with
Group 1	G1_IO3	PA2	16	H8	4	1	25	4	1	K3	4	1	36	4	1
	G1_IO4	PA3 <sup>(1)</sup>	17	G7		sampling capacitor	26		sampling capacitor	L3		sampling capacitor	37		sampling capacitor
	G2_IO1	PA6	22	G5		1	31		1	L4		3	42		3
	G2_IO2	PA7	23	G4		channel	32		channel	J5		channels	43		channels
Group 2	G2_IO3	PF15	-	-	2	with 1	-	2	with 1	J9	4 <sup>(2)</sup>	with 1	55	4 <sup>(2)</sup>	with 1
	G2_IO4	PG0 <sup>(3)</sup>	-	-		sampling	-		sampling	Н9		sampling	56		sampling
	G2_IO5	PG1 <sup>(3)</sup>	-	-		capacitor	-		capacitor	G9		capacitor	57		capacitor
	G3_IO1	PB0 <sup>(1)</sup>	26	H4			35		2	M5		4	46		4
	G3_IO2	PB1	27	F4		channels with 1 sampling	36		channels	M6		channels	47		channels
Group 3	G3_IO3	PB2	28	НЗ	3		37	3	with 1	L6	5	with 1	48	5	with 1
	G3_IO4	PF11	-	-			-		sampling	K6		sampling	49		sampling
	G3_IO5	PF12	-	-		capacitor	-	1	capacitor	J7	1	capacitor	50		capacitor





Table 38. Available touch sensing channels for STM32L1xx 384K (continued)

S	Subfamily							STI	W32L1xx 3	84K					
F	Packages			LQFP64	/ WLCSP6	64		LQFP10	0		UFBGA1	32		LQFP14	4
Pa	rt numbers	6		STM3	32L151RD 32L152RD 32L162RD		,	STM32L15 STM32L15 STM32L16	2VD		STM32L15 STM32L15 STM32L16	2QD		STM32L15 STM32L15 STM32L16	2ZD
Analog I/O group	Gx_IOy	GPIO	LQFP pin	WLCSP ball	Number of available pins	Usage	LQFP Pin	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G4_IO1	PA8	41	E4		. 2	67		2 .	D11		2	100		2 .
Crave 4	G4_IO2	PA9	42	D2	3	channels with	68	3	channels with	D10	3	channels with	101	3	channels with
Group 4	G4_IO3	PA10	43	D3	3	1 sampling capacitor	69	3	1 sampling capacitor	C12	3	1 sampling capacitor	102	3	1 sampling capacitor
	G5_IO1	PA13	46	D4		2	72		2	A11		2	105		2
	G5_IO2	PA14	49	B2		channels with	76		channels with	A10		channels with	109		channels with
Group 5	G5_IO3	PA15	50	СЗ	3	1 sampling capacitor	77	3	1 sampling capacitor	A9	3	1 sampling capacitor	110	3	1 sampling capacitor
	G6_IO1	PB4	56	B4		3	90		3	A7		3	134		3
	G6_IO2	PB5	57	A5		channels with	91	] ,	channels with	C5	]	channels with	135	] ,	channels with
Group 6	G6_IO3	PB6	58	B5	4	1	92	4	1	B5	4	1	136	4	1
	G6_IO4	PB7	59	C5		sampling capacitor	93		sampling capacitor	B4		sampling capacitor	137		sampling capacitor

Table 38. Available touch sensing channels for STM32L1xx 384K (continued)

S	ubfamily							STI	M32L1xx 3	84K	-	<u> </u>			
F	Packages			LQFP64	/ WLCSP6	64		LQFP10	0		UFBGA1	32		LQFP14	4
Pa	rt numbers	6		STM3	32L151RD 32L152RD 32L162RD		;	STM32L15 STM32L15 STM32L16	2VD		STM32L15 STM32L15 STM32L16	2QD		STM32L15 STM32L15 STM32L16	2ZD
Analog I/O group	Gx_IOy	GPIO	LQFP pin	WLCSP ball	Number of available pins	Usage	LQFP Pin	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G7_IO1	PB12	33	G2			51			L12			73		
	G7_IO2	PB13	34	G1		3	52		3	K12		4	74		4
	G7_IO3	PB14	35	F2		channels	53		channels	K11		channels	75		channels
Group 7	G7_IO4	PB15	36	F1	4	with 1	54	4	with 1	K10	5 <sup>(2)</sup>	with 1	76	5 <sup>(2)</sup>	with 1
	G7_IO5	PG2 <sup>(3)</sup>	-	-		sampling	-		sampling	G10		sampling	87		sampling
	G7_IO6	PG3 <sup>(3)</sup>	-	-		capacitor	-		capacitor	F9		capacitor	88		capacitor
	G7_IO7	PG4 <sup>(3)</sup>	-	-			-			F10			89		
	G8_IO1	PC0	8	E8		3	15		3	H1		3	26		3
	G8_IO2	PC1	9	F8		channels with	16		channels with	J2		channels with	27		channels with
Group 8	G8_IO3	PC2	10	D6	4	1	17	4	1	J3	4	1	28	4	1
	G8_IO4	PC3 <sup>(1)</sup>	11	F7		1 sampling capacitor	18		sampling capacitor	K2		sampling capacitor	29		sampling capacitor
	G9_IO1	PC4	24	H6		1	33		1	K5		3	44		3
	G9_IO2	PC5	25	H5	5 with	channel with	34		channel with	L5	] .	channels with	45	] .	channels with
Group 0	G9_IO3	PF13	-	-	2	1	-	2	1	K7	4	1	53	4	1
	G9_IO4	PF14	-	-		sampling capacitor	-		sampling capacitor	J8		sampling capacitor	54		sampling capacitor





Table 38. Available touch sensing channels for STM32L1xx 384K (continued)

S	Subfamily				anable to				W32L1xx 3		(	,			
F	Packages			LQFP64	/ WLCSP6	64		LQFP10	0		UFBGA1	32		LQFP14	4
Pa	rt numbers	6		STM3	32L151RD 32L152RD 32L162RD			STM32L15 STM32L15 STM32L16	2VD		STM32L15 STM32L15 STM32L16	2QD	;	STM32L15 STM32L15 STM32L16	2ZD
Analog I/O group	Gx_IOy	GPIO	LQFP pin	WLCSP ball	Number of available pins	Usage	LQFP Pin	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage
	G10_IO1	PC6	37	E1		. 3	63		. 3	E12		. 3	96		3 .
0	G10_IO2	PC7	38	E2		channels with	64		channels with	E11		channels with	97	]	channels with
Group 10	G10_IO3	PC8	39	E3	4	1	65	4	1	E10	4	1	98	4	1
	G10_IO4	PC9	40	D1		sampling capacitor	66		sampling capacitor	D12		sampling capacitor	99		sampling capacitor
	G11_IO1	PF6	-	-			-			G3		3	18		4
	G11_IO2	PF7	-	-		Cannot be used	-		Cannot be used	G4		channels	19		channels
Group 11	G11_IO3	PF8	-	-	0	for	-	0	for	H4	4	with 1	20	5	with 1
	G11_IO4	PF9	-	-	touch sensing	-		touch sensing	J6		sampling	21	1	sampling	
	G11_IO5 PF10			-			-			-		capacitor	22	1	capacitor
	Maximum number of channels				nels with 10	-		channels w			channels was			channels v	

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.

<sup>2.</sup> Not all the pins are available simultaneously on this group.

<sup>3.</sup> This GPIO can only be configured as sampling capacitor I/O when using HW acquisition mode and as channel I/O when using SW acquisition mode.

Table 39. Available touch sensing channels for STM32L1xx 256K (table 1/2)

	Subfamily						STM32	L1xx 256K				
	Packages			LQFP48 c	or UFQFPN48		WLCS	P63		LQF	P64 / WLC	SP64
P	art number	rs		STM3	2L152CC		STM32L1	151UC		S <sup>-</sup>	TM32L151F TM32L152F TM32L162F	RC
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	WLCSP ball	Number of available pins	Usage	LQFP pin	WLCSP ball	Number of available pins	Usage
	G1_IO1	PA0	10			E4			14	F6		
Group 1	G1_IO2	PA1	11	4	3 channels with 1 sampling	G5	4	3 channels with 1 sampling	15	E6	4	3 channels with 1 sampling
Group i	G1_IO3	PA2	12	4	capacitor	H6	4	capacitor	16	H8	4	capacitor
	G1_IO4	PA3 <sup>(1)</sup>	13			J7			17	G7		
	G2_IO1	PA6	16			G4			22	G5		
	G2_IO2	PA7	17		1 channel with	J5		1 channel with	23	G4		1 channel with
Group 2	G2_IO3	PF15	-	2	1 sampling	-	2	1 sampling	-	-	2	1 sampling
	G2_IO4	PG0 <sup>(2)</sup>	-		capacitor	-		capacitor	-	-		capacitor
	G2_IO5	PG1 <sup>(2)</sup>	-			-			-	-		
	G3_IO1	PB0 <sup>(1)</sup>	18			J3			26	H4		
	G3_IO2	PB1	19		2 channels with	Н3		2 channels with	27	F4		2 channels with
Group 3	G3_IO3	PB2	20	3	1 sampling	G3	3	1 sampling	28	Н3	3	1 sampling
	G3_IO4	PF11	-		capacitor 2 channels with	-		capacitor	-	-		capacitor
	G3_IO5	PF12	-			-			-	-		
	G4_IO1	PA8	29			E3		2 channels with	41	E4		2 channels with
Group 4		3	1 sampling	C1	3	1 sampling	42	D2	3	1 sampling		
· -	G4_IO3	PA10	31		capacitor	D2		capacitor	43	D3		capacitor



Table 39. Available touch sensing channels for STM32L1xx 256K (table 1/2) (continued)

	Subfamily						STM32	L1xx 256K				
	Packages			LQFP48 o	or UFQFPN48		WLCS	P63		LQF	P64 / WLC	SP64
P	art number	s		STM3	2L152CC		STM32L1	51UC		S	ГМ32L151F ГМ32L152F ГМ32L162F	RC
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	WLCSP ball	Number of available pins	Usage	LQFP pin	WLCSP ball	Number of available pins	Usage
	G5_IO1	PA13	34		2 channels with	C2		2 channels with	46	D4		2 channels with
Group 5	G5_IO2	PA14	37	3	1 sampling	C3	3	1 sampling	49	B2	3	1 sampling
	G5_IO3	PA15	38	1	capacitor	A2		capacitor	50	C3		capacitor
	G6_IO1	PB4	40			D4			56	B4		
Group 6	G6_IO2	PB5	41	4	3 channels with	A5	4	3 channels with	57	A5	4	3 channels with
Group 6	G6_IO3	PB6	42	4	1 sampling capacitor	B5	4	1 sampling capacitor	58	B5	4	1 sampling capacitor
	G6_IO4	PB7	43			C5			59	C5		
	G7_IO1	PB12	25			G2			33	G2		
	G7_IO2	PB13	26	1		G1			34	G1		
	G7_IO3	PB14	27	]	3 channels with	F3		3 channels with	35	F2		3 channels with
Group 7	G7_IO4	PB15	28	4		F2	4	1 sampling	36	F1	4	1 sampling
	G7_IO5	PG2 <sup>(2)</sup>	-	]		-		capacitor	-	-		capacitor
	G7_IO6	PG3 <sup>(2)</sup>	-	1		-			-	-		
	G7_IO7	PG4 <sup>(2)</sup>	-	1		-			-	-		

Table 39. Available touch sensing channels for STM32L1xx 256K (table 1/2) (continued)

	Subfamily		STM32L1xx 256K										
	Packages			LQFP48 o	or UFQFPN48		WLCS	P63	LQFP64 / WLCSP64				
P	art number	s		STM3	2L152CC		STM32L1	151UC	STM32L151RC STM32L152RC STM32L162RC				
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	WLCSP ball	Number of available pins	Usage	LQFP pin	WLCSP ball	Number of available pins	Usage	
	G8_IO1	PC0	-			E6			8	E8		3 channels with 1 sampling capacitor	
Group 8	G8_IO2	PC1	-	0		E5	4	3 channels with 1 sampling capacitor	9	F8	4		
Group 6	G8_IO3	PC2	-		Cannot be used for touch sensing	G7	4		10	D6			
	G8_IO4	PC3	-			G6			11	F7			
	G9_IO1	PC4	-	0		F4	2	1 channel with 1 sampling capacitor	24	H6		1 channel with 1 sampling	
Group 9	G9_IO2	PC5	-			J4			25	H5	2		
Group 9	G9_IO3	PF13	-			-			-	-		capacitor	
	G9_IO4	PF14	-			-			-	-			
	G10_IO1	PC6	-	0		F1		3 channels with 1 sampling capacitor	37	E1		3 channels with 1 sampling capacitor	
Group 10	G10_IO2	PC7	-			E1	4		38	E2	4		
Group 10	G10_IO3	PC8	-			D1	4		39	E3	4		
	G10_IO4	PC9	-			E2			40	D1			
	G11_IO1	PF6	-	0		-			-	-			
	G11_IO2	PF7	-			-		Cannot be used	-	-		Cannot be used	
Group11	G11_IO3	PF8	-			-	0	for	-	-	0	for	
	G11_IO4	PF9	-			-		touch sensing	-	-		touch sensing	
	G11_IO5	PF10	-			-			-	-			



Table 39. Available touch sensing channels for STM32L1xx 256K (table 1/2) (continued)

	Subfamily		STM32L1xx 256K										
	Packages			LQFP48 c	or UFQFPN48		WLCSI	P63	LQFP64 / WLCSP64				
P	art number	's	STM32L152CC				STM32L1	51UC	STM32L151RC STM32L152RC STM32L162RC				
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	WLCSP ball	Number of available pins	Usage	LQFP pin	WLCSP ball	Number of available pins	Usage	
Maximum	Maximum number of channels			16 channels with 7 sampling capacitors			23 channels with 10 sampling capacitors			23 channels with 10 sampling capacitors			

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.

<sup>2.</sup> This GPIO can only be configured as sampling capacitor I/O when using HW acquisition mode and as channel I/O when using SW acquisition mode.

Table 40. Available touch sensing channels for STM32L1xx 256K (table 2/2)

S					•	;	STM32L1xx	256K					
F	Packages LQFP100 / UFBGA100							UFBG	A132	LQFP144			
Pa	rt number	s			STM32L151 STM32L152 STM32L162	VC		STM32L STM32L STM32L	_152QC	STM32L151ZC STM32L152ZC STM32L162ZC			
Analog I/O group	Gx_lOy	GPIO	LQFP pin	BGA ball	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage	
	G1_IO1	PA0	23	L2			L2			34		3 channels with 1 sampling capacitor	
Group 1	G1_IO2	PA1	24	M2	4	3 channels with 1 sampling capacitor	M2	4	3 channels with 1 sampling capacitor	35	4		
Group	G1_IO3	PA2	25	K3			K3			36			
	G1_IO4	PA3 <sup>(1)</sup>	26	L3			L3			37			
	G2_IO1	PA6	31	L4	2	1 channel with 1 sampling capacitor	L4	4 <sup>(2)</sup>	3 channels with 1 sampling capacitor	42	4 <sup>(2)</sup>	3 channels with 1 sampling capacitor	
	G2_IO2	PA7	32	M4			J5			43			
Group 2	G2_IO3	PF15	-	-			J9			55			
	G2_IO4	PG0 <sup>(3)</sup>	-	-			Н9			56			
	G2_IO5	PG1 <sup>(3)</sup>	-	-			G9			57			
	G3_IO1	PB0 <sup>(1)</sup>	35	M5			M5			46			
	G3_IO2	PB1	36	M6		2 channels with	M6		4 channels with	47		4 channels with	
Group 3	G3_IO3	PB2	37	L6	3	1 sampling	L6	5	1 sampling	48	5	1 sampling	
	G3_IO4	PF11	-	-		capacitor	K6		capacitor	49		capacitor	
	G3_IO5	PF12	-	-			J7			50	1		
	G4_IO1	PA8	67	D11		2 channels with	D11		2 channels with	100		2 channels with	
Group 4	G4_IO2	PA9	68	D10	3	1 sampling	D10	3	1 sampling	101	3	1 sampling	
	G4_IO3	PA10	69	C12		capacitor	C12		capacitor	102	-	capacitor	

Table 40. Available touch sensing channels for STM32L1xx 256K (table 2/2) (continued)

Subfamily Packages			STM32L1xx 256K										
			LQFP100 / UFBGA100					UFBG	6A132	LQFP144			
Pa	Part numbers				STM32L151 STM32L152 STM32L162	VC		STM32L STM32L STM32L	_152QC	STM32L151ZC STM32L152ZC STM32L162ZC			
Analog I/O group	Gx_lOy	GPIO	LQFP pin	BGA ball	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage	
	G5_IO1	PA13	72	A11		2 channels with	A11		2 channels with 1 sampling capacitor	105		2 channels with 1 sampling capacitor	
Group 5	G5_IO2	PA14	76	A10	3	1 sampling capacitor	A10	3		109	3		
	G5_IO3	PA15	77	A9			A9			110			
	G6_IO1	PB4	90	A7	4	3 channels with 1 sampling capacitor	A7	4	3 channels with 1 sampling capacitor	134	4	3 channels with 1 sampling	
Group 6	G6_IO2	PB5	91	C5			C5			135			
Group 6	G6_IO3	PB6	92	B5			B5			136		capacitor	
	G6_IO4	PB7	93	B4			B4			137			
	G7_IO1	PB12	51	L12			L12		4 channels with 1 sampling	73	_		
	G7_IO2	PB13	52	K12			K12			74			
	G7_IO3	PB14	53	K11		3 channels with	K11			75		4 channels with	
Group 7	G7_IO4	PB15	54	K10	4	1 sampling	K10	5 <sup>(2)</sup>		76	5 <sup>(2)</sup>	1 sampling	
	G7_IO5	PG2 <sup>(3)</sup>	-	-		capacitor	G10		capacitor	87		capacitor	
	G7_IO6	PG3 <sup>(3)</sup>	-	-			F9			88			
	G7_IO7	PG4 <sup>(3)</sup>	-	-			F10	1		89			
	G8_IO1	PC0	15	H1			H1			26			
C 0	G8_IO2	PC1	16	J2	4	3 channels with	J2		3 channels with 1 sampling capacitor	27	- - 4 -	3 channels with 1 sampling capacitor	
Group 8	G8_IO3	PC2	17	J3	4	1 sampling capacitor	J3	4		28			
	G8_IO4	PC3	18	K2			K2 <sup>(3)</sup>			29 <sup>(3)</sup>			

Table 40. Available touch sensing channels for STM32L1xx 256K (table 2/2) (continued)

					;	STM32L1xx	256K							
ı	Packages			LQF	P100 / UFB	GA100		UFBG	A132		LQFP144			
Pa	rt number	s		;	STM32L151 STM32L152 STM32L162	VC	STM32L151QC STM32L152QC STM32L162QC				STM32L151ZC STM32L152ZC STM32L162ZC			
Analog I/O group	Gx_IOy	GPIO	LQFP pin	BGA ball	Number of available pins	Usage	BGA ball	Number of available pins	Usage	LQFP pin	Number of available pins	Usage		
	G9_IO1	PC4	33	K5			K5		3 channels with 1 sampling capacitor	44	4	3 channels with 1 sampling capacitor		
Group 9	G9_IO2	PC5	34	L5	2	1 channel with 1 sampling capacitor	L5	4		45				
Gloup 9	G9_IO3	PF13	-	-			K7			53				
	G9_IO4	PF14	-	-			J8			54				
	G10_IO1	PC6	63	E12	4	3 channels with 1 sampling capacitor	E12	4	3 channels with 1 sampling capacitor	96	STM32L STM32L STM32L Number of available pins  4  4  5  34 channel	3 channels with 1 sampling capacitor		
Group 10	G10_IO2	PC7	64	E11			E11			97				
Group 10	G10_IO3	PC8	65	E10	4		E10			98				
	G10_IO4	PC9	66	D12			D12			99				
	G11_IO1	PF6	-	-			G3			18				
	G11_IO2	PF7	-	-		Cannot be used	G4		3 channels with	19		4 channels with		
Group11	G11_IO3	PF8	-	-	0	for	H4	4	1 sampling	20	5	1 sampling		
	G11_IO4	PF9	-	-		touch sensing	J6		capacitor	21		capacitor		
	G11_IO5	PF10	-	-			-			22				
Maximum	number of	channels			channels wi mpling capa			33 channe sampling o			44 45 4 3 channels 1 samplir capacito 54 96 97 4 3 channels 1 samplir capacito 98 18 19 20 5 4 channels 1 samplir capacito 1 samplir capacito			

<sup>1.</sup> This GPIO offers a reduced touch sensing sensitivity. It is thus recommended to use it as sampling capacitor I/O.

<sup>3.</sup> This GPIO can only be configured as sampling capacitor I/O when using HW acquisition mode and as channel I/O when using SW acquisition mode.



<sup>2.</sup> Not all the pins are available simultaneously on this group.

STMTouch driver

Table 41. Available touch sensing channels for STM32L15x 32K to 128K

Subfamily			STM32L15x 32K to 128K										
Р	Packages		LQFP48 / VFQFPN48			LQFP64 / BGA64			LQFP100 / BGA100				
Part numbers		STM32L151C6 STM32L151C8 STM32L151CB STM32L152C6 STM32L152C8 STM32L152CB			STM32L151R6 STM32L151R8 STM32L151RB STM32L152R6 STM32L152R8 STM32L152RB			STM32L151V8 STM32L151VB STM32L152V8 STM32L152VB					
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	LQFP pin	BGA ball	Number of available pins	Usage	LQFP pin	BGA ball	Number of available pins	Usage
	G1_IO1	PA0	10	4	3 channels with 1 sampling capacitor	14	G2	4	3 channels with 1 sampling capacitor	23	L2	- 4	3 channels with 1 sampling capacitor
Group 1	G1_IO2	PA1	11			15	H2			24	M2		
Gloup I	G1_IO3	PA2	12	4		16	F3			25	K3	4	
	G1_IO4	PA3	13			17	G3			26	L3		
00	G2_IO1	PA6	16		1 channel with	22	G4		1 channel with	31	L4		1 channel with 1 sampling capacitor
Group 2	G2_IO2	PA7	17	2	1 sampling capacitor	23	H4	2	1 sampling capacitor	32	M4	2	
	G3_IO1	PB0	18		1 channel with	26	F5		1 channel with	35	M5		1 channel with
Group 3	G3_IO2	PB1	19	2	1 sampling capacitor	27	G5	2	1 sampling capacitor	36	M6	2	1 sampling capacitor
	G4_IO1	PA8	29		2 channels with	41	D7		2 channels with	67	D11		2 channels with
Group 4	G4_IO2	PA9	30	3	1 sampling	42	C7	3	1 sampling	68	D10	3	1 sampling
	G4_IO3	PA10	31		capacitor	43	C6		capacitor	69	C12	1	capacitor
	G5_IO1	PA13	34		2 channels with	46	A8		2 channels with	72	A11	3	2 channels with 1 sampling capacitor
Group 5	G5_IO2	PA14	37	3	1 sampling	49	A7	3	1 sampling	76	A10		
	G5_IO3	PA15	38		capacitor	50	A6	1	capacitor	77	A9		



Table 41. Available touch sensing channels for STM32L15x 32K to 128K (continued)

S	ubfamily		STM32L15x 32K to 128K											
Р	ackages			LQFP48	VFQFPN48		LQFP64 / BGA64			LQFP100 / BGA100				
Part numbers				STM32L151C6 STM32L151C8 STM32L151CB STM32L152C6 STM32L152C8 STM32L152CB			STM32L151R6 STM32L151R8 STM32L151RB STM32L152R6 STM32L152R8 STM32L152RB				STM32L151V8 STM32L151VB STM32L152V8 STM32L152VB			
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	LQFP pin	BGA ball	Number of available pins	Usage	LQFP pin	BGA ball	Number of available pins	Usage	
0 0	G6_IO1	PB4	40		1 channel with	56	A4		1 channel with 1 sampling capacitor	90	A7		1 channel with	
Group 6	G6_IO2	PB5	41	2	1 sampling capacitor	57	C4	2		91	C5	2	1 sampling capacitor	
	G7_IO1	PB12	25			33	H8		3 channels with 1 sampling capacitor	51	51 L12	4		
Group 7	G7_IO2	PB13	26	4	3 channels with 1 sampling capacitor	34	G8	4		52	K12		3 channels with	
Gloup 7	G7_IO3	PB14	27	]		35	F8	<del>1</del>		53	K11		1 sampling capacitor	
	G7_IO4	PB15	28			36	F7			54	K10			



Table 41. Available touch sensing channels for STM32L15x 32K to 128K (continued)

Subfamily				STM32L15x 32K to 128K									
Р	Packages			LQFP48	VFQFPN48		LQFP64 / BGA64			LQFP100 / BGA100			
Part numbers		STM32L151C6 STM32L151C8 STM32L151CB STM32L152C6 STM32L152C8 STM32L152CB			STM32L151R6 STM32L151R8 STM32L151RB STM32L152R6 STM32L152R8 STM32L152RB			STM32L151V8 STM32L151VB STM32L152V8 STM32L152VB					
Analog I/O group	Gx_IOy	GPIO	Pin	Number of available pins	Usage	LQFP pin	BGA ball	Number of available pins	Usage	LQFP pin	BGA ball	Number of available pins	Usage
	G8_IO1	PC0	-	- 0		8	E3	4/3	3/2 channels with 1 sampling	15	H1	4	3 channels with 1 sampling capacitor
Group 8	G8_IO2	PC1	-			9	E2			16	J2		
Gloup o	G8_IO3	PC2	-	O O		10	F2		capacitor	17	J3		
	G8_IO4	PC3	-			11	-			18	K2		
0	G9_IO1	PC4	-	0	Cannot be used	24	H5	_	1 channel with	33	K5		1 channel with
Group 9	G9_IO2	PC5	-	0	for touch sensing	25	H6	2	1 sampling capacitor	34	L5	2	1 sampling capacitor
	G10_IO1	PC6	-			37	F6			63	E12	4	3 channels with 1 sampling capacitor
Group 10	G10_IO2	PC7	-	0		38	E7	1	3 channels with	64	E11		
	G10_IO3	PC8	-		39	39	E8	4	1 sampling capacitor	65	E10		
	G10_IO4	PC9	-			40	D8			66	D12		
Maximum number of channels				nels with 7 g capacitors		20/19 channels with 10 sampling capacitors			20 channels with 10 sampling capacitors				



STMTouch driver UM1606

# 2.23.7 Hardware implementation example

Figure 21 shows an example of hardware implementation on STM32L1xx devices.


## Recommendations to increase the noise immunity on the PCB

To ensure a correct operation in noisy environment, the floating nets must be avoided (tracks, copper elements, conductive frames, etc...).

As a consequence:

- All unused touch controller I/Os must be either configured to output push-pull low or externally tied to GND.
- The parameter TSLPRM\_IODEF should also be configured to the output push-pull low state
- We recommend to drive the sampling capacitor common node using a standard I/O of the touch controller configured in output push-pull low mode.
- It may also be required to add a capacitor-input filter (pi filter) on each channel line.



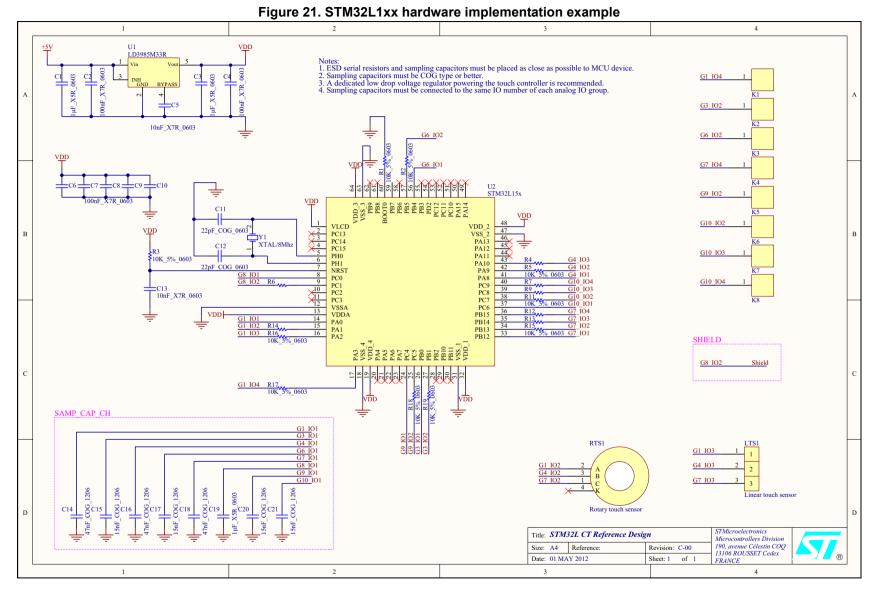



# 3 Getting started

# 3.1 Create your application

Start with an example present in the STMTouch library of the device you intend to use. Take an example that is close in term of number of channels/sensors with your target application. Copy and paste the example in the same parent folder and rename it according your target application. Then modify the files as described below.

The following sections describe the necessary steps to create a new application project.

# 3.1.1 Toolchain compiler preprocessor section

The device that you intend to use must be written in the **toolchain compiler preprocessor section** of your project.

These defines are the same as those for the standard peripherals library. Please see the stm<xxx>.h map file to have the list of the devices definition.

Note:

The hardware acquisition mode is selected per default for the STM8L15x Low-density devices, and STM32L1xx (excepted Medium-density) devices. If you want to use the software acquisition mode you must add the following constant in the toolchain compiler preprocessor:

- TSLPRM\_STM8L1XX\_SW\_ACQ
- TSLPRM STM32L1XX SW ACQ

# 3.1.2 The tsl\_conf file

The **tsl\_conf\_<mcu>.h** file contains all the STMTouch driver parameters. The following edits must be done:

- 1. Change the number of channels, banks, sensors according your application.
- 2. Change the common parameters: thresholds, debounce, ECS, DTO, etc...
- 3. Change the parameters specific to the device.

#### 3.1.3 The main file

The **main.c** and **main.h** files contain the application code itself (LEDs and LCD management, etc...) and the call to the STMTouch driver initialization and action functions.

# 3.1.4 The tsl\_user file

The **tsl\_user.c** and **tsl\_user.h** files contain the STMTouch driver configuration (definition of channels, banks, zones, sensors, etc...) and the STMTouch driver initialization (**TSL\_user\_Init**) and action (**TSL\_user\_Action**) functions.

Create the channels variables using the structures (mandatory):

- TSL\_ChannelSrc\_T
- TSL\_ChannelDest\_T
- TSL\_ChannelData\_T

Create the Banks variables using the structures (mandatory):

TSL\_Bank\_T

Create the Zone variables using the structure (optional):

TSL\_Zone\_T

Create the touchkeys variables using the structures (optional):

- TSL\_TouchKeyData\_T
- TSL\_TouchKeyParam\_T
- TSL State T
- TSL\_TouchKeyMethods\_T
- TSL\_TouchKeyB\_T
- TSL\_TouchKey\_T

Create the Linear and Rotary touch sensors variables using the structures (optional):

- TSL LinRotData T
- TSL\_LinRotParam\_T
- TSL\_State\_T
- TSL LinRotMethods T
- TSL\_LinRotB\_T
- TSL\_LinRot\_T

Create the generic sensors (objects) variables using the structures (mandatory):

- TSL\_Object\_T
- TSL\_ObjectGroup\_T

The **TSL\_user\_Init()** function contains the initialization of the STMTouch driver. Modify this function to take into account your bank array name and object groups names.

The **TSL\_user\_Action()** function contains the main state machine. Modify it also if you have several object groups to process or to change the ECS period, etc...

#### **Debug with STM Studio** 3.2

The STM Studio software is very useful to observe variables of the STMTouch driver. Thanks to its powerful features you will be able to better understand how the sensors behave and to find the better parameters to apply.

This section does not intend to explain how to use this tool, but give some advice to better understand and debug your application.

This is a non-exhaustive list of the STMTouch driver variables to observe:

- The channels measure, reference and delta. These variables are present inside the **TSL\_ChannelData\_T** structure. This is useful to adjust the **thresholds** parameters.
- The sensors state present in the TSL TouchKeyData T and TSL LinRotData T structures. This is useful to adjust the **Debounce**, **ECS** and **DTO** parameters.
- The linear and rotary touch sensors **position** in the **TSL\_LinRotData\_T** structure.

The following snapshot is an example of data visualization on STM Studio:

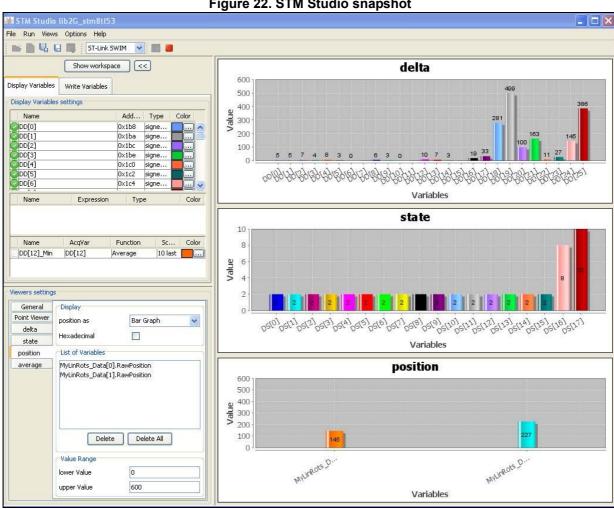


Figure 22. STM Studio snapshot

# 3.3 Low-power strategy

The following figure shows the acquisition sequencing for a single bank acquisition in low-power mode.

To reduce the power consumption, the acquisitions are sequenced with a long delay in between. During this delay, the CPU can be in low-power mode (active-halt for STM8 or STOP for STM32). This delay can be shortened or even removed between two consecutive acquisitions when the delta becomes greater than a detection threshold (proximity or touch). The long delay is restored if all the sensors return in RELEASE state.

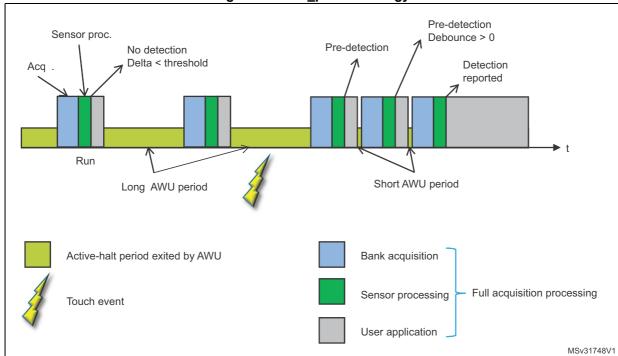


Figure 23. Low\_power strategy

This approach allows to save power consumption without increasing the response time. The maximum response time is obtained when a touch occurs during the sensor processing. It can be expressed as followed:

Max Response Time = long AWU period + (n) x short AWU period + (n+2) x full acquisition processing - bank acquisition

with n being the debounce value.

# 3.4 Main differences with previous library

This section describes the main differences between the previous touch sensing library (named **STMxxx\_TouchSensing\_Lib**) and this new STMTouch Library (named **STMxxx\_STMTouch\_Lib**).

### 3.4.1 Files

#### **Previous Library**

- Files are prefixed with "stm8\_tsl\_" or "stm32\_tsl\_" or "<mcu>\_tsl\_".
- Copy <mcu>\_tsl\_conf\_CT\_TOADAPT.h or <mcu>\_tsl\_conf\_RC\_TOADAPT.h in your project and rename it in <mcu>\_tsl\_conf.h
- Include <mcu>\_tsl\_api.h in main.h

#### STMTouch Library

- All files are prefixed with "tsl" or "tsl\_". There is no more "stm8" nor "stm32" prefix.
- Copy tsl\_conf\_<mcu>.h\_TOADAPT in your project and rename it in tsl\_conf\_<mcu>.h
- Include tsl.h in tsl user.h

# 3.4.2 Channels, banks and sensors configuration

# **Previous Library**

- Done in stm8 tsl conf.h
- · Limited number of channels, banks and sensors.
- SCKeys (= single channel keys) and MCKeys (multi-channels keys) sensors.

#### STMTouch library

- Done in the application (tsl\_user.c and tsl\_user.h).
- No limitation in the number of Cchannels, banks and sensors.
- Touchkey and LinRot sensors with extended and basic types.

# 3.4.3 Parameters configuration

#### **Previous library**

- Done in stm8\_tsl\_conf.h
- No common prefix for the parameters.
- Thresholds are on 7 bits (signed).
- No thresholds for proximity.
- Fixed calibration samples.
- Debounce counters common to all sensors and states.
- Fixed timer tick frequency.

# **STMTouch Library**

- Done in tsl\_conf\_<mcu>.h
- All parameters are prefixed with "TSLPRM\_".
- Thresholds are on 8 bits (unsigned) and multiplier coefficient can be applied on them.
- Thresholds for proximity.
- Programmable calibration samples and delay.
- Debounce counters different for each sensor and each state.
- Programmable timer tick frequency.

## 3.4.4 Usage

# **Previous Library**

- Initialization by calling TSL\_Init() function.
- Execution by calling TSL\_Action() continuously.
- Main state machine and sensors state machine are in the TS driver layer.
- ECS and DXS process are called by the TS driver layer.
- Test of the main state machine value using TSLState variable:

```
if (TSLState == TSL_IDLE_STATE) {
...
}
if ((TSLState == TSL_SCKEY_P1_ACQ_STATE) ||
(TSLState == TSL_SCKEY_P2_ACQ_STATE) ||
(TSLState == TSL_MCKEY1_ACQ_STATE) ||
(TSLState == TSL_MCKEY2_ACQ_STATE)) {
...
}
```

Test of sensor state using TSL\_GlobalSetting, sSCKeyInfo and sMCKeyInfo variables:

```
if (TSL_GlobalSetting.b.CHANGED) {
TSL_GlobalSetting.b.CHANGED = 0;
if (sSCKeyInfo[0].Setting.b.DETECTED) {...}
```

### STMTouch library

- Initialization by calling TSL\_obj\_GroupInit() and TSL\_Init() functions.
- Execution by calling TSL\_Action() continuously.
- Main state machine and sensors state machine are in the application layer and so can be changed easily.
- ECS and DXS process are called by the application layer.
- The test of the main state machine value is not needed as the main state machine is managed by the application layer.
- Test of sensor state using StateId variable:

```
if ((MyTKeys[0].p_Data->StateId == TSL_STATEID_DETECT)||
(MyTKeys[0].p_Data->StateId == TSL_STATEID_DEB_RELEASE_DETECT)) {...}
```

# 3.4.5 Variables monitoring

Many variables can be monitored in order to debug your application. The list below is not exhaustive but shows only the most important variables used in both libraries:

# **Previous library**

 The sSCKeyInfo, sMCKeyInfo and sAcqBankInfo structures contain all informations related to touchkey and linear/rotary sensors: reference, last measure, thresholds, state, position, EPCC, ...

# **STMTouch library**

• The array of **TSL\_ChannelData\_T** structure contains the reference, measure and delta values of ALL channels used by the application:

Figure 24. Debug of TSL\_ChannelData\_T structure

Expression	Value	Location	Type
■ MyChannels_Data	<array></array>	0x20000030	TSL_ChannelData_T[3]
[O] [O]	<struct></struct>	0x20000030	TSL_ChannelData_T
Flags	<struct></struct>	0x20000030	TSL_ChannelFlags_T
Ref	2414	0x20000032	uint16_t
RefRest	208	0x20000034	uint8_t
Delta	0	0x20000036	int16_t
! Meas	2414	0x20000038	uint16_t
- <b>□</b> [1]	<struct></struct>	0x2000003A	TSL_ChannelData_T
Flags	<struct></struct>	0x2000003A	TSL_ChannelFlags_T
Ref	2642	0x2000003C	uint16_t
RefRest	245	0x2000003E	uint8_t
Delta	-1	0x20000040	int16_t
Meas	2643	0x20000042	uint16_t
<u></u> [2]	<struct></struct>	0x20000044	TSL_ChannelData_T
Flags	<struct></struct>	0x20000044	TSL_ChannelFlags_T
Ref	2583	0x20000046	uint16_t
RefRest	46	0x20000048	uint8_t
Delta	1	0x2000004A	int16_t
Meas	2582	0x2000004C	uint16_t

• The array of TSL\_TouchKeyData\_T contains mainly the touchkey sensors state:

Figure 25. Debug of TSL\_TouchKeyData\_T structure

Expression	Value	Location	Type
MyTKeys_Data	<array></array>	0x20000084	TSL_TouchKeyData_T[3]
- <del>-</del> [0]	<struct></struct>	0x20000084	TSL_TouchKeyData_T
StateId	TSL_STATEID_PROX	0x20000084	enum <unnamed 90=""></unnamed>
Counter	0	0x20000085	uint8_t
Change	TSL_STATE_NOT_CHANGED	0x20000085	enum <unnamed 31=""></unnamed>
DxSLock	TSL_FALSE	0x20000085	TSL_Bool_enum_T
<u>-</u> [1]	<struct></struct>	0x20000086	TSL_TouchKeyData_T
- StateId	TSL_STATEID_DETECT	0x20000086	enum <unnamed 90=""></unnamed>
Counter	0	0x20000087	uint8_t
- Change	TSL_STATE_NOT_CHANGED	0x20000087	enum <unnamed 31=""></unnamed>
L. DxSLock	TSL_FALSE	0x20000087	TSL_Bool_enum_T
i	<struct></struct>	0x20000088	TSL_TouchKeyData_T
StateId	TSL_STATEID_PROX	0x20000088	enum <unnamed 90=""></unnamed>
- Counter	0	0x20000089	uint8_t
Change	TSL_STATE_NOT_CHANGED	0x20000089	enum <unnamed 31=""></unnamed>
DxSLock	TSL_FALSE	0x20000089	TSL_Bool_enum_T

• The array of **TSL\_LinRotData\_T** contains the linear and rotary sensors state and position:

Figure 26. Debug of TSL\_LinRotData\_T structure

Expre	ssion	Value	Location	Туре
	yLinRots_Data	<array></array>	0x20000074	TSL_LinRotData_T[1]
	[0]	<struct></struct>	0x20000074	TSL_LinRotData_T
-	StateId	TSL_STATEID_DETECT	0x20000074	enum <unnamed 99=""></unnamed>
-	RawPosition	157	0x20000075	uint8_t
	Position	78	0x20000076	uint8_t
ļ	Counter	8	0x20000077	uint8_t
	Change	TSL_STATE_NOT_CHANGED	0x20000077	enum <unnamed 31=""></unnamed>
-	PosChange	TSL_STATE_NOT_CHANGED	0x20000077	enum <unnamed 31=""></unnamed>
ļ	Counter2	3	0x20000078	uint8_t
	DxSLock	TSL_FALSE	0x20000078	TSL_Bool_enum_T
L	Direction	TSL_FALSE	0x20000078	TSL_Bool_enum_T

 The arrays of TSL\_TouchKeyParam\_T and TSL\_LinRotParam\_T contain the touchkeys, linear and rotary sensors parameters (mainly thresholds and debounce counters):

Figure 27. Debug of TSL\_TouchKeyParam\_T

Expression	Value	Location	Type
MyTKeys_Param	<array></array>	0x20000050	TSL_TouchKeyParam_T[3]
<del>-</del> [0]	<struct></struct>	0x20000050	TSL_TouchKeyParam_T
ProxInTh	10	0x20000050	uint8_t
ProxOutTh	5	0x20000051	uint8_t
- DetectInTh	80	0x20000052	uint8_t
DetectOutTh	70	0x20000053	uint8_t
- CalibTh	50	0x20000054	uint8_t
CounterDebCalib	3	0x20000055	uint8_t
CounterDebProx	3	0x20000056	uint8_t
CounterDebDetect	3	0x20000057	uint8_t
CounterDebRelease	3	0x20000058	uint8_t
CounterDebError	3	0x20000059	uint8_t
<b>±</b> [1]	<struct></struct>	0x2000005A	TSL_TouchKeyParam_T
<u></u> [2]	<struct></struct>	0x20000064	TSL_TouchKeyParam_T

Figure 28. Debug of TSL\_LinRotParam\_T structures

Expre	ssion	Value	Location	Type
Μ	yLinRots_Param	<array></array>	0x20000064	TSL_LinRotParam_T[1]
<del>-</del>	[0]	<struct></struct>	0x20000064	TSL_LinRotParam_T
	ProxInTh	15	0x20000064	uint8_t
	ProxOutTh	10	0x20000065	uint8_t
	DetectInTh	80	0x20000066	uint8_t
ļ	DetectOutTh	75	0x20000067	uint8_t
	CalibTh	50	0x20000068	uint8_t
ļ	CounterDebCalib	3	0x20000069	uint8_t
ļ	CounterDebProx	3	0x2000006A	uint8_t
	CounterDebDetect	3	0x2000006B	uint8_t
	CounterDebRelease	3	0x2000006C	uint8_t
	CounterDebError	3	0x2000006D	uint8_t
	CounterDebDirection	3	0x2000006E	uint8_t
	Resolution	7	0x2000006F	uint8_t
i	DirChangePos	10	0x20000070	uint8_t



# 3.5 Tips and tricks

### 3.5.1 Bank definition

For optimum sensitivity and position reporting, all the channels composing a linear or a rotary touch sensor must be acquired **simultaneously**. This means that all the channels must belong to the **same bank**.

Note:

The library allows to define a linear or a rotary touch sensor with channels belonging to different banks. A such configuration induces a **loss of sensitivity** and a **higher noise level**. Moreover, depending on the acquisition time, it is also possible to observe a position change when removing the finger from the sensor.

# 3.5.2 Channel assignment

It is recommended to assign GPIOs offering the same sensitivity level to all the channels composing a linear or a rotary touch sensor. Moreover, it is not recommended to use GPIOs offering a reduced sensitivity.

# 3.5.3 IO Default state parameter

For optimum acquisition noise level, it is recommended to set the TSLPRM\_TSC\_IODEF or TSLPRM\_IODEF parameter to output push-pull low.

However, if your application is using a linear or a rotary touch sensor with channels belonging to different banks, this parameter must be set to **input floating**. This will ensure optimum sensitivity.

Revision history UM1606

# 4 Revision history

Table 42. Document revision history

Date	Revision	Changes
19-Mar-2013	1	Initial release.
03-Sep-2013	2	Updated Section: Introduction. Updated Section 1.2: Naming conventions Updated Section 2.1.1: Supported devices. Updated Section 2.3: Main features. Updated Section 2.5.2: Resources. Updated Section 2.5.4: Usage example. Updated Section 2.6.2: Resources. Added Section 2.19: STM8L1xx devices. Updated Table 22: Available touch sensing channels for STM32F0xx Updated Section 3.1.1: Toolchain compiler preprocessor section. Updated Table 28: Available touch sensing channels for STM32F37x. Updated Table 35: MCU resources used on STM32L1xx with hardware acquisition. Updated Table 36: MCU resources used on STM32L1xx with software acquisition.
17-Mar-2014	3	<ul> <li>- Updated all channel tables of STM8L, STM32L and STM32F0 products.</li> <li>- Added STM32L1xx 512K channel table Table 22: Available touch sensing channels for STM32F042</li> <li>- Added STM32L1xx 512K channel table Table 37: Available touch sensing channels for STM32L1xx 512K:</li> <li>- Added Chapter 3.5: Tips and tricks</li> <li>- Updated Section 2.1.1;</li> <li>- Updated Table 22</li> <li>- Updated Section 3.1.1</li> <li>- Removed Table 42: STM8L1xx acquisition selection</li> <li>- Removed Table 43: STM32L1xx acquisition selection</li> </ul>
22-Apr-2014	4	- Added note 1 on Pa4 of <i>Table 28</i>

#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

ST PRODUCTS ARE NOT DESIGNED OR AUTHORIZED FOR USE IN: (A) SAFETY CRITICAL APPLICATIONS SUCH AS LIFE SUPPORTING, ACTIVE IMPLANTED DEVICES OR SYSTEMS WITH PRODUCT FUNCTIONAL SAFETY REQUIREMENTS; (B) AERONAUTIC APPLICATIONS; (C) AUTOMOTIVE APPLICATIONS OR ENVIRONMENTS, AND/OR (D) AEROSPACE APPLICATIONS OR ENVIRONMENTS. WHERE ST PRODUCTS ARE NOT DESIGNED FOR SUCH USE, THE PURCHASER SHALL USE PRODUCTS AT PURCHASER'S SOLE RISK, EVEN IF ST HAS BEEN INFORMED IN WRITING OF SUCH USAGE, UNLESS A PRODUCT IS EXPRESSLY DESIGNATED BY ST AS BEING INTENDED FOR "AUTOMOTIVE, AUTOMOTIVE SAFETY OR MEDICAL" INDUSTRY DOMAINS ACCORDING TO ST PRODUCT DESIGN SPECIFICATIONS. PRODUCTS FORMALLY ESCC, QML OR JAN QUALIFIED ARE DEEMED SUITABLE FOR USE IN AEROSPACE BY THE CORRESPONDING GOVERNMENTAL AGENCY.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2014 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

