

### **Overview**

This document contains the necessary information to build the device.

#### **Contents**

Overview	
Maker Checklist	2
Maker To Do List	2
Items to Give to User	2
Tool List	3
Customization Guide	
3D Printing Guide	
3D Printing Summary	
3D Printing Settings	5
Post-Processing	5
Examples of Quality Prints	5
Assembly Guide	6
Part A: PCB Assembly	6
Part A Components	6
Part A Tools	
Part A Personal Protective Equipment (PPE)	8
Part A Steps	<u>C</u>
Part B: Firmware	16
Part C: Enclosure Assembly	18
Part C Components	18
Part C Steps	18
Testing	20
Testing using an Xbox Adaptive Controller	20
Testing using a PC	20



### **Maker Checklist**

This list provides an overview of the steps required to build and deliver the device.

ıvıaker	10	סט	LIST

☐ "User Guide"

	Read through the Assembly Guide to become familiar with required components, tools
	supplies, and safety gear and overall assembly steps.
	Talk to User about customization options (e.g., colour, any special requests, etc.)
	Order the custom PCB
	Order hardware components
	Print or obtain the 3D prints
	Gather tools, supplies, and safety equipment.
	Assemble the device
	Test device
	Print "User Guide"
Items	s to Give to User
	Assembled, tested device



### **Tool List**

- 1. Soldering iron
- 2. Flush cutters
- 3. Phillips Head Screwdriver
- 4. Computer with USB port and Arduino IDE (or ability to install it)

V2.0 | FEBRUARYSEPTEMBER 2023

# Forest Joystick Mouse Hub MAKER GUIDE



### **Customization Guide**

The device can be printed in the user's desired colour.

**Colored Labels** 



## **3D Printing Guide**

### **3D Printing Summary**

Metrics	Single Unit
Total Print Time (min)	3h52m
Total Number of Components	3
Typical Total Mass (g)	40
Typical Number of Print Setups	1

## **3D Printing Settings**

Print File Name	Qty	Total Print Time (hr:min)	Mass (g)	Infill (%)	Support(Y/N)	Layer Height/ Nozzle Diameter(mm)	Notes
Forest_Hub_Top.stl	1	2:40	24	15	N	0.2/0.4	
Forest_Hub_Bottom.stl	1	0:51	13	15	N	0.2/0.4	
Forest_HUB_LED_Spacer.stl	1	0:20	3	15	N	0.2/0.4	

### **Post-Processing**

- Add any processes that must be done after print such as removing supports

### **Examples of Quality Prints**

### **Photo of Device**









### **Assembly Guide**

The assembly of the Forest Hub is comprised of three parts:


1. Part A: PCB Assembly

2. Part B: Firmware

3. Part C: Enclosure Assembly

#### Part A: PCB Assembly

#### **Part A Components**

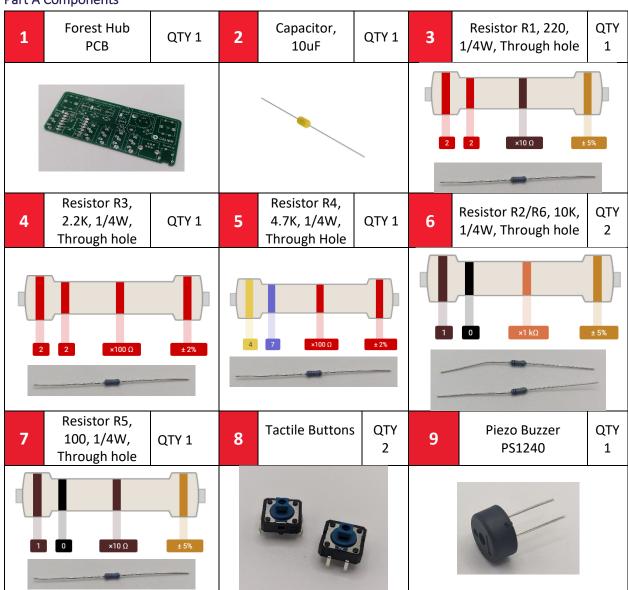



10	TRRS Jack	QTY 1	11	Mono Switch Jacks	QTY 5	12	RJ 25 Connector	QTY 1
			77					
13	Adafruit Qt PY SAMD21	QTY 1	14	Headers, Female, 7 Position	QTY 2	15	NeoPixel LEDs, 5mm though hole	QTY 5
16	Forest LED Spacer	QTY 1	17	Forest Enclosur e Top	QTY 1	18	Screw, #4, 3/8" Length	QTY 1
19	Forest Enclosure Bottom	QTY 1	20	USB-C Cable	QTY 1	21	Solderless Breadboard	QTY 1

V2.0 | FEBRUARYSEPTEMBER 2023

# Forest Joystick Mouse Hub MAKER GUIDE



#### Part A Tools

- Soldering iron
- Flush cutters
- Phillips Head Screwdriver

### Part A Personal Protective Equipment (PPE)

• Safety glasses




#### Part A Steps

#### Step 1: Insert and Solder Capacitor

Take the capacitor and bend the metal leads on either side so they will line up with the holes labelled C1 on the PCB.


Insert the capacitor leads all the way into the C1 holes. Solder in place and trim the excess leads off.

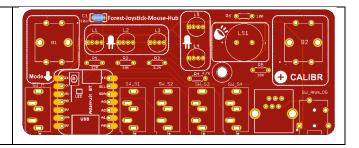

Step 2: Insert and Solder R1 Resistor

Take the R1 resistor (Component 3) and bend the metal leads on either side so they will line up with the holes labelled R1 on the PCB.


Insert the resistor leads all the way into the R1 holes. Solder in place and trim the excess leads off.

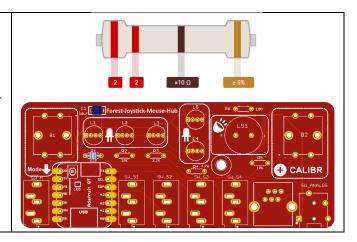

Step 3: Insert and Solder R2 Resistor

Take the R2 resistor (Component 6) and bend the metal leads on either side so they will line up with the holes labelled R2 on the PCB.

Insert the resistor leads all the way into the R2 holes. Solder in place and trim the excess leads off.

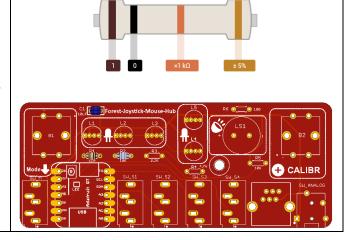




Step 4: Insert and Solder R3 Resistor (Component 4)

Take the R3 resistor (Component 4) and bend the metal leads on either side so they will line up with the holes labelled R3 on the PCB.


Insert the resistor leads all the way into the R3 holes. Solder in place and trim the excess leads off.

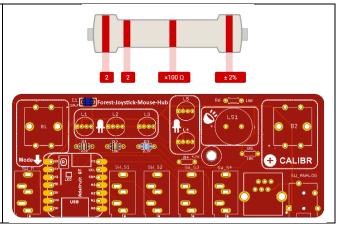

Step 5: Insert and Solder R4 Resistor (Component 5)

Take the R4 resistor (Component 5) and bend the metal leads on either side so they will line up with the holes labelled R4 on the PCB.


Insert the resistor leads all the way into the R4 holes. Solder in place and trim the excess leads off.

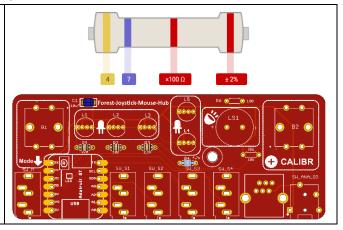

Step 6: Insert and Solder R5 Resistor (Component 7)

Take the R5 resistor (Component 7) and bend the metal leads on either side so they will line up with the holes labelled R5 on the PCB.

Insert the resistor leads all the way into the R5 holes. Solder in place and trim the excess leads off.

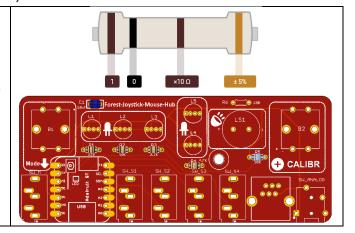




Step 7: Insert and Solder R6 Resistor (Component 6)


Take the R6 resistor (Component 6) and bend the metal leads on either side so they will line up with the holes labelled R6 on the PCB.

Insert the resistor leads all the way into the R6 holes. Solder in place and trim the excess leads off.

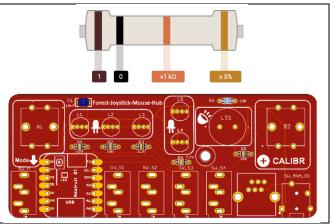


#### Step 8: Insert and Solder Buzzer

Take the Buzzer (Component 9) and insert the leads all the way into the PCB holes labelled with a speaker icon from the top. Solder in place and trim the excess leads.

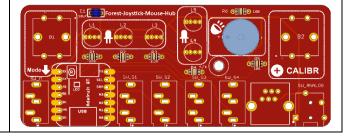

#### Step 9: Insert and Solder Calibration Button

Take a button (Component 8) and insert the leads all the way into the PCB holes labelled CALIBR from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.

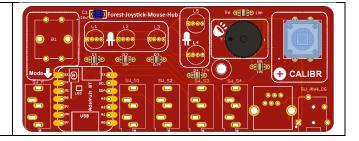

### Step 10: Insert and Solder Mode Button


Take a button (Component 8) and insert the leads all the way into the PCB holes labelled Mode from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.






#### Step 11: Insert and Solder TRRS Jack

Take the TRRS jack (Component 10) and insert the leads all the way into the PCB holes labelled SW\_ANALOG from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.

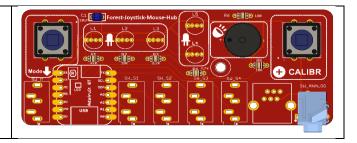


#### Step 12: Insert and Solder SM Audio Jack

Take an audio jack (Component 11) and insert the leads all the way into the PCB holes labelled SW\_M from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.

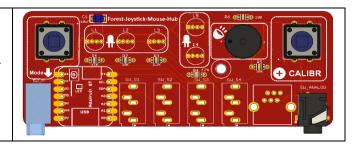


Step 13: Insert and Solder S1 Audio Jack

Take an audio jack (Component 11) and insert the leads all the way into the PCB holes labelled SW\_S1 from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.

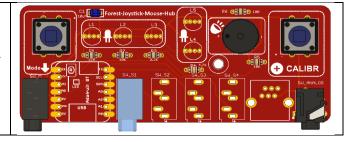

Step 14: Insert and Solder S2 Audio Jack


Take an audio jack (Component 11) and insert the leads all the way into the PCB holes labelled SW\_S2 from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.

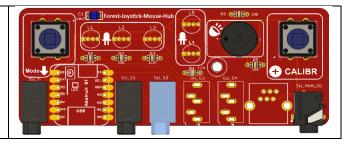



### Step 15: Insert and Solder S3 Audio Jack

Take an audio jack (Component 11) and insert the leads all the way into the PCB holes labelled SW\_S3 from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.

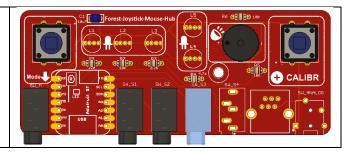

Step 16: Insert and Solder S4 Audio Jack

Take an audio jack (Component 11) and insert the leads all the way into the PCB holes labelled SW\_S4 from the top. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.






Step 17: Insert and Solder Male Headers to QT Py

Take the QT Py microcontroller and male headers (Component 13).

If you have a solderless breadboard. Insert the long leads of the male headers into the breadboard and insert the microcontroller on top. Solder the pins in place and remove the assembly.


If you do not have a solderless breadboard, with the bottom of the PCB raised from the table surface (could place the PCB inside the enclosure bottom for this) insert the female headers (Component 14) into the PCB holes outlined with the microcontroller footprint. Insert the long leads of the male headers into the female headers and install the QT Py microcontroller on top.

Solder a single male header pin to the microcontroller, ensuring the headers are perpendicular to the PCB and the microcontroller is parallel with the PCB. Check that the male headers are flush and perpendicular to the microcontroller, solder the remaining male headers pins in place.

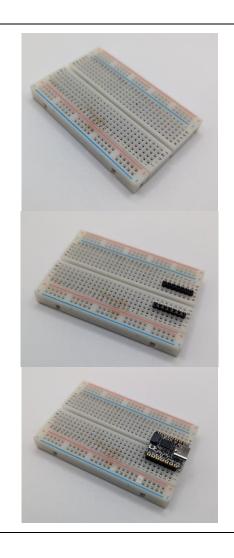

Step 18: Insert and Solder Female Headers


Insert the male headers into the female headers (Component 14) and insert the female headers into the PCB holes outlined with the microcontroller footprint from the top. Solder a single pin of one female header and check to ensure the female headers are flush and perpendicular with the PCB. Solder the remaining female header pins.

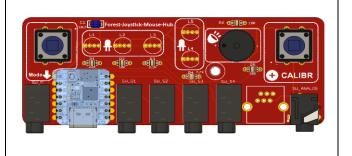



Step 19: Insert and Solder RJ11 Connector


Take the RJ11 connector and insert it into the PCB holes located between SW\_S4 and SW\_ANALOG. Solder a single pin, check that the component is fully flush to the PCB, and solder the remaining pins.

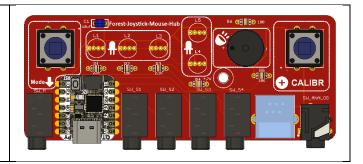

Step 20: Insert NeoPixel LEDs using Forest LED Spacer

Take the NeoPixel LEDs (Component 15) and the Forest LED spacer (Component 16). Line up and place the spacer over the PCB holes labelled L1, L2, L3, L4, and L5.


Ensuring that the flat side of the NeoPixel LEDs lines up with the outline on the PCB (all LED flat sides should face towards the Buzzer), insert the LEDs into the PCB. Solder in place and trim the excess leads.

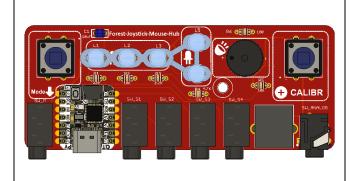

Step 21: PCB is Fully Assembled

The Forest Hub PCB is now fully assembled. Move to

Part B: Firmware.

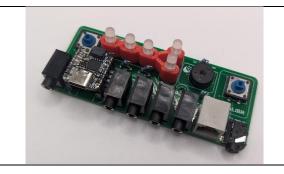



#### Part B: Firmware

#### Part B: Firmware Steps

#### Step B1: Setup Arduino IDE

- Download Arduino IDE for your operating system at https://www.arduino.cc/en/software
- 2. Install the Arduino IDE.

#### Step B2: Setup Arduino IDE for QT Py Board

- 1. Open Arduino IDE.
- 2. Click on File -> Preferences.
- 3. Locate the text field that says Additional Boards Manager URLs beside it.
- 4. Copy and paste the following link into the field as a new line: <a href="https://adafruit.github.io/arduino-board-index/package\_adafruit\_index.json">https://adafruit.github.io/arduino-board-index/package\_adafruit\_index.json</a>
- Click on OK.
- Restart the Arduino IDE.
- 7. Open the Boards Manager option from the Tools-> Board-> Boards Manager...,
- 8. Search for "Adafruit SAMD" and select "Adafruit SAMD Boards" by Adafruit.
- 9. Click **Install** to install the board.

#### Step B3: Install Libraries

- 1. In a web browser, go to <a href="https://github.com/cyborg5/TinyUSB">https://github.com/cyborg5/TinyUSB</a> Mouse and Keyboard and go to Code -> Download ZIP.
- 2. In Arduino IDE, click **Sketch -> Include Library -> Add .ZIP Library.**
- 3. Navigate to the ZIP file downloaded in Step (a). Click **OK**.
- 4. Go to **Tools -> Manage Libraries...,** search for "Flash Storage" and install the library "FlashStorage" by Various.
- 5. Go to **Tools -> Manage Libraries...,** search for "Adafruit\_Neopixel" and install the library "Adafruit\_Neopixel" by Adafruit.
- Go to Tools -> Manage Libraries..., search for "WiiChuck" and install the library "WiiChuck" by Kevin Harrington.

#### Step B4: Setup Local Code Directory

- 1. Download the Firmware Files from the GitHub Repository:
  - https://github.com/makersmakingchange/Forest-
  - Hub/blob/main/Build Files/Firmware Files/Forest Hub Firmware.zip
- 2. Extract / unzip the folder to a known location.
- 3. Confirm that you have the following folder structure:
  - Forest\_Hub\_Firmware (folder)





- o Forest\_Hub\_Firmware.ino
- o OpenAT\_Joystick\_Response.h
- o XACGamepad.h


#### Step B5: Upload the Code to the microcontroller.

- 1. Open Forest Hub Firmware.ino with Arduino IDE.
- 2. Select Adafruit QT Py M0 (SAMD21) from Tools -> Board -> Adafruit SAMD Boards
- 3. Click on Tools -> USB Stack and select TinyUSB
- 4. Connect the Forest Hub using the USB cable to the computer.
- 5. Select the correct port from **Tools -> Port** menu.
- 6. Verify and upload the code.



## Part C: Enclosure Assembly


#### Part C Components

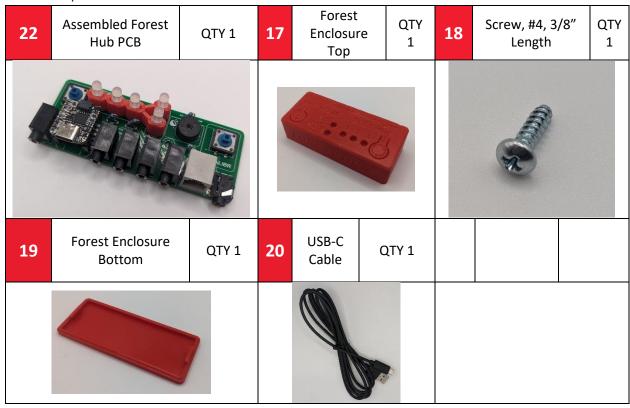

### Part C Steps

### Step C1: Insert PCB into Enclosure Top


Insert the assembled PCB into the Enclosure Top.

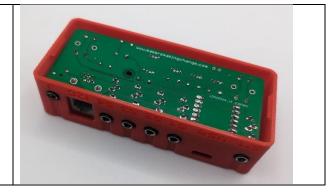



#### Step C2: Secure PCB into place with Screw

Secure the PCB in place with using the #4 screw and the Phillips screwdriver.

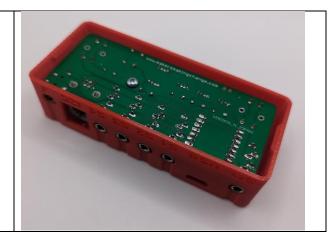

### Step C3: Snap Enclosure Bottom

Position the Enclosure Bottom over the Enclosure Top and push down to snap in place.



#### Step C4: Enclosure Finished

Flip the device over. The Forest Hub is now complete.





### **Testing**

To test the Forest Hub, you will need an analog joystick and at least one (1), but up preferably five (5) assistive switches.

#### Testing using an Xbox Adaptive Controller

- 1. Connect the Forest Hub into the Left USB port for the left joystick or the Right USB port for the right joystick.
- 2. Connect the Xbox Adaptive Controller (XAC) using a USB-C cable to the computer.
- 3. If using Windows, open "Set up USB Game Controllers" from the Control Panel. You can find this by searching your computer in the search bar next to the Windows icon.
- 4. Select the Xbox Adaptive Controller from the list of controllers and go to "Properties".
- 5. Move your joystick and observe the movement of the cross hatch in the "Axes" window. Ensure it moves in the proper directions when you move the joystick (the arrow points in the up direction). If not, open up the joystick and check your connections.

### Testing using a PC

- 1. Connect the joystick using the USB C cable to the computer.
- 2. If using Windows, open "Set up USB Game Controllers" from the Control Panel. You can find this by searching your computer in the search bar next to the Windows icon.
- 3. Ensure that the joystick is registered as a game controller and select your joystick from the list and go to "Properties".
- 4. Move your joystick and observe the movement of the cross hatch in the "Axes" window. Ensure it moves in the proper directions when you move the joystick (the arrow points in the up direction). If not, open the joystick and check your connections.
- 5. Using assistive switches plugged into each mono jack, activate each switch, and ensure that one of buttons 1-4 light up when you press the switch, and stops when you release the switch. If not, open the joystick and check your connections.

# **Troubleshooting**

Nothing happens when I plug the device in.

→ Double check to make sure there are no bridged connections. Double check the Neopixels and the RJ11 Connector.