

Overview

This document contains the necessary information to build the Open Playback Recorder.

Contents

Overview			1
Maker Checklist			5
Maker To Do List			5
Items to Give to Use	r		5
Tool List			6
Customization Guide			7
3D Printing Guide			8
3D Printing Summary	/		8
3D Printing Settings.			8
Post-Processing			8
Examples of Quality	Prints		9
Assembly Guide			13
Required Componen	ts		13
Required Tools			14
Required Personal Pr	rotective Equipment (PP	E)	14
Step 1: Place the n	nicrocontroller		14
Step 2: Attach the	microSD reader		15
Step 3: Attach Con	necting Header		15
Step 4: Attach Spe	aker Amp		16
Step 5: Attach Bat	tery Connector		16
Step 6: Power to n	nicrocontroller		17
Step 7: Connect th	ne Amp to Ground		17
Step 8: Connect A	mp to power		18
Step 9: Short the c	differential		18
Step 10: Amp sign	al in		19



Step 11: Microcontroller signal out	19
Step 12: Amp shut down pin	20
Step 13: Connect microSD power	20
Step 14: Connect microSD to ground	21
Step 15: Connect the amp output	21
Step 16: Finish connecting amp wires	22
Step 17: Connect microSD clock line	22
Step 18: Connect DO line	23
Step 19: Connect DI line	23
Step 20: Connect CS line	24
Step 21: Strip button wires	24
Step 22: Connect button wires to microcontroller	25
Step 23: Connect microphone input	25
Step 24: Connect the record LED	26
Step 25: Connect the play LED	26
Step 26: Connect the level LEDs	27
Step 27: Connect microcontroller power	27
Step 28: Connect microcontroller ground	28
Step 29: Prep the buttons	28
Step 30: Insert the buttons	29
Step 31: Cover the buttons	29
Step 32: Prepare the jacks	30
Step 33: Insert the jacks	30
Step 34: Place the button covers	31
Step 35: Connect a common ground	31
Step 36: Connect the level inputs	32
Step 37: Connect the play buttons	33
Step 38: Connect a ground wire	34
Step 39: Attach the protoboard	34
Step 40: Connect the common ground to the protoboard	35



Step 41: Connect the buttons	36
Step 42: Add the battery cover	37
Step 43: Insert the microSD card reader	37
Step 44: Add the power switch	38
Step 45: Add the potentiometer	38
Step 46: Add the volume knob	39
Step 47: Add the microphone	39
Step 48: Place the button covers	40
Step 49: Connect the grounds	40
Step 50: Attach the speaker	41
Step 51: Attach the header to the protoboard	41
Step 52: Insert the resistors	42
Step 53: Prep the power wires	42
Step 54: Attach the power wires	43
Step 55: Attach more wires	44
Step 56: Attach resistor wires	45
Step 57: Attach the final wires	45
Step 58: Attach the speaker	46
Step 59: Attach the protoboard	46
Step 60: Connect the power wires	47
Step 61: Connect the ground	48
Step 62: Connect the microphone	49
Step 63: Connect the potentiometer	49
Step 64: Place the button covers	50
Step 65: Finish the common ground	50
Step 67: Connect the level LEDs	51
Step 68: Attach the connector to the top half	51
Step 69: Attach connector to the bottom half	52
Step 70: Insert the battery	52
Step 71: Program the microcontroller	53



	Step 72: Close the enclosure	Error! Bookmark not defined.
Pı	rogramming	53
	Step 1: Open the Library Manager	53
	Step 2: Search the TMRpcm library	54
	Step 3: Enable Recording	54
	Step 4: Open the Preferences	55
	Step 5: Add the Board URL	56
	Step 6: Program the Microcontroller	57



Maker Checklist

This list provides an overview of the steps required to build and deliver the device.

Maker	To Do List
	Read through the Assembly Guide to become familiar with required components, tools
	supplies, and safety gear and overall assembly steps.
	Talk to User about customization options (e.g., color, any special requests, etc.)
	Order hardware components
	Gather tools, supplies, and safety equipment.
	Assemble the device
	Test device
	Print "User Guide"

Items to Give to User

- ☐ Assembled, tested device
- ☐ "User Guide"



Tool List

- 3D printer
- Soldering iron and solder
- Wire cutters
- Wire strippers
- Small flathead screwdriver
- Small Phillips screwdriver
- Hot glue gun (optional)



Customization Guide

The device can be printed in the user's desired colour.











3D Printing Guide

3D Printing Summary

Metrics	Single Unit		
Total Print Time (min)	1397 (23h17)		
Total Number of Components	10		
Typical Total Mass (g)	109		
Typical Number of Print Setups	1		

3D Printing Settings

Print File Name	Qty	Total Print Time (hr:min)	Mass (g)	Infill (%)	Support(Y/N)	Layer Height/ Nozzle Diameter(mm)	Notes
Base.stl	1	9:37	45	20	N	0.2/0.4	
Battey Cover.stl	1	1:24	7	20	N	0.2/0.4	
Button Mount.stl	3	0:08	1	20	N	0.2/0.4	
Level Button.stl	1	0:08	1	20	N	0.2/0.4	
Lid.stl	1	11:17	51	20	N	0.2/0.4	
Play Button.stl	1	0:08	1	20	N	0.2/0.4	
Record Button.stl	1	0:08	1	20	N	0.2/0.4	
Volume Knob.stl	1	0:27	2	20	N	0.2/0.4	

Post-Processing

- Use a hobby knife to remove any burrs or bumps



Examples of Quality Prints

Photo of Base.stl





Photo of Battery Cover.stl

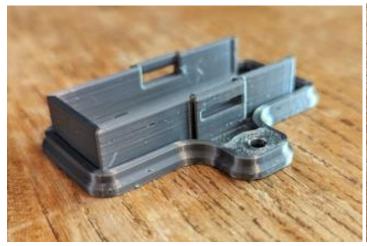






Photo of Button Mount.stl



Photo of Level Button.stl





Photo of Lid.stl









Photo of Play Button.stl



Photo of Record Button.stl




Photo of Volume Knob.stl





Assembly Guide

Required Components

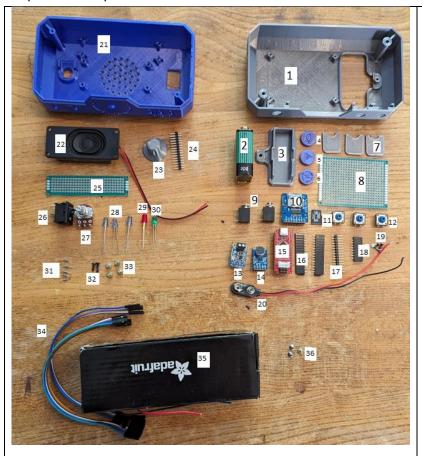

BOM

- 1. Base.stl x1
- 2. 9V Battery x1
- 3. Battery Cover.stl x1
- 4. Record Button.stl x1
- 5. Play Button.stl x1
- 6. Level Button.stl x1
- 7. Button Mount.stl x1
- 8. 18x25 Protoboard x1
- 9. 3.5mm Jack x2
- 10. MicroSD Reader x1
- 11. MicroSD Card x1
- 12. Press Button x3
- 13. Speaker Amp x1
- 14. Microphone x1
- 15. Seeduino Nano x1
- 16. 15 Pin Female Header x2
- 17. 14 Pin Male Header x1
- 18. 8 Pin Female Header x1
- 19. M2 Screws x4
- 20. 9V Battery Connector x1
- 21. Lid.stl x1
- 22. Speaker x1
- 23. Volume Knob.stl x1
- 24. 14 Pin Male Header x1
- 25. 28x6 Protoboard x1
- 26. Power Switch x1
- 27. Potentiometer x1
- 28. Blue LED x3
- 29. Red LED x1
- 30. Green LED x1
- 31. 2k Resistor x5
- 32. M2 Screw x2
- 33. M3 Screw x4
- 34. Double Female Dupont Wires x14
- 35. Solid Core Wire
- 36. M3 Screw x3



Required Tools


- Soldering Iron
- Solder
- Wire cutters
- Wire strippers
- Flathead screwdriver
- Phillips Screwdriver
- Hot glue (optional)

Required Personal Protective Equipment (PPE)

- Safety glasses
- Solder fume extractor (optional)

Step 1: Place the microcontroller


Cut two lengths of female header pins to the length of the pins on the microcontroller (15 pins). Place them on the indicated spots on the protoboard and solder it in place. The microcontroller can be used to keep the spacing correct and keep the pins perpendicular to the protoboard.

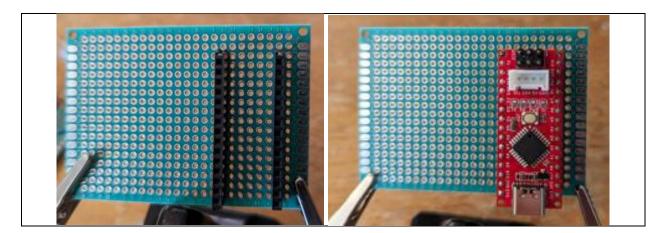




Step 2: Attach the microSD reader

Cut an eight-pin long length of female header pin. Using the microSD reader as a guide, position the header so that the pins on the microSD reader line up with the GND pin on the microcontroller. Solder the header in place.

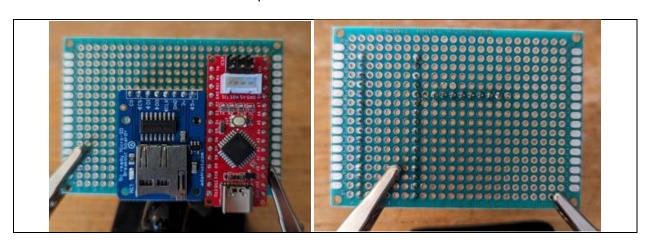

Step 3: Attach Connecting Header


Attach a 14-pin male header in the location shown in the protoboard. (Note that the one used in this guide is 15 pins, but a 14 pin is all that is needed)

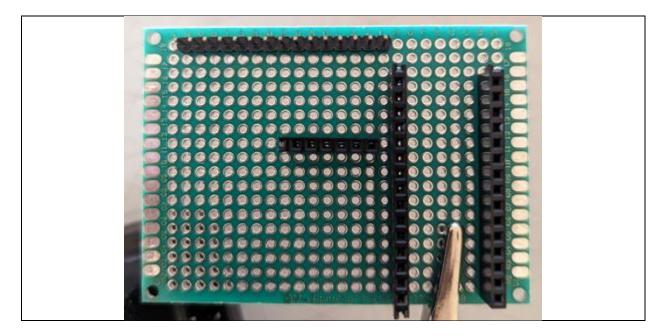




Step 4: Attach Speaker Amp

Take the speaker amp and place it in the same row as the microSD reader, but all the way to the left, and solder it in place.

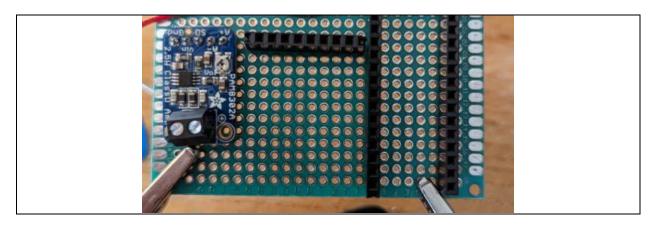

Step 5: Attach Battery Connector


Connect the ground (black) wire to the leftmost pin on the header and connect the 9V in wire (red) to the third leftmost pin. From this point on in the guide, the pins will be numbered with pin 1 being the leftmost, and pin 14 being the rightmost.

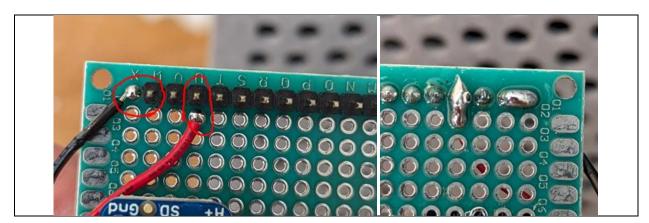




Step 6: Power to microcontroller

Cut a 2-inch length of wire and use it to connect the fourth pin to the Vin pin on the microcontroller headers (Top right).

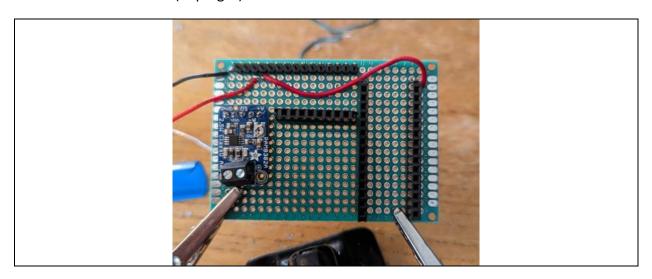

Step 7: Connect the Amp to Ground


Take a half inch piece of wire, and strip both ends. Connect one end to pin 1, and one end to the GND pin on the amp.

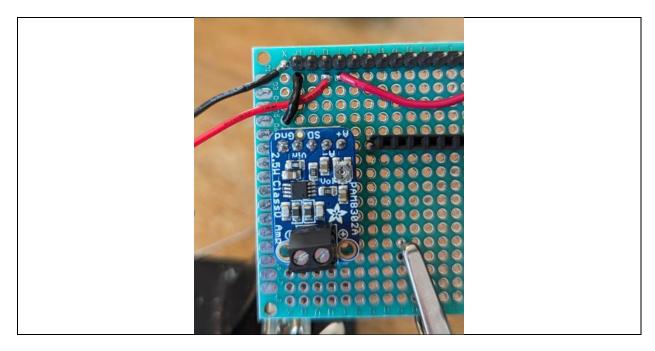




Step 8: Connect Amp to power

Take another half inch piece of wire, and use it to connect pin 2 to the Vin pin of the amp.

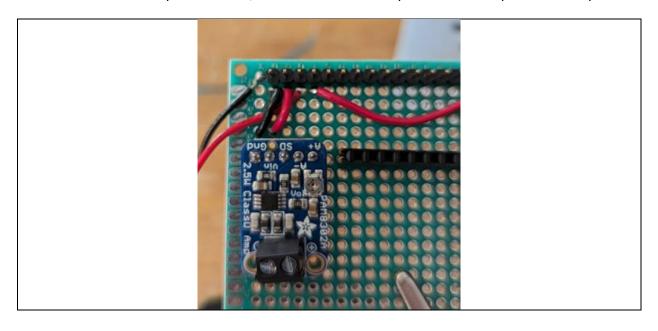

Step 9: Short the differential


Using a half inch piece of wire, connect the GND pin to the A- pin on the back of the board.

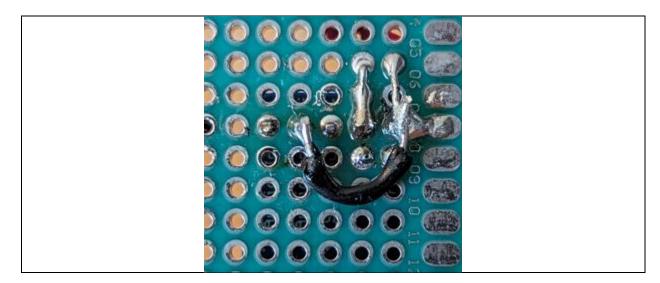




Step 10: Amp signal in

Using another half inch piece of wire, connect the A+ pin on the amp to pin 5 on the header.

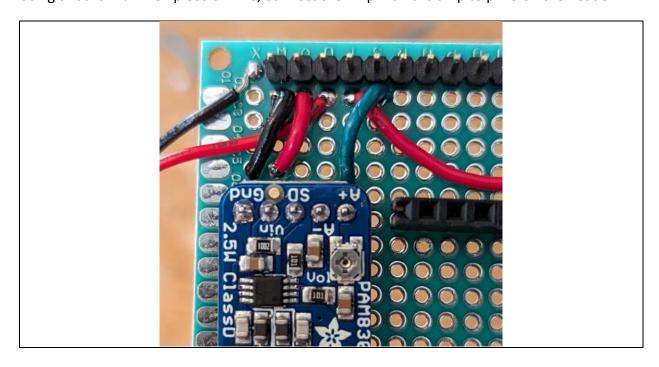

Step 11: Microcontroller signal out


Cut a three-inch piece of wire and use it to connect pin 6 on the header to pin D9 on the microcontroller.

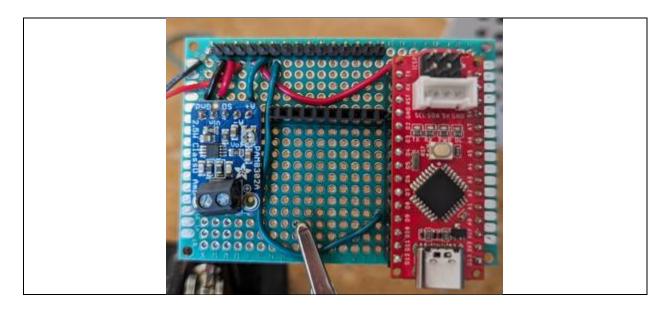




Step 12: Amp shut down pin

Using a two-and-a-half-inch wire, connect the SD pin on the amp, to pin D8 on the microcontroller.

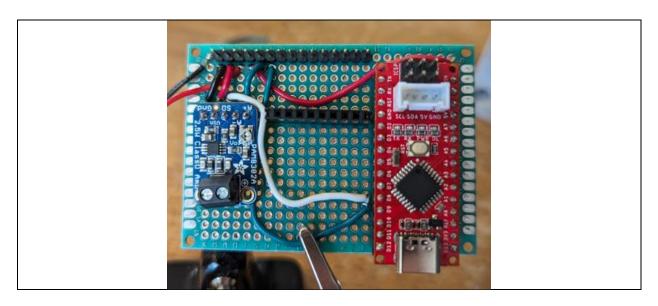

Step 13: Connect microSD power


Connect the Vin to the 5V pin on the microSD on the back of the board.

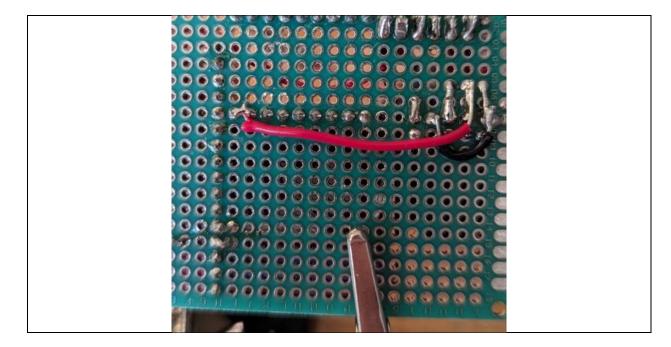




Step 14: Connect microSD to ground

Connect the GND pin of the amp to the GND pin of the microSD reader on the back of the board.

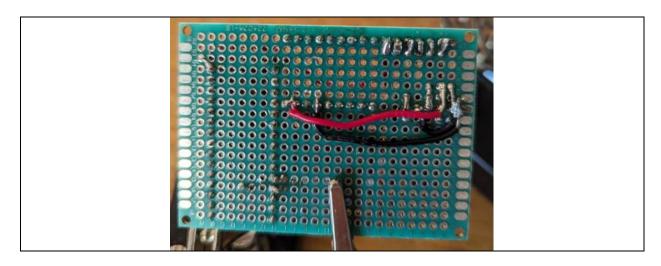

Step 15: Connect the amp output


Connect two 2-inch wires to the output of the amp. It is recommended to trim these wires from the speaker wire, so that they are stuck together, and it will make it easier when making the top half of the device if the colours match.

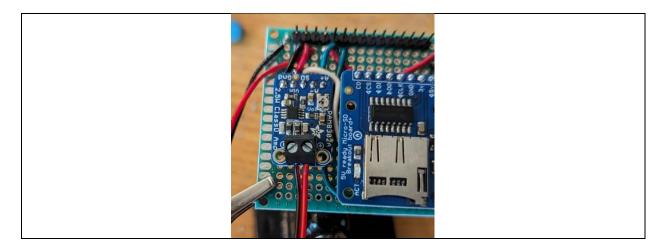




Step 16: Finish connecting amp wires

Connect the other side of the amp wire to pins 7 and 8 on the header.

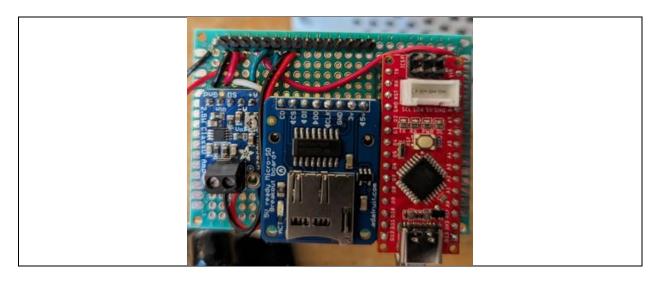

Step 17: Connect microSD clock line


Using a two-and-a-half-inch wire, connect the CLK pin on the microSD reader to pin D13 on the microcontroller.

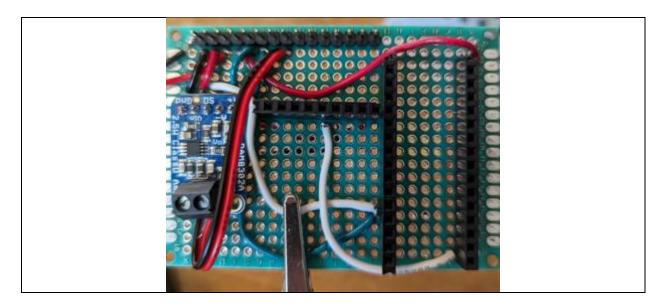




Step 18: Connect DO line

Using a two-inch wire, connect the DO pin on the microSD to the D12 pin on the microcontroller

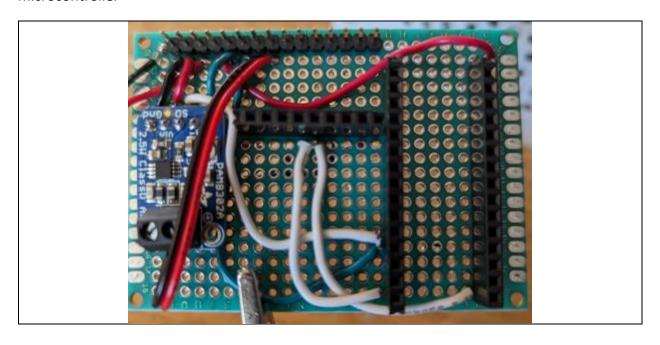

Step 19: Connect DI line


Using a two-inch wire, connect the DI pin on the microSD to the D11 pin on the microcontroller.

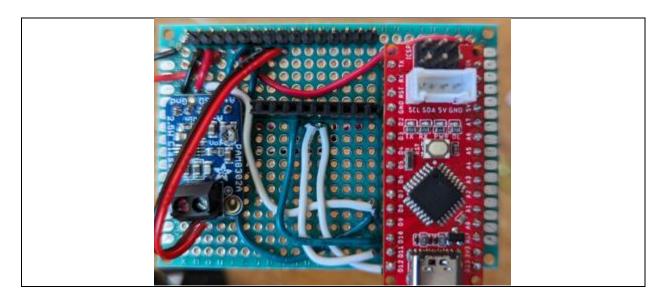




Step 20: Connect CS line

Using a two-inch wire, connect the CS pin on the microSD to the D10 pin on the microcontroller.

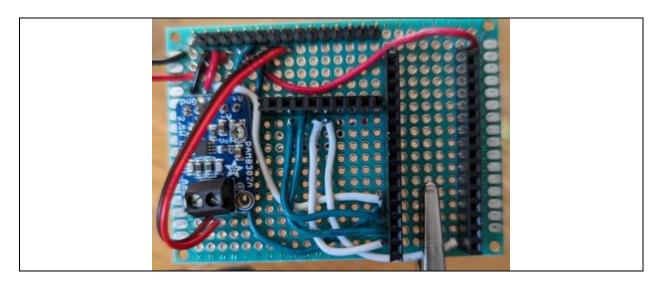


Step 21: Strip button wires
Cut and strip three 4-inch wires.

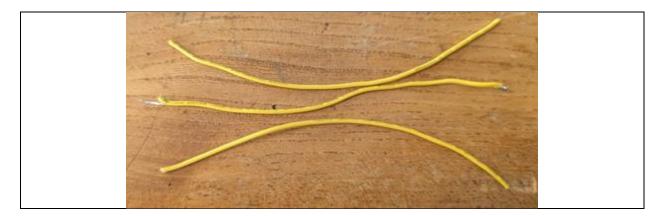




Step 22: Connect button wires to microcontroller

Connect the wires from the previous step to microcontroller pins D3, D4, and D5.

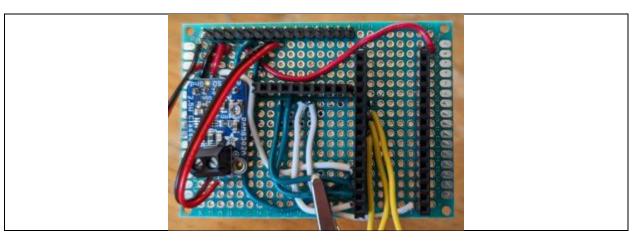

Step 23: Connect microphone input


Cut a three-inch piece of wire and use it to connect pin 9 on the header to pin A0 on the microcontroller

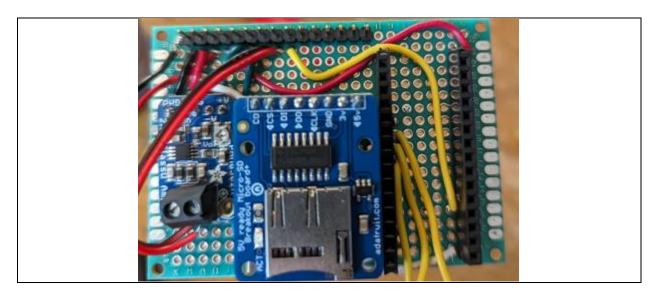




Step 24: Connect the record LED

Use a 2.5-inch piece of wire and connect pin 10 to microcontroller pin A1

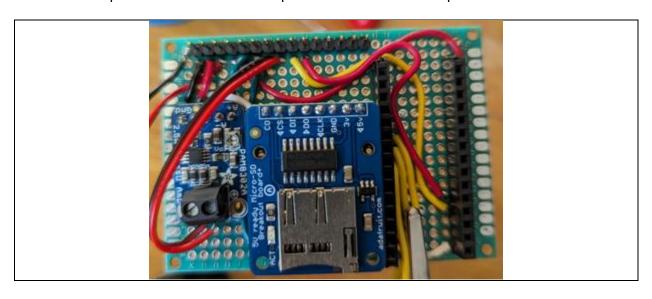

Step 25: Connect the play LED


Use a 2.5-inch piece of wire and connect pin 11 to microcontroller pin A2

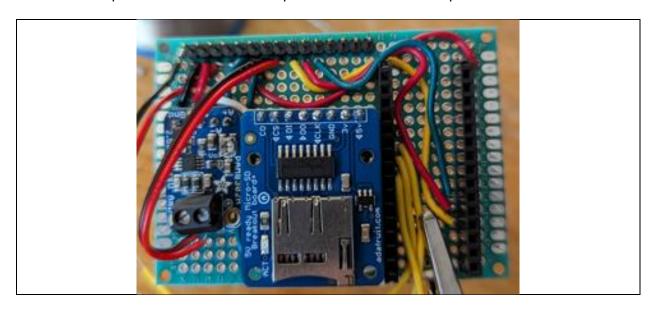




Step 26: Connect the level LEDs

Use a 2.5-inch piece of wire and connect pins 12, 13, and 14 in order to microcontroller pin A3, A4, A5. In the picture they are raised to show order, but flatten them down to allow the microcontroller to fit in the headers.

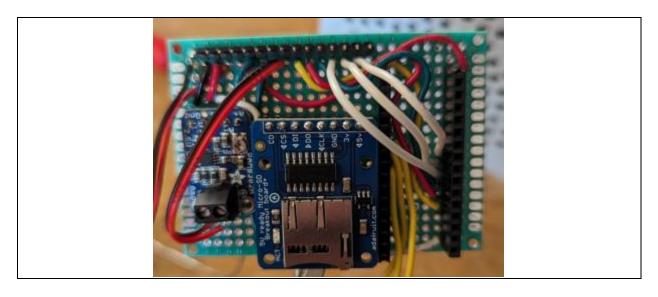

Step 27: Connect microcontroller power


Using a 1-inch piece of wire, connect the 5V pin on the microcontroller to the 5V pin on the microSD across the back of the board

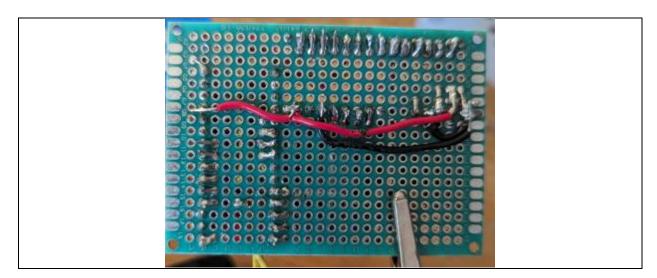



Step 28: Connect microcontroller ground

Using a 1-inch piece of wire, connect the GND pin on the microcontroller to the GND pin on the microSD across the back of the board

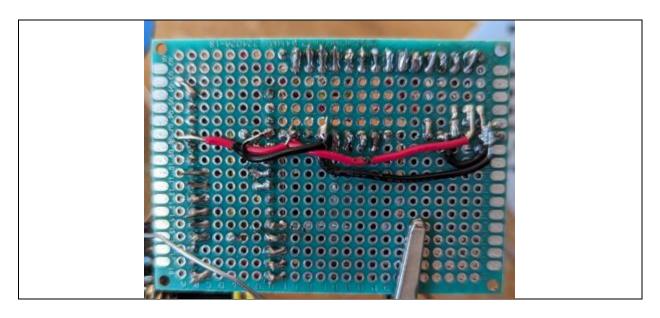

Step 29: Prep the buttons


Take the three buttons, cut the plastic buttons as well as two of the four metal pins, and flatten the remaining two.





Step 30: Insert the buttons

Put the buttons in the slots in the base as shown

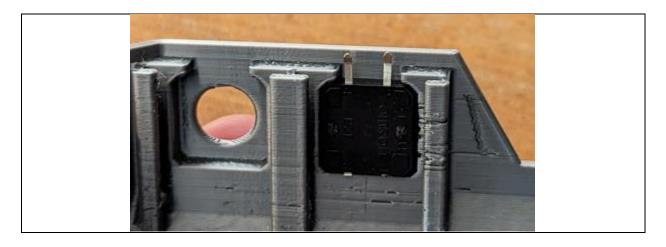


Step 31: Cover the buttons

Slide the button covers in the slots behind the buttons to secure them in place.





Step 32: Prepare the jacks
Take the rings off of both of the jacks.

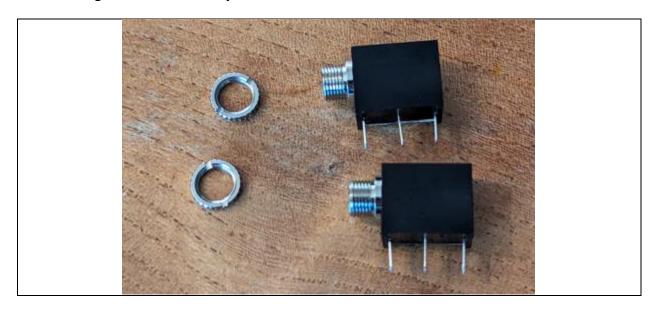

Step 33: Insert the jacks
Put the jacks through the holes on the left of the base, and secure them in place with the rings.





Step 34: Place the button covers

Place the button covers over the buttons as shown in the below image. If the button covers do not hold themselves on place, some hot glue can be used to secure them.




Step 35: Connect a common ground Use wire to connect one leg of all the buttons as well as the middle pins of the jacks.





Step 36: Connect the level inputs


Connect the front pin of the backmost jack to the pin of the level button that is not connected to the common ground.

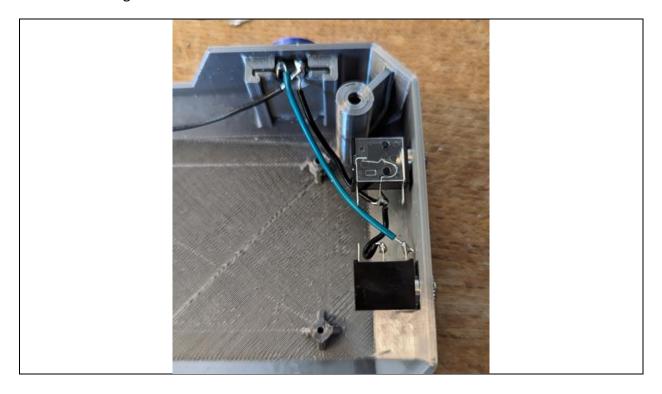




Step 37: Connect the play buttons

Connect the front pin of the front jack to the pin of the play button that is not connected to the common ground.

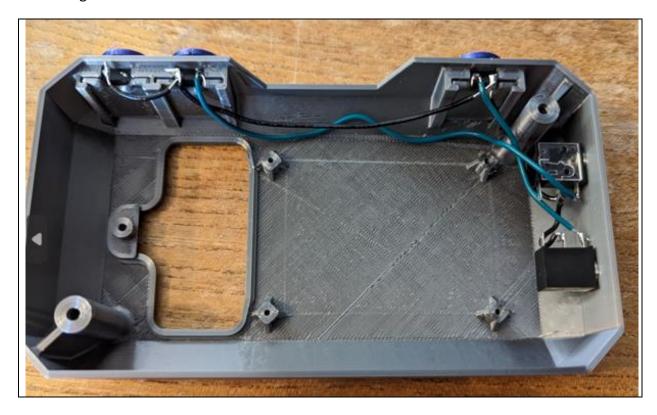




Step 38: Connect a ground wire Connect a 2-inch wire to pin 1 on the header

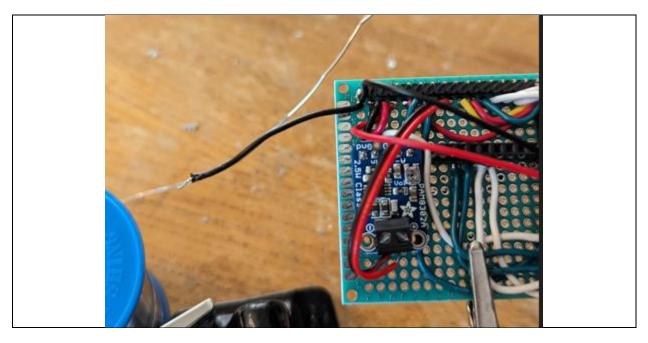


Step 39: Attach the protoboard Using 4 M2 screws, attach the protoboard to the base.

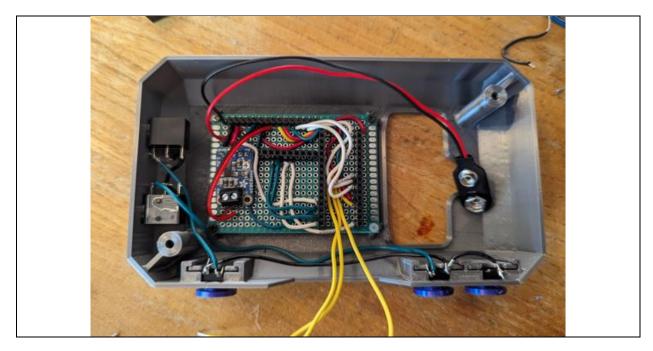




Step 40: Connect the common ground to the protoboard Connect the loose ground wire from step 38 to the common ground of the switches and jacks.

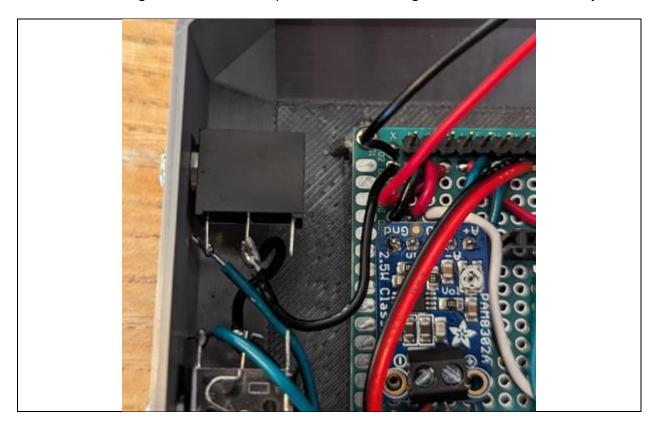



Step 41: Connect the buttons

Connect the three wires to the buttons. The one connected to D3 connects to the level button, the one connected to D4 connects to the play button, and the one connected to D5 connects to the record button.

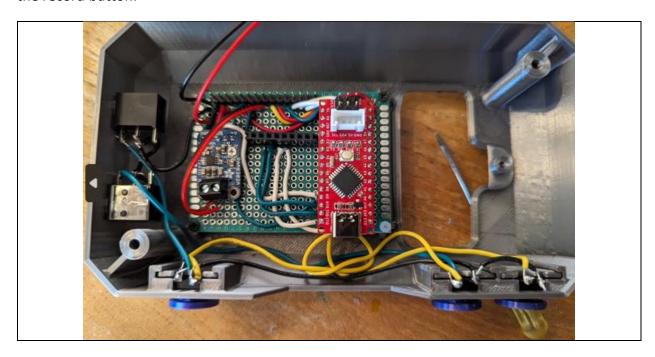




Step 42: Add the battery cover

Flip over the base, and insert the battery cover into place and secure with a screw.



Step 43: Insert the microSD card reader


Place the microSD card in the reader. The base of the device is now complete

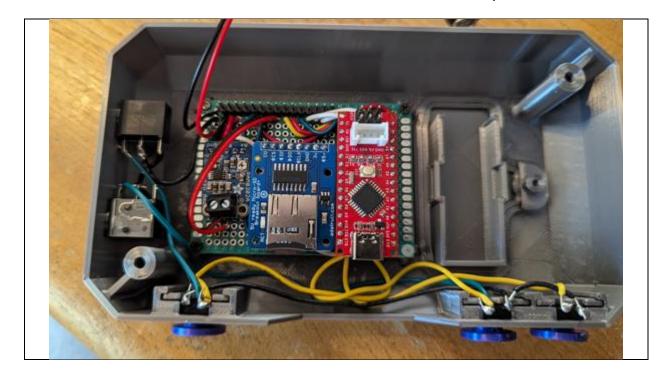




Step 44: Add the power switch

Add the power switch to the top of the enclosure. It should press into place and hold itself in. Ensure that the text faces the front of the enclosure.

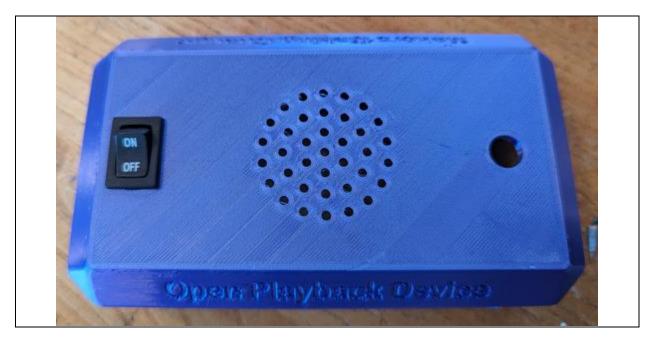

Step 45: Add the potentiometer

Take the ring off the potentiometer and put it through the hole in the inside of the enclosure. There will be a slot on the enclosure that fits the tab on the potentiometer. Secure the potentiometer in place with the ring.

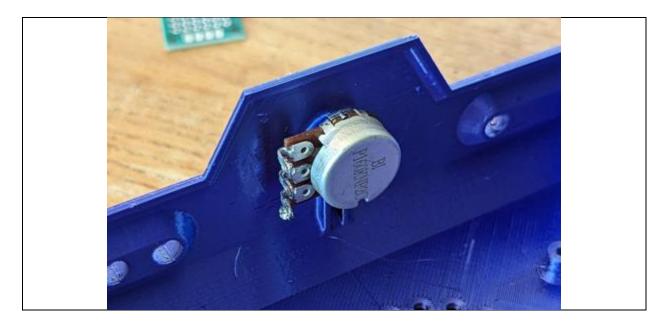



Step 46: Add the volume knob

Place the volume knob over the knob on the potentiometer. It should snuggly hold itself in place, but hot glue can be used if needed.



Step 47: Add the microphone

Place the microphone through the hole on the top of the enclosure. The tabs will snap over the PCB and hold it in place.






Step 48: Place the button covers

Place the LEDs into the slots into the container. The blue LEDs fit into the level holes, the green LEDs fit into the play hole, and the red LED fits into the rec hole. They should be a snug fit, but can be held in place with hot glue if necessary. For later steps, it is helpful to keep all the LEDs with the same direction, with the short legs all facing the top of the enclosure.




Step 49: Connect the grounds
Bend the short wire of the LEDs so they all touch each other and solder them together.

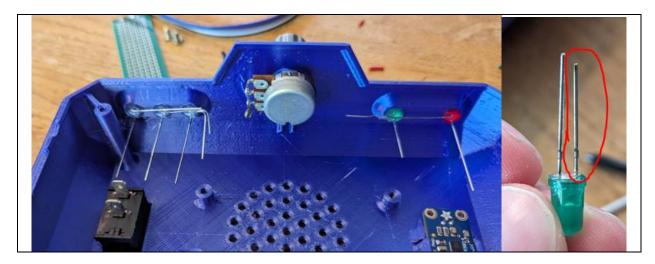




Step 50: Attach the speaker

Using four screws, attach the speaker to the top of the case.

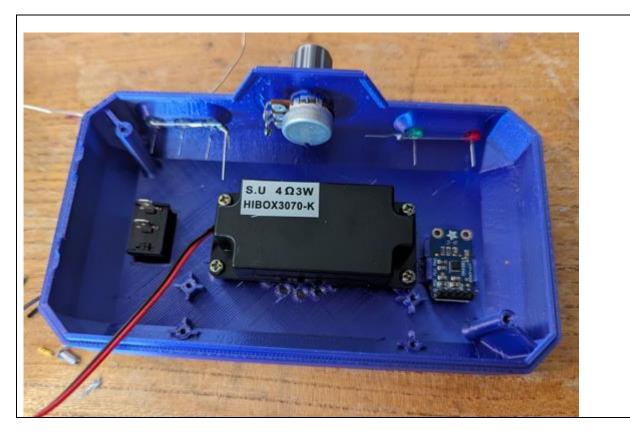

Step 51: Attach the header to the protoboard


Cut a length of male header pin to 14 pins long and place it in the top row, two from the right, as shown in the attached image.

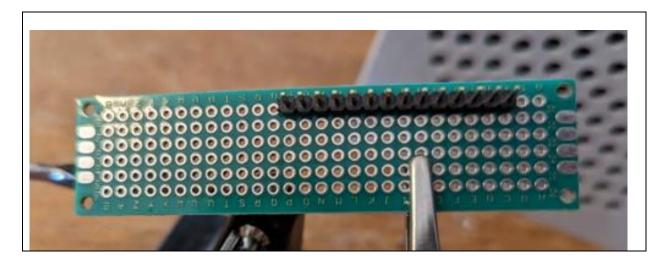



Step 52: Insert the resistors

Take 5 2K resistors and attach them to the five leftmost pins

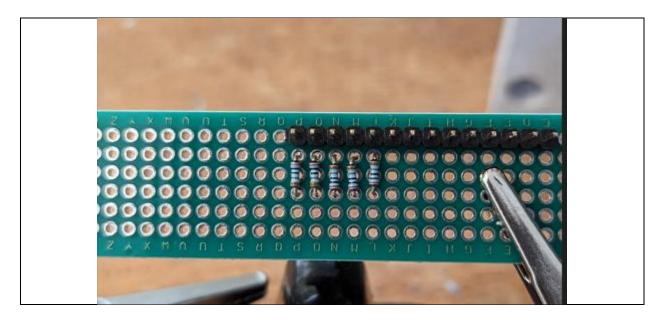


Step 53: Prep the power wires Cut two 2 inch long lengths of wire and strip the ends






Step 54: Attach the power wires Solder the power wires to the third and fourth leftmost pins, as seen in the below image

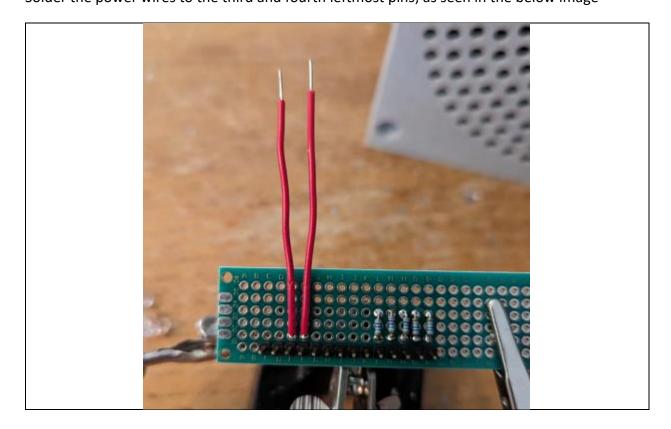



Step 55: Attach more wires


Connect a 3 inch stripped wire to the leftmost pin. Connect a 4 inch female Dupont wire to the second leftmost pin. Attach two 3 inch long wires to the fifth and sixth pins. Finally, connect a 4 inch female Dupont wire to the 9th leftmost pin.

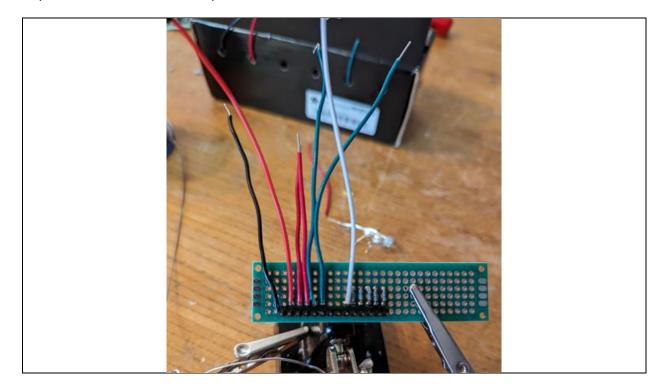




Step 56: Attach resistor wires

Connect a 4 inch female Dupont wire to the leftmost pin, and attach a 3 inch stripped wire to the resistor attached to the 10th pin.

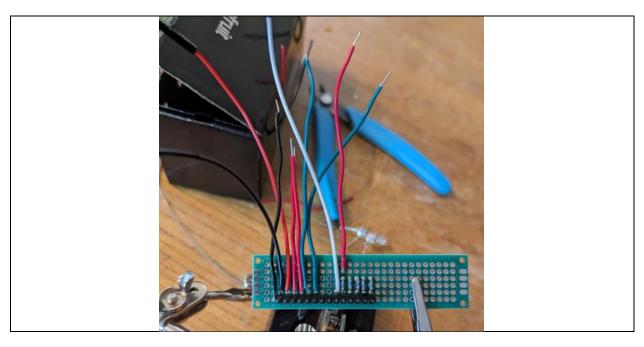

Step 57: Attach the final wires


Strip four lengths of 3 inch long wire, and attach them to all the remaining resistors.

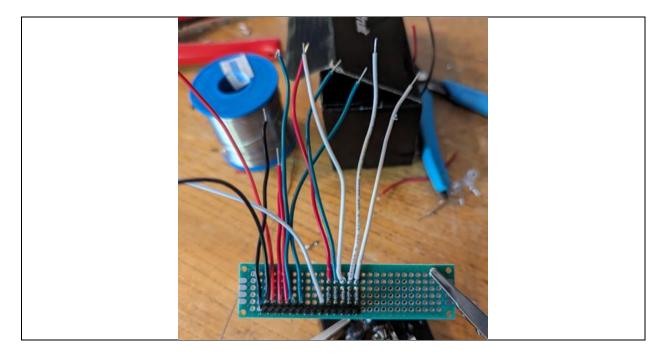




Step 58: Attach the speaker

Attach the wires from the speaker to the remaining two pins.

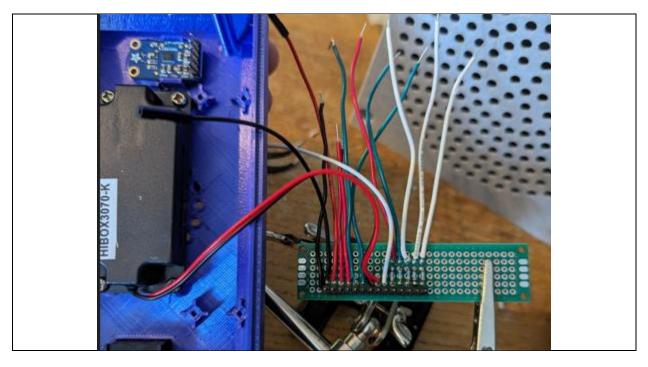

Step 59: Attach the protoboard


Using four M2 screws, attach the protoboard to the four posts behind the speaker.

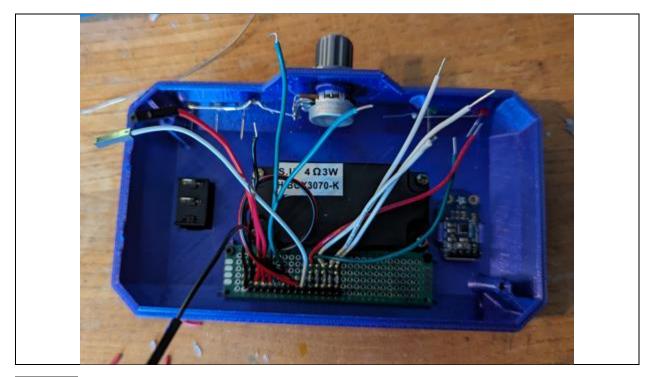



Step 60: Connect the power wires


Connect the wires on pin 3 and 4 to the power switch. Order of the wires is not important.

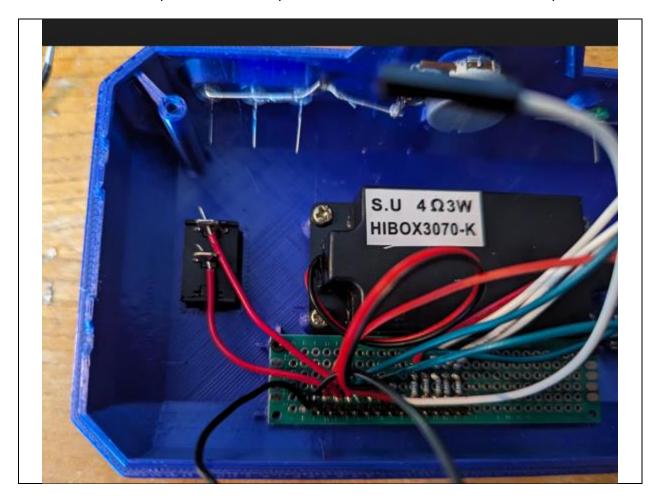



Step 61: Connect the ground


Take the non-Dupont wire on the first pin, and connect it to the bottom tab of the potentiometer, and the ground wire of the three blue LEDs

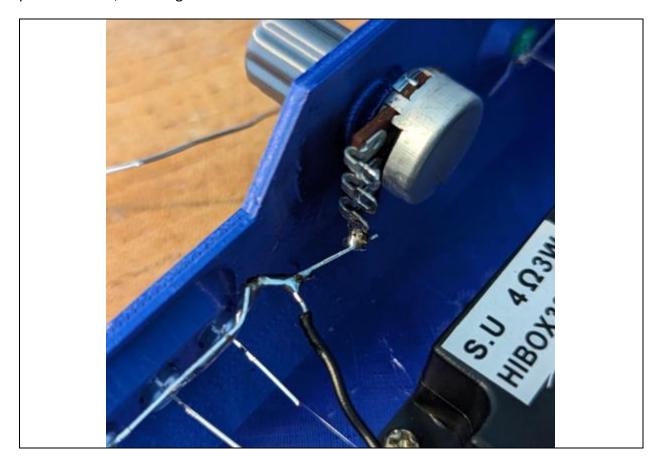




Step 62: Connect the microphone

Connect the Dupont wire from the first pin to the GND pin on the microphone. Connect the Dupont wire from the second pin to the V+ pin on the microphone. Finally, connect the Dupont wire on the ninth pin to the Out pin on the microphone.

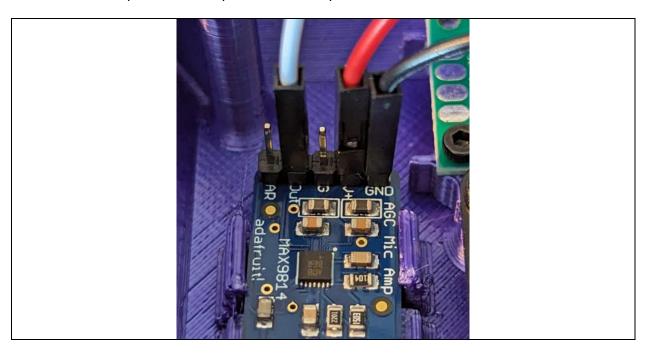

Step 63: Connect the potentiometer


Connect the wire on pin 5 to the middle tab on the potentiometer. Connect the wire on pin 6 to the top tab on the potentiometer. Order is important for this step.

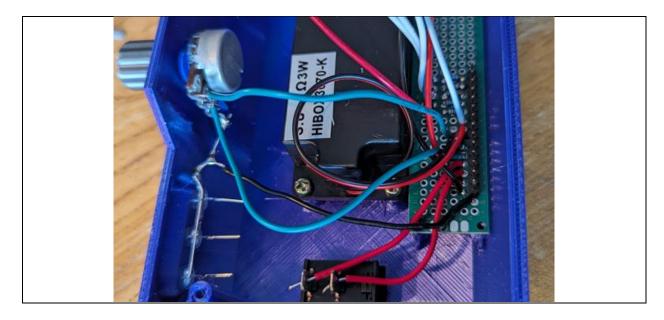




Step 64: Place the button covers

Connect the wire on pin 10 (the first resistor) to the red LED and connect the wire on pin 11 (the second resistor) to the green LED.

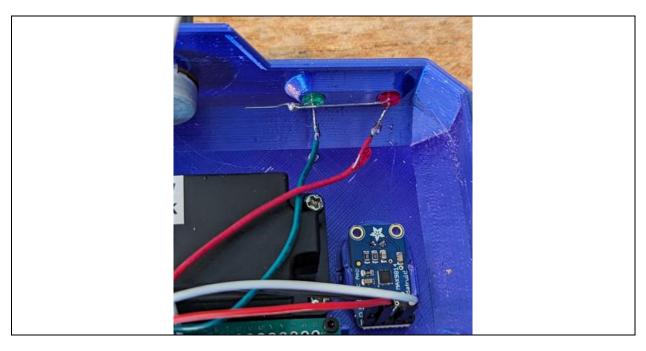

Step 65: Finish the common ground


Using a two-inch length of wire, connect the common ground of the green and red LED to the ground of the blue LEDs and the potentiometer

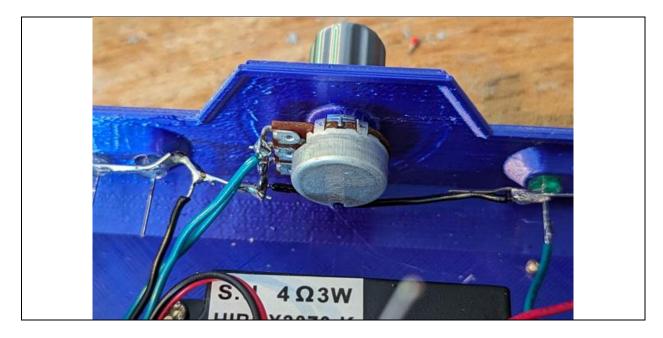




Step 67: Connect the level LEDs

Connect the wire from the rightmost resistor to the rightmost blue LED. Connect the second rightmost wire to the middle blue LED, and the third rightmost wire to the left blue LED.

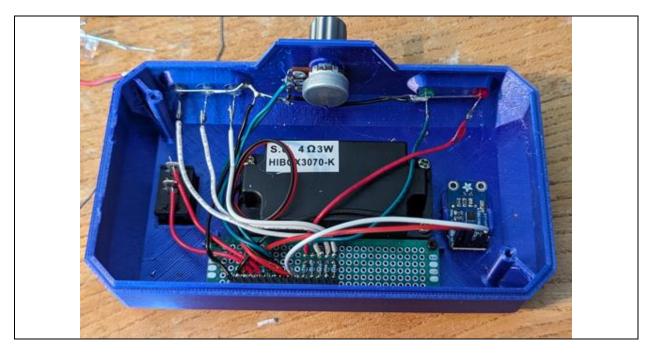

Step 68: Attach the connector to the top half


Attach 14 double female Dupont wires to the header on the protoboard of the top half of the enclosure.

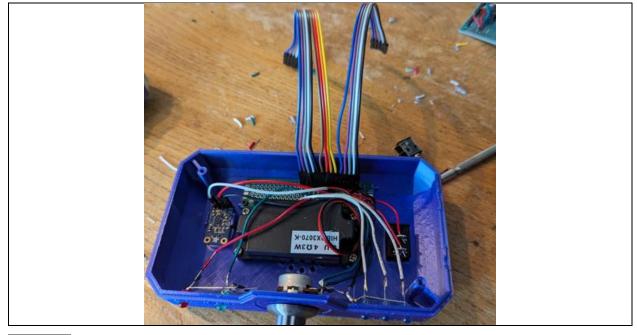



Step 69: Attach connector to the bottom half

Connect the other end of the wires from the previous step to the header on the protoboard in the base of the enclosure. Make sure that the connections line up so that pin 1 on the top header lines up with pin 1 on the bottom header, etc.

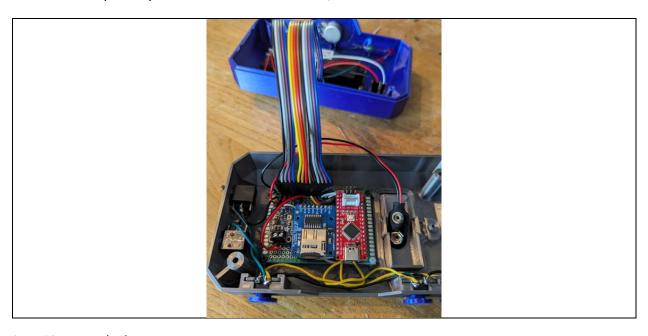

Step 70: Insert the battery Slot the battery into the battery cover, and connect the battery cable to the battery terminals.





Step 71: Program the microcontroller

Program the microcontroller following the steps in the programming section of the guide


Programming

Step 1: Setup Arduino IDE on Computer

- 1. Download Arduino IDE for your operating system at https://www.arduino.cc/en/software
- 2. Install the Arduino IDE.

Step 2: Open the Library Manager


Click on the Tools menu, and select Manage Libraries. Alternatively, the menu can be opened with Ctrl+Shift+I

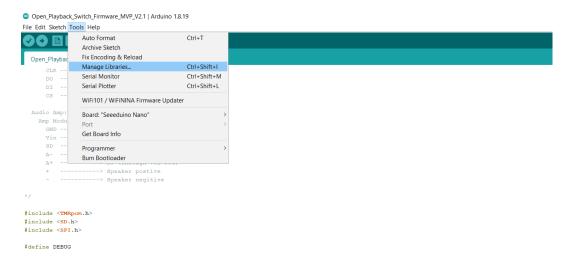



Step 3: Search the TMRpcm library

Using the search bar on the top right of the menu, search TMRpcm. Install the library by TMRh20

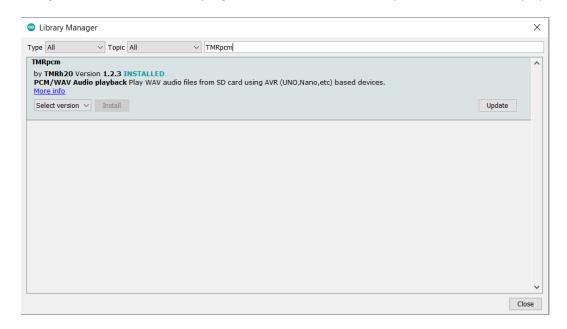

Step 4: Enable Recording

Find the folder where the TMRpcm library was installed. This is usually in C:\Users\[NAME]\sketchbook\libraries\TMRpcm. Open the file pcmConfig.h

Uncomment the line "#define buffSize 128"

Override the default size of the buffers (MAX 254). There are 2 buffers, so memory usage will be double this number Defaults to 64bytes for Uno etc. 254 for Mega etc. note: In multi mode there are 4 buffers*/
#define buffSize 128 //must be an even number

Uncomment the line "#define ENABLE_RECORDING"

/* Initial implementation for recording of WAV files to SD card via a microphone or input connected to an analog pin SdFat library is recommended

Requires a class 4 card minimum, buffSize may need to be increased to 254 if audio is skipping etc. Depending on the card, can take a few seconds for recording to start

#define ENABLE_RECORDING



Step 5: Open the Preferences

Click on the File menu, and select Preferences. Alternatively, the menu can be opened with Ctrl+Comma.






Step 6: Add the Board URL

Copy the following link into the Additional Board Managers URL

https://raw.githubusercontent.com/Seeed-

Studio/Seeed Platform/master/package legacy seeeduino boards index.json

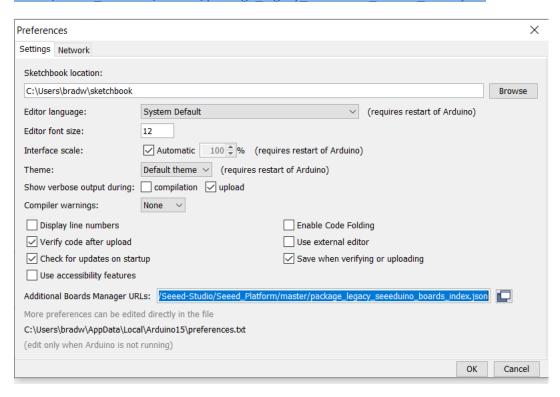


Step 7: Connect the Open Playback Recorder to the Computer

Unscrew the two halves of the Open Playback Recorder and plug the microcontroller into the computer using a USB cable.



Step 8: Program the Microcontroller

In the Tools menu, set the board to Seeeduino Nano, and set the port to whatever port shows up when the microcontroller is plugged into the computer. After this, press the arrow button below the Edit menu to compile the code and upload it to the microcontroller.

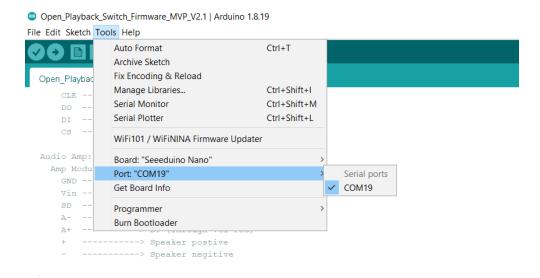

Step 10: Close the enclosure

After the microcontroller has been programmed, put both halves of the enclosure together and secure them in place using two M3 screws

