


Required Components

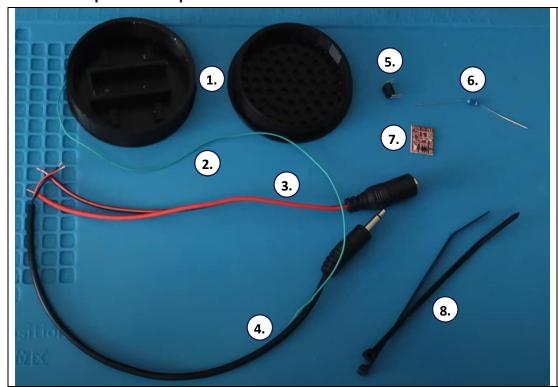

BOM

- 1. Touch Switch Case
- 2. 8" Length of Wire
- 3. Power Cable
- 4. 3.5 mm Mono Cable
- 5. Optocoupler
- 6. 100Ω Resistor
- 7. Touch Sensor
- 8. 2X Zip Tie
- Small length of wire (Not shown)

Required Tools

- Soldering Iron
- Solder
- Wire Strippers
- Hot Glue Gun
- Hot Glue

Required Personal Protective Equipment (PPE)

- Safety Glasses
- Fume Extractor or a well-ventilated space



Assembly Instructions

Step 1

Place the two wires into the case.




Step 2

 $Solder\ the\ optocoupler\ connections:$

- 1 100 Ω resistor
- 2 Small length of wire
- 3 3.5mm mono cable
- 4 3.5mm mono cable

Note: Pins 3 and 4 on the optocoupler are soldered to the red and black wires of the mono cable. The order of black and red wires does not matter as long as they are on those pins.

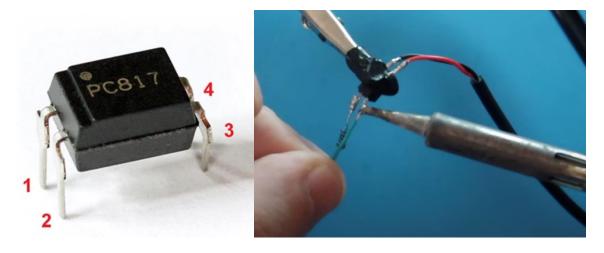



Step 3

Solder the Touch Sensor connections: Solder the red power cable to the **VCC** pin, the 100 Ω resistor to the **I/O** pin, the ground power cable and short wire (from pin 2 on the optocoupler) to the **GND** pin on the touch sensor.



Step 4
Solder the 8" length of wire to the top right of the touch switch, seen in the green circle.







Step 5

Place all the components into the case and run the wire through the tabs as shown below. Use hot glue to help secure all the electronics and attach the zip ties around the power cable and mono cable within the case to secure them if pulled.



Step 6

Screw on the top of the case and plug the power cable into a 5V 2-amp outlet to complete the build. If the device does not work, check all the electronic connections.



For more detailed instructions, watch the Touch Twitch build tutorial: <u>Touch Switch Tutorial - YouTube</u>