Contact Information

- Stephan Heinemann
- SMS: +1 (250) 891-5446
- Email: stephan.heinemann@hotmail.com
- Bookings, Questions

Part II – Climbing and Descending Turns, Steep Turns

- Review Basic Turns, Climbs and Descents
- Definition and Motivation
- Initiating, Maintaining and Recovering
 Coordinated Climbing and Descending Turns
- Initiating, Maintaining and Recovering Coordinated Steep Turns
- Summary and Questions
- Pre-Flight Briefing

Review Basic Turns, Climbs and Descents

- What controls are to be used to maintain a coordinated level turn and what do they achieve individually?
- Mentally perform a medium (30° bank angle) coordinated level turn describing all required actions.
- Describe overbanking and how it has to be corrected for during a medium level turn.
- Mentally perform a basic climb and level off and state all required actions. (APT)
- Mentally perform a basic power-off descent and level off and state all required actions. (PAT)
- How do we establish and maintain a combined nose-up and left-banked attitude?



Climbing and Descending Turns





- Turning while climbing or descending
- Heading and altitude change simultaneously
- Applications: **Departures**, **Arrivals**, **Circuits**



Initiating a Climbing Turn





- In cruise-attitude lookout ahead and above in turn direction
- Establish a stable constant speed climb first APT
- Establish a coordinated constant rate turn second
- Climbing turns will be established simultaneously later



Maintaining a Climbing Turn





- Apply elevator as required to maintain pitch attitude and airspeed
- Apply aileron as required to maintain bank attitude while correcting overbanking tendencies
- Apply rudder as required to maintain coordinated constant rate turn
- Continue lookout and monitor outside references and instruments

Recovering a Climbing Turn





- Continue to lookout observing references during recovery
- Recovery order depends on achieved target (heading or altitude) and may require simultaneous control inputs
- Anticipate turn recovery to establish desired heading half bank angle
- Anticipate climb recovery to establish desired altitude 10% VSI
- Remain coordinated using rudder and apply APT to recover climb



Initiating a Descending Turn





- In cruise-attitude lookout ahead and below in turn direction
- Establish a stable constant speed descent first PAT
- Establish a coordinated constant rate turn second
- Descending turns will be established simultaneously later

Maintaining a Descending Turn





- Apply elevator as required to maintain pitch attitude and airspeed
- Apply aileron as required to maintain bank attitude while correcting underbanking tendencies
- Apply rudder as required to maintain coordinated constant rate turn
- Continue lookout and monitor outside references and instruments



Recovering a Descending Turn





- Continue to lookout observing references during recovery
- Recovery order depends on achieved target (heading or altitude) and may require simultaneous control inputs
- Anticipate turn recovery to establish desired heading half bank angle
- Anticipate climb recovery to establish desired altitude 10% VSI
- Remain coordinated using rudder and use PAT to recover climb

Steep Turns






- Steep turns beyond 30° bank angle
- Evasive actions and collision avoidance (consider climbs and descents), canyon turns, steep descending turns
- Control coordination practice
- Higher load factor, stall speed and required power

Performing a Steep Level Turn

- Initiate steep level turn like medium level turn
- Increase power slightly beyond 30° bank angle to maintain safe airspeed above increased stall speed
- Correct as required to maintain pitch and bank attitude
- Remain coordinated and correct overbanking tendencies
- Left and right turns require different control inputs
- Reduce power smoothly during recovery
- Transition from left to right requires smooth control and power adjustments

Minimum Radius Turn - Entry Speeds

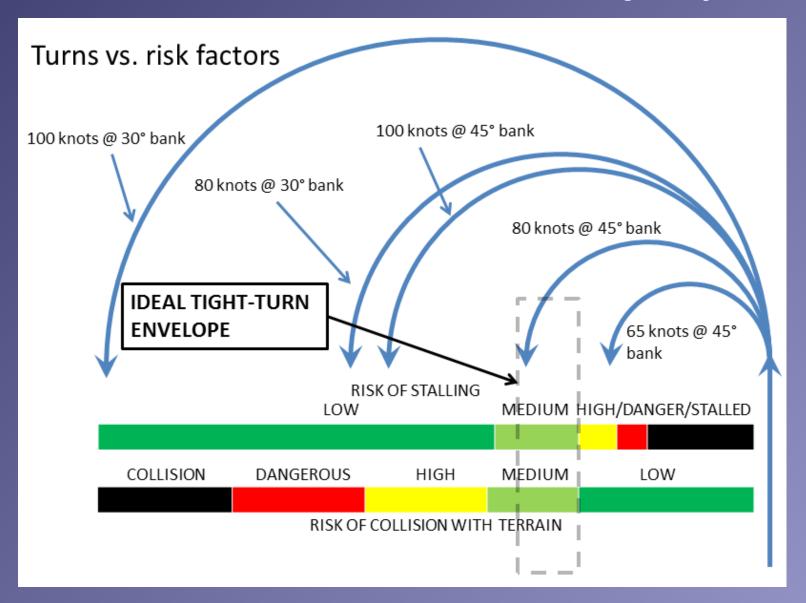

Performing a Safe Radius Turn

- Perform lookout before safe radius turn
- Consider wind for minimum radius over ground
- Operational use of power and configuration
- Slow down to safe airspeed (Ve = 80 KIAS >= Vy = 74 KIAS) and extend flaps to 10° (partial flaps)
- Establish a coordinated steep level turn adding power as required to maintain safe airspeed
- Recover and accelerate to cruise airspeed
- Retract flaps conservatively at the top of white arc

Performing a Minimum Radius Turn

- Perform lookout before minimum radius turn
- Consider wind for minimum radius over ground
- Operational use of power and configuration
- Slow down to minimum airspeed (Ve = 60 KIAS) and extend flaps in stages to 30° (full flaps)
- Establish a coordinated steep level turn adding full power to maintain minimum airspeed
- Recover and accelerate to cruise airspeed
- Retract flaps to 10° immediately and to 0° conservatively at the top of white arc

Performing a Steep Descending Turn

- Perform lookout before steep descending turn
- Reduce power to idle maintaining safe airspeed (Ve = 70 KIAS >= 68 KIAS (best glide))
- Initiate steep descending turn like descending turn
- Operational / situational use of configuration (clean flaps)
- Correct as necessary to maintain pitch and bank attitude
- Remain coordinated and correct underbanking tendencies
- Avoid spiral dive and monitor safe airspeed
- Recover like descending turn adding power first PAT

Summary / Quiz

- Mentally perform a coordinated climbing (2000' to 3000') medium (30° bank angle) turn to the right (270° to 090°) describing all required actions.
- Mentally perform a coordinated descending (3000' to 2800') gentle (15° bank angle) turn to the left (090° to 270°) describing all required actions.
- Mentally perform a *coordinated* **steep** (45° bank angle) **level turn** to the left (090° to 270°) describing all required actions.


Pre-Flight Briefing

- Exercise
- Training Area
- Departure and Arrival Procedures
- Weather Briefing / NOTAMs
- Aircraft and Documents
- Time and Fuel Requirements
- Safety Considerations and Responsibilities


Additional Materials

- Additional materials for turns
- Flight Instructor Guide Exercise 9, Lesson Plans 2, 7, 8

Climbing Turn – Overbanking

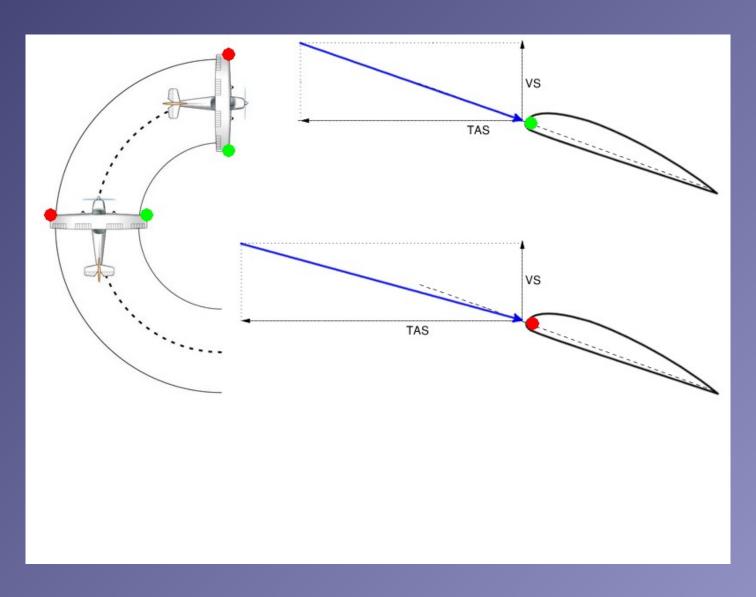

Descending Turn – Underbanking

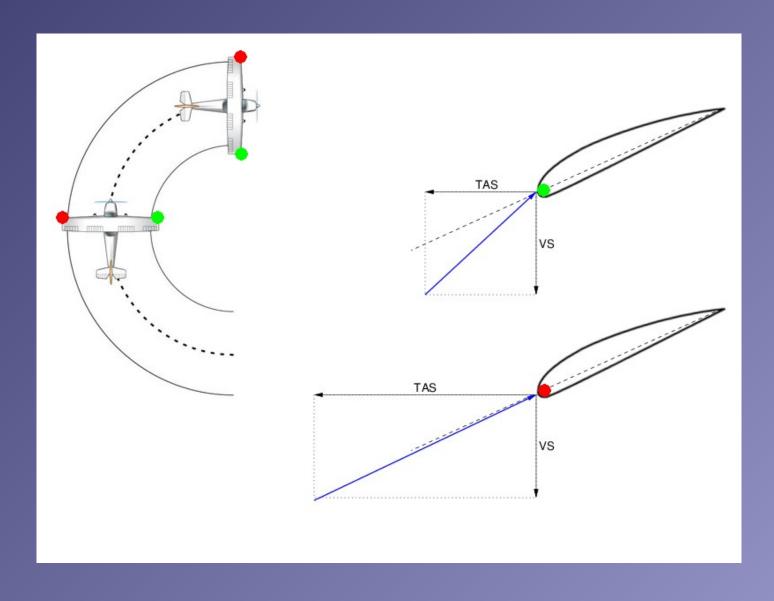

Turn Factors

Turn Facts and Factors

- At a constant TAS, increasing the bank decreases the turn radius and increases the rate of turn.
- To maintain a constant rate of turn, more speed requires more bank.
- At a constant bank angle, increasing speed increases the turn radius and decreases the rate of turn.
- A steeper bank angle reduces radius and increases rate of turn, but produces a higher load factor.
- Load factor is directly related to bank angle, so the load factor for a given angle is the same at any speed.
- Reducing TAS reduces turn radius and increases rate of turn without increasing the load factor.
- A given TAS will give a specific rate and radius of turn in any aeroplane.
- If TAS is doubled at constant bank, radius is quadrupled.
- If TAS is doubled at constant bank, rate of turn is halved.

Old Rate of Turn =
$$\frac{V}{Radius}$$
 New Rate of

New Rate of Turn = $\frac{V \times 2}{\text{Radius} \times 4}$ = $\frac{1}{2}$ old rate

Radius and Rate of Turn Relationship

- Bank
- Load Factor
- TAS

Circle Circumference $C = 2\pi r = \pi d$ Derive standard turn radius with given TAS Assumption: no wind