WISOL / SFM11R2D P/N: WSSFM11R2DAT

DATA SHEET Rev.05





WISOL

531-7, Gajang-ro,Osan-si,Gyeonggi-do Rep. of Korea

http://www.wisol.co.kr

Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

▶ CONTENTS

1. Approval Revision Record	3
2. Scope	4
3. Numbering of product	4
3-1. Product	4
3-2. Part No	4
3-3. Lot. No	5
4. Absolute Maximum Ratings	6
5. DC Characteristics	6
6. I/O Specifications	6
7. RF Specifications	7
8. Pin Description	8
8-1. Interface PIN(SMD Type: 31 Pin)_Bottom view	8
8-2. Interface PIN description	9
9. Block Diagram	10
10. Dimensions & drawing	11
10-1. Design dimension	11
10-2. Soldering Footprint	12
11. Reflow profile	13
12. Package	14
12-1. Dimension of Tape	14
12-2. Dimension of Reel	14
12-3. IN BOX	15
12-4. OUT BOX	15
12-5. Reel Label & Inner BOX Label	16
12-6. OUT BOX Label	17
13. Power Modes	18
13-1. RC2 Power Mode	18
TX current test	18
RX current test	18
Sleep current test	19
Deep sleep current test	19
13-2. RC4 Power Mode	19
TX current test	19
RX current test	19
Sleep current test	20
Deep sleep current test	20
14. AT command for Region change	
14-1. RC2 -> RC4	21
14-2. RC4 -> RC2	21



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

1. Approval Revision Record

NO	REASON	RECORD OF REVISION	Date	Remark
1	REV00	WSSFM10R2DAT Approval Releases	2017-04-11	-
2	REV01	BOX Label design added	2017-07-09	
3	REV02	FCC completed.	2017-09-08	
4	REV03	Marking changed(ANATEL No. added.)	2018-05-08	
5	REV04	Marking changed(IFETEL No. added.)	2018-06-29	
6	REV05	'ESD Warning' added.	2018-07-02	



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

2. Scope

Description: Sigfox Module RC2&RC4

Type : SMD Type


PCBA Size: 13mm(W) x 20mm(L) x 2.21mm(H)

This module is SIGFOX verified and that the FCC,IC,ANATEL, IFETEL are completed.

3. Numbering of product

3-1. Product



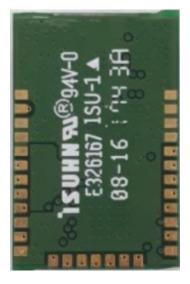

3-2. Part No.

W	S	S	F	M	1	1	R	2D	Α	Т
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)

No.	EXPLANATION				
(1),(2)	WISOL				
(3),(4)	Application (SF:Sigfox)				
(5)	Type (M:Module)				
(6),(7)	Group model numbering				
(8), (9)	Region Code(R2D: US&AU)				
(10),(11)	Application Type(Firm Ware Type) AT(AT command version) AP(API version)				



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

3-3. Lot. No.

S	A	С	J	A	1	1	0	1
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)

1	Sigfox M	Sigfox Module											
2		eture Are eking Lo		A Kore			B	V	C /ietnam				
3	Year Year Mark	2010 W	2011 X	2012 Y	201: Z		14 2	2015 B	2016 C	2017 D	2018 E	2019 F	
4	Month Month Mark	1 A	2 B	3 C	4 D	5 E	6 F	7 G		9	10 J	11 K	12 L
(5)	Day Day Mark Day Mark Day Mark Day Mark	1 1 1 B 21 L	2 2 12 C 22 M	3 3 13 D 23 N	4 4 14 E 24 O	5 5 15 F 25	6 6 16 G 26 Q	7 7 11 H	8 7 18 1 1 7 28	9 9 19 J 29	10 A 20 K 30 U	31 V	
67	Model Serial Number (10,11,12,13)												
89	A Serial	Numbe	r (1se	rial: 900	ea)								



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

4. Absolute Maximum Ratings

Symbol	Parameter	Rating	Unit
VCC	Module input voltage	0 to 4.2	V
ОТ	Operating Temperature	-30 to +85	℃
ST	Storage Temperature	-40 to +125	℃

5. DC Characteristics

Symbol	Parameter	Min	Тур.	Max	Unit
VCC	Module input voltage	2.7	3.3	3.6	V
	Tx Current(@ +22.5dBm, MOD)	-	170	-	mA
Current	Rx Current	-	32	-	mA
	Sleep Current Deep Sleep Current		2.3 0.17		uA

6. I/O Specifications

Symbol	Parameter	Min	Тур.	Max	Unit
VIH	High level input voltage @VCC=3.3V	2.0			V
VIL	Low level input voltage @VCC=3.3V			0.8	V



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

7. RF Specifications

Conditions: VCC=3.3V, Temp=25°C


Para	meter		Min	Тур.	Max	Unit
RF Characteristics						
	RC2	Tx		902.2		MHz
DE Fraguency	KC2	Rx		905.2		MHz
RF Frequency	RC4	Tx		920.8		MHz
	KC4	Rx		922.3		MHz
Tx output power(at "24"	' setting)		-	22.5	-	dBm
Frequency Error Tolera	ınce(+25°C)		-2.5	-	+2.5	ppm
2 nd Harmonics(conduct	ed)		-	-44	-	dBm
3 nd Harmonics(conducted)			ı	-47	-	dBm
Rx Sensitivity(@600bps, GFSK)			-	-129	-	dBm
Rx Spurious Emission(30MHz~12.	75GHz)			-54	dBm



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

8. Pin Description

8-1. Interface PIN(SMD Type: 31 Pin)_Bottom view

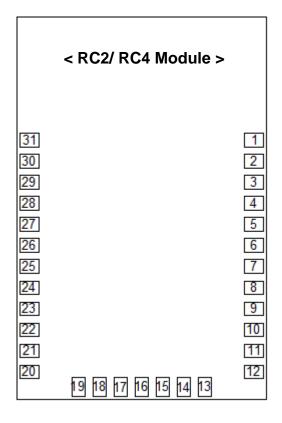

1	GND	9	GPIO5	17	TXLED/ DBG_CLK	25	GPIO2
2	GND	10	GPIO4	18	NC4/DBG_EN	26	GPIO3
3	GND	11	CPU_LED	19	RST_N	27	GND
4	GND	12	RADIO_LED	20	GND	28	GND
5	NC3/ SYSCLK	13	GPIO9	21	VDD_IO	29	GND
6	GPIO8	14	UARTTX	22	GND	30	RF_IO
7	GPIO7	15	UARTRX	23	GPIO0	31	GND
8	GPIO6	16	RXLED/ DBG_DATA	24	GPIO1		

[#] Pin-map of RCZ1, RCZ2, RCZ3 and RCZ4 module is compatible (Pin to Pin)



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

8-2. Interface PIN description

PIN(s)	NAME	TYPE	Description
1~4	GND	Р	Ground
5	NC3/SYSCLK	N	Do not connect
6	GPIO8	I/O/PU	General purpose IO
7	GPIO7	I/O/PU	General purpose IO, selectable SPI functionality (MISO)
8	GPIO6	I/O/PU	General purpose IO, selectable SPI functionality (MOSI)
9	GPIO5	I/O/PU	General purpose IO, selectable SPI functionality (SCK)
10	GPIO4	I/O/PU	General purpose IO, selectable $\sum \Delta$ DAC functionality, selectable dock functionality
11	CPU_LED	0	CPU activity indicator
12	RADIO_LED	0	Radio activity indicator
13	GPIO9	I/O/PU	General purpose IO, wakeup from deep sleep
14	UARTTX	0	UART transmit
15	UARTRX	I/PU	UART receive
16	RXLED/DBG_DATA	0	Receive activity indicator
17	TXLED/DBG_CLK	0	Transmit activity indicator
18	NC4/DBG_EN	PD	Do not connect
19	RST_N	I/PU	Optional reset pin
20	GND	Р	Ground
21	VDD_IO	Р	Power supply
22	GND	Р	Ground
23	GPIO0	I/O/A/PU	General purpose IO, selectable ADC functionality, selectable $\Sigma\Delta$ DAC functionality, selectable clock functionality
24	GPIO1	I/O/A/PU	General purpose IO, selectable ADC functionality
25	GPIO2*	I/O/A/PU	General purpose IO, selectable ADC functionality
26	GPIO3**	I/O/A/PU	General purpose IO, selectable ADC functionality
27	GND	Р	Ground
28~29	GND	Р	Ground
30	RF_IO	A	RF input/output
31	GND	Р	Ground


^{*} GPIO2 is TX_EN pin of FEM. This pin can not be used by the user.

^{**} GPIO3 is RX_EN pin of FEM. This pin can not be used by the user.



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

9. Block Diagram

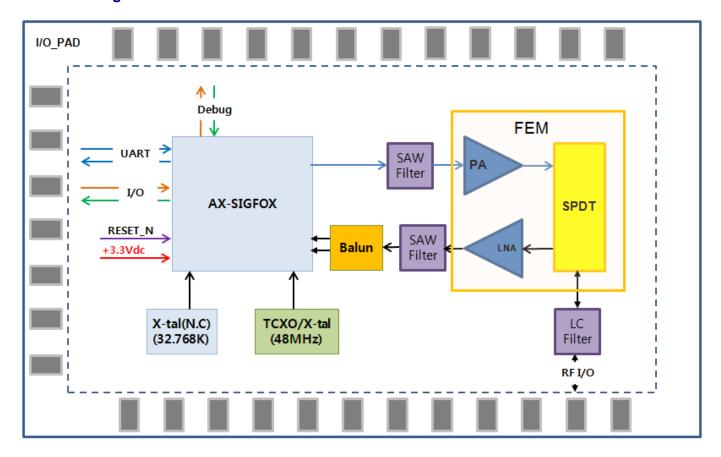




Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

10. Dimensions & drawing


10-1. Design dimension

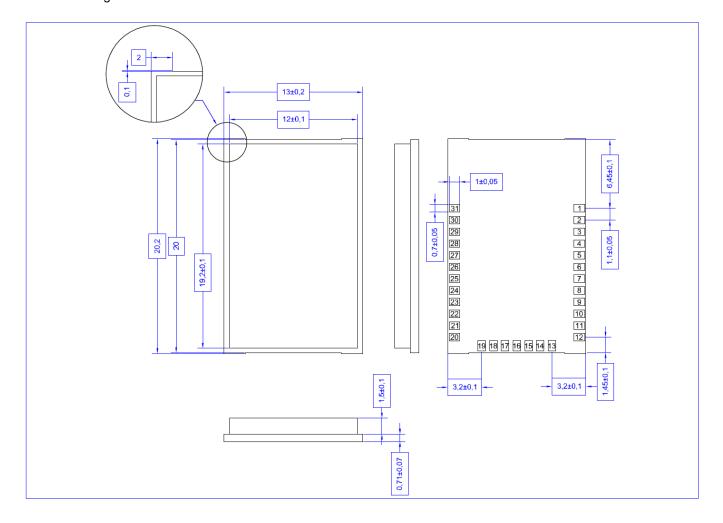



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

10-2. Soldering Footprint

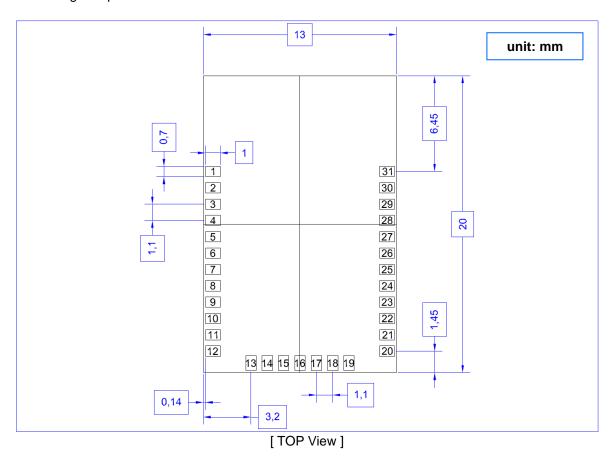




Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

11. Reflow profile

<Reflow profile of Module>

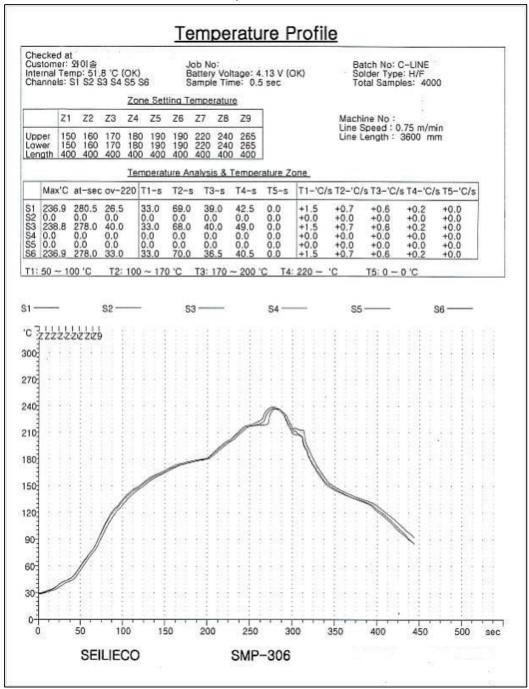


SPEC	Preheat	Soak	Ramp	PEAK
	50~100℃	100~170°C	220℃ ↑	240°C
	1~2°C/sec	60~100sec	30~50sec	±5℃
result of measurement	1.5	69	44	237.5
	ОК	OK	OK	ОК




Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

12. Package

12-1. Dimension of Tape

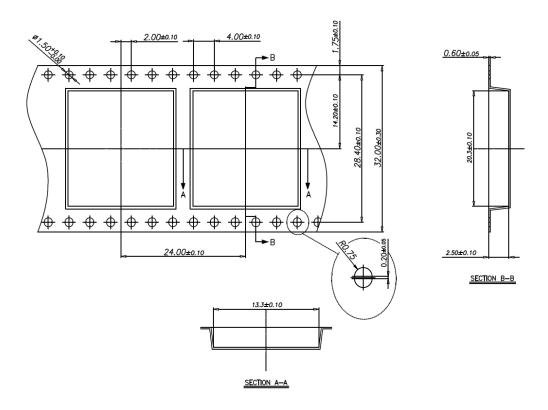


12-2. Dimension of Reel

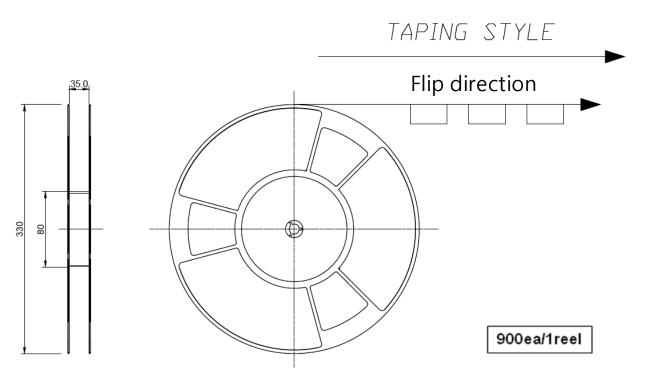




Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

12-3. IN BOX

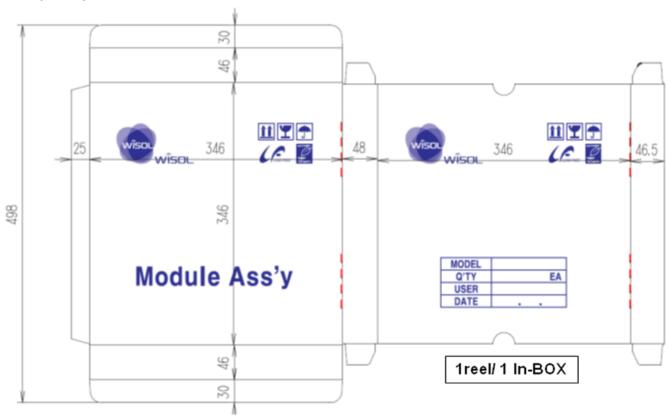

12-4. OUT BOX

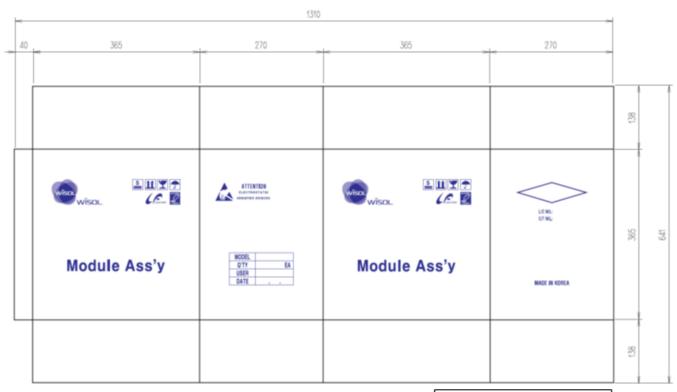


5 In-BOX/ 1 Out-BOX




Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

12-5. Reel Label & Inner BOX Label

- HQ -

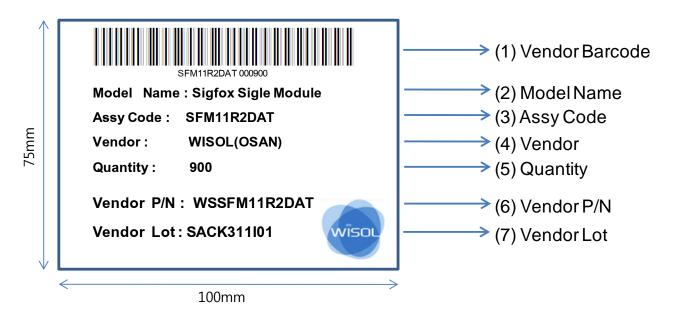

- WHC -

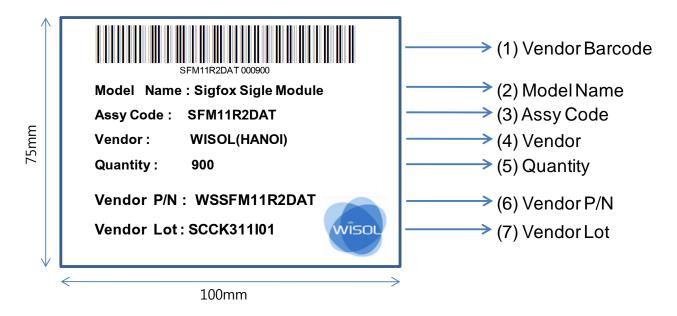





Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

12-6. OUT BOX Label

- HQ -

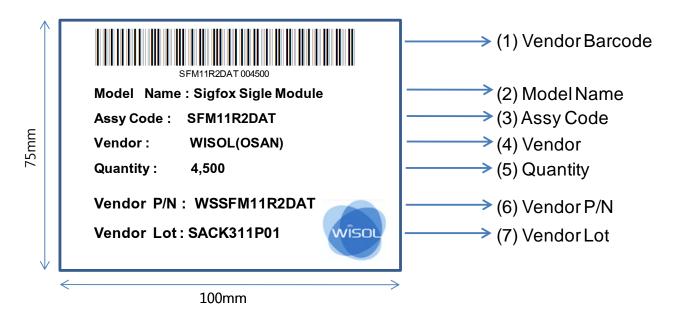


- WHC -

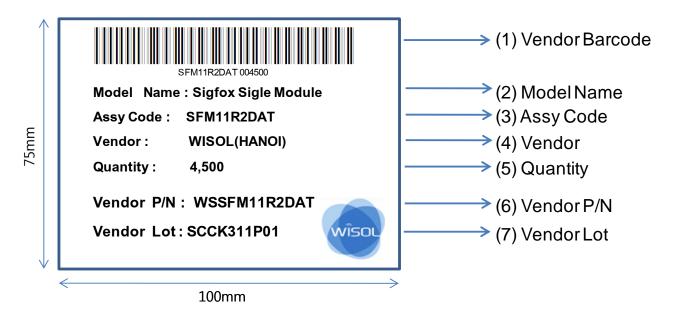



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

13. Power Modes

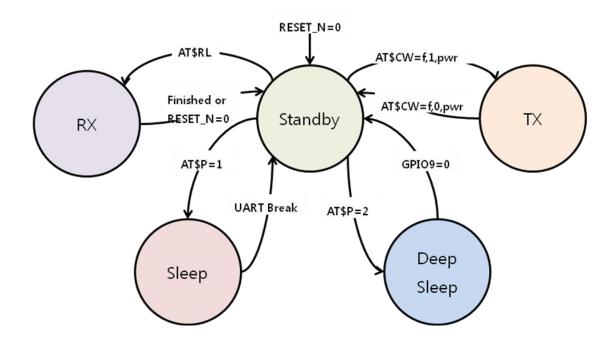

13-1. RC2 Power Mode

TX current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. TX current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Click the Quick command (MOD US ON : default power table '24') or Input AT command 'AT\$CW=902200000,1,24' and then click 'Send' icon.
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check TX current

RX current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. RX current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Input AT command 'AT\$RL' and then click 'Send' icon.
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check RX current.

Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

Sleep current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. Sleep current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Input AT command 'AT\$P=1' (sleep mode command)
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check Sleep current

Deep sleep current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. Deep sleep current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Input AT command 'AT\$P=2' (Deep sleep mode command)
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check Deep sleep current
 - 5) If the module wakes up, Push the tact switch(SW2: wakeup PIN)

13-2. RC4 Power Mode

TX current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. TX current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Click the Quick command (MOD RCZ4 ON : default power table '24') or Input AT command 'AT\$IF=920800000' click 'Send' icon and then input AT command 'AT\$CB=-1,1' click 'Send' icon.
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check TX current

RX current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. RX current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Input AT command 'AT\$RL' and then click 'Send' icon.
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check RX current.

Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

Sleep current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. Sleep current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Input AT command 'AT\$P=1' (sleep mode command)
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check Sleep current

Deep sleep current test

- 1. Disconnect Debug Switch(SW5~SW9) on EVB
- 2. Connect UART Switch(SW10~SW11) on EVB
- 3. Power switch ON(SW4) on EVB
- 4. Push the RESET Switch(SW1) on EVB
- 5. Initial mode=Standby mode (@500uA/ Remove J2-CPULED jumper)
- 6. Deep sleep current test method
 - 1) Input AT command 'AT' (UART condition checking)
 - 2) Input AT command 'AT\$P=2' (Deep sleep mode command)
 - 3) Disconnect UART Switch(SW10~SW11) on EVB
 - 4) And then, Check Deep sleep current
 - 5) If the module wakes up, Push the tact switch(SW2: wakeup PIN)



Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

14. AT command for Region change

14-1. RC2 -> RC4

- 1. AT\$DR=922300000
- 2. ATS400=<00000000><F0000000><0000001F>,63
- 3. AT\$WR
- 4. AT\$RC

14-2. RC4 -> RC2

- 1. AT\$DR=905200000
- 2. ATS400=<000001FF><00000000><00000000>,1
- 3. AT\$WR
- 4. AT\$RC

Sigfox / Sub-1GHz 13mm x 20mm x 2.21mm Version: 05

ESD Warning



This modules are ESD sensitive devices, appropriate precautions should be taken during the module assembly in the final product.

Mechanical impact and harsh tools must be avoided during the module assembly in the final product.

Product ESD specification:

• HBM ±2kV

The following precautions must be taken:


 Do not open the protective conductive packaging until you have use the following, and are at an approved anti-static work station.





 Use a conductive wrist strap attached to a good earth ground.

- If working on a prototyping board, use a soldering iron or station that is marked as ESD-safe.
- If possible, use SMT equipment(reflow) when making prototype boards.
- Use an approved anti-static mat to cover your work surface.

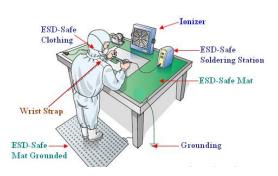



 Always discharge yourself by touching a grounded bare metal surface or approved anti-static mat before picking up an ESD - sensitive electronic component.