
Motor Control Blockset™

Sensorless Field-Oriented Control (FOC) of PMSM Using Microchip's dsPICDEM™ MCLV-2 Development Board (32-bit)



MATLAB®

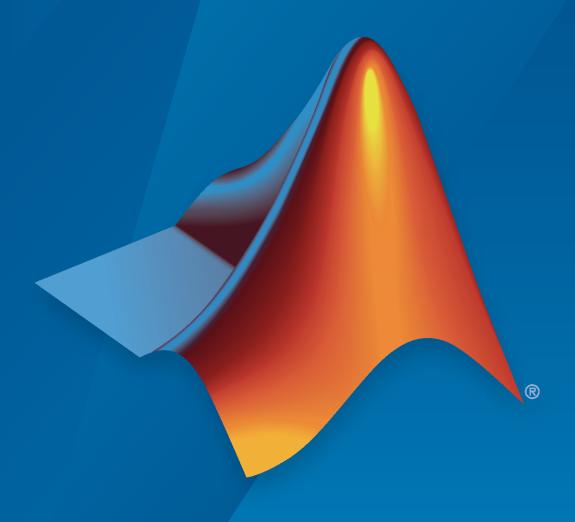

How to Contact MathWorks



Latest news: www.mathworks.com

Sales and services: www.mathworks.com/sales_and_services

User community: www.mathworks.com/matlabcentral

Technical support: www.mathworks.com/support/contact_us

T

Phone: 508-647-7000



The MathWorks, Inc. 1 Apple Hill Drive Natick, MA 01760-2098

Motor Control Blockset[™] (Nonrelease)

© COPYRIGHT 2022 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

 $MathWorks\ products\ are\ protected\ by\ one\ or\ more\ U.S.\ patents.\ Please\ see\ www.mathworks.com/patents\ for\ more\ information.$

Revision History

July 2022 First printing "Release for R2022a"

Contents

About This Exam	nple
Introduction	1-2
Hardware Requirements	1-3
Required MathWorks Products	1-4 1-4 1-4
Hardware Setup	1-5
Contents of Downloaded ZIP Folder	1-7
Sensorless Field Oriented Control of PMSM using Micro Hardy	_
Simulate Target Model	2-2
Generate Code and Deploy Model to Target Hardware	2-4
Varification Test	2-6

About This Example

- "Introduction" on page 1-2
- "Hardware Requirements" on page 1-3
- "Software Requirements" on page 1-4
- "Hardware Setup" on page 1-5
- "Contents of Downloaded ZIP Folder" on page 1-7

Introduction

This example implements field-oriented control (FOC) technique to control the speed of a three-phase permanent magnet synchronous motor (PMSM). The example uses sliding mode observer sensorless technique to estimate the rotor position.

The motor control algorithm runs on Microchip dsPICDEM™ MCLV-2 Development Board. This board provides a cost-effective solution to develop and evaluate either 3-phase sensor-based or 3-phase sensorless Brushless DC (BLDC) and PMSM control applications. It also supports Microchip's 100-pin motor control Plug-In-Modules (PIMs) with these controllers:

- dsPIC33C, dsPIC33E, and dsPIC33F Digital Signal Controllers (DSCs)
- PIC32MK, ATSAME7x, ATSAME5x, and ATSAMC2x controller families

The board supports usage of internal on-chip op-amps found on certain dsPIC® or PIC32MK devices and the external op-amps provided on the MCLV-2 board. For more details about the hardware, see $dsPICDEM^{TM}$ MCLV-2 Development Board (DM330021-2).

Hardware Requirements

This section lists the hardware requirements to run the example:

- **1** MCLV-2 Development Board (DM330021-2)
- 2 ATSAME70Q21 Motor Control Plug-In-Module (MA320203) with EXTERNAL op-amp matrix board
- 3 ICD 4 In-Circuit Debugger (DV164045) or PICkit 4 In-Circuit Debugger (PG164140)
- **4** Debugger Adapter Board for MPLAB ICD4 (AC102015) (required only if you use ICD4 as a debugger)
- **5** 24V Power Supply (AC002013)
- 6 24V 3-Phase Brushless DC Permanent Magnet Motor Hurst motor (AC300022)
- 7 FTDI cable / FT232RL FTDI USB to UART

Software Requirements

This section lists the software products from MathWorks® and Microchip that you need to simulate and run the example models on the dsPICDEM™ MCLV-2 Development Board.

Required MathWorks Products

To simulate the example model:

- · Motor Control Blockset
- Stateflow®

To generate code and deploy the example model:

- · Motor Control Blockset
- Embedded Coder®
- Simulink® Coder™
- MATLAB® Coder

Required Microchip Products

- MPLAB X IDE and IPE (v5.5 or later)
- XC32 compiler (v4.0 or later)
- MPLAB Device Blocks for Simulink Toolbox

Hardware Setup


Follow these instructions to setup the hardware:

1 Connect the ATSAME70Q21 Plug-In-Module (PIM) and External Op-Amp matrix board to the MCLV-2 motor control board.





2 Keep the jumper connections of JP1, JP2, and JP3 at Curr position.

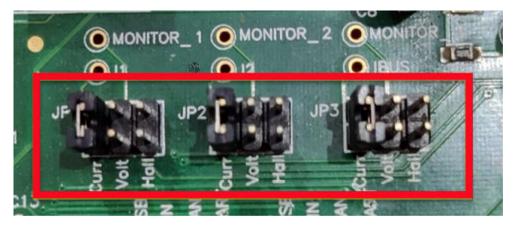

3 The following image describes the Hurst Motor phase current connections.

Note The connection sequence of 3-phase wires is irrelevant for sensorless algorithm.



Connect the 24V power supply to the MCLV2 board.



Connect the ICD 4 and adaptor board to ATSAME70Q21 PIM on the MCLV2 board.



Contents of Downloaded ZIP Folder

The ZIP folder that you downloaded from the GitHub® repository, includes:

File Name	Description
<pre>mcb_microchip_pmsm_foc_s ensorless_SAME70.slx</pre>	Target model
<pre>mcb_microchip_pmsm_foc_s ensorless_SAME70_data.m</pre>	Target model initialization script
mcb_microchip_host_SAME7 0.slx	Host model
Sensorless_FOC_Hardware _Test_Procedure_SAME70.p df	Documentation


Sensorless Field Oriented Control of PMSM using Microchip Hardware

- "Simulate Target Model" on page 2-2
- "Generate Code and Deploy Model to Target Hardware" on page 2-4
- "Verification Test" on page 2-6


Simulate Target Model

This example supports simulation. Follow these steps to simulate the target model.


1 Open the target model mcb_microchip_pmsm_foc_sensorless_SAME70.slx included in this workflow.

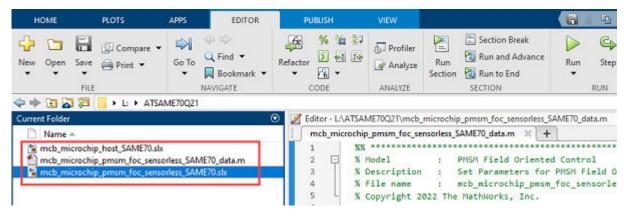

2 Click **Run** on the **Simulation** tab to simulate the model.

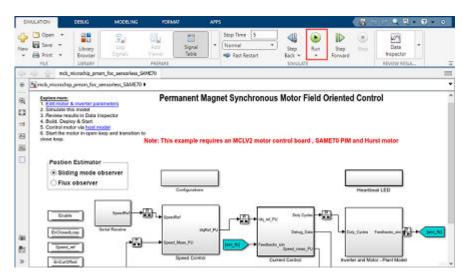

3 Click **Data Inspector** on the **Simulation** tab to view and analyze the simulation results.

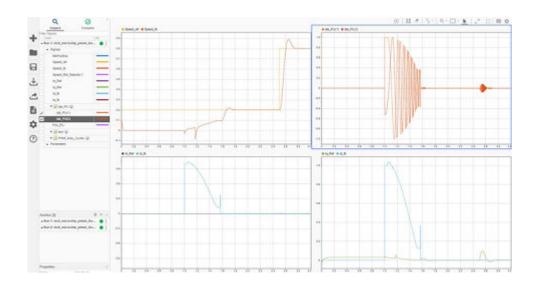

Generate Code and Deploy Model to Target Hardware

This section explains how to generate code and run the FOC algorithm on the target hardware.

Follow these steps to deploy and run the target model on the dsPICDEM $^{\text{m}}$ MCLV-2 Development Board kit.


- **1** Simulate the target model and observe the simulation results.
- 2 Connect the dsPICDEM™ MCLV-2 Development Board kit to the host computer through a serial port.
- 3 Click the **Edit motor & inverter parameters** hyperlink available in the target model to open the target model initialization script. You can also use this command to open the initialization script.

```
edit mcb microchip pmsm foc sensorless SAME70 data.m
```

4 Verify and edit the motor and inverter parameters that are pre-configured in the model initialization script mcb microchip pmsm foc sensorless SAME70 data.m.

For instructions to configure the script, see Estimate Control Gains from Motor Parameters.

To run the real PMSM motor, navigate to the **Microchip** tab and enable the tabs shown in the following figure. This enables you to select the programmer and then build and flashes code to the microcontroller.

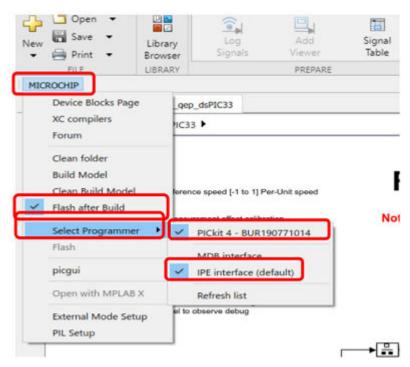

6 Click **Apps** tab and then click **Embedded Coder**.




7 The C Code tab appears on the menu bar. Click C Code > Build to build, generate, and flash the code.




- **8** The system starts generating the code and opens the **Diagnostics Viewer** window. After few seconds, a notification window opens.
- 9 After code generation completes, the system flashes the code to dsPIC through the programmer. After flashing process completes the system displays **Operation Succeeded** message on the **Diagnostics Viewer**.

Verification Test


- 1 Check if the debug LED **D2** is blinking. A blinking LED **D2** confirms that the target device is successfully programmed.
- 2 Open the host model mcb_microchip_host_SAME70.slx.
- 3 In the host model, open these blocks and select a **Port**.
 - mcb microchip host SAME70/Host Serial Setup

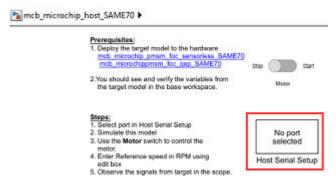


• mcb microchip host SAME70/Serial Communication/Host Serial Receive

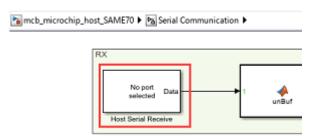

 mcb_microchip_host_SAME70/Serial Communication/Send With Delays/Subsystem/Host Serial Transmit

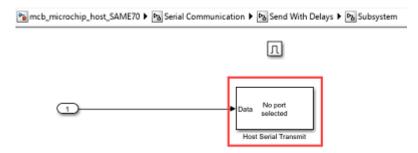

4 Click **Run** on the **Simulation** tab to run the host model.

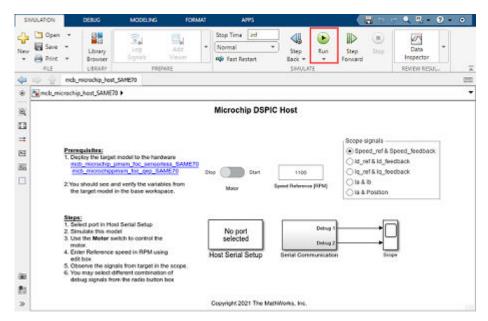

- 5 Update the **Speed Reference (RPM)** value in the host model.
- **6** Use the **Motor switch** available in the host model to start running the motor.
- 7 Use the **Scope** available in the host model to view the debug signals received from the target model running the motor.
- **8** You can select and view a different combination of debug signals using the **Scope** signals section of the host model. Use the **Motor** switch to stop the motor.