1 What CanzeRead is for

CanzeRead program (or CanzeLogRead, as is currently named on Github), has the purpose of interpret CanZE-created log files, and create from text files that can be easily read through spreadsheets, text editors and plotting files. These text files are a straightforward structure (see later) and "ADF" extension (stands for Ascii Data File"). They can read and interpreted "as are", by the following plotting and post-processing program:

http://ceraolo-plotxy.ing.unipi.it/default.htm

which was used to make the pictures shown in this document.

Because CanZE logs contain samples having a different timestamp each, the better way to store curves and prepare them for further visualization and post-processing, appears creating individual text files for individual variables.

Time in each CanZE log row is constituted by a huge string containing year, month, day, hour, minute, and seconds (with milliseconds).

It is believed that the best way to make plots is as having on the abscissa the elapsed time from trip inception.

Names of the different variables stored by CanZE can be, in some cases, very long, and contain spaces; therefore, they are not very adequate as variable names for plotting.

Therefore CanzeRead uses short names for different variables, as follows:

- In case no specific information is present (see next dots), the short name is equal to the variable code for instance variable coded as 793.622001.24, which corresponds to "Mains phase 1 current RMS value" takes as short name 793.622001.24;
- For some special classes of names, which refer to many variables each: cell voltages, cell temperatures, balance switches, short names are internally defined by the program. For instance, cell voltages are vCell01, vCell02, ..., cell temperatures tempCell01, tempCell02, ... balance switches are balanceSwitch01, balanceSwitch02, etc.
- Users can override any short name automatically defined by the program as per the previous two points, providing customised short names in a text file, which, to be read, must be located in the same folder in which the log file to be interpreted resides.
- ShortNames.txt can be evaluated also after the log file has been loaded, dropping it (from whatever folder) on the program window.

This is a simple example of file **ShortNames.txt** (four rows):


7ec.623203.24 vBatHV 7ec.623204.24 iBatHV 7ec.622002.24 batSOC 793.62504a.24 pMains

2 Usage

The program usage is rather straightforward: it is sufficient to run it, and drop on it the CanZE log file to be read. CanzeRead will display the variables read from the file, in three ways: code, short name, long name. The user can select all of them or part of them to be used to create output files.

The output file names will contain date info from the log file, plus the variable short name.

Below an example of the program screen, before and after having dropped the file "trip 12.11.log" on it:

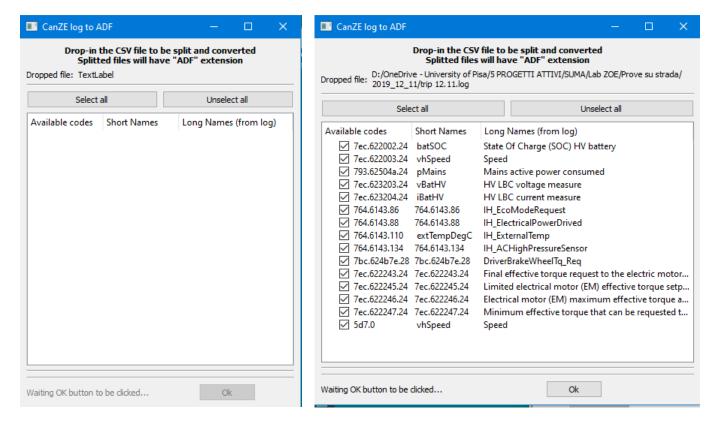

The first few rows of the log file are as follows:

```
Datetime, SID, Name, Value, Unit 20191211154043903, 7ec.622002.24, State Of Charge (SOC) HV battery, 79.04, % 20191211154043926, 7ec.622002.24, State Of Charge (SOC) HV battery, 79.04, % 20191211154044382, 7ec.622003.24, Speed, 0.00, km/h 20191211154044810, 793.62504a.24, Mains active power consumed, 0, W 20191211154044825, 793.62504a.24, Mains active power consumed, 0, W 20191211154044828, 793.62504a.24, Mains active power consumed, 0, W 20191211154045349, 7ec.623203.24, HV LBC voltage measure, 378.5, V 20191211154045363, 7ec.623203.24, HV LBC voltage measure, 378.5, V 20191211154045749, 7ec.623204.24, HV LBC current measure, -0.8, A 20191211154045760, 7ec.623204.24, HV LBC current measure, -0.8, A
```

The first rows of two created files are as follows (separator between the two columns is a tab "\t" character).

First rows of file "trip 12.11_batSOC.ADF":

```
//2019-12-11; 15:40 Long name: "State Of Charge (SOC) HV battery"
t batSOC
0 79.04
0.023 79.04
5.97 79.04
5.985 79.04
11.008 79.04
```

First rows of file "trip 12.11_7bc.624b7e.28.ADF"

```
//2019-12-11; 15:40 Long name: "DriverBrakeWheelTq_Req" t 7bc.624b7e.28 3.071 3034 8.731 3056 13.814 527 20.87 2 25.469 2
```

2.1 Special case: GPS data

Only in the case of GPS, CanZE writes three numbers within the same timestamp. For instance A possible output row is:

```
20191206160526974,800.610e.24,GPS,51.04594574/11.74158/407.0,
```

where we have, combined, latitude, longitude and elevation:

```
51.04594574 deg, 11.74158 deg, 407.0 m.
```

In these cases the three values can be put in the same file, and canzeRead does this. For instance, the log:

```
Datetime, SID, Name, Value, Unit 20191230124615215, 800.610e.24, GPS, 43.721136/10.390212/32.0, 20191230124620446, 800.610e.24, GPS, 43.721139/10.390262/23.0, 20191230124632161, 800.610e.24, GPS, 43.721073/10.390414/30.0, 20191230124637178, 800.610e.24, GPS, 43.720984/10.390575/46.0, 20191230124654198, 800.610e.24, GPS, 43.720941/10.390745/71.0,
```

becomes:

```
//2019-12-30; 12:46 Long name: "GPS" t latitude longitude elevation 4.568 43.721136 10.390212 32.0 9.799 43.721139 10.390262 23.0 21.514 43.721073 10.390414 30.0 26.531 43.720984 10.390575 46.0 43.551 43.720941 10.390745 71.0
```

3 Notes

Log files may be very long. However, the variables logged should appear in the first rows of the log file. Therefore, to avoid overheads, variable codes and names are searched in log files only in the first 1000 rows.

The software included in max-privato/CanzeLogRead Github repository has been created using Qt, and therefore should be easily compiled for Windows, Mac OS, Linux. The included executable file is a ready-to-use Windows executable.