How Loudspeaker Impulse Responses Become Sound Pressure Level (SPL) Plots:

The Good, the Bad, and the Ugly

Matthias S. Brennwald

Document version October 28, 2025

1 Introduction

Every loudspeaker designer or tinkerer wants to know how well their loudspeaker performs acoustically. Does it reproduce all frequencies evenly, or does it emphasise some and hide others? The answer lies in its SPL frequency response curve, which shows how loud the speaker is at each frequency.

Understanding and visualising the SPL response is central to almost every aspect of loudspeaker design and evaluation—from developing new drivers to characterising enclosures and interpreting room interactions. The goal seems simple: determine how a loudspeaker responds to different frequencies. The challenge lies in doing so accurately and efficiently, without (unintended) cheating.

An intuitive approach to determine the SPL curve of a loudspeaker would be to play a sine wave with a given frequency at a time, measure the resulting sound pressure level (SPL), repeat the process at the next frequency, and plot the SPL results across frequency. However, this method is very time-consuming and works reliably only in an anechoic environment, as room reflections and echoes can severely distort the measurement. Modern techniques achieve the same result in a single measurement step: they excite the loudspeaker with a short, broadband signal and use the Fourier transform to reveal the frequency response from the measured time-domain data.

This document introduces the concepts that link time-domain measurements (such as impulse responses) to frequency-domain data (such as SPL curves). It aims to provide a practical, intuitive explanation of what the Fourier transform does for loudspeaker measurements—and why understanding its limitations is just as important as applying it. Later sections explore both the strengths and the pitfalls of this process: the good, the bad, and occasionally the ugly.

2 Time domain vs. frequency domain: the Fourier transform

Consider a sound pressure signal evolving as a function of time, x(t). The signal is recorded by a microphone and digitized by an A/D converter with sampling rate F_s . As a result, we obtain N discrete samples $x_i = x(t_i)$ at times

$$t_i = (i-1) \times \tau, \qquad \tau = \frac{1}{F_s}, \quad i = 1, 2, \dots, N.$$

The idea of the Fourier transform is to describe each time-domain data point x_i as a combination of sine waves, each with amplitude A_j and phase φ_j , at discrete frequencies

$$f_j = \frac{F_s}{N}j, \quad j = 1, 2, \dots, M,$$

where M = (N - 1)/2 if N is odd, or M = N/2 - 1 if N is even.

The discrete Fourier expansion is then written as a system of N equations (i = 1 ... N):

For odd
$$N: \quad x_i = A_0 + \sum_{j=1}^M A_j \cos(2\pi f_j t_i + \varphi_j),$$
 (1)

For even
$$N: x_i = A_0 + \sum_{j=1}^{M} A_j \cos(2\pi f_j t_i + \varphi_j) + A_{N/2} \cos(\pi t_i / \tau).$$
 (2)

Each amplitude—phase pair (A_j, φ_j) represents one Fourier component at frequency $f_i = jF_s/N$. The A_0 coefficient is the DC component of the x_i data.

Note that the total number of coefficients A_j (including A_0) and φ_j together equals N, so the number of data points in the frequency domain is the same as in the time domain. The above equations therefore represent a fully determined system. The coefficients (A_j, φ_j) can be uniquely obtained from the measured samples x_i by solving this system, typically using efficient numerical algorithms such as the Fast Fourier Transform (FFT). Also, the Fourier transform is fully reversible. Given the frequency-domain data (A_j, φ_j) , the corresponding time-domain signal x_i can be reconstructed exactly using the above equations.

Overall, the time-domain data describe how the signal evolves over time, while the frequency-domain data represent the same signal in terms of its amplitude and phase distribution across frequencies. Both domains contain precisely the same information; they just provide different representations of the very same signal.

2.1 Periodic signals!

An important (but often overlooked) aspect of the discrete Fourier transform is that it implicitly assumes the signal to be periodic with period T = N. This follows directly from the use of cosine function in the above Fourier expansion, which is inherently periodic. The representation of the discrete time-domain data x_i as a sum of cosines implies that this signal repeats indefinitely for t < 0 and t > T. However, in many practical cases

the measured signal is not actually periodic (e.g., the impulse response discussed in Sec. 3. This assumption is not inherently a problem, but it does have consequences: if the start and end points of the time-domain data are not at the same amplitude, the implied periodic continuation introduces an artificial discontinuity at the boundary between repetitions. In the frequency domain, this discontinuity appears as additional spectral content (spectral leakage).

2.2 Where did the other frequencies go?

In practice, most real-world signals are not composed of a finite set of perfectly aligned frequencies f_j . Instead, their spectral energy almost always lies between the discrete frequencies sampled by the Fourier transform.

In the discrete Fourier transform, the available frequencies form equally spaced bins centered at the f_j , each with width $\Delta f = F_s/N = F_s \times \tau$. A signal whose frequency does not coincide with one of these discrete f_j values will have its energy distributed over multiple bins, a phenomenon known as spectral leakage. While the total energy of the signal remains conserved, leakage can cause sharp spectral features to appear broadened or blurred across multiple frequency bins.

Sampling also imposes two important frequency limits. The lowest frequency present in the discrete Fourier transform ($f_1 = F_s/N$) is determined by the total length of the digitized signal, $T = N \times \tau$. Because the bin width Δf equals f_1 , the signal duration also defines the frequency resolution of the time-domain data. The highest resolvable frequency ($f_M = F_s \times M/N$) is determined by the sampling rate: according to the Nyquist theorem, no frequency above $F_s/2$ can be represented in the digitized data. Any analog signal components above this limit will be folded back (or "aliased") to appear as spurious lower-frequency components in the sampled data.

3 The impulse response and its Fourier transform

Imagine a test signal that contains all frequencies at once, each with the same amplitude and zero phase; that is, $A_j = 1$ and $\varphi_j = 0$ for all j = 1, ..., M. The DC component is $A_0 = 1$ and, for even N, the Nyquist component is $A_{N/2} = 1$. When such a signal is converted from the frequency domain to the time domain, the result is a very short pulse at time t_1 and zero at all other times $t_{j=2...N}$ — a Dirac delta. In other words, an ideal Dirac pulse excites all frequencies simultaneously, with equal amplitude and phase.

If we now drive a loudspeaker with this impulse, the microphone records its acoustic output over time. The resulting waveform, h(t), is the impulse response, expressed in sound pressure (Pa) as a function of time. Because the input contains all frequencies equally, any variation in the measured response reflects how the loudspeaker modifies the amplitude and phase of those frequencies, revealing its deviation from a perfectly flat response.

The impulse response thus captures the complete acoustic behaviour of the loud-speaker (and the surrounding room): every resonance, reflection, and delay leaves its fingerprint in h(t). Early peaks correspond to the direct sound from the driver, later ripples often indicate cabinet or cone resonances, and delayed arrivals show reflections from walls or nearby objects.

4 The impulse response and its Fourier transform

Consider a test signal that contains all frequencies at once, each with the same amplitude and zero phase: $A_j = 1$ and $\varphi_j = 0$ for all j = 0. When such a spectrum is converted from the frequency domain to the time domain using the above Fourier expansion, the result is $x_1 = N$ and $x_{i=2...N} = 0$, the discrete analogue of a Dirac delta. In other words, an ideal delta pulse contains all frequencies simultaneously and with equal amplitude and zero phase.

If we now drive a loudspeaker with this impulse, the microphone records its acoustic output over time ((Fig. 1). The resulting waveform, h(t), is the impulse response, expressed in sound pressure (Pa) as a function of time (Fig. 1-B). Because the input contains all frequencies equally, any variation in the measured response reflects how the loudspeaker modifies the amplitude and phase of those frequencies—revealing its deviation from a perfectly flat, ideal response.¹

Imagine the measurement of the impulse response were carried out in an anechoic environment. The resulting impulse response would capture the complete acoustic behaviour of the loudspeaker (Fig. 1-B): 2 every resonance, reflection, and delay leaves its fingerprint in h(t). Early peaks correspond to the direct sound from the driver, and later ripples often indicate cabinet or cone resonances, which at some point dye off in the noise floor of the measurement.

In practice, however, measurements usually cannot be carried out in a perfectly anechoic environment. The sound radiated from the speaker gets reflected at the floor, the ceiling and the walls of the room, and furniture or other objects. These reflections show up in the measurement as small wiggles after the main peak of the direct sound from the speaker (Fig. 1-C).

5 From a real-world impulse response to its SPL curve: time gating (reality bites!)

We have seen how a single measurement of the impulse response contains everything needed to determine a loudspeaker's acoustic behaviour. But, before applying the Fourier transfor to the time-domain measurement, let's take a closer look at Fig. 1-C:

- The beginning of the impulse-response measurement (green, 0–3.08 ms) represents the flight time of the sound from the loudspeaker to the microphone and contains no useful information about the loudspeaker itself.
- The initial part of the impulse response (blue, 3.08–6.23 ms) shows the clean, direct sound from the loudspeaker.

¹In practice, a very large impulse is required to achieve a good signal-to-noise ratio of the measurement. Most measurement tools therefore do *not* use a Dirac impulse to determine the impulse-response, but rely on maximum-length sequences, broadband noise, or sine sweeps to excite the loudspeaker. The recorded loudspeaker response is the deconvolved from the test signal to obtain the impulse response. The result is the same as in our thought experiment, but with less measurement noise.

²These data were measured outdoors in an empty space, with the loudspeaker and the microphone elevated high above the ground to keep away sound reflections from the floor.

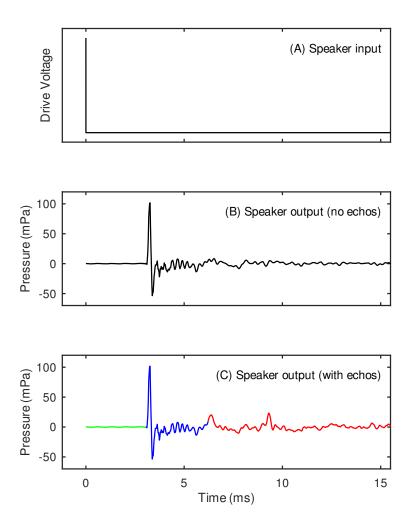


Figure 1: Loudspeaker impulse response. (A) The Dirac signal input to the loud-speaker, (B) loudspeaker impulse response in an anechoic environment (which is usually not accessible with a typical measurement setup), (C) impulse response of the same loudspeaker, but from a more typical measurement setup resulting in echos from the room walls.

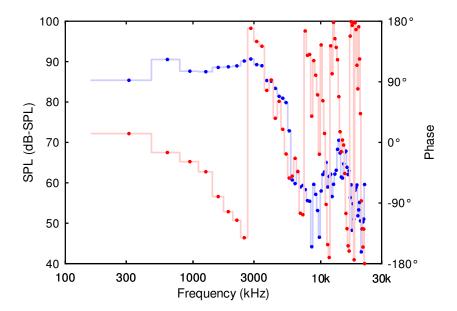


Figure 2: SPL data determined from the anechoic part of the impulse response in Fig. 1 (see text). The dots show the frequency-domain data (SPL(f_j) and φ_j). The stair steps indicate the frequency bin width (Δf), which is constant across the entire plot but appears distorted due to the logarithmic scaling of the frequency axis.

 After the arrival of the first echo at 6.23 ms, the direct signal becomes masked by reflections from the room. This echoic part of the signal (red) still contains the loudspeaker's output, but it can no longer be used to assess the loudspeaker's own behaviour.

Only the anechoic segment of the impulse response can therefore be used to characterise the loudspeaker's behaviour under anechoic conditions. The flight-time and echoic parts of the impulse-response measurement are discarded. In other words, the impulse response is gated to its anechoic part. The Fourier transform of this gated impulse response then yields the amplitude coefficients A_j , and hence the loudspeaker's clean, anechoic SPL data in units of dB-SPL is:

$$SPL(f_j) = 20 \log_{10} \left(\frac{A_j/\sqrt{2}}{p_{ref}} \right),$$

where $p_{ref} = 20 \,\mu\text{Pa}$ is the SPL reference pressure.

Fig. 2 shows the SPL data determined from the anechoic part of the impulse response shown in Fig. 1. The number of time-domain data points in the anechoic segment is N=140. The frequency-domain data contains the same number of data points, split between amplitude (A_j) and phase (φ_i) coefficients (see Sec. 2). The anechoic time-domain segment is $T=3.15\,\mathrm{ms}$ long, so the lowest frequency (f_1) and the width of the frequency bins (Δf) determined as $1/T\approx317\,\mathrm{Hz}$. The "rough" presentation of the SPL data in Fig. 2 may seem awkward, but it clearly exposes the limits of the method with respect to the low-frequency extension and frequency resolution (bin width) of the SPL data.

The following sections discuss some commonly used techniques used to tweak the anechoic data or to make it look prettier – but remember: *looks can be deceiving!*

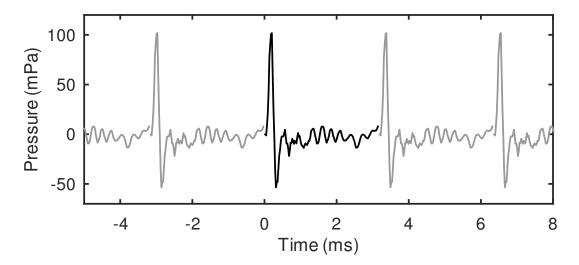


Figure 3: Periodic expansion (grey) of the gated impulse response (black) as implied by the discrete Fourier transform.

6 Fighting with reality: The Good, the Bad, and the Ugly

The relationships described in Sec. 2 define the fundamental, mathematical rules on which the Fourier transform operates. However, real-world measurements have a tendency to not play nice with these rules, which is why techniques to reduce frequency leakage or to improve the visual appearance of and SPL curve are applied – sometimes for the better, sometimes not.

6.1 Is the gated impulse response periodic?

Fig. 3 shows the implied periodic signal underlying the Fourier transform (see Sec. 2.1). There is a small discontinuity at the transitions between the cycles. This sharp step in the periodic signal introduces spurious high-frequency content in the Fourier spectrum, which does not exist in the sound radiated by the speaker. DISCUSS WINDOW FUNCTIONS TO FORCE PERIODIC SIGNAL. attenuates/messes the tail of the impulse response, so data is changed or lost.

6.2 Is the gated impulse respnose too short?

The example in Sec. 5 has shown how the delay time of the first echo relative to the direct sound from the speaker limits the low-frequency extension and the frequency resolution of the anechoic response.

To extract more low-frequency information from the measurement, one would need to extend the gate time beyond the arrival of the first few echoes. However, this pollutes the loudspeaker signal with the room reflections and corrupts the anechoic SPL curve.

Another technique to increase the length of the anechoic segment of the impulse response is to pad it zeros. This results in a longer time-domain signal and thereby lowers

the low-frequency limit of the frequency-domain data, but it does not magically recover the missing low-frequency information. The longer, zero-padded time-domain data also results in smaller frequency bins (Δf). The SPL curve will therefore CONTAIN MORE DATA POINTS / INTERPOLATION / BUT NO MAGIC INCREASE OF FREQUENCY RESOLUTION BECAUSE THE ZEROS DID NOT ADD ANY NEW NEW/MISSING INFORMATION TO THE SIGNAL.

There is no way to extract robust information on the anechoic response below f_1 .

DISCUSS HERE. LF LIMIT f_1 and BIN WIDTH Δf .

- The following sections discuss how real-world processing shapes this transformation:
 - The Good: gating and windowing to suppress reflections.
 - The Bad: excessive windowing that removes low-frequency content.
 - The Ugly: manipulation of data through zeroing, smoothing, or padding.
- Each step is an attempt to recover the true loudspeaker behaviour from a reflectionrich environment—but not all are equally honest.

This conceptual introduction explains how an impulse response represents a complete description of a loudspeaker's behaviour. Later sections explore how this data is processed, interpreted, and occasionally abused.