Chapter 1

Signal formation in diamond

A sensor converts the energy deposited by a particle or a photon and to an electrical signal. There are many types of sensors existing, but in this chapter we will focus on semiconductors, in particular on diamond sensors. Diamond is a good insulator, but behaves as a semiconductor in certain cases. Section 1.1 explains in detail the energy deposition and signal formation mechanism whereas the section 1.2 focuses on signal amplification and acquisition. Noise contributions are discussed at every stage of the signal chain.

Table 1.1 compares the properties of diamond and silicon.

Table 1.1: Comparison diamond – silicon

D 4	D' 1	C.1.
Property	Diamond	Silicon
Band gap energy E_g (eV)	5.5	1.12
Electron mobility $\mu_e \; (\text{cm}^2 \; \text{V}^{-1} \; \text{s}^{-1})$	1800	1350
Hole mobility $\mu_h \text{ (cm}^2 \text{ V}^{-1} \text{ s}^{-1})$	1200	450
Breakdown field ($V \text{ cm}^{-1}$)	10^{7}	3×10^5
Resistivity (Ω cm)	$> 10^{11}$	2.3×10^{5}
Intrinsic carrier density (cm ⁻¹)	$< 10^{3}$	1.5×10^{10}
Mass density (g cm ⁻¹)	3.52	2.33
Atomic charge	6	14
Dielectric constant ε	5.7	11.9
Displacement energy (eV/atom)	43	13 - 20
Energy to create an e-h pair (eV)	13	3.6
Radiation length (cm)	12.2	9.6
Avg. signal created/ μ m (e)	36	89

1.1 Principles of signal formation in semiconductors

Lattice, electron-hole pair production (3 pg) Ramo theorem (2 pg) SC detector systems, pg. 43-73

Semiconductors are materials that are that are conductive only under specific conditions. They can be made up of atoms with four electrons in their valence band (e.g. silicon—Si, carbon—C or germanium—Ge) or as combinations of two or more different materials (e.g. gallium arsenide—GaAs).

The atoms form valence bonds with adjacent atoms, making solid crystal structures. These bonds break if sufficient external energy is applied. The electron that was forming the bond is kicked out, leaving behind a positively charged ion with a vacancy in its valence band (see figure 1.1). A free electron-hole pair is thus created. The free electron travels through the crystal until it is caught by another hole. Similarly, the hole also "travels" through the material. Its positive charge attracts a bound electron in the vicinity, which breaks from the current bond and moves to the vacancy, leaving a new hole behind. The process continues, making it look like the vacancy – hole is traveling through the material.

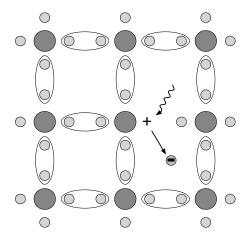


Figure 1.1: Valence bonds in the crystalline structure can be broken, producing a free electron-hole pair

If an external electric field is applied to the crystalline structure, the free electrons and holes drift toward the positive and negative potential, respectively (see figure 1.2a). While drifting, the charges couple with the electrodes, inducing current in the circuit. They recombine upon reaching the electrodes.

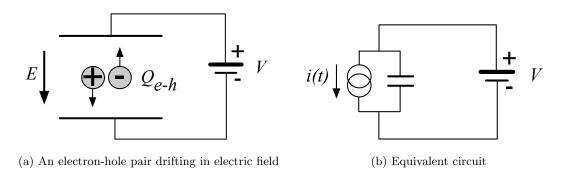


Figure 1.2: Electron-hole drift representation in a circuit

The electrons need to absorb a certain energy to get kicked out of the atomic bond – ionised. The minimal energy required to excite (ionise) an electron in a semiconductor is equal to the energy gap E_g . Typical widths of the forbidden gap are 0.7 eV in Ge, 1.12 eV in Si, 1.4 eV in GaAs and 5.5 eV in Di.

Due to the small band gap in semiconductors some electrons occupy the conduction band at room temperature (RT). The intrinsic carrier concentration n_i in semiconductors

is given as

$$n_i = T^{3/2} \cdot exp(-\frac{E_g}{2kT}) \tag{1.1}$$

wherein $k = 1.381 \cdot 10 - 23m^2kgs - 2K - 1$ is the Boltzmann constant and T is the temperature.

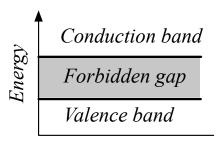


Figure 1.3: Energy states of a valence electron

Thermal noise in semiconductors

1.1.1 Signal charge fluctuations

Two of the important sensor characteristics are the magnitude of the signal and the fluctuations of the signal at a given absorbed energy. They determine the relative resolution $\Delta E/E$. For semiconductors the signal fluctuations are smaller than the simple statistical variance $\sigma_Q = \sqrt{N_Q}$, where N_Q is the number of released charge pairs (ratio between the total deposited energy E_0 and the average emergy deposition E_i required to produce a charge pair). In fact, [] shows that the variance is $\sigma_Q = \sqrt{FN_Q}$, where F is the Fano factor [] (0.08 for diamond and 0.115 for silicon []). Thus, the variance of the signal charge is smaller than expected, $\sigma_Q \approx 0.3 \sqrt{N_Q}$. The resulting intrinsic resolution of semiconductor detectors is

$$\Delta E_{FWHM} = 2.35\sqrt{FEE_i} \tag{1.2}$$

wherein Si $E_i = 3.6$ eV and C $E_i = 13$ eV. E.g., for an α particle with energy $E_{\alpha} = 5.486$ MeV the calculated $\Delta E_{\alpha FWHM} = 5.6$ keV. Figure 1.4 shows the energy resolution function for silicon and diamond.

1.1.2 Signal formation

1.1.3 Radiation-induced electrical pulses

Theory: Examples - average pulses - persistence - gamma, beta, alpha Current profiles Alpha beta gamma neutron

1.2 Electronics for signal processing

This section describes the electronics of a detector, starting with description of signal amplifiers and then discussing the digitisation and signal processing.

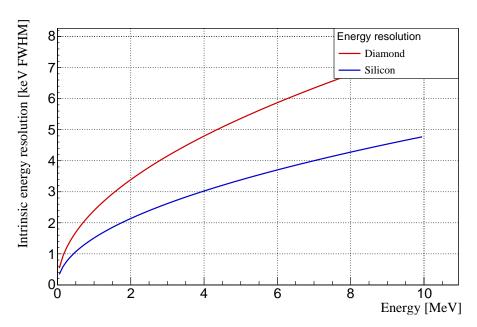


Figure 1.4: Intrinsic energy resolution for silicon and diamond

1.2.1 Signal preamplifiers

(2 pg) The signal charge generated in the sensor is of the order of fC and has to be preamplified before processing. The preamplifiers have to be designed carefully to minimise electronic noise while maximising gain – thus maximising signal-to-noise ratio (SNR). A critical parameter is the total capacitance, i.e. sensor capacitance and input capacitance of the preamplifier. Decreased capacitance improves the SNR.

Several types of amplifiers can be used, all of which affect the measured pulse shape. They behave differently for resistive or capacitive sources. Given that semiconductors are capacitive sources, we will focus on these. Two preamplifiers are used most commonly, a current and a charge amplifier. Both are described below in detail.

Current-sensitive amplifier

(0.5 pg) Figure 1.5 shows the equivalent circuit of a capacitive source and a current amplifier. An amplifier operates in current mode if the source has a low charge collection time t_c with respect to the RC time constant of the circuit. In this case the sensor capacitance discharges rapidly and the output voltage is proportional to the instantaneous current $v_o \propto i_s(t)$. The amplifier is providing voltage gain, so the output signal voltage v_o is directly proportional to the input voltage v_i .

Charge-sensitive amplifier

(0.5 pg) In order to measure integrated charge in the sensor, a feedback loop is added to the amplifier (see figure 1.6). The feedback can be used to control the gain and input resistance, as well as integrating the input signal. The charge amplifier is in principle an

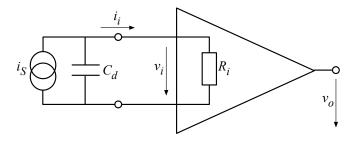


Figure 1.5: Simplified equivalent circuit of a capacitive source and a current amplifier

inverting voltage amplifier with a high input resistance.

In an ideal amplifier the output voltage v_o equals $-Av_i$. Therefore voltage difference across the capacitor C_f is $V_f = (A+1)v_i$ and the charge deposited on the capacitor $Q_f = C_f v_f = C_f (A+1)v_i$. Since no current can flow into the amplifier, all of the signal current must charge up the feedback capacitance, so $Q_f = Q_i$.

In reality, however, charge-sensitive amplifiers respond much slower to the than the time duration of the current pulse from the sensor.

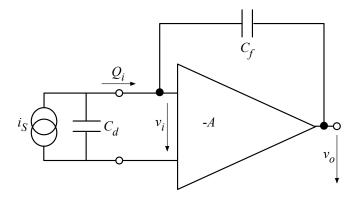


Figure 1.6: Simplified equivalent circuit of a capacitive source and a charge amplifier

Analogue electronic noise

(2 pg) Electronic noise determines the ability of a system to distinguish signal levels.

1.2.2 Analogue-to-digital converters

(1 pg) An analog-to-digital converter (ADC) is a device that converts analogue electrical signal on the input to its digital representation - a digital number. This involves a quantisation - sampling of the signal at a defined sampling period, resulting in a sequence of samples at a discrete time and a discrete amplitude. The resolution of the ADC is the number of output levels it can quantise to and is expressed in bits. For instance, an 8-bit

ADC with an input voltage range of 100 mV and a sampling period of 1 ns would produce 1 GSPS (gigasample per second) at a voltage resolution Q of

$$Q = \frac{Input\ voltage\ range}{2\ resolution} = \frac{100\ mV}{2^8\ ADC counts} = 0.39\ mV/ADC count$$
 (1.3)

Quantisation error and quantisation noise

(1 pg) The quantisation error (or a round-off error) is a contribution of the digitisation to the overall measurement error. It is defined as a difference between the actual analog value and a digitised representation of this value.

Typically, the input signal amplitude is much larger than than the voltage resolution. Therefore the quantisation error is not directly correlated with the signal and has an approximately uniform distribution.

1.2.3 Signal processing

(1 pg) After signal amplification and digitisation the data can be either processed immediately or they can be saved to a data storage for later analysis. Below are the examples of systems that carry out the data processing on the fly.

Field programmable gate array

(0.5 pg) Field programmable gate array (FPGA) is an integrated circuit designed to be reprogrammable and configured after manufacturing. It consists of a set of logic gates that can be interconnected in numerous combinations to carry out a logic operation. Many such logic operations can take place in parallel, making the FPGA a powerful tool for signal processing.

Application-specific integrated circuit

FE-I4 functional description, characteristics (2 pg)

Application-specific integrated circuit (ASIC) is an integrated circuit designed for a specific use. The design cannot be modified after chip production, as opposed to FPGAs. On the other hand, the ASICs can be optimised to perform a required operation at high speed and low power.

1.2.4 Full detector readout chain

(1 pg)