Elektrobit

UDACITY

Functional Safety Concept Lane Assistance

Document Version: [Version]

Template Version 1.0, Released on 2017-06-21

Document history

[Instructions: Fill in the date, version and description fields. You can fill out the Editor field with your name if you want to do so. Keep track of your editing as if this were a real world project.

For example, if this were your first draft or first submission, you might say version 1.0. If this is a second submission attempt, then you'd add a second line with a new date and version 2.0]

Date	Version	Editor	Description
20/10/2018	1	Mohammed Essam	Initial Version

Table of Contents

[Instructions: We have provided a table of contents. If you change the document structure, please update the table of contents accordingly. The table of contents should show each section of the document and page numbers or links. Most word processors can do this for you. In Google Docs, you can use headings for each section and then go to Insert > Table of Contents. Microsoft Word has similar capabilities]

Document history....2
Table of Contents....2
Purpose of the Functional Safety Concept....3
Inputs to the Functional Safety Concept....3
Safety goals from the Hazard Analysis and Risk Assessment....3
Preliminary Architecture....4
Description of architecture elements....4
Functional Safety Concept....5
Functional Safety Analysis....5
Functional Safety Requirements....6
Refinement of the System Architecture....7
Allocation of Functional Safety Requirements to Architecture Elements....7
Warning and Degradation Concept....8

Purpose of the Functional Safety Concept

[Instructions: Answer what is the purpose of a functional safety concept?]

Inputs to the Functional Safety Concept

Safety goals from the Hazard Analysis and Risk Assessment

[Instructions:
REQUIRED:
Provide the lane departure warning and lane keeping assistance safety goals as discussed in the lessons and derived in the hazard analysis and risk assessment.

OPTIONAL:
If you expanded the hazard analysis and risk assessment to include other safety goals, include them here.
]

ID	Safety Goal
Safety_Goal_01	The oscillating torque from the Lane Departure Warning (LDW) function shall be limited.
Safety_Goal_02	The lane keeping assistance function shall be time limited and the additional steering torque shall end after a given time interval so that the driver cannot misuse the system for autonomous driving.

Preliminary Architecture

[Instructions: Provide a preliminary architecture for the lane assistance item. Hint: See Lesson 3: Item Definition]

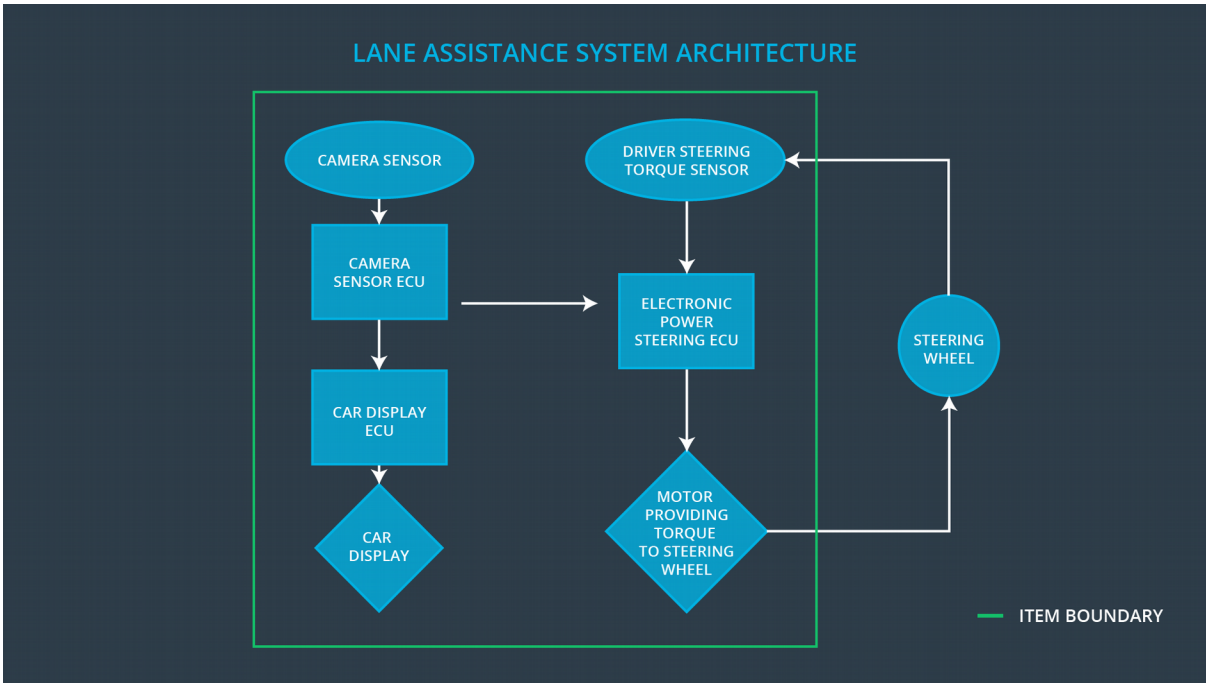

Description of architecture elements

[Instructions: Provide a description for each of the item elements; what is each element's purpose in the lane assistance item?]

Element	Description
Camera Sensor	Take images of the road
Camera Sensor ECU	detects lane departures , and tells the Electronic Power Steering ECU how hard to turn , and Car Display ECU to display a warning
Car Display	show a warning for the driver
Car Display ECU	receives a warning from Camera ECU, show Warning on Car Display
Driver Steering Torque Sensor	Detect how hard the driver is turning the steering wheel
Electronic Power Steering ECU	Analyze how hard the driver is turning the steering wheel, when it receives a warning from Camera

	Sensor ECU, it then decides the vibration required to alert the driver, and output a torque value to the motor .
Motor	The motor will provide the torque to steering wheel.

Functional Safety Concept

The functional safety concept consists of:

- Functional safety analysis
- Functional safety requirements
- Functional safety architecture
- Warning and degradation concept

Functional Safety Analysis

[Instructions: Fill in the functional safety analysis table below.]

Malfunction ID	**Main Function of the Item Related to Safety Goal Violations**	**Guidewords (NO, WRONG, EARLY, LATE, MORE, LESS)**	**Resulting Malfunction**
Malfunction_01	Lane Departure Warning (LDW) function shall apply an oscillating steering torque to provide the driver a haptic feedback	MORE	The lane departure warning function applies an oscillating torque with very high torque amplitude (above limit)
Malfunction_02	Lane Departure Warning (LDW) function shall apply an oscillating steering torque to provide the driver a haptic feedback	MORE	The lane departure warning function applies an oscillating torque with very high torque amplitude (above limit)
Malfunction_03	Lane Keeping Assistance (LKA) function shall apply the steering torque when active in order to stay in ego lane	NO	The lane keeping assistance function is not limited in time duration which leads to misuse as an autonomous driving

			function.

Functional Safety Requirements

[Instructions: Fill in the functional safety requirements for the lane departure warning]

Lane Departure Warning (LDW) Requirements:

ID	Functional Safety Requirement	ASIL	Fault Tolerant Time Interval	Safe State
Functional Safety Requirement 01-01	The lane keeping item shall ensure that the lane departure oscillating torque amplitude is below Max_Torque_Amplitude	C	50ms (Diagnostic Test Interval + Fault Reaction Time + Time in Safe State)	Switch Off Lane Assistance System
Functional Safety Requirement 01-02	The lane keeping item shall ensure that the lane departure oscillating torque frequency is below Max_Torque_Frequency	C	50ms (Diagnostic Test Interval + Fault Reaction Time + Time in Safe State)	Switch Off Lane Assistance System

Lane Departure Warning (LDW) Verification and Validation Acceptance Criteria:

ID	Validation Acceptance Criteria and Method	Verification Acceptance Criteria and Method
Functional Safety Requirement 01-01	Test and validate that the Max_Torque_Amplitude chosen is low enough that the driver does not loose control over the car.	Verify that the system does turn off in time if Max_Torque_Amplitude is exceeded.
Functional Safety Requirement 01-02	Test and validate that the Max_Torque_Frequency chosen is low enough that the driver does not loose control over the car.	Verify that the system does turn off in time if Max_Torque_Frequency is exceeded.

[Instructions: Fill in the functional safety requirements for the lane keeping assistance]

Lane Keeping Assistance (LKA) Requirements:

ID	Functional Safety Requirement	ASIL	Fault Tolerant Time Interval	Safe State
Functional Safety Requirement 02-01	The electronic power steering ECU shall ensure that the lane keeping assistance torque is applied for only Max_Duration.	B	500 ms	Switch Off Lane Assistance System

Lane Keeping Assistance (LKA) Verification and Validation Acceptance Criteria:

ID	Validation Acceptance Criteria and Method	Verification Acceptance Criteria and Method
Functional Safety Requirement 02-01	Test and validate that the max_duration chosen really did dissuade drivers from taking their hands off the wheel.	Verify that the system does turn off if the lane keeping assistance every exceeded max_duration.

Refinement of the System Architecture

[Instructions: Include the refined system architecture. Hint: The refined system architecture should include the system architecture from the end of the functional safety lesson including all of the ASIL labels.]

Allocation of Functional Safety Requirements to Architecture Elements

[Instructions: Mark which element or elements are responsible for meeting the functional safety requirement. Hint: Only one ECU is responsible for meeting all of the requirements.]

ID	Functional Safety Requirement	Electronic Power	Camera ECU	Car Display ECU

		Steering ECU		
Functional Safety Requirement 01-01	The lane keeping item shall ensure that the lane departure oscillating torque amplitude is below Max_Torque_Amplitude	✓		
Functional Safety Requirement 01-02	The lane keeping item shall ensure that the lane departure oscillating torque frequency is below Max_Torque_Frequency	✓		
Functional Safety Requirement 02-01	The lane keeping item shall ensure that the lane keeping assistance torque is applied for only Max_Duration	✓		

Warning and Degradation Concept

[Instructions: Fill in the warning and degradation concept.]

ID	Degradation Mode	Trigger for Degradation Mode	Safe State invoked?	Driver Warning
WDC-01	turn off the functionality	Functional Safety Requirement 01-01 is violated	YES	Display Warning on display system, and different Haptic feedback on the steering wheel
WDC-02	turn off the functionality	Functional Safety Requirement 02-01 is violated	YES	Display Warning on display system, and beep sound.