


APLICAÇÃO LORAWAN THE THINGS NETWORK

Maria Fernanda Tutui




github.com/mftutui/ttn-lorawan-application

Cenário

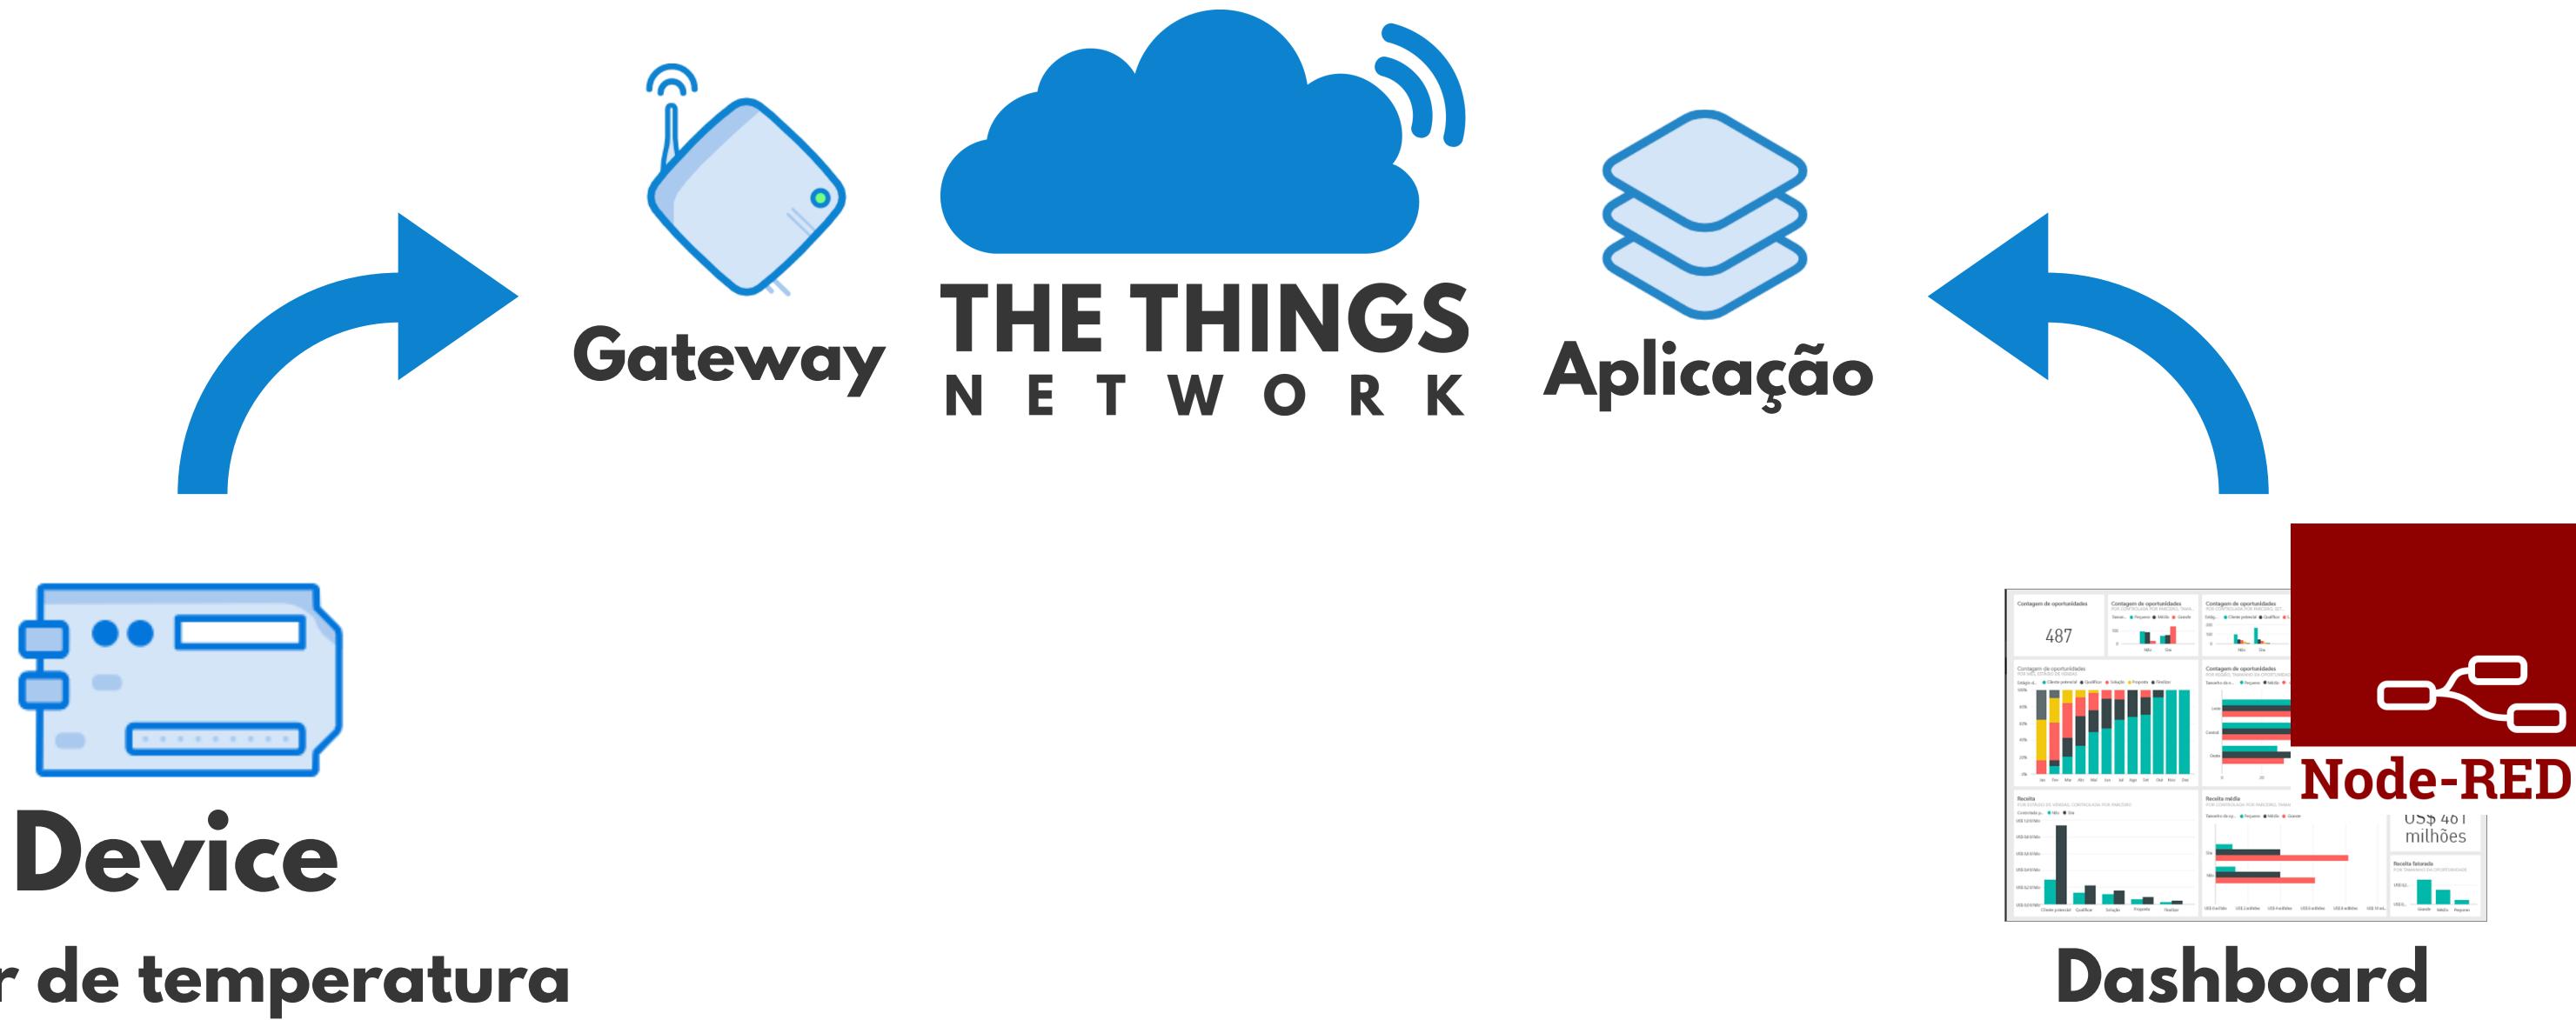


Fase 1/5

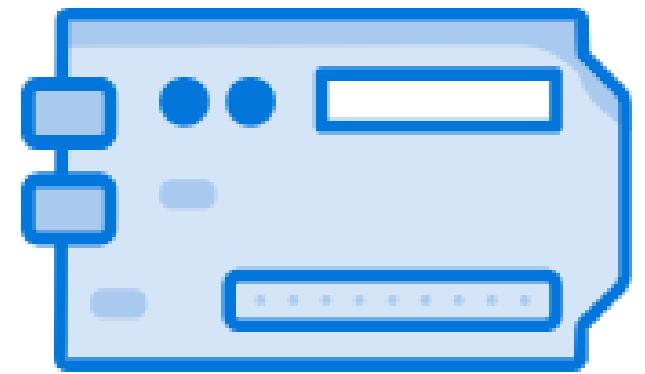

Device: montagem


Device: montagem

- **Arduino Nano**
- **Regulador de tensão**
- **Módulo Transceptor LoRa RF96**
- **Sensor de temperatura NTC**

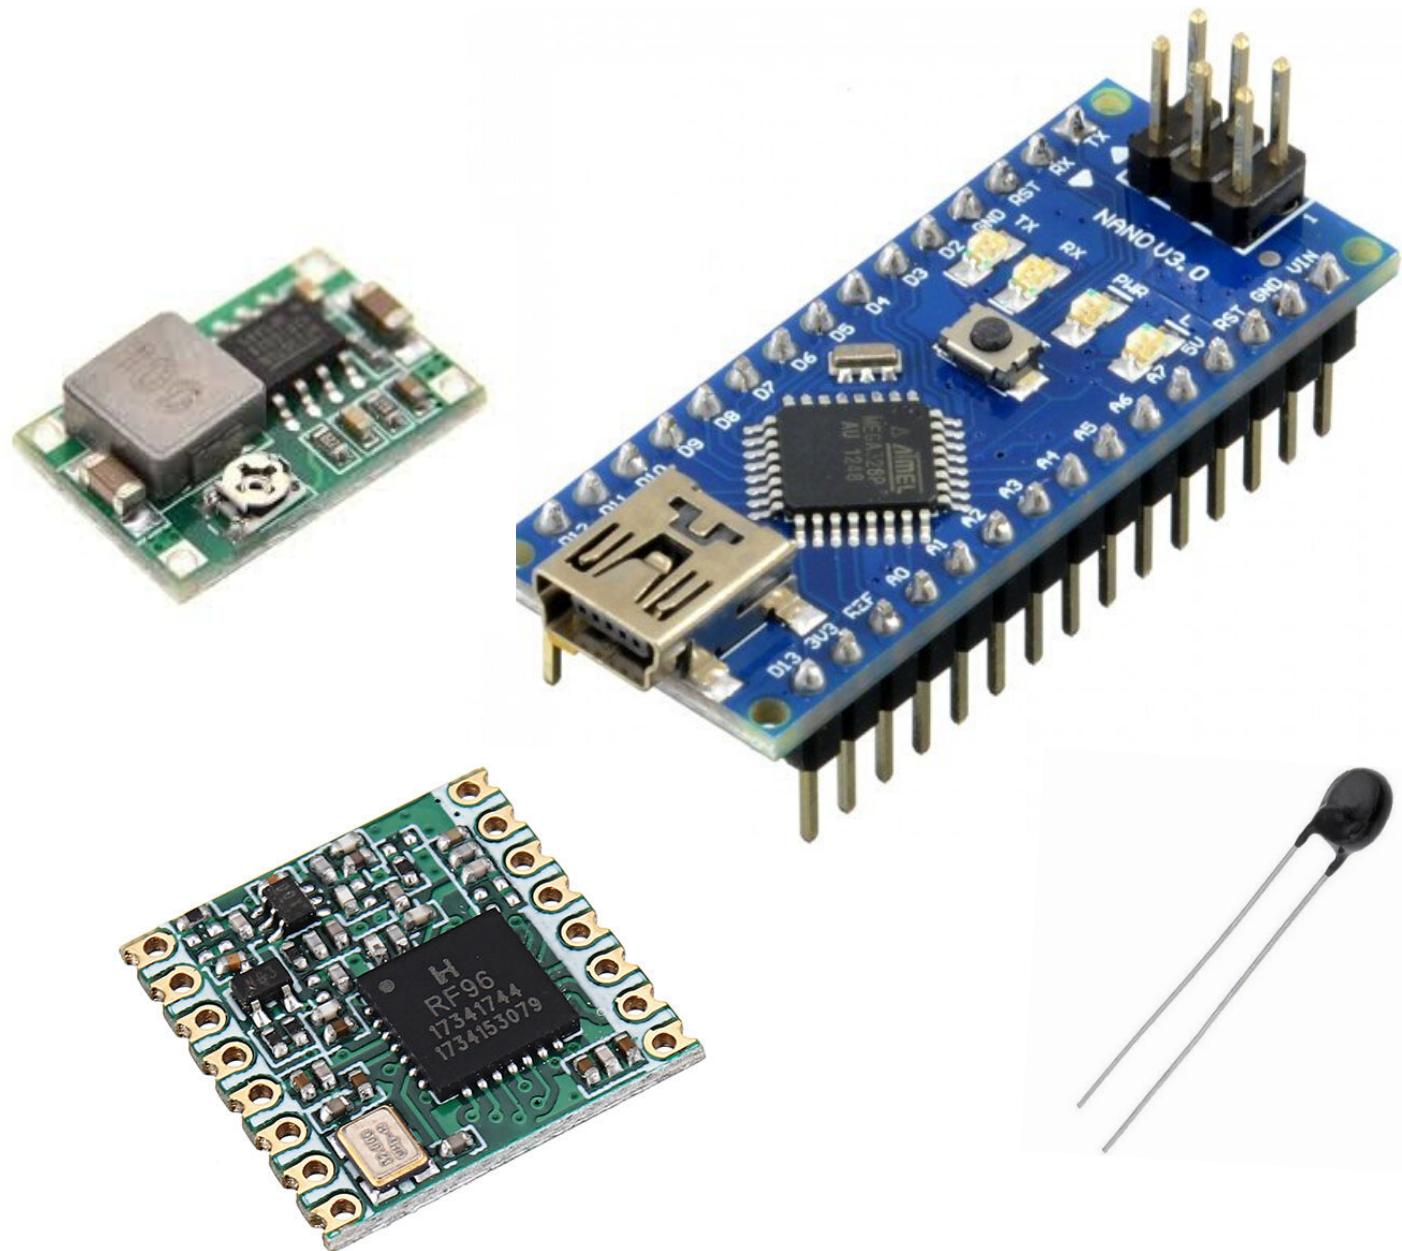


Device: montagem

- Montagem com o sensor de temperatura

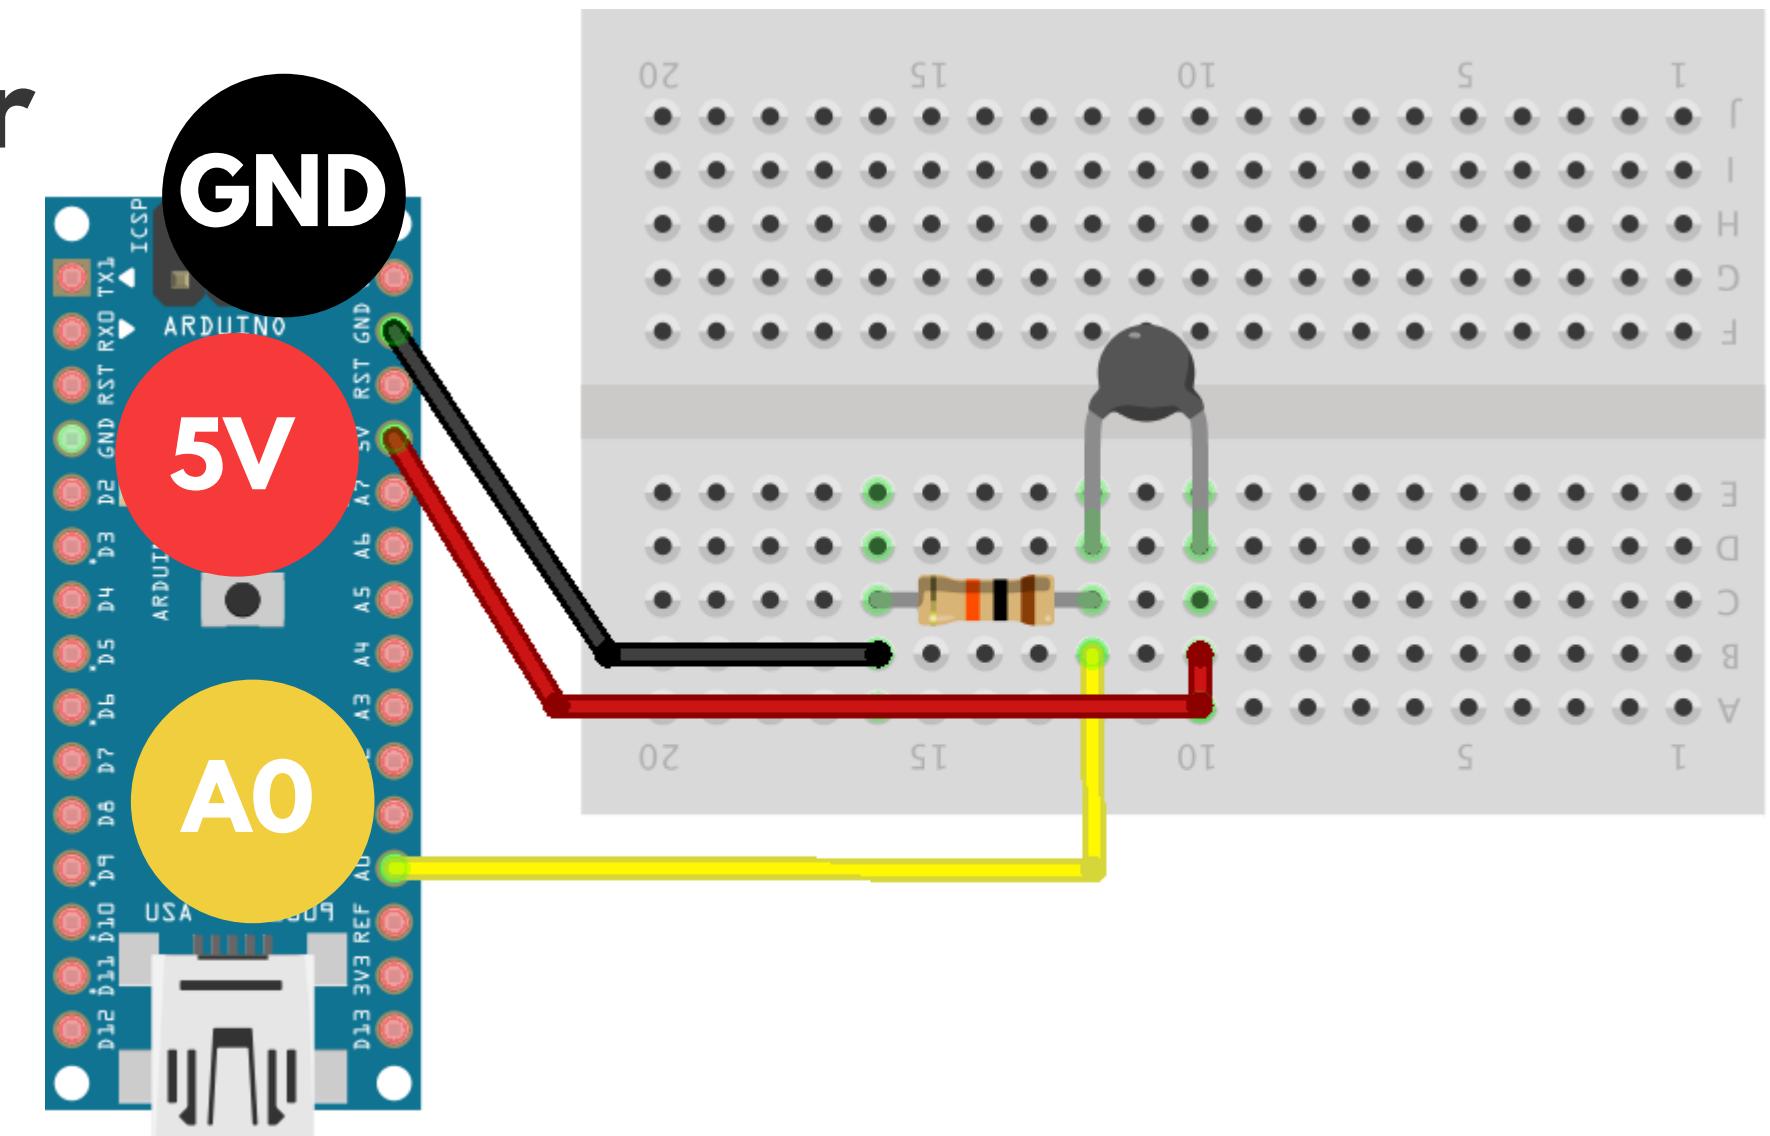

Fase 2/5

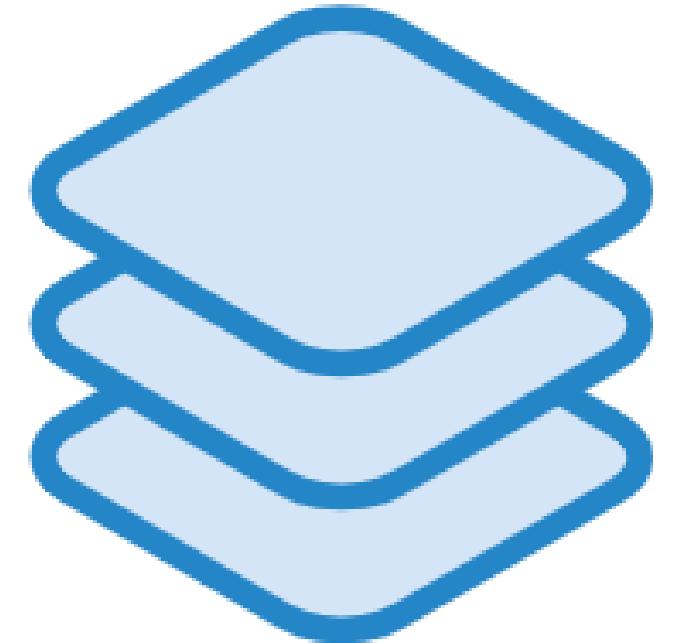

Aplicação: criação

Aplicação: criação


- 1. Criar uma aplicação**
thethingsnetwork.org
- 2. Associar um dispositivo**



**THE THINGS
N E T W O R K**

[Communities](#)[Learn](#)[Support](#)[Forum](#)[Marketplace](#)

Hi Maria Fernanda

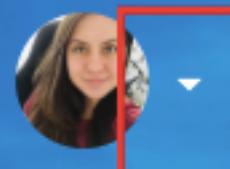


Building a global open LoRaWAN™ network.



[Communities](#)[Learn](#)[Support](#)[Forum](#)[Marketplace](#)

Hi Maria Fernanda

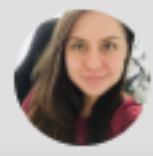[My Profile](#)[Console](#)[Log Out](#)



Building a global open LoRaWAN™ network.




 **Hi, Maria Fernanda!**

Welcome to The Things Network Console.

This is where the magic happens. Here you can work with your data. Register applications, devices and gateways, manage your integrations, collaborators and settings.

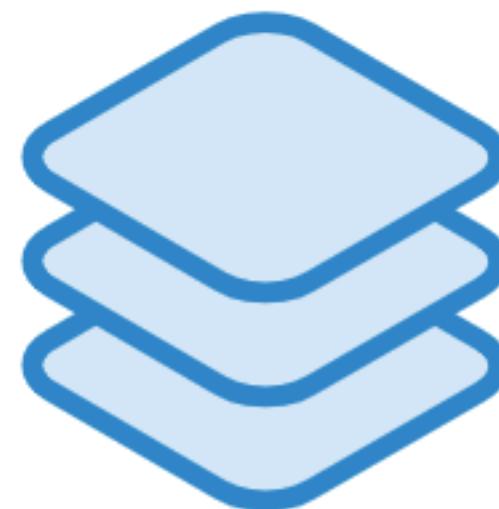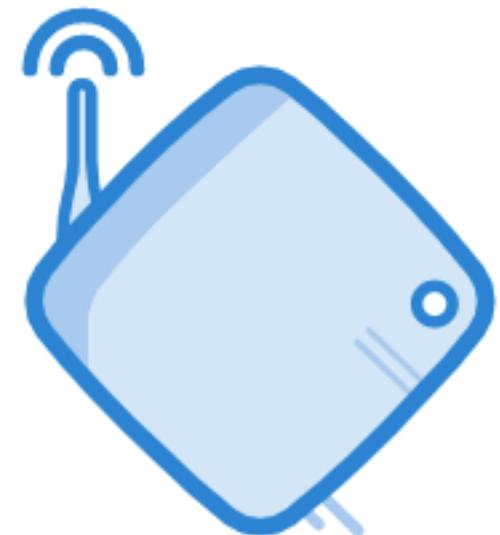**APPLICATIONS****GATEWAYS**

Applications

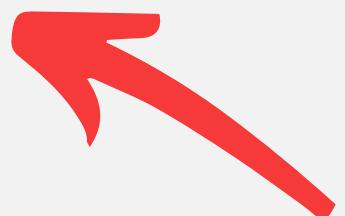APPLICATIONS add application

	Aplicación para manejo de downlink e uplink (aprovechamiento PET)		79.03.05.79.00.01.00.00
	Aplicación para traza de SF usando radio red		79.03.05.79.00.01.00.03
	Sensores de temperatura, luminosidad, ultrasonidos e LCD		79.03.05.79.00.01.00.08
	Sensores de temperatura, luminosidad, ultrasonidos e LCD (sin web)		79.03.05.79.00.01.00.06
	NetBox (radio3G)		79.03.05.79.00.01.00.03
	End Device 2 WFC/SU		79.03.05.79.00.01.00.04
	NET		79.03.05.79.00.01.00.05

ADD APPLICATION

Application ID

The unique identifier of your application on the network

**Description**


A human readable description of your new app

**Application EUI**

An application EUI will be issued for The Things Network block for convenience, you can add your own in the application settings page.

Handler registration

Select the handler you want to register this application to

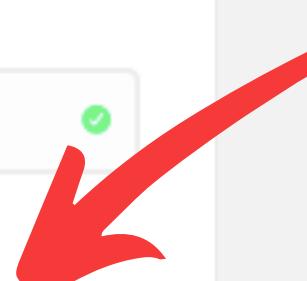

Cancel

Add application

[Overview](#) [Devices](#) [Payload Formats](#) [Integrations](#) [Data](#) [Settings](#)

APPLICATION OVERVIEW

[documentation](#)**Application ID** [hackathon-ttn-florianopolis](#)**Description** Sensor de temperatura**Created** 6 days ago**Handler** meshed-handler

APPLICATION EUIS


[manage euis](#)  70 B3 D5 7E D0 02 4E AE 

DEVICES

[register device](#) [manage devices](#)

Aplicação: criação

- 1. Criar uma aplicação**
thethingsnetwork.org
- 2. Associar um dispositivo**

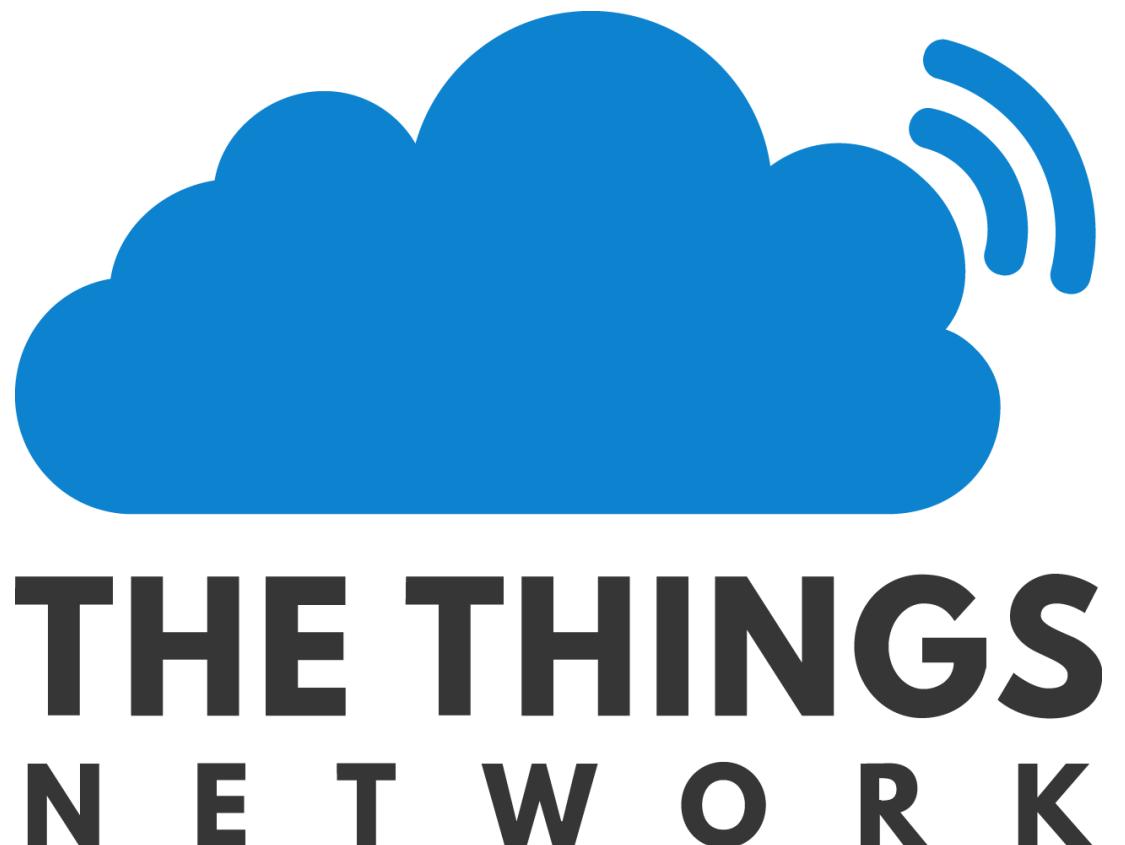

[Overview](#) [Devices](#) [Payload Formats](#) [Integrations](#) [Data](#) [Settings](#)

APPLICATION OVERVIEW

[documentation](#)**Application ID** **hackathon-ttn-florianopolis****Description** Sensor de temperatura**Created** 5 days ago**Handler** meshed-handler

APPLICATION EUIS

[manage euis](#)  **70 B3 D5 7E D0 02 4E AE** 

DEVICES

[register device](#) [manage devices](#)

REGISTER DEVICE

[bulk import devices](#)

Device ID

This is the unique identifier for the device in this app. The device ID will be immutable.



Device EUI

The device EUI is the unique identifier for this device on the network. You can change the EUI later.



0 bytes

App Key

The App Key will be used to secure the communication between your device and the network.



this field will be generated

App EUI

70 B3 D5 7E D0 02 4E AE



Cancel


Register

[Overview](#) [Data](#) [Settings](#)

DEVICE OVERVIEW

Application ID [hackathon-ttn-florianopolis](#)**Device ID** device-sensor-temperatura**Activation Method** [OTAA](#)**Device EUI** [!\[\]\(9c7a728b22e5d7455ab257bb0ec5eaf2_img.jpg\)](#) 00 64 97 BC 89 41 38 5D [!\[\]\(7996c6d514dc3415f6eb7adfac834252_img.jpg\)](#)**Application EUI** [!\[\]\(c19358fd94e0cf6da112c93f72051a9c_img.jpg\)](#) 70 B3 D5 7E D0 02 4E AE [!\[\]\(e9cb59f1cab4c2a1a8a08ad26198f050_img.jpg\)](#)**App Key** [!\[\]\(378038420973c474427b09381a3aac1a_img.jpg\)](#) [!\[\]\(81f51d316c4207427fd9c1a75429d548_img.jpg\)](#) [!\[\]\(23ca8631d321341ab400f733110c9133_img.jpg\)](#)**Status**  never seen**Frames up** 0 [reset frame counters](#)**Frames down** 0

Fase 3/5

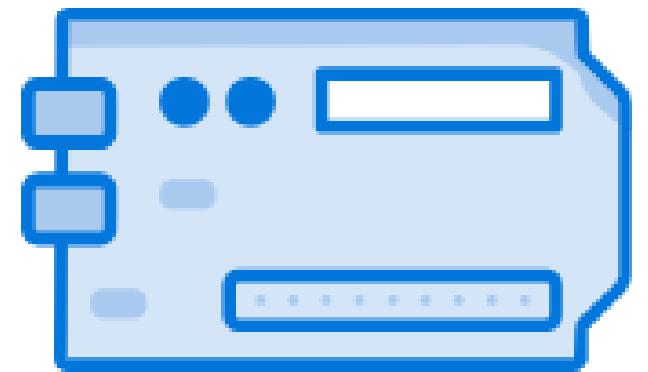

Device: Arduino IDE


Device: Arduino IDE

- 1. Baixar a IDE do Arduino**
- 2. Baixar driver para Arduino Nano V3.0**
- 3. Incluir bibliotecas**



Device: Arduino IDE

Arduino IDE

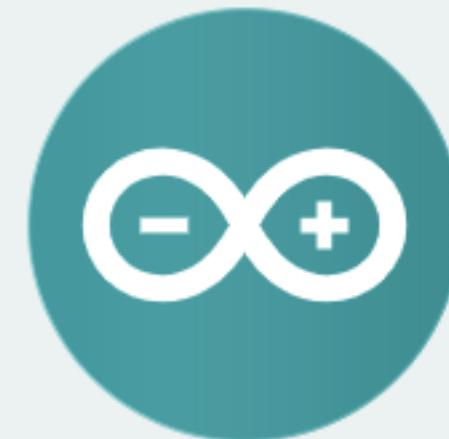
[HOME](#) [STORE](#)[SOFTWARE](#)[EDU](#)[RESOURCES](#)[COMMUNITY](#) [HELP](#)[SIGN IN](#)

ARDUINO 1.8.10

The open-source Arduino Software (IDE) makes it easy to write code and upload it to the board. It runs on Windows, Mac OS X, and Linux. The environment is written in Java and based on Processing and other open-source software.
This software can be used with any Arduino board. Refer to the [Getting Started](#) page for Installation instructions.

Windows Installer, for Windows XP and up
Windows ZIP file for non admin install

Windows app Requires Win 8.1 or 10

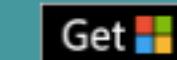

Mac OS X 10.8 Mountain Lion or newer

Linux 32 bits

Linux 64 bits

Linux ARM 32 bits

Linux ARM 64 bits

[Release Notes](#)

[Source Code](#)

[Checksums \(sha512\)](#)

Device: Arduino IDE

- 1. Baixar a IDE do Arduino**
- 2. Baixar driver para Arduino Nano V3.0**
- 3. Incluir bibliotecas**



Device: Arduino IDE

Driver CH340/CH341USB



Entrar | Registrar



Centro de produtos

Plano de aplicação

Comunidade Yuheng

Suporte de serviço

Sobre Yuheng

Todos



Recursos de desenvolvimento

Drive & Ferramentas

Outros

Contate-nos

Informações relacionadas

Nome dos dados

1. Introdução

[CH341SER.EXE](#)

CH340 / CH341USB para driver de WINDOWS da porta serial, suporte para Windows 10/ 8.1 / 8/7 / VISTA / XP de 32/64 bits, SERVIDOR 2016/2012/2008/2003, 2000 / ME / 98, autenticação de assinatura digital da Microsoft, suporte USB Transfira para portas seriais de 3 e 9 fios para distribuição aos usuários finais.

[CH341SER_LINUX.ZIP](#)

CH340 / CH341 USB para driver LINUX serial, suporta sistema de 32/64 bits.


[CH341SER_MAC.ZIP](#)

CH340 / CH341 USB para driver MAC OS serial, suporta sistema de 32/64 bits, há instruções de uso.

Device: Arduino IDE

- 1. Baixar a IDE do Arduino**
- 2. Baixar driver para Arduino Nano V3.0**
- 3. Incluir bibliotecas**



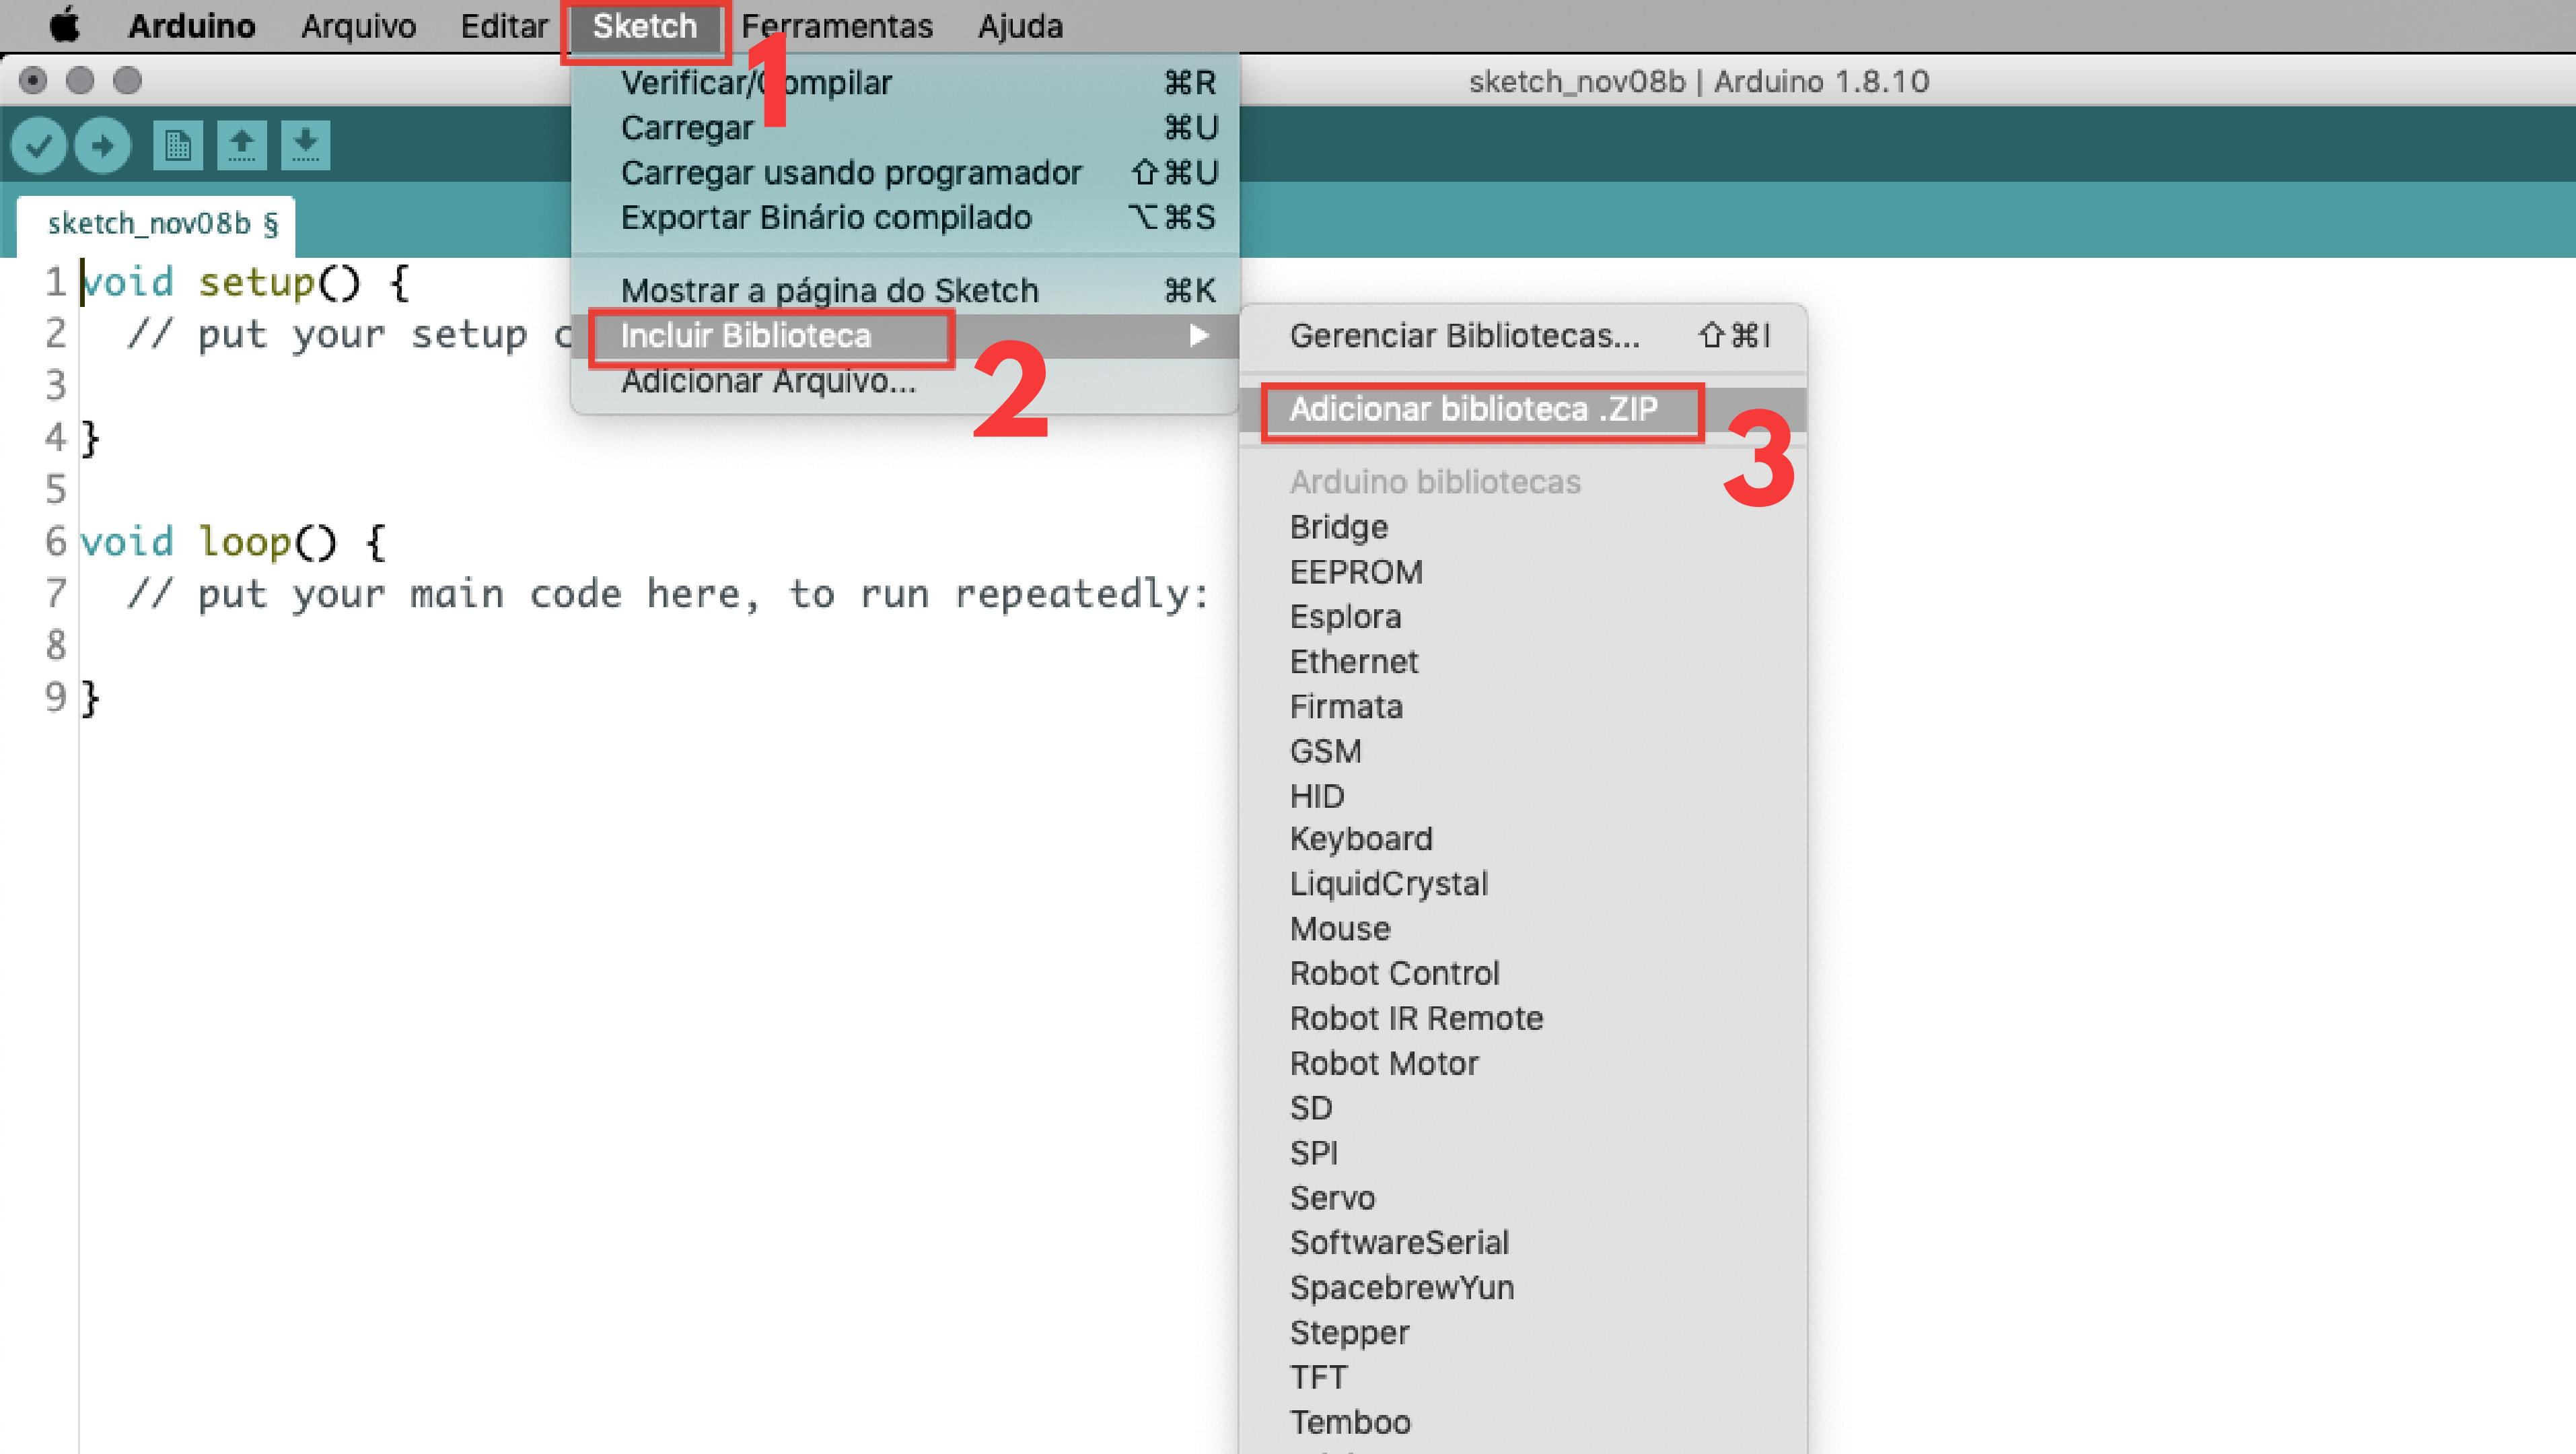

Device: Arduino IDE

4. Abrir código base nos exemplos

5. Completar com APPEUI, DEVEUI, APPKEY

- APPEUI: linha 49
- DEVEUI: linha 53
- APPKEY: linha 59

6. Configurar IDE

Biblioteca adicionada às suas bibliotecas. Veja o menu "Incluir"

Novo ⌘N
Abrir... ⌘O
Abrir Recente
Sketchbook
Exemplos ►

1 void setup() {
2 // put your setup code here, to
3 // initialize variables used by your
4 }
5
6 void loop() {
7 // put your main code here, to
8 }
9 }

Exemplos embutidos
01.Basics
02.Digital
03.Analog
04.Communication
05.Control
06.Sensors
07.Display
08.Strings
09.USB
10.StarterKit_BasicKit
11.ArduinoISP

Exemplos para qualquer placa
Adafruit Circuit Playground
Bridge
Esplora
Ethernet
Firmata
GSM
LiquidCrystal
Robot Control
Robot Motor
SD
Servo
SpacebrewYun
Stepper
Temboo
DESCONTINUADO

Exemplos para Arduino Nano
EEPROM
SoftwareSerial
SPI
Wire

Exemplos de Bibliotecas Personalizadas
MCCI LoRaWAN LMIC library ►
TheThingsNetwork
TheThingsNode

compliance-otaa-halconfig
hackathon-ttn-temperatura ►
header_test
raw
raw-feather
raw-halconfig
ttn-abp
ttn-abp-feather-us915-dht22
ttn-otaa
ttn-otaa-feather-us915
ttn-otaa-feather-us915-dht22
ttn-otaa-halconfig-us915
ttn-otaa-network-time

sketch_nov08b | Arduino 1.8.10

Device: Arduino IDE

4. Abrir código base nos exemplos

5. Completar com APPEUI, DEVEUI, APPKEY

- APPEUI: linha 49
- DEVEUI: linha 53
- APPKEY: linha 59

6. Configurar IDE



```
44
45 // This EUI must be in little-endian format, so least-significant-byte
46 // first. When copying an EUI from ttncctl output, this means to reverse
47 // the bytes. For TTN issued EUIs the last bytes should be 0xD5, 0xB3,
48 // 0x70.
49 static const u1_t PROGMEM APPEUI[8] = { FILLMEIN };
50 void os_getArtEui (u1_t* buf) { memcpy_P(buf, APPEUI, 8);}
51
52 // This should also be in little endian format, see above.
53 static const u1_t PROGMEM DEVEUI[8] = { FILLMEIN };
54 void os_getDevEui (u1_t* buf) { memcpy_P(buf, DEVEUI, 8);}
55
56 // This key should be in big endian format (or, since it is not really a
57 // number but a block of memory, endianness does not really apply). In
58 // practice, a key taken from ttncctl can be copied as-is.
59 static const u1_t PROGMEM APPKEY[16] = { FILLMEIN };
60 void os_getDevKey (u1_t* buf) { memcpy_P(buf, APPKEY, 16);}
61
62 static osjob_t sendjob;
63
64 // Schedule TX every this many seconds (might become longer due to duty
65 // cycle limitations).
66 const unsigned TX_INTERVAL = 60;
67
68 // Pin mapping
69 const lmic_pinmap lmic_pins = {
70     .nss = 10,
71     .rxtx = LMIC_UNUSED_PIN,
72     .rst = 5,
73     .dio_5 = 3 LMIC_UNUSED_BTNL
```

[Overview](#) [Data](#) [Settings](#)

DEVICE OVERVIEW

Application ID [hackathon-ttn-florianopolis](#)**Device ID** device-sensor-temperatura**Activation Method** [OTAA](#)**Device EUI** [!\[\]\(86b1b52fb4b2e5ef84ee1bcb7fce3537_img.jpg\)](#) 00 E3 B7 94 B7 BF 9A E0 [!\[\]\(0dac7ba2faef042ea0d7531c2407bc6e_img.jpg\)](#)**Application EUI** [!\[\]\(346424ad7ee3a06d33d2a012aa61dfde_img.jpg\)](#) 70 B3 D5 7E D0 02 4E AE [!\[\]\(b1d63ee4b615254e13943dd7ebde0a4e_img.jpg\)](#)**App Key** [!\[\]\(825738d446112df1946fd7abfcb9090f_img.jpg\)](#) [!\[\]\(f6dde83671414c5295be6ef5fefaff98_img.jpg\)](#)**Status**  never seen**Frames up** 0 [reset frame counters](#)**Frames down** 0

DEVICE OVERVIEW


Application ID  hackathon-ttn-florianopolis

Device ID device-sensor-temperatura

Activation Method  OTAA

Device EUI  00E3B794B7BF9AE0

2

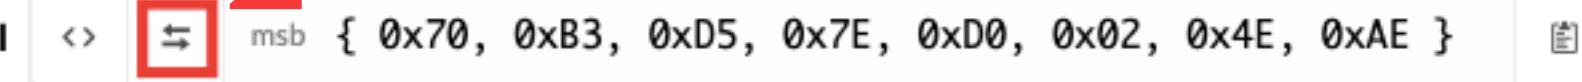Application EUI  msb { 0x70, 0xB3, 0xD5, 0x7E, 0xD0, 0x02, 0x4E, 0xAE }

App Key  

Status  never seen

Frames up 0 [reset frame counters](#)

Frames down 0

[Overview](#) [Data](#) [Settings](#)

DEVICE OVERVIEW

Application ID [hackathon-ttn-florianopolis](#)**Device ID** device-sensor-temperatura**Activation Method** [OTAA](#)**Device EUI** [!\[\]\(b9dd0a8b640efb5e99b498245af8b0e7_img.jpg\)](#) 00E3B794B7BF9AE0 [!\[\]\(e705d0133a5444c18bef4c7e6697d1c1_img.jpg\)](#)

3

Application EUI [!\[\]\(72c3240ee67ca6107f727634a17f171f_img.jpg\)](#) [!\[\]\(5fbaf1ddedb1cc03be7fa2c4cf06b1f0_img.jpg\)](#) { 0xAE, 0x4E, 0x02, 0xD0, 0x7E, 0xD5, 0xB3, 0x70 }**App Key** [!\[\]\(3271ad3f963d2e9d60af4e824e455014_img.jpg\)](#) [!\[\]\(42aef8dbc015b88674dcfe1acd09d802_img.jpg\)](#) [!\[\]\(cab9dcb6014d536fcc82537e13b3f7db_img.jpg\)](#) [!\[\]\(e60cb2d2f7af84ce6368cad31fcc37d0_img.jpg\)](#)**Status**  never seen**Frames up** 0 [reset frame counters](#)**Frames down** 0

DEVICE OVERVIEW

Application ID  hackathon-ttn-florianopolis

Device ID device-sensor-temperatura

Activation Method

OTAA
45

Device EUI   lsb { 0xE0, 0x9A, 0xBF, 0xB7, 0x94, 0xB7, 0xE3, 0x00 } 

Application EU   lsb { 0xAE, 0x4E, 0x02, 0xD0, 0x7E, 0xD5, 0xB3, 0x70 } 

App Key   msb { 0x54, 0x20, 0xDE, 0xB5, 0xAC, 0x46, 0xA6, 0x16, 0xD7, 0xEE, 0x49, 0x93, 0x00 } 

Status  never seen

Frames up 0 [reset frame counters](#)

Frames down 0

45 **6**

7 **8**

Obs: demais alterações

1. Intervalo de envio

Tempo entre os envios de uplink

2. Pin mapping

Mapeamento dos pinos do Arduino para uso de SPI com o módulo RF95

3. Função "do_send()"

Função responsável por enviar os dados



```
hackathon-ttn-temperatura

63
64 // Schedule TX every this many seconds (might become longer due to duty
65 // cycle limitations).
66 const unsigned TX_INTERVAL = 60;
67
68 // Pin mapping
69 const lmic_pinmap lmic_pins = {
70     .nss = 10,
71     .rxtx = LMIC_UNUSED_PIN,
72     .rst = 5,
73     .dio = {2, 3, LMIC_UNUSED_PIN},
74 };
75
76 void onEvent (ev_t ev) {
77     Serial.print(os_getTime());
78     Serial.print(": ");
79     switch(ev) {
80         case EV_SCAN_TIMEOUT:
81             Serial.println(F("EV_SCAN_TIMEOUT"));
82             break;
83         case EV_BEACON_FOUND:
84             Serial.println(F("EV_BEACON_FOUND"));
85             break;
86         case EV_BEACON_MISSED:
87             Serial.println(F("EV_BEACON_MISSED"));
88             break;
89         case EV_BEACON_TRACKED:
90             Serial.println(F("EV_BEACON_TRACKED"));
91             break;
92         case EV_TTNMSG:
```



hackathon-ttn-temperatura

```
182
183 void do_send(osjob_t* j){
184
185     int ValorSensor = analogRead(A0);
186     int Temp = (ValorSensor*0.2027)-82;
187
188     Serial.println("-----");
189     Serial.print("Temperatura aproximada: ");
190     Serial.print(Temp);
191     Serial.println("°C");
192     Serial.println("-----");
193
194     u1_t mydata[1];
195     mydata[0] = Temp;
196
197     // Check if there is not a current TX/RX job running
198     if (LMIC.opmode & OP_TXRXPEND) {
199         Serial.println(F("OP_TXRXPEND, not sending"));
200     } else {
201         // Prepare upstream data transmission at the next possible time.
202         LMIC_setTxData2(1, mydata, sizeof(mydata), 0);
203         Serial.println(F("Packet queued"));
204     }
205     // Next TX is scheduled after TX_COMPLETE event.
206 }
207
208 void setup() {
209     Serial.begin(9600);
210
211     // LMTC init +
```


Device: Arduino IDE

4. Abrir código base nos exemplos

5. Completar com APPEUI, DEVEUI, APPKEY

- APPEUI: linha 49
- DEVEUI: linha 53
- APPKEY: linha 59

6. Configurar IDE

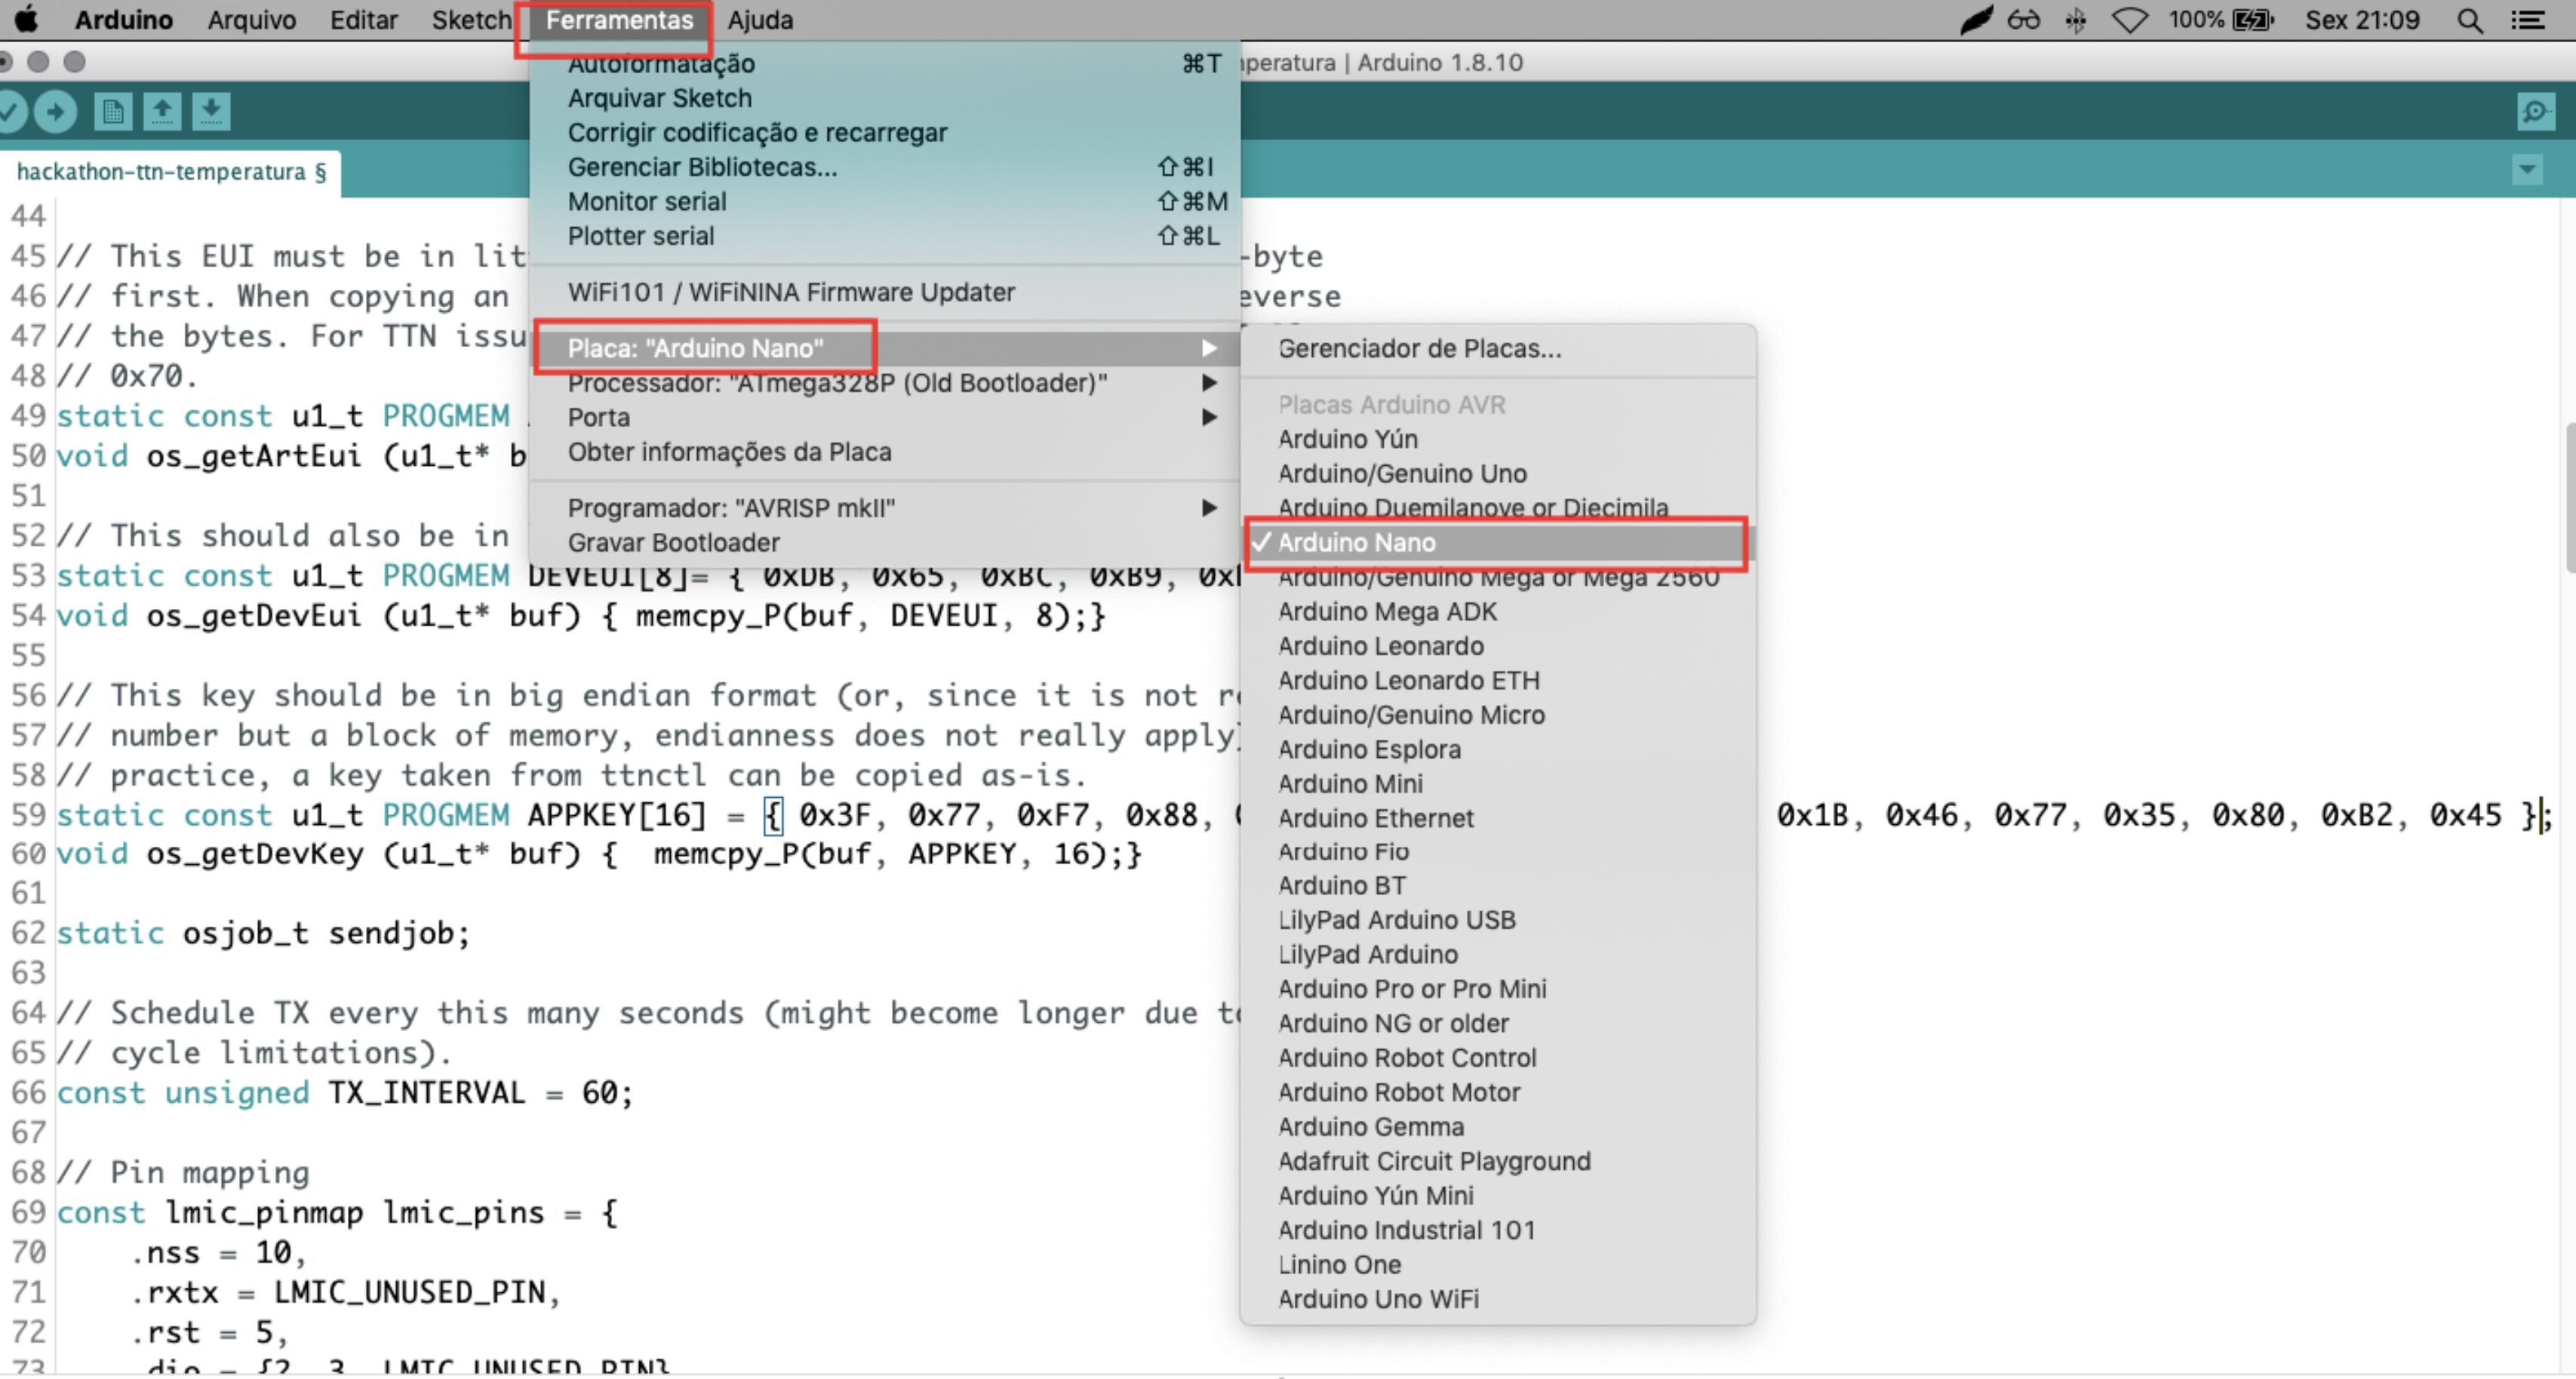

```
hackathon-ttn-temperatura §
44
45 // This EUI must be in little
46 // first. When copying an
47 // the bytes. For TTN issue
48 // 0x70.
49 static const u1_t PROGMEM
50 void os_getArtEui (u1_t* b
51
52 // This should also be in
53 static const u1_t PROGMEM DEVEUI[8] = { 0xDB, 0x65, 0xBC, 0xB9, 0xDB, 0xC2, 0x8D, 0x00 };
54 void os_getDevEui (u1_t* buf) { memcpy_P(buf, DEVEUI, 8);}
55
56 // This key should be in big endian format (or, since it is not really a
57 // number but a block of memory, endianness does not really apply). In
58 // practice, a key taken from ttncctl can be copied as-is.
59 static const u1_t PROGMEM APPKEY[16] = { 0x3F, 0x77, 0xF7, 0x88, 0x18, 0xC1, 0x58, 0x89, 0x0F, 0x1B, 0x46, 0x77, 0x35, 0x80, 0xB2, 0x45 };
60 void os_getDevKey (u1_t* buf) { memcpy_P(buf, APPKEY, 16);}
61
62 static osjob_t sendjob;
63
64 // Schedule TX every this many seconds (might become longer due to duty
65 // cycle limitations).
66 const unsigned TX_INTERVAL = 60;
67
68 // Pin mapping
69 const lmic_pinmap lmic_pins = {
70     .nss = 10,
71     .rxtx = LMIC_UNUSED_PIN,
72     .rst = 5,
73     .dio_52 = LMIC_UNUSED_DIO_52
```


Autoformatação
Arquivar Sketch
Corrigir codificação e recarregar
Gerenciar Bibliotecas...
Monitor serial
Plotter serial
WiFi101 / WiFiNINA Firmware Updater
Placa: "Arduino Nano"
Processador: "ATmega328P (Old Bootloader)"
Porta
Obter informações da Placa
Programador: "AVRISP mkII"
Gravar Bootloader

Byte
reverse
0xB3,
ATmega328P
✓ ATmega328P (Old Bootloader)
ATmega168

```
hackathon-ttn-temperatura §
44
45 // This EUI must be in little
46 // first. When copying an
47 // the bytes. For TTN issue
48 // 0x70.
49 static const u1_t PROGMEM
50 void os_getArtEui (u1_t* b
51
52 // This should also be in
53 static const u1_t PROGMEM DEVEUI[8] = { 0xDB, 0x65, 0xBC, 0xB9, 0x10,
54 void os_getDevEui (u1_t* buf) { memcpy_P(buf, DEVEUI, 8);}
55
56 // This key should be in big endian format (or, since it is not really a
57 // number but a block of memory, endianness does not really apply). In
58 // practice, a key taken from ttncctl can be copied as-is.
59 static const u1_t PROGMEM APPKEY[16] = { 0x3F, 0x77, 0xF7, 0x88, 0x18, 0xC1, 0x58, 0x89, 0x0F, 0x1B, 0x46, 0x77, 0x35, 0x80, 0xB2, 0x45 };
60 void os_getDevKey (u1_t* buf) { memcpy_P(buf, APPKEY, 16);}
61
62 static osjob_t sendjob;
63
64 // Schedule TX every this many seconds (might become longer due to duty
65 // cycle limitations).
66 const unsigned TX_INTERVAL = 60;
67
68 // Pin mapping
69 const lmic_pinmap lmic_pins = {
70     .nss = 10,
71     .rxtx = LMIC_UNUSED_PIN,
72     .rst = 5,
73     .dio_52 = LMIC_UNUSED_PIN,
```

Autoformatação
Arquivar Sketch
Corrigir codificação e recarregar
Gerenciar Bibliotecas...
Monitor serial
Plotter serial
WiFi101 / WiFiNINA Firmware Updater
Placa: "Arduino Nano"
Processador: "ATmega328P (Old Bootloader)"
Porta: "/dev/cu.wchusbserial1410" ▶
Obter informações da Placa
Programador: "AVRISP mkII"
Gravar Bootloader

Portas seriais
/dev/cu.Bluetooth-Incoming-Port
/dev/cu.JBLFlip3-SPPDev
/dev/cu.JBLFlip3-SPPDev-1
/dev/cu.JBLFlip3-SPPDev-3
/dev/cu.usbserial-1410
✓ /dev/cu.wchusbserial1410

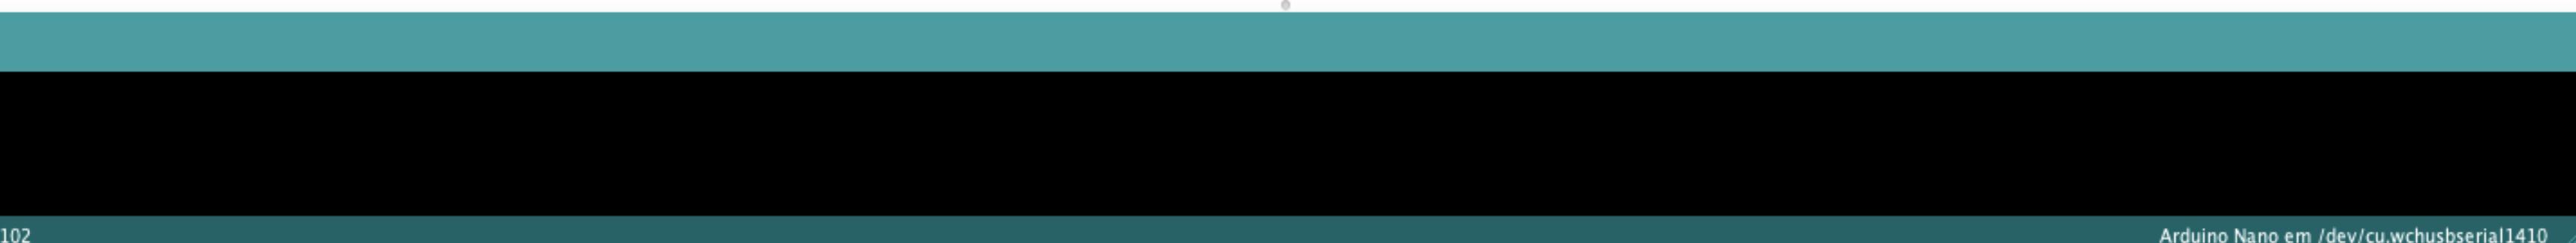

hackathon-ttn-temperatura | Arduino 1.8.10

Verificar

```
44
45 // This EUI must be in little-endian format, so least-significant-byte
46 // first. When copying an EUI from ttncctl output, this means to reverse
47 // the bytes. For TTN issued EUIs the last bytes should be 0xD5, 0xB3,
48 // 0x70.
49 static const u1_t PROGMEM APPEUI[8] = { 0xAE, 0x4E, 0x02, 0xD0, 0x7E, 0xD5, 0xB3, 0x70 };
50 void os_getArtEui (u1_t* buf) { memcpy_P(buf, APPEUI, 8);}
51
52 // This should also be in little endian format, see above.
53 static const u1_t PROGMEM DEVEUI[8] = { 0xDB, 0x65, 0xBC, 0xB9, 0xDB, 0xC2, 0x8D, 0x00 };
54 void os_getDevEui (u1_t* buf) { memcpy_P(buf, DEVEUI, 8);}
55
56 // This key should be in big endian format (or, since it is not really a
57 // number but a block of memory, endianness does not really apply). In
58 // practice, a key taken from ttncctl can be copied as-is.
59 static const u1_t PROGMEM APPKEY[16] = { 0x3F, 0x77, 0xF7, 0x88, 0x18, 0xC1, 0x58, 0x89, 0x0F, 0x1B, 0x46, 0x77, 0x35, 0x80, 0xB2, 0x45 };
60 void os_getDevKey (u1_t* buf) { memcpy_P(buf, APPKEY, 16);}
61
62 static osjob_t sendjob;
63
64 // Schedule TX every this many seconds (might become longer due to duty
65 // cycle limitations).
66 const unsigned TX_INTERVAL = 60;
67
68 // Pin mapping
69 const lmic_pinmap lmic_pins = {
70     .nss = 10,
71     .rxtx = LMIC_UNUSED_PIN,
72     .rst = 5,
73     .dio_0 = 52 // LMIC_UNUSED_DTMR
```

ttn-otaa-temperatura | Arduino 1.8.10

```
44
45 // This EUI must be in little-endian format, so least-significant-byte
46 // first. When copying an EUI from ttncctl output, this means to reverse
47 // the bytes. For TTN issued EUIs the last bytes should be 0xD5, 0xB3,
48 // 0x70.
49 static const u1_t PROGMEM APPEUI[8] = { 0xAE, 0x4E, 0x02, 0xD0, 0x7E, 0xD5, 0xB3, 0x70 };
50 void os_getArtEui (u1_t* buf) { memcpy_P(buf, APPEUI, 8);}
51
52 // This should also be in little endian format, see above.
53 static const u1_t PROGMEM DEVEUI[8] = { 0xDB, 0x65, 0xBC, 0xB9, 0xDB, 0xC2, 0x8D, 0x00 };
54 void os_getDevEui (u1_t* buf) { memcpy_P(buf, DEVEUI, 8);}
55
56 // This key should be in big endian format (or, since it is not really a
57 // number but a block of memory, endianness does not really apply). In
58 // practice, a key taken from ttncctl can be copied as-is.
59 static const u1_t PROGMEM APPKEY[16] = { 0x3F, 0x77, 0xF7, 0x88, 0x18, 0xC1, 0x58, 0x89, 0x0F, 0x1B, 0x46, 0x77, 0x35, 0x80, 0xB2, 0x45 };
60 void os_getDevKey (u1_t* buf) { memcpy_P(buf, APPKEY, 16);}
61
62 static osjob_t sendjob;
63
64 // Schedule TX every this many seconds (might become longer due to duty
65 // cycle limitations).
66 const unsigned TX_INTERVAL = 60;
67
68 // Pin mapping
69 const lmic_pinmap lmic_pins = {
70     .nss = 10,
71     .rxtx = LMIC_UNUSED_PIN,
72     .rst = 5,
```

Compilando sketch...



Monitor serial



```
ttn-otaa-temperatura §
TJ TELMELI
44
45 // This EUI must be in little-endian format, so least-significant-byte
46 // first. When copying an EUI from ttncctl output, this means to reverse
47 // the bytes. For TTN issued EUIs the last bytes should be 0xD5, 0xB3,
48 // 0x70.
49 static const u1_t PROGMEM APPEUI[8] = { 0xAE, 0x4E, 0x02, 0xD0, 0x7E, 0xD5, 0xB3, 0x70 };
50 void os_getArtEui (u1_t* buf) { memcpy_P(buf, APPEUI, 8);}
51
52 // This should also be in little endian format, see above.
53 static const u1_t PROGMEM DEVEUI[8] = { 0xDB, 0x65, 0xBC, 0xB9, 0xDB, 0xC2, 0x8D, 0x00 };
54 void os_getDevEui (u1_t* buf) { memcpy_P(buf, DEVEUI, 8);}
55
56 // This key should be in big endian format (or, since it is not really a
57 // number but a block of memory, endianness does not really apply). In
58 // practice, a key taken from ttncctl can be copied as-is.
59 static const u1_t PROGMEM APPKEY[16] = { 0x3F, 0x77, 0xF7, 0x88, 0x18, 0xC1, 0x58, 0x89, 0x0F, 0x1B, 0x46, 0x77, 0x35, 0x80, 0xB2, 0x45 };
60 void os_getDevKey (u1_t* buf) { memcpy_P(buf, APPKEY, 16);}
61
62 static osjob_t sendjob;
63
64 // Schedule TX every this many seconds (might become longer due to duty
65 // cycle limitations).
66 const unsigned TX_INTERVAL = 60;
67
68 // Pin mapping
69 const lmic_pinmap lmic_pins = {
70     .nss = 10,
71     .rxtx = LMIC_UNUSED_PIN,
72     .rst = 5,
```

Carregado.

O sketch usa 24284 bytes (79%) de espaço de armazenamento para programas. O máximo são 30720 bytes.

Variáveis globais usam 1769 bytes (86%) de memória dinâmica, deixando 279 bytes para variáveis locais. O máximo são 2048 bytes.

Pouca memória disponível, problemas de estabilidade podem ocorrer.

Arduino 66 100% Sex 21:39

ttn-otaa-temperatura §

44

45 // This EUI must be in little-endian form
46 // first. When copying an EUI from ttctrl
47 // the bytes. For TTN issued EUIs the last
48 // 0x70.

49 static const u1_t PROGMEM APPEUI[8] = { 0x
50 void os_getArtEui (u1_t* buf) { memcpy_P(

51

52 // This should also be in little endian fo
53 static const u1_t PROGMEM DEVEUI[8] = { 0x
54 void os_getDevEui (u1_t* buf) { memcpy_P(

55

56 // This key should be in big endian forma
57 // number but a block of memory, endianne
58 // practice, a key taken from ttctrl can
59 static const u1_t PROGMEM APPKEY[16] = { 0
60 void os_getDevKey (u1_t* buf) { memcpy_P(

61

62 static osjob_t sendjob;

63

64 // Schedule TX every this many seconds (m
65 // cycle limitations).

66 const unsigned TX_INTERVAL = 60;

67

68 // Pin mapping

69 const lmic_pinmap lmic_pins = {
70 .nss = 10,
71 .rxtx = LMIC_UNUSED_PIN,
72 .rst = 5,

Carregado.

O sketch usa 24284 bytes (79%) de espaço de ar
Variáveis globais usam 1769 bytes (86%) de mem
Pouca memória disponível, problemas de estabil

/dev/cu.wchusbserial1410

Enviar

Temperatura aproximada: 23°C

Packet queued

3155: EV_JOINING

4582: EV_TXSTART

Temperatura aproximada: 24°C

Packet queued

3180: EV_JOINING

4607: EV_TXSTART

347207: EV_JOINED

netid: 19

devaddr: 260017AE

artKey: 4CFE7D4835FAD77CB24130C7FE64D834

nwkKey: BCA13D4B5BFAEDB7FBAFC82A7CD5396C

351992: EV_TXSTART

499728: EV_TXCOMPLETE (includes waiting for RX windows)

Auto-rolagem Show timestamp

Nova-linha

9600 velocidade

Deleta a saída

DEVICE OVERVIEW

Application ID hackathon-ttn-florianopolis

Device ID device-sensor-temperatura

Activation Method OTAA

Device EUI 00 E3 B7 94 B7 BF 9A E0 

Application EUI 70 B3 D5 7E D0 02 4E AE 

App Key 

Device Address 26 01 25 42 

Network Session Key 

App Session Key 

Status ● 39 seconds ago

Frames up 7 [reset frame counters](#)


APPLICATION DATA

II pause ⌛ clear

Filters uplink downlink activation ack error

time	counter	port				
▲ 21:44:02	1	1	dev id:	device-sensor-temperatura	payload:	18
▲ 21:43:00	0	1	retry	dev id:	device-sensor-temperatura	payload: 17
⚡ 21:42:55				dev id:	device-sensor-temperatura	dev addr: 26 06 2CCD app eui: 70 B3 D5 7E D0 02 4E AE dev eui: 00 8C

Fase 4/5

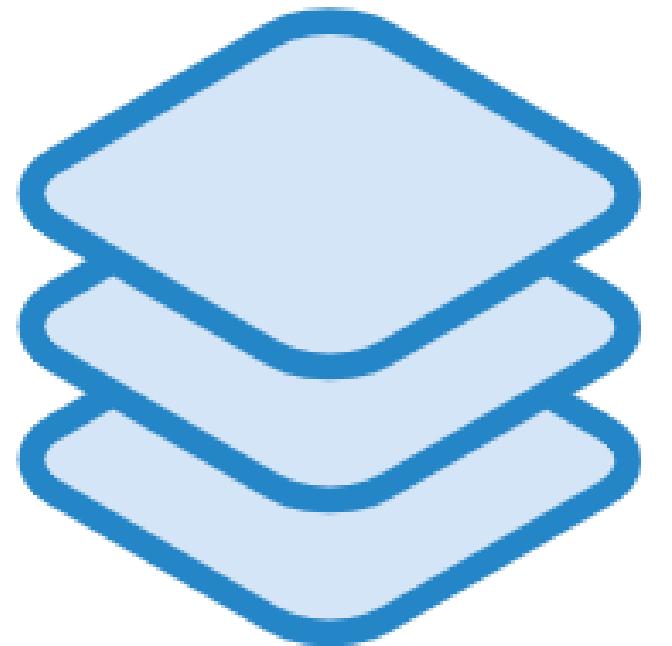


Aplicação: payload

Aplicação: payload

1. Decodificar o payload

Tornar o payload legível transformando
um valor hexadecimal em decimal

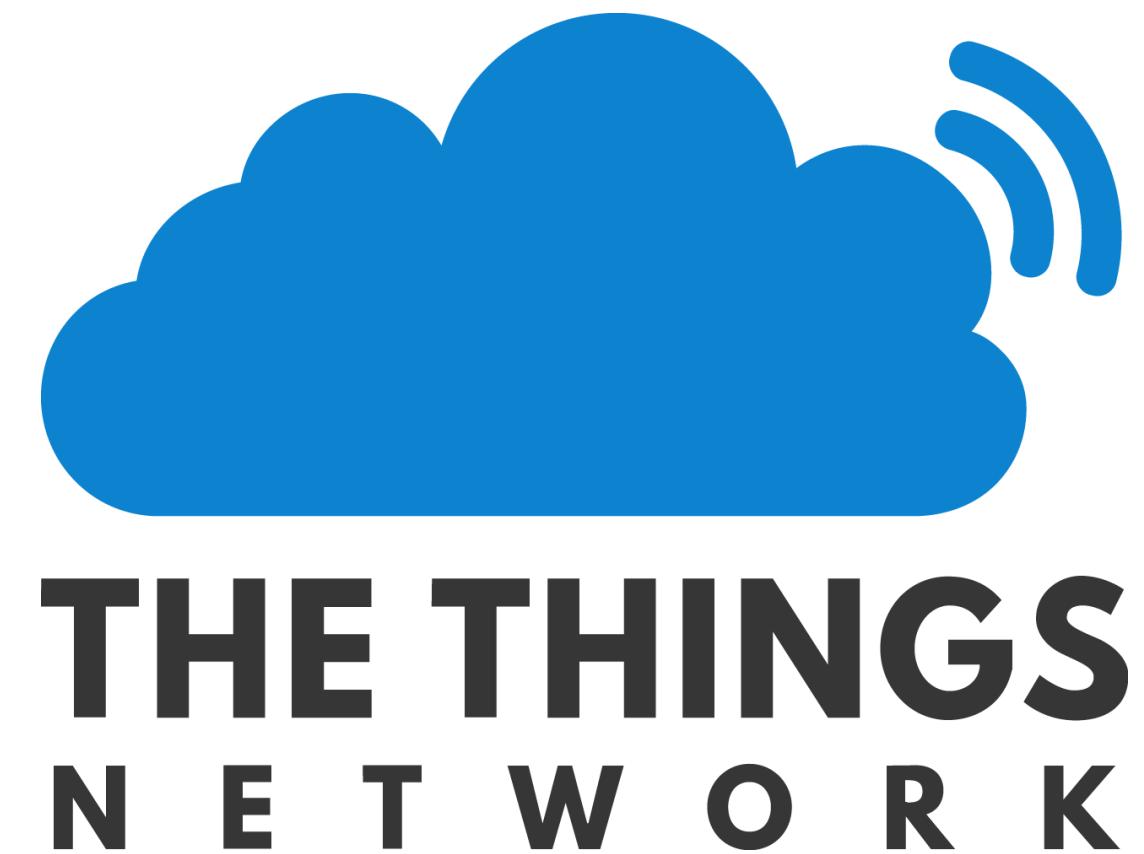

APPLICATION DATA

II pause  clear

Filters     

time	counter	port	
▲ 00:58:13	25	1	payload: 16
▲ 00:57:11	24	1	payload: 16
▲ 00:56:08	23	1	payload: 16
▲ 00:55:06	22	1	payload: 16
▲ 00:54:04	21	1	payload: 16
▲ 00:53:01	20	1	payload: 16
▲ 00:49:54	17	1	payload: 16
▲ 00:48:52	16	1	payload: 16
▲ 00:45:44	13	1	payload: 16
▲ 00:43:39	11	1	payload: 16

[Overview](#)[Devices](#)[Payload Formats](#)[Integrations](#)[Data](#)[Settings](#)

APPLICATION OVERVIEW

[documentation](#)**Application ID** **hackathon-ttn-floripa****Description** Sensor de temperatura**Created** 23 minutes ago**Handler** meshed-handler

APPLICATION EUIS

[manage euis](#)   70 B3 D5 7E D0 02 54 43

DEVICES

[register device](#) [manage devices](#)

[decoder](#) [converter](#) [validator](#) [encoder](#)[remove decoder](#)

```
1 function Decoder(bytes, port) {  
2     var value1 = bytes[0];  
3  
4     return {  
5         Temperatura: value1+"°C"  
6     };  
7 }
```

decoder has unsaved changes [undo changes](#)

Payload

16

1 byte

1

[Test](#)

```
{  
    "Temperatura": "22°C"  
}
```

 Payload was valid

```
1 function Decoder(bytes, port) {  
2     var value1 = bytes[0];  
3  
4     return {  
5         Temperatura: value1+"°C"  
6     };  
7 }
```

decoder has unsaved changes [undo changes](#)

Payload

16

1 byte

1

Test

```
{  
    "Temperatura": "22°C"  
}
```

■ Payload was valid

Cancel

save payload functions

PAYLOAD FORMATS

Payload Format

The payload format sent by your devices

Custom



[decoder](#)

converter

validator

encoder

[remove decoder](#)


```
1 function Decoder(bytes, port) {
2   var value1 = bytes[0];
3
4   return {
5     Temperatura: value1+"°C"
6   };
7 }
```

decoder has no changes

Payload

APPLICATION DATA				
Filters				
	time	counter	port	
▲	22:22:43	42	1	payload: 1C Temperatura: "28°C"
▲	22:22:11	41	1	payload: 1E Temperatura: "30°C"
▲	22:21:38	40	1	payload: 1F Temperatura: "31°C"
▲	22:21:06	39	1	payload: 21 Temperatura: "33°C"
▲	22:20:34	38	1	payload: 24 Temperatura: "36°C"
▲	22:20:01	37	1	payload: 16 Temperatura: "22°C"
▲	22:19:29	36	1	payload: 16
▲	22:18:56	35	1	payload: 15
▲	22:18:24	34	1	payload: 16
▲	22:17:52	33	1	payload: 16

Fase 5/5

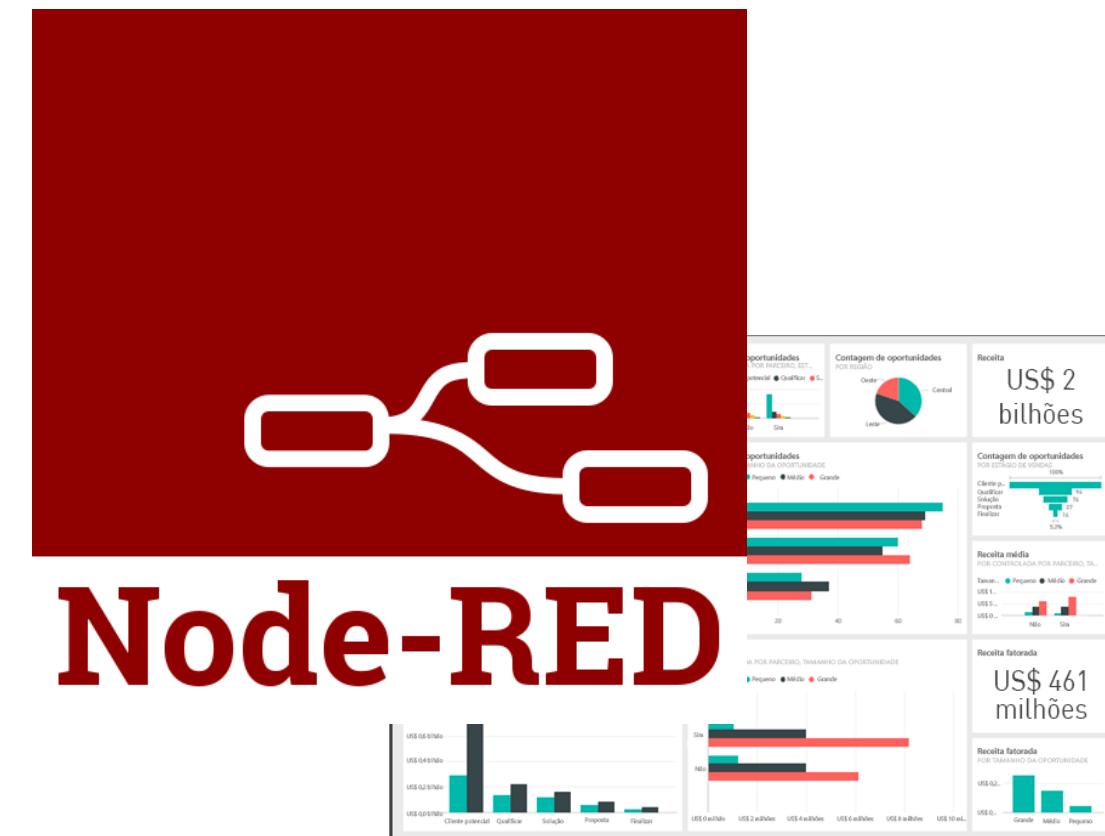

Node-RED

Node-RED: dashboard

Node-RED: dashboard

1. Instalar Node.js

2. Instalar Node-RED

Instalação


```
> npm install -g --unsafe-perm node-red
```

Inicialização

```
> node-red
```

Acesso pelo navegador

<http://127.0.0.1:1880/>

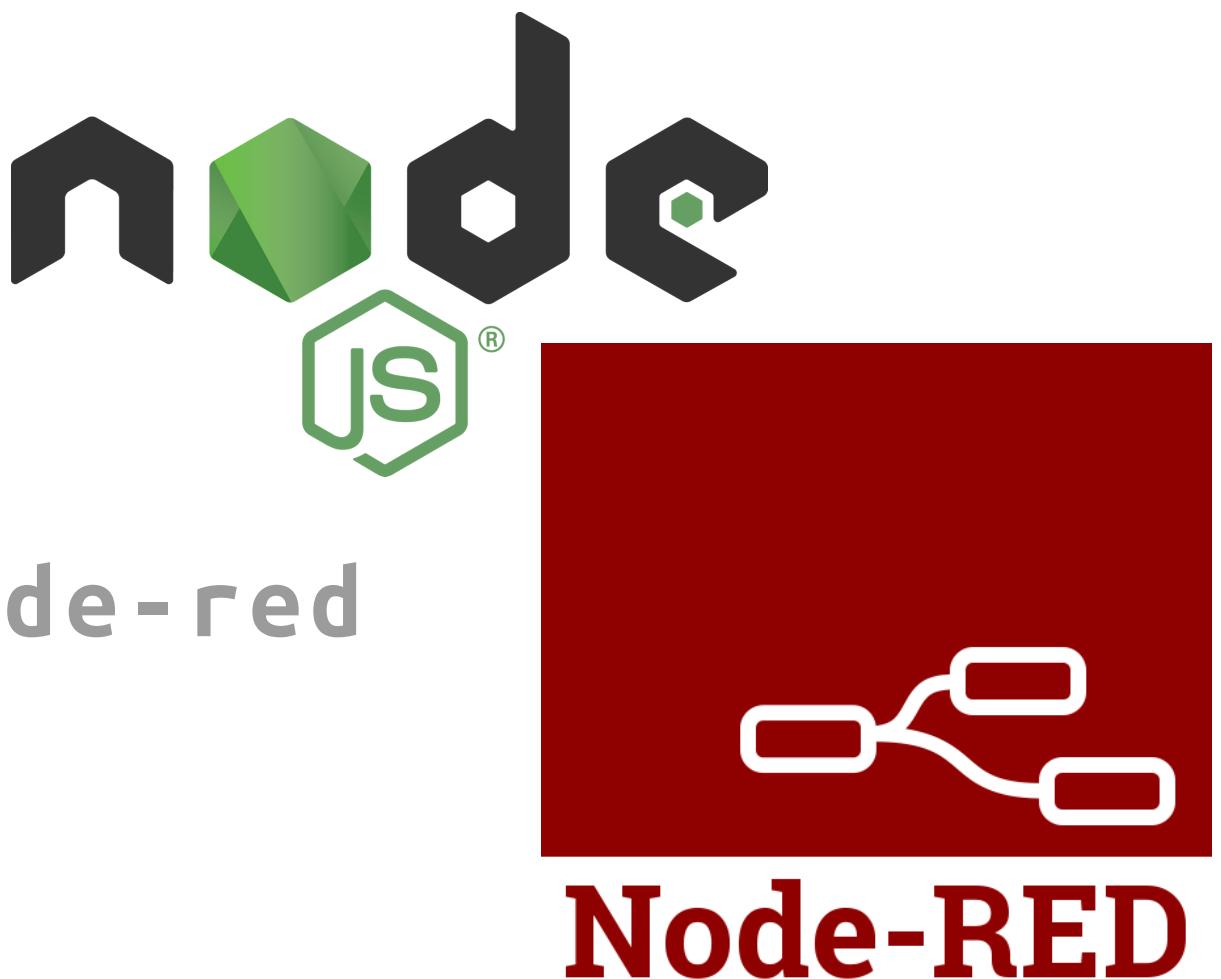

Node-RED: dashboard

Node.js

The screenshot shows the official Node.js website's "Downloads" page. At the top, there is a dark navigation bar with the Node.js logo and links for HOME, ABOUT, DOWNLOADS, DOCS, GET INVOLVED, SECURITY, NEWS, and FOUNDATION. The FOUNDATION link is highlighted with a green background. On the left, a large "Downloads" heading is followed by a note about the latest LTS version (12.13.0). Below this, a call to action encourages users to download source code or pre-built installers for their platform. Two main download sections are shown: "LTS" (Recommended For Most Users) and "Current" (Latest Features). Each section includes icons for Windows, macOS, and Source Code.

node

HOME | ABOUT | DOWNLOADS | DOCS | GET INVOLVED | SECURITY | NEWS | FOUNDATION

G X

Downloads

Latest LTS Version: 12.13.0 (includes npm 6.12.0)

Download the Node.js source code or a pre-built installer for your platform, and start developing today.

LTS

Recommended For Most Users

Current

Latest Features

Windows Installer

macOS Installer

Source Code

Node-RED

1. Instalar Node.js

2. Instalar Node-RED

Instalação


```
> npm install -g --unsafe-perm node-red
```

Inicialização

```
> node-red
```

Acesso pelo navegador

<http://127.0.0.1:1880/>

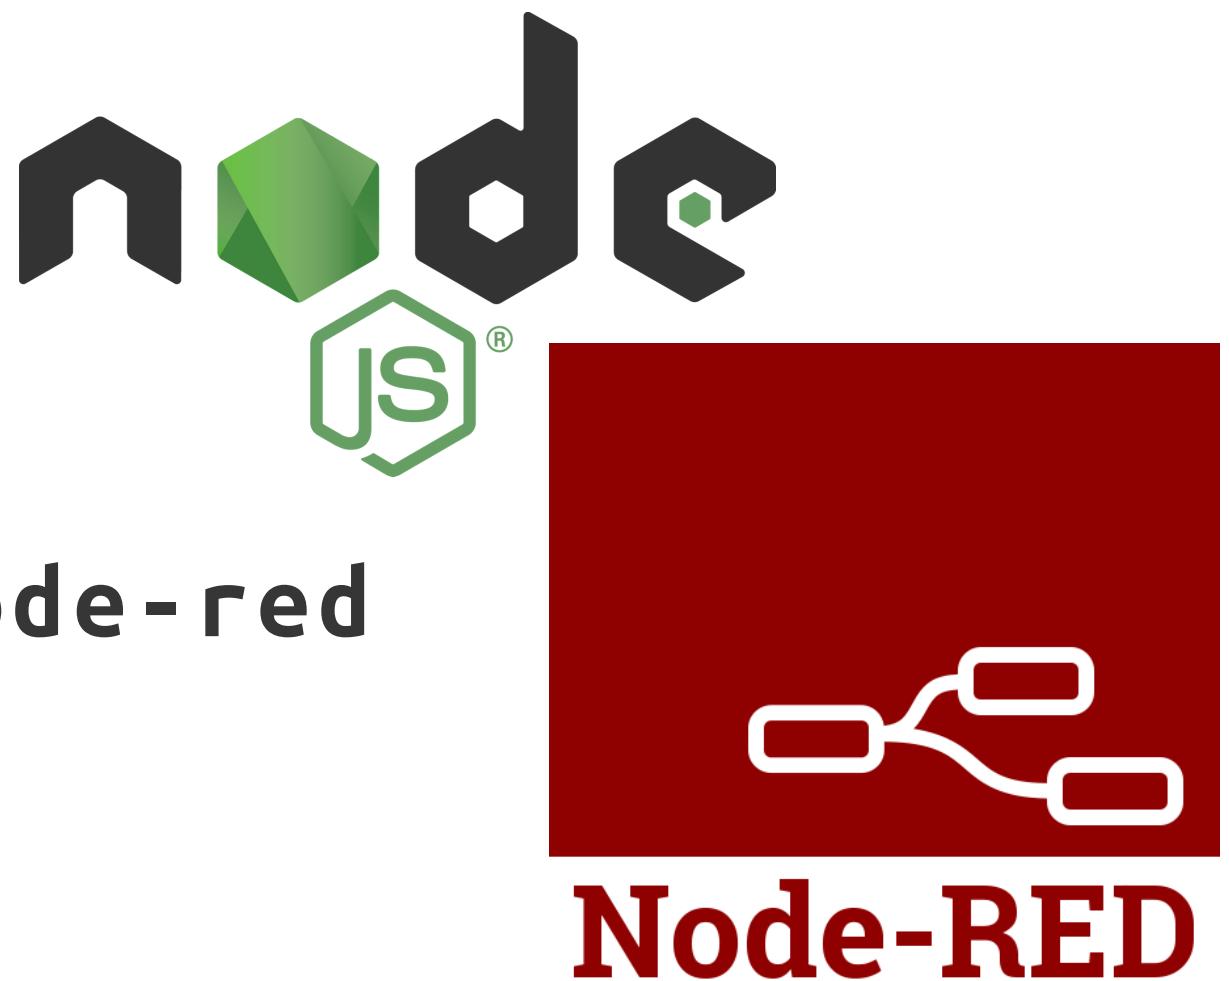

filter nodes

Flow 1



common



inject



debug



complete



catch



status



link in



link out




comment

function



function

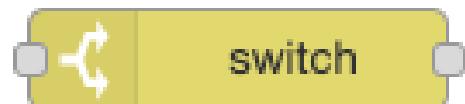

switch



info

View

Infor▼

Import

Flow

Export

Name

Search flows

Status

Desc▼

Flows

Subflows

Manage palette

Settings

Keyboard shortcuts

Node-RED website

v1.0.2

Hold down when you click on
a node port to enable quick-wiring



User Settings

View Nodes **Install**

filter nodes

node-red
1.0.2
46 nodes

node-red-node-rbe
0.2.5
1 node

node-red-node-tail
0.0.3
1 node

Close

Palette



i info

Information

Flow "7e3545a4.a305dc"
Name Flow 1
Status Enabled

Description

You can remove the selected nodes or links with delete

Close X

User Settings

View Nodes Install

sort: ↓ a-z recent

5 / 2275 ×

node-red-dashboard

node-red-dashboard A set of dashboard nodes for Node-RED 2.17.1 2 weeks ago install

node-red-node-ui-list Node-RED Dashboard UI widget node for simple list 0.2.4 2 weeks ago install

node-red-node-ui-vega Node-RED UI widget node for Vega visualization grammar 0.1.2 5 days ago install

node-red-node-ui-table Table UI widget node for Node-RED Dashboard 0.1.5 1 month ago install

Close

i info

Information

Flow "7e3545a4.a305dc"

Name Flow 1

Status Enabled

Description

Your flow configuration nodes are listed in the sidebar panel. It can be accessed from the menu or with **#g** **c**

filter nod

commo



User Settings

View

Nodes

Cancel

Open node information

Install

sort: a-z recent

5 / 2275

node-red-dashboard

node-red-dashboard

A set of dashboard nodes for Node-RED

2.17.1 2 weeks ago

install

node-red-node-ui-list

Node-RED Dashboard UI widget node for simple list

0.2.4 2 weeks ago

install

node-red-node-ui-vega

Node-RED UI widget node for Vega visualization grammar

0.1.2 5 days ago

install

node-red-node-ui-table

Table UI widget node for Node-RED Dashboard

0.1.5 1 month ago

install

i info

i

x

Information

Flow

"7e3545a4.a305dc"

Flow 1

Enabled

Status

Description

Dragging a node onto a wire will
splice it into the link

filter node

common

debounce

!

!

link

functions

f

share

User Settings

View Nodes Install

sort: a-z recent

1 / 2275

node-red-contrib-ttn

node-red-contrib-ttn

The Things Network Node-RED Application Nodes

2.0.5 10 months ago

install

A red arrow points from the "Palette" button in the sidebar to the search bar.

i info

Information

Flow: 7e3545a4.a305dc

Name: Flow 1

Status: Enabled

Description

Search for nodes using

A red arrow points from the "Description" section to the "Search for nodes using" input field.

filter nod

commo



User Settings

deb



View

Nodes

!

Keyboard

!

Palette

!



link



function



f



Installing 'node-red-contrib-ttn'

Before installing, please read the node's documentation. Some nodes have dependencies that cannot be automatically resolved and can require a restart of Node-RED.

Cancel

Open node information

Install

sort: ↓ a-z recent

1 / 2275

node-red-contrib-ttn

node-red-contrib-ttn

The Things Network Node-RED Application Nodes

2.0.5 10 months ago

install

i info

i

info

info

Information

Flow

"7e3545a4.a305dc"

Flow 1

Enabled


Status

Description

You can manage your palette of

nodes with



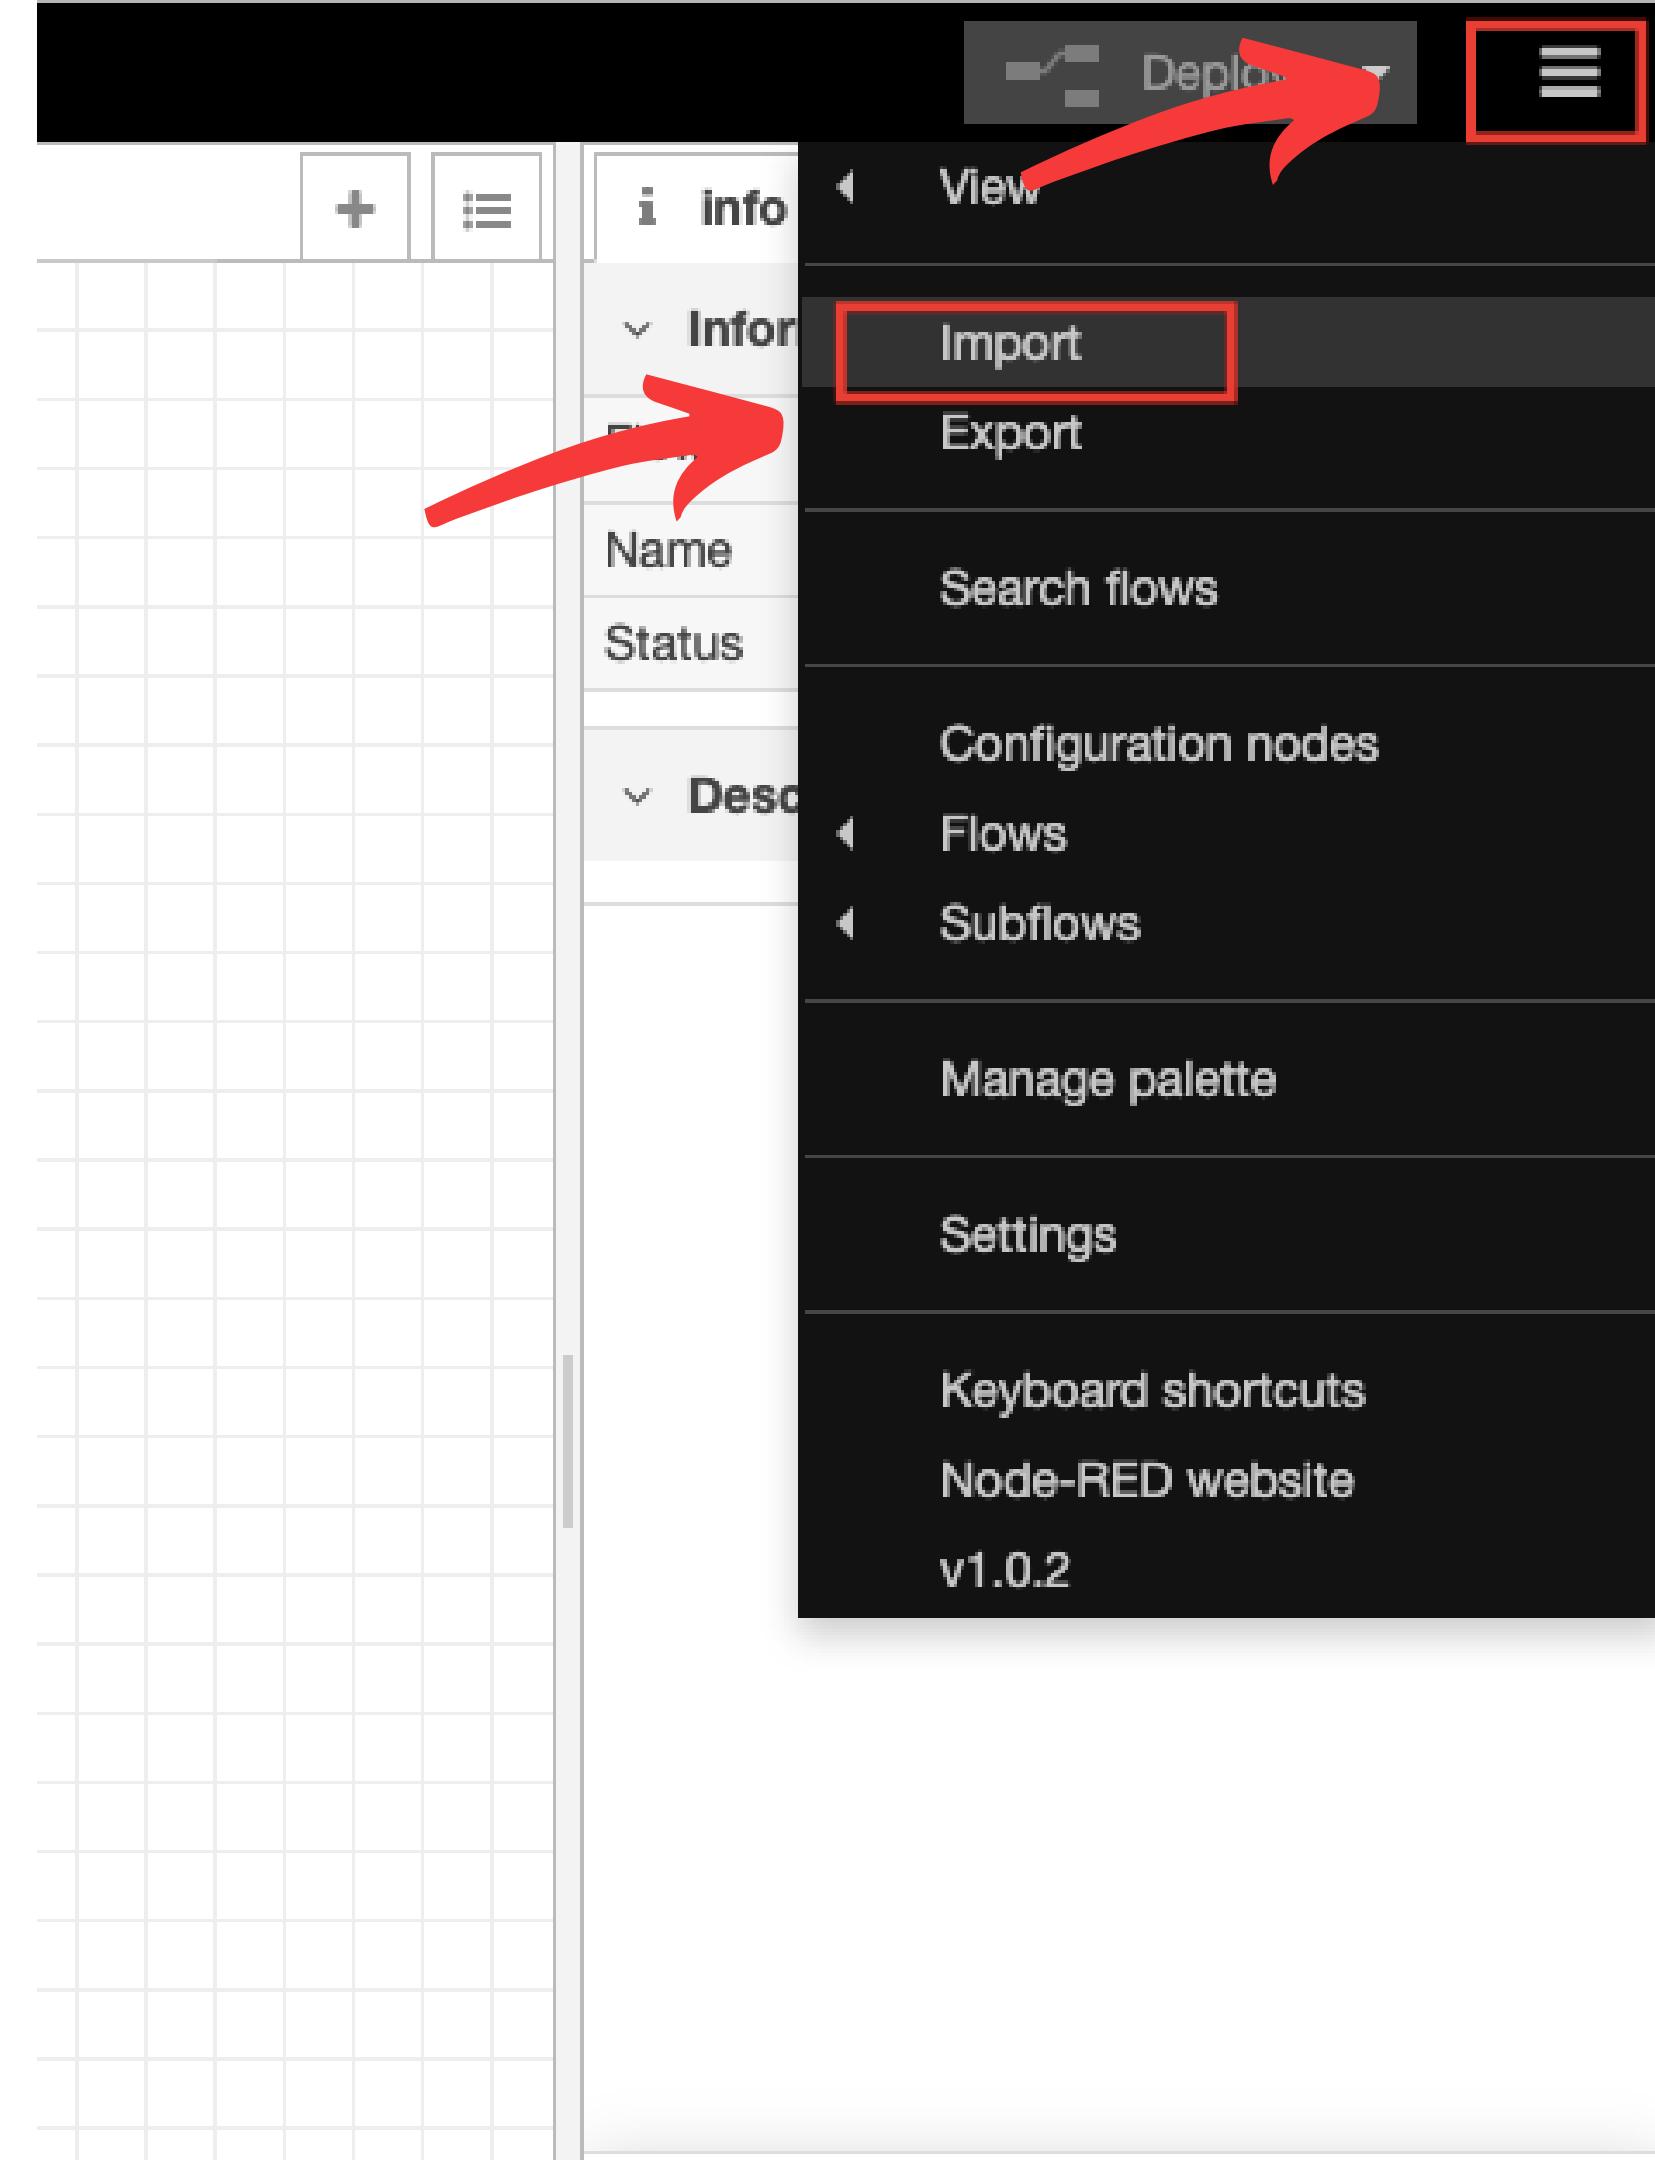

Import nodes

Clipboard

Library

Examples

Paste flow json or

 select a file to import

Import to

current flow

new flow

Cancel

Import

Import nodes

Clipboard

Paste flow json or

Library

```
[{"id":"8a0c0f41.3c76e","type":"tab","label":"Flow 1","disabled":false,"info":""}, {"id":"7624e586.0d1e7c","type":"ttn uplink","z":"8a0c0f41.3c76e","name":"Sensor","app":"","dev_id":"","field":"","x":70,"y":40,"wires": [[{"50790e92.db7b5","c2e0060e.d54eb8","806e2712.8c44c8","5a2c76ea.2b9a98","429fd1b7.9e776"}]], {"id":"50790e92.db7b5","type":"debug","z":"8a0c0f41.3c76e","name":"","active":false,"tosidebar":true,"console":false,"tostatus":false,"complete":true,"x":410,"y":40,"wires":[]}, {"id":"b00f492c.f552b8","type":"debug","z":"8a0c0f41.3c76e","name":"RSSI","active":false,"tosidebar":true,"console":false,"tostatus":false,"complete":true,"x":410,"y":240,"wires":[]}, {"id":"c42ffd9.5d4de","type":"debug","z":"8a0c0f41.3c76e","name":"SNR","active":false,"tosidebar":true,"console":false,"tostatus":false,"complete":true,"x":410,"y":200,"wires":[]}, {"id":"b453ba10.8851c8","type":"debug","z":"8a0c0f41.3c76e","name":"Device","active":false,"tosidebar":true,"console":false, "x":410,"y":160,"wires":[]}], [{"id": "8a0c0f41.3c76e", "label": "Flow 1", "x": 100, "y": 100}]]
```

Examples


Import to

current flow

new flow

Cancel

Import

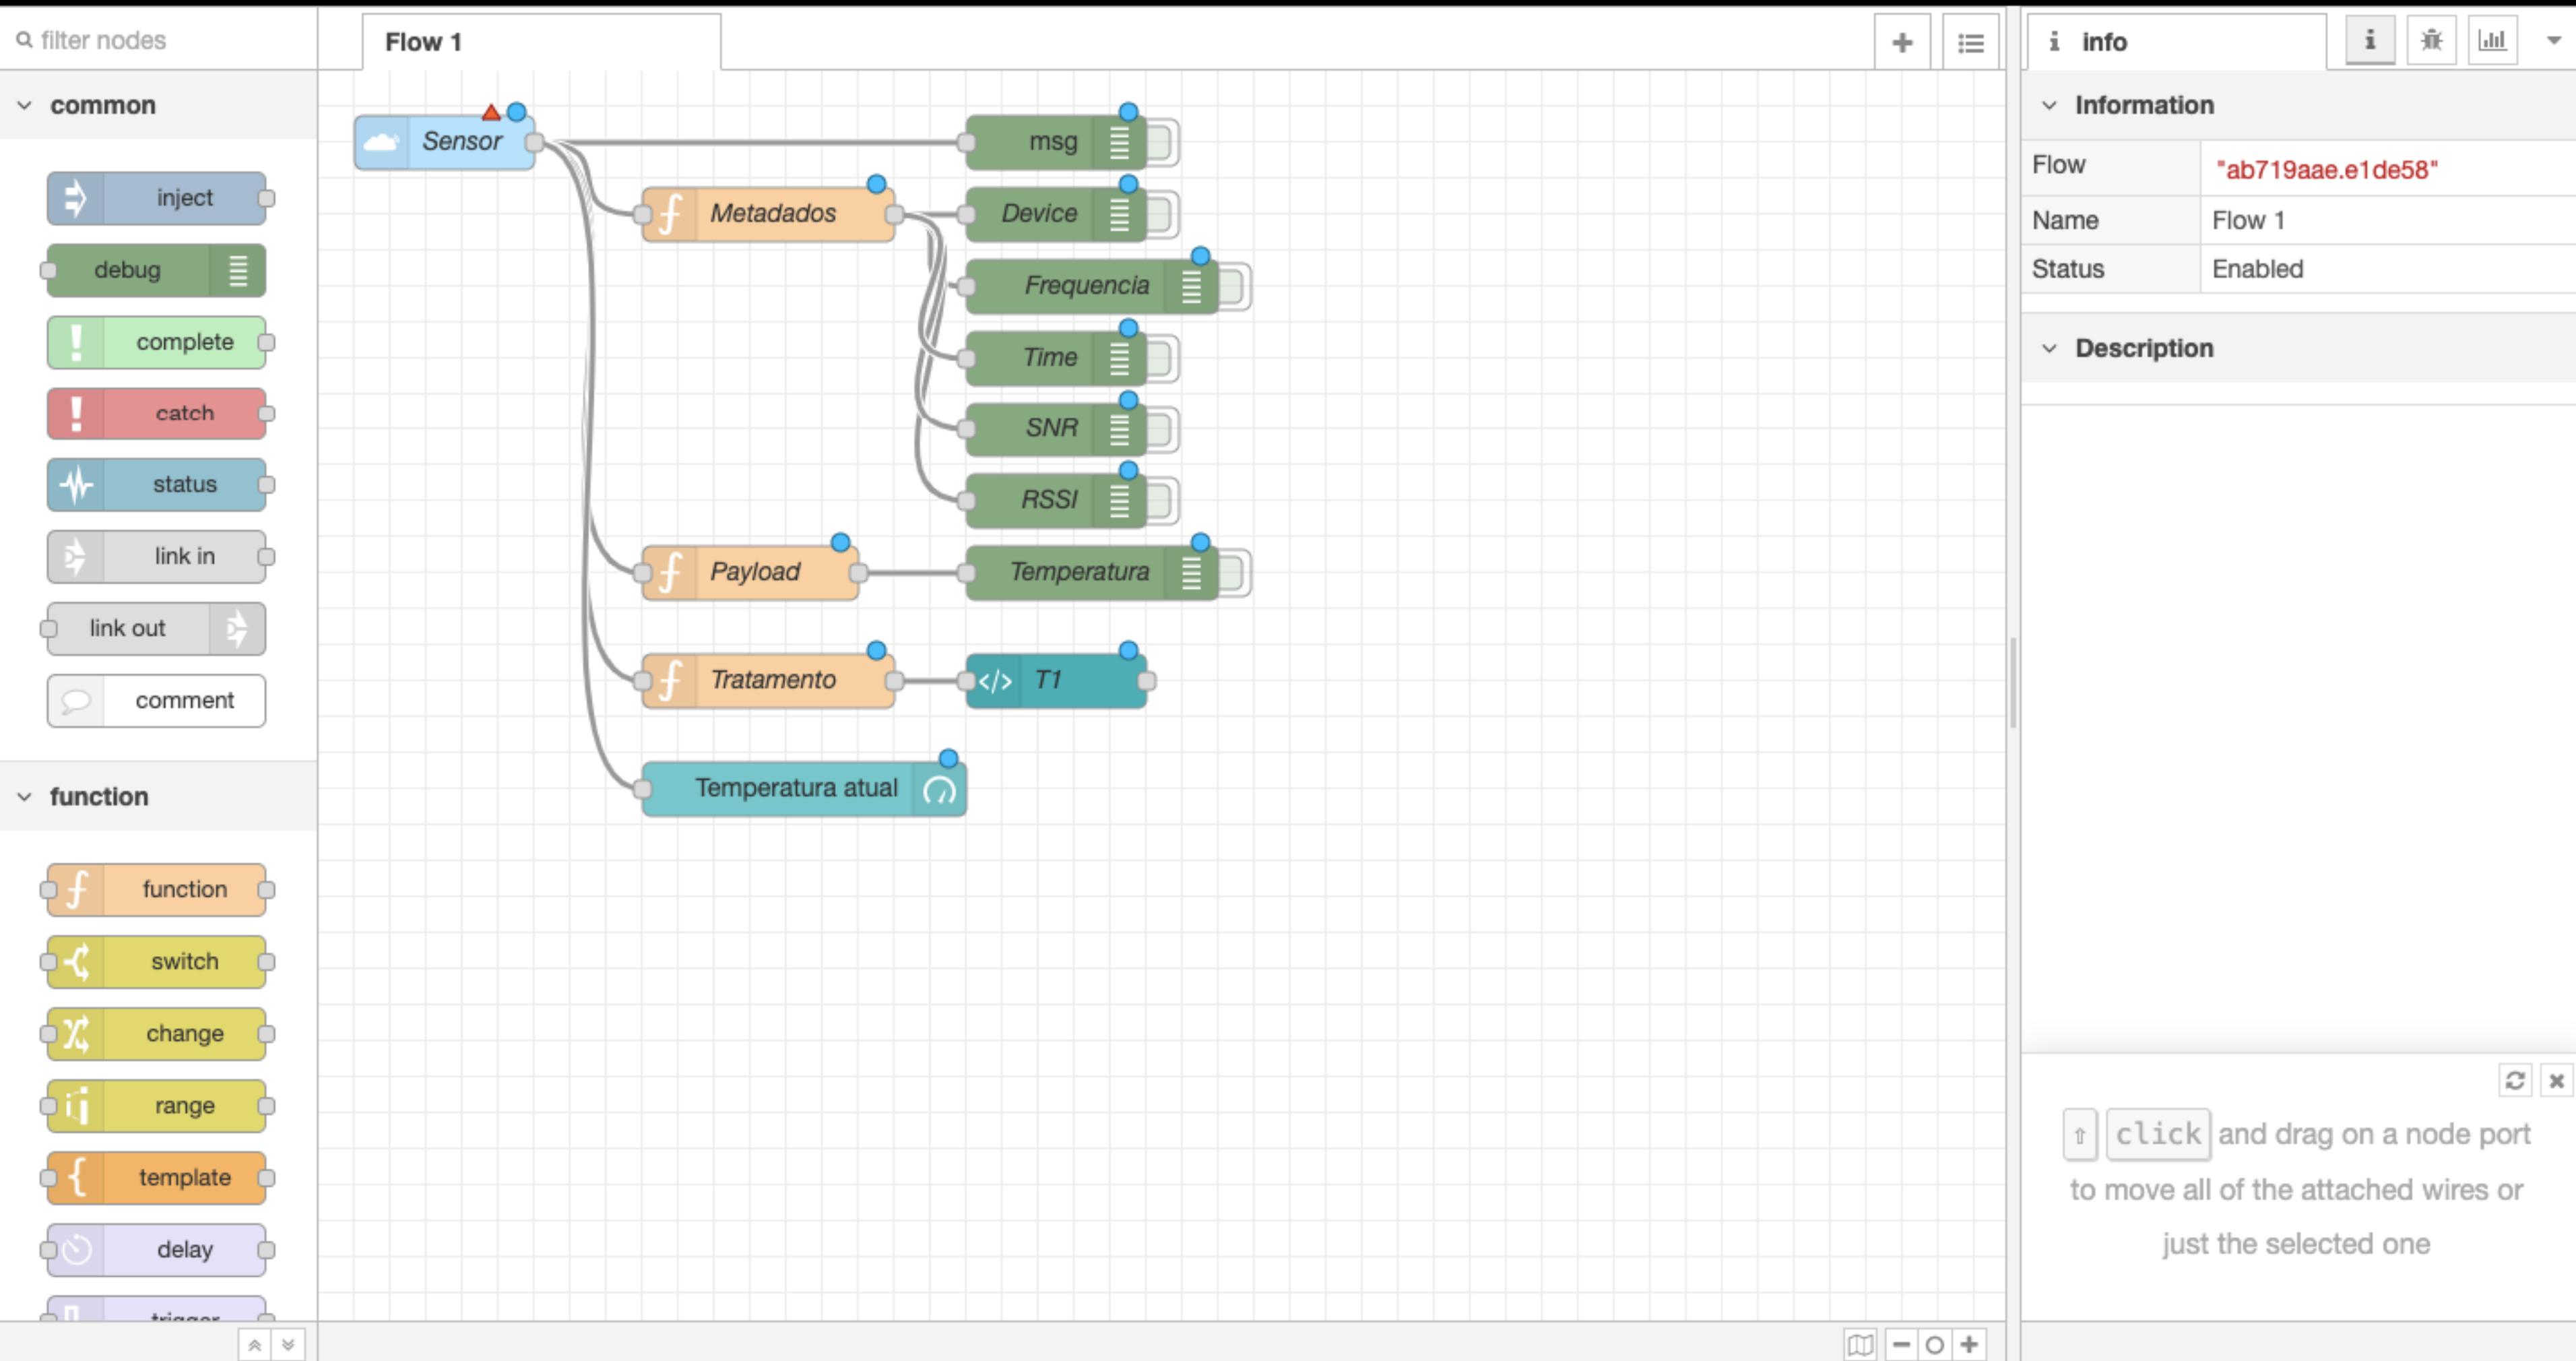

filter nodes

Flow 1

+

=

info

Information

Node: "bfb9c153.55bc5"
Name: Sensor
Type: ttn uplink

Description

A node to receive uplink messages from devices on The Things Network.
The application must be configured in the node.
A device ID and field to filter on can also be configured.

Node Help

The output message:

- **dev_id**, the ID of the device that sent the message.
- **payload**, an object of fields or the specified field if the application is configured with a decoder payload function, or a **Buffer** if it is not.
- Unless a field was specified, the message is

Hold down ⌘ when you click on a node port to enable quick-wiring

inject

debug

complete

catch

status

link in

link out

comment

Sensor

Metadados

Device

Frequencia

Time

SNR

RSSI

Payload

Tratamento

T1

Temperatura

Temperatura atual

Edit ttu uplink node

[Delete](#) [Cancel](#) [Done](#)

Properties

Name Sensor 

App Add new ttu app... 

Device ID

Field

Edit ttu uplink node

Delete Cancel Done

Properties


Name: Sensor

App: 

Add new ttu app... 

Device ID:

Field:

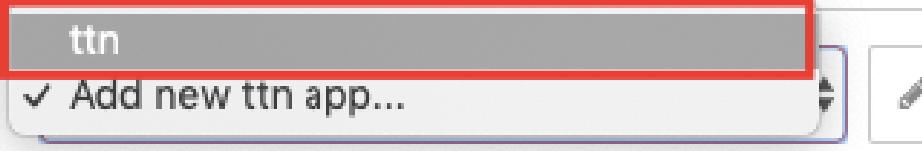

Edit ttu uplink node

Delete Cancel Done

Properties

Name: Sensor

App: 

Device ID:

Field:



Edit ttn uplink node > **Edit ttn app node**

Delete **Cancel** **Update**

Properties  

 App ID

 Access Key

 Discovery address



APPLICATION OVERVIEW

[documentation](#)**Application ID** **hackathon-ttn-floripa****Description** Sensor de temperatura**Created** 2 hours ago**Handler** meshed-handler

APPLICATION EUIS

[manage_euis](#)  **70 B3 D5 7E D0 02 54 43** 

DEVICES

 [register device](#)  [manage devices](#)**1** registered device

DEVICES

 1 registered device

COLLABORATORS

 tutui

[collaborators](#) [delete](#) [devices](#) [settings](#)

ACCESS KEYS

default key [devices](#) [messages](#)

 base64 



Edit ttn uplink node > **Edit ttn app node**

Delete

Cancel

Update

Properties



hackathon-ttn-floripa




.....



Discovery
address

discovery.thethingsnetwork.org:1900

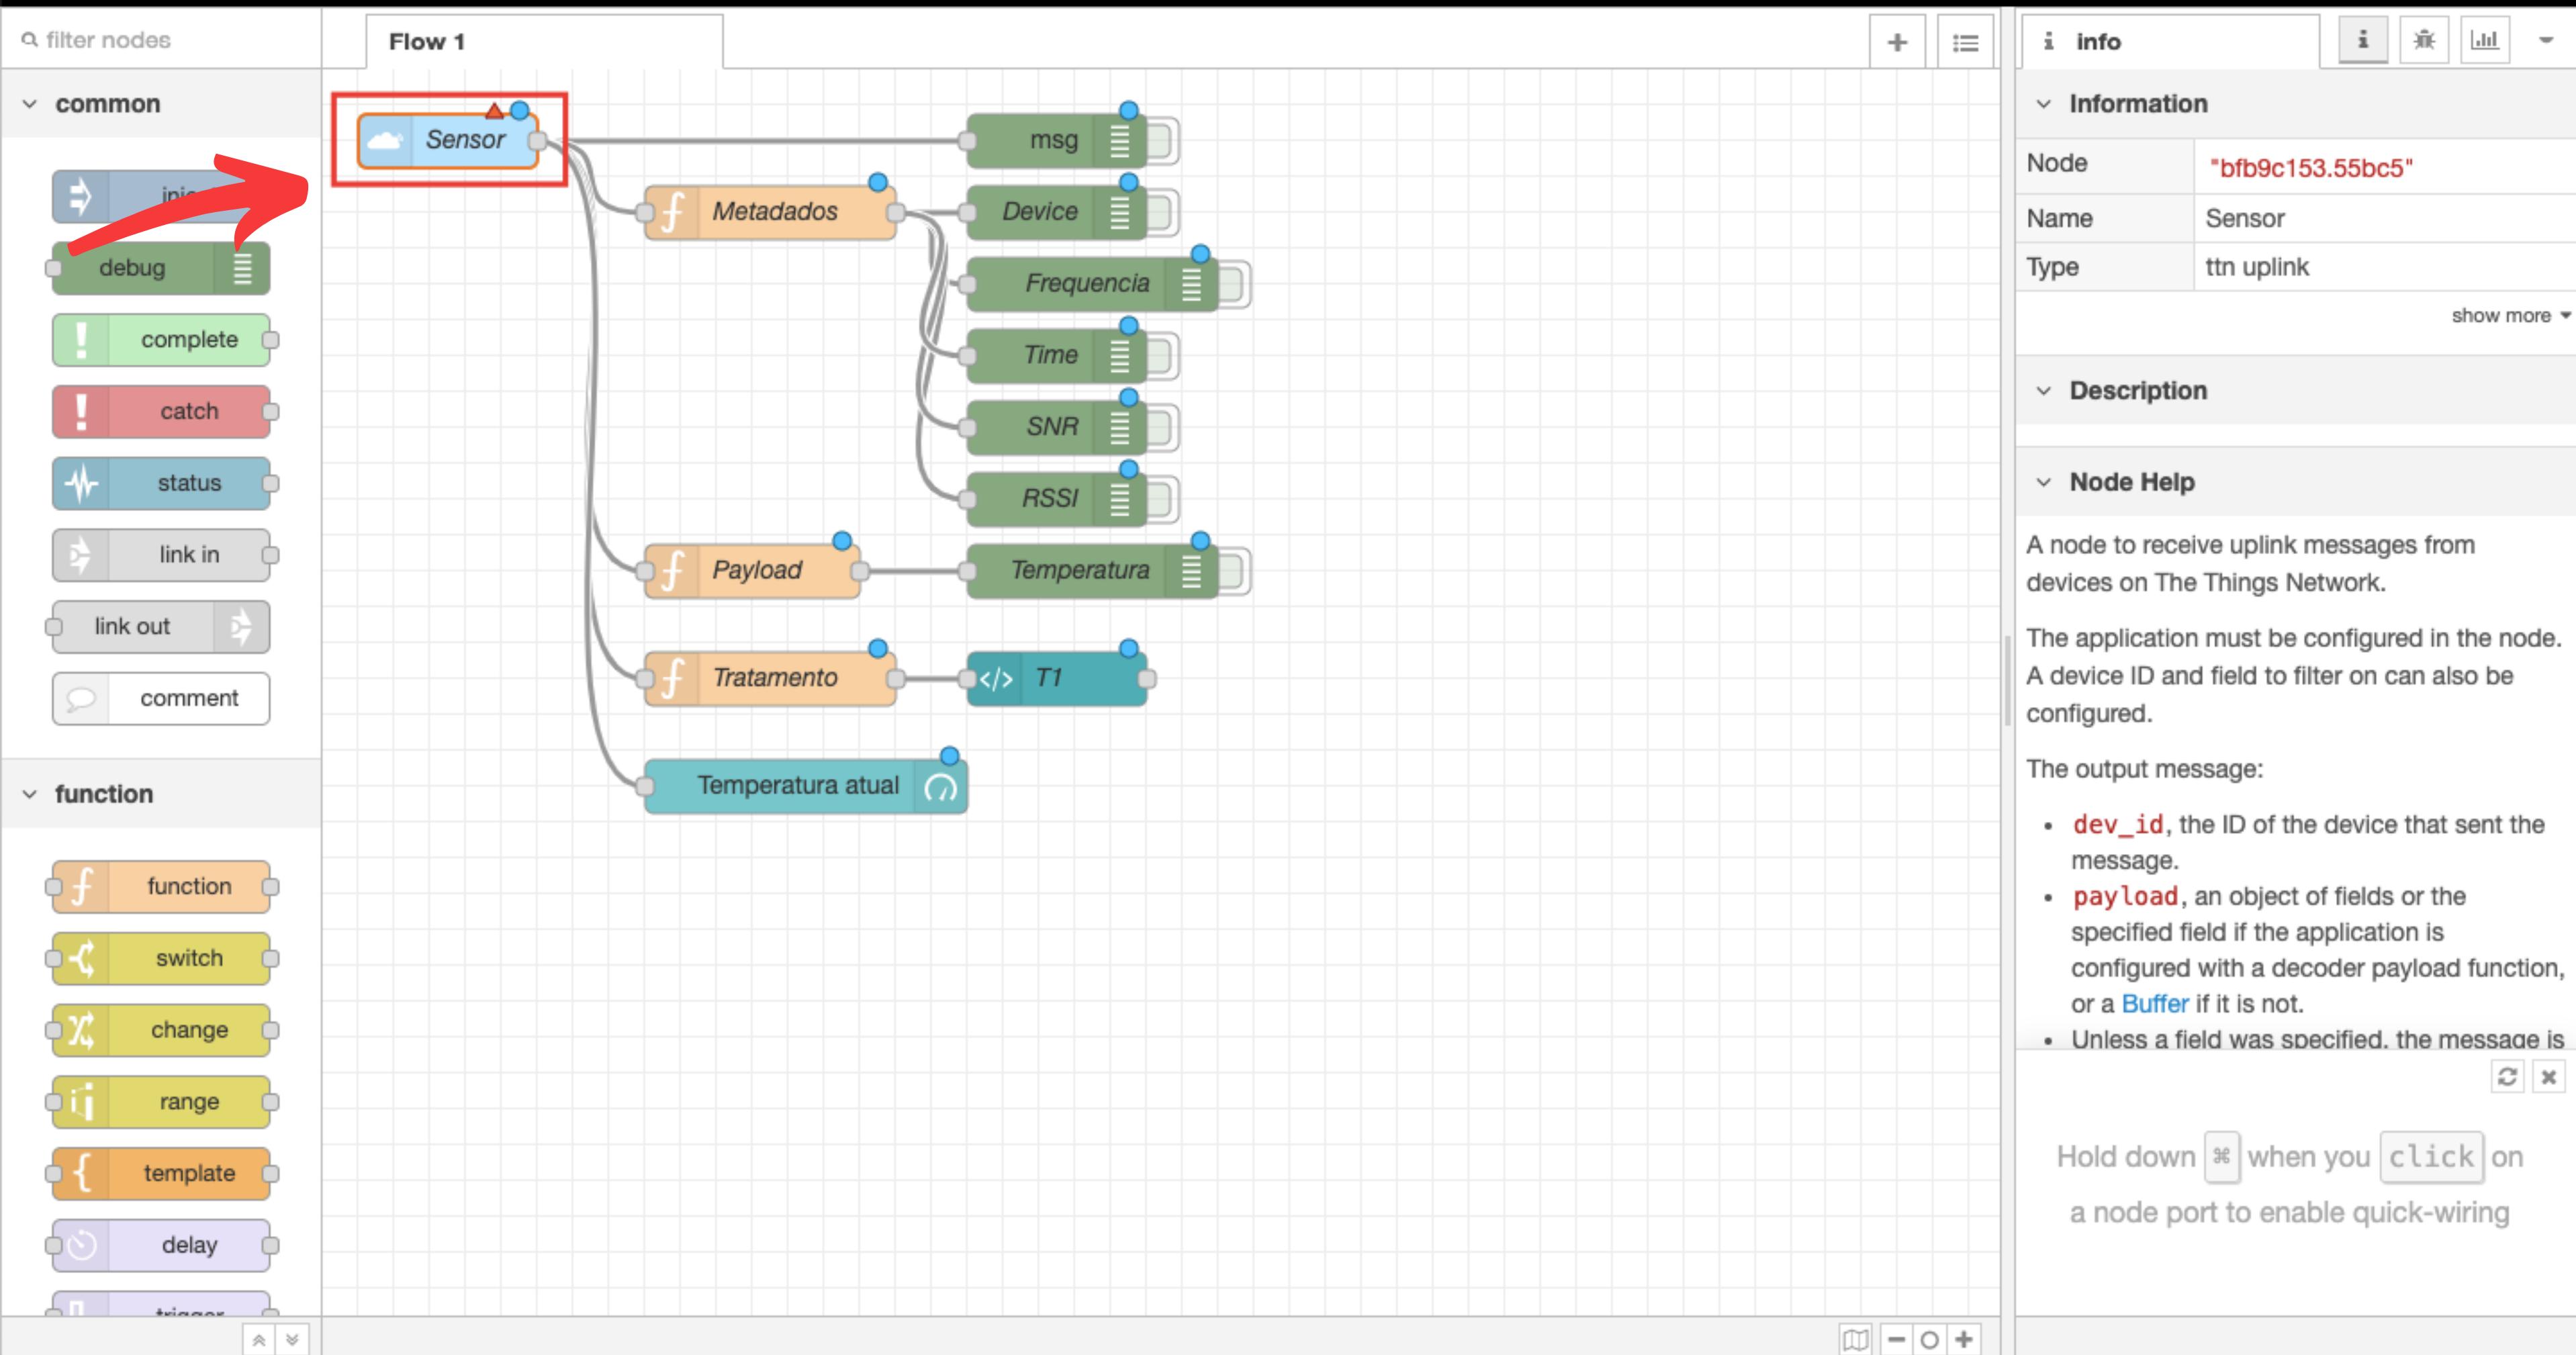

Edit ttn uplink node

Delete

Cancel

Done

Properties



Name

Sensor

App

hackathon-ttn-floripa



Device ID

Field

[Overview](#) [Devices](#) [Payload Formats](#) [Integrations](#) [Data](#) [Settings](#)

APPLICATION OVERVIEW

[documentation](#)**Application ID** **hackathon-ttn-floripa****Description** Sensor de temperatura**Created** 2 hours ago**Handler** meshed-handler

APPLICATION EUIS

[manage euis](#)  **70 B3 D5 7E D0 02 54 43** 

DEVICES

[register device](#) [manage devices](#)

[Overview](#) [Data](#) [Settings](#)

DEVICE OVERVIEW

Application ID [hackathon-ttn-floripa](#)**Device ID** [device-sensor-temperatura](#)**Activation Method** [OTAA](#)**Device EUI** [!\[\]\(4924db801212cbdeeeb8d4ec3fb4cef8_img.jpg\)](#) [!\[\]\(eb5122df28a218e573ec2334b47f78a7_img.jpg\)](#) [00 BD 2C 77 26 E6 6F 65](#) [!\[\]\(4e3becdb4e0e1f27099188775c8f3ff3_img.jpg\)](#)**Application EUI** [!\[\]\(b8bb5434880f645ebaa66bec084c8df9_img.jpg\)](#) [!\[\]\(75ff033d5a40aabb090b8de8e10a88f4_img.jpg\)](#) [70 B3 D5 7E D0 02 54 43](#) [!\[\]\(16527ff9239ca182504be64263a83a42_img.jpg\)](#)**App Key** [!\[\]\(69bfc53a331255a776a72d846e0f36cc_img.jpg\)](#) [!\[\]\(8028f948fa52b034fba7fcd49a33f874_img.jpg\)](#) [!\[\]\(e1196398f603b4b13ba8090ac72eaab6_img.jpg\)](#) [.....](#) [!\[\]\(50481ffbf1726b4a21db09391147d7dd_img.jpg\)](#)**Device Address** [!\[\]\(46a68b268293e131dbc319d81200050a_img.jpg\)](#) [!\[\]\(d3828e9a47e25bbc061a3549708fa930_img.jpg\)](#) [26 06 1C 0B](#) [!\[\]\(38b54d25cb94086af727feb6c7d82c17_img.jpg\)](#)**Network Session Key** [!\[\]\(7aa4257834ed13ee1a3c240c15d9b05a_img.jpg\)](#) [!\[\]\(3e03b83d3d151c417ec16080608357c3_img.jpg\)](#) [!\[\]\(b7758e36ec8e006f555c667071c578f8_img.jpg\)](#) [.....](#) [!\[\]\(ec4558c99419dc732e3083aab109a865_img.jpg\)](#)**App Session Key** [!\[\]\(093692436495d772cbac89c01c496b5f_img.jpg\)](#) [!\[\]\(70c68ae3f8961769b9b30e49dd435c57_img.jpg\)](#) [!\[\]\(4ee518fb38cdb3614613f66f69c0e6f8_img.jpg\)](#) [.....](#) [!\[\]\(48086d637285dca8d19e73b5dafaa41e_img.jpg\)](#)

Edit ttn uplink node

Delete

Cancel

Done

Properties



Name

Sensor

App

hackathon-ttn-floripa



Device ID

device-sensor-temperatura

Field

filter nodes

Flow 1

common

- inject
- debug
- complete
- catch
- status
- link in
- link out
- comment

function

- function
- switch
- change
- range
- template
- delay
- trigger

Information

Node: bfb9c153.55bc5
Name: Sensor
Type: ttn uplink

Description: A node to receive uplink messages from devices on The Things Network.


The application must be configured in the node. A device ID and field to filter on can also be configured.

The output message:

- **dev_id**, the ID of the device that sent the message.
- **payload**, an object of fields or the specified field if the application is configured with a decoder payload function, or a **Buffer** if it is not.
- Unless a field was specified, the message is

Your flow configuration nodes are listed in the sidebar panel. It can be accessed from the menu or with **⌘g** **c**

127.0.0.1:1880/#

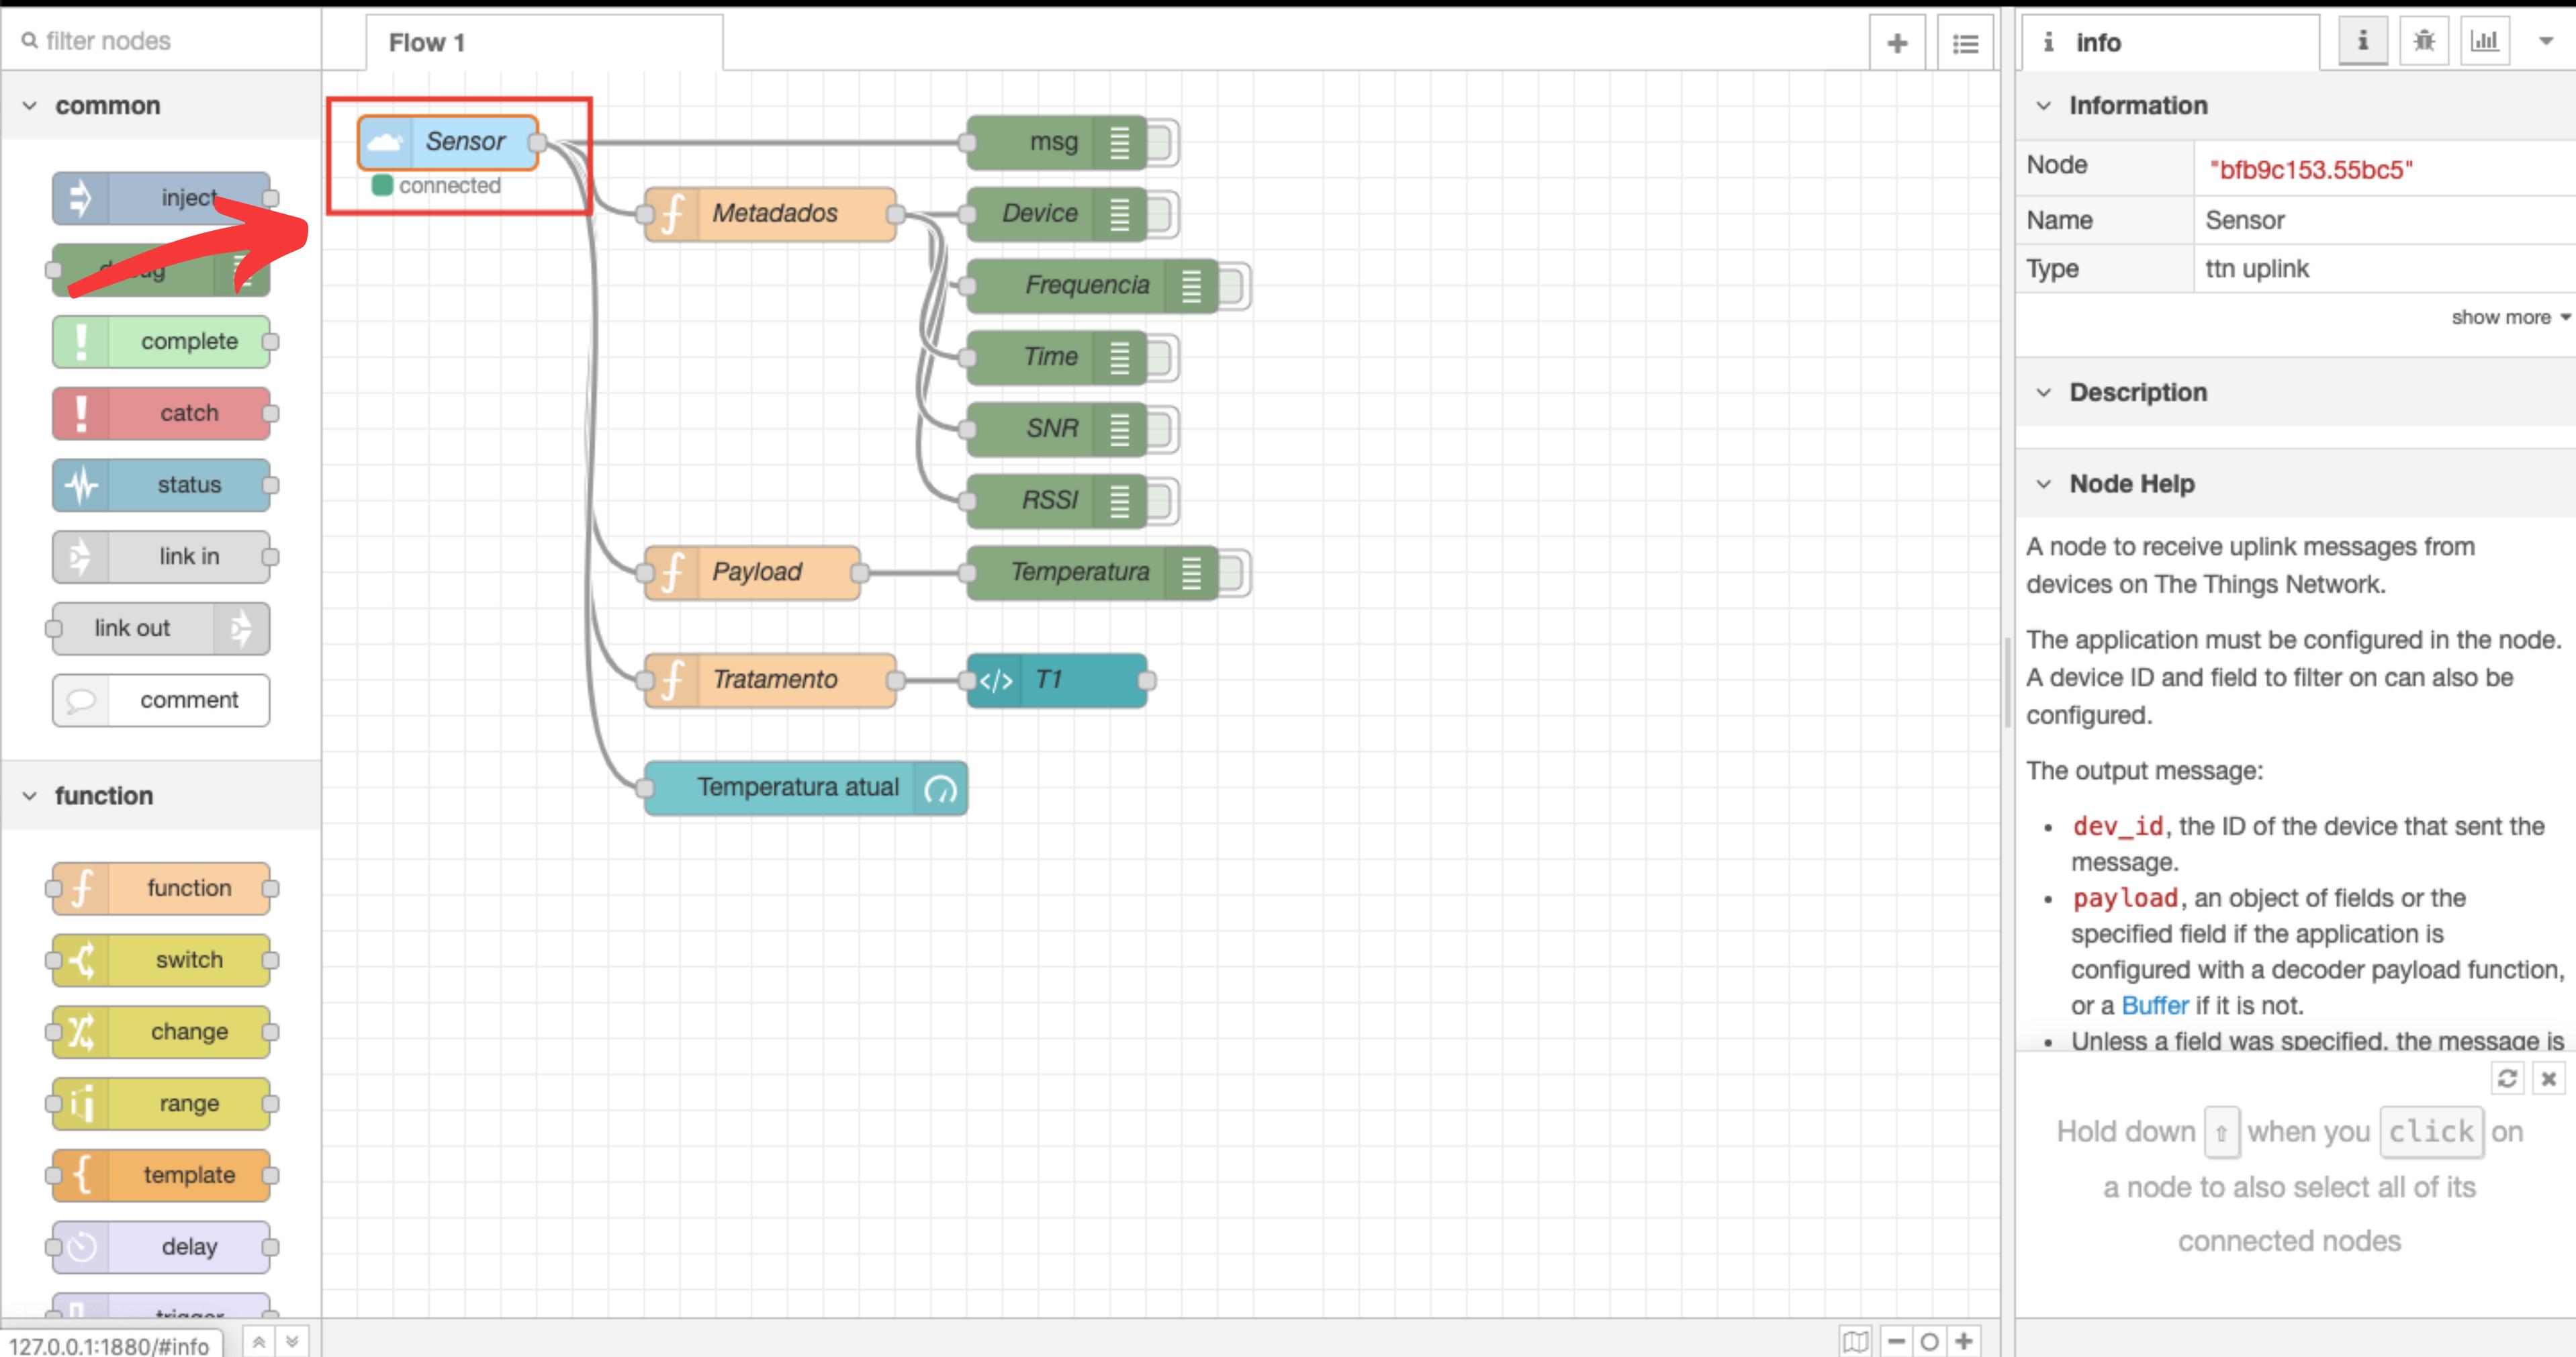

filter nodes

Flow 1

```
graph LR; Sensor[Sensor] --> msg1[msg]; msg1 --> Device[Device]; msg1 --> Frequencia[Frequencia]; msg1 --> Time[Time]; msg1 --> SNR[SNR]; msg1 --> RSSI[RSSI]; Sensor --> f1[Metadados]; f1 --> Payload[Payload]; Payload --> Temperatura[Temperatura]; f1 --> Tratamento[Tratamento]; Tratamento --> T1[T1]; f1 --> TemperaturaAtual[Temperatura atual];
```

The flow starts with a **Sensor** node connected to a **msg** node. From the **msg** node, six parallel paths branch out to **Device**, **Frequencia**, **Time**, **SNR**, **RSSI**, and a **Metadados** function node. The output from the **Metadados** node then connects to a **Payload** function node, which in turn connects to a **Temperatura** message node. Another path from the **Metadados** node goes to a **Tratamento** function node, which then connects to a **T1** message node. A final path from the **Metadados** node connects directly to a **Temperatura atual** message node.

debug

08/11/2019 23:45:18 node: b4a710e0.2bb3d
msg : Object
▶ { app_id: "hackathon-ttn-floripa", dev_id: "device-sensor-temperatura", hardware_serial: "00BD2C7726E66F65", port: 1, counter: 195 ... }

all nodes

common

- inject
- debug
- complete
- catch
- status
- link in
- link out
- comment


function

- function
- switch
- change
- range
- template
- delay
- trigger

TTN - Controle de temperatura

Device	Temperatura	SNR	RSSI	Frequência
device-sensor-temperatura	34 °C	[-6.5]	[-96]	917.4Hz

Temperatura atual

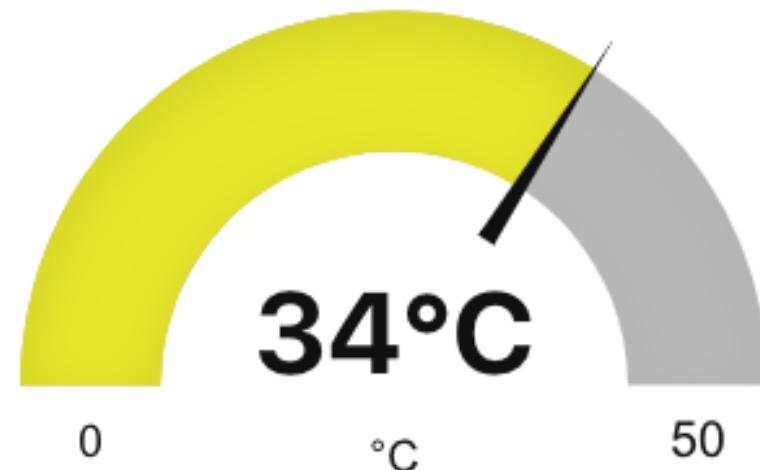

OBRIGADA!

Maria Fernanda Tutui
tutuimf@gmail.com