How to Build the Dementia Friendly Music Player

30 October 2019, http://DementiaMusicPlayer.org, Ross Porter rosswesleyporter@gmail.com



My Dad could not operate normal music players. But he could operate this music player because it operates like a familiar two-knob radio. My son & I were inspired to design this by the documentary <u>Alive Inside</u> which shows the profound joy felt by some people with dementia when listening to their favorite music.

It's easier than you think to make one. Everything I did (e.g. software, wood case design) is open source. This document contains all the information you need. You can order the parts online. Good project for kids. A 13 year old can do this with minimal assistance. Younger kids with more assistance.

Parts cost	~\$120 + tax + shipping		
Music cost	Minimal as you should use the recipient's existing music collection		
Build time	About three hours, once you have the parts & music		
Parts source	All parts can be mail ordered, links below		
Soldering?	No		
Woodworking?	No		
Laser cutter needed?	No, you can mail order the pre-cut pieces for the wood case		
With a friend?	Good idea, especially if your friend has the basic tools required		
Beverage?	I recommend a hoppy IPA while you are assembling		



Preview of the steps



STEP 2: Assemble recipient's favorite music




STEP 3: Copy software to micro SD card



STEP 4: Stain it



STEP 5: Add the Pi

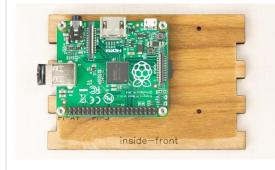

STEP 6: Wire it




STEP 7: Glue it



STEP 8: Add audio cable



STEP 9: Enjoy!

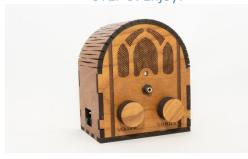

No warranty

USE THESE DQMUSICBOX PLANS AND SYSTEM AT YOUR OWN RISK. THE DQMUSICBOX PLANS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PLANS AND SYSTEM IS WITH YOU. SHOULD THE PLANS OR SYSTEM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. IN NO EVENT WILL ANY PARTY BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PLANS OR SYSTEM.

Acknowledgements

People were very generous with their time, and I really enjoyed the experience. This is certainly an incomplete list: Alex & Mike & others at Ada's, the super smart staff at Metrix, neighbor Randy, Stephen Christopher Phillips, Bob Rathbone, Stephen Rusk, Graham Hill, support at Ponoko, Florian Festi, and my son.

What DQMusicBox does


For the person with dementia

Name	Description & implementation
Start song	Turning either of the knobs will start music playing.
Change song	Turn the songs knob.
Change volume	Turn the volume knob.
Pause	Tap the volume knob. Note that this also happens automatically – music pauses if there are no knob events in one hour.

For you

Name	Description & implementation
Shut down	Pull the power plug or long hold (15-30 seconds) on the volume knob.
Reboot	Pull the power plug and re-insert or long hold (15-30 seconds) on the songs knob.
Add/remove music	By adding/removing files on the USB memory stick.

STEP 1: Order the parts

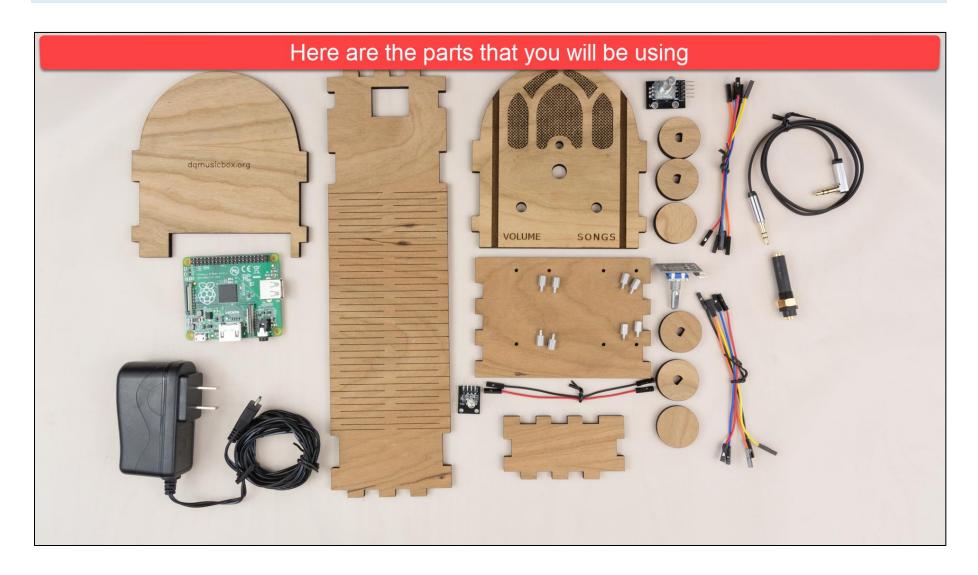

Create a Ponoko account (optional but convenient)

Ponoko is a company that laser cuts wood and sends you the precisely cut pieces. You don't need to use Ponoko – you are welcome to download my case design files (from Ponoko or github) and go to your local maker space and use the laser cutter there. Or buy yourself a laser cutter (if you do, will you be my friend?). In other words, Ponoko is convenient but not necessary. I have no affiliation with them, other than being a happy customer. To create a Ponoko account:

- 1. Go to https://www.ponoko.com/
- 2. Choose "Get Making"

Order from Ponoko

- 1. Go to https://github.com/rosswesleyporter/dqmusicbox/tree/master/case/laser_cut/cherry_cathedral_style
- 2. Right-click on DQMusicBox cathedral 5point7mm cherry.svg, choose to "Save link as..."
- 3. Verify that you chose the correct file has 5poin7mm in the name and is a .svg file.
- 4. Go to https://www.ponoko.com/
- 5. Login
- 6. If prompted in blue at the top of the screen, choose to switch to Ponoko 5.0
- 7. Click on "Reorder" and/or click on "Make your first product"
- 8. Choose wood, Cherry Veneer MDF
- 9. Choose "Upload your design" and upload the file that you downloaded just above
- 10. Wait for a few minutes while Ponoko validates the design
- 11. Then set design colors as below, and click "Confirm design size & colors"



12. Click "Add to Cart"

Order the remaining parts

Item	Supplier	Cost	Notes & alternatives
Cherry case	Ponoko	\$52.12	See instructions above.
Raspberry Pi 1 A+ single board computer	Newark	\$20.00	Or upgrade to Pi 3A+. Also tested with a 2B, 3A+, 3B, 3B+. Do not use Pi Zero or Pi 4.
<u>Power supply</u>	Newark	\$3.62	Or Newark <u>T5582DV</u> . Or order one for your region/plug. Any micro USB 2A supply will do.
Female-female jumper wires	Newark	\$3.95	Or buy Amazon <u>B01L5ULRUA</u>
Panel mount 3.5mm headphone jack	Newark	\$2.69	Or buy Amazon B004JX64FE
M2.5 standoffs (screws) – 8 of them	Newark	\$4.32	Or by Amazon <u>B06XXV8RTR</u>
Micro SD card	Amazon	\$3.99	Or upgrade to Amazon <u>B06XWN9Q99</u> . Any brand name card that is 8GB or larger will do.
USB thumb drive	Amazon	\$5.79	This one is helpfully physically small, but many USB drives will work. Or Amazon <u>B077Y149DL</u> .
Audio cable	Amazon	\$5.79	Or Amazon BOOSUIKMJ8. Or find a short audio cable with a right angle bend.
KY-016 indicator LED	Amazon	\$6.99	Or buy Amazon <u>B07KJYR8K1</u> . Or search Amazon for KY-016.
KY-040 rotary encoders (knobs)	Amazon	\$7.99	Or buy Amazon <u>B06XQTHDRR</u> .
TOTAL		\$117.25	Prices will vary. Does not include tax, shipping.

About headphones

Item	Cost	Notes and alternatives
The recipient's existing headphone	\$0.00	The best headphones are the headphones that the recipient is already used to.
Monoprice On-Ear headphones	\$10.99	Very good sound.
Monoprice Over-the-Ear headphones	\$15.99	Amazing sound.
Other		Look for high sensitivity headphones, as the Pi's output is a bit weak.

Tools & supplies

You probably have some of these supplies. If you don't, you have a friend that does. This is exactly the sort of project that a friend would be happy to help you with.

Link to order item	Notes & alternatives
Elmer's wood glue	Any wood glue will do
3/16 th nut driver	Or wrench. Or needle-nosed pliers. Or really strong fingers
SD card reader/writer	Your computer may have an SD card reader/writer. If not, you probably have a friend that does. Or order a <u>USB SD-card reader</u> .
Painter's tape	Any tape that comes off easily will do. Painter's tape is great. Regular masking tape is probably fine too.
Light blocking tape	The LED is bright, so I prefer to block some light. You can use the tape above. Or light blocking stickers e.g. Amazon <u>B009WSJNCW</u> .
Wood stain or oil	If you have a friend that does woodworking, ask them for advice and they'll probably give you the little bit of product that you need. I used
	Tried & True Varnish Oil (linseed oil) because I like the result, it's easy, and non-toxic.

STEP 2: Assemble the personalized collection of music

Choosing the music – go for familiar favorites

This is the most important step. The personalized (familiar) music is the fundamental magic. You don't need much music, perhaps 6-10 albums. But only familiar favorites. In my case, my Mom mailed me my Dad's favorite CDs. It will take two weeks for the parts above to arrive, so you have time to do this well. Though it is easy to change the set of music later.

Put the music on the USB memory stick

Organize the digitized music into folders on the USB memory stick, one folder per album. MP3, iTunes, and FLAC files are supported i.e. files with extensions .mp3, .m4a, .flac. In the end, you should have a set of folders that looks something like this:

Name	Date modified	Туре
A_Beethoven9	10/24/2015 6:25 PM	File folder
] B_Eli_PorterEli_Porter	10/24/2015 6:25 PM	File folder
C_MozartOvertures	10/24/2015 6:25 PM	File folder
D_TchaikovskyConcerto for Violin i	10/24/2015 6:25 PM	File folder
E_Vivaldi_Telemann_Bach_Mercadante	10/24/2015 6:25 PM	File folder
F_Samuel BarberBarber; Adagio for	10/24/2015 6:26 PM	File folder
G_James GalwaySerenade	10/24/2015 6:26 PM	File folder
H_Giacomo PucciniMadama Butter	10/24/2015 6:26 PM	File folder
I_Giacomo PucciniMadama Butterfl	10/24/2015 6:26 PM	File folder
J_Giacomo PucciniMadama Butterf	10/24/2015 6:26 PM	File folder
K_Leontyne PriceArias	10/24/2015 6:26 PM	File folder


STEP 3: Copy software to the micro-SD memory card

I prepared a disk image for you. It has all the required software. Your job is to download this disk image and then write it to the micro-SD card. The steps:

- 1. Install Etcher on your PC or Mac or Linux computer. Win32 Disk Imager also works.
- 2. Download the Dementia Friendly Music Player disk image.



3. Confirm download – "Download anyway"



- 4. Put the micro-SD memory card into the SD card adapter that it came with i.e. put the tiny card into the larger card.
- 5. Put the SD card adapter into the SD reader/writer in your computer.
- 6. Start Etcher, instruct it to write the image file to the SD card:



7. Wait for the writing to complete, ~10 minutes. This would be a good time to make a sandwich.


STEP 4: Stain it or oil it

Ask a woodworking friend for help. They probably have everything you need.





I used the non-toxic Tried & True Danish Oil i.e. flax seed oil. Three thin coats (three days) for outside surfaces. One thin coat for inside surfaces. Follow directions on the can.


STEP 5: Add the Pi

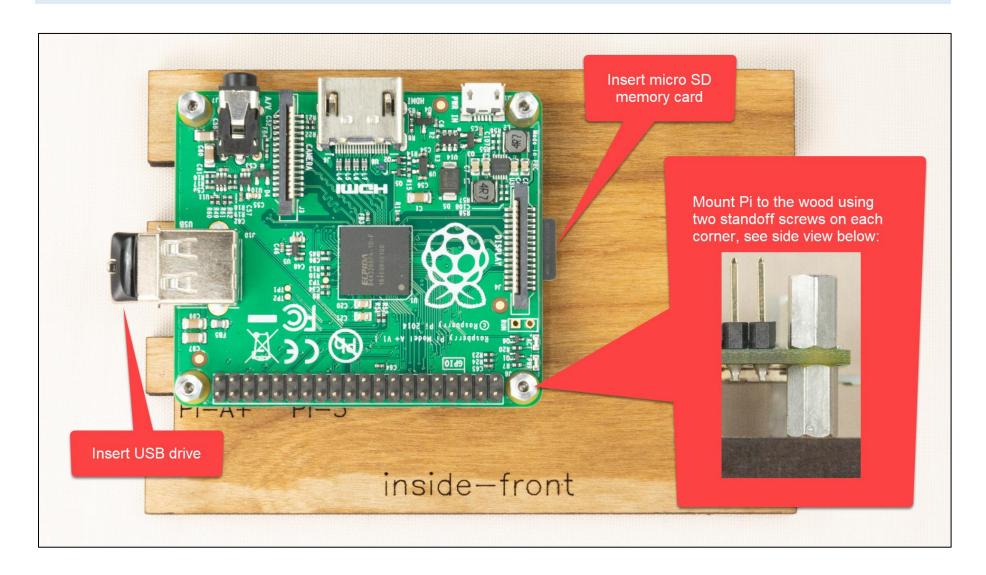



STEP 6: Wire it

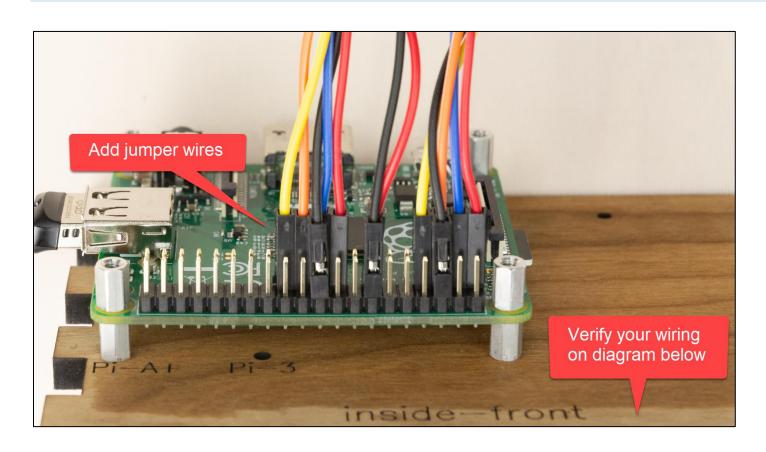

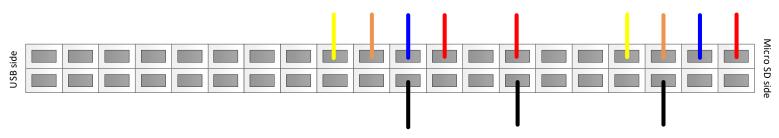


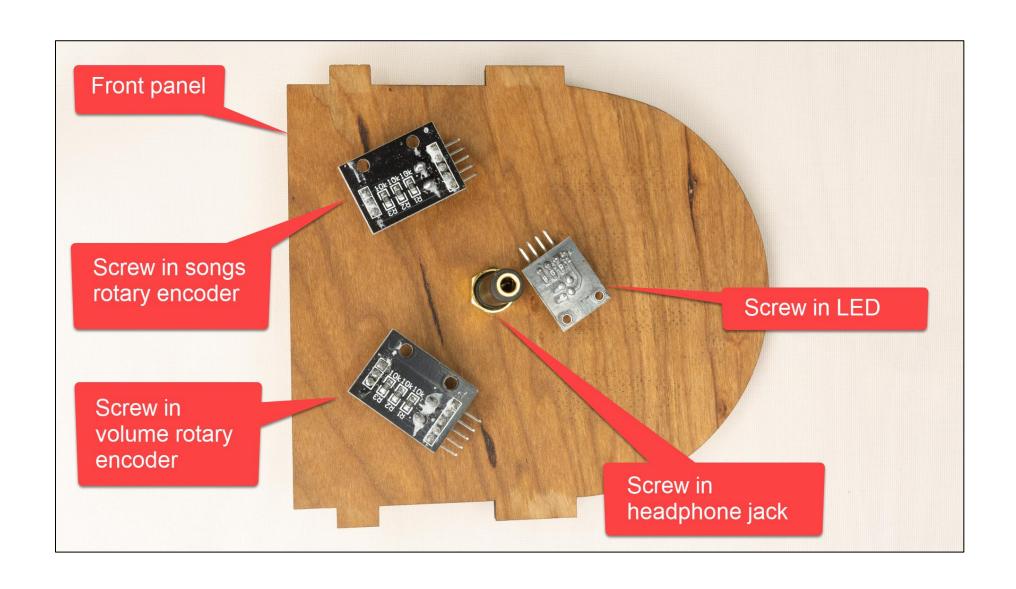


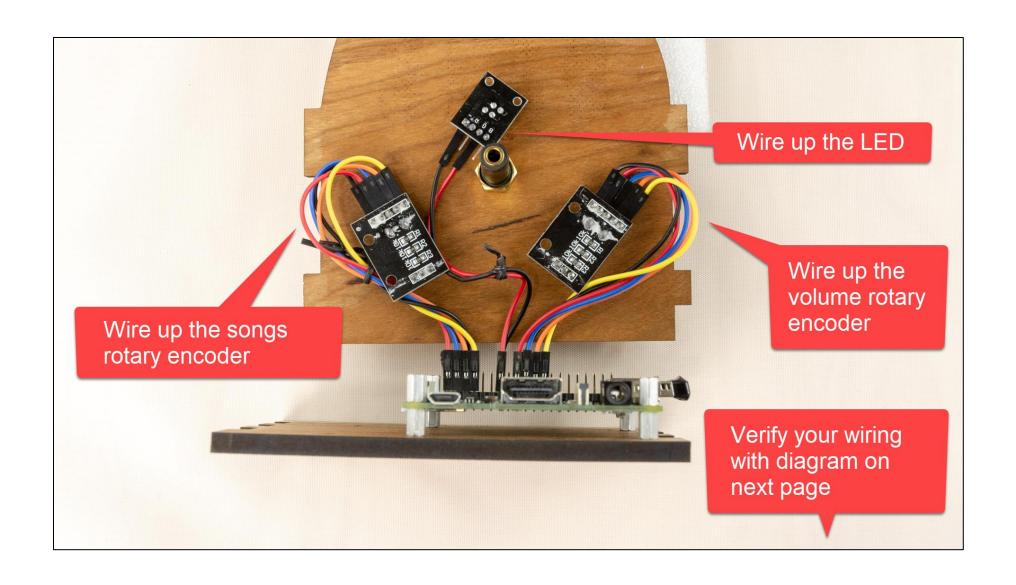

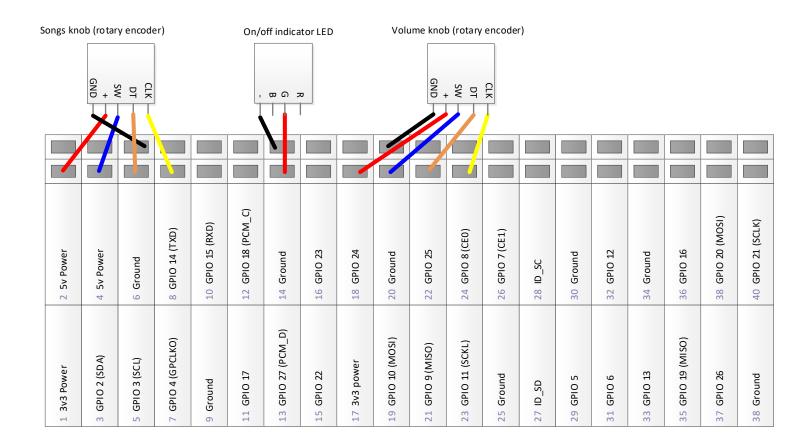


STEP 7: Glue it

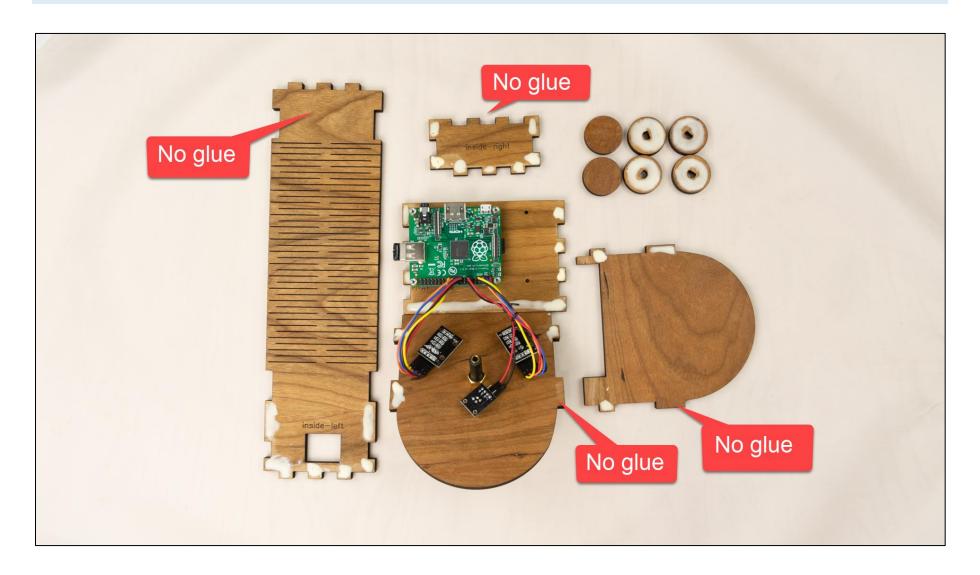

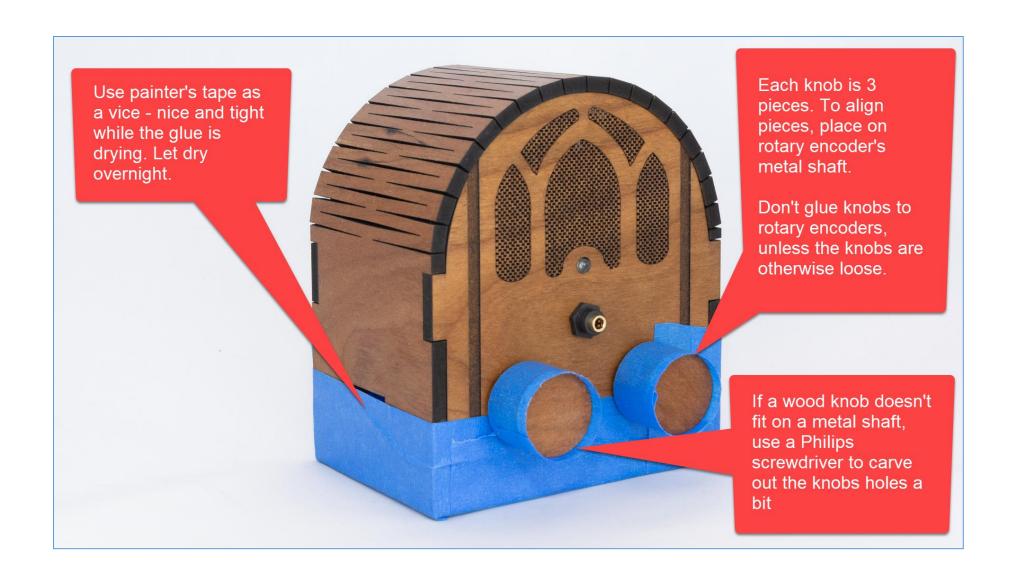

STEP 8: Add audio cable

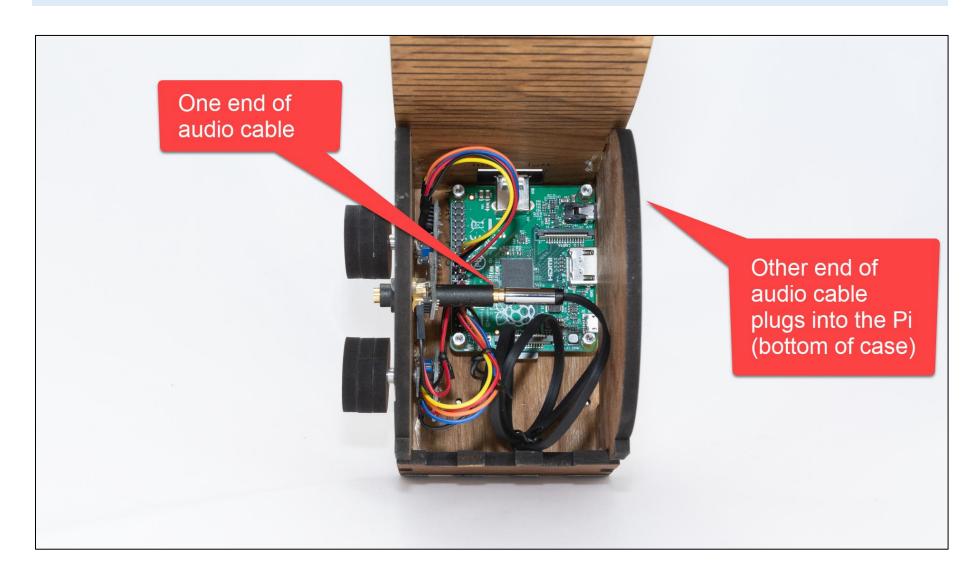


Test it

Test	Description & Expectation
Light 30sec after power on	The indicator LED turns on when DQMusicBox is ready to play music, which is generally 20-30 seconds after power on.
Start song	Turning either of the knobs will start music playing.
Change song	Turn the songs knob. If you go forward and backward through the song list as expected, then all is well.
Change volume	Turn the volume knob. If the volume goes up and down as expected, then all is well.
Pause	Tap the volume knob, song should pause. Tap the songs knob, this should also pause the song.
Unpause	Tap a knob

If one or both knows do the opposite of what you expect

Once assembled, you may find your knobs doing the opposite of what you expect e.g. a clockwise turn decreases the volume. This is because there are two kinds of rotary encoders out there. Happy, the fix is easy, just switch the orange and yellow wires on the misbehaving rotary encoders(s) (don't touch the Pi itself):

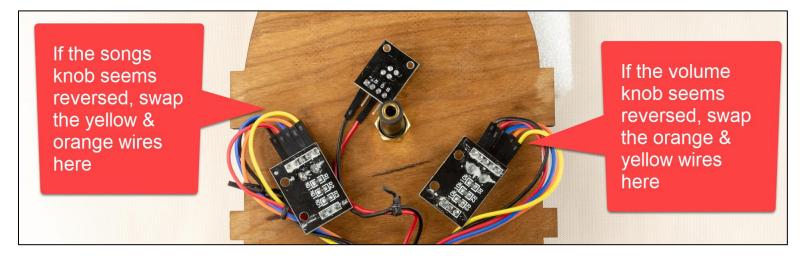


If the wood knobs are loose on the metal shafts


Just glue the wood knobs to the metal shafts. But only if it is really necessary. Once the knobs & shafts are glued, it's harder to dissemble the box to fix any problems.

If the top does not latch securely

To resolve, very slightly increase the size of the tabs by applying a thin layer of glue and allowing to dry before re-latching. It's a friction latch, so you are essentially adding more static friction – slightly thicker tabs can mean much more static friction.



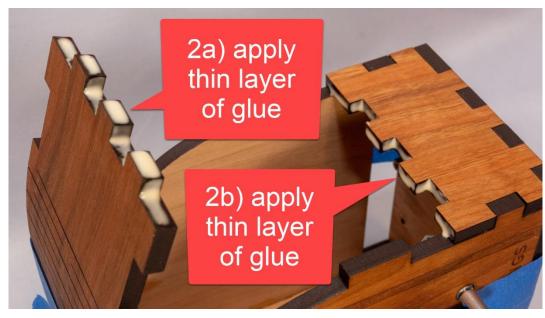

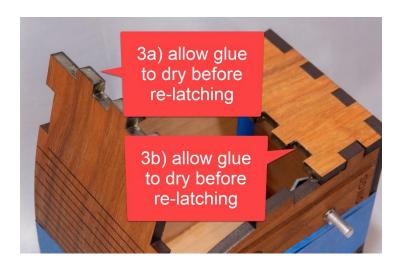



Tape instructions

Print this page and tape the instructions in the box below to the bottom of your new DQMusicBox:

To create personalized music

Organize the music on your computer



One folder per album. Use MP3 files, must have .mp3 file extension. Or iTunes files (.m4a). Or FLAC files (.flac). Optionally, use folder names prefixes to specify the play order e.g. A_, B_

Copy the music to the USB thumb drive



- 1. Unplug your DQMusicBox.
- 2. Remove the USB thumb drive and place in your computer.
- 3. Copy music files from your computer to the USB thumb drive.
- 4. Put the USB thumb drive back in the DQMusicBox.
- 5. Plug in your DQMusicBox.

Congratulations

Congratulations! You should have a fully functional DQMusicBox.

Appendix 1: Change log

v1, November 2015	Original release
v2, September 2016	Changed music storage from a micro-SD memory card to a conventional USB memory stick.
	 Changed the base Operating System from full Raspbian to <u>DietPi</u> – much smaller, so faster to boot, and less to go wrong.
v3, January 2017	Changed from USB audio to Pi built-in audio, including a firmware update for excellent audio quality.
v4, May 2017	Switched to bamboo for durability and use of standoffs.
	Switched to Pi A+ to lower cost.
	 Made USB thumb drive externally accessible, to make it easier for the caregiver to organize music.
v4.01, 25 June 2017	Minor edits.
v4.01_1, 20 July 2017	Minor edits.
v4.01_2, 11 August 2017	Added links for ordering parts in the UK.
	Added detailed instructions for write protecting a micro-SD card.
v4.01_3, 12 August 2017	Minor edits
v4.01_4, 12 August 2017	Minor edits
v4.01_5, 14 October 2017	 Edited text and updated photographs to reflect the change from an HDD-style LED to a KY-016 LED module.
v4.01_6, 26 February 2018	 Updated the links for purchasing the parts. No changes to the parts themselves, just the links.
	 Minor change to the instructions, noting how the build can be accomplished in one sitting, if desired.
v4.1, 7 April 2018	Reflects that the software has been updated to support the new Raspberry Pi 3 B+. No new software features.
v4.1_1, 23 April 2018	Updated to reflect the new bamboo case design.
v4.1_2, 22 July 2018	Updated for the new cherry wood version
27 Jan 2019	Updated to note support for the Raspberry Pi 3A+.
v4.2, 1 March 2019	Switched to pmount for USB drive auto mounting.
v4.2, 7 April 2018	Removed instructions for write protecting the SD card – rarely used and may cause certain rare problems
v4.2, 26 October 2019	Updated the parts list
	Updated Ponoko instructions
v4.2, 28 October 2019	Updated Ponoko instructions