

Effectivity

The following CT Equipment is affected:

2260619 LightSpeed Plus Gantry Assembly

Purpose

The purpose of this FMI is to improve the operation of the cooling system for the LightSpeed Plus CT Gantry, by moving the thermostat probe and adjusting the thermostat settings, accordingly.

Furnished Materials

FMI Kit Part Number 2305508 includes the items listed below.

Qty	Description	Part #
1	FMI Document	2302534-100
1	M4 countersunk socket head screw	2103580
1	Lock washer	46-328432P2
1	Hex nut	46-328425P1
1	Cable Tie Mount	46-208747P2
1	Ty-rap	46-208758P3

People Power

Allow 0.5 hours of labor for the completion of this FMI.

Procedure



DANGER LETHAL VOLTAGES CAN BE FOUND IN THE GANTRY. FOLLOW PROPER LOCKOUT/TAGOUT PROCEDURES. ALL GANTRY SERVICING SHOULD BE PERFORMED BY QUALIFIED PERSONNEL ONLY.

1 Electronic Thermostat Control Setup

The gantry thermostat is a self contained Electronic Thermostat Control Unit.



Figure 1 Gantry Temperature Fan Control Thermostat



CAUTION

This is not a recording device. Failure to use the correct settings can result in artifacts due to incorrect detector temperature deltas.

- 1.) Press the **SET** key once to access the Fahrenheit/Celsius mode. The display will show the current status., either F for degrees or C for degrees Celsius. Then press either the **UP** or **DOWN** arrow keys to toggle between the F or C designation.
- 2.) Press the **SET** key again to access the set-point. The LCD will display the current set-point and S1 annunciator will be blinking to indicate that the control is in the set-point mode. Press either **UP** or **DOWN** arrow keys to adjust the set-point to 26° C.
- 3.) Press the **SET** key again to access the differential. The LCD will display the current differential and the DIF 1 annunciator be blinking to indicate that the control is in the differential mode. Press either **UP** or **DOWN** arrow keys to adjust the differential setting to 2 celsius degrees.
- 4.) Press the **SET** key again to access the cooling or heating mode. The LCD will display the current mode either C1 for cooling or H1 for heating. Press either **UP** or **DOWN** arrow keys to toggle the setting.
- 5.) Press the **SET** key and programming is complete.

STEP	DESCRIPTION	GE DISPLAY SETTING
1	Fahrenheit or Celsius	C
2	Setpoint Temperature	26
3	Differential Temperature	2
4	Cooling or Heating Mode	C1

Table 1 New Thermostat Settings

Comment: The Electronic Thermostat Control will automatically end programming if no key has been pressed for a period of 30 seconds. Any settings that have been input to the control will be accepted at that point.

All control settings are retained in non-volatile memory, if power to the Electronic Thermostat Control is interrupted for any reason. Re-programming is not necessary after power outages or disconnects unless different control settings are required.

The Electronic Thermostat Control is provided with a lockout switch to prevent tampering by unauthorized personnel. When placed in the lock position, the keypad is disabled and no changes can be made. When placed in the unlock position, the keypad will function normally.

To access the lockout switch, disconnect the power supply and open the control. The switch is located on the inside cover about 50.8 mm above the bottom. To disable the keypad, slide the **SWITCH** to the left lock position. To enable the keypad, slide the **SWITCH** to the right unlock position. All Electronic Thermostat Controls are shipped with this switch in the unlock position.

2 Thermostat Probe Repositioning

- 1.) Remove the thermostat probe from its original location (shown in Figure 1, above). Remove and discard the cable tie mounting pad.
- 2.) Drill a new hole for a M4 socket head countersunk screw, in the gantry fan bracket. The new hole should be positioned approximately 76 mm to the left (toward the gantry rear) and 25 mm above the existing mounting location.

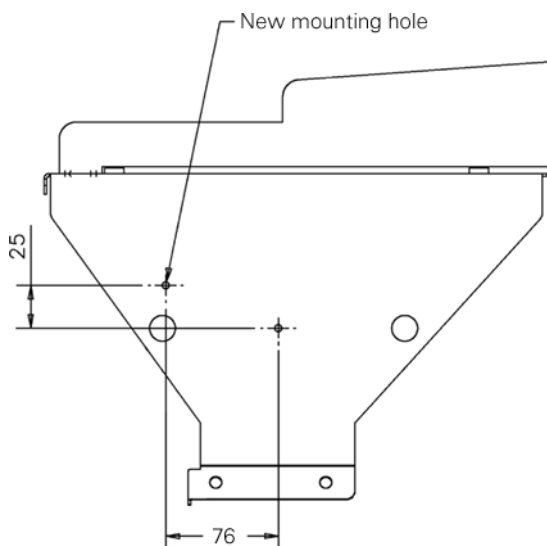


Figure 2 New Mounting Hole Location

- 3.) Attach the new cable tie mount to the fan bracket at the new location, using the supplied screw, lock washer and hex nut.
- 4.) Fasten the thermostat probe to the mount with a ty-rap, as shown in Figure 3, below.



Figure 3 New Thermostat Probe Location

End of Document