

FAIO MULTIPLEXER INSTRUCTIONS MANUAL

What if you could have a switch interface that could that would let you perform many actions using only 4 switches?

Version 1.0

https://github.com/milador/FAIO_Multiplexer

Contents

Components List	2
· Software	
Installing Arduino Libraries	
Required Software and libraries	
USB Version	
XAC Joystick Version	
Wireless Version	
Uploading Software	
Hardware Assembly	6
Printed circuit Board design	6
Enclosure design	6
Assembly Instructions	7

Components List

- 1. ADAFRUIT FEATHER x 1
 - A. USB Version: ADAFRUIT FEATHER 32U4 BASIC PROTO
 - B. XAC Joystick Version: ADAFRUIT FEATHER 32U4 BASIC PROTO
 - C. Bluetooth Version: ADAFRUIT FEATHER 32U4 BLUEFRUIT LE or ADAFRUIT FEATHER MO BLUEFRUIT LE
- 2. ADDRESS LED DISC SER RGB 5MM x 1
- 3. FEATHER HEADER KIT FML x 1
- 4. RES 470 OHM 1/4W 5% AXIAL **x 1**
- 5. CONN JACK STEREO 3.5MM R/A x 4
- 6. ANALOG 2-AXIS THUMB JOYSTICK WIT (Optional: XAC Joystick version) x 1
- 7. CONN HDR 5POS 0.1 GOLD PCB (Optional: XAC Joystick version) x 1
- 8. CONN HEADER VERT 5POS 2.54MM (Optional: XAC Joystick version) x 1
- 9. MACHINE SCREW 2.5 x 4
- 10. HEX NUT 2.5 x 4

The FAIO_Multiplexer_BOM or FAIO Multiplexer bill of materials can also be downloaded from GitHub repository under main directory.

https://github.com/milador/FAIO Multiplexer/blob/master/Components/FAIO Multiplexer BOM.xlsx

Software

The FAIO Multiplexer software can be downloaded from the GitHub repository under software directory.

https://github.com/milador/FAIO Multiplexer/tree/master/Software

The FAIO Multiplexer hardware can be used along different software as input device for multiple devices. The FAIO Multiplexer software is offered in the following flavors:

- 1. USB Version: FAIO_Multiplexer_USB_Software
- 2. XAC Joystick Version: FAIO Multiplexer Joystick Software
- 3. Bluetooth Version: FAIO_Multiplexer_Wireless_Software

Installing Arduino Libraries

The following instructions on how to install additional Arduino libraries helps you to get started with setting up Arduino IDE with required libraries and dependencies.

https://www.arduino.cc/en/guide/libraries

Required Software and libraries

USB Version

The USB version of the software requires the following files and libraries:

- StopWatch.h
- EasyMorse.h
- Adafruit NeoPixel.h
- FlashStorage.h (Optional: Only M0 processor)
- FAIO Multiplexer USB Software.ino

StopWatch library helps to calculate the reaction time and timeout in the morse code interface.

EasyMorse library is used to provide morse code input interface by translating morse code into characters.

FAIO Multiplexer is using Adafruit_NeoPixel library to provide visual feedback using RGB LED.

The M0 processor doesn't come with EEPROM support and requires using FlashStorage library to handle saving variables and settings.

XAC Joystick Version

The XAC Joystick version of the software requires the following files and libraries:

- Joystick.h
- Adafruit NeoPixel.h
- FAIO Multiplexer Joystick Software.ino

The joystick library is used to turn FAIO Multiplexer into a joystick USB HID device which can be supported by Xbox adaptive controller.

FAIO Multiplexer is using Adafruit_NeoPixel library to provide visual feedback using RGB LED.

Wireless Version

The wireless version of the software requires the following files and libraries:

- StopWatch.h
- EasyMorse.h
- Adafruit NeoPixel.h
- <u>FlashStorage.h</u> (Optional: Only M0 processor)
- BluefruitConfig.h
- BluefruitRoutines.h
- FAIO Multiplexer Wireless Software.ino

StopWatch library helps to calculate the reaction time and timeout in the morse code interface.

EasyMorse library is used to provide morse code input interface by translating morse code into characters.

FAIO Multiplexer is using Adafruit_NeoPixel library to provide visual feedback using RGB LED.

The M0 processor doesn't come with EEPROM support and requires using FlashStorage library to handle saving variables and settings.

There is a great instructions manual on how to use Arduino IDE and Adafruit Feather 32u4 Bluefruit LE board which can help you get started using Arduino IDE and install necessary Adafruit drivers.

https://learn.adafruit.com/adafruit-feather-32u4-bluefruit-le/using-with-arduino-ide

The wireless version of the FAIO Multiplexer is using nRF51 Bluetooth chip to communicate with host devices. Bluetooth communication might seem complicated but Adafruit has made the bluetooth communication process less challenging by providing Adafruit nRF51 BLE Library which you can download from Adafruit and import it to your locally installed Arduino directory under libraries directory.

https://github.com/adafruit/Adafruit_BluefruitLE_nRF51

The instructions on how to install Adafruit nRF51 BLE Library can be found in following link:

https://learn.adafruit.com/adafruit-feather-32u4-bluefruit-le/installing-ble-library

Uploading Software

Note: Make sure all three files are included in your local copy of Software directory before uploading it to the Adafruit Feather board. The libraries can be installed in Arduino libraries.

The downloaded software and libraries can be uploaded to the Adafruit Feather board in FAIO Multiplexer using Arduino IDE which you can download from Arduino official website.

https://www.arduino.cc/en/Main/Software

You can go ahead and upload the downloaded. ino software to Adafruit Feather board using Arduino IDE once all the necessary libraries are installed.


- Select the Board under Tools > Board as Adafruit Feather 32u4 or Adafruit Feather M0 based on your board
- Select the correct port number under Tools > Port which should say COM XX (Adafruit Feather 32u4) or COM XX (Adafruit Feather M0) based on your board

Note: It's very important to make sure the correct Board and port number are selected as selecting the wrong board may result problems with bootloader of Adafruit Feather board.

- 3. Press the Verify button to make sure there is no problem with the software and libraries
- 4. Press Upload button

Here you can see an example of my selected Board and port number.

Note: Your port number won't be the same

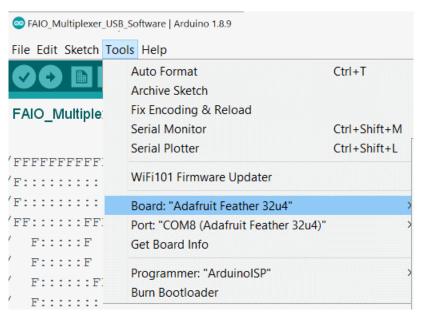

You can now go ahead and upload the software. Arduino IDE will show you a "Done uploading" message indicating the software is uploaded to your FAIO Multiplexer.

The LED on the FAIO Multiplexer main board blinks two times in green to indicate the start of initialization process has been started and it will blink again two times in green to indicate end of the initialization process.

You can also open the Serial Monitor in Arduino IDE on 115200 baud rate to read initialization information about the version of software.

Hardware Assembly

Printed circuit Board design

The printed circuit boards (PCB) can be downloaded from GitHub repository under Hardware directory.


https://github.com/milador/FAIO Multiplexer/tree/master/Hardware/PCB design

Enclosure design


The enclosure/housing files in STL format can be downloaded from GitHub repository under Hardware directory.

https://github.com/milador/FAIO Multiplexer/tree/master/Hardware/Housing design


Assembly Instructions

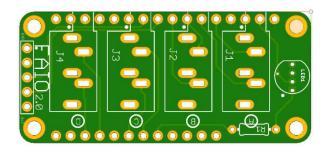


Step 1 – FAIO Switch main board x 1

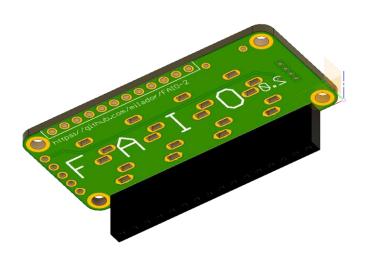


Step 2 – 16 position female header connector x 1

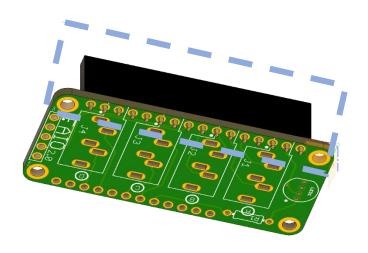


Step 3 – Solder 16 position female header connector

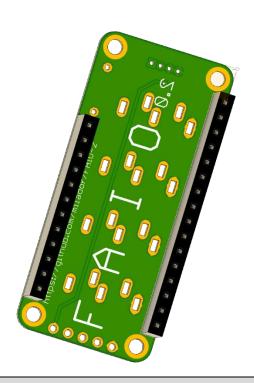


Step 4 – 12 position female header connector x 1

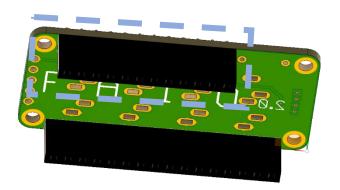


Step 5 – Solder 14 position female header connector

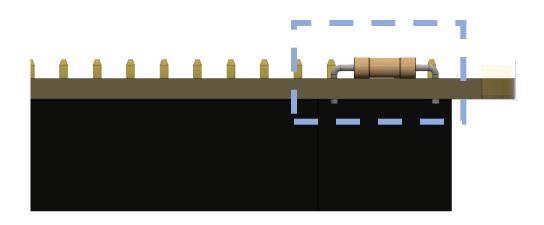


Step 6 – 470 OHM Resistor

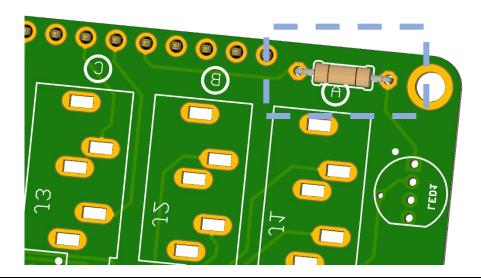


Step 7 – Solder 470 OHM Resistor

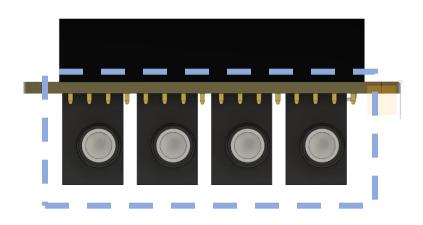


Step 8 - 3.5 mm stereo audio plugs x 4

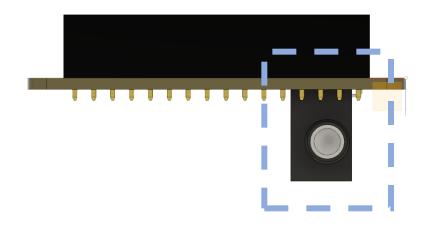


Step 9 – Solder 3.5MM plug A

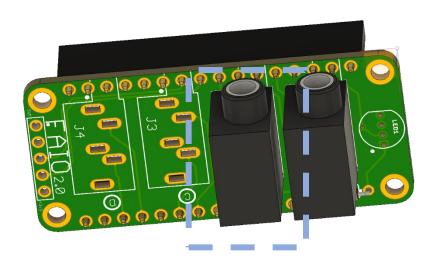


Step 10 – Solder 3.5MM plug B

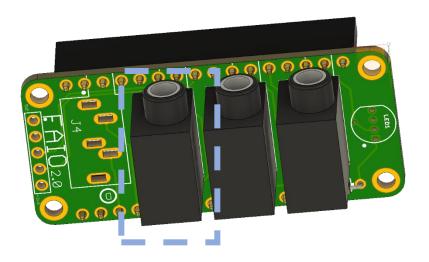


Step 11 – Solder 3.5MM plug C

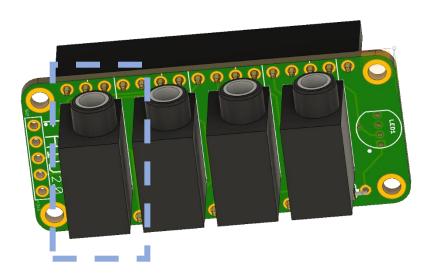


Step 12 – Solder 3.5mm plug D

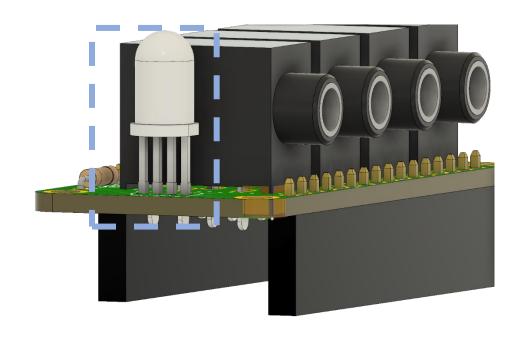


Step 13 – Solder RGB LED x 1

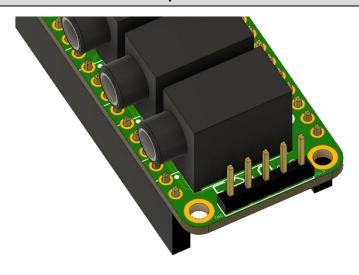


Step 14 – Solder 5 position male header connector on feather board

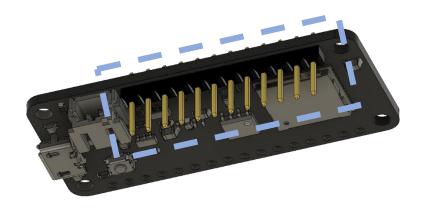

Step 15 – Solder 16 position male header connector on feather board

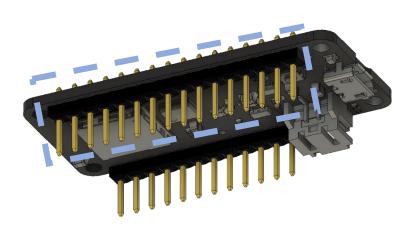

Step 16 – Solder 12 position male header connector on feather board

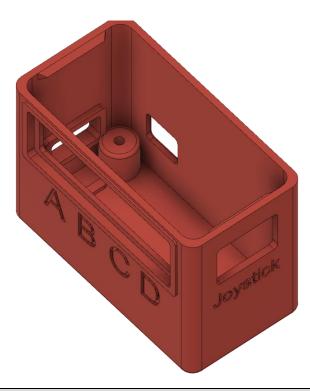

Step 17 – 3D Print FAIO Multiplexer enclosure bottom part




Step 18 – 3D Print FAIO Multiplexer enclosure battery holder part and insert it into the enclosure



Step 19 – Insert the four M2.5 machine screws in Feather board drill holes



Step 20 – Insert the Feather board into the main enclosure. The four M2.5 machine screws should fit in screw holes.

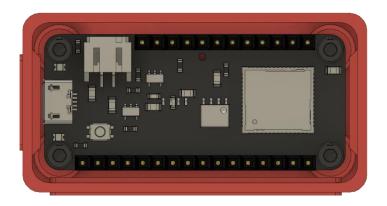

Step 21 – Make sure the Feather board is seating flat inside the enclosure.



Step 22 – Insert the four M2.5 Machine screw nuts at the bottom of the enclosure into Machine screws.



Step 23 – Hold the screws still while you spin the nuts.



Step 24 – Stack the FAIO Multiplexer PCB Board into the Feather board inside the enclosure.



Step 25 – Make sure the FAIO board has been stacked correctly and the 3.5mm Audio plugs are accessible.



Step 26 – 3D Print FAIO Multiplexer enclosure top part and insert it into the enclosure



Step 27 – That's it! Your FAIO Multiplexer is fully assembled and ready to use.