

# SIM7000 Series Hardware Design

**LPWA Module** 

#### **SIMCom Wireless Solutions Limited**

Building B, SIM Technology Building, No.633, Jinzhong Road
Changning District, Shanghai P.R.China
Tel: 86-21-31575100
support@simcom.com
www.simcom.com



Document Title:	SIM7000 _Hardware Design			
Version:	V1.09			
Date:	2021-04-19			
Status:	Released			

#### **GENERAL NOTES**

SIMCOM OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS, TO SUPPORT APPLICATION AND ENGINEERING EFFORTS THAT USE THE PRODUCTS DESIGNED BY SIMCOM. THE INFORMATION PROVIDED IS BASED UPON REQUIREMENTS SPECIFICALLY PROVIDED TO SIMCOM BY THE CUSTOMERS. SIMCOM HAS NOT UNDERTAKEN ANY INDEPENDENT SEARCH FOR ADDITIONAL RELEVANT INFORMATION, INCLUDING ANY INFORMATION THAT MAY BE IN THE CUSTOMER'S POSSESSION. FURTHERMORE, SYSTEM VALIDATION OF THIS PRODUCT DESIGNED BY SIMCOM WITHIN A LARGER ELECTRONIC SYSTEM REMAINS THE RESPONSIBILITY OF THE CUSTOMER OR THE CUSTOMER'S SYSTEM INTEGRATOR. ALL SPECIFICATIONS SUPPLIED HEREIN ARE SUBJECT TO CHANGE.

#### COPYRIGHT

THIS DOCUMENT CONTAINS PROPRIETARY TECHNICAL INFORMATION WHICH IS THE PROPERTY OF SIMCOM WIRELESS SOLUTIONS LIMITED COPYING, TO OTHERS AND USING THIS DOCUMENT, ARE FORBIDDEN WITHOUT EXPRESS AUTHORITY BY SIMCOM. OFFENDERS ARE LIABLE TO THE PAYMENT OF INDEMNIFICATIONS. ALL RIGHTS RESERVED BY SIMCOM IN THE PROPRIETARY TECHNICAL INFORMATION, INCLUDING BUT NOT LIMITED TO REGISTRATION GRANTING OF A PATENT, A UTILITY MODEL OR DESIGN. ALL SPECIFICATION SUPPLIED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

#### **SIMCom Wireless Solutions Limited**

Building B, SIM Technology Building, No.633 Jinzhong Road, Changning District, Shanghai P.R.China

Tel: +86 21 31575100

Email: simcom@simcom.com

#### For more information, please visit:

https://www.simcom.com/download/list-863-en.html

#### For technical support, or to report documentation errors, please visit:

https://www.simcom.com/ask/or email to: support@simcom.com

Copyright © 2020 SIMCom Wireless Solutions Limited All Rights Reserved.

www.simcom.com 2/69



## **Version History**

Date	Version	Description of change	Author
2017-05-23	1.00	Original	TuHongjun Li Ya
2017-07-13	1.01	<ol> <li>Update the data of Table 1, Table 23 and Table</li> <li>Update figure 3 and figure 4</li> </ol>	Li Ya
2017-08-29	V1.02	<ol> <li>Update the description of RI and DTR.</li> <li>Update the description of voltage monitor.</li> <li>Update the description of power off function.</li> <li>Update the description of the remarks of some nonsupport function in existingsoftware, such as PCM, I2C,SIM_DET.</li> <li>Update the mechanical information.</li> <li>Update the data of Table 1.</li> <li>Update the data of Table 32.</li> <li>Add ESD testing condition.</li> </ol>	TuHongjun
2017-09-18	V1.03	Update the data of Table 32.	TuHongjun
2018-1-31	V1.04	<ol> <li>Change the description GSM to GPRS and EDGE.</li> <li>Update the table related documents.</li> <li>Update thepictureblock diagram.</li> <li>Update the picturePin assignment overview.</li> <li>Add comment for Galileo.</li> <li>Deletetherecommendedtype of SIM card socket.</li> <li>Update the baking information.</li> <li>Add the PSM and e-DRX information.</li> <li>Add the design check list information.</li> <li>Add the table 41and table 42Add recommend SMT stencil;</li> </ol>	TuHongjun Li ya
2018-12-24	V1.05	e-DRX Update	TuHongjun
2020-04-23	V1.06	Update document format	PanQiMing
2020-05-15	V1.07	Update format, Chinese and English corresponding problem modification	ZhangShuai
2021-04-02	V1.08	Update sensitivity	LiMeihao
2021-04-19	V1.09	Update supporting band	LiMeihao

www.simcom.com 3/69



### **Contents**

1	Introduction	9
	1.1 Product Outline	9
	1.2 Hardware Interface Overview	10
	1.3 Hardware Block Diagram	10
	1.4 Functional Overview	11
2	Package Information	
	2.1 Pin Assignment Overview	
	2.2 Pin Description	
	2.3 Mechanical Information	
	2.4 Footprint Recommendation	
3	Interface Application	
	3.1 Power Supply	
	3.1.1 Power Supply Design Guide	
	3.1.2 Recommended Power Supply Circuit	
	3.1.3 Voltage Monitor	
	3.2 Power on/Power off/Reset Function	
	3.2.1 Power on	
	3.2.2 Power off	
	3.2.3 Reset Function	
	3.3 UART Interface	
	3.3.1 UART Design Guide	
	3.3.2 RI and DTR Behavior	
	3.4 USB Interface	
	3.5 SIM Interface	
	3.5.1 SIM Application Guide	
	3.6 PCM Interface	
	3.6.1 PCM timing	
	3.6.2 PCM Application Guide	
	3.7 I2C Interface	
	3.8 Network status	34
	3.9 Other interface	
	3.9.1 ADC	36
	3.9.2 LDO	36
4	RF Specifications	
	4.1 GSM/LTE RF Specifications	38
	4.2 GSM/LTE Antenna Design Guide	
	4.3 GNSS	42
	4.3.1 GNSS Technical specification	42
	4.3.2 GNSS Application Guide	
	4.4 RF traces note	44



	4	4.4.1 RF traces layout	44
	4	4.4.2 LTE ANT and other system ANT decoupling	45
5	Elec	ctrical Specifications	46
	5.1	Absolute maximum ratings	46
	5.2	Operating conditions	46
	5.3	Operating Mode	48
	!	5.3.1 Operating Mode Definition	48
		5.3.2 Sleep mode	49
	!	5.3.3 Minimum functionality mode and Flight mode	49
	!	5.3.4 Power Saving Mode (PSM)	49
	5.4	Current Consumption	50
	5.5	ESD Notes	52
6	Elec	ctrical Specifications	53
	6.1	Top and Bottom View of SIM7000	53
	6.2	Label Information	54
	6.3	Typical SMT Reflow Profile	55
	6.4	Moisture Sensitivity Level (MSL)	56
	6.5	Baking	56
	6.6	Stencil Foil Design Recommendation	
7	Elec	ctrical Specifications	58
	7.1	Tray packaging	
8	App	pendix	61
	8.1	Reference Design	61
	8.2	Design check list	62
	8.3	Coding Schemes and Maximum Net Data Rates over Air Int	erface64
	8.4	Related Documents	65
	8.5	Terms and Abbreviations	67
	8.6	Safety Caution	69



### **Table Index**

Table 1: SIM7000 frequency bands and air interface	9
Table 2: General features	11
Table 3: Pin definition	13
Table 4: IO parameters definition	15
Table 5: Pin description	15
Table 6: VBAT pins electronic characteristic	20
Table 7: Recommended TVS diode list	21
Table 8: Power on timing and electronic characteristic	24
Table 9: Power off timing and electronic characteristic	25
Table 10: RESET pin electronic characteristic	26
Table 11: UART electronic characteristic	28
Table 12: SIM TVS recommended model list	30
Table 13: SIM electronic characteristic in 1.8V mode (SIM_VDD=1.8V)	30
Table 14: SIM electronic characteristic 3.0V mode (SIM_VDD=2.95V)	30
Table 15: PCM format	32
Table 16: PCM timing parameters	33
Table 17: NETLIGHT pin status	35
Table 18: ADC electronic characteristics	36
Table 19: Electronic characteristic	36
Table 20: Conducted transmission power	38
Table 21: Maximum Power Reduction (MPR) for UE category NB1 Power Class 3	38
Table 22: Operating frequencies	39
Table 23: E-UTRA operating bands	39
Table 24: Conducted receive sensitivity	39
Table 25: CAT-M1 Reference sensitivity (QPSK)	40
Table 26: CAT-NB1 Reference sensitivity (QPSK)	40
Table 27: Trace loss	41
Table 28: Recommended TVS	41
Table 29: Absolute maximum ratings	46
Table 30: Recommended operating ratings	46
Table 31: 1.8V Digital I/O characteristics*	46
Table 32: Operating temperature	47
Table 33: Operating mode Definition	48
Table 34: Current consumption on VBAT Pins (VBAT=3.8V)	50
Table 35: The ESD performance measurement table (Temperature: 25 $^{\circ}$ C, Humidity: 45%.)	52
Table 35: The description of label information	54
Table 37: Moisture Sensitivity Level and Floor Life	56
Table 38: Baking conditions	56
Table 39: Tray size	59
Table 40: Small Carton size	59
Table 41: Big Carton size	60
Table 42: SchematicCheck List	62



Table 43: PCB LayoutCheck List	62
Table 44: Coding Schemes and Maximum Net Data Rates over Air Interface	
Table 45: Related Documents	65
Table 46: Terms and Abbreviations	. 67
Table 47: Safety Caution	69



www.simcom.com 7/69



### Figure Index

Figure 1: SIM7000 block diagram	11
Figure 2: Pin assignment overview	13
Figure 3: Dimensions (Unit: mm)	18
Figure 4: Footprint recommendation (Unit: mm)	19
Figure 5: VBAT voltage drop during burst emission (EDGE/GPRS)	20
Figure 6: Power supply application circuit	21
Figure 7: Linear regulator reference circuit	22
Figure 8: power supply reference circuit (NB only)	22
Figure 9: Reference power on/off circuit	23
Figure 10: Power on timing sequence	24
Figure 11: Power off timing sequence	25
Figure 12: Reference reset circuit	26
Figure 13: UART full modem	27
Figure 14: UART null modem	27
Figure 15: Reference circuit of level shift	28
Figure 16: RI behaviour(SMS and URC report)	29
Figure 17: USB reference circuit	29
Figure 18: SIM interface reference circuit	31
Figure 19: PCM_SYNC timing	32
Figure 20: External codec to module timing	32
Figure 21: Module to external codec timing	
Figure 22: Audio codec reference circuit	34
Figure 23: I2C reference circuit	34
Figure 24: NETLIGHT reference circuit	35
Figure 25: Power on sequence of the VDD_EXT	36
Figure 26: Antenna matching circuit (MAIN_ANT)	41
Figure 27: Active antenna circuit	43
Figure 28: Passive antenna circuit (Default)	43
Figure 29: RF trace should be far away from other high speed signal lines	44
Figure 30: The distance between GND to the inner conductor of SMA	45
Figure 31: Top and bottom view of SIM700	53
Figure 32: Label information	54
Figure 33: The ramp-soak-spike reflow profile of SIM7000	55
Figure 34: stencil recommendation (Unit: mm)	57
Figure 35: packaging diagram	58
Figure 36: Tray drawing	58
Figure 37: Small carton drawing	59
Figure 38: Big carton drawing	59
Figure 39: Reference design	61





### 1 Introduction

This document describes the electronic specifications, RF specifications, interfaces, mechanical characteristics and testing results of the SIMCom SIM7000 series module. With the help of this document and other SIM7000 series software application notes/user guides, users can understand and use SIM7000 series module to design and develop applications quickly.

#### **Product Outline**

The SIM7000 series modules support LTE CAT-M1、LTE CAT-NB1、GPRS and EDGE.

The physical dimension of SIM7000 is 24×24×2.6mm mm. And the physical dimension is compatible with the packaging of SIM900, SIM800 and SIM800F.

Table 1: SIM7000 frequency bands and air interface

		Variants						
Standard	Frequency	SIM7000A	SIM7000C	SIM7000E	SIM7000JC	SIM7000C-	SIM7000E-	SIM7000G
		SIWITUUA	SIMPOOC	SIMITOULE	SIMITOOOJC	N	N	SIMTOUG
	GSM850MHz	i ! !				i ! J		✓
GPRS	EGSM900MHz	 	<b>✓</b>	✓		1		✓
GFRS	DCS1800MHz		<b>✓</b>	✓				<b>✓</b>
	PCS1900MHz			1			1	✓
	LTE-FDD B1		<b>✓</b>	1	✓	✓		<b>✓</b>
	LTE-FDD B2	<b>✓</b>		1				<b>✓</b>
	LTE-FDD B3	1 1 1	✓	✓	✓	✓	✓	<b>✓</b>
	LTE-FDD B4	<b>✓</b>						<b>✓</b>
	LTE-FDD B5	 	✓	 	✓	✓		<b>✓</b>
	LTE-FDD B8	 	✓	✓	✓	✓	<b>✓</b>	✓
	LTE-FDD B12	✓	 	 	 			✓
LTE-FDD HD-FDD	LTE-FDD B13	✓						✓
טט ו-טוו	LTE-FDD B18	 			✓			✓
	LTE-FDD B19	1 1 1	 	! !	✓			✓
	LTE-FDD B20	 	 	✓			✓	✓
	LTE-FDD B25	 		 				
	LTE-FDD B26	 			✓			✓
	LTE-FDD B28	 	1	✓			<b>/</b>	✓
	LTE-FDD B39		,   	 		 		<b>/</b>

www.simcom.com 9/69



Category	LTE-M1	<b>✓</b>	✓	<b>✓</b>	✓	T		✓
Category	LTE-NB1	 	✓	✓	✓	√	✓	✓
GNSS	GPS	<b>✓</b>	<b>✓</b>	<b>✓</b>	✓	 	 	✓
	GLONASS	\ \	<b>✓</b>	<b>√</b>	√	1	 	<b>√</b>
	BeiDou		<b>✓</b>	<b>√</b>	<b>√</b>	 	*	✓
	Galileo	1   		*	T		T	

#### **NOTE**

Galileo is default closed in software. But users can open it via AT command "AT+CGNSMOD". For more information about these AT commands, please refer to Document [1]

#### **Hardware Interface Overview**

The interfaces are described in detail in the next chapters include:

- Power Supply
- USB Interface
- UART Interface
- SIM Interface
- ADC
- LDO Power Output
- PCM Interface
- I2C Interface
- GPIOs
- Antenna Interface

#### **Hardware Block Diagram**

The block diagram of the SIM7000 module is shown in the figure below.

www.simcom.com 10/69



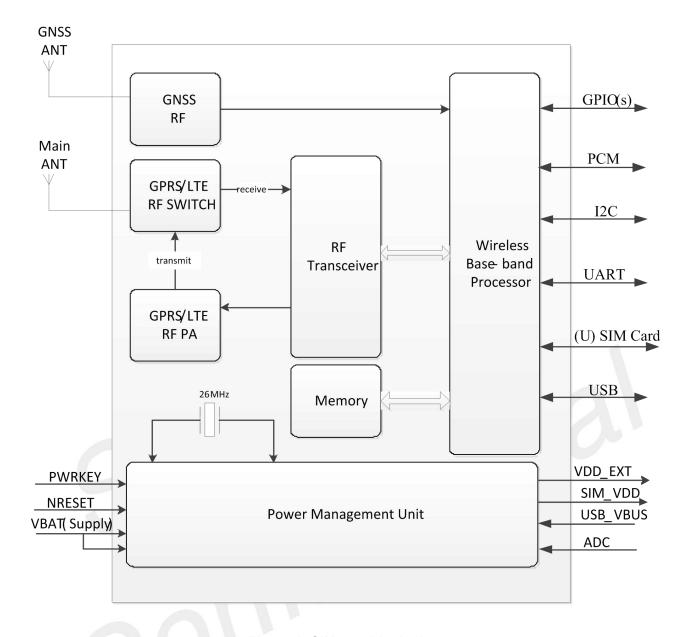


Figure 1: SIM7000 block diagram

#### **Functional Overview**

**Table 2: General features** 

Feature	Implementation
Power supply voltage 3.0~4.3V.	
Power caving	Current in sleep mode: 1.2mA (@DRX=2.56s).
Power saving	Current in PSM mode: 9uA.
Radio frequency bands	Please refer to the table 1
Transmitting power	GPRS power class:

www.simcom.com 11/69



	EGSM900: 4 (2W).
	DCS1800: 1 (1W).
	EDGE power class:
	EGSM900: E2 (0.5W).
	DCS1800: E1 (0.4W).
	LTE power class:3 (0.25W).
	GPRS multi-slot class 12.
	EDGE multi-slot class 12.
Data Transmission	LTE CAT M1: 300Kbps (DL).
Throughput	LTE CAT M1: 375Kbps (UL).
	LTE CAT NB1: 34Kbps (DL).
	LTE CAT NB1: 66Kbps (UL).
Antenna	GPRS/EDGE/LTE main antenna.
	GNSS antenna.
GNSS	GNSS engine (GPS,GLONASS, BD and Galileo).
	Protocol: NMEA.
SMS	MT, MO, CB, Text and PDU mode.
0114:4.6	SMS storage: SIM card or ME(default).
SIM interface	Support identity card: 1.8V/ 3V.
SIM application toolkit	Support SAT class 3, GSM 11.14 Release 98.
	Support USAT.
Adia faatuus	Support PCM interface.
Audio feature	Only support PCM master mode and short frame sync, 16-bit linear data
	formats.  A full modem serial port by default.
	Baud rate: 300bps to 3686400bps. Default rate is 0bps (auto baud rate).
	Support auto baud rate, but only limited to 9600, 19200, 38400, 57600
UART interface	and115200 bps.
	Can be used as the AT commands or data stream channel.
	Support RTS/CTS hardware handshake.
USB	USB 2.0 high speed interface.
Firmware upgrade	Firmware upgrade over USB interface
	Size:24×24×2.6mm
Physical characteristics	Weight:3g
	Normal operation temperature: -30°C to +80°C
Temperature range	Extended operation temperature: -40°C to +85°C*
	Storage temperature -45°C to +90°C
Temperature range	Extended operation temperature: -40°C to +85°C*

#### NOTE

Module is able to make and receive voice calls, data calls, SMS and make GPRS/EDGE/LTE traffic in -40  $^{\circ}$ C  $^{\circ}$  +85  $^{\circ}$ C. The performance will be reduced slightly from the 3GPP specifications if the temperature is outside the normal operating temperature range and still within the extreme operating temperature range.

www.simcom.com 12/69



## 2 Package Information

#### **Pin Assignment Overview**

All functions of the SIM7000 will be provided through 68 pads that will be connected to the customers' platform. The following Figure is the pin assignment of the SIM7000.

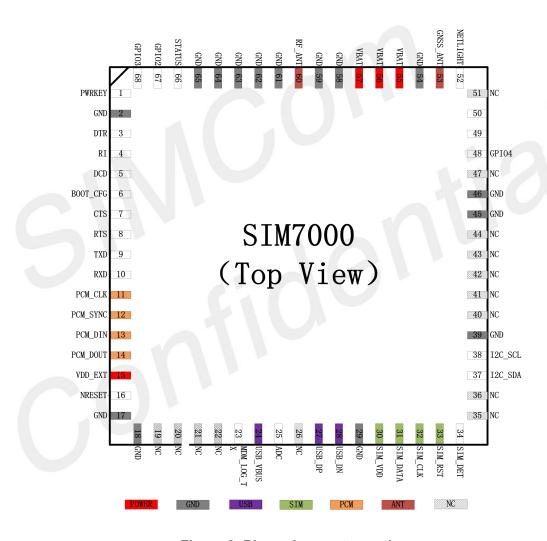


Figure 2: Pin assignment overview

Table 3: Pin definition

Pin No.	Pin Name	Pin No.	Pin Name
1	PWRKEY	2	GND
3	DTR	4	RI
5	DCD	6	BOOT_CFG

www.simcom.com 13/69



7	CTS	8	RTS
9	TXD	10	RXD
11	PCM_CLK	12	PCM_SYNC
13	PCM_DIN	14	PCM_DOUT
15	VDD_EXT	16	NRESET
17	GND	18	GND
19	NC	20	NC
21	NC	22	NC
23	MDM_LOG_TX	24	USB_VBUS
25	ADC	26	NC
27	USB_DP	28	USB_DM
29	GND	30	SIM_VDD
31	SIM_DATA	32	SIM_CLK
33	SIM_RST	34	SIM_DET
35	NC	36	NC
37	I2C_SDA	38	I2C_SCL
39	GND	40	NC
41	NC	42	NC
43	NC	44	NC
45	GND	46	GND
47	NC	48	GPIO4
49	GPIO1/UART3_RXD	50	GPIO0/UART3_TXD
51	NC	52	NETLIGHT
53	GNSS_ANT	54	GND
55	VBAT	56	VBAT
57	VBAT	58	GND
59	GND	60	RF_ANT
61	GND	62	GND
63	GND	64	GND
65	GND	66	STATUS
67	GPIO2	68	GPIO3

### NOTE

Before the normal power up, BOOT\_CFG cannot be pulled up.

www.simcom.com 14/69



### **Pin Description**

Table 4: IO parameters definition

Pintype	Description
PI	Power input
PO	Power output
Al	Analog input
AIO	Analog input/output
I/O	Bidirectional input /output
DI	Digital input
DO	Digital output
DOH	Digital output with high level
DOL	Digital output with low level
PU	Pull up
PD	Pull down
able 5: Pin	description

Table 5: Pin description

Pin name	Pin No.	Default status	Description	Comment
Power supply				
VBAT	55、56、 57	PI	Power supply, voltage range: $3.0{\sim}4.3$ V.	
VDD_EXT	15	РО	LDO power output 1.8V for other external circuits with Max 50mA current output.	This power supple only use for external GPIO pulling up or level shift circuit.  If unused, keep it open.
GND	2、17、18、 29、39、 45、46、 54、58、 59、61、 62、63、 64、65		Ground	
System Contro	ol			
PWRKEY	1	DI,PU	System power on/off control input, active low. The efficient input level must be below 0.5V.	The level is 0.8V when this PIN is floating;
NRESET	16	DI, PU	System reset control input, active low.	NRESET has been pulled up to 1.8V via 40Kohmresistor internally.
SIM interface				
SIM_DATA	31	I/O,PU	SIM Card data I/O, which has been pulled up via a 10KR resistor to SIM_VDD internally. Do not pull it up or down externally.	All lines of SIM interface should be protected against ESD.

15/69 www.simcom.com



SIM_RST	33	DO	SIM Reset	 
SIM_CLK	32	DO	SIM clock	 
SIM_VDD	30	PO	Power output for SIM card, its output Voltage depends on SIM card type automatically. Its output current is up to 50mA.	
SIM_DET	34	DI	SIM card detecting input.	If used, keep a $10k\Omega$ resistor pulling up to the VDD_EXT
USB*				
USB_VBUS	24	DI,PD	Valid USB detection input with 3.5~5.25V detection voltage	0.5
USB_DP	27	I/O	Positive line of the differential, bi-directional USB signal.	Software download interface.
USB_DM	28	I/O	Negative line of the differential, bi-directional USB signal.	
<b>UART</b> interfa	се			
DTR	3	DI,PU	DTE get ready	1
RI	4	DOH	Ring Indicator	
DCD	5	DOH	Carrier detects	
CTS	7	DOL	Clear to Send	If unused, keep them
RTS	8	DI,PD	Request to send	open.
TXD	9	DOH	Transmit Data	
RXD	10	DI,PD	Receive Data	
I2C interface				
I2C_SDA	37	DO	I2C data input/output	If unused, keep open, or
I2C_SCL	38	I/O	I2C clock output	else pull them up via2.2KΩ resistors to the VDD_EXT.
PCM interfac	e			
PCM_CLK	11	DOH	PCM data bit clock.	
PCM SYNC	12	DO	PCM data frame sync signal.	If unused, please keep
PCM DIN	13	DI	PCM data input.	them open.
PCM_DOUT	14	DO	PCM data output.	-
GPIO			•	
NETLIGHT	52	DO	LED control output as network	
STATUS	66	DOH	status indication.  Operating status output.  High level: Power on and firmware ready  Low level: Power off	If unused, keep them
GPIO0	50	Ю	Default: GPIO Optional: UART3_TXD in DAM application	open.
GPIO1	49	Ю	Default: GPIO Optional: UART3_RXD in DAM application	

www.simcom.com 16/69



	1	1	I .	1
GPIO2	67	Ю	GPIO	 
GPIO3	GPIO3 68		GPIO	 
GPIO4	48	DOH	GPIO	
RF interface				
GNSS_ANT	53	Al	GNSS antenna soldering pad	
RF_ANT	60	AIO	MAIN antenna soldering pad	 
Other interfac	е			
BOOT_CFG	6	DI,PD	If it needs to enterintoforcedUSB download mode, it must be pulling up this pin to VDD_EXT before press the PWRKEY.  If it needs to boot up normally, please keep this pin open.	Reserve a test points for it. Keep it open.DO NOT PULL UP DURING NORMAL POWER UP!
MDM_LOG_TX	23	DO	Module log output for SW debug. (only used for platform)	Reserve a test point for it.
ADC 25		Al	Analog-digital converter input. voltage range:0 $\sim$ VBAT.	If unused, keep them open.
NC	19、20、 21、22、 26、35、 36、40、 41、42、 43、44、 47、51、		No connection.	Keep it open

#### NOTE

Please reserve a test point for BOOT\_CFG, VDD\_EXT and MDM\_LOG\_TX. If there is no USB connector, please also reserve a test point for USB\_VBUS, USB\_DP, and USB\_DM for Firmware upgrade.

www.simcom.com 17/69



#### **Mechanical Information**

The following figures howsthe package outline drawing of SIM7000.

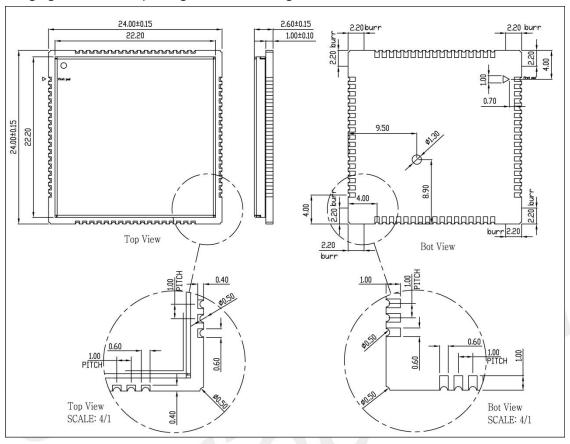


Figure 3: Dimensions (Unit: mm)

www.simcom.com 18/69



### **Footprint Recommendation**

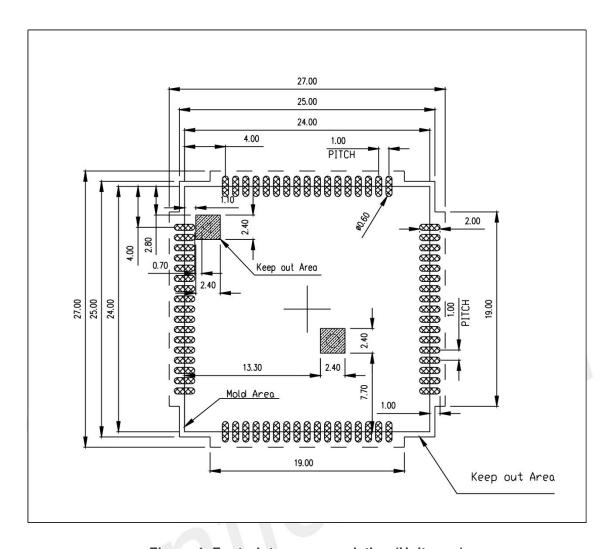


Figure 4: Footprint recommendation (Unit: mm)

www.simcom.com





### 3 Interface Application

#### **Power Supply**

Pin 55, pin 56 and pin 57 are VBAT power input.

On VBAT pads, when module works on CAT-M1 or NB-IoT mode, the ripple current is up to 0.6A typically. For steady voltage, the power supply capability must be up to 0.6A.

On VBAT pads, when module works on EDGE or GPRS mode, he ripple current is up to 2A typically. For steady voltage, the power supply capability must be up to 2A.

in order to avoid the voltage dropped down more than 300mV, the load capacitor on VBAT pads must be more than 300uF.

The following figure shows the VBAT voltage ripple wave at the maximum power transmit phase in EDGE/GPRS emission mode.

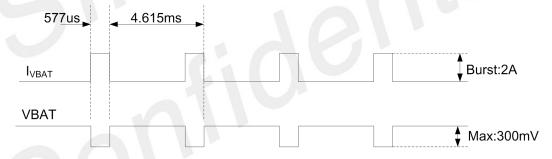


Figure 5: VBAT voltage drop during burst emission (EDGE/GPRS)

#### NOTE

The test condition: The voltage of power supply for VBAT is 3.8V, Ca=100  $\mu$ F tantalum capacitor (ESR=0.7 $\Omega$ ) and C<sub>e</sub> = 100Nf (Please refer to Figure 6—Application circuit).

Table 6: VBAT pins electronic characteristic

Symbol	Description	Min.	Тур.	Max.	Unit
VBAT	Module power voltage	3.0	3.8	4.3	V
IvBAT(peak)	Module power peak current in GSM and EDGE emission mode.	  -   <b>-</b> 	2	-       <b>-</b> 	Α

www.simcom.com 20/69



	Module power peak current in CAT-M1 and NB-loT emission mode.	  -  -  -  -	0.6	-	Α
I <sub>VBAT</sub> (average)	Module power average current in normal mode	Discount to the electric 5.4			
I <sub>VBAT(sleep)</sub>	Power supply current in sleep mode	Please refer to the chapter 5.4			er 5.4
I <sub>VBAT(power-off)</sub>	Module power current in power off mode.	-	-	7	uA

#### 3.1.1 Power Supply Design Guide

Make sure that the voltage on the VBAT pins will never drop below 3.0V, even during a transmit burstwhen current consumption may rise up to 2A. If the voltage drops below 3.0V, module will be shutdown.

#### NOTE

If the power supply for VBAT pins can support up to 2A, using a total of more than 300uF capacitors is recommended, or else users must using a total of 1000uF capacitors typically, in order to avoid the voltage drop is more than 300mV.

Some multi-layer ceramic chip (MLCC) capacitors (0.1uF, 1uF) with low ESR in high frequency band can be used for EMC.

These capacitors should be put as close as possible to VBAT pads. Also, users should keep VBAT trace on circuit board wider than 2 mm to minimize PCB trace impedance. The following figure shows the recommended circuit.

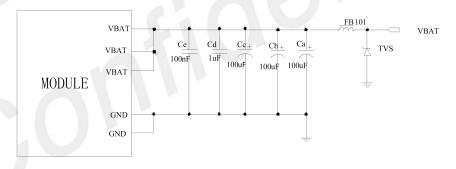


Figure 6: Power supply application circuit

In addition, for ESD protection, it is suggested to add a TVS diode near the VBAT PINs.

Table 7: Recommended TVS diode list

No.	Manufacturer	Part Number	Package
1	Prisemi	PESDHC2FD4V5B	DFN1006
2	Prisemi	PESDHC3D3V3U	SOD323
3	WILLsemi	ESD5651N-2/TR	DFN1006

www.simcom.com 21/69



#### 3.1.2 Recommended Power Supply Circuit

It is recommended that a switching mode power supply or near regulator power supply is used. It is important to make sure that all the components used in the power supply circuit can resist a peak current up to 2A when used GPRS/EDGE.

The following figure shows the linear regulator reference circuit with 5V input and 3.8V output. But this linear regulator has a minimum load current, and it is even bigger than 7mA. So if users care the system power consumption very much, it is not recommended to use.




Figure 7: Linear regulator reference circuit

If users used LTE mode only and never used EDGE/GPRS mode, switching modepower supply is recommended to use. And the maximum output current must be meeting the requirement. The following figure shows these witching mode power supply reference circuit.

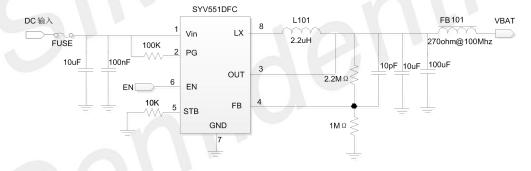


Figure 8: power supply reference circuit (NB only)

#### 3.1.3 Voltage Monitor

To monitor the VBAT voltage, the AT command "AT+CBC" can be used.

AT command "AT+CBATCHK=1" can be used to enable the overvoltage warning function and the under-voltage warning function. The default value of the over voltagewarning function in the software is 4.3V, and the default value of the under-voltage warning function is 3.1V. If the power supply for VBAT pins is up 4.3V or under 3.1V, module will be warning.

The AT command "AT+CBATCHK=1" also can be used to enable the overvoltage power-off function and the under-voltage power-off function. The default value of the overvoltage power-off function is 4.4V, and the default value of the under-voltage power-off function is 2.9V. If the VBAT voltage is up 4.4V or

www.simcom.com 22/69



under2.9V, module will be power off.

#### NOTE

Under-voltage warning function and under-voltage power-off function are disabled by default. For more information about these AT commands, please refer to Document [1].

#### Power on/Power off/Reset Function

#### 3.2.1 Power on

SIM7000 can be powered on by pulling the PWRKEY pin to ground.

The PWRKEY pin has been pulled up with a diode to 1.8V internally, so it does not need to be pulled up externally. It is strongly recommended to put a100nF capacitor and an ESD protection diode close to the PWRKEY pin, as it would strongly enhance the ESD performance of PWRKEY pin. Please refer to the following figure for the recommended reference circuit.

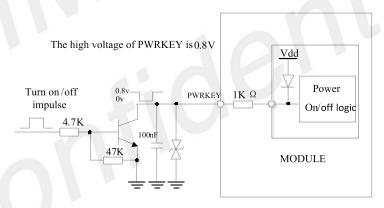


Figure 9: Reference power on/off circuit

The power-on scenarios are illustrated in the following figure.

www.simcom.com 23/69



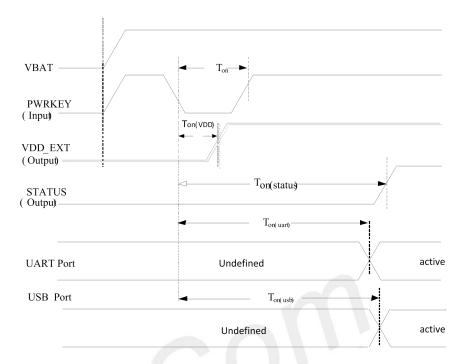


Figure 10: Power on timing sequence

Table 8: Power on timing and electronic characteristic

Symbol	Parameter	Min.	Тур.	Max.	Unit
T <sub>on</sub>	The time of active low level impulse of PWRKEY pin to power on module	1	_	-	S
T <sub>on</sub> (Vdd)	The time from power-on issue to VDD_EXT pin output high level.		64		ms
T <sub>on</sub> (status)	The time from power-on issue to STATUS pin output high level(indicating power up ready)	4.5	-	-	S
T <sub>on</sub> (uart)	The time from power-on issue to UART port ready	4.5	-	-	S
T <sub>on</sub> (usb)	The time from power-on issue to USB port ready	4.5	-	-	S
V <sub>IH</sub>	Input high level voltage on PWRKEY pin	0.6	8.0	1.8	V
V <sub>IL</sub>	Input low level voltage on PWRKEY pin	-0.3	0	0.5	V

#### 3.2.2 Power off

The following methods can be used to power off SIM7000.

- Method 1: Power off SIM7000 by pulling the PWRKEY pin to ground.
- Method 2: Power off SIM7000 by AT command "AT+CPOWD=1".
- Method 3: over-voltage or under-voltage automatic power off. The functioncan be enabled by AT command "AT+CBATCHK=1". Default is disabled.

www.simcom.com 24/69



For details about "AT+CPOWD" and "AT+CBATCHK", please refer to Document [1].

These procedures will make modules disconnect from the network and allow the software to enter a safe state, and save data before module be powered off completely.

The power off scenario by pulling down the PWRKEY pin is illustrated in the following figure.

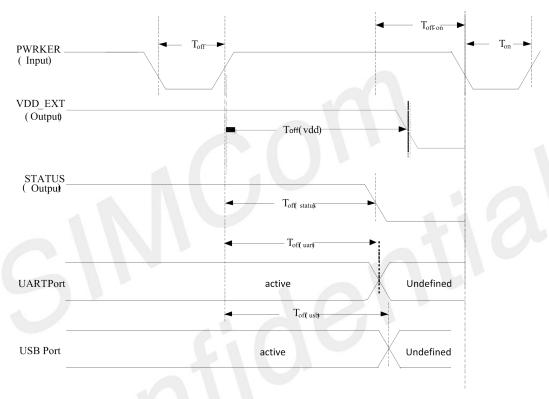


Figure 11: Power off timing sequence

Table 9: Power off timing and electronic characteristic

Symbol	Downwater		Time value			
	Parameter	Min.	Тур.	Max.		
Toff	The active low level time pulse on PWRKEY pin to power off module	1.2	_	-	S	
Toff (vdd)	The time from power-off issue to VDD_EXT pin output low level		-	6.9	S	
Toff(status	The time from power-off issue to STATUS pin output low level(indicating power off )*	1.8	- -	6.9	S	
Toff(uart)	The time from power-off issue to UART port off	1.8	-	6.9	S	
Toff(usb)	The time from power-off issue to USB port off	1.8	-	6.9	S	
Toff-on	The buffer time from power-off issue to power-on issue	2	-	-	S	

NOTE

www.simcom.com 25/69



The STATUS pin can be used to detect whether module is powered on or not. When module has been powered on and firmware goes ready, STATUS will be high level, or else STATUS will still low level.

#### 3.2.3 Reset Function

SIM7000 can be reset by pulling the RESET pin to ground.

#### NOTE

This function is only used as an emergency reset. The RESET pin will be ineffectiveness in the power off mode.

The RESET pin has been pulled up to 1.8V with a  $40K\Omega$  resistor internally. So it does not need to be pulled up externally. It is strongly recommended to put a100nF capacitor and an ESD protection diode close to the RESET pin. Please refer to the following figure for the recommended reference circuit.

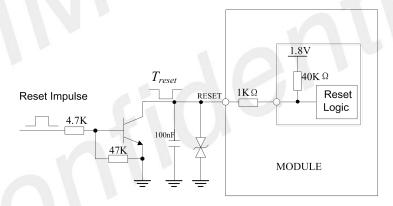


Figure 12: Reference reset circuit

Table 10: RESET pin electronic characteristic

Symbol	Description	Min.	Тур.	Max.	Unit
Treset	The active low level time impulse on RESET pin to reset module	252	 	 	ms
V <sub>IH</sub>	Input high level voltage	1.2	1.8	2.1	V
V <sub>IL</sub>	Input low level voltage	-0.3	0	0.8	V

www.simcom.com 26/69



#### **UART Interface**

SIM7000 provides a7-wire UART (universal asynchronous serial transmission) interfaces DCE (Data Communication Equipment).AT commands and data transmission can be performed through this UART interface.

In DAM (Downloadable Application Module) application, SIM7000 provides a UART interface to use. This UART multiplexed from GPIO. The GPIO0 multiplex as TXD and the GPIO1 multiplex as RXD. This UART interface can't use as AT port or data transmission. It is only used as UART in DAM application when secondary development.

SIM7000 support high speed UART, the baud rate is up to 4Mbps. The communication baud rates include:0,300,600,1200,2400,4800,9600,19200,38400,57600,115200,230400,921600,2000000,3000000, 32000000,3686400 bps. The rate 0bps mark auto baud rate. And it supports auto baud rate, but the rate only supported on 9600, 19200, 38400, 57600, 115200. If users need to change to other baud rate, it needs to switch via manual operation.

#### 3.3.1 UART Design Guide

The following figures show the reference design.

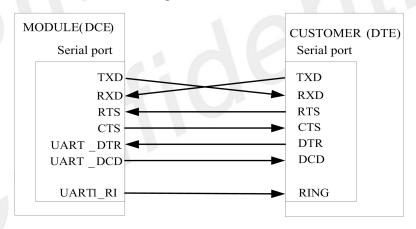


Figure 13: UART full modem

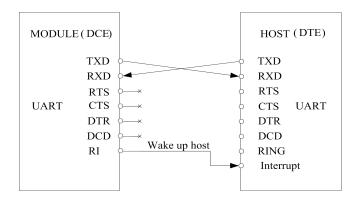


Figure 14: UART null modem

www.simcom.com 27/69



Table	11:	UART	electronic	charac	teristic

Symbol	Description	Min.	Тур.	Max.	Unit
VIH	UART input high level voltage	1.17	1.8	2.1	V
VIL	UART input low level voltage	-0.3	0	0.63	V
VOH	UART output high level voltage	1.35	1.8	1.8	V
VOL	UART output low level voltage	0	0	0.45	V

The SIM7000 UART is 1.8V voltage interface. If user's UART application circuit is 3.3V voltage interface, the level shifter circuits should be used for voltage matching. The following figure shows the voltage matching reference design.

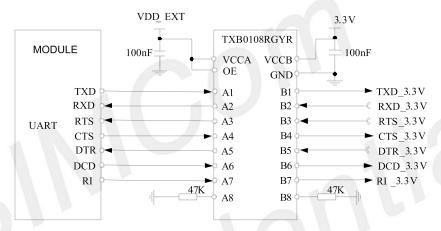


Figure 15: Reference circuit of level shift

#### **NOTE**

When it uses the level shifter IC, the pull up resistance on TXD\_3.3V, RTS\_3.3V, DCD\_3.3V and RI\_3.3V should not be less than  $47K\Omega$ .

#### 3.3.2 RI and DTR Behavior

The RI pin description:

The RI pin can be used to interrupt output signal to inform the host controller such as application CPU. Before that, users must use AT command "AT+CFGRI=1" to enable this function.

Normally RI will keep high level until certain conditions such as receiving SMS, or a URC report coming, then it will output a low level pulse 120ms, in the end, it will become high level.

www.simcom.com 28/69





Figure 16: RI behaviour (SMS and URC report)

#### The DTR pin description:

After setting the AT command "AT+CSCLK=1", and then pulling up the DTR pin, SIM7000 will enter sleep mode when module is in idle mode. In sleep mode, the UART is unavailable. When SIM7000 enters sleep mode, pulling down DTR can wake up module.

After setting the AT command "AT+CSCLK=0", SIM7000 will do nothing when the DTR pin is pulling up.

#### **NOTE**

For more details of AT commands about UART, please refer to document [1] and [20].

#### **USB** Interface

The SIM7000 contains a USB interface compliant with the USB2.0 specification as a peripheral, but the USB charging function is not supported.

USB\_VBUS is the detecting signal for USB inserting. The input voltage range on the USB\_VBUS pin is from 3.5V to 5.25V. If the voltage is out of this range, it may cause USB port unidentifiable.

The reference circuit refers to the following figure.

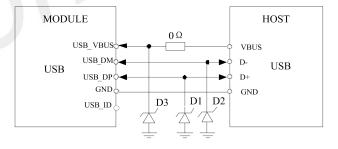


Figure 17: USB reference circuit

Because of the high speed on USB bus, more attention should be paid to the influence of the junction capacitance of the ESD component on USB data lines. Typically, the capacitance of the D1 and D2 should be less than 1pF.

D3 is suggested to select the diode with anti-ESD and voltage surge function, or customer could add a ZENER diode for surge clamping.

www.simcom.com 29/69



Table 12: SIM TVS recommended model list

NOI	Factory	P/N.	Load cap	Pack
1	NXP	PESD5V0X1BCA L	0.85pF	0402
2	Willsemi	ESD5301N	0.4pF	0402
3	NXP	PESD5V0H1BSF	0.15pF	0201
4	Willsemi	ESD5311Z-2/TR	0.25pF	0201

#### **NOTE**

The USB\_DM and USB\_DP nets must be traced by 90Ohm+/-10% differential impedance.

#### **SIM Interface**

SIM7000 supports both 1.8V and 3.0V SIM Cards.

Table 13: SIM electronic characteristic in 1.8V mode (SIM\_VDD=1.8V)

Symbol	Parameter	Min.	Тур.	Max.	Unit
SIM_VDD	LDO power output voltage	1.75	1.8	1.95	V
VIH	High-level input voltage	0.65*SIM_VDD	-	SIM_VDD +0.3	V
VIL	Low-level input voltage	-0.3	0	0.35*SIM_VDD	V
VOH	High-level output voltage	SIM_VDD -0.45	-	SIM_VDD	V
VOL	Low-level output voltage	0	0	0.45	V

Table 14: SIM electronic characteristic 3.0V mode (SIM\_VDD=2.95V)

Symbol	Parameter	Min.	Тур.	Max.	Unit
SIM_VDD	LDO power output voltage	2.75	2.95	3.05	V
VIH	High-level input voltage	0.65*SIM_VDD	-	SIM_VDD +0.3	V
VIL	Low-level input voltage	-0.3	0	0.25*SIM_VDD	V
VOH	High-level output voltage	SIM_VDD -0.45	-	SIM_VDD	V
VOL	Low-level output voltage	0	0	0.45	V

#### 3.5.1 SIM Application Guide

It is recommended to use an ESD protection component such as ESDA6V1W5 produced by ST (www.st.com ) or SMF15C produced by ON SEMI (www.onsemi.com ). Note that the SIM peripheral circuit should be close to the SIM card socket. The following figure shows the 6-pin SIM card holder reference circuit.

www.simcom.com 30/69



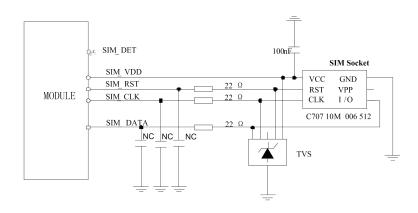


Figure 18: SIM interface reference circuit

SIM\_DATA has been pulled up with a  $10K\Omega$  resistor to SIM\_VDD in module, so it does not need to pulled up resistor anymore.

SIM\_VDD needs a 100nF capacitor close to SIM socket.

SIM\_CLK is very important signal, the rise time and fall time of SIM\_CLK should be less than 40ns. So the junction capacity of the TVS needs to be less 50pF.

SIM\_DET is the detecting signal for SIM card to insert and pull out. There is no pull up resistor in module, so a  $10K\Omega$  resistor is necessary to pulling up to the power VDD\_EXT. This function is disabled default by software. Users can enable it by AT comment "AT+CSDT". And the Interrupt state can be set by AT comment "AT+CSPOL".

#### NOTE

For more details of AT commands about "AT+CSDT" and "AT+CSPOL", please refer to document [1]

SIM card circuit is easy to be interfered, resulting in unrecognized card or card out of the situation, so please follow the following principles in the design:

- It is recommended to place a 100nF capacitor near the SIM card holder on the SIM\_VDD signal line
- Place near SIM gets stuck, TVS, the parasitic capacitance of TVS should not greater than 50 pf, 22
   Ω resistance in series between the SIM gets stuck and module can enhance ESD protection performance
- Be sure to keep the SIM card holder away from the main antenna during the PCB layout phase
- The SIM card line should be far away from RF line, VBAT line and high-speed signal line, and the SIM card line should not be too long
- SIM card signal line line avoid line branch
- The GND of the SIM card holder should maintain good connectivity with the GND of the module and make the two GND equipotential
- Each signal of SIM card should be protected by GND, and SIM\_CLK should be protected separately.

www.simcom.com 31/69



#### **PCM** Interface

SIM7000 provides a PCM interface for external codec, which can be used in master mode with short sync and 16 bits linear format.

Table 15: PCM format

Characteristics	Specification
Line Interface Format	Linear(Fixed)
Data length	16bits(Fixed)
PCM Clock /Sync Source	Master Mode(Fixed)
PCM Clock Rate	2048 KHz (Fixed)
PCM Sync Format	Short sync(Fixed)
Data Ordering	MSB

#### **NOTE**

For more details about PCM AT commands, please refer to document [1].

#### 3.6.1 PCM timing

SIM7000 supports 2.048 MHz PCM data and sync timing for 16 bits linear format codec.




Figure 19: PCM\_SYNC timing

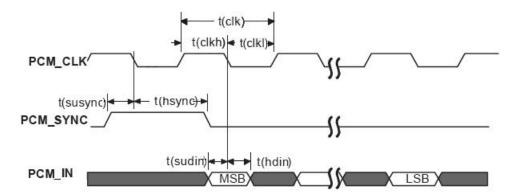


Figure 20: External codec to module timing

www.simcom.com 32/69



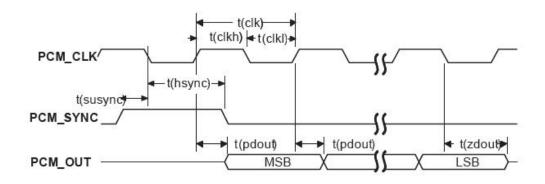


Figure 21: Module to external codec timing

**Table 16: PCM timing parameters** 

Parameter	Description	Min.	Тур.	Max.	Unit
T(sync)	PCM_SYNC cycle time	_	125	-	μs
T(synch)	PCM_SYNC high level time	<u> </u>	488	-	ns
T(syncl)	PCM_SYNC low level time	_	124.5		μs
T(clk)	PCM_CLK cycle time	_	488	-	ns
T(clkh)	PCM_CLK high level time	-	244		ns
T(clkl)	PCM_CLK low level time	- \\	244	_	ns
T(susync)	PCM_SYNC setup time high before falling edge of PCM_CLK	7	122	<u>-</u>	ns
T(hsync)	PCM_SYNC hold time after falling edge of PCM_CLK		366	- -	ns
T(sudin)	PCM_IN setup time before falling edge of PCM_CLK	60	_	- -	ns
T(hdin)	PCM_IN hold time after falling edge of PCM_CLK	60	_	_	ns
T(pdout)	Delay from PCM_CLK rising to PCM_OUT valid	_	_	60	ns
T(zdout)	Delay from PCM_CLK falling to PCM_OUT HIGH-Z	_	_	60	ns

#### 3.6.2 PCM Application Guide

The following figure shows the external codec reference design.

www.simcom.com 33/69



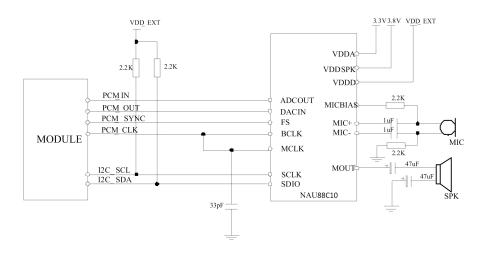


Figure 22: Audio codec reference circuit

#### **I2C** Interface

SIM7000 provides anI2C interface compatible with I2C specification, version 5.0, with clock rate up to 400 kHz. Its operation voltage is 1.8V.

The following figure shows the I2C bus reference design.

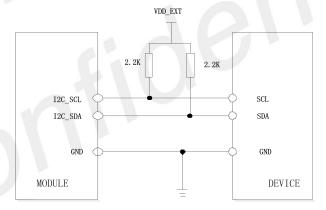


Figure 23: I2C reference circuit

The I2C signal has no pull-up resistors in module. So the pulling up resistors  $2.2K\Omega$  to VDD\_EXT are necessary in application circuit.

#### **Network status**

The NETLIGHT pin is used to control Network Status LED, its reference circuit is shown in the following figure.

www.simcom.com 34/69



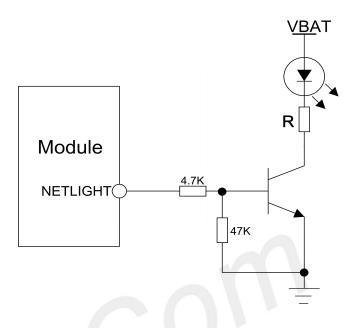


Figure 24: NETLIGHT reference circuit

#### **NOTE**

The value of the resistor named "R" depends on the LED characteristic.

#### Table 17: NETLIGHT pin status

NETLIGHT pin status	Module status
64ms ON, 800ms OFF	No registered network
64ms ON, 3000ms OFF	Registered network (PS domain registration success)
64ms ON, 300ms OFF	Data transmit (PPP dial-up state and use of data services such as
04IIIS OIN, SOOIIIS OFF	internal TCP/FTP/HTTP)
OFF	Power off or PSM mode

#### NOTE

NETLIGHT output low level as "OFF" and high level as "ON".

www.simcom.com 35/69



#### Other interface

#### 3.9.1 ADC

SIM7000 has a dedicated ADC pin. It is available for digitizing analog signals such as battery voltage and so on. Its input voltage range is from 0V to VBAT. That is the maximum measurement range of ADC cannot exceed the input voltage of VBAT (3V~4.3V). When the voltage of the VBAT is reduced during use, the range of ADC will also be reduced. If the input voltage of ADC PIN exceeds its range, it is necessary to implement the resistance partial pressure on the hardware

The electronic specifications are shown in the following table.

Table 18: ADC electronic characteristics

Characteristics	Min.	Тур.	Max.	Unit
Resolution	- 4	<del>-</del> \\	15	Bits
Input Range	0		VBAT	V
Input serial resistance	1	72	_	МΩ

#### **NOTE**

"AT+CADC" can be used to read the voltage of the ADC pin, for more details, please refer to document [1].

#### 3.9.2 LDO

SIM7000 has a LDO power output named VDD\_EXT. The output voltage is 1.8V. This voltage can only be pulled up for the external GPIO or power supply for the level conversion circuit.

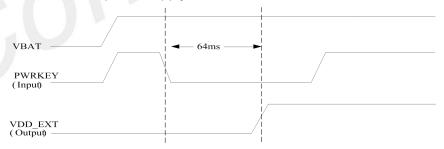


Figure 25: Power on sequence of the VDD\_EXT

**Table 19: Electronic characteristic** 

Symbol	Description	Min.	Тур.	Max.	Unit
VDD_EXT	Output voltage	1.7	1.8	1.9	V
Ю	Output current	  - 	   <b>-</b> 	50	mA

www.simcom.com 36/69



## NOTE

The VDD\_EXT is used to the IO power in the module. The Output voltage is not supported to adjust.



www.simcom.com 37/69





# 4 RF Specifications

# **GSM/LTE RF Specifications**

Table 20: Conducted transmission power

Frequency	Power	Min.
EGSM900	33dBm ±2dB	5dBm ± 5dB
DCS1800	30dBm ±2dB	0dBm ± 5dB
LTE-FDD B1	23dBm +/-2.7dB	<-40dBm
LTE-FDD B2	23dBm +/-2.7dB	<-40dBm
LTE-FDD B3	23dBm +/-2.7dB	<-40dBm
LTE-FDD B4	23dBm +/-2.7dB	<-40dBm
LTE-FDD B5	23dBm +/-2.7dB	<-40dBm
LTE-FDD B6	23dBm +/-2.7dB	<-40dBm
LTE-FDD B8	23dBm +/-2.7dB	<-40dBm
LTE-FDD B12	23dBm +/-2.7dB	<-40dBm
LTE-FDD B13	23dBm +/-2.7dB	<-40dBm
LTE-FDD B18	23dBm +/-2.7dB	<-40dBm
LTE-FDD B19	23dBm +/-2.7dB	<-40dBm
LTE-FDD B20	23dBm +/-2.7dB	<-40dBm
LTE-FDD B26	23dBm +/-2.7dB	<-40dBm
LTE-FDD B28	23dBm +/-2.7dB	<-40dBm
LTE-FDD B39	23dBm +/-2.7dB	<-40dBm

#### NOTE

The max power is tested result for 1RB in CAT-M1 and single-tone in CAT-NB1. MPR for CAT-M1 please refer to 6.2.3EA.5 part for 3GPP. Multi-tone test results please refer to part 6.2.3F.3 for CAT-NB1.

Table 21: Maximum Power Reduction (MPR) for UE category NB1 Power Class 3

Modulation	QPSK		
Tone positions for 3 Tones allocation	0-2	3-5 and 6-8	9-11
MPR	≤ 0.5 dB	0 dB	≤ 0.5 dB

www.simcom.com 38/69



Tone positions for 6 Tones allocation	0-5 and 6-11
MPR	≤ 1 dB ≤ 1 dB
Tone positions for 12 Tones allocation	0-11
MPR	≤ 2 dB

### **Table 22: Operating frequencies**

Frequency	Receiving	Transmission	
EGSM900	925∼960MHz	$880{\sim}915~\mathrm{MHz}$	
GSM850	869~894MHz	824~849 MHz	
DCS1800	1805∼1880 MHz	1710∼1785 MHz	
PCS1900	1844.9~1879.9MHz	1749.9~1784.9MHz	
GPS L1 BAND	1574.4 ∼1576.44 MHz	-	
GLONASS	1598 ∼1606 MHz	-	
BD	1559∼1563 MHz		
LTE BAND	Refers to Table 22		

### Table 23: E-UTRA operating bands

E-UTRA	UL Freq.	DL Freq.	Duplex Mode
1	1920 ~1980 MHz	2110 ~2170 MHz	HD-FDD
3	1710 ~1785 MHz	1805 ~1880 MHz	HD-FDD
5	824 ~849 MHz	869 ~894 MHz	HD-FDD
6	830 ~840 MHz	875 ~885 MHz	HD-FDD
8	880 ~915 MHz	925 ~960 MHz	HD-FDD
12	699 ~716 MHz	729 ~746 MHz	HD-FDD
13	777 ~787 MHz	746 ~756 MHz	HD-FDD
18	815 ~830 MHz	860 ~875 MHz	HD-FDD
19	830 ~845 MHz	875 ~890 MHz	HD-FDD
20	832 ~862 MHz	791 ~821 MHz	HD-FDD
26	814 ~849 MHz	859 ~894 MHz	HD-FDD
28	703 ~748 MHz	758 ~803 MHz	HD-FDD
39	1880 ~1920 MHz	1880 ~1920 MHz	TDD

#### Table 24: Conducted receive sensitivity

Frequency	Receive sensitivity(Typical) Receive sensitivity(I	
EGSM900	< -109dBm	3GPP
GSM850	< -109dBm	3GPP
DCS1800	< -109dBm	3GPP

www.simcom.com 39/69



PCS1900	< -109dBm	3GPP
LTE FDD/TDD	Refers to Table 24	

# Table 25: CAT-M1 Reference sensitivity (QPSK)

E-UTRA Band	REFSENS MAX(dBm) 3GPP	REFSENS Typical(dBm)	Duplex Mode
1	-102.2	-108.2	HD-FDD
2	-100.2	-107.5	HD-FDD
3	-99.2	-107.3	HD-FDD
4	-102.2	-108.6	HD-FDD
5	-100.7	-107.3	HD-FDD
8	-99.7	-107.7	HD-FDD
12	-99.2	-107.3	HD-FDD
13	-98.7	-107.3	HD-FDD
18	-102.2	-107.3	HD-FDD
19	-102.2	-107	HD-FDD
20	-99.7	-107.2	HD-FDD
26	-100.2	-107	HD-FDD
28	-100.7	-107.3	HD-FDD

# Table 26: CAT-NB1 Reference sensitivity (QPSK)

Operating band		Typical	REFSENS Typical Repeated 7/128 [EPREdBm/15KHz]
1, 2, 3, 4,5, 8, 12, 13, 17, 18, 19, 20, 26, 28	-108.2	-114	-145

www.simcom.com 40/69



## GSM/LTE Antenna Design Guide

Users should connect antennas to SIM7000's antenna pads through micro-strip line or other types of RF trace and the trace impedance must be controlled in  $50\Omega$ . SIMCom recommends that the total insertion loss between the antenna pads and antennas should meet the following requirements:

Table 27: Trace loss

Frequency	Loss
700MHz-960MHz	<0.5dB
1710MHz-2170MHz	<0.9dB
2300MHz-2650MHz	<1.2dB

To facilitate the antenna tuning and certification test, a RF connector and an antenna matching circuit should be added. The following figure is the recommended circuit.

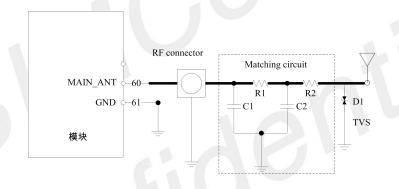


Figure 26: Antenna matching circuit (MAIN\_ANT)

In above figure, the components R1, C1, C2 and R2 are used for antenna matching, the values of components can only be achieved after the antenna tuning and usually provided by antenna vendor. By default, the R1, R2 are  $0\Omega$  resistors, and the C1, C2 are reserved for tuning. The component D1 is a TVS for ESD protection, and it is optional for users according to application environment.

The RF test connector is used for the conducted RF performance test, and should be placed as close as to the module's MAIN\_ANT pin. The traces impedance between SIM7000 and antenna must be controlled in  $50\Omega$ .

Two TVS are recommended in the table below.

Table 28: Recommended TVS

Package	Part Number	Vender
0201	LXES03AAA1-154	Murata
0402	LXES15AAA1-153	Murata

www.simcom.com 41/69



#### **GNSS**

SIM7000 merges GNSS (GPS/GLONASS/BD) satellite and network information to provide a high-availability solution that offers industry-leading accuracy and performance. This solution performs well, even in very challenging environmental conditions where conventional GNSS receivers fail, and provides a platform to enable wireless operators to address both location-based services and emergency mandates.

#### 4.3.1 GNSS Technical specification

- Tracking sensitivity: -162 dBm (GPS) /-157 dBm (GLONASS) /TBD (BD)
- Cold-start sensitivity: -148 dBm
- Accuracy (Open Sky): 2.5m (CEP50)
- TTFF (Open Sky): Hot start <1s, Cold start<35s</li>
- Receiver Type: 16-channel, C/A Code
- GPS L1 Frequency: 1575.42±1.023MHz
- GLONASS: 1597.5~1605.8 MHz
- BD: 1559.05~1563.14 MHz
- Update rate: Default 1 Hz
- GNSS data format: NMEA-0183
- GNSS Current consumption :30mA (GSM/LTE Sleep, in total on VBAT pins)
- GNSS antenna: Passive/Active antenna

#### **NOTE**

If the antenna is active type, the power should be given by main board because there is no power supply on the GPS antenna pad. If the antenna is passive, it is suggested that the external LNA should be used.

#### 4.3.2 GNSS Application Guide

Users can adopt an active antenna or a passive antenna to SIM7000. If using a passive antenna, an external LNA is a must to get better performance. The following figures are the reference circuits.

www.simcom.com 42/69



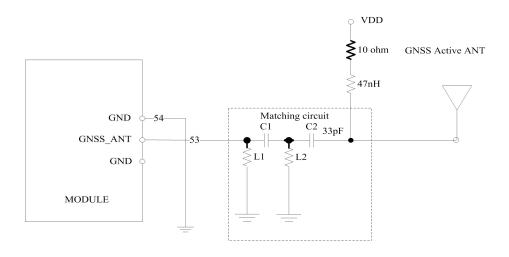


Figure 27: Active antenna circuit

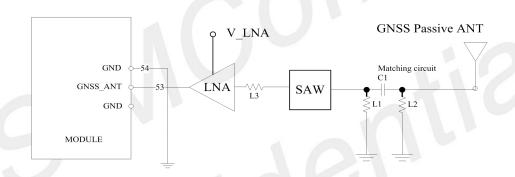


Figure 28: Passive antenna circuit (Default)

In above figures, the components C1, L1 and L2 are used for antenna matching. Usually, the values of the components can only be achieved after antenna tuning and usually provided by antenna vendor.C2 is used for DC blocking. L3 is the matching component of the external LNA, and the value of L3 is determined by the LNA characteristic and PCB layout. Both VDD of active antenna and V\_LNA need external power supplies which should be considered according to active antenna and LNA characteristic. LDO/DCDC is recommended to get lower current consuming by shutting down active antennas and LNA when GNSS is not working.

GNSS can be tested by NMEA port. NMEA sentences can be obtained through UART or USB automatically. NMEA sentences include GSV, GGA, RMC, GSA, and VTG. Before using GNSS, user should configure SIM7000 in proper operating mode by AT command. Please refer to related documents for details. SIM7000 can also get position location information through AT directly.

#### NOTE

1. GNSS is closed by default and can be started by "AT+CGNSPWR=1". The AT command has two parameters, the first is on/off, and the second is GNSS mode. Default mode is standalone mode. AGPS mode needs more support from the mobile telecommunication network. Please refer to

www.simcom.com 43/69



document [21] for more details.

- 2. If the passive antenna is used, put the LNA close to the antenna.
- 3. Make sure there are no noise signals around GNSS antenna.

#### RF traces note

### 4.4.1 RF traces layout

- > Keep the RF trace from module ant pin to antenna as short as possible
- $\triangleright$  RF trace should be 50  $\Omega$  either on the top layer or in the inner layer
- > RF trace should be avoided right angle and sharp angle.
- > Put enough GND vias around RF traces.
- RF trace should be far away from other high speed signal lines.

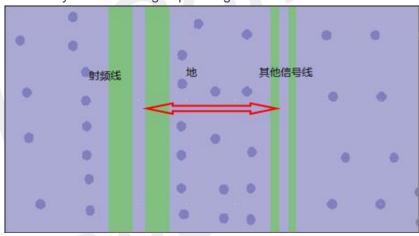


Figure 29: RF trace should be far away from other high speed signal lines

- > Avoiding the paroling rout of other system antennas nearly.
- > There should be some distance from The GND to the inner conductor of the SMA connector. It is better to keep out all the layers from inner to the outer conductor.

www.simcom.com 44/69



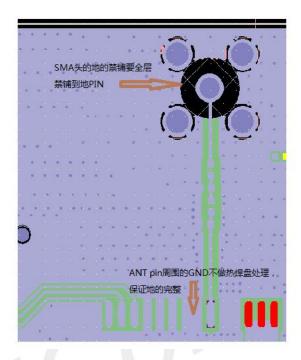


Figure 30: The distance between GND to the inner conductor of SMA

> GND pads around the ANT pad should not be hot pad to keep the GND complete.

### 4.4.2 LTE ANT and other system ANT decoupling

- Make sure the efficiency of LTE main ANT more than 40%
- Keep the decoupling of LTE main ANT to WLAN ANT more than 15dB
- Keep the decoupling of LTE main ANT to GNSS ANT more than 30dB

#### **NOTE**

The decoupling value can be provided by ANT adventure. More details can refer to the document [22].

www.simcom.com 45/69





# 5 Electrical Specifications

## **Absolute maximum ratings**

Absolute maximum rating for digital and analog pins of SIM7000 are listed in the following table:

Table 29: Absolute maximum ratings

Parameter	Min.	Тур.	Max.	Unit
Voltage on VBAT	-0.3	-	5.5	V
Voltage on USB_VBUS	-0.3	- \ \	5.8	V
Voltage at digital pins (RESET,GPIO,I2C,UART,PCM)	-0.3	-	2.1	V
Voltage at PWRKEY	-0.3	-	3.4	V
ADC	-0.3	-	VBAT	V

The absolute parameter is tested when VBAT has the power but the PWRKEY has no pulled down. If it is over the range, the module will be damage. If the power supply on VBAT pin had been shut down, and the other pin should not have the voltage. Otherwise, it may lead to abnormally boot up or damage the module.

# **Operating conditions**

Table 30: Recommended operating ratings

Parameter	Min.	Тур.	Max.	Unit
Voltage at VBAT	3.0	3.8	4.3	V
Voltage at USB_VBUS	3.5	5.0	5.25	V

Make sure that the voltage on the VBAT pins will never drop below 3.0V, even during a transmit burstwhen current consumption may rise up to 2A. If the voltage drops below 3.0V, module will be power down.

Table 31: 1.8V Digital I/O characteristics\*

Parameter	Description	Min.	Тур.	Max.	Unit
VIH	High-level input voltage	1.17	1.8	2.1	V
VIL	Low-level input voltage	-0.3	0	0.63	V
VOH	High-level output voltage	1.35	-	1.8	V
VOL	Low-level output voltage	0	<b>-</b>	0.45	V
IOH	High-level output current(no pull	-	2	-	mA

www.simcom.com 46/69



	down resistor)	1		T	     
IOL	Low-level output current(no pull up resistor)	  -	-2	  -  -  -	mA
IIH	Input high leakage current (no pull down resistor)	-	  -	1	uA
IIL	Input low leakage current(no pull up resistor)	-1	_	- -	uA

#### NOTE

These parameters are for digital interface pins, such as GPIOs (including NETLIGHT,STATUS, SIM\_DET), I2C, UART, PCM, MDM\_LOG\_TX and BOOT\_CFG.

The operating temperature of SIM7000 is listed in the following table.

**Table 32: Operating temperature** 

Parameter	Min.	Тур.	Max.	Unit
Normal operation temperature	-30	25	80	$^{\circ}\mathbb{C}$
Extended operation temperature*	-40	25	85	$^{\circ}\mathbb{C}$
Storage temperature	-45	25	+90	$^{\circ}\mathbb{C}$

#### **NOTE**

www.simcom.com 47/69



# **Operating Mode**

# 5.3.1 Operating Mode Definition

The table below summarizes the various operating modes of SIM7000 product.

Table 33: Operating mode Definition

Mod	33: Operating mode Defi	Function
-Mou	1 1	In this case, the current consumption of module will be reduced to the
Normal operation	GPRS/EDGE/LTE Sleep	minimal level and the module can still receive paging message and SMS.
	GPRS/EDGE /LTE Idle	Software is active. Module is registered to the network, and the module is ready to communicate.
	LTECat-M1Talk	Connection between two subscribers is in progress. In this case, the power consumption depends on network settings such as DTX off/on, FR/EFR/HR, hopping sequences, and antenna.
Norm	GPRS/EDGE/LTE Standby	Module is ready for data transmission, but no data is currently sent or received. In this case, power consumption depends on network settings.
GPRS/EDGE/LTE Data transmission		There is data transmission in progress. In this case, power consumption is related to network settings (e.g. power control level); uplink/downlink data rates, etc.
Minimum functionality mode		AT command "AT+CFUN=0" and "AT+CSCLK=1"can be used to set the module to a minimum functionality mode without removing the power supply. In this mode, the RF part of the module will not work and the SIM card will not be accessible, but the serial port and USB ports are still accessible. The power consumption in this mode is lower than normal mode.
Flight mode		AT command "AT+CFUN=4" can be used to set the module to flight mode without removing the power supply. In this mode, the RF part of the module will not work, but the serial port and USB ports are still accessible. The power consumption in this mode is lower than normal mode.
Power Saving Mode (PSM)		Setting AT command" AT+CPSMS=1" can be enable the PSM mode. In this mode, The mode is similar to power-off. But the module remains registered on the network and there is no need to re-attach or re-establish the network connections. And all of the functions will be unavailable except the RTC function. PWRKEY admit expires can wake up the module.
Extended Mode DRX (e-DRX)		In idle or sleep mode, module and the network may negotiate over non-access stratum signaling the use of extended mode DRX for reducing power consumption.

www.simcom.com 48/69



#### 5.3.2 Sleep mode

Module can enter into sleep mode for reducing its power consumption in idle module. In sleep mode, the current consumption of module will be reduced to very small level, and module can still receive paging message and SMS.

Several hardware and software conditions must be satisfied together in order to let SIM7000 enter sleep mode:

- USB condition: Connected USB can't enter into sleep mode. So if module wants to enter into sleep mode, it must disconnect the power supply for USB\_VBUS first.
- Software condition: If module wants to enter into sleep mode, AT comment "AT+CSCLK=1" must be set to close some clock in the module. If the value "AT+CSCLK" is "0", module will never enter into sleep mode.
- UART condition: If module wants to enter into sleep mode, AT comment "AT+CSCLK=1" must be set to close some clock in the module. If the value "AT+CSCLK" is "0", module will never enter into sleep mode.

If it meets all the conditions at the same time, module will enter into sleep mode. In sleep mode, the UART is unavailable. If the host need to communicate with module, it need to pull down DTR can wake upmodule.

### 5.3.3 Minimum functionality mode and Flight mode

There are three functionality modes, which could be set by the AT command "AT+CFUN=<fun>". The command provides the choice of the functionality levels <fun>=0, 1, 4.

- AT+CFUN=0: Minimum functionality
- AT+CFUN=1: Full functionality (Default)
- AT+CFUN=4: Flight mode

If SIM7000 has been set to minimum functionality mode, the RF function and SIM card function will be closed. In this case, the serial port and USB are still accessible, but RF function and SIM card will be unavailable.

If SIM7000 has been set to flight mode, the RF function will be closed. In this case, the serial port and USB are still accessible, but RF function will be unavailable.

When SIM7000 is in minimum functionality or flight mode, it can return to full functionality by the AT command "AT+CFUN=1".

#### 5.3.4 Power Saving Mode (PSM)

SIM7000 module can enter into PSM for reducing its power consumption. The mode is similar to power-off, but the module remains registered on the network and there is no need to re-attach or re-establish the

www.simcom.com 49/69



network connections. So in PSM all the functions will be unavailable except the RTC function, module cannot immediately respond users' requests.

When the module wants to use the PSM, it can be enabled via "AT+CPSMS=1" command. The command takes effect after module reboot. If the network supports PSM and accepts that the module uses PSM, the network confirms usage of PSM by allocating an Active Time value to the module. Module will be into PSM according to the command from network.

Either of the following methods will wake up the module from PSM:

- Pulling PWRKEY pin to low level will wake up the module.
- When the timer expires, the module will be automatically woken up.

# **Current Consumption**

The current consumption is listed in the table below.

Table 34: Current consumption on VBAT Pins (VBAT=3.8V)

able 34: Current consumption on VBAT	FIIIS (VDA1-3.0V)
GNSS	
GNSS supply current (AT+CFUN=0,without USB connection)	Tracking, typical: 30mA In DPO mode, typical: 6mA
GSM sleep/idle mode	
GSM supply current (GNSS off, without USB connection)	Sleep mode@BS_PA_MFRMS=2Typical: 1.7mA Idle mode@BS_PA_MFRMS=2 Typical: 11.4mA
LTE sleep/idle mode	
LTE supply current (GNSS off, without USB connection)	Sleep modeTypical: 1.2mA Idle mode Typical: 11mA
Power SavingMode	
PSM supply current	PSM mode Typical: 9uA
LTE Cat-M1 Talk	
TBD	TBD
TBD	TBD
GPRS	
EGSM900( 2 Rx,4 Tx )	@power level #5 Typical:422mA
DCS1800( 2 Rx,4 Tx )	@power level #0Typical:345mA
EGSM900( 3Rx, 2 Tx )	@power level #5 Typical:321mA
DCS1800( 3Rx, 2 Tx )	@power level #0Typical:249mA
EDGE	
EGSM900( 2 Rx,4 Tx )	@power level #8Typical:426mA
DCS1800( 2 Rx,4 Tx )	@power level #2Typical:327mA

www.simcom.com 50/69



EGSM900( 3Rx, 2 Tx )	@power level #8Typical:263mA
DCS1800( 3Rx, 2 Tx )	@power level #2Typical:200mA
LTE Cat-M	
	@23dbm Typical: 161mA
LTE-FDD B1	@10dbm Typical: 111mA
	@0dbm Typical: 98mA
	@23dbmTypical: 160mA
LTE-FDD B2	@10dbm Typical: 116mA
	@0dbm Typical: 102mA
LTE-FDD B3	@23dbmTypical: 150mA @10dbm Typical: 110mA
LIE-FDD B3	@0dbm Typical: 110mA
	@23dbmTypical: 150mA
LTE-FDD B4	@10dbm Typica : 114mA
2.2.333.	@0dbm Typical: 102mA
	@23dbmTypical: 168mA
LTE-FDD B5	@10dbm Typical: 117mA
	@0dbm Typical: 113mA
	@23dbmTypical: 165mA
LTE-FDD B8	@10dbm Typical: 110mA
	@0dbm Typical: 98mA
LTE EDD D40	@23dbmTypical: 167mA
LTE-FDD B12	@10dbm Typical: 109mA
	@0dbm Typical: 96mA
LTE-FDD B13	@23dbmTypical: 168mA @10dbm Typical: 114mA
LIL-1 DD D13	@0dbm Typical: 97mA
	@23dbmTypical: 167mA
LTE-FDD B18	@10dbm Typical: 109mA
	@0dbm Typical: 98mA
	@23dbmTypical: 171mA
LTE-FDD B19	@10dbm Typical: 110mA
	@0dbm Typical: 99mA
175 500 000	@23dbmTypical: 167mA
LTE-FDD B20	@10dbm Typical: 110mA
	@0dbm Typical: 98mA
LTE-FDD B26	@23dbmTypical: 168mA @10dbm Typical: 109mA
LIE-FDD B20	@0dbm Typical: 109ffA
	@23dbmTypical: 195mA
LTE-FDD B28	@10dbm Typical: 135mA
_:_: _ : _ 5	@0dbm Typical: 115mA

LTE (	Cat-NBdata transmission	
B5	UL mac padding _15KHZ_1RU_1 subcarrier_0dbm	59.94 mA
	UL mac padding _15KHZ_1RU_1 subcarrier_10dbm	68.48 mA
	UL mac padding _15KHZ_1RU_1 subcarrier_23dbm	143.22 mA
	UL mac padding _3.75KHZ_1RU_1 subcarrier_0dbm	83.60 mA
	UL mac padding _3.75KHZ_1RU_1 subcarrier_10dbm	100.03 mA
	UL mac padding _3.75KHZ_1RU_1 subcarrier_23dbm	244.96 mA
	UL mac padding _15KHZ_12subcarrier_23dbm	92mA
	DL mac padding _15KHZ_12subcarrier_23dbm	66.42mA

www.simcom.com 51/69



 	UL mac padding _15KHZ_1RU_1 subcarrier_0dbm	60.42 mA
	UL mac padding _15KHZ_1RU_1 subcarrier_10dbm	69.54 mA
	UL mac padding _15KHZ_1RU_1 subcarrier_23dbm	144.60 mA
B8	UL mac padding _3.75KHZ_1RU_1 subcarrier_0dbm	83.84 mA
	UL mac padding _3.75KHZ_1RU_1 subcarrier_10dbm	101.37 mA
	UL mac padding _3.75KHZ_1RU_1 subcarrier_23dbm	248.67 mA
	UL mac padding _15KHZ_12subcarrier_23dbm	93mA
	DL mac padding _15KHZ_12subcarrier_23dbm	68.4mA

### **ESD Notes**

SIM7000 is sensitive to ESD in the process of storage, transporting, and assembling. When SIM7000 is mounted on the users' mother board, the ESD components should be placed beside the connectors which human body may touch, such as SIM card holder, audio jacks, switches, keys, etc. The following table shows the SIM7000 ESD measurement performance without any external ESD component.

Table 35: The ESD performance measurement table (Temperature: 25℃, Humidity: 45%.)

Part	Contact discharge	Air discharge
VBAT,GND	+/-6K	+/-12K
Antenna port	+/-5K	+/-10K
Other PADs	+/-1K	+/-3K

www.simcom.com 52/69



# 6 Electrical Specifications

**Top and Bottom View of SIM7000** 



Figure 31: Top and bottom view of SIM700

www.simcom.com 53/69



## **Label Information**



Figure 32: Label information

Table 35: The description of label information

No.	Description
A	LOGO
В	No.1 Pin
С	Project name
D	Product code
E	Serial number
F	International mobile equipment identity
G	QR code

www.simcom.com 54/69



# **Typical SMT Reflow Profile**

SIMCom provides a typical soldering profile. Therefore the soldering profile shown below is only a generic recommendation and should be adjusted to the specific application and manufacturing constraints.

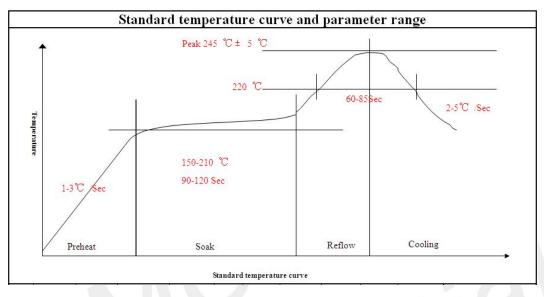


Figure 33: The ramp-soak-spike reflow profile of SIM7000

#### NOTE

For more details about secondary SMT, please refer to the document [19].

www.simcom.com 55/69



# **Moisture Sensitivity Level (MSL)**

SIM7000 is qualified to Moisture Sensitivity Level (MSL) 4 in accordance with JEDEC J-STD-033.

The following table shows the features of Moisture Sensitivity Level (MSL). After seal off, storage conditions must meet the following table. If the storage time was expired, module must be baking before SMT.

Table 37: Moisture Sensitivity Level and Floor Life

Moisture Sensitivity Level (MSL)	Floor Life (out of bag) at factory ambient≤30°C/60% RH or as stated
1	Unlimited at ≤30°C/85% RH
2	1 year at ≦30°C/60% RH
2a	4 weeks at ≤30°C/60% RH
3	168 hours at ≦30°C/60% RH
4	72 hours at ≦30°C/60% RH
5	48 hours at ≦30°C/60% RH
5a	24 hours at ≦30°C/60% RH
6	Mandatory bake before use. After bake, it must be reflowed within the time limit specified on the label.

# **Baking**

In order to get better yield, the module need to bake before SMT.

- If the packaging is in perfect condition, the module which dateofproduction is within six months has no use for baking. If the dateofproduction is more than six months, the module must be baking.
  - If the packaging had been opened or damaged, the module must be baking.

#### Table 38: Baking conditions

conditions	parameters
Baking temperature	<b>120</b> ℃
Baking time	8 hours

#### **NOTE**

IPC / JEDEC J-STD-033standard must be followed for production and storage.

www.simcom.com 56/69



# **Stencil Foil Design Recommendation**

The recommended thickness of stencil foil is 0.15mm.

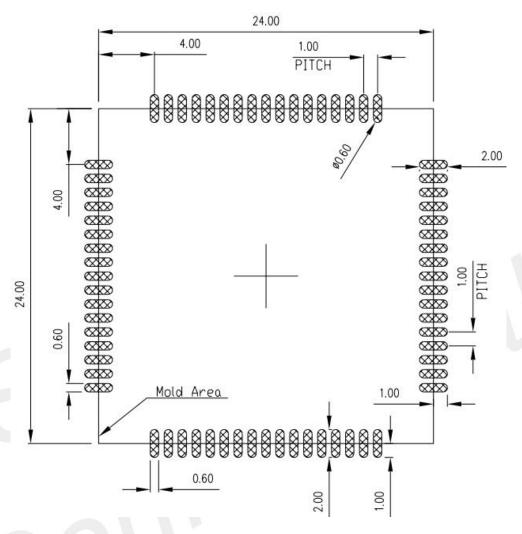


Figure 34: stencil recommendation (Unit: mm)

www.simcom.com 57/69



# 7 Electrical Specifications

# Tray packaging

SIM7000 module support tray packaging.

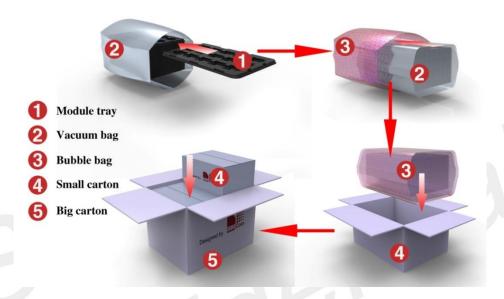


Figure 35: packaging diagram

#### Module tray drawing:

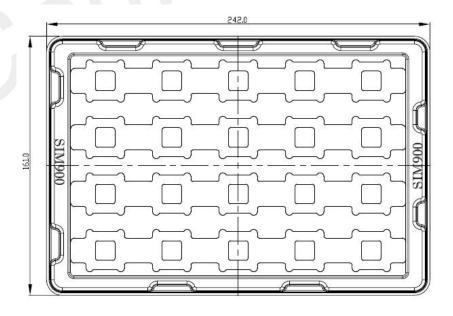


Figure 36: Tray drawing

58/69 www.simcom.com



Table 39: Tray size

Length (±3mm)	Width (±3mm)	Module number
242.0	161.0	20

Small carton drawing:

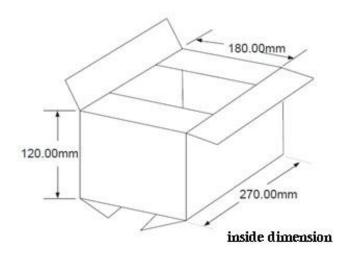


Figure 37: Small carton drawing

Table 40: Small Carton size

Length (±10mm)	Width (±10mm)	Height (±10mm)	Module number
270	180	120	20*20=400

Big carton drawing:

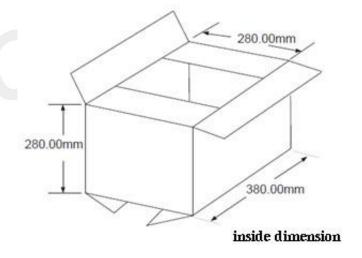


Figure 38: Big carton drawing

www.simcom.com 59/69



Table 41: Big Carton size

Length (±10mm)	Width (±10mm)	Height (±10mm)	Module number
380	280	280	400*4=1600



www.simcom.com 60/69



# 8 Appendix

### **Reference Design**

Refer to <SIM7000 Reference Design V1.01> for the details.

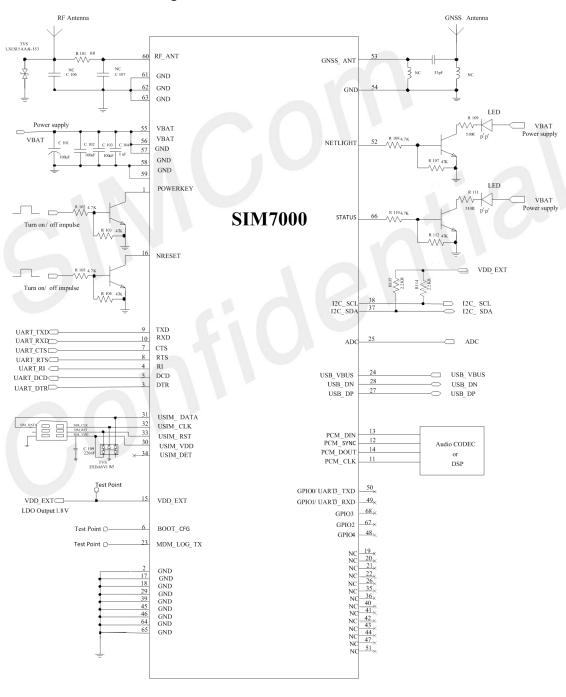


Figure 39: Reference design

www.simcom.com 61/69



# Design check list

Table 42: SchematicCheck List

NO.	Itoma
NU.	Items
1	Insure the supply voltage for VBAT is withintherangeof3V~4.3V.
2	Insure the maximum supply current for VBAT is above its consumption when it is maximum power emission. The maximum current is 2A during GPRS/EDGE emission maximum power, and it 0.6A during LTE emission maximum power.
3	Insure the capacitor for VBAT is meet its request, in order to avoid the voltage drop exceed 300mV. And the voltage never dropped below 3V.
4	Insure the input signal for PWRKEY pin meet its electrical level match. It recommended use BJT to shift its level.
5	Insure the input signal for NRESET pin meet its electrical level match.
6	Insure the netconnections of UART be correct ness according to signal direction. Insure the signal for UART pins meet its electrical level match. It recommended use BJT or level shift IC to shift its level.
7	Insure USB port had used TVS to protect signal. And the junction capacity of TVS for DP/DM must be less than 1pf.
8	Insure SIM card signal had used TVS to protect. And the junction capacity of TVS must be less than 50pf.
9	Insure SIM_DET had used resistor 10Kohm pull up to VDD_EXT if used this signal.
10	Insure I2C signal had used resistors 2.2Kohm pull up to VDD_EXT if used.
11	The electrical level of all GPIOs is 1.8V. Insure the signal for GPIO pins meet its electrical level match.
12	The input range of ADC is 0V~VBAT. Insure the input signal never exceed its range.
13	User must pull up DTR when module enters into sleep mode. Insure DTR can be controlled by host.
14	Suggesting to reserve test ports for VDD_EXT and BOOT_CFG. BOOT_CFG should keep open before boot up.
15	The power supply of the active antenna should be controlled and closed.
16	LTE main ANT should have a PI type matching to debug antenna
17	LTE main ANT should Keep TVS to prevent ESD destroyed. And the TVS should be Low junction capacitance.

## Table 43: PCB LayoutCheck List

NO.	Items
1	Insure the capacitor placement for VBAT be near module pin.
2	Insure VBAT trace width be greater than 2mm. If NB only, insure VBAT trace width be greater than 0.6mm. And the VIA number must be enough for getting through the current.
3	Insure the return path GND of the power supply is good. Insure the connectivity between module GND and mother board GND is good.
4	Insure PCM trance is protected by GND, and keep it far from interference source, such as power supply trace, USB trace, RF trace and so on.
5	Insure USB trance is protected by GND, and keep it far from interference source, such as power supply trace, RF trace and so on. Insure DM/DP trace is differential routing, and differential impedance is 90 ohm.
6	Insure ADC trance is protected by GND.

www.simcom.com 62/69



7	Insure SIM card signal trance is protected by GND. Especially SIM_CLK must be protected alone. And avoid signal trace branched Routing.
8	Insure I2C trance is protected by GND.
9	Insure TVS avoid bypass. The trace must go through TVS pad first, and then arrived module pad.
10	There should be enough ground around the RF line. RF lines Routing prohibit right angles and sharp angles, trying to trace circular or obtuse angle line.
11	The RF line reference GND should be complete. And avoid high speed lines crossing below it.
12	the GND side of the RF output pin should be no hot welding disk
13	The routing which is RF output PIN to antenna should be isolated from other high-speed lines. And the routing should be 50Ωimpedance control.



www.simcom.com 63/69



# Coding Schemes and Maximum Net Data Rates over Air Interface

Table 44: Coding Schemes and Maximum Net Data Rates over Air Interface

Slot class	DL slot number	UL slot number	Active slot number
1	1	1	2
2	2	1	3
3	2	2	3
4	3	1	4
5	2	2	4
6	3	2	4
7	3	3	4
8	4	1	5
9	3	2	5
10	4	2	5
11	4	3	5
12	4	4	5
GPRS coding scheme	Max data rata (4	l slots)	Modulation type
CS 1 = 9.05 kb/s / time slot	36.2 kb/s		GMSK
CS 2 = 13.4 kb/s / time slot	53.6 kb/s		GMSK
CS 3 = 15.6 kb/s / time slot	62.4 kb/s		GMSK
CS 4 = 21.4 kb/s / time slot	85.6 kb/s		GMSK
EDGE coding scheme	Max data rata (4	l slots)	Modulation type
MCS 1 = 8.8 kb/s/ time slot	35.2 kb/s		GMSK
MCS 2 = 11.2 kb/s/ time slot	44.8 kb/s		GMSK
MCS 3 = 14.8 kb/s/ time slot	59.2 kb/s		GMSK
MCS 4 = 17.6 kb/s/ time slot	70.4 kb/s		GMSK
MCS 5 = 22.4 kb/s/ time slot	89.6 kb/s		8PSK
MCS 6 = 29.6 kb/s/ time slot	118.4 kb/s		8PSK
MCS 7 = 44.8 kb/s/ time slot	179.2 kb/s		8PSK
MCS 8 = 54.4 kb/s/ time slot	217.6 kb/s		8PSK
MCS 9 = 59.2 kb/s/ time slot	236.8 kb/s		8PSK
LTE-FDD device category (Downlink)	Max data rate (p	peak)	Modulation type
Category M1	1Mbps		QPSK/16QAM
LTE-FDD device category (Uplink)	Max data rate (p	oeak)	Modulation type
Category M1	375kbps		QPSK/16QAM

www.simcom.com 64/69



# **Related Documents**

**Table 45: Related Documents** 

NO.	Title	Description
[1]	SIM7000 SeriesAT Command ManualV1.xx	AT Command Manual
[2]	GSM 07.07	Digital cellular telecommunications (Phase 2+); AT command set for GSM Mobile Equipment (ME)
[3]	GSM 07.10	Support GSM 07.10 multiplexing protocol
[4]	GSM 07.05	Digital cellular telecommunications (Phase 2+); Use of Data Terminal Equipment – Data Circuit terminating Equipment (DTE – DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)
[5]	GSM 11.14	Digital cellular telecommunications system (Phase 2+); Specification of the SIM Application Toolkit for the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface
[6]	GSM 11.11	Digital cellular telecommunications system (Phase 2+); Specification of the Subscriber Identity Module – Mobile Equipment (SIM – ME) interface
[7]	GSM 03.38	Digital cellular telecommunications system (Phase 2+); Alphabets and language-specific information
[8]	GSM 11.10	Digital cellular telecommunications system (Phase 2); Mobile Station (MS) conformance specification; Part 1: Conformance specification
[9]	3GPP TS 51.010-1	Digital cellular telecommunications system (Release 5); Mobile Station (MS) conformance specification
[10]	3GPP TS 34.124	Electromagnetic Compatibility (EMC) for mobile terminals and ancillary equipment.
[11]	3GPP TS 34.121	Electromagnetic Compatibility (EMC) for mobile terminals and ancillary equipment.
[12]	3GPP TS 34.123-1	Technical Specification Group Radio Access Network; Terminal conformance specification; Radio transmission and reception (FDD)
[13]	3GPP TS 34.123-3	User Equipment (UE) conformance specification; Part 3: Abstract Test Suites.
[14]	EN 301 908-02 V2.2.1	Electromagnetic compatibility and Radio spectrum Matters (ERM); Base Stations (BS) and User Equipment (UE) for IMT-2000. Third Generation cellular networks; Part 2: Harmonized EN for IMT-2000, CDMA Direct Spread (UTRA FDD) (UE) covering essential requirements of article 3.2 of the R&TTE Directive
[15]	EN 301 489-24 V1.2.1	Electromagnetic compatibility and Radio Spectrum Matters (ERM); Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 24: Specific conditions for IMT-2000 CDMA Direct Spread (UTRA) for Mobile and portable (UE) radio and ancillary equipment
[16]	IEC/EN60950-1(2001)	Safety of information technology equipment (2000)
[17]	3GPP TS 51.010-1	Digital cellular telecommunications system (Release 5); Mobile Station (MS) conformance specification
[18]	2002/95/EC	Directive of the European Parliament and of the Council of 27 January 2003 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)
[19]	Module	Module secondary SMT Guidelines

www.simcom.com 65/69



	secondary-SMT-UGDV1.xx	
[20]	SIM7000 Series UART Application Note_V1.xx	This document describes how to use UART interface of SIMCom modules.
[21]	ETSI EN 301 908-13 (ETSI TS 136521-1 R13.4.0)	IMT cellular networks; Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive; Part 13
[22]	ANTENNA DESIGN GUIDELINES FOR MULTI-ANTENNA SYSTEM V1 01	Design notice for multi-antenna.



www.simcom.com 66/69



# **Terms and Abbreviations**

**Table 46: Terms and Abbreviations** 

Abbreviation	Description
ADC	Analog-to-Digital Converter
ARP	Antenna Reference Point
BER	Bit Error Rate
BD	BeiDou
BTS	Base Transceiver Station
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear to Send
DAC	Digital-to-Analog Converter
DSP	Digital Signal Processor
DTE	Data Terminal Equipment (typically computer, terminal, printer)
DTR	Data Terminal Ready
DTX	Discontinuous Transmission
DAM	Downloadable Application Module
DPO	Dynamic Power Optimization
EFR	Enhanced Full Rate
EGSM	Enhanced GSM
EMC	Electromagnetic Compatibility
ESD	Electrostatic Discharge
ETS	European Telecommunication Standard
FCC	Federal Communications Commission (U.S.)
FD	SIM fix dialing phonebook
FDMA	Frequency Division Multiple Access
FR	Full Rate
GMSK	Gaussian Minimum Shift Keying
GNSS	Global Navigation Satellite System
GPRS	General Packet Radio Service
GPS	Global Positioning System
GSM	Global Standard for Mobile Communications
HR	Half Rate
I2C	Inter-Integrated Circuit
IMEI	International Mobile Equipment Identity
LTE	Long Term Evolution
MO	Mobile Originated
MS	Mobile Station (GSM engine), also referred to as TE
MT	Mobile Terminated

www.simcom.com 67/69



NMEA	National Marine Electronics Association
PAP	Password Authentication Protocol
PBCCH	Packet Switched Broadcast Control Channel
PCB	Printed Circuit Board
PCS	Personal Communication System, also referred to as GSM 1900
RF	Radio Frequency
RMS	Root Mean Square (value)
RTC	Real Time Clock
SIM	Subscriber Identification Module
SMS	Short Message Service
SMPS	Switched-mode power supply
TDMA	Time Division Multiple Access
TE	Terminal Equipment, also referred to as DTE
TX	Transmit Direction
UART	Universal Asynchronous Receiver & Transmitter
VSWR	Voltage Standing Wave Ratio
SM	SIM phonebook
NC	Not connect
EDGE	Enhanced data rates for GSM evolution
ZIF	Zero intermediate frequency
WCDMA	Wideband Code Division Multiple Access
VCTCXO	Voltage control temperature-compensated crystal oscillator
SIM	Universal subscriber identity module
UMTS	Universal mobile telecommunications system
UART	Universal asynchronous receiver transmitter
PSM	Power saving mode
FD	SIM fix dialing phonebook
LD	SIM last dialing phonebook (list of numbers most recently dialed)
MC	Mobile Equipment list of unanswered MT calls (missed calls)
ON	SIM (or ME) own numbers (MSISDNs) list
RC	Mobile Equipment list of received calls
SM	SIM phonebook
NC	Not connect

www.simcom.com 68/69



# **Safety Caution**

**Table 47: Safety Caution** 

Table 47. Safety Caution	
Marks	Requirements
	When in a hospital or other health care facility, observe the restrictions about the use of mobiles. Switch the cellular terminal or mobile off, medical equipment may be sensitive and not operate normally due to RF energy interference.  Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. Forgetting to think much of these instructions may impact the flight safety, or offend local legal action, or both.  Do not operate the cellular terminal or mobile in the presence of flammable gases or fumes. Switch off the cellular terminal when you are near petrol stations, fuel depots, chemical plants or where blasting operations are in progress. Operation of any electrical equipment in potentially explosive atmospheres can constitute a safety hazard.
sos	Your cellular terminal or mobile receives and transmits radio frequency energy while switched on. RF interference can occur if it is used close to TV sets, radios, computers or other electric equipment.  Road safety comes first! Do not use a hand-held cellular terminal or mobile when driving a vehicle, unless it is securely mounted in a holder for hands free operation. Before making a call with a hand-held terminal or mobile, park the vehicle.  GSM cellular terminals or mobiles operate over radio frequency signals and cellular networks and cannot be guaranteed to connect in all conditions, especially with a mobile fee or an invalid SIM card. While you are in this condition and need emergent help, please remember to use emergency calls. In order to make or receive calls, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.  Some networks do not allow for emergency call if certain network services or phone features are in use (e.g. lock functions, fixed dialing etc.). You may have to deactivate those features before you can make an emergency call.  Also, some networks require that a valid SIM card be properly inserted in the cellular terminal or mobile.

www.simcom.com 69/69