2.12: Introduction to Robotics Lab 5: Mobile Robot Path Tracking using Odometry *

Spring 2020

Instructions:

- 1. When your team is done with each task, call a TA to do your check-off.
- 2. After the lab, zip your files and make a backup using online storage/flash drive.
- 3. No need to turn in your code or answers to the questions in the handout.

1 Introduction

In this lab, we are using a PI controller to control the velocity of the wheels. This is very similar to standard PID control you have hopefully seen before in other classes as well as somewhat when controlling the harmonic drive motors. In this lab, we will show you where and how the PI controller is applied in case you want to make modifications for your final project. This, however is not the goal for this lab.

Today's goals are to:

- 1. Estimate robot's change in pose $(\Delta x, \Delta y, \Delta \theta)$ using the encoders in the motors of the wheels.
- 2. Move the robot using delta pose $(\Delta x, \Delta y, \Delta \theta)$ commands.

To do so, we will apply the wheeled-robot kinematics from lecture. The lessons you will learn from this lab are very crucial to navigating your robot on the final project arena. In this handout, we will denote the mobile robot platform as robot.

On the implementation side, this lab utilizes two essential software development tools: git [1] and ROS (Robot Operating System) [2]. Commands to use them are provided and we won't dive into details in this lab. You are encouraged to browse the referenced websites to learn about them. We will work with ROS more in the next lab. Also, this lab uses the object-oriented programming to structure the Arduino code. If you are not familiar with this, please read these two tutorials [3, 4].

- 1. Version 1 2016: Peter Yu, Ryan Fish and Kamal Youcef-Toumi
- 2. Version 2 2017: Yingnan Cui and Kamal Youcef-Toumi
- 3. Version 3 2019: Jerry Ng
- 4. Version 4 2020: Rachel Hoffman-Bice, Jerry Ng and Steven Yeung

2 Setting up the code

Open a terminal (Ctrl+Alt+T), and enter the following commands.

```
cd " # note: make sure we are at home folder git clone https://github.com/mit212/lab5_2020.git cd lab5_2020/catkin_ws source /opt/ros/kinetic/setup.bash catkin_make # let ROS know where is our package
```

From now on, we will denote the path to the me212lab5 folder, ~/me212lab5, as LAB5. Remember that ~ is an alias of user's home folder in Ubuntu, which is /home/robot/ in our case.

2.1 Folders and files

The me2121ab5 folder contains all the files required for this lab. The overall structure follows the ROS catkin build system [5] and is shown below. Unimportant files and folders are ignored for brevity. However, don't delete them because they are still required for the package to work properly.

- catkin_ws : ROS catkin Workspace
 - src : Source folder, where ROS packages are located
 - * me212_robot : A folder containing a ROS package for the 2.12 moving platform

The folder hierarchy helps organize a large project that contains several *packages*. Package is a term for units of files related to one idea. The files can be code for libraries and programs, as well as config files. Now let's focus on the content inside package me212_robot, which is for our robot platform. Below some important files are listed.

- src/controller:
 - controller.ino: a controller in Arduino.
 - helper.h: helper for the controller. This file includes declaration of constants, variables and class EncoderMeasurement, RobotPose, PIController, SerialComm, and PathPlanner.
 - helper.cpp: implementation of the above classes.
- scripts/me212_robot.py: read odometry from Arduino and publish them to ROS network on PC.
- launch/viz.launch: a ROS launch file that launches tools to visualize the above messages.

In this lab, you will only need to modify helper.cpp and controller.ino, and refer to helper.h for declarations. Inside helper.cpp, please do not to change the PIController and SerialCommunication, but you may change the gains of PIController to improve velocity tracking. Make sure to change the line in controller.ino that reads:

```
Encoder Measurement encoder(26);
```

with the gear ratio that corresponds to your robot.

Go ahead and take a look at helper.h. Around line 73 you should see the PIController class definition and the variable declarations for the P and I gains for motor 1 and motor 2. As previously stated, don't change any of these values for this lab, but you may want to tinker with them for your final project if you desire. Now, open helper.cpp and scroll to around line 118. Here you should see the definition for the PI controller doPIControl method in which a desired velocity and current velocity are the inputs. Here is where the standard math for calculating the motor command occurs. No need to change any values here. If you wanted to change the PI Control to PID control, or even P control, you can simply modify the function (or create a separate function) that has the extra D gain and the extra error term to generate the DCommand to be added to the PCommand and ICommand (line 130 and 144). If you have any questions about this please ask staff. Once again, changing these functions is not required for this lab. We are simply drawing your attention to the structure of the code in case you want to make your own changes in the future.

2.2 High level code structure

In controller.ino, the main loop function has the following sections:

- 1. Obtain and convert encoder measurement.
- 2. Compute robot odometry.
- 3. Send robot odometry through serial port.
- 4. Compute desired wheel velocity with motion planner.
- 5. Command desired velocity with PI controller.

Items 1 and 5 were completed for you. Example code for both items are provided in:class EncoderMeasurement, and class PIController. You should read their implementation in helper.cpp. You may change the gain of the controller and make sure that positive direction of encoder and motor corresponds to forward wheel motion. Item 3 is provided in class SerialComm and was also provided. Items 2 and 4 are what you will complete today.

3 Task 1: Mobile Robot Odometry

Odometry is to estimate the change in robot pose over time using changes in encoder values. First, let's define some variables and constants:

- (x, y, θ) : estimated robot pose using odometry relative to the world frame (starting frame),
- ϕ_R , ϕ_L : the right and left wheel net rotation (positive sign is in the robot forward direction),
- b = 0.225m, r = 0.037m, and a = 0.3m: robot dimensions as shown in Figure 1.

Motor 1 drives right wheel, and motor 2 drives left wheel.

To find the odometry, encoder values need to go through 2 conversions:

- 1. encoder count change to wheel position change;
- 2. wheel position change to robot pose change.

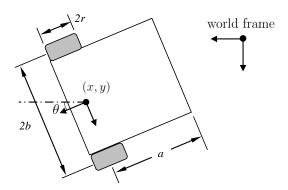


Figure 1: Definition of the robot dimensions and robot frame. Robot forward direction matches the x axis of the robot frame.

Conversion 1 was done in Lab 1, and the code is provided in class EncoderMeasurement. However, make sure to check which motor model (26 or 53) your robot has, and configure it correctly when creating an EncoderMeasurement object in controller.ino. For conversion 2, you will implement it in class RobotPose. Recall from the lectures that we can first compute $\dot{\theta}$ using the following expression.

$$\dot{\theta} = \frac{r}{2b} \left(\dot{\phi}_R - \dot{\phi}_L \right). \tag{1}$$

However, in our robot platform, we can only measure ϕ 's at discrete timestamps. Thus we rewrite (1) as (2):

$$\Delta\theta = \frac{r}{2h} \left(\Delta\phi_R - \Delta\phi_L \right). \tag{2}$$

To estimate current robot orientation $\theta(t)$ we use:

$$\theta(t) = \theta(t - dt) + \Delta\theta. \tag{3}$$

Now we can use $\theta(t)$ to compute the position of the robot.

$$\begin{bmatrix} x(t) \\ y(t) \end{bmatrix} = \begin{bmatrix} x(t - dt) \\ y(t - dt) \end{bmatrix} + \frac{r}{2} \begin{bmatrix} \cos \theta(t) & \cos \theta(t) \\ \sin \theta(t) & \sin \theta(t) \end{bmatrix} \begin{bmatrix} \Delta \phi_R(t) \\ \Delta \phi_L(t) \end{bmatrix}$$
(4)

All relevant variables have been defined in class RobotPose and are listed below. You do not need to define your own variable. The following variables are of float type.

Question 1 Is this approximation accurate? What is a way to improve this approximation?

- X, Y, Th: x(t), y(t), $\theta(t)$,
- dX, dY, dTh: $\dot{x}(t)$, $\dot{y}(t)$, $\dot{\theta}(t)$,
- pathDistance: keeps track the total distance traveled by your robot.

In order to test your system, the wheel velocities are set to some constants in section 4 of controller.ino.

```
pathPlanner.desiredWV_R = 0.2;
pathPlanner.desiredWV_L = 0.2;
```

Use the ROS visualization tool, rviz, to visualize your robot pose from odometry. Open a terminal (Ctrl-Alt-T), and enter the following commands.

```
cd ~/me212lab5_2020/catkin_ws
source devel/setup.sh
roslaunch me212_robot viz.launch
```

This session should stay open.

Open another terminal; you can use Ctrl-Shift-O to split the existing terminal horizontally, or use Ctrl-Shift-T to open a terminal in a new tab. This helps your terminals to stay organized. And enter the following commands.

```
cd ~/lab5_2020/catkin_ws
source devel/setup.sh
rosrun me212_robot me212_robot.py
```

This will connect to Arduino through serial communication and restart the Arduino program. The program can be stopped by using the Ctrl+C command in the terminal. Note that every initiation of serial communication will restart the Arduino program. Then you should see the robot moving in rviz as in Figure 2.

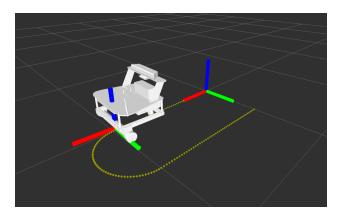


Figure 2: An example view of rviz showing the current robot coordinate frame, map (world) frame, and the U trajectory that we will be implement in the next task. The red, green, and blue bars of the frame correspond to x, y, and z axes respectively. The robot frame is defined at the center of the two motors and projected to the ground, with x axis pointing forward, y pointing to the left, and z pointing up. Initially, robot frame starts at the map frame.

4 Task 2: Robot Trajectory Tracking

The task is to program a navigation policy to follow a U-shaped trajectory and stop at the goal position. An illustration of the track is shown in Figure 3.

To do so, we'll implement a policy in PathPlanner::navigateTrajU(const RobotPose& robotPose). Here are three steps to complete this task:

1. Determine what stage of the track your robot is in. We suggest to write an if/else statement on robotPose.pathDistance. The U trajectory can be divided into 3 stages: 1) straight line, 2) semi-circle, and 3) straight line again.

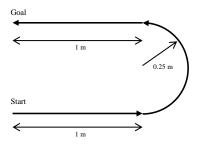


Figure 3: The U Trajectory.

- 2. Specify a robot velocity and motion curvature for each stage.
- 3. Compute the desired R/L wheel velocities from a specific motion velocity and curvature. It is up to you to ensure that the resulting motor velocities do not exceed the maximum speed of the motors. A function for this purpose has been declared for you:

```
//Input: desired robot velocity robotVel and curvature K
//Output: update PathPlanner::desiredWV_L and desiredWV_R
void PathPlanner::updateDesiredV(float robotVel, float K);
```

You need to complete this function using the following two equations.

$$\kappa = \frac{\dot{\phi}_R - \dot{\phi}_L}{b(\dot{\phi}_R + \dot{\phi}_L)},\tag{5}$$

where κ is the curvature, the inverse of the radius of a circle, as shown in Figure 4.

$${\tt robotVel} = |(\dot{x},\dot{y})| = r \frac{(\dot{\phi}_R + \dot{\phi}_L)}{2}. \tag{6}$$

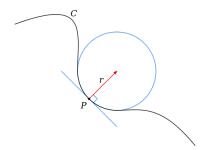


Figure 4: Curvature of a circle is defined to be the reciprocal of the radius. Image source: Wikipedia.

Note that $\operatorname{desiredWV}_{L/R}=r\cdot\phi_{\{L/R\}}$, and that you need to change usePathPlanner to true in controller.ino to test your navigation policy. For testing, if you just want to do dry run, make sure the robot wheels are off the table. If you want it to move on the floor, make sure there are no external wires connected to the robot. Plug the HDMI cable to the onboard screen so that you can still operate it. Hold the robot by the 80/20 frame to move it.

Question 2 Given the curvature κ and the maximum wheel speed maxMV, what is the maximum robotVel that you can drive your robot at?

5 Task 3: More Complex Trajectories

You have implemented simple continuous trajectory control but more complex tasks require various combinations of straight and curved motion. Try implementing more challenging trajectories such as a figure 8 or a three-point turn (Figure 5).

Question 3 Can your robot start and end at the same pose for a figure 8 trajectory?

Question 4 We controlled wheel velocity for this entire lab. What would happen if we controlled wheel position instead?

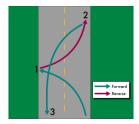


Figure 5: A three-point turn is for turning a vehicle around in a narrow space. Image source: Wikipedia.

References

- [1] Website of Git. [Online]. Available: https://git-scm.com/
- [2] Website of ROS. [Online]. Available: http://www.ros.org/about
- [3] Tutorial of C++ classes. [Online]. Available: http://www.tutorialspoint.com/cplusplus/cpp_classes_objects.htm
- [4] Tutorial of C++ class member function. [Online]. Available: https://www.tutorialspoint.com/cplusplus/cpp_class_member_functions.htm
- [5] Website of ROS/catkin. [Online]. Available: http://wiki.ros.org/catkin/conceptual_overview