
# 4 Horizontal Alignment

# 4.1 Objectives

- 1. Horizontal Curve Elements
- 2. Superelevation
- 3. Design Horizontal Curve

# 4.2 Horizontal Curve Diagram

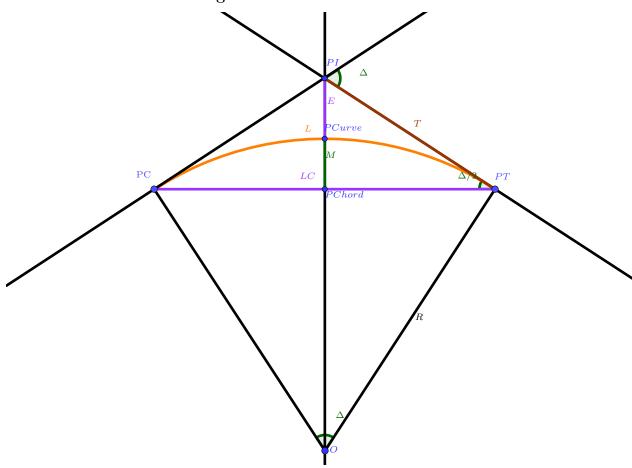

# 4.3 Horizontal Curve diagram

#### Terms:

1. PI: point of intersection, intersection of tangent and curve

- 2. PC: point of curve(where curve starts), intersection of tangent and curve
- 3. PT: point of tangency(where curve ends), intersection of 2 tangents
- 4. PCurve: intersection of line PI-O and curve PC-PT
- 5. PChord: intersection of chord PC-PT and line PI-O

6.

- 7. R: the radius of the curve
- 8. D: in degree, degree of curve, the degree matches 100ft arc
  - (a) highways:(small) D -> arc length of 100ft
  - (b) railroads(big) D -> cord length of 100ft
- 9.  $\Delta$  the degree of the curve, the same as the bearings of 2 tangents
- 10. L: in feet, curve length
- 11. T: line segment from PI to PT/PC
- 12. E: external distance, line segment of PI-PCurve
- 13. M: middle ordinate, line segment of PCurve-PChord
- 14. LC: chord PC-PT
- 15. curvature how big is a curve, curvature = 1/R

#### 4.4 Horizontal Curve formulas

$$\begin{split} \frac{D}{100} &= \frac{360}{2\pi R} \\ D &= \frac{360 \cdot 100}{2\pi R} \\ L &= 100 \cdot \Delta/D \\ L_{in\_meter} &= 30.48 \cdot \Delta/D \\ T &= R \cdot tan\frac{1}{2}\Delta \\ M &= R(1 - cos\frac{1}{2}\Delta) \\ E &= R(\frac{1}{cos\frac{1}{2}\Delta} - 1) \\ LC &= 2R \cdot sin\frac{1}{2}\Delta \end{split}$$

# 4.5 stationing calculations - for PI, PC and PT

Stationing is the concept of assigning distances along a line, such as a survey baseline (initial field survey) or center line (design)

52+48.63 means 52 hundreds 48 ft and .63 ft

Given PI, calculate the locations:

- 1. why???
- 2. PC = PI T
- 3. PT = PC + L

#### 4.6 bearings calculations

A bearing refers to the direction and orientation of a line

N 73°30'38"E

52+48.63 means 52 hundreds 48 ft and .63 ft

### 4.7 types of horizontal curves

- 1. simple
- 2. compound (R1 and R2)
- 3. reverse
- 4. spiral (change radius btw 2 Rs)

VDOT: The use of spiral transitions for compound and reverse curves on urban roadways should be avoided, ...

#### 4.8 sight distance on curves

terms:

- 1. highway centerline -> highway radius
- 2. centerline inside a lane  $->R_v$
- 3. line of sight
- 4. sight obstruction
- 5. sight distance

sight distance fomula:

$$M_{s} = R_{v} \cdot (1 - cos_{degrees} \frac{90SSD}{\pi R_{v}})$$
  
$$M_{s} = R_{v} \cdot (1 - cos_{radians} \frac{SSD}{R_{v}})$$

 $M_s$ : the middle ordinate, distance from centerline to obstruction  $R_v$ : the radius of the curve, inside lance — for the centerline of the \*1st\* lane SSD: the stopping sight distance

# 4.9 superelevation - centrifugal force

### suggestion value:

$$1mph = 1.47ft/sec$$

#### superelevation formula:

$$\frac{e+f}{1-ef} = \frac{v^2}{gR} = \frac{V^2}{15R}$$

## minimam radius:

$$R_{min} = \frac{V^2}{15(f_s + e_{max})} = \frac{v^2}{g(f_s + e_{max})}$$

e: superelevation rate, e.g. 0.04

f: coefficient of friction

 $f_s$ : side friction, e.g. 0.10

g: 9.8, the acceleration of gravity

v: in ft/sec, the speed in ft/sec

V: in mph, the speed in mph

R: in ft, the radius of the curve in feet

### 4.10 superelevation - selection of e

- 1. too high or too low?
- 2. What factors should be considered?

3.

- 4.  $e \le 0.10$  on any paved road
- 5.  $e \le 0.12$  on unpaved roads
- 6. e < 0.08 where there is ice and snow
- 7.  $e \le 0.06$  in Illinois where ever practical
- 8.  $e \le 0.04$  in Illinois for urban freeways

#### 4.11 superelevation - transition design control

- 1. Tangent runout (TR): the distance needed to change from a normal crown section to a point where the outside lane(s) is level
- 2. Superelevation Runoff (L): the distance needed to change the cross slope from the end of TR to the design full superelevation rate.
- 3. IDOT practice: TR and 1/3 runoff on the tengent; 2/3 of runoff on the curve;
- 4. ASSHTO: placing the PC at between 60% and 80% of the transition length
- 5. ALDOT: 80/20 split (of the entire STL)
- 6. VDOT: this split is of the superelevation runoff portion only, not the entire  ${\rm STL}$
- 7. Many states, including Virginia, use 2:1 split

#### 4.12 axis of rotation

Axis of Rotation is the point about which the pavement edges are revolved to superelevate the roadway.

- typically, on undivided highways the centerline of roadway is the axis of rotation.
- 2. typically, divided highways rotate around the median edge
- 3. also, some roadway revolved about inside edge!

# 4.13 superelevation runoff fomula

# superelevation runoff for \*TWO-Lane\* roads:

 $L_{sro} \cong 30e(V+32)$ , for 12 ft lans

 $L_{sro} \cong 25e(V+32)$ , for 10 ft lans

 $L_{sro}$ : superelevation runoff length

e: superelevation rate

## full superelevation curve length:

 $L_{full} = L_{curve} - 2L_{sro}$ 

 $L_{full}$ : full superelevation curve length

 $L_{curve}$ : horizontal curve length (arc length)

#### for multilane roads: (AASHTO Green Book)

times 1.5 for 4 lanes (2 in each direction)

times 2.0 for 6 lanes

# 4.14 tangent runout formula

### tangent runout formula, given runoff:

$$TR = L_{sro} \frac{NC}{e}$$

TR: tengent runout

 $L_{sro}$ : superelevation runoff length

NC: normal crown rate

#### 4.15 Terms

gradient: slope rate

- **4.16** Rules
- 4.17 Formulas
- 4.18 Reference