README.md 15. 10. 2021

Lab 4: Martin Kousal

Link to your Digital-electronics-2 GitHub repository:

https://github.com/mkousal/Digital-electronics-2

Overflow times

1. Complete table with overflow times.

Module	Number of bits	1	8	32	64	128	256	1024
Timer/Counter0	8	16u	128u		1024u		4096u	16384u
Timer/Counter1	16	4096u	32768u		262144u		1048576u	4194304u
Timer/Counter2	8	16u	128u	512u	1024u	2048u	4096u	16384u


Timer library

- 1. In your words, describe the difference between common C function and interrupt service routine.
 - **Function** function is some kind of commands sequence which can be run with different parameters anywhere from our program.
 - Interrupt service routine ISR is sequence of commands which are executed after activating
 defined interrupt event. We can't run this when we want (call it from program) because it is called
 at the hardware layer. It's good practice to get ISR as short as it could be, because it stops our
 executed main loop.
- 2. Part of the header file listing with syntax highlighting, which defines settings for Timer/Counter0:

```
* @name Definitions for 8-bit Timer/Counter0
 * @note t OVF = 1/F CPU * prescaler * 2^n where n = 8, F CPU = 16 MHz
/** @brief Stop timer, prescaler 000 --> STOP */
                               TCCR0B &= ~((1<<CS02) | (1<<CS01) |
#define TIM0 stop()
(1<<CS00));
/** @brief Set overflow 16us, prescaler 001 --> 1 */
#define TIMO_overflow_16us() TCCR0B &= \sim((1<<CS02) | (1<<CS01)); TCCR0B |=
(1<<CS00);
/** @brief Set overflow 128us, prescaler 010 --> 8 */
(1<<CS01);
/** @brief Set overflow 1ms, prescaler 011 --> 64 */
#define TIMO_overflow_1ms() TCCR0B &= \sim((1<<CS02)); TCCR0B |= (1<<CS01) |
(1<<CS00);
/** @brief Set overflow 4ms, prescaler 100 --> 256 */
#define TIMO overflow 4ms()
                               TCCR0B &= ~((1<<CS01) | (1<CS00)); TCCR0B |=
```

README.md 15. 10. 2021

3. Flowchart figure for function main() and interrupt service routine ISR(TIMER1_OVF_vect) of application that ensures the flashing of one LED in the timer interruption. When the button is pressed, the blinking is faster, when the button is released, it is slower. Use only a timer overflow and not a delay library.

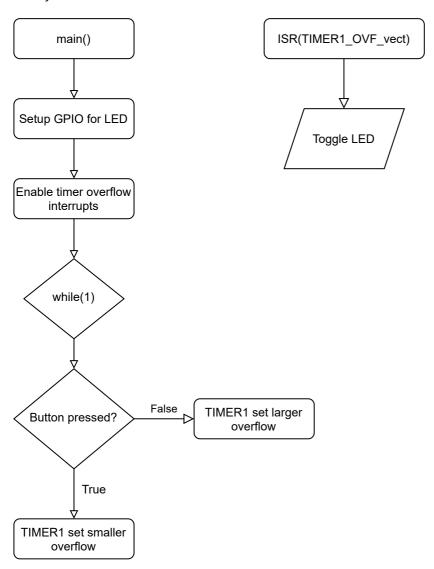

Knight Rider

1. Scheme of Knight Rider application with four LEDs and a push button, connected according to Multifunction shield. Connect AVR device, LEDs, resistors, push button, and supply voltage. The image can be drawn on a computer or by hand. Always name all components and their values! README.md 15. 10. 2021

