

GFZ GERMAN RESEARCH CENTRE FOR GEOSCIENCES

GFZRNX 1.14 Users Guide

DokuWiki

Mon Mar 15 09:06:38 UTC 2021



Contents

1	Befo	re You Start	4
	1.1	End User License Agreement	. 5
	1.2	Scope of Operation	. 6
	1.3	Examples	. 7
	1.4	Follow us	. 8
		1.4.1 Join Mailing List	. 8
		1.4.2 Drop Out of Mailing List	. 8
		1.4.3 Twitter: Ogfzrnx	. 8
	1.5	Bug Reports / Comments	. 9
2	Basi	~ \$	10
_	2.1	Software	
		2.1.1 Download	
		2.1.2 Install	
		2.1.3 Usage	
		2.1.4 Fast Help	
	2.2	Data Input/Output	
		2.2.1 Supported Format Versions	
		2.2.2 Input	
		2.2.3 Output	
		2.2.4 Examples Input/Output	
		2.2.5 Log Messages	
	2.3	Supported File Names	
	0	2.3.1 RINEX-2 naming convention	
		2.3.2 RINEX-3 naming convention	
		2.3.3 Automatic Output File Naming	
_	•	· · · · · · · · · · · · · · · · · · ·	•
3	-	ration / Tasks	24
	3.1	RINEX File Check and Repair	
		3.1.1 Navigation Data Epoch Filter	
	2.0	3.1.2 Meteo Data check/edit against NWM-Data	
	3.2	RINEX File Statistics / Informations	
		3.2.1 Observations Statistics	
	2.2	3.2.2 ASCII Timeplot of Observables	
	3.3	RINEX File Format Conversion (3/2, 2/3)	
		3.3.1 Observation Types Mapping	
		3.3.2 REMARK	
		3.3.3 RINEX-2 to RINEX-3	
	0.4	3.3.4 RINEX-3 to RINEX-2	
	3.4	RINEX File Nominal Renaming Support (2/3)	
	0 -	3.4.1 Remark	
	3.5	RINEX File Splice	
		3.5.1 Observation Data Splice Specials	
		3.5.2 Navigation Data Splice Specials	
		3.5.3 Remark - Splice/Split	. 41

GFZ	
Helmholtz Centre	

73

	5.5.4 Remark - Fliename Expansion	41
3.6	RINEX File Split	42
	3.6.1 Remark - Split/Splice	42
3.7	RINEX File Output Epoch Interval	43
	3.7.1 Supported Date/Time/Epoch Formats	
	3.7.2 Dedicated Output Epoch Interval	
	3.7.3 Strict Epoch interval (-sei)	
	3.7.4 Extend Navigation File Boundaries (-enb)	
3.8	RINEX File Manipulation	
	3.8.1 Data Sampling (-smp)	
	3.8.2 Satellite System Selection (-satsys)	
	3.8.3 PRN Selection (-prn, -no_prn)	
	3.8.4 Observation Types Selection (-obs_types)	
	3.8.5 Remove of Sparse Observation Types (¬remove_sparse_obs_types)	
	3.8.6 Keep all Observation Types (-kaot)	
	3.8.7 Observation Types Sorting (-ots)	
	3.8.8 Navigation File Sorting (-nav_sort)	
	3.8.9 GPSweek Rollover Correction (-shift_gpsw)	
	3.8.10 Antenna Rename (-ant_rename)	
	3.8.11 Antenna Rename Table output (-ant_rename_out)	
	3.8.12 Antenna Rename Table input (-ant_rename_inp)	
3.9	Handling a Group of Files with a Single Command (-single_file)	
3.10	Rinex File Header/Data Editing	
	3.10.1 Header Editing (Standard)	
	3.10.2 Header Editing (Only)	
	3.10.3 Editing Operations	
	3.10.4 Show Config. File Interpretation (-show_crux)	53
	3.10.5 Configuration file	
	3.10.6 Header edit via command line (-cx_updins)	
	3.10.7 Internal/Data Headers via crux-file (-cx_addinthd)	61
	3.10.8 Manipulate Header Version Number (-vnum)	62
3.11	Rinex File Meta Data Extraction (-meta)	63
	Rinex File Comparison (-fdiff)	
	Rinex Hatanaka Compressed Files	
3.14	Rinex to Tabular Observations Output	70
	3.14.1 Standard Output	
	3.14.2 Date/Time Formats	
	3.14.3 Column Separator	
3.15	Rinex Standard Extensions/NonConformity	
	3.15.1 RINEX-2 BDS,QZSS,IRNSS support	
	3.15.2 RINEX-2 to RINEX-3 conversion	
	3.15.3 Handling of unsupported observation types $\dots \dots \dots \dots \dots \dots \dots \dots \dots$	
	3.15.4 Remark	72

List of Figures



Chapter 1

Before You Start



1.1 End User License Agreement

 \bigcirc Helmholtz-Centre Potsdam, **GFZ** German Research Centre for Geosciences / Section 1.1 Space Geodetic Techniques

- The software **gfzrnx-RINEX GNSS Data Conversion and Manipulation Toolbox** can be used under the following licenses:
 - License for **Scientific Partners** (free),
 - License for Commercial Users (chargeable).

For Details please check the download web page: https://gnss.gfz-potsdam.de/services/gfzrnx.



1.2 Scope of Operation

The **gfzrnx** is a toolbox for RINEX file check and manipulation for the major versions 2 and 3. The following RINEX data types are supported:

- Observation data
- Navigation data
- Meteorological data

The following operations/tasks are supported:

- RINEX file check and repair,
- RINEX file format conversion (version 3 to 2 and vice versa),
- RINEX file splice,
- RINEX file split,
- RINEX file statistics generation,
- RINEX file manipulations like:
 - data sampling,
 - observation types selection,
 - satellite systems selection,
 - elimination of overall empty or sparse observation types.
- Automatic version dependent file naming on output file.
- RINEX file (re)naming support (version 2 to 3)
- RINEX header editing
- RINEX file meta data extraction
- RINEX file comparison

See also the Rinex Standard Extensions/NonConformity section for further information.

Before You Start 8



1.3 Examples

You can always find examples in boxes with light grey background like the one below.

Example Box

All given examples are valid for the UNIX based systems like Linux, SunOS or OSX.

You will find almost **gfzrnx** used in the example boxes which is always used as a synonym for the operating system dependent executable (gfzrnx_lx, gfzrnx_osx, ...).

1.4 Follow us

1.4.1 Join Mailing List

There is a mailing list gfzrnx@gfz-potsdam.de which will be used for information transfer (new features, versions, etc.). It can be also used for questions which are not covered by the documentation.

9

One can join the mailing list sending an empty e-mail to:

gfzrnx-on@gfz-potsdam.de .

After getting a Confirmation Request e-mail, please don't forget to reply to this Confirmation Request. This reply is mandatory to finish your list joining.

Drop Out of Mailing List

One can drop out of the mailing list sending an empty e-mail to: gfzrnx-off@gfz-potsdam.de .

1.4.3 Twitter: @gfzrnx



Figure 1.1: Twitter: @gfzrnx



1.5 Bug Reports / Comments

For bug reports or comments please use the mailing address $gfzrnx_bug@gfz-potsdam.de$. Please use the following procedure for bug reports:

- Make sure, that you are using the latest version.
- If you are using the latest version, please provide the complete command line you have used.
- attach your input file(s) to your e-mail or provide a link for the input data download. Shrink the input file(s) if possible.

10



Chapter 2

Basics

Helmholtz Centre

2.1 **Software**

2.1.1 **Download**

One can download the software via:

https://gnss.gfz-potsdam.de/services/gfzrnx

You will find an official version with a version number and a development version (DEVEL) with ongoing bug fixing and new features. The manual (pdf) can be downloaded from there too.

2.1.2 Install

The software consists of a single executable (operating system dependent) to be used at the command prompt of a Terminal window or in batch scripts.

Linux (64)	gfzrnx_lx64
Linux (32)	gfzrnx_lx32
SunOS (Sparc)	gfzrnx_sun
SunOS (i86)	gfzsun_suni86
MS Windows (64)	gfzrnx_win64.exe
MS Windows (32)	gfzrnx_win32.exe
Mac OSX	gfzrnx_osx
Linux-ARM (64)	gfzrnx_armlx64
Linux-ARM (32)	gfzrnx_armlx32

UNIX: Copy the executable into a directory covered by your system search PATH variable. WINDOWS: Copy the executable into your Windows directory for ease of use.

2.1.2.1 Remark

gfzrnx will store and execute libraries in a temporary directory.

os	Default Temporary Directory
UNIX	/tmp
Windows	\$WINDIR (C:).

If this is not an option for you, you can specify an alternative temporary directory via the environment variables **\$TEMP** or **\$TMP** on all platforms.

2.1.3 **Usage**

gfzrnx is a command line executable. It can be used in a terminal window or batch scripts. It has no graphical interface!

2.1.3.1 Unix

For Unix (Linux, MacOS, SunOS) users it can be run in any Terminal application or used in shell-scripts ...





Figure 2.1: Unix Terminal - command line

2.1.3.2 Windows

For MS Windows you can use e.g. the cmd.exe or create and execute batch-scripts (whatever.bat).

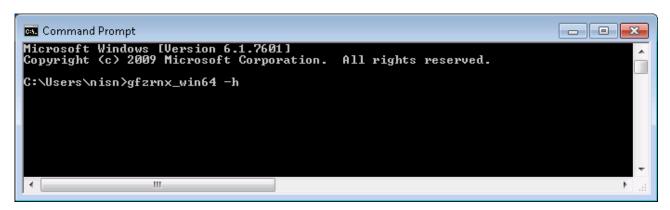


Figure 2.2: MS Windows command window - command line

Here a small batch file example.bat is shown. The input data are sampled to 30 s time interval.

```
gfzrnx_win64.exe -finp C:\data\XXXXX0010.15o -fout C:\data_30\XXXX0010.15o -smp 30
gfzrnx_win64.exe -finp C:\data\XXXXX0020.15o -fout C:\data_30\XXXXX0020.15o -smp 30
...
gfzrnx_win64.exe -finp C:\data\XXXXX3650.15o -fout C:\data_30\XXXX3650.15o -smp 30
```

2.1.4 Fast Help

A simple usage information you can get via command line parameter -h or -help.



```
RINEX-2 file naming
                                    ssssDDD0.YYx
                                                       - daily
                                                                    file
                                    ssssDDD[a-x].YYx - hourly
                                                                    file
                                    ssssDDD[a-x]mm.YYx - sub-hourly file
20
                                    RINEX-3 file naming
                                    SSSSMRCCC_S_YYYYDDDHHMM_NNN_FRQ_TT.FMT
                                    SSSSMRCCC_S_YYYYDDDHHMM_NNN_TT.FMT
                                    see Documentation for details
                                    splice mode:
30
                                    * list of input files
        [-fout <file>]
                                  - output rinex or statistics file (std. STDOUT)
                                    automatic file_name if filename given is "::RX2::" or "::RX3::".
        [-4to9 <file>]
                                  - renaming information for rinex-3 type (re)naming
                                    ( NNNN -> NNNNMRCCC / POTS -> POTSOODEU )
        [-f]
                                  - force overwrite of output file if it already exists
40
                                    (std. no overwrite)
        [-sifl]
                                  - perform an operation on a single file if a file list is
        [-single_file]
                                   provided via "-finp"
        [-ant_rename]
                                  - rename historical antenna names to be IGS conform
     [-nomren23 <[s,][mr,][iso]>] - fast nominal output file name for RINEX-2 to RINEX-3 file rena +
                                                                                                ming.
                                    RINEX-3 output file name is written to STDOUT.
50
                                           - data source (S|R)
                                                                       (default R)
                                                                       (default 00)
                                       mr - marker receiver number
                                       iso - 3 char. iso country code (default XXX)
                                    the input parameters can be given in any order.
                                    supported input file names nnnnddde.yyt[.cmp] or nnnndddedd.yy +
                                                                                              t[.cmp]
                                    if providing a compressed file all information which is usuall +
60
                                    from file header (sat. system(s), data frequency) has to be gi +
                                                                                          ven via the
                                    command line parameter (see documion for details).
        [-vo <2|3>]
                                  - output RINEX version (std. 3)
        [--version_out <2|3>]
        [-vosc <2|3>]
                                  - output RINEX version (fully standard conform)
                                  - change header VERSION number and set output RINEX version
        [-vnum m.nn]
70
                                    (only the version number is changed / output RINEX version is
                                                                          the highest supported one)
        [-pr3rx2 <list>]
                                  - komma separated list of list of signal priorities used for rin +
                                                                                 ex 3 -> 2 conversion
                                    to overwrite the standard settings, see documentation for details.
```



```
S:n[n...]:STRING
80
                                            - satellite System [CEGJRSI]
                                            - frequency number(s)
                                    STRING - prority STRING
                                    G:12:PWCSLXYN,G:5:QXI,R:12:CP
        [-errlog <file>]
                                  - store (append) error logs to a file (std. print to STDERR)
        [-smp <num>]
                                  - sampling rate in sec. (std. no sampling / resolution 1 ms)
90
                                  - sampling rate (num) in sec to be used for automatic file naming
        [-smp_nom <num>]
         [-smp_lli_shift]
                                  - perform LLI shifts via data sampling to sampling epoch
        [-nav_mixed]
                                  - create a mixed nav. filename
        [-no_nav_stk]
                                  - no nav. splice header statistic tables
        [-stk_obs]
                                  - output data statistics information (std. STDOUT)
100
         [-stk_only]
         [-crux <file>]
                                  - rinex header manipulations definitions for input files
         [-cx_updins <string(s)>] - rinex header manipulation(s) definition for input files
                                    given via command line
                                   - if using using a crux-file (-crux) internal/data headers are c +
        [-cx_addinthd]
                                                                                               reated
                                    at crux-settings starting epochs.
110
        [-show_crux]
                                   - show crux structure adopted and used by the program
         [-hded]
                                  - perform the header edit ONLY mode (with -crux)
         [-stk_epo <n[:list]>]
                                  - ASCII timeplot of data availability (std. STDOUT)
                                         - time resolution in seconds
                                     list - comma separated list (prn,otp) (std. prn)
        [-ot <list>]
                                   - obs. types list to be used (pattern matching). the list can be +
120
                                    globaly or sat. system dependent. the sat. system dependent record
        [--obs_types <list>]
                                    replaces fully a global one.
                                    list can be: [S:]OT1,OT2,...[+S:OT3,OT4,...][+...]
                                     S - satellite system [CEGJRSI]
                                    OT - observation type identifier
130
                                    L1,L2,C1,C2,P1,P2
                                    L1,L2,C1,C2,P1,P2+C:L1,L7,C1,C7+G:L1C,L2W,C1,C2
         [-ots <string>[:<attr>]] - obs. types output sorting
   [--obs_types_sort <string>[:<attr>]]
                                     the "string" consists of the 1st obs. type id. characters ( e. +
                                     the "attr" can be [frqasc|frqdsc|frqi,j,...] (frequ. numbers (
```



```
i,j,...) = 1,...,n),
                                     which means a preferred sorting by frequency (ascending, descen +
                                                                                               ding or
                                     a list of distinct frequency numbers)
         [-prn <prn-list>]
                                   - komma separated list of PRNs to be used
                                     range notations are possible G1-32,C01-5,R01-10,E14,E18
                                   - komma separated list of PRNs to be skipped
         [-no_prn <prn-list>]
                                     range notations are possible G1-32,C01-5,R01-10,E14,E18
         [-kaot]
                                   - keep all obs. types (including fully empty ones)
         [-rsot <n>]
                                   - remove sparse obs. types.
   [--remove_sparse_obs_types <n>] n - defines the % limit of the median number of observations
                                         per observation type used to delete an observation type fully.
         [-satsys <letters>]
                                   - satellite system(s) to be used (CEGIJRS) (std. CEGIJRS)
                                     C - Beidou
                                     E - Galileo
                                     G - GPS
160
                                     I - IRNSS
                                     J - QZSS
                                     R - Glonass
                                     S - SBAS
         [-ns <type>]
                                   - output order of navigation records. type = [time|prn] (std. prn)
         [--nav_sort <type>]
                                     time - sort by time,prn
                                     prn - sort by prn, time
         [-nav_3.04]
                                     output version (valid mainly for GLONASS)
         [-split n]
                                   - split input file in <n seconds> pieces
                                     - valid only with -fout ::RX2:: or ::RX3::
                                     - valid if n is a multiple of 60 seconds.
                                     - only supported for single input file
                                   - extended formal checks on input file (slower)
         [-chk]
         [-meta <type[:format]>]
                                   - extract file meta data. the type can be (basic|full).
180
                                     supported formats are json|xml|txt|dump
         [-fdiff]
                                   - compare two rinex files of the same format (major version id.)
                                     the two input files have to be given via -finp
         [-met_nwm]
                                   - edit a rinex meteo file(1) by the means of a reference NWM fil +
                                                                                                 e(2).
                                     the two input files have to be given via -finp.
                                     the second file contains reference NWM data and check limits
                                     (can be used in conjunction with -obs_types, -ot)
190
         [-site <sitename>]
                                   - use the 4- or 9-char sitename for output filename via automati +
                                                                                         c file naming
                                     or for header editing settings extractions (crux)
                                     or for "MARKER NAME" in case it is missing.
         [-kv]
                                   - keep major output version number (2|3) same as in input
         [-q]
                                   - quiet mode
```



```
200
                                  - file duration (seconds) (std. ignored on input
        [-d <sec>]
        [--duration <sec>]
                                                            std. 86400 on output )
        [-epo_beg <EPOCH>]
                                 - first output epoch (<EPOCH> see below)
        [-sei <in|out>]
   [--strict_epoch_interval <in|out>] - output epoch interval according to in/output file name
                                        (only valid in case of RINEX conform file names)
        [-enb <n>]
                                  - extend the nav. epoch interval by -n and +n seconds
                                    (when using strict epoch interval)
                                  - only standard epochs are passed to the output
        [-nav_epo_filter]
                                  - only nominal epochs are passed to the output
        [-nav_epo_strict]
        [-nav_latest]
                                  - only latest nav. record per PRN are passed to the output
        [splice_direct]
                                 - use no RAM to store observations via splice operations
                                   (no header data statistics)
        [try_append <sec>]
                                 - try append mode to fasten the splice process with
220
                                   smallest nominal file duration (seconds) of part files
        [-use_obs_map <file>]
                                 - use modified obs. types mapping
        [-out_obs_map]
                                 - output std. obs. types mapping
        [-tab_obs]
                                  - create a tabular observation output
        [-tab_date]
                                  - use other date (pattern) for tabular observation output
                                     (yyyy-mm-dd|yyy-ddd|wwww-d|yyyymmdd|yymmdd|yyyyddd|w +\\
                                                                                      wwwd|mjd|ddd)
230
        [-tab_time]
                                  - use other time pattern for tabular observation output
                                    (hh:mm:ss|hhmmss|sod|fod)
        [-tab_sep <string>]
                                 - column separator string (default: BLANK)
        epoch <EPOCH> parameter
        mjd
             56753 or 56753_123000
                      17870 or
        wwwwd
                                        17870_12:30:00
                                      2014096_123000
                    2014096 or
240
        yyyyddd
        yyyyddd 2014096 or
yyyymmdd 20140406 or
                                    20140406_12:30:00
        yyyy-mm-dd 2014-04-06 or 2014-04-06_123000
        all these date types can be combined via '_' with a time string of type:
        hhmmss
        hh:mm:ss
250 © Helmholtz-Centre Potsdam - GFZ German Research Centre for Geosciences
     Section 1.1 Space Geodetic Techniques
     see https://gnss.gfz-potsdam.de/services/gfzrnx
     for license details and manual
     Thomas Nischan, nisn@gfz-potsdam.de
     VERSION: gfzrnx-1.14-8026
260
```

Basics 18

2.2 Data Input/Output

2.2.1 Supported Format Versions

gfzrnx supports all versions 2.x and 3.x formats as input. The output format will be only the latest standard format of the major formats 2 and 3. for version 2 it is 2.11 and for version 3 this is currently 3.04.

2.2.2 Input

The input of a single file can be done via the -finp command line parameter or via STDIN.

2.2.3 Output

The standard output channel is **STDOUT**. The output to a dedicated file can be also done via the **-fout** command line parameter.

2.2.4 Examples Input/Output

2.2.4.1 Input via STDIN

```
cat pots007a.15o | gfzrnx ...
crx2rnx pots007a.15d - | gfzrnx ...
```

2.2.4.2 Input via -finp

```
gfzrnx -finp pots007a.15o ...
```

2.2.4.3 Output via STDOUT

```
gfzrnx -finp pots007a.15o > pots007a.15o_rx3
gfzrnx -finp pots007a.15o | rnx2crx > pots007a.15d
gfzrnx -finp pots007a.15o | rnx2crx | gzip > pots007a.15d.gz
```

The program rnx2crx is here the Hatanaka RINEX compression and gzip a common file compression.

2.2.4.4 Output via -fout

```
gfzrnx -finp pots007a.15o -fout pots007a.15o_rx3
```

2.2.5 Log Messages

By default log messages (Notices, Errors, Warnings) are sent to STDERR. One can store the log messages into a file using the -errlog command line parameter.



2015-01-09 N 23:59:30	LEID O mandatory HEADER label >GLONASS COD/PHS/BIS< added
2015-01-09 N 23:59:30	LEID O mandatory HEADER label >SYS / PHASE SHIFT< added
2015-01-09 N 23:59:30	LEID 0 label ># / TYPES OF OBSERV< skipped via output

The log table information consists of:

Label	Description
DATE/TIME	processing epoch
C(ode)	N(otice), W(arning), E(rror)
EPOCH / FILE	affected epoch in input file
SITE	4-char. station identifier
T(ype)	Data Type
MESSAGE	log meessage

Output of log information to a file via -errlog command line parameter.

```
gfzrnx -finp leid2000.13o -fout xxxx -errlog leid2000.13o_log
```

Basics 20

2.3 Supported File Names

The following input file names are supported and used to initialize the nominal data epoch interval.

2.3.1 RINEX-2 naming convention

File Name	Description	Example
SSSSDDD0.YYT	daily file	pots0070.15o
SSSSDDD[a-x].YYT	hourly file	pots007a.15o
SSSSDDD[a-x]MM.YYT	sub-hourly file	pots007r45.15o

Var.	Description	Example
SSSS	4-char. station identifier	pots
DDD	day of year	007
YY	2-digit year	15
MM	minute of data begin	45
Т	data type (o,d,m,n,)	0

2.3.1.1 **Examples**

• daily file

pots0070.15o

• hourly files

 $\verb"pots007a.15o" pots007b.15o" pots007c.15o" \dots \\ \verb"pots007v.15o" pots007w.15o" pots007x.15o" pots00$

• sub-hourly files (15 min)

pots007a00.15o pots007a15.15o pots007a30.15o pots007a45.15o

2.3.2 RINEX-3 naming convention

File Nmae	Example
SSSSMRCCC_S_YYYYDDDHHMM_NNN_FRQ_TT.FMT[.CMP]	POTS00DEU_R_20150070000_01H_30S MO.rnx.bz2
SSSSMRCCC_S_YYYYDDDHHMM_NNN_TT.FMT[.CMP]	POTS00DEU_R_20150070000_01H_MN.rnx.gz

Var.	Description	Example
SSSSMRCCC	station identifier	POTS00DEU
SSSS	4-char. identifier	POTS
M	Monument number	0
R	Receiver number	0

PLEASE TURN OVER

21



Var.	Description	Example
CCC	ISO country code	DEU
S	data source	R
YYYYDDDHHMM	start epoch	20150070000
YYYY	year	2015
DDD	day of year	007
НН	hour	00
MM	minute	00
NNN	nominal file period (nominal)	01H
FRQ	data frequency	30S
TT	data type	MO
FMT	format extension	rnx
СМР	compression method	gz, bz2,

For more details see RINEX-3 file format definitions.

2.3.3 Automatic Output File Naming

For an automatic output file naming one can use the ::RX2:: or ::RX3:: parameter for the -fout command line switch.

2.3.3.1 RINEX-2 Site Name

The 4 character site name is taken from the "MARKER NAME" header record. If the site name is not given in the file header it is taken from the input file name (if standard file name). In all other cases it has to be provided via the -site command line parameter

2.3.3.2 RINEX-3 Site Name

```
gfzrnx -finp pots0070.15o -fout ::RX3::
gfzrnx -finp pots0070.15o -fout /tmp/::RX3::
```

This works fully if the header **MARKER NAME** fully matches the RINEX-3 "SSSSMRCCC" naming style. For a 4-char. **MARKER NAME** one has to provide at least the **marker-, receiver numbers** and the **ISO country code** on the command line. If no station information is found the full information has to be given on the command line.

```
gfzrnx -finp pots0070.15o -fout ::RX3::pots,00,DEU
gfzrnx -finp pots0070.15o -fout /tmp/::RX3::pots,00,DEU
```

The following examples will give the same result if the header 4-char. **MARKER NAME** is set. The parameters order is not relevant.

```
gfzrnx -finp pots0070.15o -fout ::RX3::00,DEU
gfzrnx -finp pots0070.15o -fout ::RX3::DEU,00
```

The output file name will be: POTS00DEU_R_20150070000_01H_30S_MO.rnx.

The default **data source** identifier is **R** (Receiver). If one needs the **S** (Streaming), simply add it to the **::RX3::** sub-information.

Basics 22

```
gfzrnx -finp pots0070.150 -fout ::RX3::00,DEU,S
gfzrnx -finp pots0070.150 -fout /tmp/::RX3::00,DEU,S
```

The output file name will be: POTS00DEU_S_20150070000_01H_30S_MO.rnx.

2.3.3.3 RINEX-3 Site Name (-4to9)

Beside the naming definitions on the command line (-fout ::RX3::00,DEU) multiple site identifier definitions can be provided via the -4to9 command line parameter providing a simple file with the naming information.

```
gfzrnx -finp pots0070.15o -fout ::RX3:: -4to9 four2nine.conf
```

The -4to9 input file (e.g.) must have the following structure:

```
# name mr iso
0001 pots 00 DEU
0002 brux 00 BEL
0003 tash 00 UZB
...
```

A correct numbering can be ignored if it is out of interest to you. In this case you can use the same number for all stations.

```
# name mr iso
1  pots 00 DEU
1  brux 00 BEL
1  tash 00 UZB
...
```

An up to date **4to9** configuration file for diverse networks like **IGS**, **MGEX**, **EUREF**, **TIGA** and others can be derived from **GFZ**'s **SE**nsor **Meta Information SYS**tem (SEMISYS) via a simple command line:

```
wget 'http://semisys.gfz-potsdam.de/semisys/api/?symname=1005&network=EPN' -0 EPN_4to9.txt
```

For more details see the SEMISYS api and download page http://semisys.gfz-potsdam.de/semisys/download .

2.3.3.4 RINEX-2 Start Epoch/Duration

By default the start epoch and file duration are used to create the epoch parts of the output name. To force the automatic file naming to a distinct type ::RX2:: can be extended by the letters L, S or D (Long, Short, Day) to ::RX2L::, ::RX2S:: or ::RX2D::.

The following examples illustrate the standard behavior for a station **ABCD** with start epoch **2015-123 03:05** and different durations.

Duration	< 1 hour	1 hour	> 1 hour
::RX2::	abcd122d05.15o	abcd122d.15o	abcd1220.15o
::RX2L::	abcd122d05.15o	abcd122d05.15o	abcd122d05.15o
::RX2S::	abcd122d.15o	abcd122d.15o	abcd122d.15o
::RX2D::	abcd1220.15o	abcd1220.15o	abcd1220.15o



The cases ::RX2L::, ::RX2S:: allow to store not only hourly or sub-hourly files. For durations larger than 1 hour one can use it to store sub-daily files too. In this case the file epoch indicates the start time (hour, minute) only. In case of sub hourly file names with nominal begin epochs (-epo_beg / -sei in) and the nominal duration -d 900 is used by default. For other time intervals the duration (-d) has to be given.

If the data start minute is 17 and the duration e.g. 300 s. the following commands give different output file names:

```
gfzrnx -kv -finp pots125x15.13o -fout TMP/::RX2::
TMP/pots125x15.13o

gfzrnx -kv -finp pots125x15.13o -fout TMP/::RX2L::
TMP/pots125x15.13o

gfzrnx -kv -finp pots125x15.13o -fout TMP/::RX2L:: -d 120
TMP/pots125x16.13o

10 gfzrnx -kv -finp pots125x15.13o -fout TMP/::RX2L:: -sei in
TMP/pots125x15.13o

gfzrnx -kv -finp pots125x15.13o -fout TMP/::RX2L:: -epo_beg 2015125_230000 -d 1800
TMP/pots125x00.13o

gfzrnx -kv -finp pots125x15.13o -fout TMP/::RX2S::
TMP/pots125x.13o
```

2.3.3.5 RINEX-3 Start Epoch/Duration (real)

For the RINEX-3 file renaming the following rules are valid for all observation types (O/N/M). The example obs. files in the table below with the following characteristics are used to illustrate the (re)naming process.

Characteristics	pots0070.15o	pots007c.15o	pots007c30.15o
Time Begin	01:12:30	02:13:30	02:33:13
Time End	23:59:30	02:55:30	02:44:50
Duration (implicit)	1 day	1 hour	unknown
Duration (nominal)	1 day	1 hour	15 min
Duration (real hh:mm:ss)	22:47:00	00:42:00	00:11:37
Sampling Rate	30s	30s	1s

Using the following basic command you will get file names containing the real values derived from the file content.

```
gfzrnx -finp <RINEX-2 Name> -fout ::RX3::01,DEU
```

By default the real begin epoch and duration information based on the file content are used:

RINEX-2	RINEX-3
pots0070.15o	POTS00DEU_R_20150070112_23H_30S_MO.rnx
pots007c.15o	POTS00DEU_R_20150070213_42M_30S_MO.rnx
pots007c30.15o	POTS00DEU_R_20150070233_12M_01S_MO.rnx

2.3.3.6 RINEX-3 Start Epoch/Duration (nominal)

To get, similar to the RINEX-2 file naming, **nominal** begin and duration information in the RINEX-3 file name additional command line parameters are needed.

Basics 24

The general method is to give the begin epoch and the duration information via the -epo_beg and -d command line parameters.

```
gfzrnx -finp file.rnx -fout ::RX3::ABCD,05,DEU -epo_beg 20150812_020000 -d 3600 gfzrnx -finp pots0070.15o -fout ::RX3::00,DEU -epo_beg 20150107_000000 -d 86400
```

Assuming 30 s sampling rate and GPS only data, the output file names will be:

ABCD05DEU_R_20152240200_01H_30S_GO.rnx, POTS00DEU_R_20150070000_01D_30S_GO.rnx.

In the case of **nominal** standard RINEX input file names you can get nominal RINEX-3 output file names providing the **-sei in** command line parameter (strict epoch interval), which uses the epoch and implicit duration information from the **in**put file name. If no implicit duration information is given (RINEX-2 11.3 file names) it has to be provided in addition via the **-d** (duration) command line parameter (otherwise the real duration is used). This can be useful in renaming scenarios.

RINEX-2	command line parameters	RINEX-3
pots0070.15o	-sei in	POTS00DEU_R_20150070000_01D_30S_MO.rnx
pots007c.15o	-sei in	POTS00DEU_R_20150070200_01H_30S_MO.rnx
pots007c30.15o	-sei in -d 900	POTS00DEU_R_20150070230_15M_01S_MO.rnx

2.3.3.7 RINEX-3 Mixed Broadcast Splice File Naming -nav_mixed

If generating a mixed broadcast navigation file with automatic file naming (::RX3::) in an ongoing accumulation mode one should use the -nav_mixed commandline parameter to ensure that a _MN file name is generated nevertheless only a single satellite system is found in the given file(s).

2.3.3.8 Remark

In the file **split mode** the duration information will be nominal (split interval).

The **nominal** mode has to be used with caution, especially in renaming operations.

CAUTION!

Using the NOMINAL mode gfzrnx does not only (re)name the given output files.

It ensures, that the file content fits to the file name.

This way extra observations are removed!

For navigation files this nominal interval can be extended via the -enb command line parameter (extend navigation boundaries). See the **Operation/Tasks** - **Rinex File Epoch Interval** section.



Chapter 3

Operation / Tasks

To get the full available checks via data input one has to use the -chk option, to make sure that the output data are formally correct. If you are sure, that your files are correct and you want to do some data manipulation only you can omit this commandline parameter to speed up the work.

Please keep in mind, that compared to other tools, which work on a single epoch level, **gfzrnx** stores the whole RINEX data set in the computers memory before output. This leads to some performance degradation but offers complete data handling opportunities.

The standard output format of gfzrnx is RINEX-3!

Helmholtz Centre

3.1 RINEX File Check and Repair

If one gets data of unknown quality one should pass them at least once through a check procedure. If an output file is created it will be RINEX conform nevertheless the input was corrupt.

With gfzrnx this can be done via:

```
gfzrnx -finp pots0070.15o -fout pots0070.15o_chk -chk -kv
```

with -chk all formal checks are done on the input file.

The -kv (keep version) ensures the same output version as the input file (standard output format is RINEX-3). The following modifications are done in the output file:

- update of observation types to really existing ones, overall empty observation types are removed.
 - SYS / # / OBS TYPES
 - ♯ / TYPES OF OBSERV
- Statistical information are added or updated in the file header.
 - PRN / # OF OBS
 - # OF SATELLITES
 - INTERVAL
 - TIME OF FIRST OBS
 - TIME OF LAST OBS

Here is an example of an updated RINEX header information:

	С	10	C1I C6	I C7I	D1I L1	I L6I	L7I S	31I S6I	S7I		S	/S	#	/	OBS TYPES
	E	13	C1X C5	X C7X	C8X D1	X L1X	L5X L	7X L8X	S1X S	5X S7X	S8X S	/S	#	/	OBS TYPES
	G	20	C1C C2	W C2X	C5X D1	C D1P	D1W D	2W L1C	L1P L	1W L2W	L2X S	/S /	#	/	OBS TYPES
			L5X S1	C S1W	S2C S2	W S2X	S5X				S	/S /	#	/	OBS TYPES
	J	19	C1C C1	X C1Z	C2X C5	X C6L	D1C L	1C L1X	L1Z L	2X L5X	L6L S	/S /	#	/	OBS TYPES
			S1C S1	X S1Z	S2X S5	X S6L					S	/S /	#	/	OBS TYPES
	R	13	C1C C1	P C2C	C2P D1	C L1C	L1P L	2C L2P	S1C S	1P S2C	S2P S	/S /	#	/	OBS TYPES
	S	4	C1C D1	C L1C	S1C						S	'S /	#	/	OBS TYPES
		76									#	0F	SA	TEL	LITES
10		C01	2863	2863	2863	2863	2863	2863	2863	2863	2863PI	RN /	#	OF	OBS
			2863								Pl	RN /	#	OF	OBS
		•													
		C14	1365	1363	1363	1365	1365	1363	1363	1365	1363PI				
			1363												OBS
		E11		895	893	899	900	900	895	893	899PI				
			900	895	893	899					Pl				
		E19	1605	1601	1601	1603					1603Pl				
			1605	1601	1601	1603					Pl 1189Pl	RN /	#	OF	OBS
		G01	1189	1148	1181	1181	1189	, , , , ,			1189Pl	RN /	#	OF	OBS
20					1148	1181	1181	1189		1181	1148Pl				
			1181	1181							Pl	RN /	#	OF	OBS
	• •		1047	10/1			1047	•			10470) TA	ш.	OE.	, opg
		G32	1247	1241							1247Pl 1241Pl				
					1241			1241							OBS
		TO 1	2863	2863	2863	2062	2062	2062	2062	2062	2863Pl				
		301	2863	2863							2863PI				
			2863	2000	2000	2000	2000	2000	2000	2000					OBS
		R01	713	713	709	706	713	713	713	709	706Pl				
30		1001	713	713		706	, 10	, , , 10	, 10	, 105		-			OBS
30			, 10	110	103	, 00					1.	v.v /	,,	O1	655
		R24	695	695	695	695	695	695	695	695	695PI	RN /	#	OF	OBS
			695	695	695	695									OBS
		S26			1973										OBS



S37	2863	2863	2863	2863			PRN / # OF OBS
30	.000						INTERVAL
2014	8	17	0	0	0.0000000	GPS	TIME OF FIRST OBS
2014	8	17	23	59	30.0000000	GPS	TIME OF LAST OBS
40							

The repair of a file file is different concerning RINEX-2 and RINEX-3. Data values are not corrected! Via the repair operation formally corrupt observation parts are omitted only.

- RINEX-2
 - 1. A complete epoch block is removed in case of corrupted data detection.
- RINEX-3
 - 1. A complete satellite block (line) is removed in case of corrupted data detection.

3.1.1 Navigation Data Epoch Filter

Use the -nav_epo_filter command line parameter to filter the navigation data input via epoch record checks. In this case only nominal epochs are passed to the output file. Excluded records are given in the log table. Only epoch minutes, hours are checked at the moment. the following table shows valid hours, minutes per satellite system:

Sat. System	Minutes	Hours (modulo)
С	0	1
E	0,10,20,30,40,50	1
G	0	2
R	15,45	1
J	0	1

3.1.2 Meteo Data check/edit against NWM-Data

RINEX-meteo site data can be checked against a reference RINEX-file created from e.g. Numerical Weather Model (**NWM**) data (predicted or reprocessed). Two input files have to be given via the -finp command line parameter. The first file is the one to be checked, the second file is the reference file to be checked against.

The check limits for the different observation types are taken from the reference file "SENSOR MOD/TYPE/ACC" header records. here an example:

DNSXGFZ	ERA5/ECMWF	10.0 PR SENSOR MOD/TYPE/ACC
DNSXGFZ	ERA5/ECMWF	10.0 TD SENSOR MOD/TYPE/ACC
DNSXGFZ	ERA5/ECMWF	100.0 HR SENSOR MOD/TYPE/ACC

Observations which exceeds the difference limits are eliminated and don't go to the output file.

```
gfzrnx -met_nwm -finp POTS00DEU_R_20200010000_01D_05M_MM.rnx POTS00DEU_R_20200010000_01D_05M_MM + .rnx_nwm -fout POTS00DEU_R_20200010000_01D_05M_MM.rnx_chk
```

By default all observation types found in the reference file are used for the difference checks. To limit the tests to single observation types they can be given via the **-obs_types** or **-ot** command line parameters.

```
gfzrnx -met_nwm -finp ... -fout POTSOODEU_R_20200010000_01D_05M_MM.rnx_chk -ot TD,HR
```

The removed observations are documented in the log.

```
... | MESSAGE
...-+----...
... | MET_NWM: ignoring checks for obs. type -> PR
```



```
| MET_NWM: DELETED 2020-01-01 00:05:00.0000000 HR - -81.4( 97.4) exceeds limit of 100.0 + (178.8)
| MET_NWM: DELETED 2020-01-01 00:15:00.0000000 TD - 29.0( 2.6) exceeds limit of 10.0( + 26.4)
```



3.2 RINEX File Statistics / Informations

3.2.1 Observations Statistics

The -stk_only or -stk_obs outputs an observations statistics information to STDOUT. Only the nonzero (nonempty) data values are counted.

```
gfzrnx -finp pots0070.15o -stk_obs
```

you can store it into a file using the -fout command line parameter.

```
gfzrnx -finp pots0070.15o -stk_obs -fout pots0070.15o_stk
```

Here is an example for the observations file sin12290.14o:

```
gfzrnx -finp sin12290.14o -stk_obs
    STP sin1 C TYP
                       C1I
                              C6I
                                     C7I
                                           D1I
                                                  L1I
                                                         L6I
                                                                L7I
                                                                      S1I
                                                                             S6I
                                                                                    S7I
    STO sin1 C CO1
                      2863
                             2863
                                    2863
                                          2863
                                                 2863
                                                        2863
                                                               2863
                                                                     2863
                                                                            2863
                                                                                   2863
    STO sin1 C CO2
                      2863
                                   2863
                                          2863
                                                 2863
                                                        2863
                                                               2863
                                                                     2863
                                                                            2863
                                                                                   2863
                             2863
    STO sin1 C C14
                      1365
                            1363
                                    1363
                                          1365
                                                 1365
                                                        1363
                                                               1363
                                                                     1365
                                                                            1363
                                                                                   1363
    STP sin1 E TYP
                       C1X
                              C5X
                                     C7X
                                           C8X
                                                  D1X
                                                                L5X
                                                                      L7X
                                                                             L8X
                                                                                    S1X
                                                                                           S5X
                                                                                                 S7X
                                                                                                        S8X
                                                         L1X
    STO sin1 E E11
                       900
                              895
                                     893
                                           899
                                                  900
                                                         900
                                                                895
                                                                      893
                                                                             899
                                                                                    900
                                                                                           895
                                                                                                 893
                                                                                                        899
    STO sin1 E E12
                      1230
                             1230
                                    1230
                                          1230
                                                 1230
                                                        1230
                                                               1230
                                                                     1230
                                                                            1230
                                                                                   1230
                                                                                          1230
                                                                                                1230
                                                                                                       1230
    STO sin1 E E19
                      1605
                             1601
                                    1601
                                          1603
                                                 1605
                                                        1605
                                                               1601
                                                                     1601
                                                                            1603
                                                                                   1605
                                                                                          1601
                                                                                                1601
                                                                                                       1603
    STP sin1 G TYP
                       C1C
                              C2W
                                     C2X
                                           C5X
                                                  D1C
                                                                L1C
                                                                      L1P
                                                                             L1W
                                                                                    L2W
                                                                                           L2X
                                                                                                 L5X
                                                                                                        S1C ...
    STO sin1 G GO1
                      1189
                                          1181
                                                 1189
                                                               1189
                                                                         0
                             1148
                                    1181
                                                                               0
                                                                                   1148
                                                                                         1181
                                                                                                1181
                                                                                                       1189 ...
    STO sin1 G G10
                       886
                              881
                                       0
                                              0
                                                  886
                                                                886
                                                                               9
                                                                                    881
                                                                                             0
                                                                                                    0
                                                                                                        886 ...
20
    STO sin1 G G32
                      1247
                             1241
                                                 1247
                                                               1247
                                                                                   1241
                                                                                                       1247 ...
    STP sin1 J TYP
                       C1C
                              C1X
                                     C1Z
                                           C2X
                                                  C5X
                                                         C6L
                                                                D<sub>1</sub>C
                                                                      L1C
                                                                             L1X
                                                                                    L1Z
                                                                                           L2X
                                                                                                 L5X
                                                                                                        L6L ...
    STO sin1 J J01
                      2863
                             2863
                                    2863
                                          2863
                                                 2863
                                                        2863
                                                               2863
                                                                     2863
                                                                            2863
                                                                                   2863
                                                                                          2863
                                                                                                2863
                                                                                                       2863 ...
    STP sin1 R TYP
                       C1C
                              C1P
                                     C2C
                                           C2P
                                                  D1C
                                                         L1C
                                                                L1P
                                                                      L2C
                                                                             L2P
                                                                                    S1C
                                                                                           S1P
                                                                                                 S2C
                                                                                                        S<sub>2</sub>P
    STO sin1 R RO1
                       713
                              713
                                     709
                                           706
                                                  713
                                                         713
                                                                713
                                                                      709
                                                                             706
                                                                                    713
                                                                                           713
                                                                                                 709
                                                                                                        706
    STO sin1 R RO2
                      1143
                             1143
                                    1141
                                          1141
                                                 1143
                                                        1143
                                                               1143
                                                                     1141
                                                                            1141
                                                                                   1143
                                                                                          1143
                                                                                                1141
                                                                                                       1141
    STO sin1 R R24
                       695
                              695
                                     695
                                            695
                                                  695
                                                         695
                                                                695
                                                                      695
                                                                             695
                                                                                    695
                                                                                           695
                                                                                                  695
                                                                                                        695
    STO sin1 S TYP
                                           S1C
                       C1C
                              D1C
                                     L1C
    STO sin1 S S26
                      1973
                                    1973
                             1973
                                          1973
    STO sin1 S S27
                      2863
                             2863
                                    2863
                                          2863
40 STO sin1 S S37 2863
                            2863
                                   2863
```

3.2.2 ASCII Timeplot of Observables

The -stk_epo command line parameter can be used to create an ASCII timeplot to show the availability of observations per **PRN** (std.) and/or observation type.

In the simplest mode one has to provide the time bin to be used in seconds (here 1800).



3.2.2.1 Timeplot per PRN

```
gfzrnx -finp stas0400.15o -stk_epo 1800
gfzrnx -finp stas0400.15o -stk_epo 1800:prn
```

	STT 20150209 00	0:00 04:00	08:00 12:0	00 16:0	0 20:00	00:	00
	STH	++	++-	+	+	++	
	STE stas C CO5	******	******	******	*****	****	C05
	STE stas C CO6	******	1 1 1	1 1		****	C06
	STE stas C CO7	*	******	*	1 1	1 1	C07
	STE stas C CO8	1 1 1 1	1 1 1	*****	*****	1 1	C08
	STE stas C CO9	******	****	1 1	1 1	**	C09
	STE stas C C10	I I I I	******	*****	1 1	1 1	C10
	STE stas C C11	****	***	***	**:	****	C11
10	STE stas C C12	1 1 1 1	*****	k	****	****	C12
	STE stas C C14	******	1 1 1	****	****	1 1	C14
	STS		-	-			
	STE stas E E11	*****	1 1 1	*****	1 1	1 1	E11
	STE stas E E12	***	***	****	1 1	***	E12
	STE stas E E19	****	1 1 1	*****	****	1 1	E19
	STE stas E E20	**	***	******	***	1 1	E20
	STS		-	-			
	STE stas G G01	*****	******	1 1	****	1 1	G01
	STE stas G G02	*	******	****	****	****	G02
20	STE stas G G03	***	******	1 1	****	1 1	G03
	STE stas G G30	*****	***	******	1 1	1 1	G30
	STE stas G G31	***	******	1 1	****	****	G31
	STE stas G G32	****	*****	1 1	****	1	G32
	STS		-	-			
	STE stas J J01	**	1 1 1	1 1	*:	** *	J01
	STS		-	-			
	STE stas R R01	****	****	*****		****	R01
	STE stas R RO2	******	**	******	*	**	R02
30	STE stas R R03	******	1 1 1	*****	****	1	R03
	STE stas R R22	*	******	**	*****	1 1	R22
	STE stas R R23	1 1 1 1	******	1 1	*****	1	R23
	STE stas R R24	**	*****	*	****	**	R24
	STH	++	++-	++-	+	++	
	STT 20150209 00	0:00 04:00	08:00 12:0	00 16:0	0 20:00	00:	00

3.2.2.2 Timeplot per PRN and/or Observation Type

A timeplot per observation type is available providing the [:[prn/otp]] parameter list. This can be combined with other parameters like -smp, -satsys, -obs_types, -prn, -no_prn etc.

gfzrnx -finp stas0400.15o -stk_epo 1800:prn,otp -satsys E -ot C,L

STI	20150	209	00	0:00 04	1:00	08	:00	1:	2:00	16:00	2	20:00	00:	00	
STE	[++	-+	+	+	+	-++	+	+	-+	-+		
STE	stas	E E11		*****	1	1	l		***	***	1	-1	1 1		E11
SOI	'stas	E E11	C1X	xxxxxxx	1	1	l		xxx	xxx	1	-1	1 1	C1X	E11
SOI	'stas	E E11	C7X	xxxxxxx	1	1	l		xxx	xxx	1	-1	1 1	C7X	E11
SOI	'stas	E E11	C8X	xxxxxxx	1	1	l		xxx	xxx	1	-1	1 1	C8X	E11
SOI	'stas	E E11	L1X	xxxxxxx	1	1	l		xxx	xxx	1	-1	1 1	L1X	E11
SOI	'stas	E E11	L7X	xxxxxxx	1	1	l		xxx	xxx	1	-1	1 1	L7X	E11
SOI	'stas	E E11	L8X	xxxxxxx	1	1	l		xxx	xxx	1	-1	1 1	L8X	E11
10 STE	stas	E E12		***	1	1	l	:	*****	*	1	-1	***		E12
SOI	'stas	E E12	C1X	xxx	1	1	l	:	xxxxxx	x	1	1	xxx	C1X	E12



	SOT stas E E12	C7X xxx	1 1 1	xxxxxxx
	SOT stas E E12	C8X xxx	1 1 1	xxxxxxx xxx C8X E12
	SOT stas E E12	L1X xxx	1 1 1	xxxxxxx
	SOT stas E E12	L7X xxx	1 1 1	xxxxxxx
	SOT stas E E12	L8X xxx	1 1 1	xxxxxxx
	STE stas E E19	****	1 1 1	********* E19
	SOT stas E E19	C1X xxxxx	1 1 1	xxxxxxxxxxxx
	SOT stas E E19	C7X xxxxx	1 1 1	xxxxxxxxxxxx
20	SOT stas E E19	C8X xxxx	1 1 1	xxxxxxxxxxx
	SOT stas E E19	L1X xxxxx	1 1 1	xxxxxxxxxxxx
	SOT stas E E19	L7X xxxxx	1 1 1	xxxxxxxxxxxx
	SOT stas E E19	L8X xxxxx	1 1 1	xxxxxxxxxxxx
	STE stas E E20	**	1 1 1	******
	SOT stas E E20	C1X xx	1 1 1	xxxxxxxxxxxxx
	SOT stas E E20	L1X xx	1 1 1	xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
	STH	++	++	++
	STT 20150209	00:00 04:00	08:00	12:00 16:00 20:00 00:00

Using an Editor, which is able to scroll horizontally through a text file (**nedit** for Unix, or **Notepad++** for MS Windows) one can check visually data availability details down to the single observation in case of problems. Here an example of an input file with 5 s sampling rate:

gfzrnx -finp stas0010.15o -stk_epo 5:prn,otp -fout xxxx

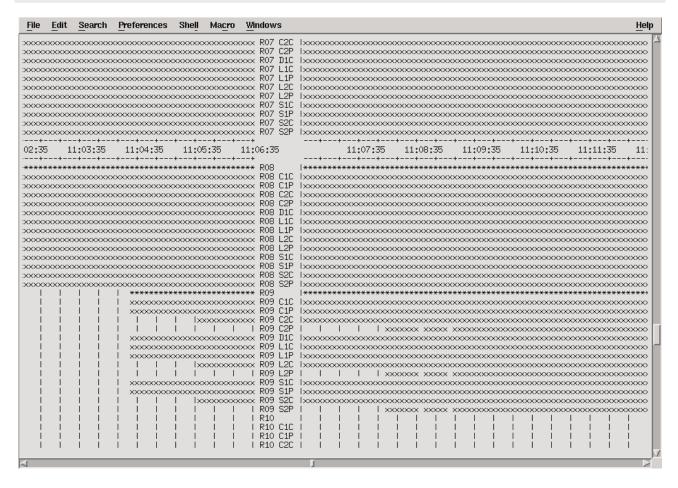


Figure 3.1: Editor Window - ASCII Timeplot per PRN and Observation Type

3.3 RINEX File Format Conversion (3/2, 2/3)

3.3.1 Observation Types Mapping

The used observation types mapping is hardcoded in gfzrnx. It can be shown up via the following command.

```
gfzrnx -out_obs_map
gfzrnx -out_obs_map -fout obs_types_map.txt
```

The information in the columns 2,3,4 are treated as comment only and are not used.

3.3.2 REMARK

During the conversion process the data values – observation, loss of lock indicator(LLI), signal strength indicator(SSI) – are left as they are. The LLI meaning differs between version 2 and 3 and the Interpretation of bit 1 and 2 has to be used with caution!

3.3.3 RINEX-2 to RINEX-3

Please use this conversion only if you are sure, that the output files are usable in the environment to which the data are supplied!

The output format for this conversion/transition is RINEX-3.01 to be standard conform.

The 2-char. observation types are kept as they are except the code observations for GPS and GLONASS (see below). As **RINEX-3** is the standard output format of **gfzrnx** simply run:

```
gfzrnx -finp pots0070.15o -fout pots0070.15o_rx3
```

or

```
gfzrnx -finp pots0070.15o -fout ::RX3::00,DEU gfzrnx -finp pots0070.15o -fout ::RX3::DEU,00
```

or

```
gfzrnx -finp pots0070.15o -fout ::RX3::00,DEU -sei in gfzrnx -finp pots0070.15o -fout ::RX3::DEU,00 -sei in
```

to create a RINEX-3 conform output file name POTS00DEU_R_201500700_01D_30S_MO.rnx . For naming details see the **Automatic Output File Naming** section.

A hard coded observation types mapping for the GPS and GLONASS code observations is implemented:

System	RINEX-2	RINEX-3				
G	P1	C1W				
G	C1	C1C				
G	P2	C2W				
G	C2	C2C				

System	RINEX-2	RINEX-3
R	P1	C1P
R	C1	C1C
R	P2	C2P

PLEASE TURN OVER

System	RINEX-2	RINEX-3	
R	C2	C2C	

This is used, because both Px and Cx RINEX-2 code types are mapped to the single Cx? RINEX-3 code type.

3.3.4 RINEX-3 to RINEX-2

The RINEX-2 output version is 2.11.

Use the -version_out or -vo command line parameter to define RINEX format version of the output file.

```
gfzrnx -finp pots0070.150 -fout pots0070.15o_rx2 -vo 2 gfzrnx -finp POTS00DEU_R_201500700_01D_30S_MO.rnx -fout pots0070.15o --version_out 2
```

3.3.4.1 Specific Observation Type Selection

In the RINEX-3 format one can have multiple observation types per data type and frequency (tracking mode or channel attribute). For a specific observation type selection for the format conversion you can use the observation types selection feature in addition. Add the -ot command line parameter to the upper command like in the example below to select the RINEX-3 obs. types to be converted and to get a distinct conversion.

-ot G:C1W,L1W,D1W,S1W+C2W,L2W,D2W,S2W+R:C1P,L1P,S1P,D1P,C2P,L2P,S2P,D2P

3.3.4.2 Observation Type Selection via Signal Priorities

By default the following signal priorities per frequency and satellite system are used for the RINEX-3 to RINEX-2 conversion:

Sat. System	Freq. Num.	RINEX-3 Signal Priority	
G - GPS	1	PWCSLXYMN	
G - GPS	2	PWCSLXYMN	
G - GPS	5	IQX	
R - GLO	1	PC	
R - GLO	2	PC	
R - GLO	3	IQX	
R - GLO	4	ABX	
R - GLO	6	ABX	
E - GAL	1	BCX	
E - GAL	5	IQX	
E - GAL	6	BCX	
E - GAL	7	IQX	
E - GAL	8	IQX	
J - QZS	1	SLXCZ	
J - QZS	2	SLX	

PLEASE TURN OVER

Sat. System	Freq. Num.	RINEX-3 Signal Priority	
J - QZS	5	IQX	
J - QZS	6	SLX	
C - BDS	1	IQX	
C - BDS	2	IQX	
C - BDS	5	DPX	
C - BDS	6	IQX	
C - BDS	7	IQX	
C - BDS	8	DPX	
•			
I - IRN	5	ABCX	
I - IRN	9	ABCX	
S - SBS	1	С	
S - SBS	5	IQX	

The observation codes priority is **LCDS**: phase, code, doppler, signal strength. It defines the basis for the selection of the other obs. types of that frequency if existing. You can update the internal signal priority list providing update records via the -pr3rx2 command line parameter. According to the upper table it should consist of a comma separated list of a satellite system identifier, colon, frequency number, colon and the signal priority string. Observation types not covered by the priority string are simply ignored via conversion. See the following example.

```
-pr3rx2 G:5:QXI,I:59:CXAB
```

The same priority string per satellite system for different frequencies can be given combined.

3.3.4.3 Used Observation Types

The observation types per satellite system used for the format conversion can be found as **COMMENT**s in the RINEX file header.

```
WARNING - FORMAT CONVERSION
                                             * COMMENT
  The data values: observation, loss of lock (LLI) and \quad * COMMENT
  signal strength (SSI) indicators are left as they are. * COMMENT
   The LLI meaning differs between versions 2 and 3 * COMMENT
                                            * COMMENT
    and the Interpretation of bit 1 and 2 has to be
              used with caution !!!
                                             * COMMENT
COMMENT
RINEX 3 -> 2 TYPE CONVERSION DETAILS:
                                               COMMENT
                                               COMMENT
  C C1I -> C1
                                               COMMENT
  C C6I -> C6
                                               COMMENT
  C C7I -> C7
                                               COMMENT
  C D1I -> D1
                                               COMMENT
  C L1I -> L1
                                               COMMENT
  C L6I -> L6
                                               COMMENT
                                               COMMENT
  C L7I -> L7
```



20	C S1I -> S1	COMMENT
	C S6I -> S6	COMMENT
	C S7I -> S7	COMMENT
		COMMENT
	E C1X -> C1	COMMENT
	E C5X -> C5	COMMENT
	E C7X -> C7	COMMENT
	E C8X -> C8	COMMENT
	E D1X -> D1	COMMENT
	E L1X -> L1	COMMENT
30	E L5X -> L5	COMMENT
	E L7X -> L7	COMMENT
	E L8X -> L8	COMMENT
	E S1X -> S1	COMMENT
	E S5X -> S5	COMMENT
	E S7X -> S7	COMMENT
	E S8X -> S8	COMMENT
		COMMENT
	G C1C -> C1	COMMENT
	G C2X -> C2	COMMENT
40	G C5X -> C5	COMMENT
	G D1C -> D1	COMMENT
	G L1C -> L1	COMMENT
	G L2W -> L2	COMMENT
	G L5X -> L5	COMMENT
	G C2W -> P2	COMMENT
	G S1C -> S1	COMMENT
	G S2W -> S2	COMMENT
	G S5X -> S5	COMMENT

3.3.4.4 Remark

To avoid the selection of an obs. type with sparse observations using Signal Priorities mode it can be useful to add the **-rsot** command line parameter (remove sparse observations obs. types) in addition.

```
gfzrnx -finp pots0070.150
                                                  -fout pots0070.15o_rx2 -vo 2 -rsot 40
gfzrnx -finp POTS00DEU_R_201500700_01D_30S_MO.rnx -fout pots0070.150
```

Operation / Tasks 36

3.4 RINEX File Nominal Renaming Support (2/3)

A fast file name conversion of RINEX-3 files with RINEX-2 style file names to RINEX-3 style file names is supported. It can be used without reading the input files using all necessary information from the RINEX-2 style file name and from information provided via command line parameters (useful for compressed files).

For uncompressed observation files, including hatanaka compressed files, some required information can also be derived from the file header.

The supported RINEX-2 style file names are:

Name	Example	Description
nnnnddd0.yyt	pots1230.15o	daily obs. file
	pots1230.15d	daily obs. file (hatanaka compressed)
nnnnddd[a-z].yyt.	pots123a.15n	hourly nav. file
nnnnddd[a-z]mm.yyt	pots123×15.15m	sub-hourly met. file

The renaming support can be invoked via the **-nomren23** (nominal rename) command line parameter. The output is the RINEX-3 file name (printed to STDOUT) which can be used for renaming operations. The input can be a full path, the output is the file name only.

```
gfzrnx -finp pots1230.15n -nomren23
POTS00XXX_R_20151230000_01D_GN.rnx

gfzrnx -finp /tmp/data/pots1230.15n -nomren23
POTS00XXX_R_20151230000_01D_GN.rnx
```

Using -nomren23 command line parameter the following additional information s,mr,iso has to be be provided via command line, because they are not available from the RINEX-2 style file name or RINEX file header.

	Information	Values	Default
s	data source	R or S	R
mr	marker/receiver number	mr	00
iso	iso country code	ISO	XXX

```
gfzrnx -finp pots1230.15n -nomren23 DEU,12
POTS12DEU_R_20151230000_01D_GN.rnx

gfzrnx -finp pots1230.15g -nomren23 S,DEU,12
POTS12DEU_S_20151230000_01D_RN.rnx

gfzrnx -finp pots1230.15m -nomren23 DEU
POTS00DEU_R_20151230000_01D_00U_MM.rnx
```

Via the -4to9 command line parameter one can provide multiple site identifier information from a provided configuration file. See the **Automatic Output File Naming** section for details on -4to9.

```
gfzrnx -finp pots1230.15o -nomren23 -4to9 four2nine.conf
gfzrnx -finp tash1230.15o -nomren23 -4to9 four2nine.conf
```

There are default mappings from extension letter to the RINEX-3 data type identifier:

Extension	Data Type
0	_MO.rnx

PLEASE TURN OVER



Extension	Data Type
d	_MO.crx
n	_GN.rnx
g	_RN.rnx
I	_EN.rnx
С	_CN.rnx
q	_JN.rnx
j	_JN.rnx
h	_SN.rnx
р	_MN.rnx
m	_MM.rnx

All other extension letters end up with **XX.rnx**.

```
gfzrnx -finp pots1230.15b -nomren23 DEU,12
POTS12DEU_R_20151230000_01D_XX.rnx
```

To support additional extensions this default mappings can be overwritten or extended via the **-extsysdt23** command line parameter, providing a comma separated list of extension letter-colon-data type pairs.

```
gfzrnx -finp pots1230.15b -nomren23 DEU,12 -extsysdt23 b:SA,j:JN POTS12DEU_R_20151230000_01D_SA.rnx
```

Meteo- and Navigation files don't have additional information which can be derived from the file header. For observation files the data frequency and satellite system can be derived from the "INTERVAL" and "SYS / # / OBS TYPES" RINEX header records. For compressed files this information can be provided via the command line parameters -smp and -satsys.

Here some examples, including hatanaka compressed files:

```
gfzrnx -finp pots1230.15o.gz -nomren23 DEU -smp 30 -satsys G
POTSOODEU_R_20151230000_01D_30S_GO.rnx.gz

gfzrnx -finp pots1230.15o.gz -nomren23 DEU -smp 30 -satsys GR
POTSOODEU_R_20151230000_01D_30S_MO.rnx.gz

gfzrnx -finp pots1230.15d.gz -nomren23 DEU -smp 30 -satsys GR
POTSOODEU_R_20151230000_01D_30S_MO.crx.gz

gfzrnx -finp pots1230.15d.gz -nomren23 DEU
POTSOODEU_R_20151230000_01D_00U_MO.crx.gz
```

Using the following RINEX-3 header information:

```
E 6 C1X C5X L1X L5X S1X S5X SYS / # / OBS TYPES
G 8 C1C C1P C2C C2P L1P L2P S1P S2P SYS / # / OBS TYPES
R 8 C1C C1P C2C C2P L1P L2P S1P S2P SYS / # / OBS TYPES
10.000 INTERVAL
```

leads to the following file names:

```
gfzrnx -finp pots1230.15o -nomren23 DEU
POTS00DEU_R_20151230000_01D_10S_MO.rnx

gfzrnx -finp pots1230.15d -nomren23 DEU
POTS00DEU_R_20151230000_01D_10S_MO.crx
```

Operation / Tasks 38

A single satellite system file with the following information:

E 6 C1X C5X L1X L5X S1X S5X SYS / # / OBS TYPES 5.000 INTERVAL

leads to the file names:

gfzrnx -finp pots1230.15o -nomren23 DEU
POTSOODEU_R_20151230000_01D_05S_EO.rnx

gfzrnx -finp pots1230.15d -nomren23 DEU
POTSOODEU_R_20151230000_01D_05S_EO.crx

Sub-daily files need the additional duration information if it is not 15 minutes (std.). It can be given via the -d, -duration command line parameter.

gfzrnx -finp pots123b30.15o -nomren23 DEU POTS00DEU_R_20151230130_15m_01S_MO.rnx

gfzrnx -finp pots1230c35.15o.gz -nomren23 DEU -d 300 -smp 5 POTS00DEU_R_20151230235_05M_05S_M0.rnx.gz

3.4.1 Remark

Information provided via command line has priority.



3.5 RINEX File Splice

For the RINEX file splicing one can give an unsorted list of input files of a single station. The observation types order can also differ from input file to input file and an observation type order change inside of a single file is also taken into account.

Simply provide a list of input files and the output file:

```
gfzrnx -finp pots007b.14o pots007a.14o ... pots007x.14o -fout pots0070.14o -kv
```

For bash command shell it can be shortened using filename expansion options.

```
gfzrnx -finp pots007{a..x}.14o -fout pots0070.14o -kv gfzrnx -finp /tmp/pots007{a..x}.14o -fout /tmp/pots0070.14o -kv
```

For csh command shell it is:

```
gfzrnx -finp pots007[a-x].14o -fout pots0070.14o -kv gfzrnx -finp /tmp/pots007[a-x].14o -fout /tmp/pots0070.14o -kv
```

For windows-users in cmd.exe or powershell.exe it is:

This works similar for navigation and meteo files.

```
gfzrnx -finp pots007[a-x].14m -fout /tmp/pots0070.14m --version_out 2 gfzrnx -finp /tmp/pots007[a-x] -fout /tmp/brds0070.14n --version_out 3
```

3.5.1 Observation Data Splice Specials

There are two different splice modes available

3.5.1.1 Standard Mode (default)

The input file order is is derived automatically. In case of overlapping input files the file with less epochs is preferred. This will allow the splice of resubmitted files into an existing "big" file. All output data records are stored in RAM to allow a full data statistics output in the header while reading any input file only once. The output data types are derived by input statistics. This allows to omit "empty" observation types.

3.5.1.2 Fast / RAM save Mode (-splice_memsave)

Via the -splice_memsave only the pure line by line output data block is stored in RAM for a fast output after the RINEX output header is written. Empty observation types are left in the output files because the observation types from the input header information is used to derive the output observation types.

```
gfzrnx -finp pots007[a-x].14o -fout pots0070.14o -kv -splice_memsave
```

3.5.1.3 Direct Mode (-splice_direct)

Via the -splice_direct command line parameter an epoch by epoch output of the observations data can be reached, which leads to a small RAM utilization. Using this mode a full data statistics header output is impossible.

```
gfzrnx -finp pots007[a-x].14o -fout pots0070.14o -kv -splice_direct
```

Operation / Tasks 40

3.5.1.4 Try Append (-try_append)

The -try_append n command line parameter initiates an initial check over all input files if an append to the first file is possible. This can be useful in environments where e.g. a daily file is accumulating e.g. hourly files with time. In case of the append mode the process will be significantly faster. The parameter of -try_append is the shortest nominal file duration (s)of the part files to be appended (e.g. 3600 for hourly files or 900 for 15-min. files).

```
gfzrnx -finp pots007[a-x].14o -fout pots0070.14o -kv -try_append 3600 gfzrnx -finp pots007[a-x].14o -fout pots0070.14o -kv -try_append 3600 -splice_direct
```

3.5.2 Navigation Data Splice Specials

The navigation data splice is based on a majority filter for redundant navigation data records.

There is given a statistics table in the file header giving the information how many files contributed to the outputs per PRN. This can be useful in case of creating nav. summary files for .e.g. one day.

The header statistics table can be avoided via the -no_nav_stk command line parameter.

Here is shown an example header statistics table:

	BRD_TOP										
	BRD_TOP	-									
	BRD_TOP		# of	NAV.	EPOC	HS ba	sed o	n # 0	of FI	LE CON	TRIB.
	BRD_TOP	-									
	BRD_TOP	a									
	BRD_BEG					44.0		405	450	. 50	#EDO
	BRD_HD										
	BRD_LN	CO1									
4.0	BRD_STK BRD_STK BRD_STK	COI	-			1	•	1	. 1	1	6
10	מבה טמם	C02	-	∠ 1	1	•	. 1	1	7	1	0
		003	-	1	•	•	1	•	2	•	4
	BRD_STK	C39		2							2
	BRD_STK										
	BRD_LN	C -	_ 								
	BRD_SUM										250
	BRD_BEG										
	BRD_HD		T	=1	<5	<10	<15	<25	<50	>=50	#EPO
	BRD_LN										
20	BRD_STK	E01	F	4	7	4	1	3	1	•	20
	BRD STK	E01	Т	3	7	3	2	1	3		19
	BRD_STK BRD_STK	E02	F	12	7	2			1	4	26
	BRD_STK	E02	Ι	14	6	2			1	4	27
	BRD_STK	E36	F	5	7			1		4	17
	BRD_STK	E36	Ι	5	7		•	1		4	17
	BRD_LN										
	BRD_SUM										447
	BRD_SUM										461
30	BRD_LN										
	BRD_SUM		-								908
	BRD_BEG					44.0		405	45.0		#EDC
	BRD_HD										
	BRD_LN										
	BRD_STK										
	BRD_STK	G02	-	3	•	•	•	•	1	2	6
	···	a 04					4			0	7
	BRD_STK	631	-	J	I	1	1	•	1	2	,
	BRD_STK BRD_LN	G32	-	3	- 2	•	•	•	1	.2	8
40	RKD_FN	G -									



	BRD_SUM	C	_								214
	_		_								214
	BRD_BEG		т	_1	/ E	~10	21 E	-0 F	/ E0	>-F0	#500
	BRD_HD										
	BRD_LN										
	BRD_STK	102	-	•	5	•	•	•	•	•	5
	BRD_STK BRD_STK	I03	-	1	1		•		•	•	2
	BRD_STK	I04	_	3	•		•	•	•	•	3
	BRD_STK	I05	_	2							2
	BRD_STK	I06	_		5						5
50	BRD_STK	I09	_		1						1
	BRD_LN	I -									
	BRD_SUM										18
	BRD_BEG										
	BRD_HD		т	=1	<5	<10	<15	<25	<50	>=50	#FPN
	BRD_ID	T -									
	BRD_STK	100	-	1	1	•	1	1	•	•	4
	BRD_STK BRD_STK	J02	-	2	1	•	1	1	•	•	5
	BRD_STK	J03	-	2	1	•	1	1	•	•	5
	BRD_STK	J07	-	1	•	1	1	•	•	•	3
60	BRD_LN	J -									
	BRD_SUM	J	-								17
	BRD_BEG	R									
	BRD_HD										
	BRD_LN										
	BRD_STK	R01	_	2	4	4	1	2	2		15
	BRD_STK	R02		2	1	2	1	3	3		12
			_								_
		R26			3	1	4		2		10
	BRD_STK BRD_STK	R27	-	•	5	2		•	3	1	11
	BRD_LN	D -			. .						11
70											
	BRD_SUM		_								330
	BRD_BEG										
	BRD_HD	S	T	=1	<5	<10	<15	<25	<50	>=50	#EPO
	BRD_LN	S -									
	BRD_STK BRD_STK	S22	_			35					35
	BRD_STK	S23	_		23	46		23			92
	BRD_STK	S38				15					15
	BRD_STK										
80	BRD_LN	S -	_ 								
80	BRD_SUM		_								435
	BRD_LN	C C									
	_	5 -									
	BRD_ALL										2172

3.5.2.1 Navigation Data Epoch Filter

Use the -nav_epo_filter command line parameter to filter the navigation records. Only records with **standard** epochs are left in the output file.

Use the -nav_epo_strict command line parameter to filter the navigation records. Only records with nominal epochs are left in the output file.

Use the -nav_latest command line parameter to filter the navigation records. Only the latest record per PRN is left in the output file. In this case the header statistics tables are omitted and the default **prn** output sorting is used.

3.5.2.2 Navigation Data output for GLONASS

With Rinex version 3.05 an additional record was introduced to the GLONASS nav. data block.

Use the -nav_304 command line parameter to output version 3.04 omitting the additional GLONASS record to be compatible to your existing nav. data environment.

3.5.3 Remark - Splice/Split

It is possible to combine the **splice** and **split** operation of **observation data** via a single command line call. Here an example splicing e.g. 15 min. input files and split to hourly files keeping the version in output.

```
gfzrnx -finp pots007[a-x]??.14o -fout /tmp/::RX2:: -kv -split 3600
```

This can be additionally combined with data sampling, satellite system- and observation type selection etc..

3.5.4 Remark - Filename Expansion

3.5.4.1 UNIX

On UNIX systems the file name expansion is usually done by the calling command shell. Please adopt the filename expansion options like "?", "*", "[]", etc. to your used command shell. The "[a-x]" can be also e.g. an a..x in another command shell.

3.5.4.2 MS Windows

MS Windows does not support the file name expansion in its command line interfaces. Therefore this is done within **gfzrnx**. Only "?", "*", "[]" are supported here.



3.6 RINEX File Split

The RINEX file split can be initiated providing a split interval in seconds via -split command line parameter. For the output file the automatic file naming ::RX2/3:: is mandatory. The following command:

```
gfzrnx -finp pots0070.15o -fout /tmp/::RX2:: -split 3600 -kv
```

will split a daily file into hourly files keeping the input file RINEX version and using the RINEX-2 file naming.

```
pots007a.15o pots007b.15o pots007c.15o pots007d.15o pots007e.15o pots007f.15o pots007g.15o pots007h.15o pots007i.15o pots007j.15o pots007k.15o pots007n.15o pots007n.15o pots007n.15o pots007r.15o pots007r.15o pots007r.15o pots007t.15o pots007t.15o pots007t.15o pots007x.15o pots007x.15o
```

The following command:

```
gfzrnx -finp pots0070.150 -fout /tmp/::RX3::00,DEU -split 3600
```

will split a daily file into RINEX-3 hourly files using the RINEX-3 file naming.

```
/tmp/POTS00DEU_R_20150070000_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070100_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070300_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070300_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070500_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070500_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070500_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070700_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070900_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150070900_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071100_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071200_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071300_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071400_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071500_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071600_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071700_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071900_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150071900_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150072000_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150072100_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150072100_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150072100_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150072100_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150072100_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150072300_01H_30S_MO.rnx /tmp/POTS00DEU_R_20150
```

3.6.1 Remark - Split/Splice

It is possible to combine the **split** with a **splice** operation of observation data. See splice section for details.

3.7 RINEX File Output Epoch Interval

3.7.1 Supported Date/Time/Epoch Formats

3.7.1.1 Date

Date Type	Abbreviation	Example
MJD	MJD	56753
GPSweekWeekday	WWWWD	17870
YearDayofyear	YYYYDDD	2014096
YearMonthDay	YYYYMMDD	20140406
Year-Month-Day	YYYY-MM-DD	2014-04-06

3.7.1.2 Time

Time Type	Abbreviation	Example
HourMinuteSecond	HHMMSS	123000
Hour:Minute:Second	HH:MM:SS	12:30:00

3.7.1.3 Epoch

An Epoch string can be formed connecting any Date-string via '_' with a Time-string.

Date Type	Example
MJD	56753 ₋ 123000
GPSweekWeekday	17870_12:30:00
YearDayofyear	2014096_123000
YearMonthDay	20140406_12:30:00
Year-Month-Day	2014-04-06_123000

3.7.2 Dedicated Output Epoch Interval

To extract a dedicated epoch interval from a RINEX-file you have to provide a Start-Epoch via **-epo_beg** and the Duration **-d** or **-duration** in seconds.

Here an example to extract the first hour of a daily input file.

```
gfzrnx -finp pots0070.15o -fout pots007a.15o -epo_beg 2015-01-07_000000 -d 3600 gfzrnx -finp pots0070.15o -fout pots007a.15o -epo_beg 2015007_00:00:00 -d 3600 gfzrnx -finp pots0070.15o -fout pots007a.15o -epo_beg 20150107_000000 -d 3600
```

3.7.3 Strict Epoch interval (-sei)

If you want, that your output epoch interval strictly follows a RINEX file naming, you can give the -sei command line parameter to omit all data, which don't fit to the implicitly given epoch interval of your input or output file name. You have to use the parameters **in,out** to the -sei switch to indicate if either the input- or the output filename has to be used for the strict epoch interval handling.

```
gfzrnx -finp pots0070.15o -fout pots007a.15o_chk -chk -sei in gfzrnx -finp pots0070.15o -fout pots007a.15o_smp -smp 30 -sei out
```

The last example extracts the first hour from the daily input file including a data sampling operation.



3.7.4 Extend Navigation File Boundaries (-enb)

Navigation information files contain often records which don't correspond to the nominal time interval given via the in/out file names. To avoid the elimination of data extending the nominal time interval one can extend the interval to be checked via the **-enb** command line parameter. The check time interval will be extended at both boundaries by the number of seconds given. Choose a reasonable value to ensure the quality of the output file.

gfzrnx -finp grac182n.15f -fout ::RX3::FRA -f -sei in -enb 86400

Helmholtz Centre

3.8 RINEX File Manipulation

The following manipulations are useful mainly to shrink an input file to a size and content really needed for the analysis purpose. All these manipulations can be combined with the other described operations.

3.8.1 Data Sampling (-smp)

Provide the sampling rate [sec] and the optional tolerance range [sec] to link an observation epoch to its nominal epoch via -smp command line parameter. This parameter can be given for any gfzrnx operation.

```
-smp num[:eps]
```

For observation data the default tolerance range (eps) is 0.5 times of the input sampling rate taken from the INTERVAL header element.

In case the INTERVAL header element is not available or not mandatory (e.g. meteorological data) the default tolerance range (eps) is 0.5 times of the via "-smp" specified sampling rate (num).

```
gfzrnx -finp pots0070.15o -fout pots0070.15o_rx3_5min -smp 300
gfzrnx -finp pots0070.15o -fout pots0070.15o_rx3_5min -smp 300:0.5
```

3.8.1.1 LLI shift

The LLIs (Loss of Lock Indicator) of the unused data epochs between two sample epochs are shifted to the sample epoch if you provide the -smp_lli_shift command line parameter. Otherwise the LLIs of the sample epoch data are left as they are and the information is lost. The use of this option slows down the sampling operation.

```
gfzrnx -finp pots0070.15o -fout pots0070.15o_rx3_5min -smp 300:0.5 -smp_lli_shift
```

3.8.1.2 REMARK

If more than one observation epoch is found in the tolerance range only the nearest to the nominal epoch is used. Having several observation epochs within a tolerance range slows down the sampling process, especially for observation files. You can fasten the sampling process providing a reasonable tolerance range (eps) on the command line. The default tolerance ranges are:

Sampling Rate	Default eps
>= 1 s	0.5 s
< 1 s	5 ms

3.8.2 Satellite System Selection (-satsys)

If you are interested in a subset of satellite systems only you can use the -satsys command line parameter to provide your wished satellite system. All other satellite systems are omitted in the output file.

```
-satsys <string>
```

The satellite systems string (string) consists of Satellite system letters (G-GPS, R-Glonass, E-Galileo, C-Beidou ...).

```
gfzrnx -finp pots0070.150 -fout pots0070.150_rx3_GR -satsys GR
gfzrnx -finp pots0070.15o -fout pots0070.15o_rx3_GRE -satsys GRE
gfzrnx -finp pots0070.15o -fout pots0070.15o_rx2_G
                                                     -satsys G
                                                                 --version_out 2
```

3.8.3 PRN Selection (-prn, -no_prn)

For RINEX Observation files one can use a PRN selection/deselection via -prn and -no_prn command line parameters to include/exclude specific PRNs in the RINEX or statistics output. Both parameters can be mixed (-no_prn is



prioritized). Simply provide a comma separated list of PRNs or PRN-ranges.

```
gfzrnx -finp pots0070.15o -fout pots0070.15o_rx3_small -prn G01,G05-20,R01-24,C05,C06 \
-no_prn G10,R05-7,R10
```

3.8.4 Observation Types Selection (-obs_types)

If you are interested in a subset of observation types only, you can use the **-obs_types** command line parameter to provide your wished observation types via a comma separated list of pattern.

The observation types selection works via a pattern matching mode. The pattern matching is done left aligned (e.g. L,L2,L2C or 1,1C).

Here some examples:

3.8.4.1 RINEX-2

The input file contains the following observation types.

```
8 C1 D1 L1 L2 P2 D2 S2 S1 P1# / TYPES OF OBSERV
```

Select code and phase observations only.

```
gfzrnx -finp pots0070.15o -fout pots0070.15o --obs_types P,C,L
```

The result will be a file containing the following observation types only.

```
5 C1 L1 L2 P1 P2 # / TYPES OF OBSERV
```

The following command line

```
gfzrnx -finp pots0070.150 -fout pots0070.150 --obs_types P2,C,L
```

will result in a file containing the following observation types, omitting the P1 observable too.

```
4 C1 L1 L2 P2 # / TYPES OF OBSERV
```

3.8.4.2 RINEX-3

In a simple case it works same way as for RINEX-2. For RINEX-3 it is possible to do the selection down to the satellite systems. One has to concatenate the global and the satellite system dependent definitions via the + character. For satellite system dependent selections you have to start with the satellite system character and colon.

```
list can be: [S:]OT1,OT2,...[+S:OT3,OT4,...][+...]

S - satellite system [CEGJRS]

OT - observation type identifier
```

A satellite system dependent record replaces fully a global one.

Here is a global selection over all satellite systems (simple mode) selecting phase and code observations only:

```
gfzrnx ... -obs_types L1,L2,C1,C2
```

Here a selection of frequencies only:

```
gfzrnx ... -obs_types 1,2
```

Here is a global selection with special selections for C (Beidou) and G (GPS).

Helmholtz Centre

```
gfzrnx ... -obs_types L1,L2,C1,C2+C:L1,L7,C1,C7+G:L1C,L2W,C1,C2
```

Remove of Sparse Observation Types (-remove_sparse_obs_types)

One can give a limit in % which can be used to eliminate sparse observation types. The basis is the median of the number of observations per single observation type.

```
gfzrnx -finp pots0070.15o -fout pots0070.15o_ok --remove_sparse_obs_types 5
{\tt gfzrnx -finp\ pots0070.15o -fout\ pots0070.15o \_ok\ -rsot\ 5}
```

3.8.6 Keep all Observation Types (-kaot)

For GNSS observation files complete empty observation types are removed by default. Complete empty PRN data records are removed too. To keep all these data use the "-kaot" command line parameter.

Observation Types Sorting (-ots)

```
-ots <CPLSD>[:<attribute>]
```

The default observation types output sorting order is alphanumeric. To control the observation types output order (GNSS obs. files only) a string of the first observation types letters should be given. To order by frequency first the following attributes are possible:

attribute	order by
frqasc	frequency & obs. type (ascending)
frqdsc	frequency & obs. type (descending)
frq <frq-list></frq-list>	distinct given comma separated list of frequencies
froasc	obs. type & frequency (ascending)
frodsc	obs. type & frequency (descending)
fro <frq-list></frq-list>	distinct given comma separated list of frequencies

Some examples:

```
-ots PCLDS
-ots CL
-ots PCLDS:frqasc
-ots PCLSD:frq1,5,7
-ots PCLDS:frodsc
-ots PCLDS:fro1,5,7
```

The following obs type order on input:

```
21 C1C L1C D1C S1C L1P D1P L1W D1W S1W D2C S2C C2W L2W SYS / # / OBS TYPES
  D2W S2W C2X L2X S2X C5X L5X S5X
```

creates the following output order using different -ots parameters:

-ots CPLDS

```
21 C1C C2W C2X C5X L1C L1P L1W L2W L2X L5X D1C D2C D1P SYS / # / OBS TYPES
  D1W D2W S1C S2C S1W S2W S2X S5X
                                                       SYS / # / OBS TYPES
```

-ots CPLDS:frqasc



```
G 21 C1C L1C L1P L1W D1C D1P D1W S1C S1W C2W C2X L2W L2X SYS / # / OBS TYPES
D2C D2W S2C S2W S2X C5X L5X S5X SYS / # / OBS TYPES
```

-ots CPLDS:froasc

```
G 21 C1C C2W C2X C5X L1C L1P L1W L2W L2X L5X D1C D1P D1W SYS / # / OBS TYPES D2C D2W S1C S1W S2C S2W S2X S5X SYS / # / OBS TYPES
```

3.8.8 Navigation File Sorting (-nav_sort)

The output order of the navigation records can be controlled via -nav_sort or -ns command line parameter. Two options prn, time are possible.

- In the **time** mode the sorting order is by time and prn.
- In the **prn** mode the sorting order is by prn and time.

The standard mode is **prn**.

```
gfzrnx -finp pots0070.15n -fout pots0070.15o_srt -ns time
```

This can be used for any operation on navigation files (check, splice, split, ...).

```
gfzrnx -finp ????0070.15n -fout brds0070.15n -ns time gfzrnx -finp ????0070.15n -fout ::RX3:: -split 3600 --nav_sort time
```

3.8.9 GPSweek Rollover Correction (-shift_gpsw)

Due to firmware or Rinex converter problems we have seen files which show up with data epochs affected by 1024 week rollovers, which leads to data epoch shifts by a multiple of 1024. The week shift to be added must be provided via the -shift_gpsw command line parameter. The file name epoch needs to be corrected first before using the -shift_gpsw command line parameter. gfzrnx checks if the gpsweek difference between the first data epoch and the filename epoch is a multiple of 1024. only in this case the epoch shift will be applied.

Here one example for the file MAR100DEU_R_20190440015_15M_01S_GO.rnx, where the gpsweek for 20190440015 (2019 02 13) is 2040.

```
OBSERVATION DATA
       3.03
                                          I (IRNSS)
                                                               RINEX VERSION / TYPE
  Convert 2.4
                      NovAtel
                                           20190214 093312 UTC PGM / RUN BY / DATE
  MAR100DEU
                                                               MARKER NAME
  MAR.1
                                                               MARKER NUMBER
  gnss@gfz-potsdam.de GFZ
                                                               OBSERVER / AGENCY
  DCH09470100
                      NOV OEMV1
                                           3.01-TT
                                                               REC # / TYPE / VERS
  DCH09470100
                      NOVSMART-V1
                                      NONE
                                                               ANT # / TYPE
       4 C1C D1C L1C S1C
                                                               SYS / # / OBS TYPES
       1.000
                                                               INTERVAL
10
                                     0.0000000
                                                               TIME OF FIRST OBS
    1999
             6
                  30
                         0
                              15
                                                   GPS
                  30
                              29
                                    59.0000000
                                                               TIME OF LAST OBS
    1999
             6
                          0
                                                   GPS
                                                               END OF HEADER
  > 1999 06 30 00 15 0.0000000 0 12
                                            -0.00000000000
  G01 24177867.102 6
                           3413.676
                                      127055545.211 6
                                                              41.000
  G08 20596455.180 8
                            791.348
                                      108235118.641 8
                                                              49.000
  > 1999 06 30 00 15 1.0000000 0 13
                                            -0.00000000000
  G01 24177217.656 7 3412.410 127052132.391 7
                                                              42.000
20 G08 20596304.750 8
                            789.719
                                      108234328.086 8
                                                              49.000
```

The gpsweek of **1999 06 30** is **1016 (2040-1016=1024)**. The shift by 1024 weeks leeds to the correct data epochs.



gfzrnx -shift_gpsw 1024 -finp MAR100DEU_R_20190440015_15M_01S_G0.rnx -fout MAR100DEU_R_20190440 + 015_15M_01S_GO.rnx_OK

```
3.04
                      OBSERVATION DATA
                                                              RINEX VERSION / TYPE
  Convert 2.4
                                          20190214 093312 UTC PGM / RUN BY / DATE
  gfzrnx-1.12-2370
                      FILE CONVERSION
                                          20190214 142041 UTC COMMENT
  MAR100DEU
                                                             MARKER NAME
  MAR1
                                                             MARKER NUMBER
  gnss@gfz-potsdam.de GFZ
                                                             OBSERVER / AGENCY
               NOV OEMV1
  DCH09470100
                                          3.01-TT
                                                             REC # / TYPE / VERS
                      NOVSMART-V1
                                      NONE
                                                              ANT # / TYPE
  DCH09470100
  G
       4 C1C D1C L1C S1C
                                                             SYS / # / OBS TYPES
       1.000
                                                              INTERVAL
10
             2
                  13
                         0
                                    0.0000000
                                                              TIME OF FIRST OBS
    2019
                              15
    2019
             2
                  13
                         0
                              29
                                   59.000000
                                                  GPS
                                                              TIME OF LAST OBS
                                                             END OF HEADER
  > 2019 02 13 00 15 00.0000000 0 12
                                           -0.00000000000
                                                             41.000
  G01 24177867.102 6
                           3413.676 127055545.211 6
  G08 20596455.180 8
                           791.348
                                     108235118.641 8
                                                             49.000
  > 2019 02 13 00 15 01.0000000 0 13
                                           -0.00000000000
20 GO1 24177217.656 7
                         3412.410 127052132.391 7
                                                             42.000
  G08 20596304.750 8
                            789.719
                                     108234328.086 8
                                                             49.000
```

3.8.10 Antenna Rename (-ant_rename)

Historical files, especially GPS observations files before year 2000, use outdated non IGS conform antenna names. With the -ant_rename command line parameter the antenna names can be updated using the fix implemented table below to have IGS standard conform antenna names in the header. The renaming is documented in the RINEX header via a COMMENT record which is added.

FROM	то
DORNE MARGOLIN ASH	ASH700936A_M
GEODETIC III L1/L2	ASH700718A
GEODETIC L1/L2 L	ASH700228A
GEODETIC L1/L2 P	ASH700228D
MARINE/RANGE	ASHMAR/RANGE
A-C L1	ASHAC_L1
A-C L1/L2	ASHAC_L1/L2
ASH701945.02B	ASH701945B₋M
ASH701946.012	ASH701946.2
ASH701946.022	ASH701946.2
ASH701975.01Agp	ASH701975.01AGP
TR GEOD L1/L2 GP	TRM22020.00+GP
TR GEOD L1/L2 W/O GP	TRM22020.00-GP
TRM10877.10+RGP	TRM12333.00+RGP
JPSMARANT_GGD	JNSMARANT_GGD
TRM10877.10+SGP	TRM11877.10+SGP
	PLEASE THRN OVER

PLEASE TURN OVER



FROM	то
DORNE MARGOLIN LEICA	LEIAT504
LEICA AT201	LEIAT201
LEICA AT202	LEIAT202-GP
LEICA AT302	LEIAT302-GP
LEICA AT202 GP	LEIAT202+GP
LEICA AT302 GP	LEIAT302+GP
LEICA AT303	LEIAT303
LEICA AT501	LEIAT501
LEICA AT502	LEIAT502
LEICA AT503	LEIAT503
MAGELLAN PM-500	MAGPM-500
M-PULSE L1/L2 SURVEY	MPLL1/L2_SURV
MACROMETER X-DIPOLE	MAC4647942
MINIMAC PATCH	MACPATCH
DORNE MARGOLIN B	AOAD/M_B
DORNE MARGOLIN R	JPLD/M_R
DORNE MARGOLIN T	AOAD/M_T
TOPCR3_GGD	TPSCR3_GGD
4000SE INTERNAL	TRM17200.00
4000SL MICRO	TRM12333.00+RGP
4000SLD L1/L2	TRM12562.00+SGP
4000ST INTERNAL	TRM4000ST_INT
4000ST KINEMATIC	TRM14156.00-GP
4000ST L1 GEODETIC	TRM14177.00
4000ST L1/L2 GEOD	TRM14532.00
4000SX MICRO	TRM11877.10+SGP
DORNE MARGOLIN TRIM	TRM29659.00
STXS9+X001A	STXS9PX001A

3.8.11 Antenna Rename Table output (-ant_rename_out)

The table for the antenna rename can be extended or corrected. Via the command line parameter -ant_rename_out one can get the currently used table for extension or correction. The output file is of **json** format.

```
gfzrnx -ant_rename_out
{
    "4000ST L1 GEODETIC" : "TRM14177.00",
    "MINIMAC PATCH" : "MACPATCH",
....
    "MAGELLAN PM-500" : "MAGPM-500",
    "TR GEOD L1/L2 W/O GP" : "TRM22020.00-GP"
}
```

For a direct file output use:

gfzrnx -ant_rename_out -fout ant_rename.json

3.8.12 Antenna Rename Table input (-ant_rename_inp)

If you want to use an own or extended renaming table you can provide it via the <code>-ant_rename_inp</code> command line parameter. It fully overwrites the internal table. The input file must be of <code>json</code> format.

gfzrnx -kv -finp pots0030.95o -fout pots0030.95o_new -ant_rename_inp ant_rename.json



3.9 Handling a Group of Files with a Single Command (-single_file)

Usually a list of input files via "-finp" leads to a splice operation where the output is a single file. To initiate a file by file operation for a group of input files with a single command the command line parameter "-single_file" or "-sifi" has to be used.

For the output file naming the automatic file naming must be used (::RX2::, ::RX3::) or the "::INP::" variable, which means that the output file name is the same as the input file name.

Here an example for a data sampling operation on a group of input files:

```
gfzrnx.exe -finp c:\Rinex10sec\????3050.16o -fout e:\Rinex30sec\::INP:: -smp 30 --single_file
gfzrnx.exe -finp c:\Rinex10sec\????3050.16o -fout e:\Rinex30sec\::RX3:: -smp 30 -sif1
```

```
gfzrnx -finp ????3050.16o -fout ./Rinex30sec/::INP:: -smp 30 --single_file gfzrnx -finp ????3050.16o -fout ./Rinex30sec/::RX2:: -smp 30 -sifl
```

54

3.10 Rinex File Header/Data Editing

RINEX file header editing can be invoked providing a configuration file for the header manipulations to be done. It has to be specified via the -crux command line parameter providing the configuration file name.

There are two modes available:

- Header editing as part of other operations on the input RINEX file.
- Header editing only. Only the header input, editing and check is performed but the data part is simply copied as it is.

In the following examples the configuration file header_crux.txt is used.

3.10.1 **Header Editing (Standard)**

```
gfzrnx -finp mizt1600.15o -fout mizt1600.15o_new -crux header_crux.txt
```

3.10.2 Header Editing (Only)

For the **editing only** mode one has to use the **-hded** option in addition.

```
gfzrnx -finp mizt1600.15o -fout mizt1600.15o_hded -crux header_crux.txt -hded
```

An additional epoch and station identifier has to be given if no standard RINEX file names are used. If no additional information is provided the MARKER NAME and the first data epoch is used if existing. This information is needed to extract the right header editing information from the overall configuration information.

```
gfzrnx -finp file.rnx -fout file.rnx_hded -crux header_crux.txt -hded -epo_beg 2015234_000000 \
                                                                                          -site POTS
gfzrnx -finp file.rnx -fout file.rnx_hded -crux header_crux.txt -hded -epo_beg 2015234_000000 \
                                                                                          -site
                                                                                         POTSOODEU
```

3.10.3 **Editing Operations**

The following operations are supported:

- update single elements of an existing header line (label),
- insert single elements of a non existing header line (label),
- update(insert) a complete header line or multiple header lines per label.
- common string replacement in a string- or regular expression mode,
- renaming of PRN in the header and data part,
- renaming of OBS. types in the header part,
- station-, data type- and epoch interval dependent settings in a single configuration file are possible.

Show Config. File Interpretation (-show_crux)

Due to the variety of input options one can check how the configuration is interpreted in the program. This can be used as a kind of check via the -show_crux option before real use.

```
gfzrnx -crux header_crux.txt -show_crux
gfzrnx -crux header_crux.txt -show_crux -fout crux.log -f
```

The default header edit settings are shown via:



```
gfzrnx -show_crux
```

3.10.5 Configuration file

Formally there are 3 major modes: update_insert, replace or rename delimited by colon.

In case of **rename** a type (prn—obs) hast to be given additionally. The mode definition line has to be followed by an optional data type identifier string (OMN / **O**bs., **M**et., **N**av.) delimited with a hyphen, an optional epoch interval delimited by a hyphen and a valid station identifier (4- or 9-char.) or dot-separated list of station identifiers delimited by a colon. Now the editing definitions can follow.

```
update_insert :
#------
[OMN-][YYYYMMDD:HHMMSS YYYYMMDD:HHMMSS-] ALL:
...
[OMN-][YYYYDDD:SSSSS YYYYDDD:SSSSS-] STA1[.STA2[.STA3...]:
[OMN-][YYYYDDD:SSSSS YYYYDDD:SSSS-] STA1MRCCC[.STA2MRCCC[.STA3MRCCC...]:
...
replace :
#------
[OMN-][YYYYMMDD:HHMMSS YYYYMMDD:HHMMSS-] ALL:
...
[OMN-][YYYYMDD:SSSSS YYYYDDD:SSSS-] STA1[.STA2[.STA3...]:
...
```

Every rename setting has to be done completely on a single line using the following syntax:

```
rename : prn
#------

[ON-][YYYYMMDD:HHMMSS YYYYMMDD:HHMMSS-] - <prn-from> - <prn-to> : ALL

[ON-][YYYYDDD:SSSSS YYYYDDD:SSSSS-] - <prn-from> - <prn-to> : STA1[.STA2[.STA3...]

[ON-][YYYYDDD:SSSSS YYYYDDD:SSSSS-] - <prn-from> - <prn-to> : STA1MRCCC[.STA2MRCCC[.STA3M + RCCC...]

rename : obs
#------

[OM][YYYYMMDD:HHMMSS YYYYMMDD:HHMMSS-] <obs-from> - <obs-to> - <sat.sys> : ALL

[OM][YYYYDDD:SSSSS YYYYDDD:SSSSS-] <obs-from> - <obs-to> - <sat.sys> : STA1[.STA2[.STA3...]

[OM][YYYYDDD:SSSSS YYYYDDD:SSSSS-] <obs-from> - <obs-to> - <sat.sys> : STA1MRCCC[.STA2MRC + CC[.STA3MRCCC...]
```

The following rules have to be taken into account:

- Comment lines have to begin with #.
- The file name station identifier has to be used for the station name.

 At the moment only the 4 char. station identifier is supported (RINEX-2 file naming).
- For non specific station definitions the **ALL** station identifier can be used.
- Omitting the data types identifier extends the validity to all supported data types (OMN).
- Omitting the epoch interval leads to an overall validity.
- Station dependent settings overwrite non specific ALL settings.
- Overlapping epoch intervals for the same header label and station lead to an error.
- The **date** of the epoch interval can be given either as **YYYYDDD** (year, day of year) or **YYYYMMDD** (year, month, day of month)
- The **time** of the epoch interval can be given as **SSSSS** (second of day 0-86399) or **HHMMSS** (hour, minute, second)
- An unlimited begin or end of an epoch interval can be given using zeros in the date and time values (e.g. 0000000:000000)

See also the examples below.

3.10.5.1 Update - Single Header Element

Single header element update/insert can be done providing the label in double quotes, "+"an optional time interval, ":" and the list of index-value pairs enclosed in curly brackets. Every definition should cover only one line!

```
"<label>" [+ YYYYMMDD:HHMMSS YYYYMMDD:HHMMSS] : { k: "<value>", [ [ 1: "<value>" ], ... ] }
"<label>" [+ YYYYDDD:HHMMSS YYYYDDDD:HHMMSS] : { k: "<value>", [ [ 1: "<value>" ], ... ] }
"<label>" [+ YYYYDDD:SSSSS YYYYDDDD:SSSSS] : { k: "<value>", [ [ 1: "<value>" ], ... ] }
...
indexes k,l,... = 0,1,...
```

See some examples below:

```
update_insert :
#-------
0 - POTS.OUST.WINT:
    "REC # / TYPE / VERS" : { 1 : "TRIMBLE NETR9" }

0 - 2015209:00000 00000000:00000 - MIZTOOJPN:
    "APPROX POSITION XYZ" : { 0: "-3857167.6484", 1: "3108694.9138", 2: "4004041.6876" }
    "ANTENNA: DELTA H/E/N" : { 0: "0.1209", 1: "0.0008", 2: "0.0007" }

0 - POTSOODEU:
    "OBSERVER / AGENCY" + 0000000:00000 2013126:86399 : { 0:"automatic", 1:"GFZ" }
    "OBSERVER / AGENCY" + 2013127:00000 0000000:00000 : { 0:"gfz", 1:"GFZ/IHL" }
```

- Multi string elements in the index-value pairs have to be enclosed with double quotes. Please make sure, that the given values don't exceed the elements format length!
- The first header element is at index 0.
- The **site** name used to **search** for site dependent settings in the loaded **crux** information is extracted from the standard RINEX-2/3 input file names. In case of wrong or non standard input file names or in pipe environments the site name has to be provided via the **-site** command line parameter. The **-site** parameter overwrites any otherwise derived site name in general.

3.10.5.2 Supported String Substitutes

The following variable string substitutes are supported to be used via **crux** single header elements updates and **added** COMMENT lines. To be more independent from OS derived values the following environment variables are used with a higher preference if existing.

Table follows on next page ...



Substitute String	Substitute/Example	Description	Environment variables
uSeR	nisn	user name provided by os	USERNAME, USER
pRoGrAm	gfzrnx-1.08-8003	gfzrnx-version-revision	
hOsTnAmE	serv01	simple hostname provided by os	HOSTNAME
hOsTdOmAiNnAmE	hOsTdOmAiNnAmE serv01.gfz-potsdam.de	fully qualified hostname provided by os	HOSTFQDN
dOmAiNnAmE	gfz-potsdam.de	domain name provided by os	USERDOMAIN
tlmEsTaMp	20170712 113126 UTC	20170712 113126 UTC time stamp of current time	

Remark: Please check in advance if you get the right results for your operating system!

```
update_insert :
#---
MNO - ALL:

"COMMENT" : "PG tImesTaMp pRoGrAm uSeR@dOmAiNnAme"

"PGM / RUN BY / DATE" : { 0: "pRoGrAm" , 1: "uSeR@dOmAiNnAme", 2: "tImesTaMp" }
```

For the upper configuration the "PGM / RUN BY / DATE" record will be updated and the "COMMENT" record below will be added:

```
PG 20170712 120203 UTC gfzrnx-1.08-7179 nisn@gfz-potsdam.de COMMENT gfzrnx-1.08-7179 nisn@gfz-potsdam.de 20170713 065255 UTC PGM / RUN BY / DATE
```

If the "COMMENT" string gets longer than 60 characters it will be cutted to 60!

3.10.5.3 Update - Multi Header

Multiple header elements like the "SENSOR MOD/TYPE/ACC" or "SENSOR POS XYZ/H" for meteo data need an additional condition (here the sensor identifiers TD,PR,HR,...). An additional "+ column_number:value" pair has to be added to the label and optional epoch interval information. The column counter starts with 0. Here a crux example block.

Here a **crux** example block.

```
update_insert :
  #----
  M - 2015209:00000 0000000:00000 - ALL :
      "SENSOR MOD/TYPE/ACC" + 3:"TD" : { 0:"Vaisala", 1:"PTU 303/5.14", 2:"0.10" }
      "SENSOR MOD/TYPE/ACC" + 3:"PR" : { 0:"Vaisala", 1:"PTU 303/5.14", 2:"0.05" }
      "SENSOR MOD/TYPE/ACC" + 3:"HR" : { 0:"Vaisala", 1:"PTU 303/5.14", 2:"1.7" }
10
      "SENSOR MOD/TYPE/ACC" + 3:"XX" : { 0:"XXXXXXX", 1:"XXX 125",
                                                                      2:"1.0" }
  M - POTSOODEU :
      "SENSOR POS XYZ/H" + 4:"TD" : { 0:"3275753.9120", 1:"321110.8651", 2:"5445041.8829", 3:"5" }
      "SENSOR POS XYZ/H" + 4:"PR"
                                    : { 0:"3275753.9120", 1:"321110.8651", 2:"5445041.8829", 3:"5" }
      "SENSOR POS XYZ/H" + 4:"HR"
                                    : { 0:"3275753.9120", 1:"321110.8651", 2:"5445041.8829", 3:"5" }
20
      "SENSOR POS XYZ/H" + 4:"XX" : { 0:"3275753.9120", 1:"321110.8651", 2:"5445041.8829", 3:"5" }
```

If an element is not found it will be added (see the "XX" sensor).

See below a small example fore a header manipulation with the initial header and the manipulation result.



```
gfzrnx -finp pots3410.15m -f -fout pots3410.15m_new -crux crux.txt
```

pots3410.15m

```
2.11
                   METEOROLOGICAL DATA
                                                         RINEX VERSION / TYPE
TPP 3.1
                                      2015-12-07 00:01:03 PGM / RUN BY / DATE
                                                         MARKER NAME
pots
         TD HR.
    3
                    PR.
                                                         # / TYPES OF OBSERV
Paroscientific
                  Model 760
                                               0.1
                                                      TD SENSOR MOD/TYPE/ACC
                                               2.0
Paroscientific
                  Model 760
                                                      HR SENSOR MOD/TYPE/ACC
Paroscientific
                 Model 760
                                               0.1 PR SENSOR MOD/TYPE/ACC
 3275756.3423 321111.4422 5445046.8829
                                               0.0000 TD SENSOR POS XYZ/H
               321111.4422 5445046.8829
 3275756.3423
                                               0.0000 HR SENSOR POS XYZ/H
 3275756.3423
               321111.4422 5445046.8829
                                               0.0000 PR SENSOR POS XYZ/H
                                                         END OF HEADER
```

pots3410.15m_new

	2 02	METEODOLOGICAL DATA	DINEY MEDCION / TYPE	
	3.03	METEOROLOGICAL DATA	RINEX VERSION / TYPE	
	TPP 3.1	2015-12-	07 00:01:03 COMMENT	
	RINEX_DB.pm	GFZ FILE CONVERSION 20150807	14:32:19UTCPGM / RUN BY / DATE	
	pots		MARKER NAME	
	Vaisala	PTU 303/5.14	0.1 TD SENSOR MOD/TYPE/ACC	
	Vaisala	PTU 303/5.14	1.7 HR SENSOR MOD/TYPE/ACC	
	Vaisala	PTU 303/5.14	0.1 PR SENSOR MOD/TYPE/ACC	
	3275753.9120	321110.8651 5445041.8829	5.0000 TD SENSOR POS XYZ/H	
	3275753.9120	321110.8651 5445041.8829	5.0000 HR SENSOR POS XYZ/H	
10	3275753.9120	321110.8651 5445041.8829	5.0000 PR SENSOR POS XYZ/H	
	XXXXXX	XXX 125	1.0 XX SENSOR MOD/TYPE/ACC	
	3275753.9120	321110.8651 5445041.8829	5.0000 XX SENSOR POS XYZ/H	
	3 HR	PR TD	# / TYPES OF OBSERV	
			END OF HEADER	

3.10.5.4 **Proposed Use**

There are several possibilities to organize the header editing configuration file. The most clear form would be to organize it per station.

Below you can find a configuration example for the single station POTS covering the whole station history information for **O**bservation and **M**eteo file header entries.

```
update_insert:
  OM - POTS:
  "APPROX POSITION XYZ" : { 0:"3800689.6341", 1:"882077.3857", 2:"5028791.3179" }
  "MARKER NAME" : { 0:"POTS" }
  "MARKER NUMBER"
                        : { 0:"14106M003" }
  "OBSERVER / AGENCY" : { 0:"GFZ", 1:"GFZ" }
10 "REC # / TYPE / VERS" + 1994274:00000 1996015:86340 : { 0:"289", 1:"ROGUE SNR-8000",
  "REC # / TYPE / VERS" + 1996016:49680 1996151:28380 : { 0:"279", 1:"ROGUE SNR-8000",
  "REC # / TYPE / VERS" + 1996151:28860 1999231:00000 : { 0:"289", 1:"ROGUE SNR-8000",
  "REC # / TYPE / VERS" + 1999232:00000 2000232:00000 : { 0:"281", 1:"AOA SNR-8000 ACT",
  "REC # / TYPE / VERS" + 2000233:00000 2009089:000000 : { 0:"281-U",1:"AOA SNR-8000 ACT",
  "REC # / TYPE / VERS" + 2009089:00000 2011046:61200 : { 0:"1358", 1:"SEPT POLARX2",
  "REC # / TYPE / VERS" + 2011046:61200 2011307:52200 : { 0:"205", 1:"JAVAD TRE_G3TH DELTA",...}
  "REC # / TYPE / VERS" + 2011307:52200 2011354:38280 : { 0:"205", 1:"JAVAD TRE_G3TH DELTA",...}
  "REC # / TYPE / VERS" + 2011354:38280 2012164:32400 : { 0:"205", 1:"JAVAD TRE_G3TH DELTA",...}
  "REC # / TYPE / VERS" + 2012164:32400 2013009:36720 : { 0:"205", 1:"JAVAD TRE_G3TH DELTA",...}
  "REC # / TYPE / VERS" + 2013009:36780 2015258:50280 : { 0:"205", 1:"JAVAD TRE_G3TH DELTA",...}
```

```
"REC # / TYPE / VERS" + 2015258:50280 0000000:00000 : { 0:"205", 1:"JAVAD TRE_G3TH DELTA",...}
  "ANT # / TYPE"
                        + 1994301:00000 1995276:28800 : { 0:"261", 1:"AOAD/M_T",
                                                                                        2:"NONE" }
  "ANT # / TYPE"
                        + 1995276:28800 2009105:47700 : { 0:"235", 1:"AOAD/M_T",
                                                                                       2:"NONE" }
  "ANT # / TYPE"
                        + 2009105:47700 2011046:61200 : { 0:"354-U",1:"AOAD/M_T",
                                                                                       2:"NONE" }
  "ANT # / TYPE"
                        + 2011046:61200 0000000:00000 : { 0:"316", 1:"JAV_RINGANT_G3T",2:"NONE" }
  "ANTENNA: DELTA H/E/N"+ 1994301:00000 1995276:28800 : { 0:"0.046", 1:"0", 2:"0" }
  "ANTENNA: DELTA H/E/N"+ 1995276:28800 2009105:47700 : { 0:"0.046", 1:"0", 2:"0" }
30 "ANTENNA: DELTA H/E/N"+ 2009105:47700 2011046:61200 : { 0:"0.046", 1:"0", 2:"0" }
  "ANTENNA: DELTA H/E/N"+ 2011046:61200 0000000:00000 : { 0:"0.121", 1:"0", 2:"0" }
  "SENSOR MOD/TYPE/ACC" + 1996254:00000 2006011:00000 + 3:"PR" : { 0:"Vaisala", 1:"PTB100B",... }
  "SENSOR MOD/TYPE/ACC" + 2006011:00000 0000000:00000 + 3:"PR" : { 0:"Vaisala", 1:"PTU200", ... }
  "SENSOR MOD/TYPE/ACC" + 1996254:00000 2006011:00000 + 3:"HR" : { 0:"Timetech",1:"HC 500", ... }
  "SENSOR MOD/TYPE/ACC" + 2006011:00000 0000000:00000 + 3:"HR" : { 0:"Vaisala", 1:"HMP45A-P",.. }
  "SENSOR MOD/TYPE/ACC" + 1996254:00000 2006011:00000 + 3:"TD" : { 0:"Timetech",1:"PT100", ... }
  "SENSOR MOD/TYPE/ACC" + 2006011:00000 0000000:00000 + 3:"TD" : { 0:"Vaisala", 1:"HMP45A-P",.. }
```

Depending on the first data epoch the appropriate header entry is updated.

3.10.5.5 Remark

There is one exclusion concerning the RINEX header fields manipulation. According to IGS antenna definition (number, antenna + radome) the "ANT \$ / TYPE" record consists of 3 columns, which is a deviation from the RINEX standard.

This means, the standard (A20,A20) RINEX definition is in gfzrnx handled as (A20,A16,A4). A correction record should be of the following form:

```
update_insert :
# -----
POTS:
     "ANT # / TYPE" : { 0:"30336561", 1:"TRM55971.00", 2:"NONE" }
```

3.10.5.6 Complete Header Line(s) Update

For a single line definition one has to give the label name in double quotes followed by an "+" optional epoch interval string followed by a colon and the 60 char. string to be updated or inserted. The multi-line definition has to be enclosed in square brackets as a comma separated list of 60 char. strings with one string per line.

The square brackets have to be given on the first ([) and last (]) 60 char. string definition line.

```
"<label>" [+ YYYYMMDD:HHMMSS YYYYMMDD:HHMMSS ] : [ "<60-char. string>",
                                                    "<60-char. string>",
                                                    "<60-char. string>"]
```

```
update_insert :
    O - 2015010:00000 0000000:00000 - POTS00DEU:
       "OBSERVER / AGENCY" : "Automatic
                                                      Deutsches GeoForschungsZentrum (GFZ)
       "SYS / PHASE SHIFT"
                            : [ "G L1C 0.00000
                                  "J L1C 0.00000
                                  "J L1X 0.25000
                                  "E L1X 0.00000
                                  "C L7I 0.00000
10
                                  "R L1P
                                         0.25000
```



```
"R L2C 0.00000 ",

"R L2P 0.25000 ",

"G L2X -0.25000 ",

"G L5X 0.00000 "]
```

Please keep in mind, that an already existing header label content is completely removed. Only **COMMENT** header lines are appended.

3.10.5.7 Header Label Independent String Replacement

For the string replacement the major mode **replace** has to be used. One has to define the station identifier as before. Afterwards you can define from/to pairs of type **regexp** or **string**. The **regular expression** syntax follows **Perl** syntax. Each pair element (from/to) should be given on a separate line.

The example below shows how to correct an erroneous label name.

```
replace :
#-----
ALL:
    regexp_from : "^(.{60})PGM\s*/\s*RUN\s*BY\s*/\s*DATE\s*$"
    regexp_to : "$1PGM / RUN BY / DATE"
ALL:
    string_from : "PGM/RUN BY/DATE"
    string_to : "PGM / RUN BY / DATE"
```

For the remove of single header label lines on **input** use an empty **regexp_to** (""). To remove all COMMENT lines use:

```
replace :
#-----
ALL:
    regexp_from : "^.{60}COMMENT\s*$"
    regexp_to : ""
```

To remove lines containing the string "ABC DEF" use:

```
replace :
#-----
ALL:
    regexp_from : "^.*ABC DEF.*$"
    regexp_to : ""
```

3.10.5.8 Rename - PRNs

If raw data conversion programs don't assign the right PRN, this can be changed via the **"rename: PRN"** mode. Here the crux configuration syntax:

Here some examples:

```
rename: prn

#------

ON - 20140105:000000 20150101:000000 - E51 - E01: ALL

ON - 20140105:000000 000000000 - E52 - E02 : ABC1.ABC2.ABC3

E51 - E01 : ALL

E52 - E02 : ALL
```

3.10.5.9 Rename - OBS types

```
Helmholtz Centre
```

```
rename: obs
  20140105:000000 20150101:000000 - L2X - L2L - G : ABCD
  20140105:000000 20150101:000000 - L2L - L2X - G : ABCD
  20140105:000000 20150101:000000 - *2* - *1* - C : ALL
  20140105:000000 20150101:000000 - *2 - *1 - C : ALL
10 20140105:000000 20150101:000000 - **X - **L - C : ALL
  20140105:000000 20150101:000000 - *2 - *1 - C : ALL
  20140105:000000 20150101:000000 - **X - **L - G04.G08 : ALL
  20140105:000000 20150101:000000 - *2 - *1 - G04.G08 : ALL
  *2* - *1* - C : ALL
  *2 - *1 - C : ALL
```

3.10.5.10 Remark

You can use 9-char. station names in crux-config-file for the handling of 4-char. station names too! The replace mode is done directly on input, the update_insert and rename modes are done after the whole header has been read.

3.10.6 Header edit via command line (-cx_updins)

Single update_insert header edit options can be provided also via command line using the -cx_updins command line parameter, providing a list of edit options. The site definition has to be given before the header label change option. See an example below Unix:

```
gfzrnx -finp /data1/VALD00CAN_R_20181001200_01H_30S_MO.rnx \
       -fout /data1/VALDOOCAN_R_20181001200_01H_30S_MO.rnx.hded -hded -cx_updins \
'0 - VALD: "APPROX POSITION XYZ" : { 0:"3800689.6341", 1:"882077.3857", 2:"5028791.3179" }' \
'O - VALD: "REC # / TYPE / VERS" : { 0 : "", 1 : "JAVAD TRE_G3TH DELTA", 2 : "3.6.3 Jul,01,2017"'
```

See an example below Windows (swapped single and double quotes):

```
gfzrnx -finp /data1/VALD00CAN_R_20181001200_01H_30S_MO.rnx \
       -fout /data1/VALD00CAN_R_20181001200_01H_30S_MO.rnx.hded -hded -cx_updins \
"O - VALD: "APPROX POSITION XYZ" : { 0:'3800689.6341', 1:'882077.3857', 2:'5028791.3179' }" \
"O - VALD: "REC # / TYPE / VERS" : { O : '', 1 : 'JAVAD TRE_G3TH DELTA', 2 : '3.6.3 Jul,01,2017'"
```

3.10.6.1 Remark

Please pay attention to the different single/double quote use in Windows and Unix based operating systems. Please check in advance with -show_crux the acceptance of your header edit options due to the mixture of different quotation marks after -cx_updins...

```
gfzrnx -show_crux -cx_updins \
'0 - VALD: "APPROX POSITION XYZ" : { 0:"3800689.6341", 1:"882077.3857", 2:"5028791.3179" }' \
'O - VALD: "REC # / TYPE / VERS" : { 0 : "", 1 : "JAVAD TRE_G3TH DELTA", 2 : "3.6.3 Jul,01,2017"'
```

3.10.7 Internal/Data Headers via crux-file (-cx_addinthd)

Meta data changes following e.g. hardware changes can be introduced at the event epochs into the data part of a RINEX file if an information is found in the crux-file. This mechanism can be activated additionally to the normal header edit operations via the -cx_addinthd command line parameter for update_insert crux-settings.



Here a an example:

```
gfzrnx -cx_addinthd -crux obwt_crux.txt -finp obwt107g.18o -fout obwt107g.18o_crx
```

The following crux-configuration

```
update_insert:
0 - 20141105:071700 20180417:060500 - OBWT:
    "REC # / TYPE / VERS" : { 0: "4831K57521", 1: "TRIMBLE NETR5", 2: "Nav 4.87 / Boot 4.18"}
    "ANT # / TYPE" : { 0: "30767802", 1: "TRM55971.00", 2: "TZGD"}
0 - 20180417:061500 00000000:000000 - OBWT:
    "REC # / TYPE / VERS" : { 0: "1705310", 1: "LEICA GR30", 2: "4.20.232"}
    "ANT # / TYPE" : { 0: "09440002", 1: "LEIAR25.R3", 2: "LEIT" }
```

will lead to file header records of e.g.:

```
4831K57521 TRIMBLE NETR5 Nav 4.87 / Boot 4.18REC # / TYPE / VERS
30767802 TRM55971.00 TZGD ANT # / TYPE
```

and a header block in the data part of a RINEX-2 file of:

```
127921488.413 6 99494529.138 8 23913582.523
    23913577.070
                                                                         42.100
          33.300
    23773818.648
                   127129528.196 4
                                                                         38.700
   18 04 17 06 15 00.0000000 4 2
                                                             REC # / TYPE / VERS
  1705310
                      LEICA GR30
                                          4.20.232
  09440002
                                                             ANT # / TYPE
                      LEIAR25.R3
                                     LEIT
   18 04 17 06 15 00.0000000 0 16G02G05G07G09G13G27G28G30R06R07R08R09
                                 R10R16R23R24
    24247477.484
                  127421298.588 6 99289349.307 6 24247479.359
                                                                         42.200
10
          25.500
    21028794.141 110507030.196 7 86109402.765 9 21028797.266
                                                                         49.300
```

3.10.7.1 Remark

Windows users should swap single and double quotes using cx_addinthd similar to cx_updins command line options.

3.10.8 Manipulate Header Version Number (-vnum)

By default the latest supported version number is used for the "RINEX VERSION / TYPE" header element and there are made manipulations to fit to this version. If a special version number is needed (for what ever reason) one can use the -vnum command line parameter to manipulate the version number to a certain value.

```
3.04 OBSERVATION DATA M RINEX VERSION / TYPE

gfzrnx -finp ... -vnum 3.03

3.03 OBSERVATION DATA M RINEX VERSION / TYPE
```

This will change the default output header value e.g. 3.04 to the wished value of 3.03.

3.10.8.1 Remark

The -vnum version number change is only a formal exchange of the version number to fulfill e.g. external circumstances over which one has no influence. The file content will be still conform to highest supported version number I

Operation / Tasks 64

3.11 Rinex File Meta Data Extraction (-meta)

RINEX file meta informations can be extracted from header and data in different output formats.

```
-meta [mode:format] mode=[basic|medium|full], format=[txt|json|jsonp|xml|dump]
```

- The **basic** mode extracts only the header information and the first, last epoch from the RINEX file without reading the whole file (fast).
- The **medium** extends the basic information by real data interval, first/last epochs and number of epochs.
- The **full** mode extends/updates the basic information with information derived from the complete data file like data statistics, the real data interval and so on.
- There are supported the following output **formats**: **txt**(default),**json**,**jsonp**(pretty json),**xml**,**dump** to be used for fast view or further applications.

The **file**-, **site**-, **receiver**-, **antenna**- sections information is derived from the RINEX header part only and the **data**-section holds information derived from the RINEX data part.

Here some simple examples:

```
gfzrnx -finp pots0070.15o -meta basic
gfzrnx -finp pots0070.15o -meta basic:txt
gfzrnx -finp pots0070.15o -meta basic:json -fout pots0070.15o.json
gfzrnx -finp pots0070.15o -meta full:xml -fout pots0070.15o.xml
```

```
gfzrnx -finp POTS00DEU_00001024_FR0_RX3_M0_20180305_000000_01D_30S_GFZ.rnx -meta basic:txt
```

```
antenna:
       height:
             e = 0.0000
            h = 0.1206
            n = 0.0000
        name = JAV_RINGANT_G3T
       number = 316
       radome = NONE
  data:
        epoch:
10
             first = 2018 03 05 00 00 00.0000000
             interval = 30.000
             last = 2018 03 05 23 59 30.0000000
  exec:
        date = 2018-03-06 15:35:05 UTC
       meta = basic
       name = gfzrnx
        version = 1.10-7323
  file:
        epo_first = 2018 03 05 00 00 00.0000000
20
        interval = 30.000
        md5 = 9a49ad078b4bcfbe1d1a2fe4de440de1
       name = POTSOODEU_00001024_FR0_RX3_M0_20180305_000000_01D_30S_GFZ.rnx
       pgm = JPS2RIN v.2.0.134
       pgm_date = 20180305 011547 UTC
       pgm_runby = GFZ ODC
        satsys = EGR
        site = POTSOODEU
        source = R
        sysfrq:
30
            E = 15
             G = 1 2 5
            R = 1 2
        sysobs:
```

```
E = C1X C5X D1X D5X L1X L5X S1X S5X
                   \texttt{G} \ = \ \texttt{C1C} \ \texttt{C1W} \ \texttt{C2W} \ \texttt{C2X} \ \texttt{C5X} \ \texttt{D1C} \ \texttt{D1W} \ \texttt{D2W} \ \texttt{D2X} \ \texttt{D5X} \ \texttt{L1C} \ \texttt{L1W} \ \texttt{L2W} \ \texttt{L2X} \ \texttt{L5X} \ \texttt{S1C} \ \texttt{S1W} \ \texttt{S2W} \ \texttt{S2X} \ \texttt{S5X}
                   R = C1C C1P C2C C2P D1C D1P D2C D2P L1C L1P L2C L2P S1C S1P S2C S2P
            system = M
            systyp:
                   E = C D L S
40
                   G = C D L S
                   R = C D L S
            type = 0
            version = 3.03
    receiver:
           firmware = 3.6.7
           name = JAVAD TRE_G3TH DELTA
           number = 205
    site:
           agency = GFZ
50
           name = POTS
            number = 14106M003
            observer = GFZ
            position:
                   x = 3800689.6341
                    y = 882077.3857
                   z = 5028791.3179
```

gfzrnx -finp pots0070.15o -meta basic:jsonp

```
{"antenna":{"height":{"e":"0.0000","h":"0.1206","n":"0.0000"},"name":"JAV_RINGANT_G3T",
"number":"316","radome":"NONE"},"data":{"epoch":{"first":"2018 03 05 00 00 00.0000000",
"interval":"30.000","last":"2018 03 05 23 59 30.0000000"}},"exec":{"date":"2018-03-06 16:56:40
                                                                                               UTC",
"meta": "basic", "name": "gfzrnx", "version": "1.10-7323"}, "file": {"epo_first":
"2018 03 05 00 00 00.0000000", "interval": "30.000", "md5": "9a49ad078b4bcfbe1d1a2fe4de440de1",
"name": "POTS00DEU_00001024_FR0_RX3_M0_20180305_000000_01D_30S_GFZ.rnx", "pgm": "JPS2RIN v.2.0.134",
"pgm_date":"20180305 011547 UTC","pgm_runby":"GFZ ODC","satsys":"EGR","site":"POTS00DEU",
"source": "R", "sysfrq": {"E": ["1", "5"], "G": ["1", "2", "5"], "R": ["1", "2"]},
"sysobs":{"E":["C1X","C5X","D1X","D5X","L1X","L5X","S1X","S5X"],"G":["C1C","C1W","C2W","C2X",
"C5X","D1C","D1W","D2W","D2X","D5X","L1C","L1W","L2W","L2X","L5X","S1C","S1W","S2W","S2X",
"S5X"], "R":["C1C", "C1P", "C2C", "C2P", "D1C", "D1P", "D2C", "D2P", "L1C",
"L1P","L2C","L2P","S1C","S1P","S2C","S2P"]},"system":"M","systyp":{"E":["C","D","L","S"],
"G":["C","D","L","S"],"R":["C","D","L","S"]},"type":"O","version":"3.03"},
"receiver":{"firmware":"3.6.7","name":"JAVAD TRE_G3TH DELTA","number":"205"},
"site":{"agency":"GFZ", "name":"POTS", "number":"14106M003", "observer":"GFZ",
"position":{"x":"3800689.6341","y":"882077.3857","z":"5028791.3179"}}}
```

gfzrnx -finp pots0070.15o -meta basic:jsonp



```
"first" : "2018 03 05 00 00 00.0000000",
            "interval" : "30.000",
            "last" : "2018 03 05 23 59 30.0000000"
         }
      },
      "exec" : {
         "date" : "2018-03-06 16:55:57 UTC",
20
         "meta" : "basic",
         "name" : "gfzrnx",
         "version" : "1.10-7323"
      },
      "file" : {
         "epo_first" : "2018 03 05 00 00 00.0000000",
         "interval" : "30.000",
         "md5" : "9a49ad078b4bcfbe1d1a2fe4de440de1",
         "name": "POTSOODEU_00001024_FR0_RX3_M0_20180305_000000_01D_30S_GFZ.rnx",
         "pgm" : "JPS2RIN v.2.0.134",
30
         "pgm_date" : "20180305 011547 UTC",
         "pgm_runby" : "GFZ ODC",
         "satsys" : "EGR",
         "site" : "POTSOODEU",
         "source" : "R",
         "sysfrq" : {
            "E" : [
               "1",
               "5"
            ],
40
            "G" : [
               "1",
               "2",
               "5"
            ],
            "R" : [
               "1",
               "2"
            ]
         },
50
         "sysobs" : {
            "E" : [
               "C1X",
               "C5X",
               "D1X",
               "D5X",
               "L1X",
               "L5X",
               "S1X".
               "S5X"
60
            ],
            "G" : [
               "C1C",
               "C1W",
               "C2W",
               "C2X",
               "C5X",
               "D1C",
                "D1W",
                "D2W",
70
                "D2X",
                "D5X",
                "L1C",
                "L1W",
```



```
"L2W",
                 "L2X",
                 "L5X",
                 "S1C",
                 "S1W",
                 "S2W",
80
                 "S2X",
                 "S5X"
             ],
              "R" : [
                 "C1C",
                 "C1P",
                 "C2C",
                 "C2P",
                 "D1C",
                 "D1P",
90
                 "D2C",
                 "D2P",
                 "L1C",
                 "L1P",
                 "L2C",
                 "L2P",
                 "S1C",
                 "S1P",
                 "S2C",
                 "S2P"
100
             ]
          },
          "system" : "M",
           "systyp" : {
              "E" : [
                 "C",
                 "D",
                 "L",
                 "S"
             ],
110
              "G" : [
                 "C",
                 "D",
                 "L",
                 "S"
             ],
              "R" : [
                 "C",
                 "D",
                 "L",
120
                 "S"
             ]
          },
          "type" : "0",
          "version" : "3.03"
       },
       "receiver" : {
          "firmware" : "3.6.7",
           "name" : "JAVAD TRE_G3TH DELTA",
           "number" : "205"
130
       },
       "site" : {
          "agency" : "GFZ",
"name" : "POTS",
           "number" : "14106M003",
```





3.12 Rinex File Comparison (-fdiff)

The comparison of single site RINEX files of the same time interval and from different sources (e.g. real time data, data from different rinex-converters, ...) are often not possible in an easy way. gfzrnx offers a possibility to compare two input files of the same format (major version id.) via the -fdiff command line parameter. NOTE, different observation types orders in the input files are allowed!

```
gfzrnx -fdiff -finp <rinex_file_1> <rinex_file_2>
```

The output is RINEX-3 like, storing only the data epochs and data records where both files differ in the data records. Internal or data headers are ignored.

- If per epoch an observation type exists in both files its numerical difference (file1-file2) is shown.
- If per epoch an observation type is missing in one of the input files the original data value of the corresponding input file is shown (merged).
- For the LLI and SSI values always absolute differences are reported.

```
gfzrnx -fdiff -finp pots0140.16o_1 pots0140.16o_2 -fout pots0140.16o_diff
```

In the header you can find the observation types order and the PRN-statistics of detected differences.

		3.	00			DATA	COMPARI	SON RINEX VERSION / TYPE
								COMMENT
	not	a01/	ı∩ 16	د م 1				FILE_1
	pots0140.16o_1					ribb_1		
	pots0140.16o_2					FILE_2		
								COMMENT
	G	4	C1C	L1	L2	C2W		SYS / # / OBS TYPES
	R	4	C1C	L1	L2	C2P		SYS / # / OBS TYPES
		20						# OF SATELLITES
10		G02		2	1		1	PRN / # OF OBS
		G03		2	1	1	1	PRN / # OF OBS
		G06		2	1	1	1	PRN / # OF OBS

The data or differences part will look like the following example:

```
> 2016 01 14 11 00 00.0000000 0 2
G02
G03
                1
> 2016 01 14 11 00 01.0000000 0 2
           0.052
                          0.098
                                                          0.012
G02
G19 19699748.072 105380370.084
                                    81962499.868
                                                   19699744.832
> 2016 01 14 11 00 02.0000000 0 19
G03 22232325.432 116831670.250
                                    91037637.373
                                                   22232315.592
G06 23394480.604 122938818.380
                                    95796470.667
                                                   23394477.044
G31 23924131.742 125722160.848
                                    97965321.818
                                                   23924126.722
> 2016 01 14 11 00 02.0000000 0 19
```

- In the first epoch the data of two PRNs differ by "1" in the LLI (loss of lock indicator) value for the C1C observation type.
- In the second epoch the PRN G02 differs (file1-file2) by the given values for the observation types C1C, L1,
 - The PRN G19 seems to be fully missing in one of the files or you see a merged record, where an observation type is missing either in the the first or the second file.
- The third epoch seems to be fully missing in one of the files or you see a merged record, where a full PRN or an observation type is missing either in the the first or the second file.

Operation / Tasks

70

3.13 Rinex Hatanaka Compressed Files

Hatanaka RINEX compressed files are not directly supported, but the Hatanaka RINEX compression or decompression can be combined with **gfzrnx** using the standard in/output (via pipes).

The Hatanaka RINEX compression/decompression utilities RNXCMP are free software and can be downloaded from http://terras.gsi.go.jp/ja/crx2rnx.html.

On the following page you can find some examples for the RNXCMP decompression/compression in combination with gfzrnx and gzip compression.

```
Decompression:
  gunzip -c pots0700.17d.Z | crx2rnx - | gfzrnx -kv
                                                              -fout pots0700.17o
  \verb|gunzip -c pots0700.17d.Z | crx2rnx - | \verb|gfzrnx -kv -smp 30 -fout pots0700.17o| \\
  gunzip -c POTS01DEU_R_20170700000_01D_30S_MO.crx.gz | crx2rnx - | gfzrnx -kv
                                                                                        -fout POTS +
                                                                  01DEU_R_20170700000_01D_30S_MO.rnx
10 gunzip -c POTSO1DEU_R_20170700000_01D_01S_MO.crx.gz | crx2rnx - | gfzrnx -kv -smp 30 -fout POTS +
                                                                  01DEU_R_20170700000_01D_30S_MO.rnx
  Compression:
                                    -kv | rnx2crx - | gzip -c > pots0700.17d.gz
  gfzrnx -finp pots0700.17o
  gfzrnx -finp pots0700.17o -smp 30 -kv | rnx2crx - | gzip -c > pots0700.17d.gz
20 gfzrnx -finp POTS01DEU_R_20170700000_01D_30S_MO.rnx | rnx2crx -
                                                                             > POTS01DEU_R_2017070 +
                                                                                 0000_01D_30S_MO.crx
  gfzrnx -finp POTS01DEU_R_20170700000_01D_30S_MO.rnx | rnx2crx - | gzip -c > POTS01DEU_R_20170700 +
                                                                              0000_01D_30S_MO.crx.gz
  cat POTS01DEU_R_20170700000_01D_30S_MO.rnx | gfzrnx
                                                                                     > POTSO1DEU R +
                                                               l rnx2crx -
                                                                        _20170700000_01D_30S_MO.crx
  cat POTS01DEU_R_20170700000_01D_30S_MO.rnx | gfzrnx
                                                               | rnx2crx - | gzip -c > POTSO1DEU_R +
                                                                      _20170700000_01D_30S_MO.crx.gz
30 cat POTS01DEU_R_20170700000_01D_01S_MO.rnx | gfzrnx -smp 30 | rnx2crx -
                                                                                     > POTSO1DEU_R +
                                                                         _20170700000_01D_30S_MO.crx
  cat POTS01DEU_R_20170700000_01D_01S_MO.rnx | gfzrnx -smp 30 | rnx2crx - | gzip -c > POTS01DEU_R +
                                                                      _20170700000_01D_30S_MO.crx.gz
```



3.14 Rinex to Tabular Observations Output

3.14.1 Standard Output

The tabular observations output allows to convert a RINEX observations input file into a data table which can be used for simple visualization or for easier introduction into third party applications like EXCEL, Matlab, etc.. All main options like satellite system selection (-satsys) and/or satellites selection (-prn) and/or observation types selection (-obs_types) and others are supported.

The tabular observation output can be initiated via the **-tab_obs** command line parameter. Here an example for a single satellite and selected observation types:

The last command leads to the following default tabular output extracting phase observations for the PRN G03:

#HD G DATE	TIME	PRN	L1C	L1W	L2W	L2X
OBS G 2015-01-0	07 07:25:00.0000000	G03	134798128.476	134798125.823	105037501.328	105037506.181
OBS G 2015-01-0	07 07:25:30.0000000	G03	134629777.213	134629774.487	104906318.473	104906323.263
OBS G 2015-01-0	07 07:26:00.0000000	G03	134461452.299	134461449.545	104775156.193	104775160.914
OBS G 2015-01-0	07 07:26:30.0000000	G03	134293160.630	134293157.877	104644019.757	104644024.465
0						

Every line begins with a line descriptor (**#HD,OBS**):

Line type	Description			
#HD	header line with column description			
OBS	observation line			

The first columns are fix, showing the: + Line Type + Satellite System, + Date, + Time, + PRN, followed by the **list** of wished or given **observation types** as provided in the satellite system specific header line order.

3.14.2 Date/Time Formats

The Date/Time format can be controlled via the **-tab_date**, **-tab_time** command line parameters. The following pattern describe selected Date/Time formats:

Date Pattern	Example	Description
mjd	57029	M odified J ulian D ate (MJD)
ddd	007	day of year
wwwwd	18263	gps-week,weekday
wwww-d	1826-3	gps-week,weekday
yyyyddd	2015007	year, day of year
yyyy-ddd	2015-007	year, day of year
yyyymmdd	20150107	year, month, day of month
yyyy-mm-dd	2015-01-07	year, month, day of month

PLEASE TURN OVER

Date Pattern	Example	Description
yymmdd	150107	2-digit year, month, day of month
yy-mm-dd	15-01-07	2-digit year, month, day of month

Time Pattern	Example	Description
hhmmss	013516.0000000	hour, minutes, seconds
hh:mm:ss	01:35:16.0000000	hour, minutes, seconds
sod	5716.0000000	seconds of day
fod	0.066157407407407	fractions of day

```
gfzrnx ... -tab_out -tab_date ddd -tab_time sod
```

The above used Date/Time pattern **ddd** and **sod** lead to the output below.

#HD	G DAT	E TIME	PRN	L1C	L1W	L2W	L2X
OBS	G 007	26700.0000000	G03	134798128.476	134798125.823	105037501.328	999999999.999
OBS	G 007	26730.0000000	G03	134629777.213	134629774.487	104906318.473	104906323.263
OBS	G 007	26760.0000000	G03	134461452.299	134461449.545	104775156.193	104775160.914
OBS	G 007	26790.0000000	G03	134293160.630	134293157.877	104644019.757	104644024.465

3.14.3 Column Separator

By default the column **separator** is the **blank** character. Using the **-tab_sep** command line parameter you can choose any character or even string for column separation. In case of the **blank** column separator all missing/empty data values are replaced by **999999999.999**, otherwise they are simply empty.

```
gfzrnx ... -tab_out -tab_date ddd -tab_time sod -tab_sep ','
```

The above command gives you a simple CSV output:

```
#HD,G,DATE,TIME,PRN,L1C,L1W,L2W,L2X

OBS,G,007,26700.0000000,G03,134798128.476,134798125.823,105037501.328,105037506.181

OBS,G,007,26730.0000000,G03,134629777.213,134629774.487,104906318.473,104906323.263

OBS,G,007,26760.0000000,G03,134461452.299,134461449.545,104775156.193,104775160.914

OBS,G,007,26790.0000000,G03,134293160.630,134293157.877,104644019.757,104644024.465

OBS,G,007,26820.0000000,G03,134124902.769,134124900.043,104512909.644,104512914.387
```



3.15 Rinex Standard Extensions/NonConformity

3.15.1 RINEX-2 BDS,QZSS,IRNSS support

As an extension to the RINEX-2.11 standard, the BEIDOU-, QZSS-, IRNSS- satellite systems are formally supported.

3.15.1.1 Navigation file extensions

In the RINEX-2 standard there are no extension letters defined for single system BEIDOU-, QZSS-, IRNSS- single system navigation files. The following characters are used by gfzrnx:

System	Letter	Example
BDS	С	pots0750.17c
QZSS	j	pots0750.17j
IRNSS	i	pots0750.17i

3.15.2 RINEX-2 to RINEX-3 conversion

The RINEX-3.03 standard does not allow an empty attribute identifier (tracking mode or channel) in observation type naming (tna - obs. type—band/frequency—attribute). Converting files from RINEX-2 to RINEX-3 show up the problem to safely map 2-char. to 3-char. obs. type names (e.g. L2 to L2?). As it is not foreseen to have an "unknown" or "converted" attribute identifier the output version used is 3.01 to stay format conform.

3.15.3 Handling of unsupported observation types

gfzrnx is driven by a hardcoded observation types and mapping table conform to the RINEX standards. Running the program for unsupported or non standard observations types leads to an omitting of these data. To avoid this behaviour one has to extend the standard. This can be done with the following procedure:

• Extract the hardcoded table from gfzrnx executable.

```
gfzrnx -out_obs_map
gfzrnx -out_obs_map -fout obs_types_map.txt
```

- Add new obs. types records to the map.
 The information in the columns 2,3,4 are treated as comment only and are not used.
- Run any gfzrnx command call with the modified table.

```
gfzrnx -use_obs_map obs_types_map.txt -finp ...
```

3.15.4 Remark

Please use this feature with special caution!

Be aware that this undermines the given RINEX standard and can be an error source if not used properly.

The generated files should be for internal use only!





List of Figures

1.1	Twitter: @gfzrnx	8
	Unix Terminal - command line	
3.1	Editor Window - ASCII Timeplot per PRN and Observation Type	30