Addressing Modes

A = contents of an address field in the instruction


Immediate Addressing (MIPS uses it)




Data = A


rs: source register rt: destination register

Mips: addi (add immediate)

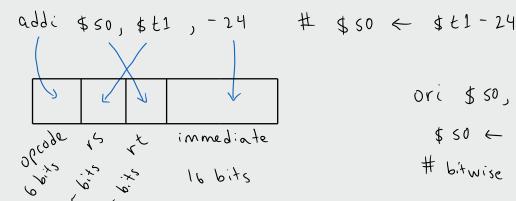


ori \$50, \$11, $0 \times AB05$ \$50 \leftarrow \$11 | $0 \times AB05$ # bitwise OR immediate



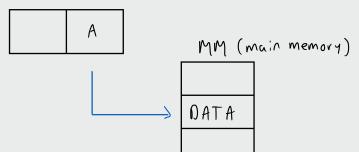


The address field A in the instruction directly specifies the memory location where the data is stored

Indirect Addressing (MIPS doosn't use it)

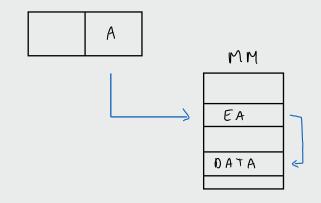


The address field A in the instruction does not contain the actual data's memory location. Instead, A holds a memory address where the effective address (EA) is stored. The processor first retrieves the EA from this memory location, then uses it to access the actual data in main memory.

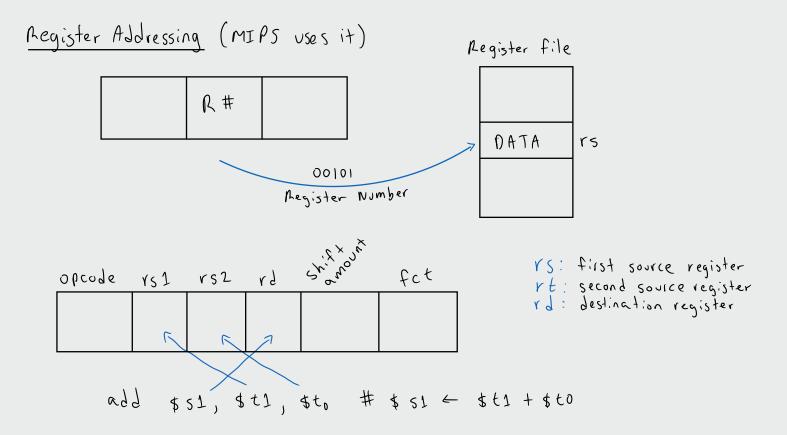

- the instruction contains a Register Number

- the processor retrieves the data from the specified register in the register file - this eliminates the need to access memory, improving speed


REG Indirect Addressing (MIPS doesn't use it)

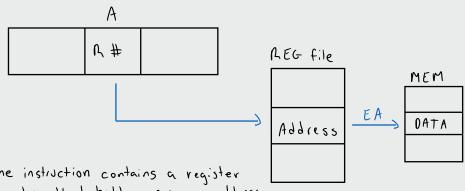

- The instruction contains a register number that holds a memory address.

- the processor fetches the effective address from the specified address in the register file.

- The processor uses this EA to access memory and retrieve data

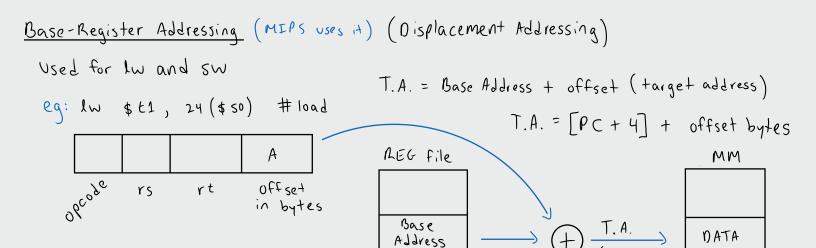

- The base register holds a memory address
- The offset is a signed immediate value included in the instruction
- the processor computes the target address (TA) by adding the offset to the value in the base register
- The TA is then used to access memory

Example

Consider an instruction. The address field of the instruction contains the value 2000.

When needed, register # 18 is used. Register 18 contains the value 1600

The list below shows a few addresses and the memory content of each of those addresses.

	Address	Memory Content	
	(bytes)	Content	_
	48	844	
_	2000	3000	
_	1600	400	
_	2500	800	
	3000	1200	\Rightarrow
	3600	500	

Addressing Mode	Effective Address (bytes)	Value (DATA)
Immediate	_	2000
Direct	2000	3000
Indirect	3000	1200
Register	REG # 18	1600
Register Indirect	1600	400
Displacement	3600	500

We'll refer to the address field of the instruction as A

- Immediate: A contains 2000, grab it immediately

- Direct: A contains 2000, an address of a mem location that contains our data => 3000

- Indirect: A contains 2000, an address of a mem location that contains an address (3000) of a memory location that contains our data => 1200
- Register: Uses the register number given in the instruction (18) which contains our data => 1600
- Register Indirect: Uses the register number given in the instruction (18) which contains an address (1600) of a memory location that contains our data => 400
- Displacement: EA = (Value in base register) + (offset from instruction)
 = Value in base register 18 + offset (2000)
 - = 1600 + 2000 = 3600 => ADDA 3000 contains our data => 500