Instruction Formats

- 3 types: N-formut (register format), I-format (Immediate format), and J-format (Jump format)
- Each 32 bits long
- OPCODE always in bits 26-31 (6 bits wide)
- These 6 bits are sufficient to tell the hardware what we want it to do
- The remaining 26 bits are used for operands for those commands
- The type of format that we use is largely dependent on the operands that we have to use for that instruction

R-format (Register format)

- Contains:

 - · Operation code (6 bits) · 3 register fields (5 bits each)
 - · shift amount field (5 bits)
 - · function code (6 bits)

-> 000000 for R-type instructions

15: first source register rt: second source register

rd: destination register

OP	RS	RT	RD	ShAmt	FCT
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

* eg: add, sub, and, or, slt, sll, srl

- Only format that can handle having 3 registers will frequently have 2 inputs coming from registers, and a third register as a destination
- Useful for a lot of arithmetic instructions
- Sh Amnt will only be used for shift instructions, otherwise it will be set to 0
- FCT gives us a way to control what the ALU is doing

I-format (Immediate format)

- Contains:
 - ·OPCODE (6 bits)
 - · 2 reaister fields (5 hits each)
 - · Imr

mediat	c (16)	P!+?)	24011	
		~		

rs: source register

> vt: destination register

90	RS	RT	Immediate
6 bits	21:42	5 bits	16 bits

* eq: addi, lw, sw, beg, bne, slt

- Used for Add Immediate (addi) instruction where we add some constant value to the contents of a register and store the result in a different register
- Used for load and store instructions, where we have a base address in a register, a constant offset that we put in the instruction, and then some other register that we want to write to
- Branch instructions use the immediate field for a PC-relative offset: She immediate field tells us how far backwards or forwards we want to go from our current position


Addressing Modes

A = contents of an address field in the instruction

Immediate Addressing (MIPS uses it)



eg: addi (add immediate)

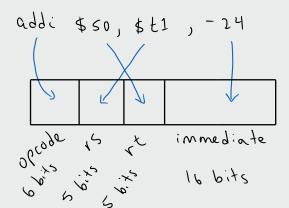

\$50 < \$t1-24


Other I-type instruction

Ori \$50, \$ t1, 0× ABO5

\$50 \leftarrow \$t1 | 0× ABO5


bitwise OR immediate

Direct Addressing (MIPS doesn't use it)

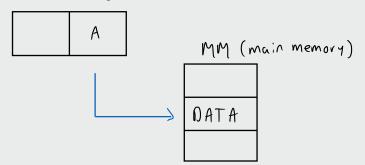


The address field A in the instruction directly specifies the memory location where the data is stored

Indirect Addressing (MIPS doosn't use it)

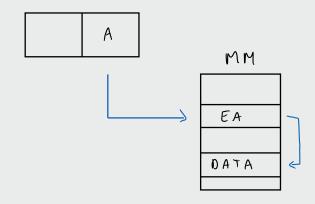


The address field A in the instruction does not contain the actual data's memory location. Instead, A holds a memory address where the effective address (EA) is stored. The processor first retrieves the EA from this memory location, then uses it to access the actual data in main memory.

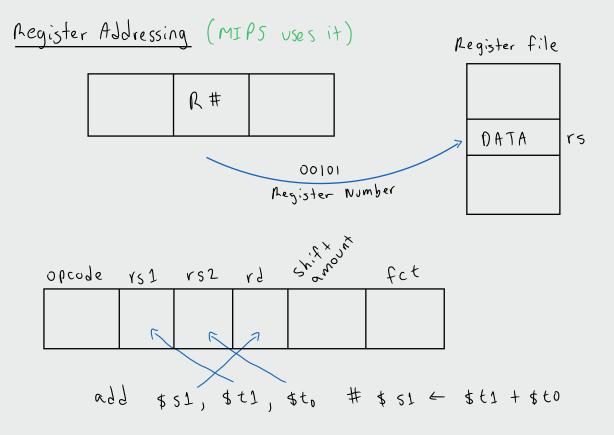

- the instruction contains a Register Number - the processor retrieves the data from the specified register in the register file - this eliminates the need to access memory, improving speed

REG Indirect Addressing (MIPS doesn't use it)

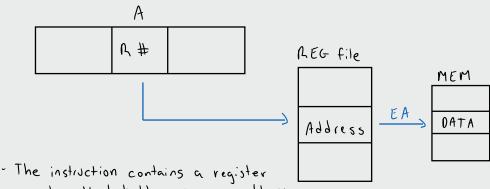

number that holds a memory address.

- The processor fetches the effective address from the specified address in the register file.


- The processor uses this EA to access memory and retrieve data

Base-Register Addressing (Displacement Addressing) (MIPS uses it)

Used for Iw and SW

T.A. = Base Address + offset (target address)

eq: lw \$ t1, 24 (\$ 50) # load

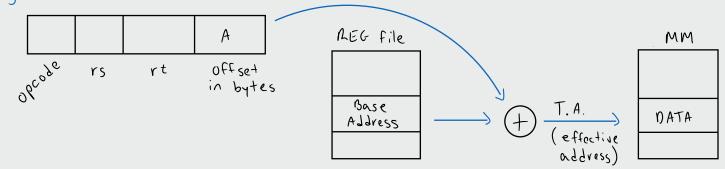


- the base register holds a memory address
- The offset is a signed immediate included in the instruction
- the processor computes the target address (TA) by adding the offset to the value in the base register
- the TA is then used to access memory

Example

Consider an instruction. The address field of the instruction contains the value 2000. When needed, register # 18 is used. Register 18 contains the value 1600.

The list below shows a few addresses and the memory content of each of those addresses.

Address (bytes)	Memory Content
48	844
2000	3000
1600	400
2500	800
3000	1200
3600	500

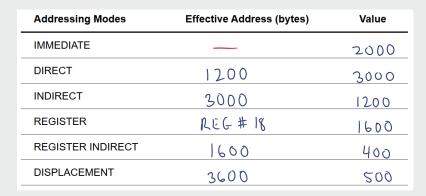

We'll refer to the content of the address field of the instruction as A

=>

- Immediate: A is 2000, grab it immediately
- Direct: A is 2000, an address of a mem location that contains our data => 3000
- Indirect: A is 2000, an address of a mem location that contains an address (3000) of a mem location that contains our data => 1200
- Register: Uses the register number given in the instruction (18) which contains our data \Rightarrow 1600
- Register Indirect: Uses the register number given in the instruction (18) which contains an address (1600) of a mem location that contains our data => 400
- Displacement: EA = (value in base register) + (offset from instruction)
 - = value in register # 18 + offset of 2000
 - = 1600 + 2000 = 3600 => ADDA 3600 contains our data => 500