# MBDyn Theory and Developer's Manual Version develop

Pierangelo Masarati

Dipartimento di Ingegneria Aerospaziale Politecnico di Milano

October 27, 2025

# **Contents**

# List of Figures

# List of Tables

# Introduction

This document describes the formulation MBDyn, the free general-purpose multibody dynamics software, relies on. It also describes implementation-related aspects.

The document is far from complete; in fact, its preparation started at a late stage of the project, when many parts of the software were already completed and in use. From that time on, many modifications and improvements have been steadily documented and, occasionally, the theory manual anticipated the development (as should always happen, I know).

The Developers committed themselves to keeping it at least up to date with new developments; undocumented stuff should be documented as soon as it needs modifications or refactoring.

Alessandro Fumagalli, Marco Morandini and Mattia Mattaboni contributed significantly to this document.

# **Parsing**

In MBDyn there are different levels of parsing. Input file parsing suffers from a scattered and occasionally outdated design. The need to preserve backwards compatibility with existing models restrained so far from entirely redesign it, although selected improvements occur over time.

MBDyn provides support for the implementation of new functionalities, and to parse their input. Parsing is delegated to a dedicated object, the MBDynParser, which inherits from the HighParser, a higher-level parsing object with bits of MBDyn's syntax built-in in a somewhat modular way. It exploits the functionalities of the LowParser, a lower-level parsing object that deals with tokenizing an input stream based on the expected tokens. Whenever appropriate (e.g. whenever a number is expected), control is delegated to the MathParser, which allows to parse and evaluate sequences of mathematical expressions, including variable declaration and definition. Variables are saved in a table as soon as they appear, and can be used by subsequent expressions when the mathematical parser is called again.

The traditional approach to data parsing consists in defining a table of keywords that are looked up and, based on the corresponding key code, by executing the appropriate code in a switch-case block.

The code is being gradually moved to a newer approach based on sets of associative arrays that map keywords to the functional objects that are used to parse the related items.

Although no significant improvement results in parsing of existing data types, this approach allows to register new data types run-time, e.g. from a run-time loaded module, thus easing the extension and the customization of the code.

## 2.1 HighParser

## 2.1.1 Traditional Usage

The HighParser class and its descendants use a KeyTable object containing a list of legal keywords to return a valid keyword index when HighParser::GetWord(), and significantly HighParser::GetDescription() are invoked. The KeyTable can be changed during parsing. KeyTable is a class. Its constructor takes a pointer to an array of strings and a reference to the HighParser object. The last string in the array must be null. The KeyTable class constructor keeps track of previous KeyTable objects in the HighParser, and restores them upon destruction.

The suggested usage inside a stacked call sequence of parsing functions is

```
Part *
read_part(HighParser& HP)
{
    // prepare names
```

```
enum KeyWord { KEYWORD1, KEYWORD2, KEYWORD_LAST };
   char *key_table_array[] = { "keyword1", "keyword2", 0 };
   // build KeyTable class
   KeyTable k(HP, key_table_array);
   Part *returned_object = 0;
   // parse input
   do {
        switch (KeyWord(HP.GetWord())) {
        default:
            // do something...
            break;
        case KEYWORD1:
            // ...and build returned_object
            return returned_object;
        }
   } while (true);
}
void
read_all(HighParser& HP)
   // prepare names
   enum KeyWord { KEY1, KEY2, PART, KEY_LAST };
   char *keytable[] = { "key1", "key2", "part", 0 };
    // build KeyTable class
   KeyTable k(HP, keytable);
   // do something
   Part *part = 0;
   do {
        switch (KeyWord(HP.GetWord())) {
        default:
            // do something...
            break;
        case PART:
            // read part
            Part *part = read_part(HP);
            break;
   } while (true);
}
```

Here the KeyTable set by function read\_all() is automatically restored after the call to read\_part(); read\_part() temporarily changes the KeyTable used by the parser.

## 2.1.2 Table-Driven Usage

The table-driven usage is based on defining a functional object that is able to parse a data type:

```
class Datum {
public:
```

```
virtual ~Datum(void) {};
    };
    struct DatumRead {
        virtual ~DatumRead(void) {};
        virtual Datum *Read(MBDynParser &HP) const = 0;
    };
and a container for its descendants:
    typedef std::string KeyType;
    typedef std::map<KeyType, DatumRead *> DatumMapType;
    DatumMapType DatumMap;
Then, a functional object for each specific datum type is derived from DatumRead ...
    class MyDatum : public Datum {
        // ...
    public:
        Datum(int);
        // ...
    }
    struct MyDatumRead : public DatumRead {
        Datum *Read(MBDynParser &HP) const {
            return new MyDatum(HP.GetInt());
        };
    };
... and stored exactly once into the associative container by means of a dedicated helper:
    bool
    SetDatumRead(KeyType key, DatumRead *rf)
    {
        return DatumMap.insert(DatumMapType::value_type(key, rf)).second;
    }
    // somewhere early in the code ...
    SetDatumRead("mydatum", new MyDatumRead);
    // note: somewhere else later, in the code, place
    for (DatumMapType::iterator i = DatumMap.begin();
        i != DatumMap.end();
        i++)
    {
        delete i->second;
    DatumMap.clear();
The parsing function is something like
    Datum *
    ReadDatum(MBDynParser &HP)
```

```
{
    KeyType key(HP.GetStringWithDelims());
    if (key.c_str() == 0) {
        // error ...
        return 0;
}

DatumMapType::iterator i = DatumMap.find(key);
if (i == DatumMap.end()) {
        // error ...
        return 0;
}

return i->second->Read(HP);
}
```

Only the MyDatum portions need be added for each new datum type; they can be declared, defined and registered anywhere in the code, including in run-time loaded modules.

Currently, drives, constitutive laws and scalar functions are handled according to this scheme; examples are provided in modules/module-drive/, modules/module-constlaw/ and modules/module-scalarfunc/. More types will be reworked accordingly.

## 2.2 LowParser

...

## 2.3 MathParser

...

## **Solvers**

...

## 3.1 Matrix classes

## 3.2 Sparse matrices

## 3.3 Linear solvers

LinearSolver classes wraps linear solvers

SolutionManagers classes deals with the solution of linear systems. They own a pointer to a LinearSolver, where they allocate the underlying linear solver. SolutionManager::MatrInitialize() is called when the structure of the underlying spares matrix changes. SolutionManager::MatrReset(), is called to delete a factorization. It usually calls LinearSolver::Reset(). The matrix has to be explicitly zeroed before a Jacobian matrix assembly.

## 3.4 Non linear solvers

...

## 3.5 Parallel solver

## 3.5.1 Partitioning

iTotVertices is equal to the sum of nodes and elements. It is made in this way because we want the partitioner to generate a twofold subdivision:

- a subdivision related to elements; this subdivision is done in order to share the computational load during the assembly phase;
- a subdivision related to nodes, which is necessary for the solving phase with the substructuring method.

Of course this two partitions must be connected, so we build created a graph which is made of nodes and elements as vertex. The connection between vertexes are only between nodes and elements. There is no node to node or element to element connection.

pVertexWgts contains what we call the computational weight of each entity, so nodes have weight null while elements has a weight related to the dimension of the submatrix of the Jacobian matrix assembled by each one of them.

pCommWgts contains the communication weights (see metis documentation) which are a measure of the quantity of data which needs to be sent if the i-th vertex is part of an interface between different partitions. This means that nodes have a CommWgts equal to the number of DOFs, while elements have a weight equal to any internal DOFs they possess.

## 3.6 Convergence check

MDByn needs to solve a set of nonlinear equations

$$f(x) = 0, (3.1)$$

where f is the so-called residual vector. The standard norm convergence check is based on the norm

$$f = \sqrt{f^T f} \tag{3.2}$$

of vector f. While this often works in practice it has two shortcoming:

- 1. one doesn not know the generalized forces magnitude of the model, that is, a residual norm equal to 1 can be perfectly fine if the order of magnitude of the generalized forces transmitted by the structure is of 1E6, while is not ok if the order of magnitude is 10;
- 2. different components of vector f do have different physical dimensions, and it makes no sense to sum them together.

The relnorm test is designed to solve the first shorcoming. In addition to assembling the residual component  $f_i$  as

$$f_i = \sum_{e=1}^{\text{elements of the model}} f_{i(e)}(\boldsymbol{x}), \tag{3.3}$$

also the absolute values of the different contribution from the elements are assembled into a new vector  $\tilde{f}$  with components

$$\tilde{f}_i = \sum_{e=1}^{\text{elements of the model}} |f_{i(e)}(\boldsymbol{x})|. \tag{3.4}$$

The convergence test is then performed over

$$f = \frac{\sqrt{f^T f}}{\sqrt{\tilde{f}^T \tilde{f}}} \tag{3.5}$$

so that the residual is automatically scaled with respect to the generalized force magnitude appearing in the model

The **sepnorm** test tries to solve both issues. Beside assembling the additional vector  $\tilde{f}$ , just like the **relnorm** test, it partitions the equations into N independent set  $f_{[j]}$  and  $\tilde{f}_{[j]}$ , with  $j \in [1, N]$ , one foreach

physical dimension appearing in the residual vector, so that every components  $f_{i[j]}$  of the subvector  $f_{[j]}$  has the same physical dimension. The relative residual test is then computed independently for each set

$$f_{[j]} = \frac{\sqrt{f_{[j]}^T f_{[j]}}}{\sqrt{\tilde{f}_{[j]}^T \tilde{f}_{[j]}}}$$
(3.6)

and the test returns the worst  $f_{[j]}$ ,  $\max_j(f_{[j]})$ .

In order to identify the set of equations that are inactive (for which either  $\sqrt{\tilde{f}_{[j]}^T \tilde{f}_{[j]}} = 0$  or  $f_{[j]} \approx 1$  because the norms are very small and comes mostly from numerical errors),

1. 
$$f_{[j]} = 0$$
 if  $\sqrt{\tilde{f}_{[j]}^T \tilde{f}_{[j]}} = 0$  AND

2. 
$$f_{[j]} = 0$$
 if  $\sqrt{f_{[j]}^T f_{[j]}} / \sqrt{\tilde{f}_{[j]}^T \tilde{f}_{[j]}} > \epsilon_1$  and  $\sqrt{\tilde{f}_{[j]}^T \tilde{f}_{[j]}} < \epsilon_2 * \max_j \left(\sqrt{\tilde{f}_{[j]}^T \tilde{f}_{[j]}}\right)$ 

where the coefficients  $\epsilon_1$  and  $\epsilon_2$  are hard coded,  $\epsilon_1 = 1.E - 1$  and  $\epsilon_2 = 1.E - 5$ . One could consider, in the future, to allow reading them from the input file.

# **Orientation Handling**

The orientation of structural nodes is handled by storing the orientation matrix of each node, and updating it during prediction and correction by incremental orientations.

The code uses Gibbs-Rodrigues parameters to account for incremental rotations. These parameters allow very efficient implementation, since they only require few algebraic operations to obtain the orientation matrix and related entities. However, they require the absolute value of the orientation to be limited; this requirement is usually overcome by accuracy requirements, so it is not viewed as a strong limitation

One main advantage of this approach is that only three parameters are required to handle orientations. A main drawback of this approach is that it is quite difficult to keep track of how large a change in orientation occurred to a given node, since simply converting the orientation matrix into any other representation of a finite rotation typically results in the minimal rotation that yields that matrix.

MBDyn can output rotations in the following representations:

- Euler angles according to the 123 sequence;
- the orientation vector;
- the orientation matrix.

## 4.1 Euler Angles

Consider an orientation expressed by matrix R. It can be expressed as the result of a precise sequence of rotations about three distinct axes. The 123 sequence means that matrix R is obtained as a sequence of three rotations: the first about axis 1; the second about axis 2 as it results after the first rotation; the third about axis 3 as it results after the second rotation, namely:

$$\mathbf{R}_1 = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos \alpha & -\sin \alpha \\ 0 & \sin \alpha & \cos \alpha \end{bmatrix},\tag{4.1}$$

$$\mathbf{R}_2 = \begin{bmatrix} \cos \beta & 0 & \sin \beta \\ 0 & 1 & 0 \\ -\sin \beta & 0 & \cos \beta \end{bmatrix},\tag{4.2}$$

$$\mathbf{R}_3 = \begin{bmatrix} \cos \gamma & -\sin \gamma & 0\\ \sin \gamma & \cos \gamma & 0\\ 0 & 0 & 1 \end{bmatrix},\tag{4.3}$$

piled up, must equal R:

$$R = R_1 R_2 R_3$$

$$= \begin{bmatrix} \cos \beta \cos \gamma & -\cos \beta \sin \gamma & \sin \beta \\ \sin \alpha \sin \beta \cos \gamma + \cos \alpha \sin \gamma & -\sin \alpha \sin \beta \sin \gamma + \cos \alpha \cos \gamma & -\sin \alpha \cos \beta \\ -\cos \alpha \sin \beta \cos \gamma + \sin \alpha \sin \gamma & \cos \alpha \sin \beta \sin \gamma + \sin \alpha \cos \gamma & \cos \alpha \cos \beta \end{bmatrix}.$$

$$(4.4)$$

The angles can then be computed by means of a simple, partially recursive algorithm:

$$\alpha = -\tan^{-1}\left(\frac{\mathbf{R}_{23}}{\mathbf{R}_{33}}\right) \tag{4.5}$$

$$\beta = \tan^{-1} \left( \frac{\mathbf{R}_{13}}{\cos \alpha \mathbf{R}_{33} - \sin \alpha \mathbf{R}_{23}} \right) \tag{4.6}$$

$$\gamma = \tan^{-1} \left( \frac{\cos \alpha \mathbf{R}_{21} + \sin \alpha \mathbf{R}_{31}}{\cos \alpha \mathbf{R}_{22} + \sin \alpha \mathbf{R}_{32}} \right) \tag{4.7}$$

The use of the function atan2(double dSin, double dCos) eliminates the risk of divisions by zero or of excessive loss of precision.

## 4.2 Orientation Vector

An orientation matrix can be represented as a finite rotation about an axis, in the form

$$\mathbf{R} = \mathbf{I} + \sin\phi \,\,\mathbf{n} \times + (1 - \cos\phi) \,\mathbf{n} \times \mathbf{n} \times \tag{4.8}$$

where  $\phi$  is the amplitude of the rotation and n is the unit vector that represents the rotation axis. Simple algebra manipulation shows that the trace of the orientation matrix corresponds to

$$\operatorname{tr}(\mathbf{R}) = \operatorname{tr}(\mathbf{I}) + (1 - \cos \phi) \operatorname{tr}(\mathbf{n} \times \mathbf{n} \times) \tag{4.9}$$

$$= 3 - 2(1 - \cos\phi), \tag{4.10}$$

since

$$\boldsymbol{n} \times \boldsymbol{n} \times = \boldsymbol{n} \boldsymbol{n}^T - \boldsymbol{I}, \tag{4.11}$$

so

$$\cos \phi = \frac{\operatorname{tr}(\mathbf{R}) - 1}{2}.\tag{4.12}$$

At the same time, the skew-symmetric portion of R is

$$\operatorname{skw}(\mathbf{R}) = \sin \phi \, \mathbf{n} \times , \tag{4.13}$$

SO

$$ax (skw (\mathbf{R})) = \sin \phi \ \mathbf{n} \tag{4.14}$$

which yields the amplitude of the rotation,

$$\sin \phi = \text{norm} \left( \text{ax} \left( \text{skw} \left( \mathbf{R} \right) \right) \right), \tag{4.15}$$

and the direction of the rotation axis,

$$n = \frac{1}{\sin \phi} \operatorname{ax} \left( \operatorname{skw} \left( \mathbf{R} \right) \right), \tag{4.16}$$

while  $\phi$  can be computed from its sine and cosine as

$$\phi = \tan^{-1} \left( \frac{\sin \phi}{\cos \phi} \right). \tag{4.17}$$

# Integration

differential variable: a variable is declared differential in SimulationEntity::GetDofType() by returning DofOrder::DIFFERENTIAL. The increment of the value of a differential variable is equal to  $\Delta x = dCoef\Delta \dot{x}$ . When writing the Jacobian matrix, this must be considered; as a consequence, for an equation f=0 (the residual is -f) the linearization is  $f_{/\dot{x}}+f_{/x}*dCoef)*\Delta \dot{x}=-f$ , as  $dCoef*\Delta \dot{x}=\Delta x$ .

algebraic variable: a variable is declared algebraic in SimulationEntity::GetDofType() by returning DofOrder::ALGEBRAIC.

The increment of the value of an algebraic variable is the increment of the variable.

differential equation: an equation is declared differential in SimulationEntity::GetEqType() by returning DofOrder::DIFFERENTIAL. An equation f=0 must be declared differential if  $f_{/\dot{x}}$  is not null. The residual is -f, and its linearization is:  $(f_{/\dot{x}} + f_{/x} * dCoef) * \Delta \dot{x} = -f$ .

algebraic equation: an equation is declared algebraic in SimulationEntity::GetEqType() by returning DofOrder::ALGEBRAIC. An equation f=0 can be declared algebraic iff  $f_{/\dot{x}}$  is structurally null (e.g. regardless of the values the state may assume) and x is not algebraic. If an equation f(x,t)=0 is declared differential, the residual is -f, and its linearization is:  $f_{/x}*dCoef*\Delta\dot{x}=-f$ . If the equation can be declared algebraic, it can be divided by dCoef: f/dCoef=0, with residual -f/dCoef, and linearization  $f_{/x}*\Delta\dot{x}=-f/dCoef$ . This helps scaling the equations. Clearly, this has no sense if x is algebraic, or if  $f/\dot{x}\neq 0$ .

## 5.1 Nodal rotation

The rotational DOF unknown during AssRes() and AssJac() are the increment of (Gibbs-Rodrigues) rotation parameters with respect to the reference configuration. Of course the increment of the parameter is  $\Delta g = \text{dCoef}\Delta \dot{g}$ . The increment of angular velocity is  $\Delta \omega = G\Delta \dot{g} + \Delta G\dot{g} - \omega_{\text{ref}} \times G\Delta g$ , where G(g) is the tensor relating  $g_{\delta}$  to  $\delta g$ , and  $\omega_{\text{ref}}$  is the nodal reference angular velocity (Wref). We assume G = I and  $\Delta G = 0$ , so that  $\Delta \omega = \Delta \dot{g} - \omega_{\text{ref}} \times \Delta g$  and so  $\Delta \omega = \Delta \dot{g} - \omega_{\text{ref}} \times \Delta \dot{g} * \text{dCoef}$ .

## 5.2 Integrators

Most of MBDyn's integrators are documented in [?, ?], that are distributed verbatim in Appendix ??, respectively.

## **Solution Phases**

## 6.1 Initial Assembly

This phase only involves some of the structural elements. It is intended to ensure that the initial configuration and velocity complies with the constraint equations. It is not performed if the control data block contains the statement skip initial joint assembly.

To allow non-compliant system analysis, the initial configuration and velocity can be changed by this phase. To this purpose, the nodal positions, orientations, velocities and angular velocities are grounded by dummy springs, acting as penalty functions. The springs can be set on a node basis, and separately for configuration and velocity, to allow to selectively enforce the initial configuration.

The problem can be stated as follows:

$$Kx + \phi_{/x}^T \lambda_{\phi} + A^T \lambda_A = Kx_0 + f$$
(6.1)

$$Cv + \phi_{/x}^T \mu = Cv_0 \tag{6.2}$$

$$\phi\left(\boldsymbol{x},t\right) = \mathbf{0}\tag{6.3}$$

$$A(x,t)v + b(x,t) = 0 (6.4)$$

$$\phi_{/x}v + \phi_{/t} = 0 \tag{6.5}$$

where Equation (6.3) and (6.4) respectively contain the holonomic and non-holonomic constraint equations. The solution of this problem leads to the direct determination of an initial configuration and velocity that complies with the constraints.

Unfortunately, this requires the implementation of more constraints than required by the regular solution phases, namely the time derivative of the algebraic constraints that depend only on the configuration.

**NOTE:** Rationale. The rationale of an initial assembly procedure is to drive the problem in a configuration that complies with the kinematic constraints, starting from the configuration that was defined during the input.

Constraint equations can be partitioned in holonomic,

$$\phi(x,t) = \mathbf{0} \tag{6.6}$$

and non-holonomic, which are usually expressed as linear in the coordinate derivatives,

$$\mathbf{A}(\mathbf{x},t)\dot{\mathbf{x}} + \mathbf{b}(\mathbf{x},t) = \mathbf{0} \tag{6.7}$$

It is legitimate that  $\phi(x_0^{(0)}, t_0) \neq \mathbf{0}$ , or that  $A(x_0^{(0)}, t_0)v_0^{(0)} + b(x_0^{(0)}, t_0) \neq \mathbf{0}$ , where the subscript 0 indicates the initial condition, and the superscript (0) indicates the values provided at input. In such cases, a procedure is sought that provides  $x_0$  and  $v_0$ . Since the problem in many cases is underdetermined (as the number of constraint equations is less than the number of degrees of freedom of the unconstrained problem), a criterion is needed to determine the correction to the input configuration.

A minimum norm correction is obtained by requiring that the solution complies with the constraints and, at the same time, departs as little as possible from the configuration that was provided at input, namely

The problem can be reformulated as

$$W_{x}\left(x_{0}-x_{0}^{(0)}\right)+\phi_{/x}^{T}\lambda_{\phi}=0$$
(6.9a)

$$W_{\boldsymbol{v}}\left(\boldsymbol{v}_{0}-\boldsymbol{v}_{0}^{(0)}\right)+\boldsymbol{\phi}_{/\boldsymbol{x}}^{T}\boldsymbol{\mu}_{\boldsymbol{\phi}}+\boldsymbol{A}^{T}\boldsymbol{\mu}_{\boldsymbol{\psi}}=\boldsymbol{0}$$
(6.9b)

$$\phi(\mathbf{x}_0, t_0) = \mathbf{0} \tag{6.9c}$$

$$\phi_{/x}(x_0, t_0)v_0 + \phi_{/t}(x_0, t_0) = \mathbf{0}$$
 (6.9d)

$$A(x_0, t_0)v_0 + b(x_0, t_0) = 0$$
 (6.9e)

After (incomplete) linearization, the problem can be solved as

$$\begin{bmatrix}
W_{x} & 0 & \phi_{/x}^{T} & 0 & 0 \\
0 & W_{v} & 0 & \phi_{/x}^{T} & A^{T} \\
\phi_{/x} & 0 & 0 & 0 & 0 \\
0 & \phi_{/x} & 0 & 0 & 0 & 0 \\
0 & A & 0 & 0 & 0
\end{bmatrix}
\begin{cases}
\Delta x_{0} \\
\Delta v_{0} \\
\Delta \lambda_{\phi} \\
\Delta \mu_{\phi} \\
\Delta \mu_{\psi}
\end{cases} = 
\begin{cases}
W_{x} \left(x_{0}^{(0)} - x_{0}\right) - \phi_{/x}^{T} \lambda_{\phi} \\
W_{v} \left(v_{0}^{(0)} - v_{0}\right) - \phi_{/x}^{T} \mu_{\phi} - A^{T} \mu_{\psi} \\
-\phi \\
-\dot{\phi} \\
-Av_{0} - b
\end{cases} (6.10)$$

The problem can be decomposed in two formally independent subproblems,

$$\begin{bmatrix} \mathbf{W}_{x} & \boldsymbol{\phi}_{/x}^{T} \\ \boldsymbol{\phi}_{/x} & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \Delta \mathbf{x}_{0} \\ \Delta \boldsymbol{\lambda}_{\phi} \end{Bmatrix} = \begin{Bmatrix} \mathbf{W}_{x} \begin{pmatrix} \mathbf{x}_{0}^{(0)} - \mathbf{x}_{0} \end{pmatrix} - \boldsymbol{\phi}_{/x}^{T} \boldsymbol{\lambda}_{\phi} \\ -\boldsymbol{\phi} \end{Bmatrix}$$
(6.11)

$$\begin{bmatrix} \mathbf{W}_{v} & \boldsymbol{\phi}_{/x}^{T} & \mathbf{A}^{T} \\ \boldsymbol{\phi}_{/x} & \mathbf{0} & \mathbf{0} \\ \mathbf{A} & \mathbf{0} & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \Delta \mathbf{v}_{0} \\ \Delta \boldsymbol{\mu}_{\phi} \\ \Delta \boldsymbol{\mu}_{\psi} \end{Bmatrix} = \begin{Bmatrix} \mathbf{W}_{v} \left( \mathbf{v}_{0}^{(0)} - \mathbf{v}_{0} \right) - \boldsymbol{\phi}_{/x}^{T} \boldsymbol{\mu}_{\phi} - \mathbf{A}^{T} \boldsymbol{\mu}_{\psi} \\ -\dot{\boldsymbol{\phi}} \\ -\mathbf{A}\mathbf{v}_{0} - \mathbf{b} \end{Bmatrix}$$
(6.12)

where the latter depends on the former since  $\phi$ , A, and b may depend on  $x_0$ .

The problems may couple again when, in order to influence the solution, one adds to the right hand side of Eq. (6.9a) some relatively arbitrary contributions that can be interpreted as the residual of an equilibrium,

$$W_x \left( x_0 - x_0^{(0)} \right) + \phi_{/x}^T \lambda_{\phi} = r(x_0, v_0, a_0, t_0)$$
 (6.13)

where r may include position, velocity, and even acceleration-dependent loads. By selectively activating what appears in r, one would drive the minimization towards a solution that finds the desired trade-off

between staying close to the input configuration and, at the same time, tries to minimize the strain energy, or the gravitational potential energy, or whatever is desired.

For example, one could set  $\mathbf{r} = \mathbf{f}(t_0) - \mathbf{K}\mathbf{x}_0$  to account for a dead load  $\mathbf{f}(t_0)$ , e.g. the weight. By carefully crafting the weight matrix  $\mathbf{W}_{\mathbf{x}}$  (e.g. by setting it to zero if the stiffness matrix  $\mathbf{K}$  is not singular), one could allow the nodes to depart from their initial configuration and obtain the static equilibrium configuration directly with the initial assembly.

(OUTDATED?) NOTE: this is a work in progress. A new procedure is being considered, which requires only the use of the constraint equation  $\phi$  and its Jacobian matrix  $\phi_{/x}$ .

The problem that is solved with the new procedure is:

• solve for configuration and holonomic constraints first

$$Kx + \phi_{/x}^T \lambda_{\phi} = Kx_0 + f \tag{6.14}$$

$$\phi\left(\boldsymbol{x},t\right) = \mathbf{0}\tag{6.15}$$

• then solve for non-holonomic ones,

$$Cv + A^T \lambda_A = Cv_0 \tag{6.16}$$

$$A(x,t)v + b(x,t) = 0 ag{6.17}$$

keeping the configuration x fixed, so that only the configuration is required to comply with the constraint equations, and the same constraint Jacobian matrix and residual of the regular steps are required;

• finally, after convergence, the following equation is considered:

$$\phi_{/x}v + \phi_{/t} = 0 \tag{6.18}$$

which uses the Jacobian matrix of the constraint equations; only the derivative of the time-dependent constraints is required.

The number of rows of matrix  $\phi_{/x}$  is equal to the number of degrees of freedom that are constrained, so typically the matrix must be underdetermined. It can be decomposed as

$$\phi_{/x}^{T} = QR = \begin{bmatrix} Q_1 & Q_2 \end{bmatrix} \begin{bmatrix} R_1 \\ 0 \end{bmatrix}$$
(6.19)

SO

$$Q_1^T v + R_1^{-T} \phi_{/t} = 0 ag{6.20}$$

becomes a compatibility test for the initial velocities. There are two possible choices:

- 1. the initial configuration assessment fails if the given initial velocities, after the correction occurring during the position and orientation assessment and correction phase, do not pass test (6.20);
- 2. the initial velocities v are corrected into  $v_c$  by projecting them in the space that is compatible with the constraints, e.g.:

$$\boldsymbol{v}_c = \boldsymbol{v} - \boldsymbol{Q}_1 \left( \boldsymbol{Q}_1^T \boldsymbol{v} + \boldsymbol{R}_1^{-T} \boldsymbol{\phi}_{/t} \right) \tag{6.21}$$

The initial assembly procedure can be repeated until test (6.20) passes.

A consistent implementation of this approach is not available yet; it requires the availability of the time derivatives of the constraint equations, which is an open issue since it is not well understood what is the physical meaning of knowing the time derivatives of a constraint. Implementation issues are still open as well.

## 6.2 Initial Value Problem

### **6.2.1** Initial Derivatives

The so-called "derivatives" phase can be thought as computing the initial value of the highest order derivatives at  $t = t_0$  before any iteration starts. For simplicity, think of an explicit Ordinary Differential Equation (ODE) problem like

$$\dot{\mathbf{y}} = \hat{\mathbf{f}}(\mathbf{y}, t) \tag{6.22}$$

with the initial value of  $t(0) = t_0$  and  $\mathbf{y}(0) = \mathbf{y}_0$ ; then, the computation of  $\dot{\mathbf{y}}(0)$  is trivial. Now, the actual problem is Differential Algebraic (DAE) and implicit, i.e. something like

$$f(\dot{\mathbf{y}}, \mathbf{y}, t) = 0 \tag{6.23}$$

(actually, it's a bit more complicated, since it's index 3), and we still need to compute the derivatives  $\dot{y}(0)$  of the differential variables, and the algebraic variables as well, which in the above representation are hidden in the  $\dot{y}$ . During the regular solution phase (i.e. the Newton iteration) we solve a problem of the form

$$f_{/\dot{y}}\Delta\dot{y} + f_{/y}\Delta y = -f \tag{6.24}$$

and, according to the integration formula that we are using,

$$\Delta y = \mathsf{dCoef} \cdot \Delta \dot{y} \tag{6.25}$$

where  $dCoef = b_0 h$  is essentially the time step h times some coefficient  $b_0$  specific for the integration formula; it is 1/2 for Crank-Nicolson, 2/3 for BDF and so on. So the actual iteration is

$$\left(f_{/\dot{y}} + \text{dCoef} \cdot f_{/y}\right) \Delta \dot{y} = -f.$$
 (6.26)

To avoid the need to implement a dedicated routine to compute the initial value of  $\dot{y}$ , we iterate over the above reported problem, ideally with a time step of 0, which means that  $f_{/y}$  is not considered. However, since the problem is differential algebraic, the Jacobian matrix  $f_{/\dot{y}}$  can be structurally singular, so the time step must be greater than 0, but small enough to let the correction

$$\Delta y = \mathsf{dCoef} \cdot \Delta \dot{y} \tag{6.27}$$

be negligible with respect to  $\Delta \dot{\boldsymbol{y}}$ .

Assuming the above is true, during this phase the update procedure of the Newton iteration is modified. Instead of computing

$$\dot{\boldsymbol{y}}^{(i+1)} = \dot{\boldsymbol{y}}^{(i)} + \Delta \dot{\boldsymbol{y}} \tag{6.28a}$$

$$\mathbf{y}^{(i+1)} = \mathbf{y}^{(i)} + \mathsf{dCoef} \cdot \Delta \dot{\mathbf{y}},\tag{6.28b}$$

the "derivatives" update actually consists in

$$\dot{\boldsymbol{y}}^{(i+1)} = \dot{\boldsymbol{y}}^{(i)} + \Delta \dot{\boldsymbol{y}} \tag{6.29a}$$

$$\mathbf{y}^{(i+1)} = \mathbf{y}^{(i)};$$
 (6.29b)

namely, the initial value of y is preserved. This corresponds to performing a Newton iteration with an incomplete Jacobian matrix. For this purpose, nodes and elements that need to take this into account when updating internal states can provide a DerivativesUpdate method (declared in SimulationEntity).

To conclude, the "derivatives coefficient" defined in the input file is the "dCoef" of Eq. (6.26), which can be interpreted as the time step of a "fake" initial step that is used to compute the initial value of the highest order derivatives. It should be as small as possible, but too small makes the problem ill-conditioned (and 0 makes it structurally singular). The default value is usually fine (it rarely needs to be set, unless something really strange is going on).

If the initial derivatives phase requires more than one iteration this may mean that the system is impulsively loaded with inappropriate initial values of states; In this case, the number of iterations can be increased, by setting

```
derivatives coefficient: 1e-9;
derivatives tolerance: 1e-6;
derivatives max iterations: 10;
```

in the initial value block. If the solution does not converge, you should enable iterations output, adding

```
output: iterations;
```

in the initial value block. If you notice that the error settled to some value, and does not reduce as iterations progress, this means that the incomplete update of Eqs. (6.29) is preventing the problem from converging, because the initial value of y is compatible with the constraints but does not satisfy equilibrium.

In this case, one can play with the derivatives coefficient parameter, to emphasize the "inertia" terms instead of the "elastic" ones, or simply increase the derivatives tolerance so that the solution with the current derivatives coefficient is considered converged. The latter choice may result in a "rough" behavior of the solution during the initial steps of the simulation.

### 6.2.2 Dummy Steps

TODO

#### 6.2.3 Regular Steps

TODO

## **6.3** Inverse Dynamics Problem

In principle, an inverse dynamics problem consists in computing the 'torques' (actuator forces) required to comply with equilibrium for a given configuration (position, velocity and acceleration) of the entire system.

In practice, in many cases the motion of the system is not directly known in terms of the coordinates that are used to describe it, but rather in terms of the prescribed motion of the 'joints' (the actuators) that apply the unknown torques. As a consequence, an inverse kinematics problem needs to be solved first, to determine the configuration of the system up to the acceleration level as a function of the motion prescribed to the end effector up to the acceleration level. Section 6.3.2 deals with the case of a fully actuated problem, i.e. a problem whose motion is completely prescribed in terms of joint coordinates. Section 6.3.4 deals with the case of an underactuated problem, i.e. a problem whose motion is only partially prescribed in terms of joint coordinates.

In many cases, even the motion of the actuators is not directly known. On the contrary, the motion of another part of the system (called the 'end effector') is prescribed, and the actuators' motion required

to move the end effector as prescribed needs to be computed. As a consequence, the inverse kinematics problem is driven by the motion prescribed to the end effector rather than directly to the joints. This case is specifically dealt with in Section 6.3.5.

### 6.3.1 Nomenclature

In the following, x are the n coordinates that describe the motion of the system;

$$\phi\left(x\right) = 0\tag{6.30}$$

are b so-called 'passive' constraints, namely those that describe the assembly of the system;

$$\vartheta\left(\boldsymbol{x}\right) = \boldsymbol{\theta} \tag{6.31}$$

are j so-called 'joint coordinates', namely those that describe the motion  $\theta$  of the joints, with  $\phi_{/x}\vartheta_{/x}^+\equiv 0$ ;

$$\psi\left(\boldsymbol{x}\right) = \boldsymbol{\alpha}(t) \tag{6.32}$$

are c so-called 'control constraints', namely equations that prescribe the motion of the end effector, with  $\phi_{/x}\psi_{/x}^+\equiv 0$ . When the joint motion is directly prescribed,  $\theta\equiv\alpha(t)$  and thus  $\vartheta(x)\equiv\psi(x)$ . In some cases, a partial overlap may exist between the two sets of equations.

## 6.3.2 Fully Actuated, Collocated Problem

In this case,  $\psi(x) \equiv \vartheta(x)$  and c = j = n - b.

**Inverse Kinematics: Position Subproblem** 

$$\phi\left(\boldsymbol{x}\right) = \mathbf{0} \tag{6.33a}$$

$$\psi\left(x\right) = \alpha \tag{6.33b}$$

using Newton-Raphson:

$$\begin{bmatrix} \phi_{/x} \\ \psi_{/x} \end{bmatrix} \Delta x = \left\{ \begin{array}{c} -\phi(x) \\ \alpha - \psi(x) \end{array} \right\}. \tag{6.34}$$

**Inverse Kinematics: Velocity Subproblem** 

$$\phi_{/x}\dot{x} = 0 \tag{6.35a}$$

$$\psi_{/x}\dot{x} = \dot{\alpha} \tag{6.35b}$$

or

$$\begin{bmatrix} \phi_{/x} \\ \psi_{/x} \end{bmatrix} \dot{x} = \left\{ \begin{array}{c} 0 \\ \dot{\alpha} \end{array} \right\}. \tag{6.36}$$

Inverse Kinematics: Acceleration Subproblem

$$\phi_{/x}\ddot{x} = -\left(\phi_{/x}\dot{x}\right)_{/x}\dot{x} \tag{6.37a}$$

$$\psi_{/x}\ddot{x} = \ddot{\alpha} - (\psi_{/x}\dot{x})_{/x}\dot{x} \tag{6.37b}$$

or

$$\begin{bmatrix} \phi_{/x} \\ \psi_{/x} \end{bmatrix} \ddot{x} = \begin{cases} -(\phi_{/x}\dot{x})_{/x}\dot{x} \\ \ddot{\alpha} - (\psi_{/x}\dot{x})_{/x}\dot{x} \end{cases}. \tag{6.38}$$

### **Inverse Dynamics Subproblem**

$$M\ddot{x} + \phi_{/x}^T \lambda + \psi_{/x}^T c = f \tag{6.39}$$

or

$$\begin{bmatrix} \phi_{/x} \\ \psi_{/x} \end{bmatrix}^T \begin{Bmatrix} \lambda \\ c \end{Bmatrix} = f - M\ddot{x}. \tag{6.40}$$

The matrix of the Newton-Raphson problem for the position is identical to the matrices of the linear problems for the velocity and the acceleration, while the inverse dynamics problem uses its transpose, so the same factorization can be easily reused.

## 6.3.3 Fully Actuated, Non-Collocated Problem

In this case,  $\psi(x) \neq \vartheta(x)$ , but still c = j = n - b.

### Inverse Kinematics: Position, Velocity and Acceleration Subproblems

The position, velocity and acceleration subproblems that define the inverse kinematics problem are identical to those of the collocated case of Section 6.3.2.

## **Inverse Dynamics Subproblem**

$$M\ddot{x} + \phi_{/x}^T \lambda + \vartheta_{/x}^T c = f \tag{6.41}$$

or

$$\begin{bmatrix} \phi_{/x} \\ \vartheta_{/x} \end{bmatrix}^T \begin{Bmatrix} \lambda \\ c \end{Bmatrix} = f - M\ddot{x}. \tag{6.42}$$

The inverse dynamics problem uses a different matrix from the transpose of that that was used for the inverse kinematics subproblems.

### 6.3.4 Underdetermined, Underactuated but Collocated Problem

In this case, again  $\psi(x) \equiv \vartheta(x)$  but c = j < n - b.

## **Inverse Kinematics: Position Subproblem**

Constraint equations:

$$\phi\left(x\right) = 0\tag{6.43a}$$

$$\psi\left(\boldsymbol{x}\right) = \boldsymbol{\alpha}(t) \tag{6.43b}$$

with  $\phi_{/x}$  and  $\psi_{/x}$  rectangular, full row rank. The problem is underdetermined; as a consequence, some criteria are needed to find an optimal solution.

The problem can be augmented by

$$K(x - x_0) + \phi_{/x}^T \lambda + \psi_{/x}^T \mu = 0$$

$$(6.44)$$

This nonlinear problem is solved for x,  $\lambda$  and  $\mu$  to convergence  $(K, \phi_{/x})$  and  $\psi_{/x}$  may further depend on x). It corresponds to a least-squares solution for  $x - x_0$ , where the quadratic form

$$J_{\boldsymbol{x}} = \frac{1}{2} \left( \boldsymbol{x} - \boldsymbol{x}_0 \right)^T \boldsymbol{K} \left( \boldsymbol{x} - \boldsymbol{x}_0 \right) \tag{6.45}$$

is minimized subjected to  $\phi = 0$  and  $\psi = \alpha$ , and weighted by matrix K;  $x_0$  is a reference solution. Matrix K can further depend on x.

The reference solution  $x_0$  can be used to further control the quality of the solution. For example, it may represent a prescribed tentative, although possibly incompatible, trajectory. Another option consists in augmenting  $J_x$  with another quadratic form

$$J_{x} = \frac{1}{2} (x - x_{0})^{T} K (x - x_{0}) + w_{x} \frac{1}{2} (x - x_{\text{prev}})^{T} M (x - x_{\text{prev}})$$

$$(6.46)$$

where  $x_{prev}$  is the value of x at the previous time step. This modified quadratic form weights the rate of change of x within two consecutive steps. As a consequence, minimal position changes (i.e. velocities), weighted by the mass of the system, are sought. The corresponding problem is

$$K(x - x_0) + w_x M(x - x_{\text{prev}}) + \phi_{/x}^T \lambda + \psi_{/x}^T \mu = 0$$
(6.47a)

$$\phi\left(\boldsymbol{x}\right) = \mathbf{0} \tag{6.47b}$$

$$\psi\left(x\right) = \alpha,\tag{6.47c}$$

or

$$(K + w_x M) x + \phi_{/x}^T \lambda + \psi_{/x}^T \mu = K x_0 + w_x M x_{\text{prev}}$$

$$(6.48a)$$

$$\phi\left(x\right) = 0\tag{6.48b}$$

$$\psi\left(\boldsymbol{x}\right) = \alpha. \tag{6.48c}$$

Using Newton-Raphson:

$$\begin{bmatrix} \boldsymbol{K} + w_{x}\boldsymbol{M} & \phi_{/x}^{T} & \psi_{/x}^{T} \\ \phi_{/x} & 0 & 0 \\ \psi_{/x} & 0 & 0 \end{bmatrix} \begin{cases} \Delta x \\ \Delta \lambda \\ \Delta \mu \end{cases} = \begin{cases} \boldsymbol{K} (\boldsymbol{x}_{0} - \boldsymbol{x}) + w_{x}\boldsymbol{M} (\boldsymbol{x}_{\text{prev}} - \boldsymbol{x}) - \phi_{/x}^{T} \lambda - \psi_{/x}^{T} \mu \\ -\phi(\boldsymbol{x}) \\ \alpha(t) - \psi(\boldsymbol{x}) \end{cases}$$

$$(6.49)$$

## **Inverse Kinematics: Velocity Subproblem**

Constraint first derivative:

$$R(\dot{x} - \dot{x}_0) + \phi_{/x}^T \lambda + \psi_{/x}^T \mu = 0$$

$$(6.50a)$$

$$\phi_{/x}\dot{x} = 0 \tag{6.50b}$$

$$\psi_{/x}\dot{x} = \dot{\alpha}. \tag{6.50c}$$

In analogy with the position constraint case, it corresponds to minimizing the quadratic form

$$J_{\dot{x}} = \frac{1}{2} \left( \dot{x} - \dot{x}_0 \right)^T R \left( \dot{x} - \dot{x}_0 \right), \tag{6.51}$$

which can be augmented as well, resulting in

$$J_{\dot{\boldsymbol{x}}} = \frac{1}{2} \left( \dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0 \right)^T \boldsymbol{R} \left( \dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0 \right) + w_{\dot{\boldsymbol{x}}} \frac{1}{2} \left( \dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_{\text{prev}} \right)^T \boldsymbol{M} \left( \dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_{\text{prev}} \right), \tag{6.52}$$

to minimize the velocity increment between two consecutive time steps. The corresponding problem is

$$(\mathbf{R} + w_{\dot{x}}\mathbf{M})\dot{\mathbf{x}} + \phi_{/x}^T \lambda + \psi_{/x}^T \mu = \mathbf{R}\dot{\mathbf{x}}_0 + w_{\dot{x}}\mathbf{M}\dot{\mathbf{x}}_{\text{prev}}$$
(6.53a)

$$\phi_{/x}\dot{x} = 0 \tag{6.53b}$$

$$\psi_{/x}\dot{x} = \dot{\alpha},\tag{6.53c}$$

or

$$\begin{bmatrix}
R + w_{\dot{x}}M & \phi_{/x}^T & \psi_{/x}^T \\
\phi_{/x} & 0 & 0 \\
\psi_{/x} & 0 & 0
\end{bmatrix}
\begin{cases}
\dot{x} \\
\lambda \\
\mu
\end{cases} = 
\begin{cases}
R\dot{x}_0 + w_{\dot{x}}M\dot{x}_{\text{prev}} \\
0 \\
\dot{\alpha}
\end{cases}.$$
(6.54)

The constraint derivative problem is linear in  $\dot{x}$ ; the same symbols  $\lambda$  and  $\mu$  are used for the multipliers since they are ineffective (their value is never used). The problems can be solved sequentially. Only in case  $K \equiv R$  and  $w_x \equiv w_{\dot{x}}$  both problems use the same matrix and thus the same factorization can be reused.

#### **Inverse Dynamics Subproblem**

The second derivative of the constraint cannot be resolved as in the fully actuated case, otherwise it could yield accelerations that cannot be imposed by the constraints. On the contrary, the inverse dynamics problem of Eq. (6.39) is directly solved, yielding both the accelerations and the torques,

$$M\ddot{x} + \phi_{/x}\lambda + \psi_{/x}c = f \tag{6.55a}$$

$$\phi_{/x}\ddot{x} = -\left(\phi_{/x}\dot{x}\right)_{/x}\dot{x} \tag{6.55b}$$

$$\psi_{/x}\ddot{x} = \ddot{\alpha} - (\psi_{/x}\dot{x})_{/x}\dot{x}$$
(6.55c)

or

$$\begin{bmatrix} M & \phi_{/x}^{T} & \psi_{/x}^{T} \\ \phi_{/x} & 0 & 0 \\ \psi_{/x} & 0 & 0 \end{bmatrix} \begin{Bmatrix} \ddot{x} \\ \lambda \\ c \end{Bmatrix} = \begin{Bmatrix} f \\ -(\phi_{/x}\dot{x})_{/x}\dot{x} \\ \ddot{\alpha} - (\psi_{/x}\dot{x})_{/x}\dot{x} \end{Bmatrix}$$
(6.56)

As a consequence, the same structure of the inverse kinematic problems is achieved, and the last problem of Eq. (6.56) directly yields both accelerations and multipliers.

## 6.3.5 Underdetermined, Overcontrolled Problem

In this case,  $\psi(x) \neq \vartheta(x)$ , c < n - b, j = n - b, which implies c < j. This is the case, for example, of an inverse biomechanics problem, where each degree of freedom is a joint commanded by a set of muscles. The inverse kinematics problem is solved by prescribing the motion of some part (e.g. a hand or a foot) in order to determine an 'optimal' (e.g. in terms of maximal ergonomy) motion. Then, an inverse dynamics problem is computed by freeing the part whose motion was initially prescribed, and by computing the torque required by all joints.

#### **Inverse Kinematics: Position and Velocity Subproblems**

The constraint and its first derivative are dealt with as in Section 6.3.4.

## Inverse Kinematics: Acceleration Subproblem

Constraint second derivative:

$$M(\ddot{x} - \ddot{x}_0) + \phi_{/x}^T \lambda + \psi_{/x}^T \mu = 0$$

$$(6.57a)$$

$$\phi_{/x}\ddot{x} = -\left(\phi_{/x}\dot{x}\right)_{/x}\dot{x} \tag{6.57b}$$

$$\psi_{/x}\ddot{x} = \ddot{\alpha} - (\psi_{/x}\dot{x})_{/x}\dot{x}. \tag{6.57c}$$

In analogy with the position constraint case, it corresponds to minimizing the quadratic form

$$J_{\ddot{x}} = \frac{1}{2} (\ddot{x} - \ddot{x}_0)^T M (\ddot{x} - \ddot{x}_0), \qquad (6.58)$$

which can be augmented as well, resulting in

$$J_{\ddot{\boldsymbol{x}}} = \frac{1}{2} \left( \ddot{\boldsymbol{x}} - \ddot{\boldsymbol{x}}_0 \right)^T \boldsymbol{M} \left( \ddot{\boldsymbol{x}} - \ddot{\boldsymbol{x}}_0 \right) + w_{\ddot{\boldsymbol{x}}} \frac{1}{2} \left( \ddot{\boldsymbol{x}} - \ddot{\boldsymbol{x}}_{\text{prev}} \right)^T \boldsymbol{M} \left( \ddot{\boldsymbol{x}} - \ddot{\boldsymbol{x}}_{\text{prev}} \right),$$
(6.59)

to minimize the acceleration increment between two consecutive time steps. The corresponding problem is

$$(1 + w_{\dot{x}}) \mathbf{M} \ddot{x} + \phi_{/x}^T \lambda + \psi_{/x}^T \mu = \mathbf{M} \ddot{x}_0 + w_{\dot{x}} \mathbf{M} \ddot{x}_{\text{prev}}$$

$$(6.60a)$$

$$\phi_{/x}\ddot{x} = -\left(\phi_{/x}\dot{x}\right)_{/x}\dot{x} \tag{6.60b}$$

$$\psi_{/x}\dot{x} = \ddot{\alpha} - (\psi_{/x}\dot{x})_{/x}\dot{x}, \tag{6.60c}$$

or

$$\begin{bmatrix} (1+w_{\ddot{x}}) \mathbf{M} & \phi_{/x}^T & \psi_{/x}^T \\ \phi_{/x} & 0 & 0 \\ \psi_{/x} & 0 & 0 \end{bmatrix} \begin{Bmatrix} \ddot{x} \\ \lambda \\ \mu \end{Bmatrix} = \begin{Bmatrix} \mathbf{M}\ddot{x}_0 + w_{\ddot{x}} \mathbf{M}\ddot{x}_{\text{prev}} \\ -(\phi_{/x}\dot{x})_{/x}\dot{x} \\ \ddot{\alpha} - (\psi_{/x}\dot{x})_{/x}\dot{x} \end{Bmatrix}.$$
 (6.61)

### **Inverse Dynamics Subproblem**

The inverse dynamics subproblem is identical to that of the fully determined, non-collocated case, Eq. (6.41).

#### **Implementation**

- during 'position' inverse kinematics substep:
  - assemble  $\phi_{/x}$  and  $\phi_{/x}^T$  for passive constraints
  - assemble  $\psi_{/x}$  and  $\psi_{/x}^T$  for prescribed motion
  - assemble equations related to  $\vartheta_{/x}$  as c=0 to neutralize them
  - assemble dummy springs
  - optionally assemble mass matrix contribution weighted by  $w_{/x}$
- during 'velocity' inverse kinematics substep:
  - assemble  $\phi_{/x}$  and  $\phi_{/x}^T$  for passive constraints
  - assemble  $\psi_{/x}$  and  $\psi_{/x}^T$  for prescribed motion

- assemble equations related to  $\vartheta_{/x}$  as c=0 to neutralize them
- assemble dummy dampers
- optionally assemble mass matrix contribution weighted by  $w_{/\dot{x}}$
- during 'acceleration' inverse kinematics substep:
  - assemble  $\phi_{/x}$  and  $\phi_{/x}^T$  for passive constraints
  - assemble  $\psi_{/x}$  and  $\psi_{/x}^T$  for prescribed motion
  - assemble equations related to  $\vartheta_{/x}$  as c=0 to neutralize them
  - assemble mass matrix contribution, optionally weighted by  $(1+w_{/\ddot{x}})$
- during inverse dynamics substep:
  - assemble  $\phi_{/\boldsymbol{x}}$  and  $\phi_{/\boldsymbol{x}}^T$  for passive constraints
  - assemble  $\boldsymbol{\vartheta}_{/\boldsymbol{x}}$  and  $\boldsymbol{\vartheta}_{/\boldsymbol{x}}^T$  for torques
  - assemble equations related to  $\psi_{/x}$  as  $\mu=0$  to neutralize them
  - assemble other elements (external forces, springs, etc.)

## **Data Structure**

(This chapter is a mess.)

## 7.1 Constitutive Laws

Code that uses constitutive laws requires

$$f = f(\epsilon, \dot{\epsilon}, t, \dots) \tag{7.1}$$

where f can be 1, 3, and 6 dimensional. Similarly,  $\epsilon$  and  $\dot{\epsilon}$  respectively are 1, 3, and 6 dimensional (scalar, Vec3, and Vec6).

The ConstitutiveLaw provides

$$GetF() = f(\epsilon, \dot{\epsilon}, t, ...)$$
(7.2a)

$$GetFDE() = \frac{\partial f}{\partial \epsilon}$$
 (7.2b)

$$GetFDEPrime() = \frac{\partial f}{\partial \dot{\epsilon}}$$
 (7.2c)

The values returned by these methods are updated by a call to Update().

## 7.2 ExpandableRowVector

ExpandableRowVector is a class that supports the computation of nested Jacobian matrices.

Consider a scalar y that depends on a set of variables k, namely y = y(k). The generic variable  $k_i$ , in turn, may be directly a subset of the variables of the problem, x, with  $k_i = x_j$ , or depend on them either directly, namely  $k_i = k_i(x)$ , or indirectly, namely  $k_i = k_i(x)$  and so on, with as many levels of recursion as needed, namely

$$\frac{\partial y}{\partial x_j} = \sum_{i} \frac{\partial y}{\partial k_i} \left( \sum_{i'} \frac{\partial k_i}{\partial k'_{i'}} \left( \dots \sum_{j} \frac{\partial k_{i^{(n)}}^{(n)}}{\partial x_j} \right) \right). \tag{7.3}$$

The computation of the contribution of y to the Jacobian matrix of the problem requires the capability to assemble the partial derivatives of y with respect to the variables x in the appropriate locations.

The ExpandableRowVector allows to associate each partial derivative of y with respect to the variables k it depends on, namely  $y_{/k_i}$ , to either

- a) its index, if  $k_i$  is directly a variable of the problem,  $k_i \to x_j$ , or
- b) to another ExpandableRowVector that contains the partial derivatives of the corresponding  $k_i$  with respect to the variables it depends on.

Since the assembly of the contributions to the Jacobian matrix of the problem is usually done using submatrices, within an element the association between a coefficient and a problem variable is not done based on the absolute numbering of the variable, but rather on a local numbering within the submatrix. The submatrix in turn will take care of mapping local indexing to global indexing when it is assembled to the global Jacobian matrix of the problem.

When the variable  $k_i$  directly corresponds to the problem variable  $x_j$ , the ExpandableRowVector provides a method to associate one of its elements to the problem variable indexing within the submatrix. So, if  $k_i \to x_j$ , and the global index j corresponds to index ip in the submatrix,

```
v.Set(y_{/k_i}, i, ip)
```

simultaneously sets the value  $y_{/k_i}$  and the variable subindex ip of the i-th element of vector v. Alternatively, the method

```
v.SetIdx(i, ip)
```

associates the variable subindex ip to the i-th element of the vector.

When  $k_i$  is a function of a set of variables, and its partial derivatives with respect to those variables are stored in another ExpandableRowVector  $\boldsymbol{w}$ , the method

```
v.Link(i, &w)
```

allows to associate vector  $\mathbf{w}$  to the  $\mathbf{i}$ -th element of vector  $\mathbf{v}$ .

As soon as v is assembled, it can be contributed to a specific equation (row) of a Jacobian matrix. For example, calling the method

where idx is the vector that contains the submatrix indexes of the elements of v, as set by the SetIdx() method

If another ExpandableRowVector is linked to the i-th element of vector v, the related operation on the submatrix is propagated recursively as

```
for (integer j = 1; j <= n; j++) {
    if ( /* linked to another ExpandableRowVector */ ) {
        // propagate operation
        xm(j)->Add(WM, eq, c*v(j));
    } else {
        WM(eq, idx(j)) += c*v(j);
    }
}
```

where xm is the container of the pointers to the linked ExpandableRowVector.

Blocks of equations can be added simultaneously using the method

```
void
Add(FullSubMatrixHandler& WM,
    const std::vector<integer>& eq,
    const std::vector<doublereal>& cc,
    const doublereal c = 1.) const
```

The same operation illustrated above is performed on each equation whose subindex is stored in the array eq, weighed by the coefficients stored in the array cc.

A similar method allows to build a subvector. Its use is currently undocumented.

### Example.

```
ExpandableRowVector v(4);
ExpandableRowVector w(2);
FullSubMatrixHandler m(6, 9);
w.Set(10., 1, 8);
w.Set(20., 2, 9);
v.Set(1., 1, 4);
v.Set(2., 2, 5);
v.Set(3., 3, 6);
v.Set(10., 4);
v.Link(4, &w);
v.Add(m, 5, 1.);
        col. 1 2 3 4 5 6 7
// m(5, :) = { 0., 0., 0., 1., 2., 3., 0., 100., 200. }
std::vector<integer> eq(3);
std::vector<doublereal> cc(3);
eq[0] = 1; cc[0] = 1.;
eq[1] = 2; cc[1] = 2.;
eq[2] = 3; cc[2] = 3.;
v.Add(m, eq, cc, 1.);
       col. 1 2 3 4 5 6 7
// m(1, :) = { 0., 0., 0., 1., 2., 3., 0., 100., 200. }
// m(2, :) = { 0., 0., 0., 2., 4., 6., 0., 200., 400. }
// m(3, :) = \{ 0., 0., 0., 3., 6., 9., 0., 300., 600. \}
```

# **Nodes**

## 8.1 Structural Nodes

Structural nodes provide the kinematics unknowns and the corresponding equilibrium equations.

## 8.1.1 Dynamic Structural Nodes

The dynamic structural node also provides momentum and momenta moment unknowns, and the equations that represent their definition in terms of the inertia properties and the node's kinematics:

$$\beta = m\dot{x}_{\text{CM}}$$

$$= m \left( \dot{x} + \omega \times b \right)$$

$$= m\dot{x} + \omega \times s$$

$$\gamma = \gamma_{\text{CM}} + b \times \beta$$

$$= J_{\text{CM}}\omega + b \times \beta$$

$$= s \times \dot{x} + J\omega,$$
(8.1a)

where

$$b = \frac{s}{m} \tag{8.2}$$

is the distance between the node and the CM of the body, which is constant in the reference frame of the node for a rigid body, and  $\mathbf{J} = \mathbf{J}_{\text{CM}} + m\mathbf{b} \times \mathbf{b} \times^{T}$ .

The contribution to the equations of motion (Newton-Euler) is

$$f_{\text{in}} = \dot{\beta}$$

$$m_{\text{in}} = \dot{\gamma}_{\text{CM}} + \boldsymbol{b} \times f_{\text{in}}$$

$$= \dot{\gamma} - (\boldsymbol{\omega} \times \boldsymbol{b}) \times \beta$$

$$= \dot{\gamma} - m(\boldsymbol{\omega} \times \boldsymbol{b}) \times (\dot{\boldsymbol{x}} + \boldsymbol{\omega} \times \boldsymbol{b})$$

$$= \dot{\gamma} + m\dot{\boldsymbol{x}} \times (\boldsymbol{\omega} \times \boldsymbol{b})$$

$$= \dot{\gamma} + m\dot{\boldsymbol{x}} \times (\dot{\boldsymbol{x}} + \boldsymbol{\omega} \times \boldsymbol{b})$$

$$= \dot{\gamma} + \dot{x} \times \beta$$
(8.3a)

The perturbation of the momentum and momenta moment definitions yields

$$\delta \boldsymbol{\beta} = m \delta \dot{\boldsymbol{x}} - \boldsymbol{s} \times \delta \boldsymbol{\omega} - \boldsymbol{\omega} \times \boldsymbol{s} \times \boldsymbol{\theta}_{\delta} \tag{8.4a}$$

$$\delta \gamma = s \times \delta \dot{x} + J \delta \omega + (\dot{x} \times s \times - (J\omega) \times + J\omega \times) \theta_{\delta}$$
(8.4b)

The perturbation of the inertia force and moment yields

$$\delta f_{\rm in} = \delta \dot{\beta}$$
 (8.5a)

$$\delta \mathbf{m}_{\rm in} = \delta \dot{\mathbf{\gamma}} - \mathbf{\beta} \times \delta \dot{\mathbf{x}} + \dot{\mathbf{x}} \times \delta \mathbf{\beta} \tag{8.5b}$$

#### Accelerations

Since momentum and momenta moments are used as the unknowns that take care of inertia, linear and angular accelerations are not directly available from the simulation. They are computed, on demand, as postprocessing from the derivatives of the definitions of the momentum and the momenta moment.

The differentiation of Equations (8.1) yields

$$\dot{\beta} = m\ddot{x} + \dot{\omega} \times s + \omega \times \omega \times s \tag{8.6a}$$

$$\dot{\gamma} = (\omega \times s) \times \dot{x} + s \times \ddot{x} + \omega \times J\omega + J\dot{\omega}. \tag{8.6b}$$

As a consequence, the linear and angular accelerations are computed as

$$\dot{\omega} = J_{\text{CM}}^{-1} \left( \dot{\gamma} - b \times \dot{\beta} + \dot{x} \times \beta - \omega \times J_{\text{CM}} \omega \right)$$
(8.7)

$$\ddot{x} = \frac{1}{m} \left( \dot{\beta} - \dot{\omega} \times s - \omega \times \omega \times s \right)$$

$$= \left(\frac{1}{m} \mathbf{I} + \mathbf{b} \times^{T} \mathbf{J}_{\mathrm{CM}}^{-1} \mathbf{b} \times\right) \dot{\boldsymbol{\beta}} - \mathbf{b} \times^{T} \mathbf{J}_{\mathrm{CM}}^{-1} \dot{\boldsymbol{\gamma}} - \mathbf{b} \times^{T} \mathbf{J}_{\mathrm{CM}}^{-1} \left(\dot{\boldsymbol{x}} \times \boldsymbol{\beta} - \boldsymbol{\omega} \times \mathbf{J}_{\mathrm{CM}} \boldsymbol{\omega}\right), \tag{8.8}$$

namely

$$\left\{\begin{array}{c} \ddot{x} \\ \dot{\omega} \end{array}\right\} = M^{-1} \left\{\begin{array}{c} \dot{\beta} \\ \dot{\gamma} \end{array}\right\} + \left[\begin{array}{c} -\mathbf{b} \times^{T} \\ \mathbf{I} \end{array}\right] \mathbf{J}_{\mathrm{CM}}^{-1} \left(\dot{x} \times \boldsymbol{\beta} - \boldsymbol{\omega} \times \mathbf{J}_{\mathrm{CM}} \boldsymbol{\omega}\right) \tag{8.9}$$

## Note on the inverse of the mass matrix

The mass matrix is

$$\boldsymbol{M} = \begin{bmatrix} m\boldsymbol{I} & \boldsymbol{s} \times ^T \\ \boldsymbol{s} \times & \boldsymbol{J} \end{bmatrix}$$
 (8.10)

Its inverse is

$$\boldsymbol{M}^{-1} = \begin{bmatrix} (m\boldsymbol{I} - \boldsymbol{s} \times {}^{T}\boldsymbol{J}^{-1}\boldsymbol{s} \times)^{-1} & -\frac{1}{m}\boldsymbol{s} \times {}^{T}\left(\boldsymbol{J} - \frac{1}{m}\boldsymbol{s} \times \boldsymbol{s} \times {}^{T}\right)^{-1} \\ -\frac{1}{m}\left(\boldsymbol{J} - \frac{1}{m}\boldsymbol{s} \times \boldsymbol{s} \times {}^{T}\right)^{-1}\boldsymbol{s} \times & \left(\boldsymbol{J} - \frac{1}{m}\boldsymbol{s} \times \boldsymbol{s} \times {}^{T}\right)^{-1} \end{bmatrix}$$

$$= \begin{bmatrix} \frac{1}{m}\boldsymbol{I} + \boldsymbol{b} \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1}\boldsymbol{b} \times & -\boldsymbol{b} \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1} \\ -\boldsymbol{J}_{\mathrm{CM}}^{-1}\boldsymbol{b} \times & \boldsymbol{J}_{\mathrm{CM}}^{-1} \end{bmatrix}. \tag{8.11}$$

In fact, according to the matrix inversion lemma,

$$(m\mathbf{I} - \mathbf{s} \times {}^{T}\mathbf{J}^{-1}\mathbf{s} \times)^{-1} = \frac{1}{m}\mathbf{I} + \mathbf{b} \times {}^{T}\mathbf{J}_{CM}^{-1}\mathbf{b} \times$$
(8.12)

(NOTE: simplifications when using updated-updated formulas).

#### Perturbation of momentum and momenta moment derivatives

According to Eqs. (8.4), the perturbation of the linear and angular velocity is

$$\left\{ \begin{array}{c} \delta \dot{x} \\ \delta \omega \end{array} \right\} = M^{-1} \left( \left\{ \begin{array}{c} \delta \beta \\ \delta \gamma \end{array} \right\} - \left[ \begin{array}{c} -\omega \times s \times \\ \dot{x} \times s \times - (J\omega) \times + J\omega \times \end{array} \right] \theta_{\delta} \right) \tag{8.13a}$$

The perturbation of the momentum and momenta moment derivatives is

$$\delta \dot{\boldsymbol{\beta}} = m\delta \ddot{\boldsymbol{x}} - s \times \delta \dot{\boldsymbol{\omega}} - (\boldsymbol{\omega} \times s) \times \delta \boldsymbol{\omega} - \boldsymbol{\omega} \times s \times \delta \boldsymbol{\omega} - \dot{\boldsymbol{\omega}} \times s \times \boldsymbol{\theta}_{\delta} - \boldsymbol{\omega} \times \boldsymbol{\omega} \times s \times \boldsymbol{\theta}_{\delta} 
\delta \dot{\boldsymbol{\gamma}} = s \times \delta \ddot{\boldsymbol{x}} + \boldsymbol{J} \delta \dot{\boldsymbol{\omega}} + (\boldsymbol{\omega} \times s) \times \delta \dot{\boldsymbol{x}} + \dot{\boldsymbol{x}} \times s \times \delta \boldsymbol{\omega} + \boldsymbol{\omega} \times \boldsymbol{J} \delta \boldsymbol{\omega} - (\boldsymbol{J} \boldsymbol{\omega}) \times \delta \boldsymbol{\omega} 
+ \dot{\boldsymbol{x}} \times \boldsymbol{\omega} \times s \times \boldsymbol{\theta}_{\delta} + \ddot{\boldsymbol{x}} \times s \times \boldsymbol{\theta}_{\delta} - \boldsymbol{\omega} \times (\boldsymbol{J} \boldsymbol{\omega}) \times \boldsymbol{\theta}_{\delta} + \boldsymbol{\omega} \times \boldsymbol{J} \boldsymbol{\omega} \times \boldsymbol{\theta}_{\delta} - (\boldsymbol{J} \dot{\boldsymbol{\omega}}) \times \boldsymbol{\theta}_{\delta} + \boldsymbol{J} \dot{\boldsymbol{\omega}} \times \boldsymbol{\theta}_{\delta}.$$
(8.14a)

As a consequence,

$$\begin{cases}
\delta \ddot{x} \\
\delta \dot{\omega}
\end{cases} = M^{-1} \left( \begin{cases} \dot{\beta} \\ \dot{\gamma} \end{cases} - \begin{bmatrix} 0 \\ (\omega \times s) \times \end{bmatrix} \delta \dot{x} - \begin{bmatrix} -(\omega \times s) \times -\omega \times s \times \\ \dot{x} \times s \times + \omega \times J - (J\omega) \times \end{bmatrix} \delta \omega \\
- \begin{bmatrix} -\dot{\omega} \times s \times -\omega \times \omega \times s \times \\ \dot{x} \times \omega \times s \times + \ddot{x} \times s \times -\omega \times (J\omega) \times + \omega \times J\omega \times - (J\dot{\omega}) \times + J\dot{\omega} \times \end{bmatrix} \theta_{\delta} \right) (8.15)$$

(NOTE: simplifications when using updated-updated formulas).

#### Variable Mass Momentum:

$$\beta = m\dot{x}_{\rm CM} \tag{8.16}$$

with

$$\dot{\boldsymbol{x}}_{\mathrm{CM}} = \dot{\boldsymbol{x}} + \boldsymbol{\omega} \times \boldsymbol{b} + R\dot{\tilde{\boldsymbol{b}}}. \tag{8.17}$$

$$\dot{\boldsymbol{\beta}} = m\ddot{\boldsymbol{x}}_{\mathrm{CM}} + \dot{m}\dot{\boldsymbol{x}}_{\mathrm{CM}} \tag{8.18}$$

Eq. (8.3a) becomes

$$\mathbf{f}_{\rm in} = \dot{\boldsymbol{\beta}} - \dot{m}\dot{\boldsymbol{x}}_{\rm CM}.\tag{8.19}$$

Only the portion of  $\dot{\beta}$  related to the change in mass is subtracted from the inertia forces; the portion related to the change in mass distribution,  $\dot{\tilde{b}}$ , is retained.

Momenta moment:

$$\gamma = \gamma_{\text{CM}} + \mathbf{b} \times \boldsymbol{\beta} 
= \mathbf{J}_{\text{CM}} \boldsymbol{\omega} + \mathbf{b} \times m \dot{\boldsymbol{x}}_{\text{CM}}$$
(8.20)

$$\dot{\gamma}_{\rm CM} = \omega \times J_{\rm CM} \omega + J_{\rm CM} \dot{\omega} + \left(J_{\rm CM \ variable \ geometry/t} + J_{\rm CM \ variable \ mass/t}\right) \omega \tag{8.21}$$

$$\dot{\gamma} = \dot{\gamma}_{\text{CM}} + \dot{b} \times \beta + b \times \dot{\beta} 
= \omega \times J_{\text{CM}} \omega + J_{\text{CM}} \dot{\omega} + \left(J_{\text{CM variable geometry}/t} + J_{\text{CM variable mass}/t}\right) \omega 
+ \left(\omega \times b + R\dot{\tilde{b}}\right) \times \beta + b \times (m\ddot{x}_{\text{CM}} + \dot{m}\dot{x}_{\text{CM}})$$
(8.22)

Inertia moment of the whole body

$$m_{\text{in}} = \dot{\gamma}_{\text{CM}} + \boldsymbol{b} \times \dot{\boldsymbol{\beta}}$$

$$= \dot{\gamma} - \dot{\boldsymbol{b}} \times \boldsymbol{\beta}$$

$$= \boldsymbol{\omega} \times \boldsymbol{J}_{\text{CM}} \boldsymbol{\omega} + \boldsymbol{J}_{\text{CM}} \dot{\boldsymbol{\omega}} + \left( \boldsymbol{J}_{\text{CM variable geometry}/t} + \boldsymbol{J}_{\text{CM variable mass}/t} \right) \boldsymbol{\omega}$$

$$+ \boldsymbol{b} \times (m \ddot{\boldsymbol{x}}_{\text{CM}} + \dot{m} \dot{\boldsymbol{x}}_{\text{CM}})$$
(8.23)

Inertia moment of the whole body minus the mass that is lost

$$m_{\rm in} = \dot{\gamma} - \dot{b} \times \beta - J_{\rm CM \ variable \ mass/t} \omega - b \times \dot{m} \dot{x}_{\rm CM}$$
 (8.24)

Only the portion of  $\dot{\gamma}$  related to the change in mass is subtracted from the inertia forces; the portion related to the change in mass distribution,  $J_{\text{CM variable geometry}/t}$ , is retained.

Actually, in the constant mass code, the term  $\dot{\boldsymbol{b}} \times \boldsymbol{\beta}$  is written as  $-\boldsymbol{v} \times \boldsymbol{\beta}$ , exploiting its structure:

$$\dot{\boldsymbol{b}} \times \boldsymbol{\beta} = m(\boldsymbol{\omega} \times \boldsymbol{b}) \times (\boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b}) 
= m(\boldsymbol{\omega} \times \boldsymbol{b}) \times \boldsymbol{v} 
= m(\boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b}) \times \boldsymbol{v} 
= \boldsymbol{\beta} \times \boldsymbol{v}$$
(8.25)

In the variable mass case, this can be written as

$$\dot{\boldsymbol{b}} \times \boldsymbol{\beta} = m \left( \boldsymbol{\omega} \times \boldsymbol{b} + R \dot{\tilde{\boldsymbol{b}}} \right) \times \left( \boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b} + R \dot{\tilde{\boldsymbol{b}}} \right) 
= \boldsymbol{\beta} \times \boldsymbol{v} + m \left( R \dot{\tilde{\boldsymbol{b}}} \right) \times \left( \boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b} + R \dot{\tilde{\boldsymbol{b}}} \right) + m \left( \boldsymbol{\omega} \times \boldsymbol{b} \right) \times R \dot{\tilde{\boldsymbol{b}}} 
= \boldsymbol{\beta} \times \boldsymbol{v} + m \left( R \dot{\tilde{\boldsymbol{b}}} \right) \times \boldsymbol{v}$$
(8.26)

The correction term  $\boldsymbol{\beta} \times \boldsymbol{v}$  is already included in the equations of motion by the AutomaticStructuralElem element associated with the underlying node; the correction term  $m\left(R\dot{\tilde{\boldsymbol{b}}}\right) \times \boldsymbol{v}$  must be explicitly applied by the DynamicVariableBody element.

Linearization: currently the DynamicVariableBody element does not contribute to the Jacobian matrix with respect to the variable inertia properties; only the original contribution of the constant inertia properties element is provided. This implies that the residual is exact to the required tolerance, while the Jacobian matrix is not; convergence should not be compromised as soon as moderate inertia variations are used.

## 8.1.2 Static Structural Nodes

Static structural nodes represent a degeneration of the dynamic ones, when the inertia is structurally null. In that case, no momentum nor momenta moment definition equations are instantiated, and their derivatives are always null. As a consequence, static nodes only instantiate their equilibrium equations.

## 8.1.3 Dummy Nodes

Dummy nodes are special structural nodes that do not directly participate in the analysis. In fact, they do not provide degrees of freedom; they rather present information associated with other structural nodes in a different manner, which is output in the .mov file much like if they were regular nodes.

Offset Dummy Node. The offset dummy structural node outputs the configuration of a reference frame that is rigidly offset from a base node (subscript b) by  $b_h$  and oriented by matrix  $R_h$  according to the transformation

$$x = x_b + R_b b_h \tag{8.27a}$$

$$R = R_b R_h \tag{8.27b}$$

$$\dot{\boldsymbol{x}} = \dot{\boldsymbol{x}}_b + \boldsymbol{\omega}_b \times \boldsymbol{R}_b \boldsymbol{b}_h \tag{8.27c}$$

$$\omega = \omega_b \tag{8.27d}$$

$$\ddot{x} = \ddot{x}_b + (\dot{\omega}_b \times + \omega_b \times \omega_b \times) R_b b_h \tag{8.27e}$$

$$\dot{\omega} = \dot{\omega}_b \tag{8.27f}$$

Reference Frame Dummy Node. The reference frame dummy structural node outputs the configuration of the base node (subscript b) in the reference frame of a reference node (subscript r), optionally offset by  $b_h$  and with an orientation relative to r provided by matrix  $R_h$ , according to the transformation

$$\overline{\boldsymbol{x}} = \boldsymbol{R}_{h}^{T} \left( \boldsymbol{R}_{r}^{T} \left( \boldsymbol{x}_{b} - \boldsymbol{x}_{r} \right) - \boldsymbol{b}_{h} \right) \tag{8.28a}$$

$$\overline{R} = R_b^T R_r^T R_b \tag{8.28b}$$

$$\overline{\dot{x}} = \mathbf{R}_h^T \mathbf{R}_r^T \left( \dot{x}_b - \dot{x}_r - \omega_r \times (\mathbf{x}_b - \mathbf{x}_r) \right)$$
(8.28c)

$$\overline{\omega} = R_h^T R_r^T \left( \omega_b - \omega_r \right) \tag{8.28d}$$

$$\overline{\ddot{x}} = \mathbf{R}_h^T \mathbf{R}_r^T \left( \ddot{x}_b - \ddot{x}_r - \left( \dot{\omega}_r \times + \omega_r \times \omega_r \times \right) \left( \mathbf{x}_b - \mathbf{x}_r \right) - 2\omega_r \times \left( \dot{\mathbf{x}}_b - \dot{\mathbf{x}}_r \right) \right)$$
(8.28e)

$$\overline{\dot{\omega}} = \mathbf{R}_h^T \mathbf{R}_r^T \left( \dot{\omega}_b - \dot{\omega}_r - \omega_r \times \omega_b \right) \tag{8.28f}$$

Pivot Reference Frame Dummy Node. The pivot reference frame dummy node is a variant of the reference frame dummy node that outputs the configuration of the base node, expressed in the reference frame of the reference node, as if it were attached to the pivot node (subscript p), optionally offset by  $b_k$  and with an orientation relative to p provided by matrix  $R_k$ , according to the transformation

$$\hat{x} = x_p + R_p \left( R_k \overline{x} + b_k \right) \tag{8.29a}$$

$$\hat{R} = R_n R_k \overline{R} \tag{8.29b}$$

$$\dot{\hat{x}} = \dot{x}_p + \omega_p \times R_p \left( R_k \overline{x} + b_k \right) + R_p R_k \dot{\overline{x}} \tag{8.29c}$$

$$\hat{\omega} = \omega_p + R_p R_k \overline{\omega} \tag{8.29d}$$

$$\hat{\ddot{x}} = \ddot{x}_p + (\dot{\omega}_p \times + \omega_p \times \omega_p \times) R_p (R_k \overline{x} + b_k) + 2\omega_p \times R_p R_k \overline{\dot{x}} + R_p R_k \overline{\ddot{x}}$$
(8.29e)

$$\hat{\dot{\omega}} = \dot{\omega}_p + \omega_p \times R_p R_k \overline{\dot{\omega}} + R_p R_k \overline{\dot{\omega}}$$
(8.29f)

## 8.1.4 Relative Motion

MBDyn uses the absolute coordinates of the nodes, and their absolute orientation, to define the motion. Whenever the representation of the motion in a relative reference frame is required or convenient, it needs to be computed from the absolute one that is computed inside the code.

This is possible either run-time, by adding dummy structural nodes, or off-line, as a post-processing. For this purpose, the script abs2rel.awk is provided to convert the contents of the .mov file into the corresponding motion relative to a given node.

Absolute motion as function of relative (tilde) and reference (0) motion:

$$R = R_0 \tilde{R} \tag{8.30a}$$

$$x = x_0 + R_0 \tilde{x} \tag{8.30b}$$

$$\omega = \omega_0 + R_0 \tilde{\omega} \tag{8.30c}$$

$$\dot{x} = \dot{x}_0 + \omega_0 \times R_0 \tilde{x} + R_0 \dot{\tilde{x}} \tag{8.30d}$$

$$\dot{\omega} = \dot{\omega}_0 + \omega_0 \times R_0 \tilde{\omega} + R_0 \dot{\tilde{\omega}} \tag{8.30e}$$

$$\ddot{\boldsymbol{x}} = \ddot{\boldsymbol{x}}_0 + \dot{\boldsymbol{\omega}}_0 \times \boldsymbol{R}_0 \tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \dot{\tilde{\boldsymbol{x}}} + \boldsymbol{R}_0 \dot{\tilde{\boldsymbol{x}}}$$
(8.30f)

Relative motion (tilde) as function of absolute and reference (0) motion:

$$\tilde{R} = R_0^T R \tag{8.31a}$$

$$\tilde{\boldsymbol{x}} = \boldsymbol{R}_0^T \left( \boldsymbol{x} - \boldsymbol{x}_0 \right) \tag{8.31b}$$

$$\tilde{\boldsymbol{\omega}} = \boldsymbol{R}_0^T \left( \boldsymbol{\omega} - \boldsymbol{\omega}_0 \right) \tag{8.31c}$$

$$\dot{ ilde{oldsymbol{x}}} = oldsymbol{R}_0^T \left( \dot{oldsymbol{x}} - \dot{oldsymbol{x}}_0 - oldsymbol{\omega}_0 imes oldsymbol{R}_0 ilde{oldsymbol{x}} 
ight)$$

$$= \mathbf{R}_0^T \left( \dot{\mathbf{x}} - \dot{\mathbf{x}}_0 \right) - \left( \mathbf{R}_0^T \boldsymbol{\omega}_0 \right) \times \tilde{\mathbf{x}}$$
(8.31d)

$$\dot{ ilde{oldsymbol{\omega}}} = oldsymbol{R}_0^T \left( \dot{oldsymbol{\omega}} - \dot{oldsymbol{\omega}}_0 - oldsymbol{\omega}_0 imes oldsymbol{R}_0 ilde{oldsymbol{\omega}} 
ight)$$

$$= \mathbf{R}_0^T \left( \dot{\boldsymbol{\omega}} - \dot{\boldsymbol{\omega}}_0 \right) - \left( \mathbf{R}_0^T \boldsymbol{\omega}_0 \right) \times \tilde{\boldsymbol{\omega}}$$
 (8.31e)

$$\ddot{ ilde{x}} = oldsymbol{R}_0^T \left( \ddot{oldsymbol{x}} - \ddot{oldsymbol{x}}_0 - \dot{oldsymbol{\omega}}_0 imes oldsymbol{R}_0 ilde{oldsymbol{x}} - oldsymbol{\omega}_0 imes oldsymbol{R}_0 \dot{oldsymbol{x}} - 2oldsymbol{\omega}_0 imes oldsymbol{R}_0 \dot{ar{oldsymbol{x}}} 
ight)$$

$$oxed{=R_0^T (\ddot{oldsymbol{x}} - \ddot{oldsymbol{x}}_0) - \left(R_0^T \dot{oldsymbol{\omega}}_0
ight) imes ilde{oldsymbol{x}}}$$

$$-\left(\mathbf{R}_{0}^{T}\boldsymbol{\omega}_{0}\right)\times\left(\mathbf{R}_{0}^{T}\boldsymbol{\omega}_{0}\right)\times\tilde{\boldsymbol{x}}-2\left(\mathbf{R}_{0}^{T}\boldsymbol{\omega}_{0}\right)\times\dot{\tilde{\boldsymbol{x}}}\tag{8.31f}$$

Perturbation, assuming reference motion is imposed:

$$\theta_{\delta} = R_0 \tilde{\theta}_{\delta} \tag{8.32a}$$

$$\delta \mathbf{x} = \mathbf{R}_0 \delta \tilde{\mathbf{x}} \tag{8.32b}$$

$$\delta \omega = R_0 \delta \tilde{\omega} \tag{8.32c}$$

$$\delta \dot{x} = \omega_0 \times R_0 \delta \tilde{x} + R_0 \delta \dot{\tilde{x}} \tag{8.32d}$$

$$\delta\dot{\omega} = \omega_0 \times R_0 \delta\tilde{\omega} + R_0 \delta\dot{\tilde{\omega}} \tag{8.32e}$$

$$\delta \ddot{x} = \dot{\omega}_0 \times R_0 \delta \tilde{x} + \omega_0 \times \omega_0 \times R_0 \delta \tilde{x} + 2\omega_0 \times R_0 \delta \dot{\tilde{x}} + R_0 \delta \ddot{\tilde{x}}$$

$$= (\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) R_0 \delta \tilde{x} + 2\omega_0 \times R_0 \delta \tilde{x} + R_0 \delta \tilde{x}$$
(8.32f)

Perturbation, when reference motion is independent:

$$\theta_{\delta} = \theta_{0\delta} + R_0 \dot{\theta}_{\delta} \qquad (8.33a)$$

$$\delta x = \delta x_0 + \theta_{0\delta} \times R_0 \ddot{x} + R_0 \delta \ddot{x}$$

$$= \delta x_0 - (R_0 \ddot{x}) \times \theta_{0\delta} + R_0 \delta \ddot{x}$$

$$= \delta \omega_0 - (R_0 \dot{\omega}) \times \theta_{0\delta} + R_0 \delta \ddot{\omega}$$

$$= \delta \omega_0 - (R_0 \dot{\omega}) \times \theta_{0\delta} + R_0 \delta \ddot{\omega}$$

$$= \delta \omega_0 - (R_0 \dot{\omega}) \times \theta_{0\delta} + R_0 \delta \ddot{\omega}$$

$$= \delta \dot{x}_0 + \delta \omega_0 \times R_0 \ddot{x} + \omega_0 \times \theta_0 \delta \times R_0 \ddot{x} + \omega_0 \times R_0 \delta \ddot{x}$$

$$+ \theta_{0\delta} \times R_0 \dot{x} + R_0 \delta \dot{x}$$

$$= \delta \dot{x}_0 - (R_0 \ddot{x}) \times \delta \omega_0 - (\omega_0 \times (R_0 \ddot{x}) \times + (R_0 \dot{x}) \times) \theta_{0\delta}$$

$$+ \omega_0 \times R_0 \delta \ddot{x} + R_0 \delta \dot{x}$$

$$= \delta \dot{\omega}_0 + \delta \omega_0 \times R_0 \ddot{\omega} + \omega_0 \times \theta_{0\delta} \times R_0 \ddot{\omega} + \omega_0 \times R_0 \delta \ddot{\omega}$$

$$+ \theta_{0\delta} \times R_0 \dot{\omega} + R_0 \delta \dot{\omega}$$

$$= \delta \dot{\omega}_0 - (R_0 \dot{\omega}) \times \delta \omega_0 - (\omega_0 \times (R_0 \dot{\omega}) \times + (R_0 \dot{\omega}) \times) \theta_{0\delta}$$

$$+ \omega_0 \times R_0 \delta \ddot{\omega} + R_0 \delta \dot{\omega}$$

$$= \delta \dot{\omega}_0 - (R_0 \dot{\omega}) \times \delta \omega_0 - (\omega_0 \times (R_0 \dot{\omega}) \times + (R_0 \dot{\omega}) \times) \theta_{0\delta}$$

$$+ \omega_0 \times R_0 \delta \ddot{\omega} + R_0 \delta \dot{\omega}$$

$$+ \delta \dot{\omega}_0 \times R_0 \dot{\omega} + R_0 \delta \dot{\omega}$$

$$(8.33e)$$

$$\delta \ddot{x} = \delta \ddot{x}_0$$

$$+ \delta \dot{\omega}_0 \times R_0 \dot{x} + \omega_0 \times \theta_{0\delta} \times R_0 \ddot{x} + \dot{\omega}_0 \times R_0 \delta \ddot{x}$$

$$+ \delta \omega_0 \times \omega_0 \times R_0 \dot{x} + \omega_0 \times \delta \omega_0 \times R_0 \delta \ddot{x}$$

$$+ \omega_0 \times \omega_0 \times \theta_{0\delta} \times R_0 \ddot{x} + \omega_0 \times \delta \omega_0 \times R_0 \delta \ddot{x}$$

$$+ 2\delta \omega_0 \times R_0 \dot{x} + 2\omega_0 \times \theta_0 \delta \times R_0 \delta \dot{x} + 2\omega_0 \times R_0 \delta \dot{x}$$

$$+ \theta_{0\delta} \times R_0 \ddot{x} + R_0 \delta \ddot{x}$$

$$= \delta \ddot{x}_0 - (R_0 \ddot{x}) \times \delta \dot{\omega}$$

$$- ((\omega_0 \times R_0 \ddot{x}) \times + \omega_0 \times (R_0 \ddot{x}) \times + 2(R_0 \dot{x}) \times + (R_0 \ddot{x}) \times) \theta_{0\delta}$$

$$+ (\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) (R_0 \delta \ddot{x} + 2\omega_0 \times (R_0 \dot{\delta} \dot{x} + R_0 \delta \ddot{x}$$

$$= \delta \ddot{x}_0 - (R_0 \ddot{x}) \times \delta \dot{\omega}$$

$$- ((\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) (R_0 \delta \ddot{x}) \times + 2\omega_0 \times (R_0 \dot{x}) \times + (R_0 \ddot{x}) \times \theta_{0\delta}$$

$$+ (\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) (R_0 \delta \ddot{x} + 2\omega_0 \times (R_0 \delta \dot{x}) \times + (R_0 \ddot{x}) \times \theta_{0\delta}$$

$$+ (\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) (R_0 \delta \ddot{x} + 2\omega_0 \times R_0 \delta \dot{x} + R_0 \delta \ddot{x}$$

$$= \delta \ddot{x}_0 - (R_0 \ddot{x}) \times \delta \dot{\omega}$$

$$- ((\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) (R_0 \delta \dot{x} + 2\omega_0 \times (R_0 \delta \dot{x}) \times + (R_0 \ddot{x}) \times \theta_{0\delta}$$

$$+ (\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) (R_0 \delta \dot{x} + 2\omega_0 \times (R_0 \delta \dot{x}) \times + (R_0 \ddot{x}) \times \theta_0 \delta$$

$$+ (\dot{\omega}_0 \times + \omega_0 \times \omega_0 \times) (R_0 \delta \dot{x} + 2\omega_0 \times (R_0 \dot{x}) \times + (R_0 \ddot{x}) \times \theta_0 \delta$$

$$+ (\dot{\omega}_$$

# 8.1.5 Motion Expressed in a Relative Reference Frame

An alternative, useful case is given by representing the absolute motion in a relative reference frame:

$$\tilde{\mathbf{R}} = \mathbf{R}_0^T \mathbf{R} \tag{8.34a}$$

$$\tilde{\boldsymbol{x}} = \boldsymbol{R}_0^T \left( \boldsymbol{x} - \boldsymbol{x}_0 \right) \tag{8.34b}$$

$$\overline{\boldsymbol{\omega}} = \boldsymbol{R}_0^T \boldsymbol{\omega} \tag{8.34c}$$

$$\dot{\overline{x}} = \mathbf{R}_0^T \dot{x} \tag{8.34d}$$

$$\dot{\overline{\omega}} = R_0^T \dot{\omega} \tag{8.34e}$$

$$\ddot{\overline{x}} = R_0^T \ddot{x} \tag{8.34f}$$

# Dynamics in a Relative Reference Frame

The rationale is that MBDyn is based on the assumption that the kinematics of the nodes and their equations of motion are formulated in the global reference frame. However, in some cases one may want to express the motion of the nodes in a relative reference frame.

The following discussion is intended to modify the inertial contribution to the equilibrium in order to reformulate the dynamical problem in a relative reference frame, whose motion is imposed. The constraints and the deformable components are unaffected, as they already intrinsically based on relative kinematics.

Momentum and momenta moments

$$\beta = m\dot{x}_0 + \omega_0 \times s_0 + R_0\tilde{\beta} \tag{8.35a}$$

$$\gamma = s \times (\dot{x}_0 + \omega_0 \times R_0 \tilde{x}) + J\omega_0 + R_0 \tilde{\gamma} \tag{8.35b}$$

where

$$s_0 = R_0 \tilde{s}_0 \tag{8.36}$$

$$\tilde{\boldsymbol{s}}_0 = \tilde{\boldsymbol{s}} + m\tilde{\boldsymbol{x}} \tag{8.37}$$

$$s = R_0 \tilde{s} \tag{8.38}$$

$$J = R_0 \tilde{J} R_0^T \tag{8.39}$$

Momentum and momenta moments derivative

$$\dot{\boldsymbol{\beta}} = m\ddot{\boldsymbol{x}}_{0} + (\dot{\boldsymbol{\omega}}_{0} \times + \boldsymbol{\omega}_{0} \times \boldsymbol{\omega}_{0} \times) \boldsymbol{R}_{0}\tilde{\boldsymbol{s}}_{0} + 2\boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0}\tilde{\boldsymbol{\beta}} + \boldsymbol{R}_{0}\tilde{\boldsymbol{\beta}} 
\dot{\boldsymbol{\gamma}} = \dot{\boldsymbol{s}} \times (\dot{\boldsymbol{x}}_{0} + \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0}\tilde{\boldsymbol{x}}) 
+ \boldsymbol{s} \times \left( \ddot{\boldsymbol{x}}_{0} + (\dot{\boldsymbol{\omega}}_{0} \times + \boldsymbol{\omega}_{0} \times \boldsymbol{\omega}_{0} \times) \boldsymbol{R}_{0}\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0}\tilde{\boldsymbol{x}} \right) 
+ \boldsymbol{\omega}_{0} \times \boldsymbol{J}\boldsymbol{\omega}_{0} + \boldsymbol{J}\dot{\boldsymbol{\omega}}_{0} + \boldsymbol{R}_{0} \left( \tilde{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}} - \tilde{\boldsymbol{J}}\tilde{\boldsymbol{\omega}} \times \right) \boldsymbol{R}_{0}^{T}\boldsymbol{\omega}_{0} 
+ \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0}\tilde{\boldsymbol{\gamma}} + \boldsymbol{R}_{0}\dot{\tilde{\boldsymbol{\gamma}}} \tag{8.40b}$$

Inertia forces and moments projected in the relative frame

$$\overline{\boldsymbol{m}}_{\text{in}} = \boldsymbol{R}_{0}^{T} \left( \dot{\boldsymbol{\gamma}} + \dot{\boldsymbol{x}} \times \boldsymbol{\beta} \right) 
= \tilde{\boldsymbol{s}} \times \left( \ddot{\overline{\boldsymbol{x}}}_{0} + \left( \dot{\overline{\boldsymbol{\omega}}}_{0} \times + \overline{\boldsymbol{\omega}}_{0} \times \overline{\boldsymbol{\omega}}_{0} \times \right) \tilde{\boldsymbol{x}} + \overline{\boldsymbol{\omega}}_{0} \times \dot{\tilde{\boldsymbol{x}}} \right) 
+ \overline{\boldsymbol{\omega}}_{0} \times \tilde{\boldsymbol{J}} \overline{\boldsymbol{\omega}}_{0} + \tilde{\boldsymbol{J}} \dot{\overline{\boldsymbol{\omega}}}_{0} + \left( \tilde{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}} - \tilde{\boldsymbol{J}} \tilde{\boldsymbol{\omega}} \times \right) \overline{\boldsymbol{\omega}}_{0} 
+ \dot{\tilde{\boldsymbol{x}}} \times \overline{\boldsymbol{\omega}}_{0} \times \tilde{\boldsymbol{s}} + \overline{\boldsymbol{\omega}}_{0} \times \tilde{\boldsymbol{\gamma}} + \dot{\underline{\tilde{\boldsymbol{x}}}} \times \tilde{\boldsymbol{\beta}} + \dot{\tilde{\boldsymbol{\gamma}}} \right)$$
relative momenta moment
$$(8.41b)$$

The contributions

$$\overline{f}_{\rm in}^* = 2\overline{\omega}_0 \times \tilde{\beta} + \dot{\tilde{\beta}} \tag{8.42a}$$

$$\overline{\boldsymbol{m}}_{\mathrm{in}}^* = \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\gamma}} + \dot{\tilde{\boldsymbol{x}}} \times \tilde{\boldsymbol{\beta}} + \dot{\tilde{\boldsymbol{\gamma}}} \tag{8.42b}$$

belong to the automatic structural element associated to each dynamic node. As such, they are computed once for all irrespective of the number of rigid bodies that are connected to the node. The remaining contributions are computed by each rigid body.

Perturbation, assuming reference motion is imposed:

$$\delta \overline{f}_{\text{in}} = (\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times) \left( m \delta \tilde{x} - \tilde{s} \times \tilde{\theta}_{\delta} \right) \\
+ 2 \overline{\omega}_{0} \times \delta \tilde{\beta} + \delta \dot{\tilde{\beta}} \tag{8.43a}$$

$$\delta \overline{m}_{\text{in}} = \left( \left( \ddot{\overline{x}}_{0} + (\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times) \tilde{x} + \overline{\omega}_{0} \times \dot{\tilde{x}} \right) \times \tilde{s} \times \\
+ (\overline{\omega}_{0} + \tilde{\omega}) \times \left( \tilde{J} \overline{\omega}_{0} \times - \left( \tilde{J} \overline{\omega}_{0} \right) \times \right) \\
+ \tilde{J} \left( \dot{\overline{\omega}}_{0} + \overline{\omega}_{0} \times \tilde{\omega} \right) \times - \left( \tilde{J} \left( \dot{\overline{\omega}}_{0} + \overline{\omega}_{0} \times \tilde{\omega} \right) \right) \times \\
- \dot{\tilde{x}} \times \overline{\omega}_{0} \times \tilde{s} \times \right) \tilde{\theta}_{\delta} \\
+ \left( \tilde{J} \overline{\omega}_{0} \times - \left( \tilde{J} \overline{\omega}_{0} \right) \times \right) \delta \tilde{\omega} \\
+ \tilde{s} \times \left( \dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times \right) \delta \tilde{x} \\
+ \left( \tilde{s} \times \overline{\omega}_{0} \times - (\overline{\omega}_{0} \times \tilde{s}) \times - \tilde{\beta} \times \right) \delta \dot{\tilde{x}} \\
+ \left( \tilde{s} \times \overline{\omega}_{0} \times - (\overline{\omega}_{0} \times \tilde{s}) \times - \tilde{\beta} \times \right) \delta \dot{\tilde{x}} \tag{8.43c}$$

To summarize:

$$\begin{cases}
\delta \overline{f}_{\text{in}} \\
\delta \overline{m}_{\text{in}}
\end{cases} = \begin{bmatrix}
I & 0 \\
0 & I
\end{bmatrix} \begin{cases}
\delta \dot{\tilde{\beta}} \\
\delta \dot{\tilde{\gamma}}
\end{cases} + \begin{bmatrix}
2\overline{\omega}_{0} \times 0 \\
\dot{\tilde{x}} \times \overline{\omega}_{0} \times 
\end{bmatrix} \begin{cases}
\delta \dot{\tilde{\beta}} \\
\delta \tilde{\gamma}
\end{cases} \\
+ \begin{bmatrix}
0 & 0 \\
\left(\tilde{s} \times \overline{\omega}_{0} \times - (\overline{\omega}_{0} \times \tilde{s}) \times - \tilde{\beta} \times \right) \\
\left(\tilde{J}\overline{\omega}_{0} \times - (\tilde{J}\overline{\omega}_{0}) \times 
\right)
\end{bmatrix} \begin{cases}
\delta \dot{\tilde{x}} \\
\delta \tilde{\omega}
\end{cases} \\
+ \begin{bmatrix}
m \left(\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times \right) \\
\tilde{s} \times \left(\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times \right)
\end{bmatrix} \delta \tilde{x} \\
+ \begin{bmatrix}
-\left(\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times \right) \tilde{s} \times \\
-\left(\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times \right) \tilde{x} + \overline{\omega}_{0} \times \dot{\tilde{x}} \times \tilde{s} \times \\
-\dot{\tilde{x}} \times \overline{\omega}_{0} \times \tilde{s} \times + \overline{\omega} \times \left(\tilde{J}\overline{\omega}_{0} \times - \left(\tilde{J}\overline{\omega}_{0} \times \tilde{\omega}\right) \times \right) \\
+ \tilde{J} \left(\dot{\overline{\omega}}_{0} + \overline{\omega}_{0} \times \tilde{\omega}\right) \times - \left(\tilde{J} \left(\dot{\overline{\omega}}_{0} + \overline{\omega}_{0} \times \tilde{\omega}\right) \times \tilde{\omega}\right) \times \tilde{\omega}
\end{cases}$$

$$(8.44)$$

## 8.1.7 Airstream Velocity

Aerodynamic elements need the absolute velocity of specific points in order to evaluate the boundary conditions for the computation of the aerodynamic forces.

The velocity of the airstream at a given absolute location x is

$$v_{\rm as} = v_{\rm as}(x,t)$$
, (8.45)

which results from the superimposition of a time-dependent airstream velocity and of a time- and spacedependent gust velocity,

$$v_{\rm as} = v_{\rm as0}(t) + v_{\rm g}(x, t)$$
 (8.46)

The velocity of point x with respect to the air at point x itself is thus

$$v_{\rm a} = \dot{x} - v_{\rm as}. \tag{8.47}$$

When the motion of the point is expressed in the relative reference frame, the position of the point is expressed by Eq. (8.30d). The velocity of Eq. (8.47) becomes

$$\mathbf{v}_{\mathbf{a}} = \dot{\mathbf{x}}_0 + \boldsymbol{\omega}_0 \times \mathbf{R}_0 \tilde{\mathbf{x}} + \mathbf{R}_0 \dot{\tilde{\mathbf{x}}} - \mathbf{v}_{\mathbf{as}}. \tag{8.48}$$

This velocity, projected in the relative reference frame, is

$$\overline{v}_{a} = R_{0}^{T} v_{a} 
= \dot{\overline{x}}_{0} + \overline{\omega}_{0} \times \tilde{x} + \dot{\tilde{x}} - \overline{v}_{as}.$$
(8.49)

When referring aerodynamic elements to the relative frame, the equivalent airstream speed is thus

$$\mathbf{v}_{\text{as equivalent}} = \overline{\mathbf{v}}_{\text{as}} - \dot{\overline{\mathbf{x}}}_0 - \overline{\boldsymbol{\omega}}_0 \times \tilde{\mathbf{x}},$$
 (8.50)

so that the velocity of the air at point  $\tilde{x}$  is computed as

$$\overline{v}_{\rm a} = \dot{\tilde{x}} - v_{\rm as\ equivalent},$$
 (8.51)

in analogy with Eq. (8.47). This allows to confine the relative reference frame modification of the aerodynamic forces in the computation of the airstream velocity.

#### 8.1.8 Implementation Notes

#### **Kinematics**

The relative reference frame dynamics is under development. In the current design, the whole model is subjected to a single relative reference frame. The "ground" is intended to be rigidly connected to the relative reference frame (e.g. all "pin" joints and the "clamp" joint). Deformable elements and kinematic constraints do not discriminate between absolute and relative reference frame, since they only deal with the relative kinematics of the nodes they connect.

The relative frame motion is delegated to the DataManager. The StructNode is responsible for providing a pointer to a RigidBodyKinematics object that describes the relative frame motion.

The kinematic parameters received in input with the rigid body kinematics card in the control data section are intended expressed in the global reference frame. Note however that the calls to the Get\*() methods of the RigidBodyKinematics class return them in the relative reference frame, namely pre-multiplied by the transpose of the orientation matrix:

#### **Dynamics**

The equations of motion (force and moment equilibrium) and the definitions of the momentum and momenta moment are not altered.

The AutomaticStructElem element takes care of the portion of relative frame inertia forces that depends on the momentum and on the momenta moment. The DynamicBody element takes care of the remaining portion of relative frame inertia forces. The StaticBody element has been modified accordingly.

## **Air Properties**

The AirProperties element takes care of the relative frame motion in order to project the absolute reference frame airstream velocity into the relative reference frame, according to Section 8.1.7.

All other built-in aerodynamic elements should naturally inherit the correct air velocity at the reference points.

#### **Future Development**

Future development may allow to have multiple relative reference frame submodels, connected to each other and to the absolute reference frame submodel, if any, by dedicated algebraic constraints.

# 8.1.9 Pseudo-Velocities Approach

NOTE: this is not currently implemented, nor foreseen.

The pseudo-velocities approach consists in replacing the momentum and momenta moment definitions with the definitions of the angular and linear velocities,

$$v = \dot{x} \tag{8.53a}$$

$$\omega = \operatorname{ax}\left(\dot{R}R^{T}\right) \tag{8.53b}$$

An advantage is that this approach allows an easier implementation of constraint stabilization. Kinematics:

$$R := \text{node orientation matrix}$$
 (8.54a)

$$x := \text{node position}$$
 (8.54b)

Angular and linear velocity,  $\omega$  and v:

$$\omega = \operatorname{ax}\left(\dot{R}R^{T}\right) \tag{8.55a}$$

$$\mathbf{v} = \dot{\mathbf{x}}$$
 (8.55b)

Inertia forces and moments:

$$f_{\rm in} = m\dot{v}_{\rm CM}$$
 (8.56a)

$$m_{\rm in} = \boldsymbol{\omega} \times \boldsymbol{J}_{\rm CM} \boldsymbol{\omega} + \boldsymbol{J}_{\rm CM} \dot{\boldsymbol{\omega}} + \boldsymbol{s} \times \dot{\boldsymbol{v}}_{\rm CM}$$
 (8.56b)

where

$$s$$
 static moment with respect to the node position (8.57a)

$$J_{\rm CM}$$
 inertia tensor with respect to the center of mass (8.57b)

$$x_{\text{CM}} = x + \frac{1}{m}s$$
 position of the center of mass (8.57c)

$$v_{\rm CM} = v + \frac{1}{m}\omega \times s$$
 velocity of the center of mass (8.57d)

$$\dot{\mathbf{v}}_{\mathrm{CM}} = \dot{\mathbf{v}} + \frac{1}{m} \left( \dot{\boldsymbol{\omega}} \times + \boldsymbol{\omega} \times \boldsymbol{\omega} \times \right) \mathbf{s} \tag{8.57e}$$

Perturbation

$$\delta \mathbf{s} = \mathbf{\theta}_{\delta} \times \mathbf{s} \tag{8.58a}$$

$$\delta J_{\rm CM} = \theta_{\delta} \times J_{\rm CM} - J_{\rm CM} \theta_{\delta} \times \tag{8.58b}$$

$$\delta \mathbf{x}_{\text{CM}} = \delta \mathbf{x} + \frac{1}{m} \delta \mathbf{s}$$

$$= \delta \mathbf{x} - \frac{1}{m} \mathbf{s} \times \boldsymbol{\theta}_{\delta}$$
(8.58c)

$$v_{\text{CM}} = \delta v + \frac{1}{m} \delta \omega \times s + \frac{1}{m} \omega \times \delta s$$

$$= \delta v - \frac{1}{m} s \times \delta \omega - \frac{1}{m} \omega \times s \times \theta_{\delta}$$
(8.58d)

$$\delta \dot{\boldsymbol{v}}_{\text{CM}} = \delta \dot{\boldsymbol{v}} + \frac{1}{m} \left( \delta \dot{\boldsymbol{\omega}} \times \boldsymbol{s} + \delta \boldsymbol{\omega} \times \boldsymbol{\omega} \times \boldsymbol{s} + \boldsymbol{\omega} \times \delta \boldsymbol{\omega} \times \boldsymbol{s} + (\dot{\boldsymbol{\omega}} \times + \boldsymbol{\omega} \times \boldsymbol{\omega} \times) \delta \boldsymbol{s} \right)$$

$$= \delta \dot{\boldsymbol{v}} - \frac{1}{m} \boldsymbol{s} \times \delta \dot{\boldsymbol{\omega}} - \frac{1}{m} \left( (\boldsymbol{\omega} \times \boldsymbol{s}) \times + \boldsymbol{\omega} \times \boldsymbol{s} \times \right) \delta \boldsymbol{\omega}$$

$$- \frac{1}{m} \left( \dot{\boldsymbol{\omega}} \times + \boldsymbol{\omega} \times \boldsymbol{\omega} \times \right) \boldsymbol{s} \times \boldsymbol{\theta}_{\delta}$$
(8.58e)

Inertia forces and moments with respect to nodal quantities:

$$f_{\text{in}} = m\dot{\boldsymbol{v}}_{\text{CM}}$$

$$= m\dot{\boldsymbol{v}} + (\dot{\boldsymbol{\omega}} \times + \boldsymbol{\omega} \times \boldsymbol{\omega} \times) \boldsymbol{s}$$
(8.59a)

$$m_{\rm in} = \boldsymbol{\omega} \times \boldsymbol{J}_{\rm CM} \boldsymbol{\omega} + \boldsymbol{J}_{\rm CM} \dot{\boldsymbol{\omega}} + \boldsymbol{s} \times \dot{\boldsymbol{v}}_{\rm CM}$$
$$= \boldsymbol{s} \times \dot{\boldsymbol{v}} + \boldsymbol{J} \dot{\boldsymbol{\omega}} + \boldsymbol{\omega} \times \boldsymbol{J} \boldsymbol{\omega} \tag{8.59b}$$

with

$$J = J_{\rm CM} - \frac{1}{m} s \times s \times \tag{8.60}$$

the inertia tensor with respect to the node.

Perturbation:

$$\delta \mathbf{f}_{\text{in}} = m\delta \dot{\mathbf{v}} - \mathbf{s} \times \delta \dot{\boldsymbol{\omega}} - ((\boldsymbol{\omega} \times \mathbf{s}) \times + \boldsymbol{\omega} \times \mathbf{s} \times) \delta \boldsymbol{\omega} - (\dot{\boldsymbol{\omega}} \times + \boldsymbol{\omega} \times \boldsymbol{\omega} \times) \mathbf{s} \times \boldsymbol{\theta}_{\delta}$$
(8.61a)

$$\delta m_{\rm in} = \mathbf{s} \times \delta \dot{\mathbf{v}} + \mathbf{J} \delta \dot{\boldsymbol{\omega}} + (\boldsymbol{\omega} \times \mathbf{J} - (\mathbf{J}\boldsymbol{\omega}) \times) \delta \boldsymbol{\omega} + (\boldsymbol{\omega} \times (\mathbf{J}\boldsymbol{\omega} \times - (\mathbf{J}\boldsymbol{\omega}) \times) + \mathbf{J}\dot{\boldsymbol{\omega}} \times - (\mathbf{J}\dot{\boldsymbol{\omega}}) \times + \dot{\boldsymbol{v}} \times \mathbf{s} \times) \boldsymbol{\theta}_{\delta}$$
(8.61b)

Relative frame kinematics:

$$R = R_0 \tilde{R} \tag{8.62a}$$

$$x = x_0 + R_0 \tilde{x} \tag{8.62b}$$

$$\omega = \omega_0 + R_0 \tilde{\omega} \tag{8.62c}$$

$$v = v_0 + \omega_0 \times R_0 \tilde{x} + R_0 \tilde{v} \tag{8.62d}$$

$$\dot{\boldsymbol{\omega}} = \dot{\boldsymbol{\omega}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0 \dot{\tilde{\boldsymbol{\omega}}} \tag{8.62e}$$

$$\dot{\boldsymbol{v}} = \dot{\boldsymbol{v}}_0 + (\dot{\boldsymbol{\omega}}_0 \times + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times) \, \boldsymbol{R}_0 \tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \tilde{\boldsymbol{v}} + \boldsymbol{R}_0 \dot{\tilde{\boldsymbol{v}}}$$
(8.62f)

Perturbation:

$$\theta_{\delta} = R_0 \tilde{\theta}_{\delta} \tag{8.63a}$$

$$\delta \mathbf{x} = \mathbf{R}_0 \delta \tilde{\mathbf{x}} \tag{8.63b}$$

$$\delta \omega = R_0 \delta \tilde{\omega} \tag{8.63c}$$

$$\delta \mathbf{v} = \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \delta \tilde{\mathbf{x}} + \boldsymbol{R}_0 \delta \tilde{\mathbf{v}} \tag{8.63d}$$

$$\delta\dot{\boldsymbol{\omega}} = \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \delta \tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0 \delta \dot{\tilde{\boldsymbol{\omega}}} \tag{8.63e}$$

$$\delta \dot{\boldsymbol{v}} = (\dot{\boldsymbol{\omega}}_0 \times + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times) \, \boldsymbol{R}_0 \delta \tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \delta \tilde{\boldsymbol{v}} + \boldsymbol{R}_0 \delta \dot{\tilde{\boldsymbol{v}}}$$
(8.63f)

Relative frame kinematics projected in the relative frame:

$$\overline{R} = \tilde{R} \tag{8.64a}$$

$$\overline{\boldsymbol{x}} = \boldsymbol{R}_0^T \boldsymbol{x}_0 + \tilde{\boldsymbol{x}} \tag{8.64b}$$

$$\overline{\boldsymbol{\omega}} = \boldsymbol{R}_0^T \boldsymbol{\omega}_0 + \tilde{\boldsymbol{\omega}} \tag{8.64c}$$

$$\overline{\boldsymbol{v}} = \boldsymbol{R}_0^T \boldsymbol{v}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{x}} + \tilde{\boldsymbol{v}} \tag{8.64d}$$

$$\dot{\overline{\omega}} = R_0^T \dot{\omega}_0 + \overline{\omega}_0 \times \tilde{\omega} + \dot{\tilde{\omega}} \tag{8.64e}$$

$$\overline{\dot{\boldsymbol{v}}} = \boldsymbol{R}_0^T \dot{\boldsymbol{v}}_0 + \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times \right) \tilde{\boldsymbol{x}} + 2\overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{v}} + \dot{\tilde{\boldsymbol{v}}}$$
(8.64f)

Perturbation projected in the relative frame:

$$\overline{\boldsymbol{\theta}}_{\delta} = \widetilde{\boldsymbol{\theta}}_{\delta}$$
 (8.65a)

$$\delta \overline{x} = \delta \tilde{x} \tag{8.65b}$$

$$\delta \overline{\omega} = \delta \tilde{\omega} \tag{8.65c}$$

$$\delta \overline{\boldsymbol{v}} = \overline{\boldsymbol{\omega}}_0 \times \delta \tilde{\boldsymbol{x}} + \delta \tilde{\boldsymbol{v}} \tag{8.65d}$$

$$\delta \dot{\overline{\omega}} = \overline{\omega}_0 \times \delta \tilde{\omega} + \delta \dot{\tilde{\omega}} \tag{8.65e}$$

$$\delta \dot{\overline{v}} = (\dot{\overline{\omega}}_0 \times + \overline{\omega}_0 \times \overline{\omega}_0 \times) \delta \tilde{x} + 2\overline{\omega}_0 \times \delta \tilde{v} + \delta \dot{\tilde{v}}$$
(8.65f)

Inertia forces and moments with respect to nodal quantities, in a relative frame:

$$\overline{f}_{\rm in} = m \dot{\overline{v}}_{\rm CM}$$
 (8.66a)

$$\overline{m}_{\rm in} = \tilde{s} \times \dot{\overline{v}}_{\rm CM} + \overline{\omega} \times \tilde{J}_{\rm CM} \overline{\omega} + \tilde{J}_{\rm CM} \dot{\overline{\omega}}$$
(8.66b)

Perturbation

$$\delta \overline{f}_{\text{in}} = m \delta \dot{\overline{v}}_{\text{CM}} 
= m \delta \dot{\overline{v}} + 2m \overline{\omega}_{0} \times \delta \tilde{v} + m \left( \dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times \right) \delta \tilde{x} 
- \tilde{s} \times \delta \dot{\tilde{\omega}} - (\tilde{s} \times \overline{\omega}_{0} \times + \overline{\omega} \times \tilde{s} \times - (\tilde{s} \times \overline{\omega}) \times) \delta \tilde{\omega} 
- (\dot{\overline{\omega}} \times + \overline{\omega} \times \overline{\omega} \times) \tilde{s} \times \tilde{\theta}_{\delta}$$

$$\delta \overline{m}_{\text{in}} = \tilde{s} \times \delta \dot{\overline{v}}_{\text{CM}} + \delta \tilde{s} \times \dot{\overline{v}}_{\text{CM}} 
+ \tilde{J}_{\text{CM}} \delta \dot{\overline{\omega}} + (\overline{\omega} \times \tilde{J}_{\text{CM}} - (\tilde{J}_{\text{CM}} \overline{\omega}) \times) \delta \overline{\omega} 
+ (\overline{\omega} \times (\tilde{J}_{\text{CM}} \overline{\omega} \times - (\tilde{J}_{\text{CM}} \overline{\omega}) \times) + \tilde{J}_{\text{CM}} \dot{\overline{\omega}} \times - (\tilde{J}_{\text{CM}} \dot{\overline{\omega}}) \times) \tilde{\theta}_{\delta} 
= \tilde{s} \times \delta \dot{\tilde{v}} 
+ 2\tilde{s} \times \overline{\omega}_{0} \times \delta \tilde{v} 
+ \tilde{s} \times (\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times) \delta \tilde{x} 
+ \tilde{J} \delta \dot{\overline{\omega}} 
+ (\tilde{J} \overline{\omega}_{0} \times + \overline{\omega} \times \tilde{J} - (\tilde{J} \overline{\omega}) \times) \delta \tilde{\omega} 
+ (\tilde{J} \overline{\omega} \times - (\tilde{J} \dot{\overline{\omega}}) \times + \overline{\omega} \times (\tilde{J} \overline{\omega} \times - (\tilde{J} \overline{\omega}) \times) + \dot{\overline{v}} \times \tilde{s} \times) \tilde{\theta}_{\delta}$$
(8.67b)

To summarize:

$$\begin{cases}
\delta \overline{f}_{\text{in}} \\
\delta \overline{m}_{\text{in}}
\end{cases} = \begin{bmatrix}
m I & -\tilde{s} \times \\
\tilde{s} \times \tilde{J}
\end{bmatrix} \begin{cases}
\delta \dot{\tilde{v}} \\
\delta \dot{\tilde{\omega}}
\end{cases} \\
+ \begin{bmatrix}
2m \overline{\omega}_{0} \times & -(\tilde{s} \times \overline{\omega}_{0} \times + \overline{\omega} \times \tilde{s} \times -(\tilde{s} \times \overline{\omega}) \times) \\
2\tilde{s} \times \overline{\omega}_{0} \times & (\tilde{J} \overline{\omega}_{0} \times + \overline{\omega} \times \tilde{J} - (\tilde{J} \overline{\omega}) \times)
\end{bmatrix} \begin{cases}
\delta \tilde{v} \\
\delta \tilde{\omega}
\end{cases} \\
+ \begin{bmatrix}
m (\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times) \\
\tilde{s} \times (\dot{\overline{\omega}}_{0} \times + \overline{\omega}_{0} \times \overline{\omega}_{0} \times)
\end{bmatrix} \delta \tilde{x} \\
+ \begin{bmatrix}
-(\dot{\overline{\omega}} \times + \overline{\omega} \times \overline{\omega} \times) \tilde{s} \times \\
(\tilde{J} \overline{\omega} \times - (\tilde{J} \dot{\overline{\omega}}) \times + \overline{\omega} \times (\tilde{J} \overline{\omega} \times - (\tilde{J} \overline{\omega}) \times) + \dot{\overline{v}} \times \tilde{s} \times
\end{cases} \tilde{\theta}_{\delta}
\end{cases} (8.68)$$

# Chapter 9

# Constraints (aka Joints)

# 9.1 Algebraic Constraints

Consider a holonomic constraint equation of the form

$$\phi\left(q,t\right) = 0\tag{9.1}$$

Its time derivative and perturbation yields

$$\delta \frac{\mathrm{d}}{\mathrm{d}t} (\boldsymbol{\mu}^{T} \boldsymbol{\phi}) = \delta \dot{\boldsymbol{\mu}}^{T} \boldsymbol{\phi} + \delta \boldsymbol{\phi}^{T} \dot{\boldsymbol{\mu}} + \delta \boldsymbol{\mu}^{T} \dot{\boldsymbol{\phi}} + \delta \dot{\boldsymbol{\phi}}^{T} \boldsymbol{\mu} 
= \delta \dot{\boldsymbol{\mu}}^{T} \boldsymbol{\phi} + \delta \boldsymbol{q}^{T} \boldsymbol{\phi}_{/\boldsymbol{q}}^{T} \dot{\boldsymbol{\mu}} + \delta \boldsymbol{\mu}^{T} (\boldsymbol{\phi}_{/\boldsymbol{q}} \dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t}) 
+ (\delta \dot{\boldsymbol{q}}^{T} \boldsymbol{\phi}_{/\boldsymbol{q}}^{T} + \delta \boldsymbol{q}^{T} (\boldsymbol{\phi}_{/\boldsymbol{q}} \dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t})_{/\boldsymbol{q}}^{T}) \boldsymbol{\mu} 
= \delta \dot{\boldsymbol{q}}^{T} \boldsymbol{\phi}_{/\boldsymbol{q}}^{T} \boldsymbol{\mu} 
+ \delta \boldsymbol{q}^{T} ((\boldsymbol{\phi}_{/\boldsymbol{q}} \dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t})_{/\boldsymbol{q}}^{T} \boldsymbol{\mu} + \boldsymbol{\phi}_{/\boldsymbol{q}}^{T} \dot{\boldsymbol{\mu}}) 
+ \delta \dot{\boldsymbol{\mu}}^{T} \boldsymbol{\phi} 
+ \delta \boldsymbol{\mu}^{T} (\boldsymbol{\phi}_{/\boldsymbol{q}} \dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t}) \tag{9.2}$$

Its linearization yields

$$\Delta \left( \delta \frac{\mathrm{d}}{\mathrm{d}t} \left( \boldsymbol{\mu}^{T} \boldsymbol{\phi} \right) \right) = \delta \dot{\boldsymbol{q}}^{T} \left( \boldsymbol{\phi}_{/\boldsymbol{q}}^{T} \Delta \boldsymbol{\mu} + \left( \boldsymbol{\phi}_{/\boldsymbol{q}}^{T} \boldsymbol{\mu} \right)_{/\boldsymbol{q}} \Delta \boldsymbol{q} \right) 
+ \delta \boldsymbol{q}^{T} \left( \left( \boldsymbol{\phi}_{/\boldsymbol{q}} \dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t} \right)_{/\boldsymbol{q}}^{T} \Delta \boldsymbol{\mu} + \boldsymbol{\phi}_{/\boldsymbol{q}} \Delta \dot{\boldsymbol{\mu}} + \left( \boldsymbol{\phi}_{/\boldsymbol{q}} \Delta \dot{\boldsymbol{q}} \right)_{/\boldsymbol{q}}^{T} \boldsymbol{\mu} \right) 
+ \left( \left( \boldsymbol{\phi}_{/\boldsymbol{q}} \dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t} \right)_{/\boldsymbol{q}}^{T} \boldsymbol{\mu} + \boldsymbol{\phi}_{/\boldsymbol{q}}^{T} \dot{\boldsymbol{\mu}} \right)_{/\boldsymbol{q}} \Delta \boldsymbol{q} \right) 
+ \delta \dot{\boldsymbol{\mu}}^{T} \boldsymbol{\phi}_{/\boldsymbol{q}} \Delta \boldsymbol{q} 
+ \delta \boldsymbol{\mu}^{T} \left( \boldsymbol{\phi}_{/\boldsymbol{q}} \Delta \dot{\boldsymbol{q}} + \left( \boldsymbol{\phi}_{/\boldsymbol{q}} \dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t} \right)_{/\boldsymbol{q}} \Delta \boldsymbol{q} \right) \tag{9.3}$$

An unconstrained problem of the form

$$M\dot{q} - p = 0$$
 (9.4a)  
 $\dot{p} = F(q, \dot{q}, t)$  (9.4b)

becomes

$$M\dot{q} - p + \phi_{/a}^T \mu = 0 \tag{9.5a}$$

$$\dot{\boldsymbol{p}} + \left(\phi_{/\boldsymbol{q}}\dot{\boldsymbol{q}} + \phi_{/t}\right)_{/\boldsymbol{q}}^{T}\boldsymbol{\mu} + \phi_{/\boldsymbol{q}}^{T}\dot{\boldsymbol{\mu}} = \boldsymbol{F}\left(\boldsymbol{q}, \dot{\boldsymbol{q}}, t\right)$$
(9.5b)

$$\phi = 0 \tag{9.5c}$$

$$\phi_{/q}M^{-1}p + \phi_{/t} = 0, \tag{9.5d}$$

where  $\dot{q} = M^{-1}p$  has been used in Eq. (9.5d). Actually,  $\dot{\mu}$  is independent of  $\mu$ ;  $\mu$  by definition is zero if the exact solution is considered. So  $\dot{\mu}$  is redefined as  $\dot{\mu} = \lambda$ :

$$M\dot{q} - p + \phi_{/q}^T \mu = 0 \tag{9.6a}$$

$$\dot{\mathbf{p}} + \left(\phi_{/q}\dot{\mathbf{q}} + \phi_{/t}\right)_{/q}^{T} \boldsymbol{\mu} + \phi_{/q}^{T} \boldsymbol{\lambda} = \mathbf{F}\left(\mathbf{q}, \dot{\mathbf{q}}, t\right)$$
(9.6b)

$$\phi = 0 \tag{9.6c}$$

$$\phi_{/q}M^{-1}p + \phi_{/t} = 0.$$
 (9.6d)

If  $\mu = 0$  then a conventional DAE of index 3 results, i.e.

$$M\dot{q} - p = 0 \tag{9.7a}$$

$$\dot{\boldsymbol{p}} + \boldsymbol{\phi}_{/\boldsymbol{q}}^T \boldsymbol{\lambda} = \boldsymbol{F}(\boldsymbol{q}, \dot{\boldsymbol{q}}, t) \tag{9.7b}$$

$$\phi = \mathbf{0},\tag{9.7c}$$

while the previous form is known as stabilized index 2 form. The latter is typically used throughout MBDyn, while the former is used in the initial assembly and, occasionally, in specific constraints.

# 9.1.1 Beam Slider Joint

The beam slider joint allows a point attache to a node,  $x_c = x_b + R_b f_b$  to slide along a sequence of three-node beam elements. The current contact position on the beam is  $x = \sum_{i=1}^{3} N_i(s)(x_i + R_i f_i)$ .

Files. It is implemented in files mbdyn/struct/beamslider.h mbdyn/struct/beamslider.cc

## Unknowns.

- s position along the beam
- F reaction force vector (three components)
- *M* reaction moment vector (no components for the *spherical* slider, two components for the *classical* slider, three components for the *spline* slider, currently not implemented)

If friction is present additional unknowns depend on the chosen friction model.

#### Definitions.

- $\bullet \ \ \boldsymbol{x}_{ti} = \boldsymbol{x}_i + \boldsymbol{R}_i \boldsymbol{f}_i$
- $l = \sum_{i=1}^{3} N_{i/s}(s) x_{ti}$  beam tangent

•  $e_{3a} = l/\sqrt{l \cdot l}$  unit beam tangent

•  $x_c = x_b + R_b f_b$  body sliding point position

•  $x = \sum_{i=1}^{3} N_i(s)(x_i + R_i f_i)$  contact point position on the beam

•  $v_c = \dot{x}_b + \omega_b \times R_b f_b$  body sliding point velocity

•  $v = \sum_{i=1}^{3} N_i(s) (\dot{x}_i + \omega_i \times R_i f_i)$  contact point velocity on the beam

# Equations.

• 1:  $\mathbf{F} \cdot \mathbf{l}/\text{dCoef} = 0$ 

• 2-4:  $(\boldsymbol{x}_c - \boldsymbol{x})/\text{dCoef} = \boldsymbol{0}$ 

If *classical* two additiona equation:

• 5:  $\mathbf{R}_{b}(2) \cdot \mathbf{l} = 0$ 

• 6:  $\mathbf{R}_b(3) \cdot \mathbf{l} = 0$ 

If spline: not implemented

Friction If friction is present the friction coefficient f is computed as a function of the relative sliding velocity  $v_{rel} = e_{3a} \cdot v_{rel}$  where  $v_{rel} = v_c - v$ . The tangent friction force component is  $F_3 = f * S_{hc} * \sqrt{(F \cdot F)}$  and his direction is that of  $e_{3a}$ , so that the resultant reaction force is  $F_{res} = F - e_{3a}F_3$ 

#### Friction linearization.

$$\Delta v_{rel} = \boldsymbol{e}_{3a} \cdot \Delta \boldsymbol{v}_{rel} + \boldsymbol{v}_{rel} \cdot \Delta \boldsymbol{e}_{3a}$$

$$\begin{split} \boldsymbol{e}_{3a} \cdot \Delta \boldsymbol{v}_{rel} = & \boldsymbol{e}_{3a} \cdot \Delta \boldsymbol{x}_c \\ &- \sum_{i=1}^3 \boldsymbol{e}_{3a} \cdot (\dot{\boldsymbol{x}}_i + \boldsymbol{\omega}_i \times \boldsymbol{R}_i \boldsymbol{f}_i) N_{i/s} \Delta s \\ &- \sum_{i=1}^3 N_i \boldsymbol{e}_{3a} \cdot \Delta \dot{\boldsymbol{x}}_i \\ &- \sum_{i=1}^3 N_i (\boldsymbol{R}_i \boldsymbol{f}_i) \times \boldsymbol{e}_{3a} \Delta \boldsymbol{\omega}_i \\ &- \sum_{i=1}^3 N_i (\boldsymbol{R}_i \boldsymbol{f}_i) \times \boldsymbol{\omega}_i \times \boldsymbol{e}_{3a} \mathrm{dCoef} \Delta \dot{\boldsymbol{g}} \end{split}$$

where, as explained in Sec. 5.1,  $\Delta \omega = \Delta \dot{g} - \omega_{\text{ref}} \times \Delta \dot{g} * dCoef$ . Furthermore,

$$oldsymbol{v} \Delta oldsymbol{e}_{3a} = \left(rac{oldsymbol{v}}{\sqrt{l \cdot l}} - rac{v_{rel} oldsymbol{l}}{(oldsymbol{l} \cdot oldsymbol{l})^{3/2}}
ight) \cdot \Delta oldsymbol{l}$$

with

$$egin{aligned} \Delta m{l} &= \sum_{i=1}^3 N_{i/ss} m{x}_{ti} \Delta \dot{s} \ &+ \sum_{i=1}^3 N_{i/s} m{I} ext{dCoef} \Delta \dot{m{x}}_i \ &+ \sum_{i=1}^3 N_{i/s} (-m{R}_i m{f}_i) imes ext{dCoef} \Delta \dot{m{g}}_i \end{aligned}$$

# 9.1.2 Clamp Joint

The clamp joint (Clamp) imposes the position and the orientation of a node.

Files. It is implemented in files
 mbdyn/struct/genj.h
 mbdyn/struct/genj.cc

Definitions.

$$d_c = x - x_0 \tag{9.8}$$

$$\boldsymbol{\theta}_c = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}\boldsymbol{R}_0^T\right)\right) \tag{9.9}$$

Constraint Equation.

$$d_c = 0 ag{9.10}$$

$$\boldsymbol{\theta}_c = \mathbf{0} \tag{9.11}$$

Perturbation.

$$\delta d_c = \delta x \tag{9.12}$$

$$\delta \boldsymbol{\theta}_c = \boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_c) \, \boldsymbol{\theta}_\delta \tag{9.13}$$

Forces.

$$f = \lambda \tag{9.14a}$$

$$m = \Gamma^{-T}(\theta_c) \overline{\mu} \stackrel{\text{def}}{=} \mu$$
 (9.14b)

Linearization.

$$\begin{bmatrix} 0 & 0 \\ 0 & 0 \\ I & 0 \\ 0 & I \end{bmatrix} \left\{ \begin{array}{c} \Delta x \\ \theta_{\Delta} \end{array} \right\} + \begin{bmatrix} I & 0 \\ 0 & I \\ 0 & 0 \\ 0 & 0 \end{bmatrix} \left\{ \begin{array}{c} \Delta \lambda \\ \Delta \mu \end{array} \right\} = - \left\{ \begin{array}{c} -\lambda \\ -\mu \\ -d_c \\ -\theta_c \end{array} \right\}$$
(9.15)

since  $\Gamma(\theta_c) \theta_c = \theta_c$ .

#### 9.1.3 Distance Joint

The distance joint (DistanceJoint) imposes the distance between two nodes, which may depend on time and other states of the problem.

Variants. There is a variant with offsets (DistanceJointWithOffset), discussed in Section 9.1.4.

Files. It is implemented in files mbdyn/struct/distance.h mbdyn/struct/distance.cc

Definitions.

$$d = x_2 - x_1 \tag{9.16}$$

$$d = \sqrt{d^T d} \tag{9.17}$$

$$u = \frac{d}{d} \tag{9.18}$$

Limitations.

$$d > 0 \tag{9.19}$$

Constraint Equation.

$$d\sqrt{\mathbf{u}^T \mathbf{u}} = d \tag{9.20}$$

Forces.

$$F_1 = \alpha \mathbf{u} \tag{9.21a}$$

$$F_2 = -\alpha u \tag{9.21b}$$

Linearization.

$$\begin{bmatrix} \frac{\alpha}{d} \mathbf{I} & -\frac{\alpha}{d} \mathbf{I} & -\mathbf{u} \\ -\frac{\alpha}{d} \mathbf{I} & \frac{\alpha}{d} \mathbf{I} & \mathbf{u} \\ -\mathbf{u}^{T} & \mathbf{u}^{T} & 0 \end{bmatrix} \begin{Bmatrix} \delta \mathbf{x}_{1} \\ \delta \mathbf{x}_{2} \\ \delta \alpha \end{Bmatrix} = \begin{Bmatrix} \alpha \mathbf{u} \\ -\alpha \mathbf{u} \\ d \left( 1 - \sqrt{\mathbf{u}^{T} \mathbf{u}} \right) \end{Bmatrix}$$
(9.22)

Constraint Equation Derivative.

$$d\mathbf{u}^T \dot{\mathbf{u}} = 0 \tag{9.23}$$

Force Derivatives.

$$\dot{F}_1 = \alpha \dot{\boldsymbol{u}} + \dot{\alpha} \boldsymbol{u} \tag{9.24a}$$

$$\dot{F}_2 = -\alpha \dot{\boldsymbol{u}} - \dot{\alpha} \boldsymbol{u} \tag{9.24b}$$

where

$$\dot{\boldsymbol{u}} = \frac{\dot{\boldsymbol{x}}_2 - \dot{\boldsymbol{x}}_1}{d} - \boldsymbol{u}\frac{\dot{d}}{d} \tag{9.25}$$

Linearization.

$$\begin{bmatrix} \frac{\dot{\alpha}}{d} \mathbf{I} & \frac{\alpha}{d} \mathbf{I} & -\frac{\dot{\alpha}}{d} \mathbf{I} & -\frac{\dot{\alpha}}{d} \mathbf{I} & -\dot{\mathbf{u}} & -\mathbf{u} \\ -\frac{\dot{\alpha}}{d} \mathbf{I} & -\frac{\alpha}{d} \mathbf{I} & \frac{\dot{\alpha}}{d} \mathbf{I} & \dot{\mathbf{u}} & \mathbf{u} \\ -\dot{\mathbf{u}}^{T} & -\mathbf{u}^{T} & \dot{\mathbf{u}}^{T} & \mathbf{u}^{T} & \mathbf{0} & \mathbf{0} \end{bmatrix} \begin{bmatrix} \delta \mathbf{x}_{1} \\ \delta \dot{\mathbf{x}}_{1} \\ \delta \mathbf{x}_{2} \\ \delta \dot{\mathbf{x}}_{2} \\ \delta \dot{\alpha} \\ \delta \dot{\alpha} \end{bmatrix} = \begin{bmatrix} \alpha \dot{\mathbf{u}} + \dot{\alpha} \mathbf{u} \\ -\alpha \dot{\mathbf{u}} - \dot{\alpha} \mathbf{u} \\ -\alpha \dot{\mathbf{u}} - \dot{\alpha} \mathbf{u} \end{bmatrix}$$
(9.26)

#### 9.1.4 Distance Joint With Offsets

The distance joint with offset (DistanceJointWithOffset) imposes the distance between two points that rigidly offset from the respective nodes. It is a variant of the distance joint (DistanceJoint) discussed in Section 9.1.3.

Files. It is implemented in files mbdyn/struct/distance.h mbdyn/struct/distance.cc

Definitions.

$$d = x_2 + b_2 - x_1 - b_1 \tag{9.27}$$

$$d = \sqrt{\mathbf{d}^T \mathbf{d}} \tag{9.28}$$

$$u = \frac{d}{d} \tag{9.29}$$

Limitations:

$$d > 0 \tag{9.30}$$

Constraint equation

$$d\sqrt{\boldsymbol{u}^T\boldsymbol{u}} = d \tag{9.31}$$

Forces:

$$F_1 = \alpha u \tag{9.32a}$$

$$M_1 = \alpha b_1 \times u \tag{9.32b}$$

$$F_2 = -\alpha u \tag{9.32c}$$

$$M_2 = -\alpha b_2 \times u \tag{9.32d}$$

Linearization:

$$\begin{bmatrix} \frac{\alpha}{d}\mathbf{I} & -\frac{\alpha}{d}\mathbf{b}_{1} \times & -\frac{\alpha}{d}\mathbf{I} & \frac{\alpha}{d}\mathbf{b}_{2} \times & -\mathbf{u} \\ \frac{\alpha}{d}\mathbf{b}_{1} \times & -\frac{\alpha}{d}(\mathbf{b}_{1}+\mathbf{d}) \times \mathbf{b}_{1} \times & -\frac{\alpha}{d}\mathbf{b}_{1} \times & \frac{\alpha}{d}\mathbf{b}_{1} \times \mathbf{b}_{2} \times & -\mathbf{b}_{1} \times \mathbf{u} \\ -\frac{\alpha}{d}\mathbf{I} & \frac{\alpha}{d}\mathbf{b}_{1} \times & \frac{\alpha}{d}\mathbf{I} & -\frac{\alpha}{d}\mathbf{b}_{2} \times & \mathbf{u} \\ -\frac{\alpha}{d}\mathbf{b}_{2} \times & \frac{\alpha}{d}\mathbf{b}_{2} \times \mathbf{b}_{1} \times & \frac{\alpha}{d}\mathbf{b}_{2} \times & -\frac{\alpha}{d}(\mathbf{b}_{2}-\mathbf{d}) \times \mathbf{b}_{2} \times & \mathbf{b}_{2} \times \mathbf{u} \\ -\mathbf{u}^{T} & -(\mathbf{b}_{1} \times \mathbf{u})^{T} & \mathbf{u}^{T} & (\mathbf{b}_{2} \times \mathbf{u})^{T} & 0 \end{bmatrix} \begin{pmatrix} \delta \mathbf{x}_{1} \\ \delta \mathbf{g}_{1} \\ \delta \mathbf{x}_{2} \\ \delta \mathbf{g}_{2} \\ \delta \alpha \end{pmatrix} \\ = \begin{pmatrix} \alpha \mathbf{u} \\ \alpha \mathbf{b}_{1} \times \mathbf{u} \\ -\alpha \mathbf{u} \\ -\alpha \mathbf{b}_{2} \times \mathbf{u} \\ d \left(1 - \sqrt{\mathbf{u}^{T}\mathbf{u}}\right) \end{pmatrix} (9.33)$$

Constraint Equation Derivative

$$d\mathbf{u}^T \dot{\mathbf{u}} = 0 \tag{9.34}$$

Forces:

$$\dot{F}_1 = \alpha \dot{u} + \dot{\alpha} u \tag{9.35a}$$

$$\dot{\mathbf{M}}_{1} = \alpha \left( \boldsymbol{\omega}_{1} \times \boldsymbol{b}_{1} \right) \times \boldsymbol{u} + \alpha \boldsymbol{b}_{1} \times \dot{\boldsymbol{u}} + \dot{\alpha} \boldsymbol{b}_{1} \times \boldsymbol{u}$$

$$(9.35b)$$

$$\dot{\mathbf{F}}_2 = -\alpha \dot{\mathbf{u}} - \dot{\alpha} \mathbf{u} \tag{9.35c}$$

$$\dot{M}_2 = -\alpha \left(\omega_2 \times b_2\right) \times u - \alpha b_2 \times \dot{u} - \dot{\alpha} b_2 \times u \tag{9.35d}$$

Linearization: TODO©.

#### 9.1.5 Spherical hinge

The spherical hinge joint (SphericalHingeJoint) constrains the positions of two points, that may be rigidly offset from two nodes, to be coincident.

Variants. There exists a pinned version (SphericalPinJoint, TODO©).

Files. It is implemented in files
 mbdyn/struct/spherj.h
 mbdyn/struct/spherj.cc

Joint data.

$$\tilde{\boldsymbol{b}}_1, \tilde{\boldsymbol{b}}_2 \tag{9.36}$$

where:

 $\tilde{\boldsymbol{b}}_1,\,\tilde{\boldsymbol{b}}_2$  offset of connection point from nodes 1, 2 in node reference;

Constraint equations (normalized<sup>1</sup> by dCoef)

$$(x_2 + b_2) - (x_1 + b_1) = 0 (9.37)$$

where:

 $egin{aligned} \pmb{x}_1, \, \pmb{x}_2 & \text{position of nodes 1, 2;} \\ \pmb{R}_1, \, \pmb{R}_2 & \text{orientation of nodes 1, 2.} \end{aligned}$ 

 $b_1 = R_1 \tilde{b}_1$ ,  $b_2 = R_2 \tilde{b}_2$  offset of connection point from nodes 1, 2 in global frame Residual vector:

 $\begin{array}{rcl} \text{node1 momentum}: \ 1-3 & -=& \textbf{\textit{F}} \\ \text{node1 angular momentum}: \ 4-6 & -=& (\textbf{\textit{R}}_1 \cdot \textbf{\textit{d}}_1) \times \textbf{\textit{F}} \\ \text{node2 momentum}: \ 7-9 & +=& \textbf{\textit{F}} \\ \text{node2 angular momentum}: \ 10-12 & +=& (\textbf{\textit{R}}_2 \cdot \textbf{\textit{d}}_2) \times \textbf{\textit{F}} \\ \text{constraint}: \ 13-15 & =& ((\textbf{\textit{x}}_1 + \textbf{\textit{R}}_1 \cdot \textbf{\textit{d}}_1) - (\textbf{\textit{x}}_2 + \textbf{\textit{R}}_1 \cdot \textbf{\textit{d}}_2))/\texttt{dCoef} \end{array}$ 

where:

 $\boldsymbol{F}$  constraint reaction force.

# 9.1.6 Revolute hinge

The revolute hinge joint (PlaneHingeJoint) constrains the positions of two points, that may be rigidly offset from two nodes, to be coincident. It also constrains their orientations to keep the respective axis 3 parallel.

**Variants.** There exist a pinned version (RevolutePinJoint, TODOⓒ), a version that does not constrain the position (RevoluteRotationJoint), and a version which imposes the relative angular velocity about axis 3 (AxialRotationJoint).

Files. It is implemented in files
 mbdyn/struct/planej.h
 mbdyn/struct/planej.cc

Joint data.

$$d_1, d_2, R_{h1}, R_{h2}$$
 (9.38)

where:

 $d_1$ ,  $d_2$ : offset of nodes 1,2 in node reference;

 $R_{h1}$ ,  $R_{h2}$ : joint relative orientation wrt. nodes 1,2 (FIXME).

Constraint equations (normalized by dCoef)

$$(x_1 + R_1 \cdot d_1) - (x_2 + R_1 \cdot d_2) = 0 (R_1 \cdot R_{h1})[3] \cdot (R_2 \cdot R_{h2})[2] = 0 (R_1 \cdot R_{h1})[3] \cdot (R_2 \cdot R_{h2})[1] = 0$$

<sup>&</sup>lt;sup>1</sup>When purely algebraic constraints are considered, to improve the scaling of the matrix, the constraint equation can be divided by dCoef, the coefficient related to the integration method illustrated in Equation (6.27).

where:

 $x_1$ ,  $x_2$ : positions of nodes 1,2;  $R_1$ ,  $R_2$ : orientation of nodes 1, 2.

#### Residual vector:

$$\begin{array}{rcll} \text{node1 momentum}: \ 1-3 & -= & \textbf{\textit{F}} \\ \text{node1 angular momentum}: \ 4-6 & -= & (\textbf{\textit{R}}_1 \cdot \textbf{\textit{d}}_1) \times \textbf{\textit{F}} + \\ & & (\textbf{\textit{R}}_2 \cdot \textbf{\textit{R}}_{h2})[2] \times (\textbf{\textit{R}}_1 \cdot \textbf{\textit{R}}_{h1})[3] * \textbf{\textit{M}}[1] + \\ & & (\textbf{\textit{R}}_1 \cdot \textbf{\textit{R}}_{h1})[3] \times (\textbf{\textit{R}}_2 \cdot \textbf{\textit{R}}_{h2})[1] * \textbf{\textit{M}}[2] \\ \text{node2 momentum}: \ 7-9 & += & \textbf{\textit{F}} \\ \text{node2 angular momentum}: \ 10-12 & += & (\textbf{\textit{R}}_2 \cdot \textbf{\textit{d}}_2) \times \textbf{\textit{F}} + \\ & & (\textbf{\textit{R}}_2 \cdot \textbf{\textit{R}}_{h2})[2] \times (\textbf{\textit{R}}_1 \cdot \textbf{\textit{R}}_{h1})[3] * \textbf{\textit{M}}[1] + \\ & & (\textbf{\textit{R}}_1 \cdot \textbf{\textit{R}}_{h1})[3] \times (\textbf{\textit{R}}_2 \cdot \textbf{\textit{R}}_{h2})[1] * \textbf{\textit{M}}[2] \\ \text{constraint}: \ 13-15 & = & ((\textbf{\textit{x}}_1 + \textbf{\textit{R}}_1 \cdot \textbf{\textit{d}}_1) - (\textbf{\textit{x}}_2 + \textbf{\textit{R}}_1 \cdot \textbf{\textit{d}}_2))/\text{dCoef} \\ \text{constraint}: \ 16 & = & ((\textbf{\textit{R}}_1 \cdot \textbf{\textit{R}}_{h1})[3] \cdot (\textbf{\textit{R}}_2 \cdot \textbf{\textit{R}}_{h2})[2])/\text{dCoef} \\ \text{constraint}: \ 17 & = & ((\textbf{\textit{R}}_1 \cdot \textbf{\textit{R}}_{h1})[3] \cdot (\textbf{\textit{R}}_2 \cdot \textbf{\textit{R}}_{h2})[1])/\text{dCoef} \\ \end{array}$$

where:

**F**: constraint reaction force;

M: constraint moment reaction (third component null).

#### Friction:

- ullet add third component of constraint moment M
- add a constraint equation; this could be one of the following:
  - direct definition of M[3] in function of relative velocity, friction coefficient and F
  - impose null relative velocity
- optionally add internal states dynamic z (for friction)

#### add third component of constraint moment M

Residual vector:

```
node1 momentum: 1-3 -= \boldsymbol{F}
   nodel angular momentum: 4-6 - = (\mathbf{R}_1 \cdot \mathbf{d}_1) \times \mathbf{F} +
                                                                          (R_2 \cdot R_{h2})[2] \times (R_1 \cdot R_{h1})[3] * M[1] +
                                                                          (\mathbf{R}_1 \cdot \mathbf{R}_{h1})[3] \times (\mathbf{R}_2 \cdot \mathbf{R}_{h2})[1] * \mathbf{M}[2] +
                                                                          (R_1 \cdot R_{h1})[3] * M[3]
                 node2 momentum: 7-9 +=
node2 angular momentum: 10-12 + = (\mathbf{R}_2 \cdot \mathbf{d}_2) \times \mathbf{F} +
                                                                          (R_2 \cdot R_{h2})[2] \times (R_1 \cdot R_{h1})[3] * M[1] +
                                                                          (R_1 \cdot R_{h1})[3] \times (R_2 \cdot R_{h2})[1] * M[2] +
                                                                          (R_1 \cdot R_{h1})[3] * M[3]
                           constraint: 13 - 15
                                                                         ((oldsymbol{x}_1 + oldsymbol{R}_1 \cdot oldsymbol{d}_1) - (oldsymbol{x}_2 + oldsymbol{R}_1 \cdot oldsymbol{d}_2)) / 	exttt{dCoef}
                                                                          ((oldsymbol{R}_1 \cdot oldsymbol{R}_{h1})[3] \cdot (oldsymbol{R}_2 \cdot oldsymbol{R}_{h2})[2]) / 	exttt{dCoef}
                                   constraint: 16
                                                              = ((oldsymbol{R}_1 \cdot oldsymbol{R}_{h1})[3] \cdot (oldsymbol{R}_2 \cdot oldsymbol{R}_{h2})[1]) / 	exttt{dCoef}
                                   constraint: 17
                                                              = M[3] - f(\mathbf{F}, v, \text{friction coef})
                                         friction: 18
                                                                          (rel velocity)[3]
                                                                          \dot{z} - q(z,v)
         (optional) friction states: 19...
```

where v is the relative velocity  $v = r * (\omega_1 - \omega_2) \cdot (\mathbf{R}_1 \cdot \mathbf{R}_{h1})[3]$ . The constraint is based on positions. This means that during integration  $(\omega_1 - \omega_2)$  will NOT have exactly the direction  $(\mathbf{R}_1 \cdot \mathbf{R}_{h1})[3]$ . We choose to disregard this error. The friction moment should be along  $(\mathbf{R}_1 \cdot \mathbf{R}_{h1})[3]$ . r is the joint radius.

# CHECK THIS!!!

Explicit form of friction moment contribution (FIXME: remove vector  $(\mathbf{R}_1 \cdot \mathbf{R}_{h1})[3]$  and write scalar equation????):

$$f(\mathbf{F}, \text{rel velocity}): \mathbf{M}[3] = \text{sh\_c}(||\mathbf{F}||, f_{c}(v, z, \dot{z})) * (\mathbf{R}_{1} \cdot \mathbf{R}_{h1})[3] * ||\mathbf{F}|| * f_{c}(v, z, \dot{z}),$$
 with  $\mathbf{R}_{h1}$  constant.

Variation of friction moment contribution:

$$\delta(M[3](R_1 \cdot R_{h1})[3]) = M[3] * (R_{\delta 1} \times R_1)[3] + (R_1 \cdot R_{h1})[3]) * \delta M[3] 
= M[3] * R_1^T \cdot (R_{\delta 1} \times)[3] + (R_1 \cdot R_{h1})[3]) * \delta M[3]$$

Variation of friction moment contribution component:

$$\delta M[3] = \operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z})) * f_{c}(v, z, \dot{z}) * \frac{F}{||F||} \cdot \delta F + \\
\operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z})) * (R_{1} \cdot R_{h1})[3] * ||F|| * \frac{\partial f_{c}}{\partial v} * \delta v + \\
||F|| * f_{c}(v, z, \dot{z}) * \frac{\partial \operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z}))}{\partial ||F||} \frac{\partial ||F||}{\partial F} \cdot \delta F + \\
||F|| * f_{c}(v, z, \dot{z}) * \frac{\partial \operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z}))}{\partial f_{c}(v, z, \dot{z})} * \frac{\partial f_{c}}{\partial v} * \delta v$$

$$= \begin{pmatrix} \operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z})) * f_{c}(v, z, \dot{z}) \frac{F}{||F||} \\
||F|| * f_{c}(v, z, \dot{z}) * \frac{\partial \operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z}))}{\partial ||F||} \end{pmatrix} \cdot \delta F + \\
\begin{pmatrix} \operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z})) * ||F|| \\
||F|| * f_{c}(v, z, \dot{z}) * \frac{\partial \operatorname{sh\_c}(||F||, f_{c}(v, z, \dot{z}))}{\partial f_{c}(v, z, \dot{z})} \end{pmatrix} * \begin{cases} \frac{\partial f_{c}}{\partial v} * \delta v \\ \frac{\partial f_{c}}{\partial z} * \delta z \\ \frac{\partial f_{c}}{\partial z} * \delta z \\ \frac{\partial f_{c}}{\partial z} * \delta z \end{cases}
\end{cases}$$

where

• 
$$v = r * (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \cdot (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]$$
 so that
$$\delta v = d * (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\delta \boldsymbol{\omega}_1 - \delta \boldsymbol{\omega}_2) + d * (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \cdot (\boldsymbol{R}_{\delta 1} \times \boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]$$

$$= d * (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\delta \boldsymbol{\omega}_1 - \delta \boldsymbol{\omega}_2) + d * (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \cdot \boldsymbol{R}_{h1}^T \cdot \boldsymbol{R}_1^T \cdot (\boldsymbol{R}_{\delta 1} \times)[3]$$

• sh\_c(||F||, 
$$f_c(v, z, \dot{z})$$
) =  $r * C_{\alpha}(\alpha(\text{constants}, f_c(v, z, \dot{z}), ||F||, f_c(v, z, \dot{z}))) \frac{1}{\sqrt{1 + f_c^2(v, z, \dot{z})}}$ 

• 
$$\alpha(\text{constants}, f_{c}(v, z, \dot{z}), ||\mathbf{F}||, f_{c}(v, z, \dot{z})) = \sin^{-1}\left(\sqrt{\frac{2*31*||\mathbf{F}||}{E*b*\sqrt{1+f_{c}^{2}(v, z, \dot{z})}} \frac{r'/r}{r'-r}}\right)$$

• for very low joint loads (angle of contact  $\alpha < 20^{\circ}$ , i.e. about less that 1% of the joint allowable load) we can safely assume  $C_{\alpha} \approx 1$  so that  $\sinh_{\mathbf{c}}(||\mathbf{F}||, f_{\mathbf{c}}(v, z, \dot{z})) \approx r * \frac{1}{\sqrt{1 + f_{\mathbf{c}}^{2}(v, z, \dot{z})}}$ ,

$$\sqrt{1 + f_{\rm c}^2(v, z, \dot{z})}$$

$$\frac{\partial \text{sh\_c}(||\boldsymbol{F}||, f_{\rm c}(v, z, \dot{z}))}{\partial ||\boldsymbol{F}||} = \mathbf{0}$$
and
$$\frac{\partial \text{sh\_c}(||\boldsymbol{F}||, f_{\rm c}(v, z, \dot{z}))}{\partial f_{\rm c}(v, z, \dot{z})} = -r * (1 + f_{\rm c}^2(v, z, \dot{z}))^{-3/2} * f_{\rm c}(v, z, \dot{z})$$

# 9.1.7 Inline

This joint forces a point rigidly attached to node b to slide along a line rigidly attached to node a, thus removing 2 degrees of freedom.

Files. It is implemented in files
 mbdyn/struct/inline.h
 mbdyn/struct/inline.cc

**Definitions.** Orientation of line

$$R_v = R_a \tilde{R}_v \tag{9.39}$$

the axis is along local axis 3 of matrix  $\tilde{R}_v$ ,  $\tilde{e}_3$ , while directions  $\tilde{e}_1$ ,  $\tilde{e}_2$  are constrained. Origin of line

$$x_p = x_a + p = x_a + R_a \tilde{p} \tag{9.40}$$

Sliding point

$$x_q = x_b + q = x_b + R_b \tilde{q} \tag{9.41}$$

Constraint equations: distance between sliding point  $x_q$  and axis null in local directions  $\tilde{e}_1$ ,  $\tilde{e}_2$ , namely

$$\boldsymbol{e}_i^T \boldsymbol{d} = 0, \tag{9.42}$$

with i = 1, 2 and  $d = x_q - x_p$ . After simple manipulation,

$$\boldsymbol{e}_{i}^{T}\left(\boldsymbol{x}_{b}+\boldsymbol{q}-\boldsymbol{x}_{a}\right)-\tilde{\boldsymbol{e}}_{i}^{T}\tilde{\boldsymbol{p}}=0. \tag{9.43}$$

Perturbation:

$$\left(\boldsymbol{e}_{i}\times\left(\boldsymbol{x}_{b}+\boldsymbol{q}-\boldsymbol{x}_{a}\right)\right)^{T}\boldsymbol{\theta}_{a\delta}+\boldsymbol{e}_{i}^{T}\left(\delta\boldsymbol{x}_{b}-\boldsymbol{q}\times\boldsymbol{\theta}_{b\delta}-\delta\boldsymbol{x}_{a}\right)=0$$
(9.44)

Forces and moments:

$$f_a = -\sum_{i=1,2} e_i \lambda_i \tag{9.45a}$$

$$m_a = \sum_{i=1,2} e_i \times (x_b + q - x_a) \lambda_i$$

$$(9.45b)$$

$$f_b = \sum_{i=1,2} e_i \lambda_i \tag{9.45c}$$

$$m_b = -\sum_{i=1,2} e_i \times q\lambda_i \tag{9.45d}$$

Linearization

$$\begin{bmatrix} -\boldsymbol{e}_{i}^{T} & (\boldsymbol{e}_{i} \times (\boldsymbol{x}_{b} + \boldsymbol{q} - \boldsymbol{x}_{a}))^{T} & \boldsymbol{e}_{i}^{T} & -(\boldsymbol{e}_{i} \times \boldsymbol{q})^{T} \end{bmatrix} \begin{Bmatrix} \delta \boldsymbol{x}_{a} \\ \theta_{a\delta} \\ \delta \boldsymbol{x}_{b} \\ \theta_{b\delta} \end{Bmatrix} = 0$$
(9.46)

$$\delta \mathbf{f}_a = -\sum_{i=1,2} \left( \mathbf{e}_i \delta \lambda_i - \lambda_i \mathbf{e}_i \times \mathbf{\theta}_{a\delta} \right) \tag{9.47a}$$

$$\delta \boldsymbol{m}_{a} = \sum_{i=1,2} \left( \boldsymbol{e}_{i} \times \left( \boldsymbol{x}_{b} + \boldsymbol{q} - \boldsymbol{x}_{a} \right) \delta \lambda_{i} + \lambda_{i} \left( \boldsymbol{x}_{b} + \boldsymbol{q} - \boldsymbol{x}_{a} \right) \times \boldsymbol{e}_{i} \times \boldsymbol{\theta}_{a\delta} + \lambda_{i} \boldsymbol{e}_{i} \times \left( \delta \boldsymbol{x}_{b} - \boldsymbol{q} \times \boldsymbol{\theta}_{b\delta} - \delta \boldsymbol{x}_{a} \right) \right)$$

$$\delta \mathbf{f}_b = \sum_{i=1}^{n} \left( \mathbf{e}_i \delta \lambda_i - \lambda_i \mathbf{e}_i \times \mathbf{\theta}_{a\delta} \right) \tag{9.47c}$$

(9.47b)

$$\delta \boldsymbol{m}_{b} = -\sum_{i=1,2} \left( \boldsymbol{e}_{i} \times \boldsymbol{q} \delta \lambda_{i} + \lambda_{i} \boldsymbol{q} \times \boldsymbol{e}_{i} \times \boldsymbol{\theta}_{a\delta} - \lambda_{i} \boldsymbol{e}_{i} \times \boldsymbol{q} \times \boldsymbol{\theta}_{b\delta} \right)$$
(9.47d)

or

$$\begin{cases} \delta f_a \\ \delta m_a \\ \delta f_b \\ \delta m_b \end{cases} = \begin{bmatrix} -e_1 & -e_2 \\ e_1 \times (x_b + q - x_a) & e_2 \times (x_b + q - x_a) \\ e_1 & e_2 \\ -e_1 \times q & -e_2 \times q \end{bmatrix} \begin{cases} \delta \lambda_1 \\ \delta \lambda_2 \end{cases}$$

$$+ \begin{bmatrix} 0 & \sum_{i=1,2} \lambda_i e_i \times & 0 & 0 \\ -\sum_{i=1,2} \lambda_i e_i \times & \sum_{i=1,2} \lambda_i (x_b + q - x_a) \times e_i \times & \sum_{i=1,2} \lambda_i e_i \times q \times \\ 0 & -\sum_{i=1,2} \lambda_i e_i \times & 0 & 0 \\ 0 & -\sum_{i=1,2} \lambda_i q \times e_i \times & 0 & \sum_{i=1,2} \lambda_i e_i \times q \times \end{bmatrix} \begin{cases} \delta x_a \\ \theta_{a\delta} \\ \delta x_b \\ \theta_{b\delta} \end{cases}$$

$$(9.48)$$

# 9.1.8 Drive Hinge

This joint (DriveHingeJoint) forces two nodes to assume a relative orientation given by a rotation vector  $\boldsymbol{\theta}$ , whose direction with respect to node 1 represents the rotation axis, and whose amplitude represents the magnitude of the rotation.

**Variants.** There exist no variants, although a pinned version may be of use (TODO©).

Files. It is implemented in files mbdyn/struct/drvhinge.h mbdyn/struct/drvhinge.cc

Definitions.

$$egin{array}{lcl} oldsymbol{R}_{ ext{rel}} & = & oldsymbol{R}_{1}^{T} oldsymbol{R}_{2} \ oldsymbol{ heta} & = & ext{ax} \left( \exp^{-1} \left( oldsymbol{R}_{ ext{rel}} 
ight) 
ight) \end{array}$$

Limitations:

$$\|\boldsymbol{\theta}\| < \pi \tag{9.49}$$

Constraint equation

$$\theta - \theta_0 = \mathbf{0} \tag{9.50}$$

Couples:

$$M_1 = -R_1 \alpha$$

$$M_2 = R_1 \alpha$$

Linearization:

$$\begin{bmatrix} (\mathbf{R}_{1}\boldsymbol{\alpha}) \times & 0 & -\mathbf{R}_{1} \\ -(\mathbf{R}_{1}\boldsymbol{\alpha}) \times & 0 & \mathbf{R}_{1} \\ -\Gamma(\boldsymbol{\theta})^{-1}\mathbf{R}_{1}^{T} & \Gamma(\boldsymbol{\theta})^{-1}\mathbf{R}_{1}^{T} & 0 \end{bmatrix} \begin{cases} \delta \boldsymbol{g}_{1} \\ \delta \boldsymbol{g}_{2} \\ \delta \boldsymbol{\alpha} \end{cases} = \begin{cases} \mathbf{R}_{1}\boldsymbol{\alpha} \\ -\mathbf{R}_{1}\boldsymbol{\alpha} \\ \boldsymbol{\theta}_{0} - \boldsymbol{\theta} \end{cases}$$
(9.51)

The linearization of the reaction moments contribution to the moment equilibrium equations of the nodes is straightforward. The linearization of the constraint equation is a bit more complicated. According to the definition of  $\theta$ , its linearization yields

$$\delta \boldsymbol{\theta} = \Gamma (\boldsymbol{\theta})^{-1} \operatorname{ax} \left( \delta \boldsymbol{R}_{\text{rel}} \boldsymbol{R}_{\text{rel}}^T \right)$$

$$= \Gamma (\boldsymbol{\theta})^{-1} \operatorname{ax} \left( \delta \boldsymbol{R}_1^T \boldsymbol{R}_1 + \boldsymbol{R}_1^T \delta \boldsymbol{R}_2 \boldsymbol{R}_2^T \boldsymbol{R}_1 \right)$$

$$= \Gamma (\boldsymbol{\theta})^{-1} \operatorname{ax} \left( \boldsymbol{R}_1^T \boldsymbol{\theta}_{1\delta} \times^T \boldsymbol{R}_1 + \boldsymbol{R}_1^T \boldsymbol{\theta}_{2\delta} \times \boldsymbol{R}_1 \right)$$

$$= \Gamma (\boldsymbol{\theta})^{-1} \operatorname{ax} \left( -\boldsymbol{R}_1^T \boldsymbol{\theta}_{1\delta} \times \boldsymbol{R}_1 + \boldsymbol{R}_1^T \boldsymbol{\theta}_{2\delta} \times \boldsymbol{R}_1 \right)$$

$$= \Gamma (\boldsymbol{\theta})^{-1} \operatorname{ax} \left( \boldsymbol{R}_1^T (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) \times \boldsymbol{R}_1 \right)$$

$$= \Gamma (\boldsymbol{\theta})^{-1} \boldsymbol{R}_1^T (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta})$$

according to the updated-updated<sup>2</sup> simplifications,  $\boldsymbol{\theta}_{i\delta} \stackrel{\text{uu}}{=} \delta \boldsymbol{g}_{i}$ , thus resulting in

$$\boldsymbol{\theta}_{\delta} = \Gamma \left( \boldsymbol{\theta} \right)^{-1} \boldsymbol{R}_{1}^{T} \left( \delta \boldsymbol{g}_{2} - \delta \boldsymbol{g}_{1} \right) \tag{9.52}$$

note that  $\Gamma(\theta)^{-1}$  does not simplify to I because  $\theta$  in general is a finite rotation.

#### 9.1.9 Drive Displacement

This joint (DriveDisplacementJoint) constrains the relative position of a point optionally offset from node b with respect to a point optionally offset from node a, so that their relative position matches a value that is imposed in node a reference frame; the imposed vector may depend on time and other states during the simulation.

Variants. There exists a pinned version (DriveDisplacementPinJoint), discussed in Section 9.1.10.

Files. It is implemented in files mbdyn/struct/drvdisp.h mbdyn/struct/drvdisp.cc

**Constraint Equation.** The constraint equation is

$$\phi = x_b + f_b - x_a - f_a - v = 0 \tag{9.53}$$

or, based on the initial assumptions,

$$\phi = x_b + f_b - x_a - R_a \left( \tilde{f}_a + \tilde{v} \right) = 0$$

$$(9.54)$$

<sup>&</sup>lt;sup>2</sup>In the following, the operator <sup>uu</sup>= will be used to indicate the updated-updated approximation.

The perturbation of the constraint equation yields

$$\delta \phi = \delta x_b - f_b \times \theta_{b\delta} - \delta x_a + d \times \theta_{a\delta}$$

$$(9.55)$$

where  $d = R_a \left( \tilde{f}_a + \tilde{v} \right)$ . The contribution of the constraint to the equilibrium equations is

$$\left\{
\begin{array}{c}
F_a \\
C_a \\
F_b \\
C_b
\end{array}
\right\} = \left\{
\begin{array}{c}
-\lambda \\
-d \times \lambda \\
\lambda \\
f_b \times \lambda
\end{array}
\right\}$$
(9.56)

where  $\lambda$  is the reaction force in the global reference frame.

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\begin{bmatrix}
0 & 0 & 0 & 0 & -I \\
0 & -\lambda \times d \times & 0 & 0 & -d \times \\
0 & 0 & 0 & 0 & I \\
0 & 0 & 0 & \lambda \times f_b \times & f_b \times \\
-I & d \times & I & -f_b \times & 0
\end{bmatrix}
\begin{cases}
\delta x_a \\
\theta_{a\delta} \\
\delta x_b \\
\theta_{b\delta} \\
\delta \lambda
\end{cases}$$
(9.57)

The derivative of the constraint equation is

$$\dot{\phi} = \dot{x}_b + \omega_b \times f_b - \dot{x}_a - \omega_a \times d - \dot{d} \tag{9.58}$$

where  $\dot{\boldsymbol{d}} = \boldsymbol{R}_a \dot{\tilde{\boldsymbol{v}}}$ ; its perturbation yields

$$\delta \dot{\boldsymbol{\phi}} = \delta \dot{\boldsymbol{x}}_b + \delta \boldsymbol{\omega}_b \times \boldsymbol{f}_b + \boldsymbol{\omega}_b \times \boldsymbol{\theta}_{b\delta} \times \boldsymbol{f}_b - \delta \dot{\boldsymbol{x}}_a - \delta \boldsymbol{\omega}_a \times \boldsymbol{d} - \boldsymbol{\omega}_a \times \boldsymbol{\theta}_{a\delta} \times \boldsymbol{d} - \boldsymbol{\theta}_{a\delta} \times \dot{\boldsymbol{d}}. \tag{9.59}$$

The contributions to the Jacobian matrix and residual of the initial assembly are

# 9.1.10 Drive Displacement Pin

This joint (DriveDisplacementPinJoint) is the "pinned" variant of the drive displacement joint (DriveDisplacementJoint) discussed in Section 9.1.9. It imposes the absolute position v of a point optionally connected to a node by a rigid offset f:

$$\phi = x + f - x_0 - v = 0 \tag{9.61}$$

The perturbation of the constraint equation yields

$$\delta \phi = \delta x - f \times \theta_{\delta} \tag{9.62}$$

The contribution of the constraint to the equilibrium equations is

where  $\lambda$  is the reaction force in the absolute reference frame.

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\begin{bmatrix}
0 & 0 & I \\
0 & \lambda \times f \times f \times f \times \\
I & -f \times 0
\end{bmatrix}
\begin{cases}
\delta x \\
\theta_{\delta} \\
\delta \lambda
\end{cases}$$
(9.64)

The derivative of the constraint equation is

$$\dot{\phi} = \dot{x} + \omega \times f - \dot{v}; \tag{9.65}$$

its perturbation yields

$$\delta \dot{\phi} = \delta \dot{x} - f \times \delta \omega - \omega \times f \times \theta_{\delta} \tag{9.66}$$

The contributions to the Jacobian matrix and residual of the initial assembly are

$$\begin{bmatrix} 0 & 0 & 0 & I \\ 0 & \lambda \times f \times -(\omega \times \mu) \times f \times & f \times \\ \frac{I}{I} & -f \times & 0 \\ \hline 0 & 0 & 0 \\ 0 & \mu \times f \times & 0 \\ 0 & -\omega \times f \times & 0 \end{bmatrix} \begin{cases} \delta x \\ \theta_{\delta} \\ \delta \lambda \end{cases}$$

$$\begin{bmatrix} 0 & 0 & 0 \\ 0 & f \times \mu \times & -f \times \omega \times \\ 0 & 0 & 0 \\ \hline 0 & 0 & I \\ 0 & 0 & f \times \\ I & -f \times & 0 \end{bmatrix} \begin{cases} \delta \dot{x} \\ \delta \omega \\ \delta \mu \end{cases} = \begin{cases} -\lambda \\ -f \times \lambda + f \times \omega \times \mu \\ \frac{x_0 + v - x - f}{-\mu} \\ -f \times \mu \\ \dot{v} - \dot{x} - \omega \times f \end{cases}$$

$$(9.67)$$

# 9.1.11 Imposed Displacement

The imposed displacement joint (ImposedDisplacementJoint) is similar to the drive displacement joint (DriveDisplacementPinJoint), discussed in Section 9.1.10, but the relative displacement v, a scalar possibly dependent on the time and on other states of the problem, is imposed only in direction  $\tilde{e}_a$ , relative to node a.

Variants. There exists a pinned version (ImposedDisplacementPinJoint), discussed in Section 9.1.12.

Files. It is implemented in files mbdyn/struct/impdisp.h mbdyn/struct/impdisp.cc

#### Constraint equation.

$$\phi = \boldsymbol{e}_a^T \left( \boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a - \boldsymbol{f}_a \right) - v = 0, \tag{9.68}$$

or, based on the initial assumptions,

$$\phi = \boldsymbol{e}_a^T \left( \boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a \right) - \left( \tilde{\boldsymbol{e}}_a^T \tilde{\boldsymbol{f}}_a + v \right) = 0, \tag{9.69}$$

or

$$\phi = \mathbf{e}_a^T \mathbf{d} - \left(\tilde{\mathbf{e}}_a^T \tilde{\mathbf{f}}_a + v\right) = 0, \tag{9.70}$$

where  $d = x_b + f_b - x_a$  and  $\tilde{e}_a$  is constant in the reference frame of node a. The perturbation of the constraint equation yields

$$\delta \phi = \boldsymbol{e}_{a}^{T} \left( \delta \boldsymbol{x}_{b} - \boldsymbol{f}_{b} \times \boldsymbol{\theta}_{b\delta} - \delta \boldsymbol{x}_{a} \right) + \left( \boldsymbol{e}_{a} \times (\boldsymbol{x}_{b} + \boldsymbol{f}_{b} - \boldsymbol{x}_{a}) \right)^{T} \boldsymbol{\theta}_{a\delta}, \tag{9.71}$$

or

$$\delta \phi = \boldsymbol{e}_{a}^{T} \left( \delta \boldsymbol{x}_{b} - \boldsymbol{f}_{b} \times \boldsymbol{\theta}_{b\delta} - \delta \boldsymbol{x}_{a} \right) + \left( \boldsymbol{e}_{a} \times \boldsymbol{d} \right)^{T} \boldsymbol{\theta}_{a\delta}. \tag{9.72}$$

The contribution of the constraint to the equilibrium equations is

$$\begin{cases}
F_a \\
C_a \\
F_b \\
C_b
\end{cases} = \begin{cases}
-e_a \lambda \\
-d \times e_a \lambda \\
e_a \lambda \\
f_b \times e_a \lambda
\end{cases} \tag{9.73}$$

where  $\lambda$  is the reaction force (a scalar).

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\begin{bmatrix}
0 & \lambda e_{a} \times & 0 & 0 & -e_{a} \\
-\lambda e_{a} \times & \lambda d \times e_{a} \times & \lambda e_{a} \times & -\lambda e_{a} \times f_{b} \times & -d \times e_{a} \\
0 & -\lambda e_{a} \times & 0 & 0 & e_{a} \\
0 & -\lambda f_{b} \times e_{a} \times & 0 & \lambda e_{a} \times f_{b} \times & f_{b} \times e_{a} \\
-e_{a}^{T} & -(d \times e_{a})^{T} & e_{a}^{T} & (f_{b} \times e_{a})^{T} & 0
\end{bmatrix} \begin{pmatrix} \delta x_{a} \\ \theta_{a\delta} \\ \delta x_{b} \\ \theta_{b\delta} \\ \delta \lambda \end{pmatrix}$$
(9.74)

The constraint derivative is

$$\dot{\phi} = \boldsymbol{e}_a^T \left( \dot{\boldsymbol{x}}_b + \boldsymbol{\omega}_b \times \boldsymbol{f}_b - \dot{\boldsymbol{x}}_a \right) + \boldsymbol{d}^T \left( \boldsymbol{\omega}_a \times \boldsymbol{e}_a \right) - \dot{\boldsymbol{v}} = 0, \tag{9.75}$$

or

$$\dot{\phi} = \mathbf{e}_a^T \dot{\mathbf{d}} + \mathbf{d}^T \left( \boldsymbol{\omega}_a \times \mathbf{e}_a \right) - \dot{v} = 0, \tag{9.76}$$

with  $\dot{d} = \dot{x}_b + \omega_b \times f_b - \dot{x}_a$ . Its linearization yields

$$\delta \dot{\phi} = \boldsymbol{e}_{a}^{T} \delta \dot{\boldsymbol{x}}_{b} - \boldsymbol{e}_{a}^{T} \delta \dot{\boldsymbol{x}}_{a} + (\boldsymbol{f}_{b} \times \boldsymbol{e}_{a})^{T} \delta \boldsymbol{\omega}_{b} - (\boldsymbol{d} \times \boldsymbol{e}_{a})^{T} \delta \boldsymbol{\omega}_{a} + (\boldsymbol{\omega}_{a} \times \boldsymbol{e}_{a})^{T} \delta \boldsymbol{x}_{b} - (\boldsymbol{\omega}_{a} \times \boldsymbol{e}_{a})^{T} \delta \boldsymbol{x}_{a} + (\boldsymbol{f}_{b} \times \boldsymbol{e}_{a} \times (\boldsymbol{\omega}_{b} - \boldsymbol{\omega}_{a}))^{T} \boldsymbol{\theta}_{b\delta} + \left(\boldsymbol{e}_{a} \times \left(\dot{\boldsymbol{d}} - \boldsymbol{\omega}_{a} \times \boldsymbol{d}\right)\right)^{T} \boldsymbol{\theta}_{a\delta}$$

$$(9.77)$$

# 9.1.12 Imposed Displacement Pin

The imposed displacement pin joint (ImposedDisplacementPinJoint) is the "pinned" variant of the imposed displacement joint (ImposedDisplacementJoint) discussed in Section 9.1.11.

In this case, the direction e is referred to the absolute frame, so it does no longer depend on the state of the problem.

**Variants.** There exists a version that imposes the relative displacement of two nodes along a direction that is fixed with respect to one of them (ImposedDisplacementJoint), discussed in Section 9.1.11.

Files. It is implemented in files mbdyn/struct/impdisp.h mbdyn/struct/impdisp.cc The constraint equation is

$$\phi = e^T \left( x + f - x_0 \right) - v = 0, \tag{9.78}$$

or

$$\phi = \mathbf{e}^T \mathbf{d} - v = 0, \tag{9.79}$$

where  $d = x + f - x_0$ . The perturbation of the constraint equation yields

$$\delta \phi = e^T \left( \delta \mathbf{x}_b - \mathbf{f}_b \times \mathbf{\theta}_{b\delta} \right). \tag{9.80}$$

The contribution of the constraint to the equilibrium equations is

where  $\lambda$  is the reaction force (a scalar).

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\begin{bmatrix} \mathbf{0} & \mathbf{0} & \mathbf{e} \\ \mathbf{0} & \lambda \mathbf{e} \times \mathbf{f} \times & \mathbf{f} \times \mathbf{e} \\ \mathbf{e}^{T} & (\mathbf{f} \times \mathbf{e})^{T} & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \delta \mathbf{x} \\ \boldsymbol{\theta}_{\delta} \\ \delta \lambda \end{Bmatrix}$$
(9.82)

The constraint derivative is

$$\dot{\phi} = e^T \left( \dot{x} + \omega \times f \right) - \dot{v} = 0, \tag{9.83}$$

or

$$\dot{\phi} = \mathbf{e}^T \dot{\mathbf{d}} - \dot{v} = 0, \tag{9.84}$$

Its linearization yields

$$\begin{bmatrix} 0 & 0 & 0 & 0 & e & 0 \\ 0 & \lambda e \times f \times & 0 & 0 & f \times e & 0 \\ 0 & 0 & 0 & 0 & 0 & e \\ 0 & \mu e \times f \times & 0 & 0 & 0 & f \times e \\ e^{T} & (f \times e)^{T} & 0 & 0 & 0 & 0 \\ 0 & -(f \times \omega \times e)^{T} & e^{T} & (f \times e)^{T} & 0 & 0 \end{bmatrix} \begin{pmatrix} \delta x \\ \theta_{\delta} \\ \delta \dot{x} \\ \delta \omega \\ \delta \lambda \\ \delta \mu \end{pmatrix}$$
(9.85)

# 9.1.13 Total Joint

This joint (TotalJoint) forces two nodes to assume an imposed relative position and orientation about selected axes. Both imposed position and orientation are specified in the reference frame of node 1. The joint consists in 6 equations, 3 for positions and 3 for orientation, that can be selectively turned on or off to enforce a constraint on that DOF.

**Variants.** There exists a pinned version of this joint that imposes the absolute position and orientation of a node (TotalPinJoint). It is discussed in Section 9.1.14.

Files. It is implemented in files
 mbdyn/struct/totalj.h
 mbdyn/struct/totalj.cc

**Definitions.** The position of the nodes with respect to the global reference frame are  $x_1$  and  $x_2$ . The matrices that describe the orientation of the nodes with respect to the global reference frame are  $R_1$  and  $R_2$ . An offset is allowed for the location of the points where the relative position is constrained; the offsets  $\tilde{f}_1$  and  $\tilde{f}_2$  are rigidly connected to the nodes, so in the global reference frame their expression is

$$f_1 = R_1 \tilde{f}_1 \tag{9.86a}$$

$$f_2 = R_2 \tilde{f}_2. \tag{9.86b}$$

The position constraint may be expressed in a reference frame that is rigidly connected to node 1,  $\tilde{R}_{1h}$ , whose orientation in the global reference frame is

$$R_{1h} = R_1 \tilde{R}_{1h}. \tag{9.87}$$

Similarly, the orientation constraint may be expressed in a reference frame that is rigidly connected to both nodes by matrices  $\tilde{R}_{1hr}$  and  $\tilde{R}_{2hr}$ , whose orientation in the global reference frame is

$$R_{1hr} = R_1 \tilde{R}_{1hr} \tag{9.88a}$$

$$R_{2hr} = R_2 \tilde{R}_{2hr}. \tag{9.88b}$$

The relative position and orientation may refer to different local reference frames to increase the versatility of the element.

It is essential to notice that the differentiation of the constraint orientation matrices does not affect the relative orientation between the constraint and each node, namely matrices  $\tilde{R}_{1hr}$  and  $\tilde{R}_{2hr}$ , which are constant. As a consequence,

$$\delta \mathbf{R}_{1hr} = \delta \mathbf{R}_1 \tilde{\mathbf{R}}_{1hr}$$

$$= \boldsymbol{\theta}_{1\delta} \times \mathbf{R}_1 \tilde{\mathbf{R}}_{1hr}$$

$$= \boldsymbol{\theta}_{1\delta} \times \mathbf{R}_{1hr}$$
(9.89a)

$$\delta \mathbf{R}_{2hr} = \boldsymbol{\theta}_{2\delta} \times \mathbf{R}_{2hr},\tag{9.89b}$$

and

$$\dot{R}_{1hr} = \omega_1 \times R_{1hr} \tag{9.90}$$

$$\dot{R}_{2hr} = \omega_2 \times R_{2hr}. \tag{9.91}$$

The same is true for the relative position orientation matrix,  $R_{1h}$ .

**Orientation Constraint.** The relative orientation is expressed by matrix

$$R_{\text{rel}} = R_{1hr}^T R_{2hr} \tag{9.92}$$

The desired relative orientation can be expressed by means of a rotation vector  $\theta_0$ ; the corresponding rotation matrix is

$$\mathbf{R}_0 = \exp\left(\mathbf{\theta}_0 \times\right). \tag{9.93}$$

This operation can always be performed with no ambiguity, regardless of the amplitude of  $\theta_0$ . However, the same is not true for the inverse operation, namely

$$\boldsymbol{\theta}_0 = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_0\right)\right),\tag{9.94}$$

which can only yield the minimal  $\theta_0$  corresponding to  $R_0$ , with the indetermination corresponding to an arbitrary amount of complete revolutions.

The equality

$$\theta = \theta_0 \tag{9.95}$$

implies that

$$R_{\rm rel} = R_0. \tag{9.96}$$

Equation (9.96) can be rewritten as

$$\boldsymbol{R}_{\text{rel}}\boldsymbol{R}_0^T = \boldsymbol{I},\tag{9.97}$$

and thus Eq. (9.95), after defining

$$R^{\delta} = R_{\rm rel} R_0^T, \tag{9.98}$$

is equivalent to

$$ax\left(\exp^{-1}\left(\mathbf{R}^{\delta}\right)\right) = \mathbf{0}.\tag{9.99}$$

In general, the difference between the desired rotation  $\theta_0$  and the current relative rotation vector between nodes 1 and 2,

$$\boldsymbol{\theta} = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1hr}^{T}\boldsymbol{R}_{2hr}\right)\right) \tag{9.100}$$

through the previous redefinition can be expressed as

$$\boldsymbol{\theta}^{\delta} = \operatorname{ax}\left(\operatorname{exp}^{-1}\left(\boldsymbol{R}_{1hr}^{T}\boldsymbol{R}_{2hr}\boldsymbol{R}_{0}^{T}\right)\right) \tag{9.101}$$

and is equivalent to

$$\boldsymbol{\theta}^{\delta} = \boldsymbol{\theta} - \boldsymbol{\theta}_0 \tag{9.102}$$

when  $\theta^{\delta} = \mathbf{0}$ .

**Position Constraint.** The desired relative position is imposed by means of a vector  $x_0$  defined in the relative position constraint reference frame of node 1. The relative position is represented by vector x, defined as

$$x = R_{1h}^{T} (x_2 + f_2 - x_1 - f_1);$$
 (9.103)

the constraint equations for the relative position are:

$$x = x_0. (9.104)$$

In analogy with the definition of  $\theta^{\delta}$ , a vector  $x^{\delta}$  can be used to express the constraint on the position DOFs,

$$\boldsymbol{x}^{\delta} = \boldsymbol{x} - \boldsymbol{x}_0. \tag{9.105}$$

**Constraint Equations.** The resulting constraint equations are:

$$\boldsymbol{x}^{\delta} = \boldsymbol{0} \tag{9.106a}$$

$$\boldsymbol{\theta}^{\delta} = \mathbf{0}.\tag{9.106b}$$

Any component of  $\boldsymbol{x}^{\delta}$  and  $\boldsymbol{\theta}^{\delta}$  can be selectively set to zero to enforce a constraint on that degree of freedom. The axis about which the constraint is applied can be arbitrarily defined with respect to the node orientation by appropriately setting the constant relative orientation matrix of each node, both for position  $(\tilde{\boldsymbol{R}}_{1h})$  and for orientation  $(\tilde{\boldsymbol{R}}_{1hr})$  and  $\tilde{\boldsymbol{R}}_{2hr}$ . For imposed rotations, an arbitrary amplitude of the rotation about the constraint axis can be imposed by means of the components of vector  $\boldsymbol{\theta}_0$ . The same is true for positions, by means of  $\tilde{\boldsymbol{v}}$ .

Alternatively, equations related to any of the components of  $\boldsymbol{x}^{\delta}$  and  $\boldsymbol{\theta}^{\delta}$  can be omitted, thus omitting the constraint along or about the corresponding axis. The corresponding value of  $\boldsymbol{x}^{\delta}$  and  $\boldsymbol{\theta}^{\delta}$  could be used to apply moments based on the relative position/orientation of the nodes, e.g. linear/rotational springs or dampers. In this case, the singularity problem on rotations is back: the norm of the relative rotation must not exceed  $\pi$ , i.e.  $|\boldsymbol{\theta}^{\delta}| < \pi$ . Note that the relative rotation is computed with respect to  $\boldsymbol{\theta}_0$ , so an anelastic (or imposed) rotation can be easily applied to the spring, resulting in an imposed rotation with stiffness.

**Linearization.** First, the perturbation of  $x^{\delta}$ ,

$$\delta \boldsymbol{x}^{\delta} = \boldsymbol{R}_{1h}^{T} \left( \delta \boldsymbol{x}_{2} - \boldsymbol{b}_{2} \times \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_{1} + \boldsymbol{b}_{1} \times \boldsymbol{\theta}_{1\delta} \right) \tag{9.107}$$

is computed, where

$$\mathbf{b}_1 = \mathbf{x}_2 + \mathbf{f}_2 - \mathbf{x}_1 \tag{9.108a}$$

$$b_2 = f_2.$$
 (9.108b)

Note that, since the constraint equations are defined by setting to zero any components of the vector  $\boldsymbol{x}^{\delta}$ , the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix  $\boldsymbol{R}_{1h}$ .

Then, the perturbation of  $\boldsymbol{\theta}^{\delta}$  results from

$$\theta_{\delta}^{\delta} \times = \delta \mathbf{R}^{\delta} \mathbf{R}^{\delta T} 
= \mathbf{R}_{1hr}^{T} \boldsymbol{\theta}_{1\delta} \times^{T} \mathbf{R}_{1hr} + \mathbf{R}_{1hr}^{T} \boldsymbol{\theta}_{2\delta} \times \mathbf{R}_{1hr} 
= \mathbf{R}_{1hr}^{T} (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) \times \mathbf{R}_{1hr},$$
(9.109)

which implies

$$\boldsymbol{\theta}_{\delta}^{\delta} = \boldsymbol{R}_{1hr}^{T} \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right). \tag{9.110}$$

Note that, since the constraint equations are defined by setting to zero any components of the vector  $\boldsymbol{\theta}^{\delta}$ , the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix  $\boldsymbol{R}_{1hr}$ .

After calling  $\tilde{\lambda}_x$  and  $\tilde{\lambda}_{\theta}$  the Lagrange multipliers respectively related to the relative position and orientation constraints, and noticing that in the global reference frame they become

$$\lambda_x = R_{1h}\tilde{\lambda}_x \tag{9.111a}$$

$$\lambda_{\theta} = R_{1hr} \tilde{\lambda}_{\theta}, \tag{9.111b}$$

the contribution of the constraint reactions to the equilibrium equations of the participating nodes is

$$F_1 = -\lambda_x \tag{9.112a}$$

$$C_1 = -b_1 \times \lambda_x - \lambda_\theta \tag{9.112b}$$

$$F_2 = \lambda_x$$
 (9.112c)

$$C_2 = b_2 \times \lambda_x + \lambda_\theta. \tag{9.112d}$$

Due to the simplifications related to the updated-updated approach, the contribution of the constraint equations and of the equilibrium to the Jacobian matrix is:

$$\begin{bmatrix}
0 & \lambda_{x} \times & 0 & 0 & -R_{1h} & 0 \\
-\lambda_{x} \times & b_{1} \times \lambda_{x} \times + \lambda_{\theta} \times & \lambda_{x} \times & -\lambda_{x} \times b_{2} \times & -b_{1} \times R_{1h} & -R_{1hr} \\
0 & -\lambda_{x} \times & 0 & 0 & R_{1h} & 0 \\
0 & -b_{2} \times \lambda_{x} \times -\lambda_{\theta} \times & 0 & \lambda_{x} \times b_{2} \times & b_{2} \times R_{1h} & R_{1hr} \\
\hline
-R_{1h}^{T} & R_{1h}^{T} b_{1} \times & R_{1h}^{T} & -R_{1h}^{T} b_{2} \times & 0 & 0 \\
0 & -R_{1hr}^{T} & 0 & R_{1hr}^{T} & 0 & 0
\end{bmatrix}
\begin{bmatrix}
\delta x_{1} \\ \theta_{1\delta} \\ \delta x_{2} \\ \theta_{2\delta} \\ \hline
\delta \lambda_{x} \\ \delta \lambda_{x} \\ \delta \lambda_{\theta}
\end{bmatrix}$$

$$= \begin{cases}
\lambda_{x} \\
b_{1} \times \lambda_{x} + \lambda_{\theta} \\
-\lambda_{x} \\
-\lambda_{x} \\
-b_{2} \times \lambda_{x} - \lambda_{\theta} \\
-\alpha_{\delta}
\end{cases}$$
(9.113)

The updated-updated form is obtained by simply replacing  $\theta_{1\delta}$  and  $\theta_{2\delta}$  with  $\delta g_1$  and  $\delta g_2$ , respectively.

## Summary

- each component of the relative position/orientation can be subjected to separate constraint conditions:
- an ideal constraint results from activating the constraint equation on that degree of freedom and setting to zero, or to any desired, time dependent value the relative position/orientation of that component;
- a deformable constraint results from deactivating the constraint equation on that degree of freedom, possibly adding a constitutive law based on that error and possibly on its derivative (currently, this requires a separate instance of a deformable element); in this case, the norm of the amplitude of the relative orientation is limited to  $\pi$ ;
- the imposed relative orientation goes in matrix  $R_0$  by means of a rotation vector  $\theta_0$  which can be time dependent; there is no limitation on the amplitude of that rotation;
- friction can be added as well on those components that are not constrained;
- an interesting option, left as a future development, consists in leaving all the constraint equations always in place, and activate/deactivate them based on some trigger.

# Future Development: Velocity/Acceleration

The time derivative of vector  $\boldsymbol{x}^{\delta}$  yields

$$v^{\delta} = \dot{x} - v_0 = R_{1h}^T \left( \dot{x}_2 + \omega_2 \times f_2 - \dot{x}_1 - \omega_1 \times (x_2 + f_2 - x_1) \right) - v_0.$$
(9.114)

Its linearization yields

$$\begin{split} \delta \boldsymbol{v}^{\delta} &= \delta \dot{\boldsymbol{x}} \\ &= R_{1h}^T \delta \dot{\boldsymbol{x}}_2 \\ &= R_{1h}^T \delta \dot{\boldsymbol{x}}_1 \\ &= R_{1h}^T f_2 \times \delta \boldsymbol{\omega}_2 \\ &+ R_{1h}^T (\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1) \times \delta \boldsymbol{\omega}_1 \\ &- R_{1h}^T \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_2 \\ &+ R_{1h}^T \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_2 \\ &+ R_{1h}^T \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_1 \\ &- R_{1h}^T (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} \\ &+ R_{1h}^T (\dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1 - \boldsymbol{\omega}_1 \times (\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1)) \times \boldsymbol{\theta}_{1\delta} \\ &\stackrel{\text{uii}}{=} R_{1h}^T \delta \dot{\boldsymbol{x}}_2 \\ &- R_{1h}^T \delta \dot{\boldsymbol{x}}_1 \\ &- R_{1h}^T \boldsymbol{f}_2 \times \delta \dot{\boldsymbol{g}}_2 \\ &+ R_{1h}^T (\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1) \times \delta \dot{\boldsymbol{g}}_1 \\ &- R_{1h}^T \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_2 \\ &+ R_{1h}^T \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_1 \\ &+ R_{1h}^T ((\boldsymbol{f}_2 \times \boldsymbol{\omega}_2) \times + \boldsymbol{\omega}_1 \times \boldsymbol{f}_2 \times) \boldsymbol{\theta}_{2\delta} \\ &+ R_{1h}^T ((\boldsymbol{f}_2 \times \boldsymbol{\omega}_2) \times + \boldsymbol{\omega}_1 \times \boldsymbol{f}_2 \times) \boldsymbol{\theta}_{2\delta} \\ &+ R_{1h}^T ((\dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1) \times - \boldsymbol{\omega}_1 \times (\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1) \times \boldsymbol{\theta}_{1\delta}. \end{split} \tag{9.115}$$

The time derivative of matrix  $\mathbf{R}^{\delta}$  yields the constraint equation on the angular velocity

$$\omega^{\delta} \times = \dot{\mathbf{R}}^{\delta} \mathbf{R}^{\delta T}$$

$$= \mathbf{R}_{1hr}^{T} (\omega_{2} - \omega_{1}) \times \mathbf{R}_{1hr} - \mathbf{R}^{\delta} \omega_{0} \times \mathbf{R}^{\delta T}, \qquad (9.116)$$

which results in

$$\boldsymbol{\omega}^{\delta} = \boldsymbol{R}_{1hr}^{T} \left( \boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1} \right) - \boldsymbol{R}^{\delta} \boldsymbol{\omega}_{0}, \tag{9.117}$$

where  $\omega_0$  is the derivative of the imposed orientation,

$$\omega_0 = \dot{\theta}_0. \tag{9.118}$$

Note that if the angular velocity constraint is the derivative of an orientation constraint,  $\mathbf{R}^{\delta} = \mathbf{I}$ , so, by setting  $\boldsymbol{\omega}^{\delta} = \mathbf{0}$ , Equation (9.117) becomes

$$\boldsymbol{\omega}_0 = \boldsymbol{R}_{1hr}^T \left( \boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right). \tag{9.119}$$

Otherwise, Equation (9.117) represents a non-holonomic constraint. In this case,  $\mathbf{R}^{\delta}$  is again the identity matrix, although resulting from an unknown  $\mathbf{R}_0$ , which is the result of integrating the dynamics of the problem with the non-holonomic constraint represented by Equation (9.119). In fact,

$$R_0 = R_{1hr}^T R_{2hr} (9.120)$$

is the definition of the relative orientation resulting from imposing the constraint of Equation (9.119).

The perturbation of Equation (9.119) results in

$$\delta\left(\mathbf{R}_{1hr}^{T}\left(\boldsymbol{\omega}_{2}-\boldsymbol{\omega}_{1}\right)\right) = \mathbf{R}_{1hr}^{T}\left(\delta\boldsymbol{\omega}_{2}-\delta\boldsymbol{\omega}_{1}+\left(\boldsymbol{\omega}_{2}-\boldsymbol{\omega}_{1}\right)\times\boldsymbol{\theta}_{1\delta}\right)$$

$$\stackrel{\text{uu}}{=} \mathbf{R}_{1hr}^{T}\left(\delta\dot{\boldsymbol{g}}_{2}-\delta\dot{\boldsymbol{g}}_{1}-\boldsymbol{\omega}_{2}\times\delta\boldsymbol{g}_{2}+\boldsymbol{\omega}_{2}\times\delta\boldsymbol{g}_{1}\right)$$

$$(9.121)$$

Further time differentiation of the constraint equation results in

$$\dot{\boldsymbol{\omega}}^{\delta} = \boldsymbol{R}_{1hr}^{T} \left( \dot{\boldsymbol{\omega}}_{2} - \dot{\boldsymbol{\omega}}_{1} - \boldsymbol{\omega}_{1} \times \boldsymbol{\omega}_{2} \right) - \boldsymbol{\omega}^{\delta} \times \boldsymbol{R}^{\delta} \boldsymbol{\omega}_{0} - \boldsymbol{R}^{\delta} \dot{\boldsymbol{\omega}}_{0}. \tag{9.122}$$

Similarly, if the angular acceleration constraint is the derivative of an orientation or an angular velocity constraint, then  $\mathbf{R}^{\delta} = \mathbf{I}$ ,  $\boldsymbol{\omega}^{\delta} = \mathbf{0}$ , respectively, and, by setting  $\dot{\boldsymbol{\omega}}^{\delta} = \mathbf{0}$ , Equation (9.122) becomes

$$\dot{\boldsymbol{\omega}}_0 = \boldsymbol{R}_{1hr}^T (\dot{\boldsymbol{\omega}}_2 - \dot{\boldsymbol{\omega}}_1 - \boldsymbol{\omega}_1 \times \boldsymbol{\omega}_2). \tag{9.123}$$

#### 9.1.14 Total Pin Joint

This joint (TotalPinJoint) forces a node to assume an imposed absolute position and orientation about selected axes. Both imposed position and orientation are specified in the global reference frame, optionally re-oriented by a constant orientation. The joint consists in 6 equations, 3 for positions and 3 for orientation, that can be selectively turned on or off to enforce a constraint on that DOF.

**Variants.** This joint is a variant of the TotalJoint, described in Section 9.1.13.

Files. It is implemented in files mbdyn/struct/totalj.h mbdyn/struct/totalj.cc

**Definitions.** The position of the node with respect to the global reference frame is  $x_n$ , while the absolute position of the constraint is  $x_c$ . The matrix that expresses the orientation of the node with respect to the global reference frame is  $R_n$ . An offset is allowed for the location of the points where the absolute position is constrained; the offset  $\tilde{f}_n$  is rigidly connected to the node, so in the global reference frame its expression is

$$f_n = R_n \tilde{f}_n \tag{9.124}$$

The position constraint may be expressed in a reference frame, whose orientation in the global reference frame is  $\mathbf{R}_{ch}$ . Later on, it will occasionally be convenient to express the absolute position of the constraint,  $\mathbf{x}_c$ , in the reference frame  $\mathbf{R}_{ch}$ , namely

$$\tilde{\boldsymbol{x}}_c = \boldsymbol{R}_{ch}^T \boldsymbol{x}_c. \tag{9.125}$$

Similarly, the orientation constraint may be expressed in a reference frame that is rigidly connected to the node by matrix  $\tilde{R}_{nhr}$ , whose orientation in the global reference frame is

$$R_{nhr} = R_n \tilde{R}_{nhr}, \tag{9.126}$$

while the absolute orientation is described by the constant matrix  $R_{chr}$ . The absolute position and orientation may refer to different local reference frames to increase the versatility of the element.

It is essential to notice that the differentiation of the constraint orientation matrices does not affect the relative orientation between the constraint and the node, namely matrix  $\tilde{R}_{nhr}$ , which is constant. As a consequence,

$$\delta \mathbf{R}_{nhr} = \delta \mathbf{R}_{n} \tilde{\mathbf{R}}_{nhr} 
= \boldsymbol{\theta}_{n\delta} \times \mathbf{R}_{n} \tilde{\mathbf{R}}_{nhr} 
= \boldsymbol{\theta}_{n\delta} \times \mathbf{R}_{nhr},$$
(9.127)

and

$$\dot{R}_{nhr} = \omega_n \times R_{nhr}. \tag{9.128}$$

The same is true for the relative position orientation matrix,  $R_{nh}$ .

**Orientation Constraint.** The matrix that expresses the relative orientation is

$$R_{\rm rel} = R_{chr}^T R_{nhr} \tag{9.129}$$

The desired relative orientation is expressed in analogy with the TotalJoint.

In general, the difference between the desired rotation  $\theta_0$  and the current absolute orientation of the node,

$$\theta = \operatorname{ax}\left(\operatorname{exp}^{-1}\left(\boldsymbol{R}_{chr}^{T}\boldsymbol{R}_{nhr}\right)\right) \tag{9.130}$$

through the redefinition of Eq. (9.98) can be expressed as

$$\boldsymbol{\theta}^{\delta} = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{chr}^{T}\boldsymbol{R}_{nhr}\boldsymbol{R}_{0}^{T}\right)\right) \tag{9.131}$$

and is equivalent to

$$\boldsymbol{\theta}^{\delta} = \boldsymbol{\theta} - \boldsymbol{\theta}_0 \tag{9.132}$$

when  $\boldsymbol{\theta}^{\delta} = \mathbf{0}$ .

**Position Constraint.** The desired absolute position is imposed by means of a vector  $x_0$  defined in the absolute position constraint reference frame  $R_{ch}$ . The absolute position is represented by vector x, defined as

$$\mathbf{x} = \mathbf{R}_{ch}^{T} \left( \mathbf{x}_{n} + \mathbf{f}_{n} - \mathbf{x}_{c} \right)$$

$$= \mathbf{R}_{ch}^{T} \left( \mathbf{x}_{n} + \mathbf{f}_{n} \right) - \tilde{\mathbf{x}}_{c}; \tag{9.133}$$

the constraint equations for the relative position are:

$$x = x_0. ag{9.134}$$

In analogy with the definition of  $\boldsymbol{\theta}^{\delta}$ , a vector  $\boldsymbol{x}^{\delta}$  can be used to express the constraint on the position DOFs,

$$\boldsymbol{x}^{\delta} = \boldsymbol{x} - \boldsymbol{x}_0. \tag{9.135}$$

**Constraint Equations.** The resulting constraint equations are identical to Eqs. (9.106a, 9.106b), related to the TotalJoint, as illustrated at page 65; the same considerations apply.

**Linearization.** First, the perturbation of  $x^{\delta}$ ,

$$\delta \boldsymbol{x}^{\delta} = \boldsymbol{R}_{ch}^{T} \left( \delta \boldsymbol{x}_{n} - \boldsymbol{f}_{n} \times \boldsymbol{\theta}_{n\delta} \right) \tag{9.136}$$

is computed. Note that, since the constraint equations are defined by setting to zero any components of the vector  $x^{\delta}$ , the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix  $\mathbf{R}_{ch}$ .

Then, the perturbation of  $\boldsymbol{\theta}^{\delta}$  results from

$$\theta_{\delta}^{\delta} \times = \delta \mathbf{R}^{\delta} \mathbf{R}^{\delta T}$$

$$= \mathbf{R}_{chr}^{T} \theta_{n\delta} \times \mathbf{R}_{chr}, \tag{9.137}$$

which implies

$$\boldsymbol{\theta}_{\delta}^{\delta} = \boldsymbol{R}_{chr}^{T} \boldsymbol{\theta}_{n\delta}. \tag{9.138}$$

Note that, since the constraint equations are defined by setting to zero any components of the vector  $\boldsymbol{\theta}^{\delta}$ , the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix  $\boldsymbol{R}_{chr}$ .

After calling  $\tilde{\lambda}_x$  and  $\tilde{\lambda}_{\theta}$  the Lagrange multipliers respectively related to the relative position and orientation constraints, and noticing that in the global reference frame they become

$$\lambda_{x} = R_{ch}\tilde{\lambda}_{x} \tag{9.139a}$$

$$\lambda_{\theta} = R_{chr} \tilde{\lambda}_{\theta}, \tag{9.139b}$$

the contribution of the constraint reactions to the equilibrium equations of the participating nodes is

$$F_n = \lambda_x \tag{9.140a}$$

$$C_n = f_n \times \lambda_x + \lambda_\theta.$$
 (9.140b)

Due to the simplifications related to the updated-updated approach, the contribution of the constraint equations and of the equilibrium to the Jacobian matrix is:

$$\begin{bmatrix}
0 & 0 & R_{ch} & 0 \\
0 & \lambda_x \times f_n \times f_n \times f_n \times R_{ch} & R_{chr} \\
R_{ch}^T & -R_{chr}^T f_n \times f_n \times f_n \times R_{chr} & 0 & 0 \\
0 & R_{chr}^T & 0 & 0
\end{bmatrix} \begin{pmatrix}
\delta x_n \\
\theta_{n\delta} \\
\delta \tilde{\lambda}_x \\
\delta \tilde{\lambda}_\theta
\end{pmatrix} = \begin{pmatrix}
-\lambda_x \\
-f_n \times \lambda_x - \lambda_\theta \\
-x^{\delta} \\
-\theta^{\delta}
\end{pmatrix}.$$
(9.141)

The updated-updated form is obtained by simply replacing  $\theta_{n\delta}$  with  $\delta g_n$ .

#### Stabilized Form

Equations.

$$R_{ch}\mu_x = 0 \tag{9.142a}$$

$$f_n \times R_{ch}\mu_x + R_{chr}\mu_\theta = 0 \tag{9.142b}$$

$$R_{ch}\lambda_x = 0 \tag{9.142c}$$

$$-f_n imes oldsymbol{\omega}_n imes oldsymbol{R}_{ch} oldsymbol{\mu_x} - oldsymbol{R}_{chr} \left( oldsymbol{R}^\delta oldsymbol{\omega}_0 
ight) imes oldsymbol{\mu_{oldsymbol{ heta}}}$$

$$+ f_n \times R_{ch} \lambda_x + R_{chr} \lambda_\theta = 0 \tag{9.142d}$$

$$R_{ch}^{T}(x_n + f_n) - x_0 = 0 (9.142e)$$

$$ax\left(\exp^{-1}\left(\mathbf{R}^{\delta}\right)\right) = \mathbf{0} \tag{9.142f}$$

$$\mathbf{R}_{ch}^{T} \left( \dot{\mathbf{x}}_n + \boldsymbol{\omega}_n \times \mathbf{f}_n \right) - \dot{\mathbf{x}}_0 = \mathbf{0} \tag{9.142g}$$

$$\mathbf{R}_{chr}^T \boldsymbol{\omega}_n - \mathbf{R}^\delta \boldsymbol{\omega}_0 = \mathbf{0} \tag{9.142h}$$

Linearization.

$$R_{ch}\delta\mu_x = 0 \tag{9.143a}$$

$$-(f_n \times R_{ch}\mu_x) \times \theta_{n\delta} + f_n \times R_{ch}\delta\mu_x + R_{chr}\delta\mu_\theta = 0$$
(9.143b)

$$\mathbf{R}_{ch}\delta\lambda_{x} = \mathbf{0} \tag{9.143c}$$

$$(m{f}_n imes m{\omega}_n imes m{R}_{ch}m{\mu_x}) imes m{ heta}_{n\delta} + m{f}_n imes (m{R}_{ch}m{\mu_x}) imes \deltam{\omega}_n 
onumber \ - m{f}_n imes m{\omega}_n imes m{R}_{ch}\deltam{\mu_x}$$

$$-(\mathbf{R}_{chr}\boldsymbol{\mu}_{\boldsymbol{\theta}}) \times (\mathbf{R}_{nhr}\mathbf{R}_{0}^{T}\boldsymbol{\omega}_{0}) \times \boldsymbol{\theta}_{n\delta} - \mathbf{R}_{chr}(\mathbf{R}^{\delta}\boldsymbol{\omega}_{0}) \times \delta\boldsymbol{\mu}_{\boldsymbol{\theta}} - (\mathbf{f}_{n} \times \mathbf{R}_{ch}\boldsymbol{\lambda}_{\boldsymbol{x}}) \times \boldsymbol{\theta}_{n\delta} + \mathbf{f}_{n} \times \mathbf{R}_{ch}\delta\boldsymbol{\lambda}_{\boldsymbol{x}} + \mathbf{R}_{chr}\delta\boldsymbol{\lambda}_{\boldsymbol{\theta}} = \mathbf{0}$$

$$(9.143d)$$

$$\mathbf{R}_{ch}^{T} \delta \mathbf{x}_{n} - \mathbf{R}_{ch}^{T} \mathbf{f}_{n} \times \mathbf{\theta}_{n\delta} = \mathbf{0} \tag{9.143e}$$

$$\mathbf{R}_{chr}^T \boldsymbol{\theta}_{n\delta} = \mathbf{0} \tag{9.143f}$$

$$\mathbf{R}_{ch}^{T}\delta\dot{\mathbf{x}}_{n} - \mathbf{R}_{ch}^{T}\mathbf{f}_{n} \times \delta\boldsymbol{\omega}_{n} - \mathbf{R}_{ch}^{T}\boldsymbol{\omega}_{n} \times \mathbf{f}_{n} \times \boldsymbol{\theta}_{n\delta} = \mathbf{0}$$

$$(9.143g)$$

$$\mathbf{R}_{chr}^{T}\delta\boldsymbol{\omega}_{n} + \mathbf{R}_{chr}^{T}\left(\mathbf{R}_{nhr}\mathbf{R}_{0}^{T}\boldsymbol{\omega}_{0}\right) \times \boldsymbol{\theta}_{n\delta} = \mathbf{0}$$
(9.143h)

#### **Summary**

The same considerations formulated for the TotalJoint apply.

#### 9.1.15 Gimbal

This element implements an ideal gimbal joint. It is discussed in [?]. A gimbal is a joint that allows the rotation between two nodes about two orthogonal axes. The angular velocity about the remaining axis is preserved regardless of the relative angle between the two nodes. It is essentially equivalent to two Cardano joints<sup>3</sup> each of which accounts for half of the relative orientation.

**Variants.** This joint is only defined in the variant that constrains the relative rotation between two nodes. It may need to be combined with another joint that constrains the (relative) position of the related nodes, and with a deformable hinge to provide some stiffness or damping.

Files. It is implemented in files mbdyn/struct/gimbal.h mbdyn/struct/gimbal.cc

**Definitions.** The relative orientation between the nodes is made of three steps, described by

$$\mathbf{R}_{\text{rel}} = \mathbf{R}_a^T \mathbf{R}_b \tag{9.144a}$$

$$= \exp(\vartheta e_2 \times) \exp(\varphi e_1 \times) \exp(\vartheta e_2 \times) \qquad (= \mathbf{R}(\vartheta, \varphi)) \qquad (9.144b)$$

where

$$\exp(\vartheta \mathbf{e}_2 \times) = \mathbf{I} + \sin \vartheta \mathbf{e}_2 \times + (1 - \cos \vartheta) \mathbf{e}_2 \times \mathbf{e}_2 \times \tag{9.145a}$$

$$\exp\left(\varphi \mathbf{e}_{1} \times\right) = \mathbf{I} + \sin\varphi \mathbf{e}_{1} \times + (1 - \cos\varphi) \,\mathbf{e}_{1} \times \mathbf{e}_{1} \times \tag{9.145b}$$

and  $e_i$  are the unit vectors in directions i = 1, 2, 3.

<sup>&</sup>lt;sup>3</sup>Or "universal joints"; this is also known as a double Hooke joint.

This represents a sequence of mutually orthogonal rotations, symmetrical with respect to the mid of the central rotation, and thus consisting in a sequence of two Cardano joints in the "W" arrangement, which is homokinetic.

The constraint equation is obtained by equating the relative orientation matrices of Equations (9.144a, 9.144b):

$$R_{ab} = R(\vartheta, \varphi), \tag{9.146}$$

or, which is equivalent,

$$\mathbf{R}_{ab}\mathbf{R}\left(\vartheta,\varphi\right)^{T} = \mathbf{I}.\tag{9.147}$$

As a consequence, the rotation vector

$$\boldsymbol{\theta} = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{ab}\boldsymbol{R}\left(\vartheta,\varphi\right)^{T}\right)\right),\tag{9.148}$$

corresponding to the orientation matrix at the left-hand side of Equation (9.147), must vanish:

$$\theta = 0. \tag{9.149}$$

Lagrange multipliers approach:

$$0 = \delta \left( \boldsymbol{\lambda}^T \boldsymbol{\theta} \right)$$
  
=  $\delta \boldsymbol{\lambda}^T \boldsymbol{\theta} + \delta \boldsymbol{\theta}^T \boldsymbol{\lambda}$ , (9.150)

where

$$\delta \boldsymbol{\theta} = \Gamma \left( \boldsymbol{\theta} \right)^{-1} \boldsymbol{\theta}_{\delta}. \tag{9.151}$$

Note, that by definition  $\theta$  must be zero, so  $\Gamma(\theta) \cong I$ . Without any simplification, Equation (9.150) results in

$$0 = \delta \left( \boldsymbol{\lambda}^T \boldsymbol{\theta} \right) \tag{9.152a}$$

$$= \delta \lambda^T \theta + \theta_{\delta}^T \Gamma(\theta)^{-T} \lambda. \tag{9.152b}$$

To eliminate the  $\Gamma\left(\boldsymbol{\theta}\right)^{-T}$  term, the multipliers can be redefined as

$$\hat{\lambda} = \Gamma \left( \boldsymbol{\theta} \right)^{-T} \lambda. \tag{9.153}$$

The perturbation  $\theta_{\delta}$  results from

$$\theta_{\delta} \times = \delta \exp(\theta \times) \exp(\theta \times)^{T}$$

$$= \delta \left( \mathbf{R}_{a}^{T} \mathbf{R}_{b} \exp(\vartheta \mathbf{e}_{2} \times)^{T} \exp(\varphi \mathbf{e}_{1} \times)^{T} \exp(\vartheta \mathbf{e}_{2} \times)^{T} \right) \cdot \left( \mathbf{R}_{a}^{T} \mathbf{R}_{b} \exp(\vartheta \mathbf{e}_{2} \times)^{T} \exp(\varphi \mathbf{e}_{1} \times)^{T} \exp(\vartheta \mathbf{e}_{2} \times)^{T} \right)^{T}$$

$$= \mathbf{R}_{a}^{T} \left( \theta_{b\delta} - \theta_{a\delta} \right) \times \mathbf{R}_{a}$$

$$- \delta \vartheta \mathbf{R}_{a}^{T} \mathbf{R}_{b} \left( \left( \mathbf{I} + \exp(\vartheta \mathbf{e}_{2} \times)^{T} \exp(\varphi \mathbf{e}_{1} \times)^{T} \right) \mathbf{e}_{2} \right) \times \mathbf{R}_{b}^{T} \mathbf{R}_{a}$$

$$- \delta \varphi \mathbf{R}_{a}^{T} \mathbf{R}_{b} \left( \exp(\vartheta \mathbf{e}_{2} \times)^{T} \mathbf{e}_{1} \right) \times \mathbf{R}_{b}^{T} \mathbf{R}_{a}$$

$$(9.154)$$

which yields

$$\boldsymbol{\theta}_{\delta} = \boldsymbol{R}_{a}^{T} \left( \boldsymbol{\theta}_{b\delta} - \boldsymbol{\theta}_{a\delta} \right) - \boldsymbol{R}_{a}^{T} \boldsymbol{R}_{b} \left( \delta \vartheta \boldsymbol{w}_{\vartheta} + \delta \varphi \boldsymbol{w}_{\varphi} \right)$$

$$(9.155)$$

with

$$\mathbf{w}_{\vartheta} = \left(\mathbf{I} + \exp\left(\vartheta \mathbf{e}_{2} \times\right)^{T} \exp\left(\varphi \mathbf{e}_{1} \times\right)^{T}\right) \mathbf{e}_{2}$$

$$= \sin\varphi \sin\vartheta \mathbf{e}_{1} + (1 + \cos\varphi) \mathbf{e}_{2} - \sin\varphi \cos\vartheta \mathbf{e}_{3}$$
(9.156a)

$$\mathbf{w}_{\varphi} = \exp(\vartheta \mathbf{e}_2 \times)^T \mathbf{e}_1$$
  
= \cos \dartheta \mathbf{e}\_1 + \sin \dartheta \mathbf{e}\_3. (9.156b)

Linearization

$$\begin{bmatrix}
-\left(R_{a}\hat{\lambda}\right) \times & 0 & R_{a} \\
\left(R_{a}\hat{\lambda}\right) \times & 0 & -R_{a} \\
R_{a}^{T} & -R_{a}^{T} & 0 \\
-\left(\left(R_{b}w_{\vartheta}\right) \times \left(R_{a}\hat{\lambda}\right)\right)^{T} & \left(\left(R_{b}w_{\vartheta}\right) \times \left(R_{a}\hat{\lambda}\right)\right)^{T} & \left(R_{a}^{T}R_{b}w_{\vartheta}\right)^{T} \\
-\left(\left(R_{b}w_{\varphi}\right) \times \left(R_{a}\hat{\lambda}\right)\right)^{T} & \left(\left(R_{b}w_{\varphi}\right) \times \left(R_{a}\hat{\lambda}\right)\right)^{T} & \left(R_{a}^{T}R_{b}w_{\varphi}\right)^{T} \end{bmatrix}$$

$$\begin{bmatrix}
0 & 0 & 0 \\
0 & 0 & 0 \\
R_{a}^{T}R_{b}w_{\vartheta} & R_{a}^{T}R_{b}w_{\varphi} \\
\left(R_{a}^{T}R_{b}w_{\vartheta/\vartheta}\right)^{T}\hat{\lambda} & \left(R_{a}^{T}R_{b}w_{\vartheta/\varphi}\right)^{T}\hat{\lambda} \\
\left(R_{a}^{T}R_{b}w_{\vartheta/\vartheta}\right)^{T}\hat{\lambda} & \left(R_{a}^{T}R_{b}w_{\varphi/\varphi}\right)^{T}\hat{\lambda}
\end{bmatrix}$$

$$= \begin{cases}
-R_{a}\hat{\lambda} \\
R_{a}\hat{\lambda} \\
\theta \\
-\left(R_{a}^{T}R_{b}w_{\vartheta}\right)^{T}\hat{\lambda}
\end{cases} (9.157)$$

where

$$\mathbf{w}_{\vartheta/\vartheta} = \sin\varphi\cos\vartheta\mathbf{e}_1 + \sin\varphi\sin\vartheta\mathbf{e}_3 \tag{9.158a}$$

$$\mathbf{w}_{\vartheta/\varphi} = \cos\varphi\sin\vartheta\mathbf{e}_1 - \sin\varphi\mathbf{e}_2 - \cos\varphi\cos\vartheta\mathbf{e}_3 \tag{9.158b}$$

$$\mathbf{w}_{\varphi/\vartheta} = -\sin\vartheta \mathbf{e}_1 + \cos\vartheta \mathbf{e}_3 \tag{9.158c}$$

$$\mathbf{w}_{\varphi/\varphi} = \mathbf{0}.\tag{9.158d}$$

#### 9.1.16 Screw Joint

Author: Mauro Manetti and Marco Morandini

The screw joint is a combination of:

• an in line joint, that constrains one point to move along a line attached to another point:

$$egin{aligned} m{e}_{1hx}^T \left( m{x}_2 + m{f}_2 - m{x}_1 - m{f}_1 
ight) = 0 \ m{e}_{1hu}^T \left( m{x}_2 + m{f}_2 - m{x}_1 - m{f}_1 
ight) = 0 \end{aligned}$$

where  $e_{1hi}$  is the *i*-th column of matrix  $R_1\tilde{R}_{1h}$ 

$$\mathbf{e}_{jhi} = \left(\mathbf{R}_j \tilde{\mathbf{R}}_{jh}\right)[i] \tag{9.159}$$

 $x_j$  is the position of node j and  $f_j$  is the offset of the joint with respect node j, both in the absolute coordinate system; the offset is constant with respect to the reference frame of the joint, so  $f_j = R_j \tilde{f}_j$ .

• a revolute rotation joint, that constrains the relative orientation of two nodes to be a rotation about an axis that is fixed with respect to the two bodies:

$$\mathbf{e}_{2hx}^T \mathbf{e}_{1hz} = 0$$
$$\mathbf{e}_{2hy}^T \mathbf{e}_{1hz} = 0$$

• a linear relationship between the relative rotation about the common axis and the relative position along the common axis:

$$\frac{p}{2\pi}(\theta - \theta_0) - e_{1hz}^T (d - d_0) = 0$$
(9.160)

where the nodes distance vectors d and  $d_0$  can be written as:

$$egin{array}{lcl} m{d} &=& m{x}_2 + m{f}_2 - m{x}_1 - m{f}_1 \ m{d}_0 &=& m{x}_{2_0} + m{f}_{2_0} - m{x}_{1_0} - m{f}_{1_0} \end{array}$$

while p represents the distance between the nodes along axis  $e_{1hz}$  corresponding to one revolution about the same axis.

The rotation  $\theta$  is formulated as

$$\theta = \tilde{\boldsymbol{R}}_{1h3}^{T} \operatorname{ax} \left( \exp^{-1} \left( \boldsymbol{R}_{1}^{T} \boldsymbol{R}_{2} \right) \right)$$

$$= \tilde{\boldsymbol{R}}_{1h3}^{T} \boldsymbol{R}_{1}^{T} \operatorname{ax} \left( \exp^{-1} \left( \boldsymbol{R}_{2} \boldsymbol{R}_{1}^{T} \right) \right)$$

$$= \boldsymbol{e}_{1hz}^{T} \operatorname{ax} \left( \exp^{-1} \left( \boldsymbol{R}_{2} \boldsymbol{R}_{1}^{T} \right) \right)$$
(9.161)

where  $R_{1h3}$  is the third axis of the constant relative orientation of node 1, while  $e_{1hz}$  is the screw joint axis. To overcome the limitation  $|\theta| < \pi$ , an appropriate unwrap angle function has been implemented in the code, so allowing to compute the right residual of Equation (9.160).

The virtual perturbation of Equation (9.161) can be expressed as

$$\delta\theta = \tilde{\mathbf{R}}_{1h3}^T \Gamma\left(\theta\right)^{-1} \mathbf{R}_1^T \left(\theta_{2\delta} - \theta_{1\delta}\right) \tag{9.162}$$

so the virtual perturbation of Equation (9.160)

$$\frac{p}{2\pi} \boldsymbol{e}_{1hz}^{T} \boldsymbol{\Gamma} \left( \boldsymbol{\theta} \right)^{-1} \boldsymbol{R}_{1}^{T} \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right) - \boldsymbol{e}_{1hz}^{T} \boldsymbol{d} \times \boldsymbol{\theta}_{1\delta} 
- \boldsymbol{e}_{1hz}^{T} \left( \delta \boldsymbol{x}_{2} - \boldsymbol{f}_{2} \times \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_{1} + \boldsymbol{f}_{1} \times \boldsymbol{\theta}_{1\delta} \right) = 0$$
(9.163)

yields the contribution of the constraint to the forces and moments acting on the constrained nodes:

$$F_1 = e_{1hz}\lambda \tag{9.164}$$

$$C_1 = \left(-\frac{p}{2\pi}R_1\Gamma\left(\boldsymbol{\theta}\right)^{-T}\tilde{R}_{1h3} + f_1 \times e_{1hz}\right)\lambda \tag{9.165}$$

$$F_2 = -e_{1hz}\lambda \tag{9.166}$$

$$C_{2} = \left(\frac{p}{2\pi}\mathbf{R}_{1}\Gamma\left(\boldsymbol{\theta}\right)^{-T}\tilde{\mathbf{R}}_{1h3} - \mathbf{f}_{2} \times \mathbf{e}_{1hz}\right)\lambda \tag{9.167}$$

where  $\lambda$  is the Lagrange multiplier that here assumes the meaning of reaction force along the screw axis. The problem linearization requires the already computed virtual perturbation of the constraint equation (see Equation (9.163)) and the constraint forces and couples virtual perturbation:

$$\delta F_{1} = -\lambda e_{1hz} \times \theta_{1\delta} + e_{1hz} \delta \lambda$$

$$\delta C_{1} = \lambda \left[ \frac{p}{2\pi} \left( R_{1} \Gamma \left( \theta \right)^{-T} \tilde{R}_{1h3} \right) \times \theta_{1\delta} - \frac{p}{2\pi} R_{1} \Gamma \left( \theta \right)^{-T} L \left( -\theta, \Gamma \left( \theta \right)^{-T} \tilde{R}_{1h3} \right) \Gamma \left( \theta \right)^{-1} R_{1}^{T} \left( \theta_{2\delta} - \theta_{1\delta} \right) + e_{1hz} \times f_{1} \times \theta_{1\delta} - f_{1} \times e_{1hz} \times \theta_{1\delta} \right] + \frac{C_{1}}{\lambda} \delta \lambda$$

$$\delta F_{2} = \lambda e_{1hz} \times \theta_{1\delta} - e_{1hz} \delta \lambda$$

$$\delta C_{2} = \lambda \left[ -\frac{p}{2\pi} \left( R_{1} \Gamma \left( \theta \right)^{-T} \tilde{R}_{1h3} \right) \times \theta_{1\delta} + \frac{p}{2\pi} R_{1} \Gamma \left( \theta \right)^{-T} L \left( -\theta, \Gamma \left( \theta \right)^{-T} \tilde{R}_{1h3} \right) \Gamma \left( \theta \right)^{-1} R_{1}^{T} \left( \theta_{2\delta} - \theta_{1\delta} \right) - e_{1hz} \times f_{2} \times \theta_{2\delta} + f_{2} \times e_{1hz} \times \theta_{1\delta} \right] + \frac{C_{2}}{2} \delta \lambda$$

$$(9.171)$$

where the operator L() has been introduced according to the following definition

$$\delta \Gamma(\theta)^T \mathbf{a} = -\mathbf{L}(-\theta, \mathbf{a}) \delta \theta \tag{9.172}$$

which can be manipulated to obtain the needed relation

$$\delta(\mathbf{\Gamma}(\boldsymbol{\theta})^{T}\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{a}) = \delta\mathbf{\Gamma}(\boldsymbol{\theta})^{T}\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{a} + \mathbf{\Gamma}(\boldsymbol{\theta})^{T}\delta\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{a} + \mathbf{\Gamma}(\boldsymbol{\theta})^{T}\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{a} = \delta\boldsymbol{a}$$

$$\delta\mathbf{\Gamma}(\boldsymbol{\theta})^{T}\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{a} = \delta\boldsymbol{a}$$

$$\delta\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{a} = \delta\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{L}\left(-\boldsymbol{\theta},\mathbf{\Gamma}(\boldsymbol{\theta})^{-T}\boldsymbol{a}\right)\delta\boldsymbol{\theta}$$
(9.173)

Now a contribution useful to obtain previous results will be reported

$$\begin{split} \delta \left( \boldsymbol{R}_{1} \Gamma(\boldsymbol{\theta})^{-1} \tilde{\boldsymbol{R}}_{1h3} \right) = & \delta \boldsymbol{R}_{1} \Gamma(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3} + \boldsymbol{R}_{1} \delta \Gamma(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3} \\ = & - \left( \boldsymbol{R}_{1} \Gamma(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3} \right)_{\times} \boldsymbol{\theta}_{1\delta} + \boldsymbol{R}_{1} \Gamma(\boldsymbol{\theta})^{-T} \boldsymbol{L}(-\boldsymbol{\theta}, \Gamma(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3}) \delta \boldsymbol{\theta} \end{split}$$

This joint formulation can be improved to take into account the presence of friction. Figures (9.1) and (9.2) show sketches useful to identify the forces acting on the screw thread. In the figures the case of a screw which is raising a load F is presented, the equilibrium equation can be written for the vertical and the horizontal directions to obtain

$$\mathbf{F} + \mu \mathbf{F}_n \sin \alpha = \mathbf{F}_n \cos \gamma_n \cos \alpha \tag{9.175}$$

$$P = \mu F_n \cos \alpha + F_n \cos \gamma_n \sin \alpha \tag{9.176}$$



Figure 9.1: 3D screw thread sketch.

where F is the load, or the force, along the screw axis, P the force acting to rotate the screw, i.e. the torque moment over the mean thread radius r,  $F_n$  is the thread normal reaction,  $\alpha$  the lead angle, and  $\gamma_n$  the angle between the vectors OC and OB represented in Figure (9.1). Inside the code all the screw friction formulation is developed in function of the angle  $\gamma_n$  for convenience, anyway the usual screw informations relate the thread angle  $2\gamma$ , so the joint requires as input the half thread angle  $\gamma$ . Looking at the Figure 9.1 it is possible to find the relation between these two angles

$$BC = AE = OA \tan \gamma = OB \cos \alpha \tan \gamma \tag{9.177}$$

SO

$$\tan \gamma_n = \frac{BC}{OB} = \cos \alpha \tan \gamma \quad \Rightarrow \quad \gamma_n = \tan^{-1}(\cos \alpha \tan \gamma).$$
 (9.178)

From Equations (9.175) and (9.176) is possible to retrive the relation between the screw raising torque  $C_r$  and the axial force F

$$C_r = rF \left( \frac{\cos \gamma_n \sin \alpha + \mu \cos \alpha}{\cos \gamma_n \cos \alpha - \mu \sin \alpha} \right). \tag{9.179}$$

It is easy to find the previous relation in presence of a lowering torque

$$C_{l} = rF\left(\frac{\cos\gamma_{n}\sin\alpha - \mu\cos\alpha}{\cos\gamma_{n}\cos\alpha + \mu\sin\alpha}\right). \tag{9.180}$$

from which it is possible to understand the torque dependency from the versus of the friction force  $\mu \mathbf{F}_n$ . A general discriminant to apply the right formula can be linked to the versus of the relative velocity v between the internal and external thread and the sign of the constraint Lagrange multiplier  $\lambda$  which

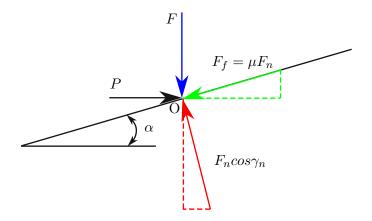


Figure 9.2: 2D screw thread sketch

represents the versus of the axial screw force

$$C = rF \left( \frac{\cos \gamma_n \sin \alpha + sign(v\lambda) \mu \cos \alpha}{\cos \gamma_n \cos \alpha - sign(v\lambda) \mu \sin \alpha} \right). \tag{9.181}$$

Inside the code  $sign(v\lambda)$  will be embedded in the friction coefficient computation  $\mu = \mu(v, \mathbf{F})$ , so in the following for brevity it will be removed from equations introducing the notation  $\mathbf{C} = \mathbf{C}(\mu)$ .

The torque acting on the screw for the friction presence can now be computed as

$$C_{frc}(\mu) = C(\mu) - C(0) = rF \left[ \frac{\mu \sec \gamma_n (1 + \tan^2 \alpha)}{1 - \mu \sec \gamma_n \tan \alpha} \right]. \tag{9.182}$$

Equation (9.182) can be used to add the torque friction contribution to the couples acting on the constrained nodes reported in Equations (9.165) and (9.167)

$$C_{1_{frc}} = C_1 - C_{frc}(\mu) = C_1 - rF_1 \left[ \frac{\mu \sec \gamma_n (1 + \tan^2 \alpha)}{1 - \mu \sec \gamma_n \tan \alpha} \right]$$

$$(9.183)$$

$$C_{2_{frc}} = C_2 - C_{frc}(\mu) = C_2 - rF_2 \left[ \frac{\mu \sec \gamma_n (1 + \tan^2 \alpha)}{1 - \mu \sec \gamma_n \tan \alpha} \right]$$

$$(9.184)$$

At this point the only further required informations regard the relative velocity v and the virtual variation of the friction torque contribution. Starting from the already used formula

$$\delta \boldsymbol{\theta} = \Gamma(\boldsymbol{\theta})^{-1} \boldsymbol{R}_1^T (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) \tag{9.185}$$

it is possible to write the following relation

$$\dot{\boldsymbol{\theta}} = \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1} \boldsymbol{R}_1^T (\boldsymbol{\Gamma}(\boldsymbol{\theta}_2) \dot{\boldsymbol{\theta}}_2 - \boldsymbol{\Gamma}(\boldsymbol{\theta}_1) \dot{\boldsymbol{\theta}}_1). \tag{9.186}$$

The angular velocity vector is defined as

$$\omega_{\theta} = \Gamma(\theta)\dot{\theta} = \Gamma(\theta)\Gamma(\theta)^{-1}R_1^T(\Gamma(\theta_2)\dot{\theta}_2 - \Gamma(\theta_1)\dot{\theta}_1) = R_1^T(\omega_2 - \omega_1)$$
(9.187)

from which the angular velocity modulus with sign can be obtained

$$\omega_{\theta} = \tilde{R}_{1h3}^T \omega_{\theta} = \tilde{R}_{1h3}^T R_1^T (\omega_2 - \omega_1). \tag{9.188}$$

Now the relative velocity on the screw thread, along the friction force direction, can be written as

$$v = \omega_{\theta} r \cos \alpha = \tilde{R}_{1h3}^T R_1^T (\omega_2 - \omega_1) r \cos \alpha. \tag{9.189}$$

The virtual perturbation of the friction couple is required to write the linearized problem

$$\delta C_{frc} = \delta Fr \left[ \frac{\mu \sec \gamma_n (1 + \tan^2 \alpha)}{1 - \mu \sec \gamma_n \tan \alpha} \right] + Fr \left[ \frac{\sec \gamma_n (1 + \tan^2 \alpha)}{1 - \mu \sec \gamma_n \tan \alpha} + \frac{\mu \sec \gamma_n (1 + \tan^2 \alpha)}{(1 - \mu \sec \gamma_n \tan \alpha)^2} \sec \gamma_n \tan \alpha \right] \delta \mu$$

$$= r \left[ \frac{\mu \sec \gamma_n (1 + \tan^2 \alpha)}{1 - \mu \sec \gamma_n \tan \alpha} \right] \delta F + Fr \left[ \frac{\mu \sec \gamma_n (1 + \tan^2 \alpha)}{(1 - \mu \sec \gamma_n \tan \alpha)^2} \right] \delta \mu$$
(9.190)

where the friction coefficient virtual variation is automatically computed by the code, once provided the F and  $\mu$  virtual perturbations

$$\delta \mu = \delta \mu (\delta \mathbf{F}, \delta v). \tag{9.191}$$

Anyway the screw axial forces virtual variations have already been reported in Equations 9.168 and 9.170, so to complete the problem description is just required the definition of the relative velocity virtual perturbation

$$\delta v = \tilde{\mathbf{R}}_{1h3}^T \delta \mathbf{R}_1^T (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) r \cos \alpha + \tilde{\mathbf{R}}_{1h3}^T \mathbf{R}_1^T (\delta \boldsymbol{\omega}_2 - \delta \boldsymbol{\omega}_1) r \cos \alpha$$

$$= r \cos \alpha \tilde{\mathbf{R}}_{1h3}^T \mathbf{R}_1^T (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \boldsymbol{\omega}_1 + r \cos \alpha \tilde{\mathbf{R}}_{1h3}^T (\delta \boldsymbol{\omega}_2 - \delta \boldsymbol{\omega}_1). \tag{9.192}$$

**Physics.** In other words, node 1 is the screw and node 2 is the bolt; neglecting the offset, the force along the screw axis is related to the couple about the same axis by the relationship

$$C = -\frac{p}{2\pi}F\tag{9.193}$$

which results from a power balance

$$C\omega_{\theta} + Fv_{lin} = 0 ag{9.194}$$

in terms of relative linear  $(v_{lin})$  and angular  $(\omega_{\theta})$  velocity, with the kinematic relationship

$$v_{lin} = \frac{p}{2\pi}\omega_{\theta} \tag{9.195}$$

# 9.1.17 Strapdown Sensor

This constraint imposes the acceleration and the angular velocity of a node in a relative frame attached to the node itself.

$$\ddot{\mathbf{x}} = \ddot{\mathbf{x}}_n + \dot{\boldsymbol{\omega}}_n \times \mathbf{b} + \boldsymbol{\omega}_n \times \boldsymbol{\omega}_n \times \mathbf{b} \tag{9.196a}$$

$$\omega = \omega_n \tag{9.196b}$$

where  $\boldsymbol{b} = \boldsymbol{R}_n \tilde{\boldsymbol{b}}$  is the offset of the accelerometer from the node.

The acceleration and the angular velocity in the reference frame of the node, as output from the strapdown sensor, respectively are  $\overline{x}$  and  $\overline{\omega}$ . The constraint equations are

$$\ddot{x} = R_n \overline{\ddot{x}} \tag{9.197a}$$

$$\omega = R_n \overline{\omega} \tag{9.197b}$$

The acceleration of the point where the strapdown sensor is placed is

$$\ddot{\boldsymbol{x}} = \left(\frac{1}{m}\boldsymbol{I} + \boldsymbol{f} \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1}\boldsymbol{f} \times\right) \dot{\boldsymbol{\beta}} - \boldsymbol{f} \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1}\dot{\boldsymbol{\gamma}} - \boldsymbol{f} \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1} \left(\dot{\boldsymbol{x}}_{n} \times \boldsymbol{\beta} - \boldsymbol{\omega}_{n} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega}_{n}\right) 
+ \boldsymbol{b} \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1} \left(\dot{\boldsymbol{\gamma}} - \boldsymbol{f} \times \dot{\boldsymbol{\beta}} + \dot{\boldsymbol{x}}_{n} \times \boldsymbol{\beta} - \boldsymbol{\omega}_{n} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega}_{n}\right) + \boldsymbol{\omega}_{n} \times \boldsymbol{\omega}_{n} \times \boldsymbol{b} 
= \left(\frac{1}{m}\boldsymbol{I} + (\boldsymbol{f} - \boldsymbol{b}) \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1}\boldsymbol{f} \times\right) \dot{\boldsymbol{\beta}} - (\boldsymbol{f} - \boldsymbol{b}) \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1}\dot{\boldsymbol{\gamma}} 
- (\boldsymbol{f} - \boldsymbol{b}) \times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1} \left(\dot{\boldsymbol{x}}_{n} \times \boldsymbol{\beta} - \boldsymbol{\omega}_{n} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega}_{n}\right) + \boldsymbol{\omega}_{n} \times \boldsymbol{\omega}_{n} \times \boldsymbol{b} \tag{9.198}$$

Note: this constraint is extremely simpler when the node is in the center of mass (f = 0), and the strapdown sensor is in the node (b = 0).

## 9.1.18 Rigid body displacement joint

Author: Reinhard Resch

A rigid body displacement joint is a load distributing rigid body coupling constraint similar to NAS-TRAN's RBE3 element.

Files. It is implemented in files mbdyn/struct/rbdispjad.h mbdyn/struct/rbdispjad.cc

Kinematics The purpose of a rigid body displacement joint is, to apply a position and orientation constraint to a master node in such a way, that the master node is following the weighted average rigid body motion of a set of displacement only slave nodes. In contrast to NASTRAN's RBE3 element, large deformations and large rotations are supported. For each slave node the difference  $u_j$ , between the actual position of the slave node  $x_j$  and the corresponding nominal offset from the master node, can be written as:

$$\boldsymbol{u}_j = \boldsymbol{x}_m + \boldsymbol{R}_m \, \boldsymbol{o}_j - \boldsymbol{x}_j \tag{9.199}$$

 $\boldsymbol{x}_m$  Position of the master node

 $R_m$  Orientation matrix of the master node

 $o_i$  Initial distance between the slave node and the master node

 $x_j$  Position of the slave node

In order to derive the expressions for the kinematic constraints, the virtual perturbation of  $u_i$  is needed.

$$\delta \boldsymbol{u}_{i} = \delta \boldsymbol{x}_{m} + \delta \boldsymbol{R}_{m} \, \boldsymbol{o}_{i} - \delta \boldsymbol{x}_{i} \tag{9.200}$$

$$\delta \mathbf{R}_m \approx \delta \boldsymbol{\varphi}_m \times \mathbf{R}_m \tag{9.201}$$

$$\delta \mathbf{u}_{j} = \delta \mathbf{x}_{m} + \delta \boldsymbol{\varphi}_{m} \times (\mathbf{R}_{m} \mathbf{o}_{j}) - \underbrace{\delta \mathbf{x}_{j}}_{\mathbf{o}_{j}}$$

$$(9.201)$$

 $\delta \boldsymbol{u}_i$  Virtual perturbation of  $\boldsymbol{u}_i$ 

 $\delta x_m$  Virtual perturbation of the position of the master node

 $\delta R_m$  Virtual perturbation of the orientation matrix of the master node

 $\delta \boldsymbol{\varphi}_m$  Virtual perturbation of the rotation vector of the master node

 $\delta x_i$  Virtual perturbation of  $x_i$ 

Since the kinematic constraints should be applied only to the master node,  $\delta x_i = 0$  is assumed.

Fictitious strain energy In the following equation, the virtual perturbation of the fictitious strain energy  $U^*$  is defined.

$$\delta U^{\star} = \sum_{j=1}^{N} w_j \, \delta \mathbf{u}_j^T \, \mathbf{u}_j \tag{9.203}$$

 $\delta U^{\star}$  Virtual perturbation of the fictitious strain energy

 $w_i$  Weighting factor for slave node j

N Number of slave nodes

It is not required, that every weighting factor  $w_j$  is greater than zero. However the following condition must hold:

$$\sum_{j=1}^{N} w_j > 0 \tag{9.204}$$

**Physical interpretation** One could give the following physical interpretation of  $U^*$ : Between each slave node and the master node, a fictitious linear isotropic spring with stiffness  $w_j$  is attached at an offset  $o_j$  with respect to the master node. Then  $U^*$  is the overall strain energy of all fictitious springs. In order to fulfill the constraint equations, the fictitious strain energy  $U^*$  must be minimized. For that reason, we may write:

$$\delta U^{\star} \equiv \mathbf{0} \tag{9.205}$$

Within this context it is not obvious why  $w_j < 0$  should be allowed. However, this condition is required only for second order hexahedral elements which require negative weights at the corner nodes. Otherwise it would not be possible to achieve a smooth stress distribution for such elements.

Constraint equations Now equation 9.199 and equation 9.202 are substituted into equation 9.203:

$$\delta U^{\star} = \sum_{j=1}^{N} w_j \left( \delta \boldsymbol{x}_m^T + \delta \boldsymbol{\varphi}_m^T \times \boldsymbol{R}_m \, \boldsymbol{o}_j \right) \left( \boldsymbol{x}_m + \boldsymbol{R}_m \, \boldsymbol{o}_j - \boldsymbol{x}_j \right)$$
(9.206)

$$= \sum_{j=1}^{N} w_j \left[ \delta \boldsymbol{x}_m^T \left( \boldsymbol{x}_m + \boldsymbol{R}_m \, \boldsymbol{o}_j - \boldsymbol{x}_j \right) + \delta \boldsymbol{\varphi}_m^T \left( \boldsymbol{R}_m \, \boldsymbol{o}_j \right) \times \left( \boldsymbol{x}_m + \boldsymbol{R}_m \, \boldsymbol{o}_j - \boldsymbol{x}_j \right) \right]$$
(9.207)

Since equation 9.207 and equation 9.205 must be valid for any  $\delta x_m$  and any  $\delta \varphi_m$  we can directly derive the constraint equations  $\Phi_t$  and  $\Phi_r$ :

$$\Phi_t = \sum_{j=1}^{N} w_j (x_m + R_m o_j - x_j) = 0$$
 (9.208)

$$\mathbf{\Phi}_r = \sum_{j=1}^N w_j \left( \mathbf{R}_m \, \mathbf{o}_j \right) \times \left( \mathbf{x}_m + \mathbf{R}_m \, \mathbf{o}_j - \mathbf{x}_j \right) = \mathbf{0}$$

$$(9.209)$$

 $\Phi_t$  Constraint equations for the position of the master node

 $\Phi_r$  Constraint equations for the orientation of the master node

Because  $(\mathbf{R}_m \mathbf{o}_j) \times (\mathbf{R}_m \mathbf{o}_j) = \mathbf{0}$ , the expression for  $\mathbf{\Phi}_r$  can be simplified.

$$\mathbf{\Phi}_r = \sum_{j=1}^N w_j \left( \mathbf{R}_m \, \mathbf{o}_j \right) \times \left( \mathbf{x}_m - \mathbf{x}_j \right) = \mathbf{0}$$
(9.210)

Virtual perturbation of constraint equations In order to include Lagrange multipliers in the equations of motion, it is required to derive the virtual perturbation of the constraint equations  $\delta \Phi_t$  and  $\delta \Phi_r$ .

$$\delta \mathbf{\Phi}_t = \sum_{j=1}^N w_j \left[ \delta \mathbf{x}_m + \delta \mathbf{\varphi}_m \times (\mathbf{R}_m \, \mathbf{o}_j) - \delta \mathbf{x}_j \right]$$
(9.211)

$$= \sum_{j=1}^{N} w_j \left[ \delta \boldsymbol{x}_m - (\boldsymbol{R}_m \, \boldsymbol{o}_j) \times \delta \boldsymbol{\varphi}_m - \delta \boldsymbol{x}_j \right]$$
 (9.212)

$$\delta \mathbf{\Phi}_{t}^{T} = \sum_{j=1}^{N} w_{j} \left[ \delta \mathbf{x}_{m}^{T} + \delta \mathbf{\varphi}_{m}^{T} \left( \mathbf{R}_{m} \mathbf{o}_{j} \right) \times -\delta \mathbf{x}_{j}^{T} \right]$$

$$(9.213)$$

Now equation 9.213 can be rearranged and written in matrix form:

$$\delta \boldsymbol{\Phi}_{t}^{T} = \begin{pmatrix} \delta \boldsymbol{x}_{m}^{T} & \delta \boldsymbol{\varphi}_{m}^{T} & \delta \boldsymbol{x}_{1}^{T} & \dots & \delta \boldsymbol{x}_{N}^{T} \end{pmatrix} \begin{pmatrix} \sum_{j=1}^{N} w_{j} \boldsymbol{I} \\ \sum_{j=1}^{N} w_{j} \left( \boldsymbol{R}_{m} \boldsymbol{o}_{j} \right) \times \\ -w_{1} \boldsymbol{I} \\ \vdots \\ -w_{N} \boldsymbol{I} \end{pmatrix}$$
(9.214)

The same procedure is also applied to  $\Phi_r$ .

$$\delta \mathbf{\Phi}_r = \sum_{j=1}^N w_j \left[ -(\mathbf{x}_m - \mathbf{x}_j) \times \delta \mathbf{R}_m \, \mathbf{o}_j + (\mathbf{R}_m \, \mathbf{o}_j) \times (\delta \mathbf{x}_m - \delta \mathbf{x}_j) \right]$$
(9.215)

$$= \sum_{j=1}^{N} w_j \left[ -(\boldsymbol{x}_m - \boldsymbol{x}_j) \times \delta \boldsymbol{\varphi}_m \times (\boldsymbol{R}_m \, \boldsymbol{o}_j) + (\boldsymbol{R}_m \, \boldsymbol{o}_j) \times (\delta \boldsymbol{x}_m - \delta \boldsymbol{x}_j) \right]$$
(9.216)

$$= \sum_{j=1}^{N} w_j \left[ (\boldsymbol{x}_m - \boldsymbol{x}_j) \times (\boldsymbol{R}_m \, \boldsymbol{o}_j) \times \delta \boldsymbol{\varphi}_m + (\boldsymbol{R}_m \, \boldsymbol{o}_j) \times (\delta \boldsymbol{x}_m - \delta \boldsymbol{x}_j) \right]$$
(9.217)

$$\delta \mathbf{\Phi}_r^T = \sum_{j=1}^N w_j \left[ \delta \boldsymbol{\varphi}_m^T (\boldsymbol{R}_m \, \boldsymbol{o}_j) \times (\boldsymbol{x}_m - \boldsymbol{x}_j) \times - \left( \delta \boldsymbol{x}_m^T - \delta \boldsymbol{x}_j^T \right) (\boldsymbol{R}_m \, \boldsymbol{o}_j) \times \right]$$
(9.218)

Also equation 9.218 can be rearranged and written in matrix form:

$$\delta \boldsymbol{\Phi}_{r}^{T} = \begin{pmatrix} \delta \boldsymbol{x}_{m}^{T} & \delta \boldsymbol{\varphi}_{m}^{T} & \delta \boldsymbol{x}_{1}^{T} & \dots & \delta \boldsymbol{x}_{N}^{T} \end{pmatrix} \begin{pmatrix} -\sum_{j=1}^{N} w_{j} & (\boldsymbol{R}_{m} \, \boldsymbol{o}_{j}) \times \\ \sum_{j=1}^{N} w_{j} & (\boldsymbol{R}_{m} \, \boldsymbol{o}_{j}) \times (\boldsymbol{x}_{m} - \boldsymbol{x}_{j}) \times \\ w_{1} & (\boldsymbol{R}_{m} \, \boldsymbol{o}_{1}) \times \\ \vdots \\ w_{N} & (\boldsymbol{R}_{m} \, \boldsymbol{o}_{N}) \times \end{pmatrix}$$
(9.219)

Adding contributions due to Lagrange multipliers In order to enforce the constraint equations  $\Phi_t$  and  $\Phi_r$ , Lagrange multipliers  $\lambda_t$  and  $\lambda_r$  are required.

$$\delta W_{\lambda} = \delta \mathbf{\Phi}_{t}^{T} \mathbf{\lambda}_{t} + \delta \mathbf{\Phi}_{r}^{T} \mathbf{\lambda}_{r} \tag{9.220}$$

$$=\begin{pmatrix} \delta \boldsymbol{x}_{m} \\ \delta \boldsymbol{\varphi}_{m} \\ \delta \boldsymbol{x}_{1} \\ \vdots \\ \delta \boldsymbol{x}_{N} \end{pmatrix}^{T} \begin{pmatrix} \sum_{j=1}^{N} w_{j} \left[ \boldsymbol{\lambda}_{t} - (\boldsymbol{R}_{m} \, \boldsymbol{o}_{j}) \times \boldsymbol{\lambda}_{r} \right] \\ \sum_{j=1}^{N} w_{j} \left[ (\boldsymbol{R}_{m} \, \boldsymbol{o}_{j}) \times \boldsymbol{\lambda}_{t} + (\boldsymbol{R}_{m} \, \boldsymbol{o}_{j}) \times (\boldsymbol{x}_{m} - \boldsymbol{x}_{j}) \times \boldsymbol{\lambda}_{r} \right] \\ w_{1} \left[ (\boldsymbol{R}_{m} \, \boldsymbol{o}_{1}) \times \boldsymbol{\lambda}_{r} - \boldsymbol{\lambda}_{t} \right] \\ \vdots \\ w_{N} \left[ (\boldsymbol{R}_{m} \, \boldsymbol{o}_{N}) \times \boldsymbol{\lambda}_{r} - \boldsymbol{\lambda}_{t} \right] \end{pmatrix}$$
(9.221)

$$= \begin{pmatrix} \delta \boldsymbol{x}_{m} \\ \delta \boldsymbol{\varphi}_{m} \\ \delta \boldsymbol{x}_{1} \\ \vdots \\ \delta \boldsymbol{x}_{N} \end{pmatrix}^{T} \begin{pmatrix} \boldsymbol{F}_{m} \\ \boldsymbol{M}_{m} \\ \boldsymbol{F}_{1} \\ \vdots \\ \boldsymbol{F}_{N} \end{pmatrix}$$
(9.222)

 $\lambda_t$  Lagrange multipliers for position constraints  $\Phi_t$ 

 $\lambda_r$  Lagrange multipliers for orientation constraints  $\Phi_r$ 

 $\boldsymbol{F}_m$  Reaction force at the master node

 $M_m$  Reaction couple at the master node

 $F_j$  Reaction force at slave node j

**Contributions of the element** Finally the contributions of the rigid body displacement joint can be summarized as:

$$\begin{pmatrix} \operatorname{dCoef}^{-1} \Phi_{t} \\ \operatorname{dCoef}^{-1} \Phi_{r} \\ F_{m} \\ M_{m} \\ F_{1} \\ \vdots \\ F_{N} \end{pmatrix} = \begin{pmatrix} \operatorname{dCoef}^{-1} \sum_{j=1}^{N} w_{j} \left( \boldsymbol{x}_{m} + \boldsymbol{R}_{m} \, \boldsymbol{o}_{j} - \boldsymbol{x}_{j} \right) \\ \operatorname{dCoef}^{-1} \sum_{j=1}^{N} w_{j} \left( \boldsymbol{R}_{m} \, \boldsymbol{o}_{j} \right) \times \left( \boldsymbol{x}_{m} - \boldsymbol{x}_{j} \right) \\ \sum_{j=1}^{N} w_{j} \left[ \boldsymbol{\lambda}_{t} - \left( \boldsymbol{R}_{m} \, \boldsymbol{o}_{j} \right) \times \boldsymbol{\lambda}_{r} \right] \\ \sum_{j=1}^{N} w_{j} \left( \boldsymbol{R}_{m} \, \boldsymbol{o}_{j} \right) \times \left[ \boldsymbol{\lambda}_{t} + \left( \boldsymbol{x}_{m} - \boldsymbol{x}_{j} \right) \times \boldsymbol{\lambda}_{r} \right] \\ w_{1} \left[ \left( \boldsymbol{R}_{m} \, \boldsymbol{o}_{1} \right) \times \boldsymbol{\lambda}_{r} - \boldsymbol{\lambda}_{t} \right] \\ \vdots \\ w_{N} \left[ \left( \boldsymbol{R}_{m} \, \boldsymbol{o}_{N} \right) \times \boldsymbol{\lambda}_{r} - \boldsymbol{\lambda}_{t} \right] \end{pmatrix}$$

$$(9.223)$$

In equation 9.223 the constraint equations  $\Phi_t$  and  $\Phi_r$  are divided by dCoef in order to improve the condition number of the Jacobian matrix.

# 9.2 Deformable Constraints

Definitions

$$egin{array}{lll} f_1 &=& R_1 ilde{f}_1 \ f_2 &=& R_2 ilde{f}_2 \ R_{1h} &=& R_1 ilde{R}_{1h} \ R_{2h} &=& R_2 ilde{R}_{2h} \end{array}$$

where  $\mathbf{R}_i$  is the current orientation of node i,  $\tilde{\mathbf{R}}_{ih}$  is a constant re-orientation of the joint with respect to node i, so  $\mathbf{R}_{ih}$  is the orientation of the joint with respect to the global frame;  $\tilde{\mathbf{f}}_i$  is the offset of the joint with respect to node i in the node reference frame, so  $\mathbf{f}_i$  is the offset of the joint with respect to node i in the global frame, and  $\mathbf{x}_i + \mathbf{f}_i$  is the position of the joint with respect to the global frame.

Equilibrium equations are obtained by means of the Virtual Work Principle (VWP). While the unknown orientation parameters depend on the parametrization in use, and typically are Gibbs-Rodrigues parameters according to the updated-updated approach, equilibrium is written in terms of the equations conjugated to perturbations of relative rotation, namely:

$$\delta \mathcal{L} = \sum \delta \mathbf{x}_i^T \mathbf{F}_i + \mathbf{\theta}_{i\delta} \mathbf{M}_i = 0 \tag{9.224}$$

# 9.2.1 Rod With Offsets

Distance vector between pin points

$$l = x_2 + f_2 - x_1 - f_1 (9.225)$$

scalar distance

$$l = \sqrt{l^T l} \tag{9.226}$$

strain

$$\varepsilon = \frac{l}{l_0} - 1 \tag{9.227}$$

strain rate

$$\dot{\varepsilon} = \frac{\dot{l}}{l_0} \tag{9.228}$$

where

$$\dot{l} = \frac{1}{l} l^T \dot{l} \tag{9.229a}$$

$$\dot{\boldsymbol{l}} = \dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1 - \boldsymbol{\omega}_1 \times \boldsymbol{f}_1 \tag{9.229b}$$

scalar force

$$f = f\left(\varepsilon, \dot{\varepsilon}\right) \tag{9.230}$$

nodal forces and moments result from the VWP according to

$$\delta \mathcal{L} = \delta l^T f \tag{9.231a}$$

$$=\delta l^T \frac{l}{l} f \tag{9.231b}$$

$$= (\delta \boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_1 + \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta})^T \frac{\boldsymbol{l}}{l} f$$
(9.231c)

force vector

$$F = \frac{l}{l}f \tag{9.232}$$

nodal forces and moments

$$F_1 = -F \tag{9.233a}$$

$$M_1 = -\mathbf{f}_1 \times \mathbf{F} \tag{9.233b}$$

$$\mathbf{F}_2 = \mathbf{F} \tag{9.233c}$$

$$M_2 = f_2 \times F \tag{9.233d}$$

equation linearization

$$\delta \mathbf{F}_1 = -\delta \mathbf{F} \tag{9.234a}$$

$$\delta \mathbf{M}_1 = -\mathbf{f}_1 \times \delta \mathbf{F} - \mathbf{F} \times \mathbf{f}_1 \times \mathbf{\theta}_{1\delta} \tag{9.234b}$$

$$(9.234c)$$

$$\delta M_2 = f_2 \times \delta F + F \times f_2 \times \theta_{2\delta} \tag{9.234d}$$

force linearization

$$\delta \mathbf{F} = \frac{f}{l} \left( \mathbf{I} - \frac{l \mathbf{l}^T}{l^2} \right) \delta \mathbf{l} + \frac{l}{l} \delta f \tag{9.235}$$

scalar force linearization

$$\delta f = \frac{\partial f}{\partial \varepsilon} \delta \varepsilon + \frac{\partial f}{\partial \dot{\varepsilon}} \delta \dot{\varepsilon} \tag{9.236}$$

strain linearization

$$\delta \varepsilon = \frac{1}{l_0} \delta l \tag{9.237}$$

where

$$\delta l = \frac{1}{l} \mathbf{l}^T \delta \mathbf{l} \tag{9.238a}$$

$$\delta \boldsymbol{l} = \delta \boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_1 + \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta}$$

$$(9.238b)$$

strain rate linearization

$$\delta \dot{\varepsilon} = \frac{1}{l_0} \delta \dot{l} \tag{9.239}$$

where

$$\delta \dot{l} = \frac{l^T}{l} \delta \dot{l} + \frac{\dot{l}^T}{l} \left( I - \frac{l l^T}{l^2} \right) \delta l$$
 (9.240a)

$$\delta \dot{\boldsymbol{l}} = \delta \dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \times \delta \boldsymbol{\omega}_2 - \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta \dot{\boldsymbol{x}}_1 + \boldsymbol{f}_1 \times \delta \boldsymbol{\omega}_1 + \boldsymbol{\omega}_1 \times \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta}$$

$$(9.240b)$$

to summarize:

$$\delta \mathbf{F} = \mathbf{K}_{l} \delta \mathbf{l} + \mathbf{K}_{j} \delta \dot{\mathbf{l}} \tag{9.241}$$

with

$$K_{l} = \frac{f}{l}I + \left(\frac{1}{l^{2}l_{0}}\frac{\partial f}{\partial \varepsilon} - \frac{\dot{\varepsilon}}{l^{3}}\frac{\partial f}{\partial \dot{\varepsilon}} - \frac{f}{l^{3}}\right)ll^{T} + \frac{1}{l^{2}l_{0}}\frac{\partial f}{\partial \dot{\varepsilon}}l\dot{l}^{T}$$

$$(9.242a)$$

$$K_{i} = \frac{1}{l^{2}l_{0}} \frac{\partial f}{\partial \dot{\varepsilon}} l l^{T}$$

$$(9.242b)$$

according to the simplifications of the updated-updated approach,

$$\boldsymbol{\theta}_{i\delta} \stackrel{\text{uu}}{=} \delta \boldsymbol{g}_i$$
 (9.243a)

$$\delta \boldsymbol{\omega}_i \stackrel{\text{uu}}{=} \delta \dot{\boldsymbol{g}}_i - \boldsymbol{\omega} \times \delta \boldsymbol{g}_i \tag{9.243b}$$

recalling that

$$\delta z = c\delta \dot{z} \tag{9.244}$$

the linearization of the force becomes

$$\delta \mathbf{F} = (c\mathbf{K}_{l} + \mathbf{K}_{\dot{l}}) \, \delta \dot{\mathbf{x}}_{2} 
+ (-(c\mathbf{K}_{l} + \mathbf{K}_{\dot{l}}) \, \mathbf{f}_{2} \times + c\mathbf{K}_{\dot{l}} \, (\mathbf{f}_{2} \times \boldsymbol{\omega}_{2}) \times) \, \delta \dot{\mathbf{g}}_{2} 
- (c\mathbf{K}_{l} + \mathbf{K}_{\dot{l}}) \, \delta \dot{\mathbf{x}}_{1} 
- (-(c\mathbf{K}_{l} + \mathbf{K}_{\dot{l}}) \, \mathbf{f}_{1} \times + c\mathbf{K}_{\dot{l}} \, (\mathbf{f}_{1} \times \boldsymbol{\omega}_{1}) \times) \, \delta \dot{\mathbf{g}}_{1}$$
(9.245)

In summary:

$$\begin{bmatrix} (cK_{l}+K_{i}) \\ f_{1}\times(cK_{l}+K_{i}) \\ -(cK_{l}+K_{i}) \\ -f_{2}\times(cK_{l}+K_{i}) \end{bmatrix} \delta \dot{x}_{1}$$

$$+ \begin{bmatrix} -((cK_{l}+K_{i}) f_{1}\times -cK_{i} (f_{1}\times \omega_{1})\times) \\ -f_{1}\times((cK_{l}+K_{i}) f_{1}\times -cK_{i} (f_{1}\times \omega_{1})\times) -cF\times f_{1}\times \\ ((cK_{l}+K_{i}) f_{1}\times -cK_{i} (f_{1}\times \omega_{1})\times) \\ f_{2}\times((cK_{l}+K_{i}) f_{1}\times -cK_{i} (f_{1}\times \omega_{1})\times) \end{bmatrix} \delta \dot{g}_{1}$$

$$+ \begin{bmatrix} -(cK_{l}+K_{i}) \\ -f_{1}\times(cK_{l}+K_{i}) \\ (cK_{l}+K_{i}) \end{bmatrix} \delta \dot{x}_{2}$$

$$+ \begin{bmatrix} ((cK_{l}+K_{i}) f_{2}\times -cK_{i} (f_{2}\times \omega_{2})\times) \\ -f_{1}\times((cK_{l}+K_{i}) f_{2}\times -cK_{i} (f_{2}\times \omega_{2})\times) \\ -((cK_{l}+K_{i}) f_{2}\times -cK_{i} (f_{2}\times \omega_{2})\times) \\ -f_{2}\times((cK_{l}+K_{i}) f_{2}\times -cK_{i} (f_{2}\times \omega_{2})\times) +cF\times f_{2}\times \end{bmatrix} \delta \dot{g}_{2} = \begin{cases} F \\ f_{1}\times F \\ -F \\ -f_{2}\times F \end{cases}$$

$$(9.246)$$

# 9.2.2 Deformable Hinge

The deformable hinge applies to two nodes an internal moment that may depend on their relative orientation and angular velocity by means of a 3D constitutive law. It is discussed in [?]. Two variants of this joint are presented:

• the one historically implemented in MBDyn, called "attached", considers the constitutive law and the resulting moment attached to node 1;

• the other one, called "invariant", defines an intermediate orientation that is halfway between that of the two nodes, and considers the constitutive law and the resulting moment attached to that intermediate orientation; as a consequence, the resulting internal moment does not depend on the node sequence even when anisotropic constitutive laws are considered.

The relative rotation vector is computed in analogy with the drive hinge joint (DriveHingeJoint).

$$\boldsymbol{\theta} = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1h}^{T}\boldsymbol{R}_{2h}\right)\right) \tag{9.247}$$

where  $R_{1h}$ ,  $R_{2h}$  are the matrices that express the orientation of each side of the hinge in the global reference frame, defined as

$$R_{1h} = R_1 \tilde{R}_{1h}$$
 (9.248a)

$$R_{2h} = R_2 \tilde{R}_{2h} \tag{9.248b}$$

and  $\tilde{R}_{1h}$ ,  $\tilde{R}_{2h}$  are the matrices that express the orientation of each side of the hinge with respect to the corresponding node. The perturbation of  $R_{1h}$ ,  $R_{2h}$  yields

$$\delta \mathbf{R}_{1h} = \boldsymbol{\theta}_{1\delta} \times \mathbf{R}_{1} \tilde{\mathbf{R}}_{1h} = \boldsymbol{\theta}_{1\delta} \times \mathbf{R}_{1h} \tag{9.249a}$$

$$\delta \mathbf{R}_{2h} = \boldsymbol{\theta}_{2\delta} \times \mathbf{R}_{2} \tilde{\mathbf{R}}_{2h} = \boldsymbol{\theta}_{2\delta} \times \mathbf{R}_{2h} \tag{9.249b}$$

since matrices  $\tilde{R}_{1h}$ ,  $\tilde{R}_{2h}$  are constant.

Since the relative orientation  $R_{1h}^T R_{2h}$  is a rotation about an axis parallel to  $\theta$ ,  $\theta$  itself does not change when it is referred to any intermediate orientation between I and  $R_{1h}^T R_{2h}$ , namely

$$R_{1h}^T R_{2h} \theta = \theta. \tag{9.250}$$

The same applies for any relative orientation tensor built from a rotation vector  $\alpha \theta$  parallel to  $\theta$ , whatever value the scalar  $\alpha$  assumes.

The relative angular velocity is defined as the derivative of the relative orientation matrix

$$\boldsymbol{\omega} \times = \frac{\mathrm{d}}{\mathrm{d}t} \left( \boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h} \right) \left( \boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h} \right)^T$$

$$= \left( \dot{\boldsymbol{R}}_{1h}^T \boldsymbol{R}_{2h} + \boldsymbol{R}_{1h}^T \dot{\boldsymbol{R}}_{2h} \right) \boldsymbol{R}_{2h}^T \boldsymbol{R}_{1h}$$

$$= \boldsymbol{R}_{1h}^T \boldsymbol{\omega}_1 \times^T \boldsymbol{R}_{1h} + \boldsymbol{R}_{1h}^T \boldsymbol{\omega}_2 \times \boldsymbol{R}_{1h}$$

$$= \boldsymbol{R}_{1h}^T \left( \boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) \times \boldsymbol{R}_{1h}$$

$$(9.251)$$

so

$$\boldsymbol{\omega} = \boldsymbol{R}_{1h}^{T} \left( \boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1} \right) \tag{9.252}$$

### **Attached Deformable Hinge**

The constitutive law is defined attached to the reference frame of node 1; the value of the relative rotation vector,  $\boldsymbol{\theta}$ , does not vary, according to what stated earlier.

The perturbation of  $\theta$  yields

$$\theta_{\delta} = \mathbf{R}_{1h}^{T} \left( \theta_{2\delta} - \theta_{1\delta} \right) \tag{9.253}$$

which, according to the simplifications of the updated-updated approach, becomes

$$\boldsymbol{\theta}_{\delta} \stackrel{\text{uu}}{=} \boldsymbol{R}_{1h}^{T} \left( \delta \boldsymbol{g}_{2} - \delta \boldsymbol{g}_{1} \right) \tag{9.254}$$

The perturbation of the relative angular velocity of Equation (9.252), according to the simplifications of the updated-updated approach, yields

$$\delta \boldsymbol{\omega} = \boldsymbol{R}_{1h}^{T} \left( (\boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1}) \times \boldsymbol{\theta}_{1\delta} + \delta \boldsymbol{\omega}_{2} - \delta \boldsymbol{\omega}_{1} \right)$$

$$\stackrel{\text{uu}}{=} \boldsymbol{R}_{1h}^{T} \left( (\boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1}) \times \delta \boldsymbol{g}_{1} + \delta \dot{\boldsymbol{g}}_{2} - \boldsymbol{\omega}_{2} \times \delta \boldsymbol{g}_{2} - \delta \dot{\boldsymbol{g}}_{1} + \boldsymbol{\omega}_{1} \times \delta \boldsymbol{g}_{1} \right)$$

$$= \boldsymbol{R}_{1h}^{T} \left( \delta \dot{\boldsymbol{g}}_{2} - \delta \dot{\boldsymbol{g}}_{1} - \boldsymbol{\omega}_{2} \times (\delta \boldsymbol{g}_{2} - \delta \boldsymbol{g}_{1}) \right). \tag{9.255}$$

The internal moment  $\tilde{M}$  is computed as function of the relative rotation and velocity

$$\tilde{M} = \tilde{M}(\theta, \omega). \tag{9.256}$$

The nodal moments result from the VWP as

$$\delta \mathcal{L} = \boldsymbol{\theta}_{\delta}^{T} \tilde{\boldsymbol{M}}$$

$$= (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta})^{T} \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}, \tag{9.257}$$

which states that the internal moment is applied to each node after pre-multiplication by  $R_{1h}$ 

$$\mathbf{M}_{i} = \left(-1\right)^{i} \mathbf{R}_{1h} \tilde{\mathbf{M}} \left(\boldsymbol{\theta}, \boldsymbol{\omega}\right). \tag{9.258}$$

Its linearization yields

$$\delta \mathbf{M}_{i} = (-1)^{i} \mathbf{R}_{1h} \left( \tilde{\mathbf{M}}_{/\boldsymbol{\theta}} \delta \boldsymbol{\theta} + \tilde{\mathbf{M}}_{/\boldsymbol{\omega}} \delta \boldsymbol{\omega} \right) - \mathbf{M}_{i} \times \boldsymbol{\theta}_{1\delta}$$

$$(9.259)$$

The complete linearized problem is

$$\begin{bmatrix}
M_{/\omega} & -M_{/\omega} \\
-M_{/\omega} & M_{/\omega}
\end{bmatrix} \begin{cases}
\delta\omega_{1} \\
\delta\omega_{2}
\end{cases}$$

$$+ \begin{bmatrix}
-M_{/\omega}(\omega_{2} - \omega_{1}) \times & 0 \\
M_{/\omega}(\omega_{2} - \omega_{1}) \times & 0
\end{bmatrix} \begin{cases}
\theta_{1\delta} \\
\theta_{2\delta}
\end{cases}$$

$$+ \begin{bmatrix}
M_{/\theta} & -M_{/\theta} \\
-M_{/\theta} & M_{/\theta}
\end{bmatrix} \begin{cases}
\theta_{1\delta} \\
\theta_{2\delta}
\end{cases}$$

$$+ \begin{bmatrix}
M \times & 0 \\
-M \times & 0
\end{bmatrix} \begin{cases}
\theta_{1\delta} \\
\theta_{2\delta}
\end{cases}$$

$$= \begin{cases}
M \\
-M
\end{cases}$$
(9.260)

where

$$M_{\theta} = R_{1h}\tilde{M}_{\theta}\Gamma(\theta)^{-1}R_{1h}^{T}$$
(9.261a)

$$M_{/\omega} = R_{1h} \tilde{M}_{/\omega} R_{1h}^T. \tag{9.261b}$$

According to the simplifications of the updated-updated approach, the linearization becomes

$$\begin{bmatrix}
M_{/\omega} & -M_{/\omega} \\
-M_{/\omega} & M_{/\omega}
\end{bmatrix} \begin{cases}
\delta \dot{g}_{1} \\
\delta \dot{g}_{2}
\end{cases} 
+ \begin{bmatrix}
-M_{/\omega}\omega_{2} \times M_{/\omega}\omega_{2} \times \\
M_{/\omega}\omega_{2} \times -M_{/\omega}\omega_{2} \times
\end{bmatrix} \begin{cases}
\delta g_{1} \\
\delta g_{2}
\end{cases} 
+ \begin{bmatrix}
M_{/\theta} & -M_{/\theta} \\
-M_{/\theta} & M_{/\theta}
\end{bmatrix} \begin{cases}
\delta g_{1} \\
\delta g_{2}
\end{cases} 
+ \begin{bmatrix}
M \times 0 \\
-M \times 0
\end{bmatrix} \begin{cases}
\delta g_{1} \\
\delta g_{2}
\end{cases} = \begin{cases}
M \\
-M
\end{cases}.$$
(9.262)

#### **Invariant Deformable Hinge**

The rotation  $\tilde{\theta} = \theta/2$  is used to define an intermediate reference frame for the joint, whose orientation with respect to node 1 is

$$\tilde{\mathbf{R}} = \exp\left(\frac{1}{2}\exp^{-1}\left(\mathbf{R}_{1h}^T\mathbf{R}_{2h}\right)\right)$$

$$= \exp\left(\tilde{\boldsymbol{\theta}}\times\right)$$
(9.263)

The orientation of the intermediate reference frame with respect to node 2 is defined by  $-\tilde{\theta}$ , i.e.  $\tilde{R}^T$ . The orientation of the intermediate frame with respect to the global frame is thus

$$\hat{R} = R_{1h}\tilde{R} \tag{9.264a}$$

$$= R_{2h}\tilde{R}^T \tag{9.264b}$$

The perturbation of  $\tilde{\boldsymbol{R}}$  is

$$\delta \tilde{R} = \tilde{\theta}_{\delta} \times \tilde{R} \tag{9.265}$$

where

$$\delta\tilde{\boldsymbol{\theta}} = \frac{1}{2}\delta\boldsymbol{\theta} \tag{9.266}$$

and thus

$$\tilde{\boldsymbol{\theta}}_{\delta} = \Gamma\left(\tilde{\boldsymbol{\theta}}\right) \frac{1}{2} \Gamma\left(\boldsymbol{\theta}\right)^{-1} \boldsymbol{\theta}_{\delta} \tag{9.267}$$

Another interesting result is obtained by considering that the perturbation of the relative orientation matrix must be equal to the perturbation of the square of the half-relative orientation, namely

$$\theta_{\delta} \times = \delta \left( \tilde{R} \tilde{R} \right) \left( \tilde{R} \tilde{R} \right)^{T}$$

$$= \tilde{\theta}_{\delta} \times + \tilde{R} \tilde{\theta}_{\delta} \times \tilde{R}^{T}$$
(9.268)

and thus

$$\boldsymbol{\theta}_{\delta} = \left( \boldsymbol{I} + \tilde{\boldsymbol{R}} \right) \tilde{\boldsymbol{\theta}}_{\delta}$$
 (9.269)

The matrix  $\left(I + \tilde{R}\right)$  has very interesting properties.

Property 1.

$$\left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)\tilde{\boldsymbol{R}}^T = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}^T\right) \tag{9.270}$$

Property 2.

$$\tilde{\mathbf{R}}^{T} \left( \mathbf{I} + \tilde{\mathbf{R}} \right) = \left( \mathbf{I} + \tilde{\mathbf{R}}^{T} \right) \tag{9.271}$$

Property 3.

$$\left(\boldsymbol{I} + \tilde{\boldsymbol{R}}^T\right)\tilde{\boldsymbol{R}} = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right) \tag{9.272}$$

Property 4.

$$\tilde{R}\left(I + \tilde{R}^T\right) = \left(I + \tilde{R}\right) \tag{9.273}$$

**Property 5.** As a consequence of Equations (9.270, 9.273),

$$\tilde{R}\left(I+\tilde{R}\right)\tilde{R}^{T} = \left(I+\tilde{R}\right) \tag{9.274}$$

which basically means that the transformation  $\left(I + \tilde{R}\right)$  is coaxial with the rotation described by matrix  $\tilde{R}$ . A similar property exists for matrix  $\left(I + \tilde{R}^T\right)$  (e.g. by transposing Equation (9.274)), while the following

# Property 6.

$$\tilde{\mathbf{R}}^{T} \left( \mathbf{I} + \tilde{\mathbf{R}} \right) \tilde{\mathbf{R}} = \left( \mathbf{I} + \tilde{\mathbf{R}} \right) \tag{9.275}$$

is true as a consequence of Equations (9.271, 9.272).

**Property 7.** Another interesting property is

$$I - \left(I + \tilde{R}\right)^{-1} = \left(I + \tilde{R}^{T}\right)^{-1}.$$
(9.276)

This can be easily proved by considering that, according to Equation (9.273),

$$(I + \tilde{R})^{-1} = (\tilde{R} (I + \tilde{R}^T))^{-1}$$

$$= (I + \tilde{R}^T)^{-1} \tilde{R}^T,$$

$$(9.277)$$

and, as a consequence,

$$I = \left(I + \tilde{R}^T\right)^{-1} \left(I + \tilde{R}^T\right) \tag{9.278}$$

which reduces again to the identity matrix.

## Property 8.

$$\left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)^{T} = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}^{T}\right) \tag{9.279}$$

Property 9.

$$\left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)^{-T} = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}^{T}\right)^{-1} \tag{9.280}$$

**Property 10.** As a consequence of Equations (9.270–9.273),

$$\hat{R}\left(I+\tilde{R}\right) = R_{1h}\left(I+\tilde{R}^{T}\right) \tag{9.281}$$

and

$$\hat{R}\left(I + \tilde{R}^T\right)^{-1} = R_{1h}\left(I + \tilde{R}\right)^{-1} \tag{9.282}$$

and all other combinations.

It is convenient to define

$$\hat{I} = \hat{R} \left( I + \tilde{R} \right)^{-1} \hat{R}^{T}. \tag{9.283}$$

According to Equations (9.269) and (9.253), the perturbation of the intermediate relative rotation vector yields

$$\tilde{\boldsymbol{\theta}}_{\delta} = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)^{-1} \boldsymbol{\theta}_{\delta}$$

$$= \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)^{-1} \boldsymbol{R}_{1h}^{T} \left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right)$$

$$= \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}^{T}\right)^{-1} \hat{\boldsymbol{R}}^{T} \left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right). \tag{9.284}$$

The perturbation of  $\hat{\mathbf{R}}$ , according to Equations (9.264a) and (9.264b), respectively yields

$$\delta \hat{R} \hat{R}^T = \theta_{1\delta} \times + R_{1h} \tilde{\theta}_{\delta} \times R_{1h}^T$$

$$= \theta_{2\delta} \times - \hat{R} \tilde{\theta}_{\delta} \times \hat{R}^T, \tag{9.285}$$

so

$$\hat{\boldsymbol{\theta}}_{\delta} = \boldsymbol{\theta}_{1\delta} + \boldsymbol{R}_{1h} \tilde{\boldsymbol{\theta}}_{\delta} \qquad \text{Eq. (9.264a)}$$

$$= \boldsymbol{\theta}_{1\delta} + \boldsymbol{R}_{1h} \left( \boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \boldsymbol{R}_{1h}^{T} \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right)$$

$$= \boldsymbol{\theta}_{1\delta} + \hat{\boldsymbol{R}} \left( \boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \hat{\boldsymbol{R}}^{T} \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right)$$

$$= \boldsymbol{\theta}_{2\delta} - \hat{\boldsymbol{R}} \tilde{\boldsymbol{\theta}}_{\delta} \qquad \text{Eq. (9.264b)}$$

$$= \boldsymbol{\theta}_{2\delta} - \hat{\boldsymbol{R}} \left( \boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \boldsymbol{R}_{1h}^{T} \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right)$$

$$= \boldsymbol{\theta}_{2\delta} - \hat{\boldsymbol{R}} \left( \boldsymbol{I} + \tilde{\boldsymbol{R}}^{T} \right)^{-1} \hat{\boldsymbol{R}}^{T} \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right)$$

$$= \hat{\boldsymbol{I}} \boldsymbol{\theta}_{2\delta} + \hat{\boldsymbol{I}}^{T} \boldsymbol{\theta}_{1\delta} \qquad (9.286)$$

The perturbation of matrix  $\hat{I}$  yields

$$\delta \hat{I} = \delta \hat{R} \left( I + \tilde{R} \right)^{-1} \hat{R}^{T}$$

$$+ \hat{R} \delta \left( I + \tilde{R} \right)^{-1} \delta \hat{R}^{T}$$

$$+ \hat{R} \left( I + \tilde{R} \right)^{-1} \delta \hat{R}^{T}$$

$$= \hat{\theta}_{\delta} \times \hat{I} - \hat{R} \left( I + \tilde{R} \right)^{-1} \tilde{\theta}_{\delta} \times \tilde{R} \left( I + \tilde{R} \right)^{-1} \hat{R}^{T} + \hat{I} \hat{\theta}_{\delta} \times ^{T}$$

$$= \hat{\theta}_{\delta} \times \hat{I} - \hat{R} \left( I + \tilde{R} \right)^{-1} \underbrace{R_{1h}^{T} R_{1h}}_{I} \tilde{\theta}_{\delta} \times \underbrace{R_{1h}^{T} R_{1h}}_{I} \tilde{R} \left( I + \tilde{R} \right)^{-1} \hat{R}^{T} - \hat{I} \hat{\theta}_{\delta} \times$$

$$= \hat{\theta}_{\delta} \times \hat{I} - \underbrace{\hat{R} \left( I + \tilde{R} \right)^{-1} R_{1h}^{T}}_{\hat{I}^{T}} \underbrace{R_{1h} \tilde{\theta}_{\delta} \times R_{1h}^{T}}_{R_{1h} \tilde{\theta}_{\delta} \times R_{1h}^{T}} \underbrace{R_{1h} \tilde{R} \left( I + \tilde{R} \right)^{-1} \hat{R}^{T}}_{\hat{I}} - \hat{I} \hat{\theta}_{\delta} \times$$

$$= \hat{\theta}_{\delta} \times \hat{I} - \hat{I}^{T} \left( \underbrace{R_{1h} \left( I + \tilde{R} \right)^{-1} R_{1h}^{T}}_{I} (\theta_{2\delta} - \theta_{1\delta}) \right) \times \hat{I} - \hat{I} \hat{\theta}_{\delta} \times$$

$$= \left( \hat{I} \theta_{2\delta} + \hat{I}^{T} \theta_{1\delta} \right) \times \hat{I} - \hat{I}^{T} \left( \hat{I} (\theta_{2\delta} - \theta_{1\delta}) \right) \times \hat{I} - \hat{I} \left( \hat{I} \theta_{2\delta} + \hat{I}^{T} \theta_{1\delta} \right) \times$$

$$(9.287b)$$

The perturbation of matrix  $\hat{I}$  is generally useful when multiplying a generic vector v, resulting in

$$\delta \hat{I} \boldsymbol{v} = \left( \left( \hat{I} \boldsymbol{v} \times - \left( \hat{I} \boldsymbol{v} \right) \times \right) \hat{I}^T - \hat{I}^T \left( \hat{I} \boldsymbol{v} \right) \times \hat{I} \right) \boldsymbol{\theta}_{1\delta}$$

$$+ \left( \left( \hat{I} \boldsymbol{v} \times - \left( \hat{I} \boldsymbol{v} \right) \times \right) \hat{I} + \hat{I}^T \left( \hat{I} \boldsymbol{v} \right) \times \hat{I} \right) \boldsymbol{\theta}_{2\delta}$$

$$= \hat{I}_{1(\boldsymbol{v})} \boldsymbol{\theta}_{1\delta} + \hat{I}_{2(\boldsymbol{v})} \boldsymbol{\theta}_{2\delta}$$

$$\delta \left( \hat{I}^T \right) \boldsymbol{v} = \left( \left( \hat{I}^T \boldsymbol{v} \times - \left( \hat{I}^T \boldsymbol{v} \right) \times \right) \hat{I}^T + \hat{I}^T \left( \hat{I} \boldsymbol{v} \right) \times \hat{I} \right) \boldsymbol{\theta}_{1\delta}$$

$$+ \left( \left( \hat{I}^T \boldsymbol{v} \times - \left( \hat{I}^T \boldsymbol{v} \right) \times \right) \hat{I} - \hat{I}^T \left( \hat{I} \boldsymbol{v} \right) \times \hat{I} \right) \boldsymbol{\theta}_{2\delta}$$

$$= \left( \hat{I}^T \right)_{1(\boldsymbol{v})} \boldsymbol{\theta}_{1\delta} + \left( \hat{I}^T \right)_{2(\boldsymbol{v})} \boldsymbol{\theta}_{2\delta}.$$

$$(9.288b)$$

Relative Rotation Vector. The relative rotation vector is  $\theta$ ; by definition, this does not depend on the reference frame that is considered, among those intermediate between node 1 and 2, since it is coaxial to any rotation intermediate between the orientations of the two nodes; in detail

$$\tilde{\mathbf{R}}^T \boldsymbol{\theta} = \boldsymbol{\theta},\tag{9.289}$$

since  $\tilde{\theta}$  is co-axial to  $\theta$  by construction.

This implies that

$$\delta\boldsymbol{\theta} = \delta \left( \tilde{\boldsymbol{R}}^T \boldsymbol{\theta} \right)$$

$$= \tilde{\boldsymbol{R}}^T \left( \boldsymbol{\theta} \times \tilde{\boldsymbol{\theta}}_{\delta} + \delta \boldsymbol{\theta} \right)$$

$$= \tilde{\boldsymbol{R}}^T \left( \boldsymbol{\theta} \times \Gamma \left( \tilde{\boldsymbol{\theta}} \right) \delta \tilde{\boldsymbol{\theta}} + \delta \boldsymbol{\theta} \right)$$

$$= \tilde{\boldsymbol{R}}^T \left( 2\tilde{\boldsymbol{\theta}} \times \Gamma \left( \tilde{\boldsymbol{\theta}} \right) \frac{\delta \boldsymbol{\theta}}{2} + \delta \boldsymbol{\theta} \right)$$

$$= \tilde{\boldsymbol{R}}^T \left( \tilde{\boldsymbol{\theta}} \times \Gamma \left( \tilde{\boldsymbol{\theta}} \right) + \boldsymbol{I} \right) \delta \boldsymbol{\theta}$$

$$= \delta \boldsymbol{\theta}, \tag{9.290}$$

since, by definition,

$$I + \tilde{\theta} \times \Gamma\left(\tilde{\theta}\right) = \tilde{R}.$$
 (9.291)

The perturbation of the relative rotation vector  $\boldsymbol{\theta}$ ,

$$\delta \overline{\boldsymbol{\theta}} = \delta \boldsymbol{\theta}, \tag{9.292}$$

is used as perturbation of the measure of the straining of the joint.

**Relative Angular Velocity.** The relative angular velocity between the two nodes, in the intermediate reference frame  $\hat{R}$ , is

$$\overline{\omega} = \hat{R}^T \left( \omega_2 - \omega_1 \right), \tag{9.293}$$

which corresponds to that of the attached case, Eq. (9.252), but projected in the material frame by  $\hat{R}^T$  instead of the reference frame of node 1,  $R_{1h}$ . The linearization of the angular velocity of Equation (9.293)

yields

$$\begin{split} \delta \overline{\omega} &= \hat{R}^T \left( (\omega_2 - \omega_1) \times \left( \theta_{1\delta} + R_{1h} \tilde{\theta}_{\delta} \right) + \delta \omega_2 - \delta \omega_1 \right) \\ &= \hat{R}^T \left( \delta \omega_2 - \delta \omega_1 \right) \\ &+ \hat{R}^T \left( \omega_2 - \omega_1 \right) \times R_{1h} \left( I + \tilde{R} \right)^{-1} R_{1h}^T \theta_{2\delta} \\ &+ \hat{R}^T \left( \omega_2 - \omega_1 \right) \times \left( I - R_{1h} \left( I + \tilde{R} \right)^{-1} R_{1h}^T \right) \theta_{1\delta} \\ &= \hat{R}^T \left( \delta \omega_2 - \delta \omega_1 \right) \\ &+ \hat{R}^T \left( \omega_2 - \omega_1 \right) \times \hat{R} \left( I + \tilde{R} \right)^{-1} \hat{R}^T \theta_{2\delta} \\ &+ \hat{R}^T \left( \omega_2 - \omega_1 \right) \times \hat{R} \left( I - \left( I + \tilde{R} \right)^{-1} \right) \hat{R}^T \theta_{1\delta} \\ &= \hat{R}^T \left( \delta \omega_2 - \delta \omega_1 \right) \\ &+ \overline{\omega} \times \left( \left( I + \tilde{R} \right)^{-1} \hat{R}^T \theta_{2\delta} + \left( I - \left( I + \tilde{R} \right)^{-1} \right) \hat{R}^T \theta_{1\delta} \right) \\ &= \hat{R}^T \left( \delta \omega_2 - \delta \omega_1 \right) \\ &+ \overline{\omega} \times \left( \left( I + \tilde{R} \right)^{-1} \hat{R}^T \theta_{2\delta} + \left( I - \left( I + \tilde{R} \right)^{-1} \hat{R}^T \theta_{1\delta} \right) \right) \\ &= \hat{R}^T \left( \delta \omega_2 - \delta \omega_1 \right) \\ &+ \overline{\omega} \times \left( \left( I + \tilde{R} \right)^{-1} \hat{R}^T \theta_{2\delta} + \left( I + \tilde{R}^T \right)^{-1} \hat{R}^T \theta_{1\delta} \right) \\ &= \hat{R}^T \left( \delta \omega_2 - \delta \omega_1 + \left( \omega_2 - \omega_1 \right) \times \left( \hat{I} \theta_{2\delta} + \hat{I}^T \theta_{1\delta} \right) \right) \end{split}$$
(9.294)

since

$$\tilde{R}\left(I+\tilde{R}\right)\tilde{R}^{T} = \left(I+\tilde{R}\right) \tag{9.295}$$

and thus

$$(\mathbf{I} + \tilde{\mathbf{R}})^{-1} = \tilde{\mathbf{R}}^{-T} (\mathbf{I} + \tilde{\mathbf{R}})^{-1} \tilde{\mathbf{R}}^{-1}$$

$$= \tilde{\mathbf{R}} (\mathbf{I} + \tilde{\mathbf{R}})^{-1} \tilde{\mathbf{R}}^{T}, \qquad (9.296)$$

where Equation (9.276) has been used.

Intermediate Angular Velocity. Consider now

$$\hat{\boldsymbol{\omega}} \times = \hat{\boldsymbol{R}} \hat{\boldsymbol{R}}^{T} 
= \boldsymbol{\omega}_{1} \times + \boldsymbol{R}_{1h} \tilde{\boldsymbol{\omega}} \times \boldsymbol{R}_{1h}^{T} 
= \boldsymbol{\omega}_{2} \times - \hat{\boldsymbol{R}} \tilde{\boldsymbol{\omega}} \times \hat{\boldsymbol{R}}^{T},$$
(9.297)

where  $\tilde{\omega}$  is the angular velocity associated to the differentiation of matrix  $\tilde{R}$  with respect to time:

$$\tilde{\boldsymbol{\omega}} = \tilde{\boldsymbol{R}}\tilde{\boldsymbol{R}}^T. \tag{9.298}$$

A relationship between that derivative and the remaining angular velocities results from

$$\omega \times = \frac{\mathrm{d}}{\mathrm{d}t} \left( \tilde{R} \tilde{R} \right) \left( \tilde{R} \tilde{R} \right)^{T}$$

$$= \tilde{\omega} \times + \tilde{R} \tilde{\omega} \times \tilde{R}^{T}, \tag{9.299}$$

SO

$$\omega = \left(I + \tilde{R}\right)\tilde{\omega};\tag{9.300}$$

as a consequence,

$$\tilde{\boldsymbol{\omega}} = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)^{-1} \boldsymbol{R}_{1h}^{T} \left(\boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1}\right). \tag{9.301}$$

The absolute velocity of the intermediate orientation results in

$$\hat{\boldsymbol{\omega}} = \hat{\boldsymbol{I}}\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1; \tag{9.302}$$

its perturbation becomes

$$\delta \hat{\omega} = \delta \left( \hat{I} \omega_{2} + \hat{I}^{T} \omega_{1} \right) 
= \hat{I} \delta \omega_{2} + \hat{I}^{T} \delta \omega_{1} 
+ \begin{pmatrix} \left( \hat{I} \omega_{2} \times + \hat{I}^{T} \omega_{1} \times \right) \hat{I} \\ - \left( \hat{I} \omega_{2} + \hat{I}^{T} \omega_{1} \right) \times \hat{I} \\ + \hat{I} \left( \hat{I}^{T} \left( \omega_{2} - \omega_{1} \right) \right) \times \hat{I}^{T} \end{pmatrix} \theta_{2\delta} 
+ \hat{I} \left( \hat{I} \omega_{2} \times + \hat{I}^{T} \omega_{1} \times \right) \hat{I}^{T} \\ + \begin{pmatrix} \left( \hat{I} \omega_{2} \times + \hat{I}^{T} \omega_{1} \times \right) \hat{I}^{T} \\ - \left( \hat{I} \omega_{2} + \hat{I}^{T} \omega_{1} \right) \times \hat{I}^{T} \\ - \hat{I} \left( \hat{I}^{T} \left( \omega_{2} - \omega_{1} \right) \right) \times \hat{I}^{T} \end{pmatrix} \theta_{1\delta} 
= \hat{I} \delta \omega_{2} + \hat{I}^{T} \delta \omega_{1} + \hat{I}_{2} \theta_{2\delta} + \hat{I}_{1} \theta_{1\delta} 
\stackrel{\text{uu}}{=} \hat{I} \delta \dot{g}_{2} + \hat{I}^{T} \delta \dot{g}_{1} + \left( \hat{I}_{2} - \hat{I} \omega_{2} \times \right) \delta g_{2} + \left( \hat{I}_{1} - \hat{I}^{T} \omega_{1} \times \right) \delta g_{1}$$
(9.303)

**Equilibrium Equations.** The nodal moment results from the VWP, considering the perturbation of the relative orientation  $\overline{\theta}_{\delta}$ ,

$$\delta \mathcal{L} = \overline{\boldsymbol{\theta}}_{\delta}^{T} \tilde{\boldsymbol{M}}$$

$$= (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta})^{T} \hat{\boldsymbol{R}} \tilde{\boldsymbol{M}}, \tag{9.304}$$

which corresponds to

$$M_{i} = (-1)^{i} \hat{R} \tilde{M} \left( \overline{\theta}, \overline{\omega} \right). \tag{9.305}$$

It depends on the relative rotation vector  $\overline{\boldsymbol{\theta}} = \tilde{\boldsymbol{R}}^T \boldsymbol{\theta} = \boldsymbol{\theta}$ , and on the relative angular velocity  $\overline{\boldsymbol{\omega}}$ , illustrated by Equation (9.293), expressed in the intermediate reference frame.

**Equilibrium Perturbation.** The perturbation of the moment then yields

$$\delta \mathbf{M}_{i} = (-1)^{i} \hat{\mathbf{R}} \left( \tilde{\mathbf{M}}_{/\theta} \delta \overline{\boldsymbol{\theta}} + \tilde{\mathbf{M}}_{/\omega} \delta \overline{\boldsymbol{\omega}} \right)$$

$$- \mathbf{M}_{i} \times \hat{\mathbf{R}} \left( \mathbf{I} + \tilde{\mathbf{R}} \right)^{-1} \hat{\mathbf{R}}^{T} \boldsymbol{\theta}_{2\delta}$$

$$- \mathbf{M}_{i} \times \hat{\mathbf{R}} \left( \mathbf{I} + \tilde{\mathbf{R}}^{T} \right)^{-1} \hat{\mathbf{R}}^{T} \boldsymbol{\theta}_{1\delta}$$

$$= (-1)^{i} \hat{\mathbf{R}} \left( \tilde{\mathbf{M}}_{/\theta} \delta \overline{\boldsymbol{\theta}} + \tilde{\mathbf{M}}_{/\omega} \delta \overline{\boldsymbol{\omega}} \right) - \mathbf{M}_{i} \times \left( \hat{\mathbf{I}} \boldsymbol{\theta}_{2\delta} + \hat{\mathbf{I}}^{T} \boldsymbol{\theta}_{1\delta} \right). \tag{9.306}$$

The complete linearized problem is

$$\begin{bmatrix}
M_{/\omega} & -M_{/\omega} \\
-M_{/\omega} & M_{/\omega}
\end{bmatrix} \begin{cases}
\delta\omega_{1} \\
\delta\omega_{2}
\end{cases}$$

$$+ \begin{bmatrix}
-M_{/\omega} (\omega_{2} - \omega_{1}) \times \hat{\mathbf{I}}^{T} & -M_{/\omega} (\omega_{2} - \omega_{1}) \times \hat{\mathbf{I}} \\
M_{/\omega} (\omega_{2} - \omega_{1}) \times \hat{\mathbf{I}}^{T} & M_{/\omega} (\omega_{2} - \omega_{1}) \times \hat{\mathbf{I}}
\end{bmatrix} \begin{cases}
\theta_{1\delta} \\
\theta_{2\delta}
\end{cases}$$

$$+ \begin{bmatrix}
M_{/\theta} & -M_{/\theta} \\
-M_{/\theta} & M_{/\theta}
\end{bmatrix} \begin{cases}
\theta_{1\delta} \\
\theta_{2\delta}
\end{cases}$$

$$+ \begin{bmatrix}
M \times \hat{\mathbf{I}}^{T} & M \times \hat{\mathbf{I}} \\
-M \times \hat{\mathbf{I}}^{T} & -M \times \hat{\mathbf{I}}
\end{bmatrix} \begin{cases}
\theta_{1\delta} \\
\theta_{2\delta}
\end{cases}$$
(9.307)

where

$$M_{\theta} = \hat{R}\tilde{M}_{\theta}\Gamma(\theta)^{-1}R_{1b}^{T} \tag{9.308a}$$

$$M_{/\omega} = \hat{R}\tilde{M}_{/\omega}\hat{R}^T. \tag{9.308b}$$

Accounting for the simplifications of the updated-updated approach, it becomes

$$\begin{bmatrix}
M_{/\omega} & -M_{/\omega} \\
-M_{/\omega} & M_{/\omega}
\end{bmatrix} \left\{ \begin{array}{c}
\delta \dot{g}_{1} \\
\delta \dot{g}_{2}
\end{array} \right\}$$

$$+ \begin{bmatrix}
-M_{/\omega} \left(\omega_{2} \times \hat{I}^{T} + \omega_{1} \times \hat{I}\right) & M_{/\omega} \left(\omega_{2} \times \hat{I}^{T} + \omega_{1} \times \hat{I}\right) \\
M_{/\omega} \left(\omega_{2} \times \hat{I}^{T} + \omega_{1} \times \hat{I}\right) & -M_{/\omega} \left(\omega_{2} \times \hat{I}^{T} + \omega_{1} \times \hat{I}\right)
\end{bmatrix} \left\{ \begin{array}{c}
\delta g_{1} \\
\delta g_{2}
\end{array} \right\}$$

$$+ \begin{bmatrix}
M_{/\theta} & -M_{/\theta} \\
-M_{/\theta} & M_{/\theta}
\end{bmatrix} \left\{ \begin{array}{c}
\delta g_{1} \\
\delta g_{2}
\end{array} \right\}$$

$$+ \begin{bmatrix}
M \times \hat{I}^{T} & M \times \hat{I} \\
-M \times \hat{I}^{T} & -M \times \hat{I}
\end{bmatrix} \left\{ \begin{array}{c}
\delta g_{1} \\
\delta g_{2}
\end{array} \right\} \stackrel{\text{uu}}{=} \left\{ \begin{array}{c}
M \\
-M
\end{array} \right\} (9.309)$$

#### Note on attached vs. invariant deformable hinge

The moment applied by the attached formulation to node 1, in the global reference frame, is

$$M_a = R_{1h}\tilde{M}_a\left(\theta\right),\tag{9.310}$$

while the moment applied by the invariant formulation to node 1, in the global reference frame, is

$$M_{i} = \hat{R}\tilde{M}_{i}(\theta)$$

$$= R_{1h}\tilde{R}\tilde{M}_{i}(\tilde{R}^{T}\theta), \qquad (9.311)$$

since  $\tilde{R}^T \theta = \theta$ . This means that whatever formula is used for the constitutive law, in the invariant case, it is equivalent to using an attached formula with a constitutive law re-oriented by  $\tilde{R}$ ,

$$\tilde{M}_{a}\left(\boldsymbol{\theta}\right) = \tilde{R}\tilde{M}_{i}\left(\tilde{R}^{T}\boldsymbol{\theta}\right);\tag{9.312}$$

similar considerations apply to the viscous portion of the constitutive law. This transformation should be kept in mind when determining the properties of the deformable component. In fact, exchanging the locations where the constitutive law is evaluated implies a transformation of the constitutive matrix; in case a linear elastic constitutive law,

$$\tilde{M}_i = \tilde{K}_i \theta, \tag{9.313}$$

with a constant (symmetric, positive definite)  $\tilde{K}_i$  matrix, is used for the invariant formula, which appears to be a natural solution for simple elastic hinges, it is equivalent to a nonlinear elastic constitutive law when transposing it into the attached formulation. The two formulas are coincident, and independent from  $\theta$ , only in case of an isotropic spring, namely  $\tilde{K}_i = kI$ .

A "natural" solution, for a geometrically and materially symmetrical component, behaves the same when the order of the nodes is swapped. This corresponds to the "invariant" formula for the deformable hinge. However, typical experiments to determine the mechanical behavior of a component would rather consist in straining it while measuring the resulting loads at one or both ends, not in the intermediate location where the constitutive law would be naturally applied. As a consequence, a "natural" procedure for the determination of the constitutive law would consist in determining the  $M_a\left(\theta\right)$  law first; then, assuming the moment can be expressed in the form

$$R_{1b}^{T} M_a(\theta) = \tilde{M}_a(\theta), \tag{9.314}$$

matrix  $\tilde{R}$  would be computed from the measured relative rotation of the extremities of the component,  $\tilde{\theta} = \theta/2$ , and the constitutive law  $\tilde{M}_i(\theta)$  would be computed as

$$\tilde{M}_{i}\left(\tilde{R}^{T}\boldsymbol{\theta}\right) = \tilde{R}^{T}\tilde{M}_{a}\left(\boldsymbol{\theta}\right) \tag{9.315}$$

to yield the invariant constitutive law.

# 9.2.3 Deformable Displacement Joint

The deformable displacement joint applies an internal force to two nodes at a specified point that may be offset from the nodes. The force may depend on the relative position and velocity of the nodes at the point of application through a 3D constitutive law.

The points whose relative displacement represents the measure of the straining can be offset from the nodes by rigid offsets  $\tilde{f}_1$  and  $\tilde{f}_2$ , which are defined in the reference frame of the respective nodes. So the offsets in the global reference frame are

$$f_1 = R_1 \tilde{f}_1 \tag{9.316a}$$

$$f_2 = \mathbf{R}_2 \tilde{f}_2. \tag{9.316b}$$

The constitutive law is expressed in a reference frame that may be rotated from that of the node by rigid rotations  $\tilde{R}_{1h}$  and  $\tilde{R}_{2h}$ . So the orientations of the constitutive law in the global reference frame are

$$R_{1h} = R_1 \tilde{R}_{1h} \tag{9.317a}$$

$$R_{2h} = R_2 \tilde{R}_{2h}.$$
 (9.317b)

As for the deformable hinge, the constitutive law of this joint may be either attached to one node or defined in an intermediate reference frame that accounts for the relative orientation of the two nodes, so that the order in which the nodes are defined becomes irrelevant.

The relative position in the absolute reference frame, d, is

$$d = x_2 + f_2 - x_1 - f_1. (9.318)$$

The relative velocity is

$$\dot{d} = \dot{x}_2 + \omega_2 \times f_2 - \dot{x}_1 - \omega_1 \times f_1. \tag{9.319}$$

#### Attached Deformable Displacement Joint

The "attached" form of the deformable displacement joint is obtained by projecting the relative position d in a reference frame attached to node 1:

$$\tilde{\boldsymbol{d}} = \boldsymbol{R}_{1b}^T \boldsymbol{d} \tag{9.320}$$

The relative velocity is

$$\dot{\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h}^T \left( \dot{\boldsymbol{d}} - \boldsymbol{\omega}_1 \times \boldsymbol{d} \right), \tag{9.321}$$

but it can be replaced by

$$\dot{\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h}^T \left( \dot{\boldsymbol{d}}_1 - \boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \right), \tag{9.322}$$

where

$$d_1 = x_2 + f_2 - x_1 \tag{9.323a}$$

$$\dot{\boldsymbol{d}}_1 = \dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1, \tag{9.323b}$$

since the relative velocity associated with the rotation of  $f_1$ , the offset of the reference point attached to node 1, is zero by definition. The linearization of the distance yields

$$\delta \tilde{\boldsymbol{d}} = \boldsymbol{R}_{1h}^{T} \left( \delta \boldsymbol{d} - \boldsymbol{d} \times \boldsymbol{\theta}_{1\delta} \right)$$

$$= \boldsymbol{R}_{1h}^{T} \left( \delta \boldsymbol{x}_{2} - \boldsymbol{f}_{2} \times \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_{1} + \boldsymbol{f}_{1} \times \boldsymbol{\theta}_{1\delta} \right) + \boldsymbol{R}_{1h}^{T} \boldsymbol{d} \times \boldsymbol{\theta}_{1\delta}$$

$$= \boldsymbol{R}_{1h}^{T} \left( \delta \boldsymbol{x}_{2} - \boldsymbol{f}_{2} \times \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_{1} + (\boldsymbol{x}_{2} + \boldsymbol{f}_{2} - \boldsymbol{x}_{1}) \times \boldsymbol{\theta}_{\delta} 1 \right)$$

$$= \boldsymbol{R}_{1h}^{T} \left( \delta \boldsymbol{x}_{2} - \boldsymbol{f}_{2} \times \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_{1} + \boldsymbol{d}_{1} \times \boldsymbol{\theta}_{1\delta} \right)$$

$$\stackrel{\text{uu}}{=} \boldsymbol{R}_{1h}^{T} \left( \delta \boldsymbol{x}_{2} - \boldsymbol{f}_{2} \times \delta \boldsymbol{g}_{2} - \delta \boldsymbol{x}_{1} + \boldsymbol{d}_{1} \times \delta \boldsymbol{g}_{1} \right)$$

$$(9.324)$$

while the linearization of the relative velocity yields

$$\delta \dot{\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h}^{T} \left( \delta \dot{\boldsymbol{d}} + \boldsymbol{d} \times \delta \boldsymbol{\omega}_{1} - \boldsymbol{\omega}_{1} \times \delta \boldsymbol{d} + \left( \dot{\boldsymbol{d}} - \boldsymbol{\omega}_{1} \times \boldsymbol{d} \right) \times \boldsymbol{\theta}_{1\delta} \right) 
= \boldsymbol{R}_{1h}^{T} \left( \begin{array}{c} \delta \dot{\boldsymbol{x}}_{2} - \boldsymbol{f}_{2} \times \delta \boldsymbol{\omega}_{2} - \delta \dot{\boldsymbol{x}}_{1} + \boldsymbol{d}_{1} \times \delta \boldsymbol{\omega}_{1} \\ -\boldsymbol{\omega}_{1} \times \delta \boldsymbol{x}_{2} - (\boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1}) \times \boldsymbol{f}_{2} \times \boldsymbol{\theta}_{2\delta} \\ +\boldsymbol{\omega}_{1} \times \delta \boldsymbol{x}_{1} + \left( \dot{\boldsymbol{d}} - \boldsymbol{\omega}_{1} \times \boldsymbol{d} \right) \times \boldsymbol{\theta}_{1\delta} \end{array} \right) 
\stackrel{\text{uu}}{=} \boldsymbol{R}_{1h}^{T} \left( \begin{array}{c} \delta \dot{\boldsymbol{x}}_{2} - \boldsymbol{f}_{2} \times \delta \dot{\boldsymbol{g}}_{2} - \delta \dot{\boldsymbol{x}}_{1} + \boldsymbol{d}_{1} \times \delta \dot{\boldsymbol{g}}_{1} \\ -\boldsymbol{\omega}_{1} \times \delta \boldsymbol{x}_{2} - \left( (\boldsymbol{\omega}_{2} \times \boldsymbol{f}_{2}) \times - \boldsymbol{\omega}_{1} \times \boldsymbol{f}_{2} \times \right) \delta \boldsymbol{g}_{2} \\ +\boldsymbol{\omega}_{1} \times \delta \boldsymbol{x}_{1} + \left( \dot{\boldsymbol{d}}_{1} \times - \boldsymbol{\omega}_{1} \times \boldsymbol{d}_{1} \times \right) \delta \boldsymbol{g}_{1} \end{array} \right)$$

$$(9.325)$$

The nodal forces and moments result from the VWP

$$\delta \mathcal{L} = \delta \tilde{\mathbf{d}}^T \tilde{\mathbf{F}}$$

$$= (\delta \mathbf{x}_2 - \mathbf{f}_2 \times \mathbf{\theta}_{2\delta} - \delta \mathbf{x}_1 + \mathbf{d}_1 \times \mathbf{\theta}_{1\delta})^T \mathbf{R}_{1h} \tilde{\mathbf{F}}, \tag{9.326}$$

which corresponds to

$$\mathbf{F}_{i} = (-1)^{i} \mathbf{R}_{1h} \tilde{\mathbf{F}} \left( \tilde{\mathbf{d}}, \dot{\tilde{\mathbf{d}}} \right)$$

$$(9.327a)$$

$$M_i = d_i \times F_i \tag{9.327b}$$

where  $d_1$  has already been defined, and

$$d_2 = f_2; (9.328)$$

note that

$$\omega_2 \times f_2 = \omega_2 \times d_2$$

$$= \dot{d}_2. \tag{9.329}$$

Their linearization yields

$$\delta \mathbf{F}_{i} = (-1)^{i} \mathbf{R}_{1h} \left( \tilde{\mathbf{F}}_{/\tilde{\mathbf{d}}} \delta \tilde{\mathbf{d}} + \tilde{\mathbf{F}}_{/\tilde{\mathbf{d}}} \delta \dot{\tilde{\mathbf{d}}} \right) - \mathbf{F}_{i} \times \boldsymbol{\theta}_{1\delta}$$

$$(9.330a)$$

$$\delta M_i = d_i \times \delta F_i - F_i \times \delta d_i \tag{9.330b}$$

The complete linearized problem, after applying the updated-updated approximation, is

$$\begin{bmatrix} F_{/\dot{a}}^{\dot{a}} & -F_{/\dot{a}}^{\dot{d}}d_{1} \times & -F_{/\dot{a}}^{\dot{d}} & F_{/\dot{a}}^{\dot{d}}d_{2} \times \\ d_{1} \times F_{/\dot{a}}^{\dot{d}} & -d_{1} \times F_{/\dot{a}}^{\dot{d}}d_{1} \times & -d_{1} \times F_{/\dot{a}}^{\dot{d}} & d_{1} \times F_{/\dot{a}}^{\dot{d}}d_{2} \times \\ -F_{/\dot{a}}^{\dot{d}} & F_{/\dot{a}}^{\dot{d}}d_{1} \times & F_{/\dot{a}}^{\dot{d}} & -F_{/\dot{a}}^{\dot{d}}d_{2} \times \\ -d_{2} \times F_{/\dot{a}}^{\dot{d}} & d_{2} \times F_{/\dot{a}}^{\dot{d}}d_{1} \times & d_{2} \times F_{/\dot{a}}^{\dot{d}} & -d_{2} \times F_{/\dot{a}}^{\dot{d}}d_{2} \times \\ -d_{2} \times F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \\ -d_{1} \times F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \\ F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \\ d_{2} \times F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \end{bmatrix} \delta x_{1} + \begin{bmatrix} -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{1} \times -\omega_{1} \times d_{1} \times \right) \\ -d_{1} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{1} \times -\omega_{1} \times d_{1} \times \right) \\ -d_{1} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{1} \times -\omega_{1} \times d_{1} \times \right) \\ d_{2} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{1} \times -\omega_{1} \times d_{1} \times \right) \end{bmatrix} \delta g_{1} \\ + \begin{bmatrix} F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \\ d_{1} \times F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \\ -F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \\ -F_{/\dot{a}}^{\dot{d}}\omega_{1} \times \end{bmatrix} \delta x_{2} + \begin{bmatrix} F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ d_{1} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \end{bmatrix} \delta g_{2} \\ + \begin{bmatrix} F_{/\dot{a}}^{\dot{d}} & -F_{/\dot{a}}^{\dot{d}}d_{1} \times & -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -G_{2} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \end{bmatrix} \delta g_{2} \\ + \begin{bmatrix} F_{/\dot{a}}^{\dot{d}} & -F_{/\dot{a}}^{\dot{d}}d_{1} \times & -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -G_{2} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \end{bmatrix} \delta g_{2} \\ + \begin{bmatrix} F_{/\dot{a}}^{\dot{d}} & -F_{/\dot{a}}^{\dot{d}}d_{1} \times & -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -G_{2} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \end{bmatrix} \delta g_{2} \\ + \begin{bmatrix} F_{/\dot{a}}^{\dot{d}} & -F_{/\dot{a}}^{\dot{d}}d_{1} \times & -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -G_{2} \times F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \end{bmatrix} \delta g_{2} \\ + \begin{bmatrix} F_{/\dot{a}}^{\dot{d}} & -F_{/\dot{a}}^{\dot{d}}d_{1} \times & -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -F_{/\dot{a}}^{\dot{d}} \left(\dot{d}_{2} \times -\omega_{1} \times d_{2} \times \right) \\ -F_{/\dot{a}}^{\dot$$

where

$$F_{/\dot{\tilde{\boldsymbol{d}}}} = R_{1h}\tilde{F}_{/\dot{\tilde{\boldsymbol{d}}}}R_{1h}^T \tag{9.332a}$$

$$F_{/\tilde{d}} = R_{1h}\tilde{F}_{/\tilde{d}}R_{1h}^T \tag{9.332b}$$

### **Invariant Deformable Displacement Joint**

The invariant form of the deformable displacement joint assumes that the constitutive properties of the component, that explicitly depend only on the relative position of the nodes, is defined in a reference frame that is intermediate between those of node 1 and 2, much like the invariant form of the deformable hinge joint.

The distance between the two reference points, expressed in the global reference frame, is pulled back in the intermediate material reference frame by the transpose of matrix  $\hat{R}$ 

$$\tilde{\boldsymbol{d}} = \hat{\boldsymbol{R}}^T \boldsymbol{d} \tag{9.333}$$

The relative velocity is

$$\dot{\tilde{\boldsymbol{d}}} = \dot{\tilde{\boldsymbol{R}}}^T \boldsymbol{d} + \hat{\boldsymbol{R}}^T \dot{\boldsymbol{d}} 
= \hat{\boldsymbol{R}}^T \left( \dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right);$$
(9.334)

for a discussion of the properties of the entities that appear in Eq. (9.302) see Section 9.2.2. The perturbation of the relative position yields

$$\delta \tilde{\mathbf{d}} = \hat{\mathbf{R}}^T \left( \delta \mathbf{d} + \mathbf{d} \times \hat{\boldsymbol{\theta}}_{\delta} \right) \tag{9.335}$$

where

$$\delta \mathbf{d} = \delta \mathbf{x}_{2} - \mathbf{f}_{2} \times \mathbf{\theta}_{2\delta} - \delta \mathbf{x}_{1} + \mathbf{f}_{1} \times \mathbf{\theta}_{1\delta} 
\stackrel{\text{uu}}{=} \delta \mathbf{x}_{2} - \mathbf{f}_{2} \times \delta \mathbf{g}_{2} - \delta \mathbf{x}_{1} + \mathbf{f}_{1} \times \delta \mathbf{g}_{1} 
\hat{\mathbf{\theta}}_{\delta} = \hat{\mathbf{I}} \mathbf{\theta}_{2\delta} + \hat{\mathbf{I}}^{T} \mathbf{\theta}_{1\delta} 
\stackrel{\text{uu}}{=} \hat{\mathbf{I}} \delta \mathbf{g}_{2} + \hat{\mathbf{I}}^{T} \delta \mathbf{g}_{1},$$
(9.336b)

and thus

$$\delta \tilde{\boldsymbol{d}} = \hat{\boldsymbol{R}}^T \left( \delta \boldsymbol{x}_2 + \left( \boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_1 + \left( \boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \boldsymbol{\theta}_{1\delta} \right)$$

$$\stackrel{\text{uu}}{=} \hat{\boldsymbol{R}}^T \left( \delta \boldsymbol{x}_2 + \left( \boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \delta \boldsymbol{g}_2 - \delta \boldsymbol{x}_1 + \left( \boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \delta \boldsymbol{g}_1 \right). \tag{9.337}$$

The perturbation of the relative velocity yields

$$\delta \dot{\tilde{\boldsymbol{d}}} = \hat{\boldsymbol{R}}^T \left( \delta \dot{\boldsymbol{d}} + \boldsymbol{d} \times \delta \hat{\boldsymbol{\omega}} - \hat{\boldsymbol{\omega}} \times \delta \boldsymbol{d} + \left( \dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{\theta}}_{\delta} \right)$$
(9.338)

where

$$\delta \dot{\boldsymbol{d}} = \delta \dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \times \delta \boldsymbol{\omega}_2 - \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta \dot{\boldsymbol{x}}_1 + \boldsymbol{f}_1 \times \delta \boldsymbol{\omega}_1 + \boldsymbol{\omega}_1 \times \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta}$$

$$\stackrel{\text{uu}}{=} \delta \dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \delta \dot{\boldsymbol{g}}_2 + (\boldsymbol{f}_2 \times \boldsymbol{\omega}_2) \times \delta \boldsymbol{g}_2 - \delta \dot{\boldsymbol{x}}_1 + \boldsymbol{f}_1 \delta \dot{\boldsymbol{g}}_1 - (\boldsymbol{f}_1 \times \boldsymbol{\omega}_1) \times \delta \boldsymbol{g}_1.$$

$$(9.339)$$

The computation of  $\delta \hat{\omega}$  has been illustrated in Section 9.2.2. Thus,

$$\delta \dot{\bar{d}} = \hat{R}^{T} \left( \delta \dot{x}_{2} - f_{2} \times \delta \omega_{2} - \omega_{2} \times f_{2} \times \theta_{2\delta} - \delta \dot{x}_{1} + f_{1} \times \delta \omega_{1} + \omega_{1} \times f_{1} \times \theta_{1\delta} \right) \\
+ d \times \left( \hat{I} \delta \omega_{2} + \hat{I}^{T} \delta \omega_{1} + \hat{I}_{2} \theta_{2\delta} + \hat{I}_{1} \theta_{1\delta} \right) \\
- \dot{\omega} \times \left( \delta x_{2} - f_{2} \times \theta_{2\delta} - \delta x_{1} + f_{1} \times \theta_{1\delta} \right) \\
+ \left( \dot{d} - \dot{\omega} \times d \right) \times \left( \hat{I} \theta_{2\delta} + \hat{I}^{T} \theta_{1\delta} \right) \right) \\
= \hat{R}^{T} \left( \delta \dot{x}_{2} - \delta \dot{x}_{1} + \left( d \times \hat{I} - f_{2} \times \right) \delta \omega_{2} + \left( d \times \hat{I}^{T} + f_{1} \times \right) \delta \omega_{1} \\
- \dot{\omega} \times \delta x_{2} + \dot{\omega} \times \delta x_{1} \\
+ \left( (\dot{\omega} - \omega_{2}) \times f_{2} \times + d \times \hat{I}_{2} + \left( \dot{d} - \dot{\omega} \times d \right) \times \hat{I} \right) \theta_{2\delta} \\
+ \left( - (\dot{\omega} - \omega_{1}) \times f_{1} \times + d \times \hat{I}_{1} + \left( \dot{d} - \dot{\omega} \times d \right) \times \hat{I}^{T} \right) \theta_{1\delta} \right) \\
\stackrel{\text{uu}}{=} \hat{R}^{T} \left( \delta \dot{x}_{2} - \delta \dot{x}_{1} + \left( d \times \hat{I} - f_{2} \times \right) \delta \dot{g}_{2} + \left( d \times \hat{I}^{T} + f_{1} \times \right) \delta \dot{g}_{1} \\
- \dot{\omega} \times \delta x_{2} + \dot{\omega} \times \delta x_{1} \\
+ \left( \hat{I}^{T} (\omega_{1} - \omega_{2}) \right) \times f_{2} \times - \left( d \times \hat{I} - f_{2} \times \right) \omega_{2} \times \\
+ d \times \hat{I}_{2} + \left( \dot{d} - \dot{\omega} \times d \right) \times \hat{I} \right) \delta g_{2} \\
+ \left( \hat{I} (\omega_{1} - \omega_{2}) \right) \times f_{1} \times - \left( d \times \hat{I}^{T} + f_{1} \times \right) \omega_{1} \times \\
+ d \times \hat{I}_{1} + \left( \dot{d} - \dot{\omega} \times d \right) \times \hat{I} \right) \delta g_{1} \right)$$

$$(9.340)$$

The force and the moment result from the VWF

$$\delta \mathcal{L} = \delta \tilde{\boldsymbol{d}}^T \tilde{\boldsymbol{F}}$$

$$= \left(\delta \boldsymbol{d} + \boldsymbol{d} \times \hat{\boldsymbol{\theta}}_{\delta}\right)^T \hat{\boldsymbol{R}} \tilde{\boldsymbol{F}}$$

$$= \left(\delta \boldsymbol{x}_2 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times\right) \boldsymbol{\theta}_{2\delta} - \delta \boldsymbol{x}_1 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times\right) \boldsymbol{\theta}_{1\delta}\right)^T \hat{\boldsymbol{R}} \tilde{\boldsymbol{F}}$$
(9.341)

and, after defining

$$F = \hat{R}\tilde{F}\left(\tilde{d}, \dot{\tilde{d}}\right), \tag{9.342}$$

are

$$\mathbf{F}_1 = -\mathbf{F} \tag{9.343a}$$

$$\boldsymbol{M}_{1} = -\left(\boldsymbol{f}_{1} \times + \hat{\boldsymbol{I}}\boldsymbol{d} \times\right) \boldsymbol{F} \tag{9.343b}$$

$$\mathbf{F}_2 = \mathbf{F} \tag{9.343c}$$

$$\mathbf{M}_2 = \left(\mathbf{f}_2 \times -\hat{\mathbf{I}}^T \mathbf{d} \times\right) \mathbf{F}. \tag{9.343d}$$

Their linearization, after defining

$$\delta \mathbf{F} = \hat{\mathbf{R}} \left( \tilde{\mathbf{F}}_{/\tilde{\mathbf{d}}} \delta \tilde{\mathbf{d}} + \tilde{\mathbf{F}}_{/\tilde{\mathbf{d}}} \delta \dot{\tilde{\mathbf{d}}} \right) - \mathbf{F} \times \hat{\boldsymbol{\theta}}_{\delta}, \tag{9.344}$$

vields

$$\delta \mathbf{F}_1 = -\delta \mathbf{F} \tag{9.345a}$$

$$\delta \mathbf{M}_{1} = \left( \mathbf{f}_{1} \times + \hat{\mathbf{I}} \mathbf{d} \times \right) \delta \mathbf{F} - \delta \mathbf{f}_{1} \times \mathbf{F} - \delta \hat{\mathbf{I}} \mathbf{d} \times \mathbf{F} - \hat{\mathbf{I}} \delta \mathbf{d} \times \mathbf{F}$$
(9.345b)

$$\delta F_2 = \delta F \tag{9.345c}$$

$$\delta \mathbf{M}_{2} = \left(\mathbf{f}_{2} \times -\hat{\mathbf{I}}^{T} \mathbf{d} \times\right) \delta \mathbf{F} + \delta \mathbf{f}_{2} \times \mathbf{F} - \delta \hat{\mathbf{I}}^{T} \mathbf{d} \times \mathbf{F} - \hat{\mathbf{I}}^{T} \delta \mathbf{d} \times \mathbf{F}$$

$$(9.345d)$$

After setting

$$F_{/\tilde{d}} = \hat{R}\tilde{F}_{/\tilde{d}}\hat{R}^T \tag{9.346a}$$

$$F_{,\dot{\bar{d}}} = \hat{R}\tilde{F}_{,\dot{\bar{d}}}\hat{R}^T \tag{9.346b}$$

and

$$\mathbf{A}_1 = \left(\mathbf{f}_1 \times + \hat{\mathbf{I}}\mathbf{d} \times\right) \tag{9.347a}$$

$$\mathbf{A}_2 = \left(\mathbf{f}_2 \times -\hat{\mathbf{I}}^T \mathbf{d} \times\right) \tag{9.347b}$$

$$\boldsymbol{B}_{1} = \left( \left( \hat{\boldsymbol{I}} \left( \boldsymbol{\omega}_{1} - \boldsymbol{\omega}_{2} \right) \right) \times \boldsymbol{f}_{1} \times + \boldsymbol{d} \times \hat{\boldsymbol{I}}_{1} + \left( \dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}}^{T} \right)$$
(9.347c)

$$\boldsymbol{B}_{2} = \left( \left( \hat{\boldsymbol{I}}^{T} \left( \boldsymbol{\omega}_{1} - \boldsymbol{\omega}_{2} \right) \right) \times \boldsymbol{f}_{2} \times + \boldsymbol{d} \times \hat{\boldsymbol{I}}_{2} + \left( \dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}} \right)$$
(9.347d)

the complete linearized problem is

$$\begin{bmatrix} F_{/\dot{a}} & F_{/\dot{a}} A_{1}^{T} & -F_{/\dot{a}} & -F_{/\dot{a}} A_{2}^{T} \\ A_{1}F_{/\dot{a}} & A_{1}F_{/\dot{a}} A_{1}^{T} & -A_{1}F_{/\dot{a}} & -A_{1}F_{/\dot{a}} A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}} A_{1}^{T} & F_{/\dot{a}} & F_{/\dot{a}} A_{2}^{T} \\ -A_{2}F_{/\dot{a}} & -A_{2}F_{/\dot{a}} A_{1}^{T} & F_{/\dot{a}} & F_{/\dot{a}} A_{2}^{T} \\ -A_{2}F_{/\dot{a}} & -A_{2}F_{/\dot{a}} A_{1}^{T} & F_{/\dot{a}} & F_{/\dot{a}} A_{2}^{T} \\ -A_{2}F_{/\dot{a}} & -A_{2}F_{/\dot{a}} A_{1}^{T} & A_{2}F_{/\dot{a}} & A_{2}F_{/\dot{a}} A_{2}^{T} \end{bmatrix} \begin{pmatrix} \delta \dot{x}_{1} \\ \delta \dot{x}_{2} \\ \delta \dot{w}_{2} \end{pmatrix}$$

$$+ \begin{pmatrix} -F_{/\dot{a}} \dot{\omega} \times & -F_{/\dot{a}} B_{1} & F_{/\dot{a}} \dot{\omega} \times & -F_{/\dot{a}} B_{2} \\ -A_{1}F_{/\dot{a}} \dot{\omega} \times & -A_{1}F_{/\dot{a}} B_{1} & A_{1}F_{/\dot{a}} \dot{\omega} \times & -A_{1}F_{/\dot{a}} B_{2} \\ F_{/\dot{a}} \dot{\omega} \times & F_{/\dot{a}} B_{1} & -F_{/\dot{a}} \dot{\omega} \times & F_{/\dot{a}} B_{2} \\ A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{1} & -A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{2} \\ A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{1} & -F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{2} \\ A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{1} & -A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{2} \\ A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{1} & -F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{2} \\ A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{1} & -F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{2} \\ A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} A_{1} & -F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} B_{2} \\ A_{2}F_{/\dot{a}} \dot{\omega} \times & A_{2}F_{/\dot{a}} A_{1}^{T} & -F_{/\dot{a}} & -F_{/\dot{a}} A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}} A_{1}^{T} & -A_{1}F_{/\dot{a}} & -A_{1}F_{/\dot{a}} A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}} A_{1}^{T} & A_{2}F_{/\dot{a}} & A_{2}F_{/\dot{a}} A_{2}^{T} \\ -A_{1}F_{/\dot{a}} A_{2}^{T} & -F_{/\dot{a}} A_{2}^{T} & A_{2}F_{/\dot{a}} A_{2}^{T} \\ -A_{1}F_{/\dot{a}} & -A_{2}F_{/\dot{a}} A_{1}^{T} & A_{2}F_{/\dot{a}} A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}} A_{1}^{T} & A_{2}F_{/\dot{a}} A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}} A_{1}^{T} & A_{2}F_{/\dot{a}$$

When the updated-updated approach is considered, after defining

$$\hat{\boldsymbol{B}}_1 = \boldsymbol{B}_1 + \boldsymbol{A}_1^T \boldsymbol{\omega}_1 \times \tag{9.349a}$$

$$\hat{\boldsymbol{B}}_2 = \boldsymbol{B}_2 - \boldsymbol{A}_2^T \boldsymbol{\omega}_2 \times, \tag{9.349b}$$

one obtains

$$\begin{bmatrix} F_{/\dot{a}} & F_{/\dot{a}}A_{1}^{T} & -F_{/\dot{a}} & -F_{/\dot{a}}A_{2}^{T} \\ A_{1}F_{/\dot{a}} & A_{1}F_{/\dot{a}}A_{1}^{T} & -A_{1}F_{/\dot{a}} & -A_{1}F_{/\dot{a}}A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}}A_{1}^{T} & F_{/\dot{a}} & -A_{1}F_{/\dot{a}}A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}}A_{1}^{T} & F_{/\dot{a}} & F_{/\dot{a}}A_{2}^{T} \\ -A_{2}F_{/\dot{a}} & -A_{2}F_{/\dot{a}}A_{1}^{T} & F_{/\dot{a}} & F_{/\dot{a}}A_{2}^{T} \\ -A_{2}F_{/\dot{a}} & -A_{2}F_{/\dot{a}}A_{1}^{T} & A_{2}F_{/\dot{a}} & A_{2}F_{/\dot{a}}A_{2}^{T} \end{bmatrix} \begin{pmatrix} \delta \dot{x}_{1} \\ \delta \dot{y}_{1} \\ \delta \dot{x}_{2} \\ \delta \dot{y}_{2} \end{pmatrix}$$

$$+ \begin{pmatrix} -F_{/\dot{a}}\dot{\omega} \times & -F_{/\dot{a}}\dot{B}_{1} & F_{/\dot{a}}\dot{\omega} \times & -F_{/\dot{a}}\dot{B}_{2} \\ -A_{1}F_{/\dot{a}}\dot{\omega} \times & -A_{1}F_{/\dot{a}}\dot{B}_{1} & A_{1}F_{/\dot{a}}\dot{\omega} \times & -A_{1}F_{/\dot{a}}\dot{B}_{2} \\ F_{/\dot{a}}\dot{\omega} \times & F_{/\dot{a}}\dot{B}_{1} & -F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{2} \\ A_{2}F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{1} & -A_{2}F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{2} \\ A_{2}F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{1} & -A_{2}F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{2} \\ A_{2}F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{1} & -A_{2}F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{2} \\ A_{2}F_{/\dot{a}}\dot{\omega} \times & A_{2}F_{/\dot{a}}\dot{B}_{1} & -A_{2}F_{/\dot{a}}\dot{\Delta}^{2} & -A_{1}F_{/\dot{a}}A_{2}^{T} \\ -F_{/\dot{a}} & A_{1}F_{/\dot{a}}A_{1}^{T} & -F_{/\dot{a}} & -F_{/\dot{a}}A_{2}^{T} \\ -F_{/\dot{a}} & -F_{/\dot{a}}A_{1}^{T} & -A_{1}F_{/\dot{a}}A_{2}^{T} \\ -A_{2}F_{/\dot{a}} & -A_{2}F_{/\dot{a}}A_{1}^{T} & A_{2}F_{/\dot{a}} & A_{2}F_{/\dot{a}}A_{2}^{T} \end{bmatrix} \begin{pmatrix} \delta x_{1} \\ \delta y_{1} \\ \delta y_{2} \\ \delta y_{2} \end{pmatrix}$$

$$+ \begin{pmatrix} 0 & F \times \dot{I} \\ -\hat{I}F \times & A_{1}F \times \dot{I}^{T} - \dot{I}^{T}F \times f_{1} \times - \dot{I}_{1}(d \times F) \\ 0 & -F \times \dot{I} \\ 0 & -F \times \dot{I} \end{pmatrix} \begin{pmatrix} \delta x_{2} \\ \delta y_{2} \end{pmatrix}$$

$$+ \begin{pmatrix} \delta x_{1} \\ \delta y_{1} \\ \delta y_{2} \\ \delta y_{2} \end{pmatrix} \begin{pmatrix} \delta x_{1} \\ \delta y_{1} \\ \delta y_{2} \\ \delta y_{2} \end{pmatrix}$$

$$+ \begin{pmatrix} 0 & F \times \dot{I} \\ -\hat{I}F \times & -A_{2}F \times \dot{I}^{T} - \dot{I}^{T}F \times f_{1} \times - \dot{I}_{1}(d \times F) \\ 0 & -F \times \dot{I} \end{pmatrix} \begin{pmatrix} \delta x_{1} \\ \delta y_{1} \\ \delta y_{2} \end{pmatrix}$$

$$+ \begin{pmatrix} 0 & F \times \dot{I} \\ -\hat{I}F \times & -A_{2}F \times \dot{I}^{T} + \dot{I}^{T}F \times f_{2} \times - \dot{I}_{2}(d \times F) \\ 0 & -F \times \dot{I} \end{pmatrix} \begin{pmatrix} \delta x_{1} \\ \delta y_{2} \\ \delta y_{2} \end{pmatrix}$$

$$+ \begin{pmatrix} 0 & F \times \dot{I} \\ -\hat{I}F \\ -\hat{I}F \end{pmatrix} \begin{pmatrix} \delta x_{1} \\ \delta y_{1} \\ \delta y_{2} \end{pmatrix} \begin{pmatrix} \delta x_{1} \\ \delta$$

# 9.2.4 Deformable Joint

The deformable joint applies an internal force and an internal moment to two nodes at a specified point that may be offset from the nodes; the force and the moment may depend on the relative position and velocity at the point of application and on the relative rotation vector and angular velocity of the nodes through a 6D constitutive law.

Although it may appear as a combination of the Deformable Hinge and the Deformable Displacement Joint, and despite some commonality of code, it is a bit more general because the internal force and moment may depend on the relative displacement and orientation, i.e. the displacements and the orientations are coupled. However, if a simple linear diagonal constitutive law is used, the same result with a bit less overhead is obtained by using a combination of a deformable hinge and a deformable displacement joint.

The deformable joint equations can be computed by combining those of the deformable hinge (Section 9.2.2) and of the deformable displacement joint (Section 9.2.3), considering that both the force F and the moment M simultaneously depend on the relative displacement,  $\tilde{d}$ , the relative orientation,  $\theta$ , and their time derivatives,  $\dot{\tilde{d}}$  and  $\omega$ .

# **Attached Deformable Joint**

Internal force and moment:

$$\mathbf{F}_{i} = (-1)^{i} \mathbf{R}_{1h} \tilde{\mathbf{F}} \left( \tilde{\mathbf{d}}, \boldsymbol{\theta}, \dot{\tilde{\mathbf{d}}}, \boldsymbol{\omega} \right)$$

$$(9.351a)$$

$$\mathbf{M}_{i} = \mathbf{d}_{i} \times \mathbf{F}_{i} + (-1)^{i} \mathbf{R}_{1h} \tilde{\mathbf{M}} \left( \tilde{\mathbf{d}}, \boldsymbol{\theta}, \dot{\tilde{\mathbf{d}}}, \boldsymbol{\omega} \right). \tag{9.351b}$$

Their linearization, after defining

$$F_{/\tilde{d}} = R_{1h}\tilde{F}_{/\tilde{d}}R_{1h}^T \tag{9.352a}$$

$$\boldsymbol{F}_{/\dot{\bar{\boldsymbol{d}}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}}_{/\dot{\bar{\boldsymbol{d}}}} \boldsymbol{R}_{1h}^T \tag{9.352b}$$

$$\mathbf{F}_{/\boldsymbol{\theta}} = \mathbf{R}_{1h}\tilde{\mathbf{F}}_{/\boldsymbol{\theta}}\Gamma\left(\boldsymbol{\theta}\right)^{-1}\mathbf{R}_{1h}^{T} \tag{9.352c}$$

$$F_{/\omega} = R_{1h} \tilde{F}_{/\omega} R_{1h}^T \tag{9.352d}$$

$$\boldsymbol{M}_{/\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}_{/\tilde{\boldsymbol{d}}} \boldsymbol{R}_{1h}^T \tag{9.352e}$$

$$\boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{R}_{1h}^T \tag{9.352f}$$

$$M_{/\theta} = R_{1h} \tilde{M}_{/\theta} \Gamma \left(\theta\right)^{-1} R_{1h}^{T}$$

$$(9.352g)$$

$$M_{/\omega} = R_{1h} \tilde{M}_{/\omega} R_{1h}^T, \tag{9.352h}$$

yields the viscous contribution to perturbation,

$$\begin{bmatrix} F_{/\dot{a}}^{\dagger} \\ d_1 \times F_{/\dot{a}}^{\dagger} + M_{/\dot{a}} \\ -F_{/\dot{a}}^{\dagger} \\ -d_2 \times F_{/\dot{a}}^{\dagger} - M_{/\dot{a}} \end{bmatrix} \delta \dot{x}_1 + \begin{bmatrix} -F_{/\dot{a}}^{\dagger} d_1 \times -F_{/\omega} \\ -d_1 \times \left( F_{/\dot{a}}^{\dagger} d_1 \times -F_{/\omega} \right) - M_{/\dot{a}}^{\dagger} d_1 \times + M_{/\omega} \\ F_{/\dot{a}}^{\dagger} d_1 \times -F_{/\omega} \end{pmatrix} \delta \dot{g}_1 \\ + \begin{bmatrix} -F_{/\dot{a}}^{\dagger} \\ -d_2 \times F_{/\dot{a}}^{\dagger} - M_{/\dot{a}} \\ F_{/\dot{a}}^{\dagger} - M_{/\dot{a}} \\ F_{/\dot{a}}^{\dagger} \end{bmatrix} \delta \dot{x}_2 + \begin{bmatrix} F_{/\dot{a}}^{\dagger} d_2 \times -F_{/\omega} \\ d_1 \times \left( F_{/\dot{a}}^{\dagger} d_2 \times -F_{/\omega} \right) + M_{/\dot{a}}^{\dagger} d_2 \times -M_{/\omega} \\ -F_{/\dot{a}}^{\dagger} d_2 \times -F_{/\omega} \end{pmatrix} \delta \dot{g}_2 \\ + \begin{bmatrix} -F_{/\dot{a}}^{\dagger} d_2 \times -F_{/\omega} \\ -d_2 \times \left( F_{/\dot{a}}^{\dagger} d_2 \times -F_{/\omega} \right) - M_{/\dot{a}}^{\dagger} d_2 \times +M_{/\omega} \end{bmatrix} \delta \dot{g}_1 \\ + \begin{bmatrix} -F_{/\dot{a}}^{\dagger} d_1 \times -G_{1}^{\dagger} \times -F_{/\omega} \\ -G_2 \times \left( F_{/\dot{a}}^{\dagger} d_2 \times -F_{/\omega} \right) - M_{/\dot{a}}^{\dagger} d_2 \times +M_{/\omega} \end{bmatrix} \delta \dot{g}_1 \\ + \begin{bmatrix} -F_{/\dot{a}}^{\dagger} d_1 \times -G_{1}^{\dagger} \times -F_{/\omega} \\ -G_1 \times F_{/\dot{a}}^{\dagger} + M_{/\dot{a}}^{\dagger} \end{pmatrix} (\dot{d}_1 \times -G_1 \times d_1 \times) - F_{/\omega} \omega_2 \times \\ -\left( -G_1 \times F_{/\dot{a}}^{\dagger} + M_{/\dot{a}}^{\dagger} \right) (\dot{d}_1 \times -G_1 \times d_1 \times) + F_{/\omega} \omega_2 \times \\ -\left( -G_1 \times F_{/\dot{a}}^{\dagger} + M_{/\dot{a}}^{\dagger} \right) (\dot{d}_1 \times -G_1 \times d_1 \times) + \left( -G_1 \times F_{/\omega} + M_{/\omega} \right) \omega_2 \times \\ F_{/\dot{a}}^{\dagger} (\dot{d}_1 \times -G_1 \times d_1 \times) + \left( -G_2 \times F_{/\omega} + M_{/\omega} \right) \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_1 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -\left( -G_2 \times F_{/\dot{a}}^{\dagger} + M_{/\dot{a}}^{\dagger} \right) (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -G_2 \times F_{/\dot{a}}^{\dagger} + M_{/\dot{a}}^{\dagger} ) (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -G_2 \times F_{/\dot{a}}^{\dagger} + M_{/\dot{a}}^{\dagger} ) (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_2 \times -G_1 \times d_2 \times) + F_{/\omega} \omega_2 \times \\ -F_{/\dot{a}}^{\dagger} (\dot{d}_2 \times -G_1 \times d_2 \times) + G_2 \times F_{/\omega} + M_{/\omega} ) \omega_2 \times \end{bmatrix}$$

the elastic contribution to perturbation,

$$\begin{bmatrix}
F_{/\tilde{d}} \\
d_{1} \times F_{/\tilde{d}} + M_{/\tilde{d}} \\
-F_{/\tilde{d}} \\
-d_{2} \times F_{/\tilde{d}} - M_{/\tilde{d}}
\end{bmatrix} \delta x_{1} + \begin{bmatrix}
-F_{/\tilde{d}} d_{1} \times -F_{/\theta} \\
-d_{1} \times \left(F_{/\tilde{d}} d_{1} \times -F_{/\theta}\right) - M_{/\tilde{d}} d_{1} \times + M_{/\theta} \\
F_{/\tilde{d}} d_{1} \times -F_{/\theta} \\
d_{2} \times \left(F_{/\tilde{d}} d_{1} \times -F_{/\theta}\right) + M_{/\tilde{d}} d_{1} \times -M_{/\theta}
\end{bmatrix} \delta g_{1}$$

$$+ \begin{bmatrix}
-F_{/\tilde{d}} \\
-d_{1} \times F_{/\tilde{d}} - M_{/\tilde{d}} \\
F_{/\tilde{d}} \\
d_{2} \times F_{/\tilde{d}} + M_{/\tilde{d}}
\end{bmatrix} \delta x_{2} + \begin{bmatrix}
F_{/\tilde{d}} d_{2} \times -F_{/\theta} \\
d_{1} \times \left(F_{/\tilde{d}} d_{2} \times -F_{/\theta}\right) + M_{/\tilde{d}} d_{2} \times -M_{/\theta} \\
-F_{/\tilde{d}} d_{2} \times +F_{/\theta} \\
-d_{2} \times \left(F_{/\tilde{d}} d_{2} \times -F_{/\theta}\right) - M_{/\tilde{d}} d_{2} \times +M_{/\theta}
\end{bmatrix} \delta g_{2}$$
(9.354)

and a common contribution to perturbation,

$$\begin{bmatrix}
0 & F \times & 0 & 0 \\
-F \times & d_1 \times F \times + M \times & F \times & -F \times d_2 \times \\
0 & -F \times & 0 & 0 \\
0 & -d_2 \times F \times - M \times & 0 & F \times d_2 \times
\end{bmatrix}
\begin{cases}
\delta x_1 \\
\delta g_1 \\
\delta x_2 \\
\delta g_2
\end{cases}
\stackrel{\text{uu}}{=}
\begin{cases}
F \\
d_1 \times F + M \\
-F \\
-d_2 \times F - M
\end{cases}$$
(9.355)

The contribution of Eq. (9.355) is always present. The contribution of Eq. (9.354) is present in the elastic and in the viscoelastic variants of the joint. The contribution of Eq. (9.353) is present in the viscoelastic variants of the joint.

#### **Invariant Deformable Joint**

The force and the moment, after defining

$$F = \hat{R}\tilde{F}\left(\tilde{d}, \dot{\tilde{d}}, \theta, \overline{\omega}\right) \tag{9.356a}$$

$$M = \hat{R}\tilde{M}\left(\tilde{d}, \dot{\tilde{d}}, \theta, \overline{\omega}\right), \tag{9.356b}$$

are

$$\mathbf{F}_1 = -\mathbf{F} \tag{9.357a}$$

$$M_1 = -\left(f_1 \times + \hat{I}d \times\right) F - M \tag{9.357b}$$

$$F_2 = F \tag{9.357c}$$

$$M_2 = \left( \mathbf{f}_2 \times - \hat{\mathbf{I}}^T \mathbf{d} \times \right) \mathbf{F} + \mathbf{M}.$$
 (9.357d)

Their linearization, after defining

$$\boldsymbol{F}_{/\tilde{d}} = \hat{\boldsymbol{R}} \tilde{\boldsymbol{F}}_{/\tilde{d}} \hat{\boldsymbol{R}}^T \tag{9.358a}$$

$$\boldsymbol{F}_{/\dot{\hat{\boldsymbol{d}}}} = \hat{\boldsymbol{R}} \tilde{\boldsymbol{F}}_{/\dot{\hat{\boldsymbol{d}}}} \hat{\boldsymbol{R}}^T \tag{9.358b}$$

$$\mathbf{F}_{/\theta} = \hat{\mathbf{R}}\tilde{\mathbf{F}}_{/\theta}\Gamma(\theta)^{-1}\mathbf{R}_{1h}^{T}$$
(9.358c)

$$F_{/\omega} = \hat{R}\tilde{F}_{/\omega}\hat{R}^T \tag{9.358d}$$

$$M_{/\tilde{d}} = \hat{R}\tilde{M}_{/\tilde{d}}\hat{R}^T \tag{9.358e}$$

$$\boldsymbol{M}_{/\dot{\hat{\boldsymbol{d}}}} = \hat{\boldsymbol{R}} \hat{\boldsymbol{M}}_{/\dot{\hat{\boldsymbol{d}}}} \hat{\boldsymbol{R}}^T \tag{9.358f}$$

$$M_{\theta} = \hat{R}\tilde{M}_{\theta}\Gamma(\theta)^{-1}R_{1h}^{T}$$
(9.358g)

$$M_{/\omega} = \hat{R}\tilde{M}_{/\omega}\hat{R}^T, \tag{9.358h}$$

and exploiting the definitions of Eqs (9.347) and

$$C_1 = (\omega_2 - \omega_1) \times \hat{I}^T \tag{9.359a}$$

$$C_2 = (\omega_2 - \omega_1) \times \hat{I}, \tag{9.359b}$$

yields

$$\begin{bmatrix} F_{/\dot{a}} & F_{/\dot{a}}A_1^T + F_{/\omega} \\ A_1F_{/\dot{a}} & A_1 \left( F_{/\dot{a}}A_1^T + F_{/\omega} \right) + M_{/\dot{a}}A_1^T + M_{/\omega} \\ -F_{/\dot{a}} & -F_{/\dot{a}}A_1^T - F_{/\omega} - M_{/\dot{a}}A_1^T - M_{/\omega} \end{bmatrix} \begin{cases} \delta \dot{x}_1 \\ \delta \omega_1 \end{cases} \\ -A_2F_{/\dot{a}} & -A_2 \left( F_{/\dot{a}}A_1^T + F_{/\omega} \right) - M_{/\dot{a}}A_1^T - M_{/\omega} \end{bmatrix} \\ + \begin{bmatrix} -F_{/\dot{a}} & -F_{/\dot{a}}A_1^T - F_{/\omega} \\ -A_1F_{/\dot{a}} & -A_1 \left( F_{/\dot{a}}A_2^T + F_{/\omega} \right) - M_{/\dot{a}}A_2^T - M_{/\omega} \\ F_{/\dot{a}} & F_{/\dot{a}}A_2^T + F_{/\omega} - M_{/\dot{a}}A_2^T + M_{/\omega} \end{bmatrix} \\ + \begin{bmatrix} -F_{/\dot{a}} & -A_1 \left( F_{/\dot{a}}A_2^T + F_{/\omega} \right) - M_{/\dot{a}}A_2^T + M_{/\omega} \\ A_2F_{/\dot{a}} & A_2 \left( F_{/\dot{a}}A_2^T + F_{/\omega} \right) + M_{/\dot{a}}A_1^T + M_{/\omega} \end{bmatrix} \\ + \begin{bmatrix} -F_{/\dot{a}} & -F_{/\dot{a}}B_1 - F_{/\omega}C_1 \\ -A_1F_{/\dot{a}}\omega \times - -A_1 \left( F_{/\dot{a}}B_1 + F_{/\omega}C_1 \right) - M_{/\dot{a}}B_1 - M_{/\omega}C_1 \\ F_{/\dot{a}}\dot{\omega} \times - A_2 \left( F_{/\dot{a}}B_1 + F_{/\omega}C_1 \right) - M_{/\dot{a}}B_1 - M_{/\omega}C_1 \end{bmatrix} \\ + \begin{bmatrix} A_1F_{/\dot{a}}\dot{\omega} \times - A_2 \left( F_{/\dot{a}}B_1 + F_{/\omega}C_1 \right) - M_{/\dot{a}}B_2 - M_{/\omega}C_2 \\ A_2F_{/\dot{a}}\dot{\omega} \times - A_2 \left( F_{/\dot{a}}B_1 + F_{/\omega}C_2 \right) - M_{/\dot{a}}B_2 - M_{/\omega}C_2 \\ -F_{/\dot{a}}\dot{\omega} \times - A_1 \left( F_{/\dot{a}}B_2 + F_{/\omega}C_2 - M_{/\dot{a}}B_2 + M_{/\omega}C_2 \right) \end{bmatrix} \\ + \begin{bmatrix} F_{/\dot{a}} & F_{/\dot{a}}\dot{\omega} \times - A_1 \left( F_{/\dot{a}}B_2 + F_{/\omega}C_2 \right) - M_{/\dot{a}}B_2 + M_{/\omega}C_2 \\ -F_{/\dot{a}}\dot{\omega} \times - A_2 \left( F_{/\dot{a}}A_1^T + F_{/\phi} \right) + M_{/\dot{a}}A_1^T + M_{/\phi} \end{bmatrix} \\ + \begin{bmatrix} F_{/\dot{a}} & A_1 \left( F_{/\dot{a}}A_1^T + F_{/\phi} \right) + M_{/\dot{a}}A_1^T + M_{/\phi} \\ -F_{/\dot{a}} & -F_{/\dot{a}}A_1^T + F_{/\phi} - M_{/\dot{a}}A_1^T + M_{/\phi} \end{bmatrix} \\ + \begin{bmatrix} F_{/\dot{a}} & A_1 \left( F_{/\dot{a}}A_1^T + F_{/\phi} \right) - M_{/\dot{a}}A_1^T - M_{/\phi} \\ F_{/\dot{a}} & -F_{/\dot{a}}A_1^T + F_{/\phi} - M_{/\dot{a}}A_1^T + M_{/\phi} \end{bmatrix} \\ + \begin{bmatrix} -F_{/\dot{a}} & -F_{/\dot{a}}A_1^T + F_{/\phi} - M_{/\dot{a}}A_1^T + M_{/\phi} \\ -F_{/\dot{a}} & -F_{/\dot{a}}A_1^T + F_{/\phi} - M_{/\dot{a}}A_1^T + M_{/\phi} \end{bmatrix} \begin{cases} \delta x_1 \\ \delta x_2 \\ \theta_{2\dot{a}} \end{cases} \\ + \begin{bmatrix} -F_{/\dot{a}} & -A_1 \left( F_{/\dot{a}}A_1^T + F_{/\phi} \right) + M_{/\dot{a}}A_1^T + M_{/\phi} \\ -F_{/\dot{a}} & -A_1 \left( F_{/\dot{a}}A_1^T + F_{/\phi} \right) + M_{/\dot{a}}A_1^T + M_{/\phi} \end{bmatrix} \end{cases} \begin{cases} \delta x_2 \\ \theta_{2\dot{a}} \end{cases} \\ + \begin{bmatrix} 0 & -F_{/\dot{a}} & -A_1 \left( F_{/\dot{a}}A_1^T + F_{/\phi} \right) + M_{/\dot{a}}A_1^T + M_{/\phi} \\ -F_{/\dot{a}} & -A_2 \left( F_{/\dot{a}}A$$

The updated-updated form is

$$\begin{bmatrix} F_{/\hat{a}} & F_{/\hat{a}}A_1^T + F_{/\omega} \\ A_1F_{/\hat{a}} & A_1 \left( F_{/\hat{a}}A_1^T + F_{/\omega} \right) + M_{/\hat{a}}A_1^T + M_{/\omega} \\ -F_{/\hat{a}} & -F_{/\hat{a}}A_1^T - F_{/\omega} \\ -F_{/\hat{a}}A_1^T - F_{/\omega} & -F_{/\hat{a}}A_1^T - M_{/\omega} \end{bmatrix} \begin{cases} \delta \dot{x}_1 \\ \delta \dot{y}_1 \end{cases} \\ -A_2F_{/\hat{a}} & -A_2 \left( F_{/\hat{a}}A_1^T + F_{/\omega} \right) - M_{/\hat{a}}A_1^T - M_{/\omega} \\ -A_1F_{/\hat{a}} & -A_1 \left( F_{/\hat{a}}A_2^T + F_{/\omega} \right) - M_{/\hat{a}}A_2^T - M_{/\omega} \\ -A_1F_{/\hat{a}} & A_2 \left( F_{/\hat{a}}A_2^T + F_{/\omega} \right) - M_{/\hat{a}}A_2^T - M_{/\omega} \\ A_2F_{/\hat{a}} & A_2 \left( F_{/\hat{a}}A_2^T + F_{/\omega} \right) + M_{/\hat{a}}A_2^T + M_{/\omega} \end{bmatrix} \end{cases} \begin{cases} \delta \dot{x}_2 \\ \delta \dot{y}_2 \end{cases} \\ + \begin{cases} -F_{/\hat{a}}\dot{\omega} \times & -F_{/\hat{a}}\dot{B}_1 + F_{/\omega}\dot{C}_1 \\ -A_1F_{/\hat{a}}\dot{\omega} \times & -A_1 \left( F_{/\hat{a}}\dot{B}_1 + F_{/\omega}\dot{C}_1 \right) - M_{/\hat{a}}\dot{B}_1 - M_{/\omega}\dot{C}_1 \\ F_{/\hat{a}}\dot{\omega} \times & A_2 \left( F_{/\hat{a}}\dot{B}_1 + F_{/\omega}\dot{C}_1 \right) - M_{/\hat{a}}\dot{B}_1 + M_{/\omega}\dot{C}_1 \end{cases} \\ + \begin{cases} F_{/\hat{a}}\dot{\omega} \times & -A_1 \left( F_{/\hat{a}}\dot{B}_1 + F_{/\omega}\dot{C}_1 \right) - M_{/\hat{a}}\dot{B}_1 + M_{/\omega}\dot{C}_1 \\ A_2F_{/\hat{a}}\dot{\omega} \times & A_2 \left( F_{/\hat{a}}\dot{B}_1 + F_{/\omega}\dot{C}_1 \right) - M_{/\hat{a}}\dot{B}_2 - M_{/\omega}\dot{C}_2 \\ A_1F_{/\hat{a}}\dot{\omega} \times & -A_2 \left( F_{/\hat{a}}\dot{B}_2 + F_{/\omega}\dot{C}_2 \right) - M_{/\hat{a}}\dot{B}_2 - M_{/\omega}\dot{C}_2 \\ -F_{/\hat{a}}\dot{\omega} \times & A_2 \left( F_{/\hat{a}}\dot{B}_2 + F_{/\omega}\dot{C}_2 \right) - M_{/\hat{a}}\dot{B}_2 - M_{/\omega}\dot{C}_2 \end{cases} \end{cases}$$

$$+ \begin{cases} \frac{\delta x_1}{A_1F_{/\hat{a}}}\dot{\omega} \times & A_2 \left( F_{/\hat{a}}\dot{B}_2 + F_{/\omega}\dot{C}_2 \right) - M_{/\hat{a}}\dot{B}_2 - M_{/\omega}\dot{C}_2 \\ -F_{/\hat{a}}\dot{\omega} \times & A_2 \left( F_{/\hat{a}}\dot{B}_2 + F_{/\omega}\dot{C}_2 \right) - M_{/\hat{a}}\dot{A}_1^T - M_{/\omega}} \dot{C}_2 \end{cases} \end{cases} \end{cases} \begin{cases} \frac{\delta x_2}{\delta y_2} \right\}$$

$$+ \begin{cases} F_{/\hat{a}}\dot{\alpha} \times & A_1 \left( F_{/\hat{a}}\dot{A}_1^T + F_{/\hat{a}} \right) + M_{/\hat{a}}\dot{A}_1^T + M_{/\omega} \dot{C}_2 \end{cases} \end{cases} \begin{cases} \frac{\delta x_2}{\delta y_2} \right\}$$

$$+ \begin{cases} F_{/\hat{a}}\dot{\alpha} \times & A_2 \left( F_{/\hat{a}}\dot{A}_1^T + F_{/\hat{a}} \right) - M_{/\hat{a}}\dot{A}_1^T - M_{/\omega} \dot{A}_1^T - M_{/\omega} \dot{A}_2^T - M_{/\omega} \dot{A$$

with

$$\hat{\boldsymbol{C}}_1 = \boldsymbol{C}_1 + \boldsymbol{\omega}_1 \times \tag{9.362a}$$

$$\hat{C}_2 = C_2 - \omega_2 \times . \tag{9.362b}$$

Note that

$$\hat{C}_1 = (\omega_2 - \omega_1) \times \hat{I}^T + \omega_1 \times \qquad = \omega_1 \times \hat{I} + \omega_2 \times \hat{I}^T \qquad (9.363a)$$

$$\hat{C}_2 = (\omega_2 - \omega_1) \times \hat{I} - \omega_2 \times \qquad = -\omega_1 \times \hat{I} - \omega_2 \times \hat{I}^T, \qquad (9.363b)$$

so  $\hat{C}_2 = -\hat{C}_1$ .

#### 9.2.5 Deformable Axial Joint

Strain:

$$\boldsymbol{\theta} = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1h}^{T}\boldsymbol{R}_{2h}\right)\right) \tag{9.364}$$

$$\epsilon = \tilde{\boldsymbol{e}}_z \cdot \boldsymbol{\theta} \tag{9.365}$$

Strain rate:

$$\dot{\epsilon} = \tilde{e}_z \cdot R_{1h}^T (\omega_2 - \omega_1) \tag{9.366}$$

Virtual perturbation/linearization of strain:

$$\delta \epsilon = \tilde{\boldsymbol{e}}_z \cdot \boldsymbol{R}_{1h}^T \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right) = \boldsymbol{e}_z^T \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right) \tag{9.367}$$

Linearization of strain rate:

$$\delta \dot{\epsilon} = \tilde{e}_z \cdot \mathbf{R}_{1h}^T \left( (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \boldsymbol{\theta}_{1\delta} + \delta \boldsymbol{\omega}_2 - \delta \boldsymbol{\omega}_1 \right) = \mathbf{e}_z^T \left( (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \boldsymbol{\theta}_{1\delta} + \delta \boldsymbol{\omega}_2 - \delta \boldsymbol{\omega}_1 \right)$$
(9.368)

Virtual work:

$$\delta \mathcal{L} = \delta \epsilon m \left( \epsilon, \dot{\epsilon} \right) = \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right)^T \boldsymbol{R}_{1h} \tilde{\boldsymbol{e}}_z m = \left( \boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta} \right)^T \boldsymbol{e}_z m \tag{9.369}$$

Loads (residual contribution):

$$\mathbf{m}_1 = \mathbf{e}_z m \tag{9.370a}$$

$$\mathbf{m}_2 = -\mathbf{e}_z m \tag{9.370b}$$

Linearization:

$$\delta(\mathbf{e}_z m) = -m\mathbf{e}_z \times \mathbf{\theta}_{1\delta} + \mathbf{e}_z \left( m_{/\epsilon} \delta \epsilon + m_{/\dot{\epsilon}} \delta \dot{\epsilon} \right)$$
(9.371)

Jacobian matrix contributions:

$$m\begin{bmatrix} e_{z} \times \\ -e_{z} \times \end{bmatrix} \boldsymbol{\theta}_{1\delta} + m_{/\epsilon} \begin{bmatrix} e_{z} e_{z}^{T} & -e_{z} e_{z}^{T} \\ -e_{z} e_{z}^{T} & e_{z} e_{z}^{T} \end{bmatrix} \begin{Bmatrix} \boldsymbol{\theta}_{1\delta} \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} + m_{/\dot{\epsilon}} \begin{pmatrix} \begin{bmatrix} e_{z} e_{z}^{T} & -e_{z} e_{z}^{T} \\ -e_{z} e_{z}^{T} & e_{z} e_{z}^{T} \end{bmatrix} \begin{Bmatrix} \delta \boldsymbol{\omega}_{1} \\ \delta \boldsymbol{\omega}_{2} \end{Bmatrix} + \begin{bmatrix} -e_{z} e_{z}^{T} (\boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1}) \times \\ e_{z} e_{z}^{T} (\boldsymbol{\omega}_{2} - \boldsymbol{\omega}_{1}) \times \end{bmatrix} \boldsymbol{\theta}_{1\delta} = \begin{Bmatrix} e_{z} \\ -e_{z} \end{Bmatrix} m \quad (9.372)$$

With the updated-updated approximation:

$$m\begin{bmatrix} \mathbf{e}_{z} \times \\ -\mathbf{e}_{z} \times \end{bmatrix} \delta \mathbf{g}_{1} + m_{/\epsilon} \begin{bmatrix} \mathbf{e}_{z} \mathbf{e}_{z}^{T} & -\mathbf{e}_{z} \mathbf{e}_{z}^{T} \\ -\mathbf{e}_{z} \mathbf{e}_{z}^{T} & \mathbf{e}_{z} \mathbf{e}_{z}^{T} \end{bmatrix} \begin{Bmatrix} \delta \mathbf{g}_{1} \\ \delta \mathbf{g}_{2} \end{Bmatrix} + m_{/\epsilon} \begin{pmatrix} \begin{bmatrix} \mathbf{e}_{z} \mathbf{e}_{z}^{T} & -\mathbf{e}_{z} \mathbf{e}_{z}^{T} \\ -\mathbf{e}_{z} \mathbf{e}_{z}^{T} & \mathbf{e}_{z} \mathbf{e}_{z}^{T} \end{bmatrix} \begin{Bmatrix} \delta \dot{\mathbf{g}}_{1} \\ \delta \dot{\mathbf{g}}_{2} \end{Bmatrix} + \begin{bmatrix} \mathbf{e}_{z} \mathbf{e}_{z}^{T} \boldsymbol{\omega}_{2} \times & -\mathbf{e}_{z} \mathbf{e}_{z}^{T} \boldsymbol{\omega}_{2} \times \\ -\mathbf{e}_{z} \mathbf{e}_{z}^{T} \boldsymbol{\omega}_{2} \times \end{bmatrix} \begin{Bmatrix} \delta \mathbf{g}_{1} \\ \delta \mathbf{g}_{2} \end{Bmatrix} \stackrel{\text{uu}}{=} \begin{Bmatrix} \mathbf{e}_{z} \\ -\mathbf{e}_{z} \end{Bmatrix} m$$

$$(9.373)$$

Note:  $\mathbf{e}_z \mathbf{e}_z^T \mathbf{\omega}_2 \times = \mathbf{e}_z (\mathbf{e}_z \times \mathbf{\omega}_2)^T$ .

# 9.3 Viscous Body

This element implements the behavior of a viscous body, namely a force and a moment that depend on the absolute linear and angular velocity of a node, projected in the reference frame of the node. This element allows, for example, to implement the aerodynamics of a flight-mechanics rigid-body model, whose aerodynamic forces and moments depend on the absolute linear and angular velocity, projected in the reference frame of the body, by means of an appropriate constitutive law.

The force and moment are defined as

$$f = RR_h \tilde{f} \tag{9.374a}$$

$$m = RR_h \tilde{m} + o \times f \tag{9.374b}$$

where

$$o = R\tilde{o}, \tag{9.375}$$

$$\tilde{f} = \tilde{f}(\tilde{v}, \tilde{\omega}) \tag{9.376a}$$

$$\tilde{m} = \tilde{m} \left( \tilde{v}, \tilde{\omega} \right) \tag{9.376b}$$

and

$$\tilde{\boldsymbol{v}} = \boldsymbol{R}_h^T \boldsymbol{R}^T \left( \dot{\boldsymbol{x}} + \boldsymbol{\omega} \times \boldsymbol{o} \right) \tag{9.377a}$$

$$\tilde{\boldsymbol{\omega}} = \boldsymbol{R}_h^T \boldsymbol{R}^T \boldsymbol{\omega}. \tag{9.377b}$$

The linearization of the force and moment yields

$$\delta \tilde{\mathbf{f}} = \tilde{\mathbf{f}}_{/\tilde{\mathbf{v}}} \delta \tilde{\mathbf{v}} + \tilde{\mathbf{f}}_{/\tilde{\boldsymbol{\omega}}} \delta \tilde{\boldsymbol{\omega}} \tag{9.378a}$$

$$\delta \tilde{m} = \tilde{m}_{/\tilde{v}} \delta \tilde{v} + \tilde{m}_{/\tilde{\omega}} \delta \tilde{\omega} \tag{9.378b}$$

with

$$\delta \tilde{\boldsymbol{v}} = \boldsymbol{R}_h^T \boldsymbol{R}^T \left( \delta \dot{\boldsymbol{x}} + \delta \boldsymbol{\omega} \times \boldsymbol{o} + \boldsymbol{\omega} \times \boldsymbol{\theta}_{\delta} \times \boldsymbol{o} \right) \qquad \stackrel{\text{uu}}{=} \boldsymbol{R}_h^T \boldsymbol{R}^T \left( \delta \dot{\boldsymbol{x}} - \boldsymbol{o} \times \delta \dot{\boldsymbol{g}} + (\boldsymbol{o} \times \boldsymbol{\omega}) \times \delta \boldsymbol{g} \right) \qquad (9.379a)$$

$$\delta \tilde{\boldsymbol{\omega}} = \boldsymbol{R}_h^T \boldsymbol{R}^T \left( \delta \boldsymbol{\omega} + \boldsymbol{\omega} \times \boldsymbol{\theta}_{\delta} \right) \qquad \qquad \stackrel{\text{uu}}{=} \boldsymbol{R}_h^T \boldsymbol{R}^T \delta \dot{\boldsymbol{g}}$$
 (9.379b)

The linearization of the nodal forces and moments yields

$$\delta \mathbf{f} = \mathbf{\theta}_{\delta} \times \mathbf{f} + \mathbf{R} \mathbf{R}_{h} \delta \tilde{\mathbf{f}} \tag{9.380a}$$

$$\delta m = \theta_{\delta} \times m + RR_{b}\delta \tilde{m} + o \times RR_{b}\delta \tilde{f}, \tag{9.380b}$$

namely

$$\begin{bmatrix}
f_{/\tilde{v}} & f_{/\tilde{v}}o \times \\
m_{/\tilde{v}} + o \times f_{/\tilde{v}} & m_{/\tilde{\omega}} - m_{/\tilde{v}}o \times + o \times (f_{/\tilde{\omega}} - f_{/\tilde{v}}o \times)
\end{bmatrix}
\begin{cases}
\delta \dot{x} \\
\delta \omega
\end{cases}$$

$$+ \begin{bmatrix}
f_{/\tilde{\omega}}\omega \times - f_{/\tilde{v}}\omega \times o \times \\
m_{/\tilde{v}}\omega \times - m_{/\tilde{v}}\omega \times o \times + o \times (f_{/\tilde{\omega}}\omega \times - f_{/\tilde{v}}\omega \times o \times)
\end{bmatrix}
\theta_{\delta}$$

$$+ \begin{bmatrix}
-f \times \\
-m \times
\end{bmatrix}
\theta_{\delta} = \begin{cases}
\delta f \\
\delta m
\end{cases}$$
(9.381)

where

$$f_{/\tilde{\boldsymbol{v}}} = RR_h \tilde{f}_{/\tilde{\boldsymbol{v}}} R_h^T R^T \tag{9.382a}$$

$$f_{/\tilde{\omega}} = RR_h \tilde{f}_{/\tilde{\omega}} R_h^T R^T \tag{9.382b}$$

$$\boldsymbol{m}_{/\tilde{\boldsymbol{v}}} = \boldsymbol{R}\boldsymbol{R}_h \tilde{\boldsymbol{m}}_{/\tilde{\boldsymbol{v}}} \boldsymbol{R}_h^T \boldsymbol{R}^T \tag{9.382c}$$

$$\boldsymbol{m}_{/\tilde{\omega}} = \boldsymbol{R} \boldsymbol{R}_h \tilde{\boldsymbol{m}}_{/\tilde{\omega}} \boldsymbol{R}_h^T \boldsymbol{R}^T \tag{9.382d}$$

The updated-updated approximation yields

$$\begin{bmatrix}
f_{/\tilde{v}} & f_{/\tilde{v}} - f_{/\tilde{v}} \mathbf{o} \times \\
m_{/\tilde{v}} + \mathbf{o} \times f_{/\tilde{v}} & m_{/\tilde{\omega}} - m_{/\tilde{v}} \mathbf{o} \times + \mathbf{o} \times (f_{/\tilde{\omega}} - f_{/\tilde{v}} \mathbf{o} \times)
\end{bmatrix}
\begin{cases}
\delta \dot{x} \\
\delta \dot{g}
\end{cases}$$

$$+ \begin{bmatrix}
f_{/\tilde{v}} (\mathbf{o} \times \boldsymbol{\omega}) \times \\
(m_{/\tilde{v}} + \mathbf{o} \times f_{/\tilde{v}}) (\mathbf{o} \times \boldsymbol{\omega}) \times
\end{bmatrix}
\delta g + \begin{bmatrix}
-f \times \\
-m \times
\end{bmatrix}
\delta g = \begin{cases}
\delta f \\
\delta m
\end{cases}$$
(9.383)

## 9.4 Modal Element

#### 9.4.1 Kinematics

Position of an arbitrary point P

$$x_P = x_0 + f_P + u_P (9.384)$$

where  $x_0$  is the position of the point that describes the global motion of the body,  $f_P$  is the relative position of the point when the body is undeformed, and  $u_P$  is the relative displacement of the point when the body is deformed.

It can be rewritten as

$$\boldsymbol{x}_P = \boldsymbol{x}_0 + \boldsymbol{R}_0 \left( \tilde{\boldsymbol{f}}_P + \tilde{\boldsymbol{u}}_P \right) \tag{9.385}$$

where  $\mathbf{R}_0$  is the global orientation matrix of the body, and the *tilde* ( $\tilde{\cdot}$ ) indicates entities expressed in the reference frame attached to the body.

The deformation of the body is expressed by a linear combination of M displacement (and rotation, for those models that consider them, like beam trusses) shapes

$$\tilde{\boldsymbol{u}}_{P} = \sum_{j=1,M} \boldsymbol{U}_{Pj} q_{j} = \boldsymbol{U}_{P} \boldsymbol{q} \tag{9.386}$$

where  $U_{Pj}$  is the vector containing the components of the j-th displacement shape related to point P, and  $q_j$  is the j-th mode multiplier.

The orientation of the generic point P is

$$R_P = R_0 \tilde{R}_P \tag{9.387}$$

and, assuming a representation of the relative orientation by a linear combination of rotation shapes

$$\tilde{\boldsymbol{\phi}} = \sum_{j=1,M} \boldsymbol{V}_{Pj} q_j = \boldsymbol{V}_P \boldsymbol{q} \tag{9.388}$$

it results in a linearized orientation

$$\mathbf{R}_{P} \cong \mathbf{R}_{0} \left( \mathbf{I} + (\mathbf{V}_{P} \mathbf{q}) \times \right) \tag{9.389}$$

which is no longer orthogonal, because of matrix

$$\tilde{R}_P = I + (V_P q) \times \tag{9.390}$$

which represents a linearized rotation.

The first and second derivatives of position and orientation yield:

$$\dot{\boldsymbol{x}}_{P} = \dot{\boldsymbol{x}}_{0} + \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0} \left( \tilde{\boldsymbol{f}}_{P} + \boldsymbol{U}_{P} \boldsymbol{q} \right) + \boldsymbol{R}_{0} \boldsymbol{U}_{P} \dot{\boldsymbol{q}}$$

$$(9.391a)$$

$$\omega_P = \omega_0 + R_0 V_P \dot{q} \tag{9.391b}$$

$$\ddot{oldsymbol{x}}_P = \ddot{oldsymbol{x}}_0 + \dot{oldsymbol{\omega}}_0 imes oldsymbol{R}_0 \left( ilde{oldsymbol{f}}_P + oldsymbol{U}_P oldsymbol{q} 
ight) + oldsymbol{\omega}_0 imes oldsymbol{\omega}_0 imes oldsymbol{R}_0 \left( ilde{oldsymbol{f}}_P + oldsymbol{U}_P oldsymbol{q} 
ight)$$

$$+2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{U}_P \dot{\boldsymbol{q}} + \boldsymbol{R}_0 \boldsymbol{U}_P \ddot{\boldsymbol{q}} \tag{9.391c}$$

$$\dot{\boldsymbol{\omega}}_P = \dot{\boldsymbol{\omega}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{V}_P \dot{\boldsymbol{q}} + \boldsymbol{R}_0 \boldsymbol{V}_P \ddot{\boldsymbol{q}} \tag{9.391d}$$

The virtual perturbation of the position and orientation of the generic point P are:

$$\delta \boldsymbol{x}_{P} = \delta \boldsymbol{x}_{0} + \delta \boldsymbol{\phi}_{0} \times \boldsymbol{R}_{0} \left( \tilde{\boldsymbol{f}}_{P} + \boldsymbol{U}_{P} \boldsymbol{q} \right) + \boldsymbol{R}_{0} \boldsymbol{U}_{P} \delta \boldsymbol{q}$$

$$(9.392a)$$

$$\delta \phi_P = \delta \phi_0 + R_0 V_P \delta q \tag{9.392b}$$

Without significant losses in generality, from now on it is assumed that the structure of the problem is given in form of lumped inertia parameters in specific points, corresponding to FEM nodes, and that the position of each node corresponds to the center of mass of each lumped mass. A model made of N FEM nodes is considered. The nodal mass of the i-th FEM node is

$$M_i = \begin{bmatrix} m_i I & \mathbf{0} \\ \mathbf{0} & J_i \end{bmatrix} \tag{9.393}$$

There is no strict requirement for matrix  $J_i$  to be diagonal.

The inertia forces and moments acting on each FEM node are:

$$\mathbf{F}_i = -m_i \ddot{\mathbf{x}}_i$$
 (9.394a)

$$C_i = -R_i J_i R_i^T \dot{\omega}_i \tag{9.394b}$$

and the virtual work done by the inertia forces is

$$\delta L = \sum_{i=1,N} \left( \delta \mathbf{x}_i^T \mathbf{F}_i + \delta \boldsymbol{\phi}_i^T \mathbf{C}_i \right) \tag{9.395}$$

which results in

$$\delta L = \left\{ \begin{array}{c} \delta \boldsymbol{x}_{0} \\ \delta \boldsymbol{\phi}_{0} \\ \delta \boldsymbol{q} \end{array} \right\}^{T} \left( \left[ \begin{array}{ccc} \boldsymbol{M}_{xx} & \boldsymbol{M}_{x\phi} & \boldsymbol{M}_{xq} \\ & \boldsymbol{M}_{\phi\phi} & \boldsymbol{M}_{\phi q} \\ \text{sym.} & \boldsymbol{M}_{qq} \end{array} \right] \left\{ \begin{array}{c} \ddot{\boldsymbol{x}}_{0} \\ \dot{\boldsymbol{\omega}}_{0} \\ \ddot{\boldsymbol{q}} \end{array} \right\} + \left\{ \begin{array}{c} \boldsymbol{F}_{x} \\ \boldsymbol{F}_{\phi} \\ \boldsymbol{F}_{q} \end{array} \right\} \right)$$
(9.396)

with

$$M_{xx} = I \sum_{i=1.N} m_i \tag{9.397a}$$

$$\mathbf{M}_{x\phi} = \mathbf{R}_0 \sum_{i=1,N} m_i \left( \tilde{\mathbf{f}}_i + \mathbf{U}_i \mathbf{q} \right) \times^T \mathbf{R}_0^T$$
(9.397b)

$$M_{xq} = R_0 \sum_{i=1}^{N} m_i U_i \tag{9.397c}$$

$$\mathbf{M}_{\phi\phi} = \mathbf{R}_0 \sum_{i=1,N} \left( m_i \left( \tilde{\mathbf{f}}_i + \mathbf{U}_i \mathbf{q} \right) \times \left( \tilde{\mathbf{f}}_i + \mathbf{U}_i \mathbf{q} \right) \times^T + \tilde{\mathbf{R}}_i \mathbf{J}_i \tilde{\mathbf{R}}_i^T \right) \mathbf{R}_0^T$$
(9.397d)

$$\boldsymbol{M}_{\phi q} = \boldsymbol{R}_0 \sum_{i=1,N} \left( m_i \left( \tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) \times \boldsymbol{U}_i + \tilde{\boldsymbol{R}}_i \boldsymbol{J}_i \tilde{\boldsymbol{R}}_i^T \boldsymbol{V}_i \right)$$
(9.397e)

$$M_{qq} = \sum_{i=1}^{N} \left( m_i \mathbf{U}_i^T \mathbf{U}_i + \mathbf{V}_i^T \tilde{\mathbf{R}}_i \mathbf{J}_i \tilde{\mathbf{R}}_i^T \mathbf{V}_i \right)$$

$$(9.397f)$$

$$F_x = \sum_{i=1.N} m_i \left( \omega_0 \times \omega_0 \times R_0 \left( \tilde{f}_i + U_i q \right) + 2\omega_0 \times R_0 U_i \dot{q} \right)$$
(9.397g)

$$\boldsymbol{F}_{\phi} = \sum_{i=1,N} \boldsymbol{R}_{0} \left( m_{i} \left( \tilde{\boldsymbol{f}}_{i} + \boldsymbol{U}_{i} \boldsymbol{q} \right) \times \left( \boldsymbol{\omega}_{0} \times \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0} \left( \tilde{\boldsymbol{f}}_{i} + \boldsymbol{U}_{i} \boldsymbol{q} \right) + 2 \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0} \boldsymbol{U}_{i} \dot{\boldsymbol{q}} \right) \right)$$

$$+\tilde{\mathbf{R}}_{i}\mathbf{J}_{i}\tilde{\mathbf{R}}_{i}^{T}\mathbf{R}_{0}^{T}\boldsymbol{\omega}_{0}\times\mathbf{R}_{0}\mathbf{V}_{i}\dot{\mathbf{q}}$$
(9.397h)

$$\boldsymbol{F}_{q} = \sum_{i=1,N} \left( m_{i} \boldsymbol{U}_{i}^{T} \boldsymbol{R}_{0}^{T} \left( \boldsymbol{\omega}_{0} \times \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0} \left( \tilde{\boldsymbol{f}}_{i} + \boldsymbol{U}_{i} \boldsymbol{q} \right) + 2 \boldsymbol{\omega}_{0} \times \boldsymbol{R}_{0} \boldsymbol{U}_{i} \dot{\boldsymbol{q}} \right) \right)$$

$$+ V_i^T \tilde{R}_i J_i \tilde{R}_i^T R_0^T \omega_0 \times R_0 V_i \dot{q}$$

$$(9.397i)$$

The  $M_{jk}$  terms can be rewritten to highlight contributions of order 0, 1, and higher:

$$M_{xx} = I\left(\sum_{i=1,N} m_i\right)$$

$$M_{x\phi} = R_0 \left(\left(\sum_{i=1,N} m_i \tilde{f}_i\right) + \left(\left(\sum_{i=1,N} m_i U_i\right) q\right)\right) \times^T R_0^T$$

$$(9.398b)$$

$$M_{xq} = R_0 \left(\sum_{i=1,N} m_i U_i\right)$$

$$+ \sum_{i=1,N} \left(m_i \tilde{f}_i \times (U_i q) \times^T + m_i (U_i q) \times \tilde{f}_i \times^T + J_i (V_i q) \times^T + (V_i q) \times J_i\right)$$

$$+ \sum_{i=1,N} \left(m_i (U_i q) \times (U_i q) \times^T + (V_i q) \times J_i (V_i q) \times^T\right) R_0^T$$

$$(9.398d)$$

$$M_{\phi q} = R_0 \left(\sum_{i=1,N} \left(m_i \tilde{f}_i \times U_i + J_i V_i\right) + \sum_{i=1,N} \left(m_i (U_i q) \times U_i + J_i (V_i q) \times^T V_i + (V_i q) \times J_i V_i\right) \right)$$

$$+ \sum_{i=1,N} \left(m_i (U_i q) \times U_i + J_i (V_i q) \times^T V_i + (V_i q) \times J_i V_i\right)$$

$$+ \sum_{i=1,N} \left(w_i (U_i q) \times U_i + J_i (V_i q) \times^T V_i + (V_i q) \times J_i V_i\right)$$

$$+ \sum_{i=1,N} \left(w_i (U_i q) \times U_i + J_i (V_i q) \times^T V_i + (V_i q) \times J_i V_i\right)$$

$$+ \sum_{i=1,N} \left(w_i U_i^T U_i + V_i^T J_i V_i\right)$$

$$(9.398e)$$

$$M_{qq} = \sum_{i=1,N} \left(m_i U_i^T U_i + V_i^T J_i V_i\right)$$

$$+ \sum_{i=1,N} \left( \mathbf{V}_{i}^{T} \mathbf{J}_{i} \left( \mathbf{V}_{i} \mathbf{q} \right) \times^{T} \mathbf{V}_{i} + \mathbf{V}_{i}^{T} \left( \mathbf{V}_{i} \mathbf{q} \right) \times \mathbf{J}_{i} \mathbf{V}_{i} \right)$$

$$+ \sum_{i=1,N} \mathbf{V}_{i}^{T} \left( \mathbf{V}_{i} \mathbf{q} \right) \times \mathbf{J}_{i} \left( \mathbf{V}_{i} \mathbf{q} \right) \times^{T} \mathbf{V}_{i}$$

$$(9.398f)$$

#### 9.4.2 Physics: Orthogonality

Some noteworthy entities appear in the above equations, which may partially simplify under special circumstances.

The overall mass of the body

$$m = \sum_{i=1,N} m_i (9.399)$$

The static (first order) inertia moment

$$S_{x\phi} = \sum_{i=1,N} m_i \tilde{\mathbf{f}}_i \tag{9.400}$$

vanishes if point  $x_0$  is the center of mass of the undeformed body.

Similarly, the static (first order) inertia moment computed with the modal displacement shapes

$$S_{xq} = \sum_{i=1,N} m_i U_i \tag{9.401}$$

vanishes if the mode shapes have been inertially decoupled from the rigid body displacements. In fact, the decoupling of the rigid and the deformable modes is expressed by

$$\sum_{i=1,N} \boldsymbol{x}_r^T m_i \boldsymbol{U}_i =$$

$$\boldsymbol{x}_r^T \sum_{i=1,N} m_i \boldsymbol{U}_i = 0$$

$$(9.402)$$

where  $\boldsymbol{x}_r^T$  describes three independent rigid translations, which, for the arbitrariety of  $\boldsymbol{x}_r$ , implies the above Equation (9.401).

In the same case, also the zero-order terms of the coupling between the rigid body rotations and the modal variables,

$$S_{\phi q} = \sum_{i=1,N} \left( m_i \tilde{\mathbf{f}}_i \times \mathbf{U}_i + \mathbf{J}_i \mathbf{V}_i \right) \tag{9.403}$$

also vanishes. In fact, the decoupling of the rigid and the deformable modes is expressed by

$$\sum_{i=1,N} \left( m_i \boldsymbol{\phi}_r^T \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_i + \boldsymbol{\phi}_r^T \boldsymbol{J}_i \boldsymbol{V}_i \right) =$$

$$\boldsymbol{\phi}_r^T \sum_{i=1,N} \left( m_i \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_i + \boldsymbol{J}_i \boldsymbol{V}_i \right) = 0$$

$$(9.404)$$

where  $\phi_r^T$  describes three independent rigid rotations, and  $\phi_r^T \tilde{f}_i \times$  describes the corresponding displacements, which, for the arbitrariety of  $\phi_r$ , implies the above Equation (9.403).

The second order inertia moment is

$$J = \sum_{i=1}^{N} \left( m_i \tilde{f}_i \times \tilde{f}_i \times^T + J_i \right)$$
(9.405)

It results in a diagonal matrix if the orientation of the body is aligned with the principal inertia axes. The modal mass matrix is

$$\boldsymbol{m} = \sum_{i=1,N} \left( m_i \boldsymbol{U}_i^T \boldsymbol{U}_i + \boldsymbol{V}_i^T \boldsymbol{J}_i \boldsymbol{V}_i \right)$$
(9.406)

It is diagonal if only the normal modes are considered.

#### 9.4.3 Simplifications

The problem, as stated up to now, already contains some simplifications. First of all, those related to the lumped inertia model of a continuum; moreover, those related to the mode superposition to describe the straining of the body which, in the case of the FEM node rotation, yields a non-orthogonal linearized rotation matrix.

Further simplifications are usually accepted in common modeling practice, where some of the higher order terms are simply discarded.

When only the 0-th order coefficients are used in matrices  $M_{uv}$ , the dynamics of the body are written referred to the undeformed shape. This approximation can be quite drastic, but in some cases it may be reasonable, if the reference straining, represented by q, remains very small throughout the simulation. This approximation is also required when the only available data are the global inertia properties (e.g. m, the postion of the center of mass and the inertia matrix J), and the modal mass matrix m.

More refined approximations include higher order terms: for example, the first and second order contributions illustrated before. This corresponds to using finer and finer descriptions of the inertia properties of the system, corresponding to computing the inertia properties in the deformed condition with first and second order accuracy, respectively.

#### 9.4.4 Invariants

The dynamics of the deformed body can be written without any detailed knowledge of the mass distribution, provided some aggregate information can be gathered in so-called *invariants*. They are:

1. Total mass (scalar)

$$\mathcal{I}_1 = \sum_{i=1}^{N} m_i \tag{9.407}$$

where  $m_i$  is the mass of the *i*-th FEM node<sup>4</sup>.

2. Static moment (matrix  $3 \times 1$ )

$$\mathcal{I}_2 = \sum_{i=1,N} m_i \tilde{\mathbf{f}}_i \tag{9.408}$$

3. Static coupling between rigid body and FEM node displacements (matrix  $3 \times M$ )

$$\mathcal{I}_3 = \sum_{i=1,N} m_i U_i \tag{9.409}$$

where the portion related to the k-th mode is computed by summation of the contribute of each FEM node, obtained by multiplying the FEM node mass  $m_i$  by the three components of the modal displacement  $U_{ik}$  of the k-th mode.

4. Static coupling between rigid body rotations and FEM node displacements (matrix  $3 \times M$ )

$$\mathcal{I}_4 = \sum_{i=1,N} \left( m_i \tilde{\mathbf{f}}_i \times \mathbf{U}_i + \mathbf{J}_i \mathbf{V}_i \right) \tag{9.410}$$

where the portion related to the k-th mode is computed by summation of the contribute of each FEM node, obtained by multiplying the FEM node mass  $m_i$  by the cross product of the FEM node position  $\tilde{f}_i$  and the three components of the modal displacement  $U_{ik}$  of the k-th mode.

5. Static coupling between FEM node displacements (matrix  $3\times M\times M)$ 

$$\mathcal{I}_{5j} = \sum_{i=1,N} m_i \mathbf{U}_{ij} \times \mathbf{U}_i \tag{9.411}$$

where the portion related to the j-th mode is computed by summation of the contribute of each FEM node, obtained by multiplying the FEM node mass  $m_i$  by the cross product of the three components of the FEM node j-th modal displacement  $U_{ij}$  and the three components of the k-th modal displacement  $U_{ik}$ .

<sup>&</sup>lt;sup>4</sup>Although the input format, because of NASTRAN legacy, allows each global direction to have a separate mass value, invariants assume that the same value is given, and only use the one associated with component 1.

6. Modal mass matrix (matrix  $M \times M$ )

$$\mathcal{I}_6 = \sum_{i=1,N} \left( m_i \boldsymbol{U}_i^T \boldsymbol{U}_i + \boldsymbol{V}_i^T \boldsymbol{J}_i \boldsymbol{V}_i \right) \tag{9.412}$$

7. Inertia matrix (matrix  $3 \times 3$ )

$$\mathcal{I}_7 = \sum_{i=1,N} \left( m_i \tilde{\mathbf{f}}_i \times \tilde{\mathbf{f}}_i \times^T + \mathbf{J}_i \right)$$
(9.413)

8. (matrix  $3 \times M \times 3$ )

$$\mathcal{I}_{8j} = \sum_{i=1}^{N} m_i \tilde{\mathbf{f}}_i \times \mathbf{U}_{ij} \times T \tag{9.414}$$

9. (matrix  $3 \times M \times M \times 3$ )

$$\mathcal{I}_{9jk} = \sum_{i=1,N} m_i U_{ij} \times U_{ik} \times \tag{9.415}$$

10. (matrix  $3 \times M \times 3$ )

$$\mathcal{I}_{10j} = \sum_{i=1,N} \mathbf{V}_{ij} \times \mathbf{J}_i \tag{9.416}$$

11. (matrix  $3 \times M$ )

$$\mathcal{I}_{11} = \sum_{i=1,N} \boldsymbol{J}_i \boldsymbol{V}_i \tag{9.417}$$

Using the invariants, the contributions to the inertia matrix of the body become

$$M_{xx} = I \mathcal{I}_1 \tag{9.418a}$$

$$\mathbf{M}_{x\phi} = \mathbf{R}_0 \left( \mathcal{I}_2 + \mathcal{I}_3 \mathbf{q} \right) \times \mathbf{R}_0^T \tag{9.418b}$$

$$M_{xq} = R_0 \mathcal{I}_3 \tag{9.418c}$$

$$\mathbf{M}_{\phi\phi} = \mathbf{R}_0 \left( \mathcal{I}_7 + \left( \mathcal{I}_{8j} + \mathcal{I}_{8j}^T \right) q_j + \mathcal{I}_{9jk} q_j q_k \right) \mathbf{R}_0^T$$

$$(9.418d)$$

$$oldsymbol{M_{\phi q}} = oldsymbol{R_0} \left( \mathcal{I}_4 + \mathcal{I}_{5j} q_j + \sum_{i=1,N} \left( oldsymbol{J_i} \left( oldsymbol{V_i} oldsymbol{q} 
ight) imes^T oldsymbol{V_i} + \left( oldsymbol{V_i} oldsymbol{q} 
ight) imes oldsymbol{J_i} oldsymbol{V_i} 
ight)$$

$$+\sum_{i=1,N} (\mathbf{V}_i \mathbf{q}) \times \mathbf{J}_i (\mathbf{V}_i \mathbf{q}) \times^T \mathbf{V}_i$$
(9.418e)

$$M_{qq} = \mathcal{I}_6$$

$$+ \sum_{i=1,N} \left( \mathbf{V}_{i}^{T} \mathbf{J}_{i} \left( \mathbf{V}_{i} \mathbf{q} \right) \times^{T} \mathbf{V}_{i} + \mathbf{V}_{i}^{T} \left( \mathbf{V}_{i} \mathbf{q} \right) \times \mathbf{J}_{i} \mathbf{V}_{i} \right)$$

$$+ \sum_{i=1,N} \mathbf{V}_{i}^{T} \left( \mathbf{V}_{i} \mathbf{q} \right) \times \mathbf{J}_{i} \left( \mathbf{V}_{i} \mathbf{q} \right) \times^{T} \mathbf{V}_{i}$$

$$(9.418f)$$

where summation over repeated indices is assumed. The remaining summation terms could be also cast into some invariant form; however, in common practice (e.g. in ADAMS) they are simply neglected, under the assumption that the finer the discretization, the smaller the FEM node inertia, so that linear and quadratic terms in the nodal rotation become reasonably small, yielding

$$M_{xx} = I \mathcal{I}_1 \tag{9.419a}$$

$$M_{x\phi} = R_0 \left( \mathcal{I}_2 + \mathcal{I}_3 \mathbf{q} \right) \times R_0^T \tag{9.419b}$$

$$M_{xq} = R_0 \mathcal{I}_3 \tag{9.419c}$$

$$\mathbf{M}_{\phi\phi} = \mathbf{R}_0 \left( \mathcal{I}_7 + \left( \mathcal{I}_{8j} + \mathcal{I}_{8j}^T \right) q_j + \mathcal{I}_{9jk} q_j q_k \right) \mathbf{R}_0^T$$
(9.419d)

$$\mathbf{M}_{\phi q} = \mathbf{R}_0 \left( \mathcal{I}_4 + \mathcal{I}_{5j} q_j \right) \tag{9.419e}$$

$$M_{qq} = \mathcal{I}_6 \tag{9.419f}$$

In some cases, the only remaining quadratic term in  $\mathcal{I}_{9jk}$  is neglected as well.

## 9.4.5 Interfacing

The basic interface between the FEM and the multibody world occurs by clamping regular multibody nodes to selected nodes on the FEM mesh. Whenever more sophisticated interfacing is required, for example connecting a multibody node to a combination of FEM nodes, an FEM node equivalent to the desired aggregate of nodes should either be prepared at the FEM side, for example by means of RBEs, or at the FEM database side, for example by averaging existing mode shapes according to the desired pattern, into an equivalent FEM node<sup>5</sup>.

The clamping is imposed by means of a coincidence and a parallelism constraint between the locations and the orientations of the two points: the multibody node N and the FEM node P, according to the expressions

$$\boldsymbol{x}_N + \boldsymbol{f}_N = \boldsymbol{x}_P \tag{9.420}$$

$$\operatorname{ax}\left(\exp^{-1}\left(\mathbf{R}_{N}^{T}\mathbf{R}_{P}\right)\right) = \mathbf{0}\tag{9.421}$$

which becomes

$$\boldsymbol{x}_N + \boldsymbol{R}_N \tilde{\boldsymbol{f}}_N - \boldsymbol{x}_0 - \boldsymbol{R}_0 \left( \tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P \boldsymbol{q} \right) = \boldsymbol{0}$$

$$(9.422)$$

$$\operatorname{ax}\left(\exp^{-1}\left(\mathbf{R}_{N}^{T}\mathbf{R}_{0}\left(\mathbf{I}+\left(\mathbf{V}_{P}\mathbf{q}\right)\times\right)\right)\right)=\mathbf{0}\tag{9.423}$$

The reaction forces exchanged are  $\lambda$  in the global frame, while the reaction moments are  $R_N\alpha$  in the reference frame of node N:

$$F_N = \lambda \tag{9.424}$$

$$M_N = f_N \times \lambda + R_N \alpha \tag{9.425}$$

$$F_P = -\lambda \tag{9.426}$$

$$M_P = -R_N \alpha \tag{9.427}$$

The force and the moment apply on the rigid body displacement and rotation, and on the modal equations as well, according to

$$\begin{cases}
\delta \boldsymbol{x}_{P}^{T} \boldsymbol{F}_{P} \\
+ \delta \boldsymbol{\phi}_{P}^{T} \boldsymbol{M}_{P}
\end{cases} = \begin{cases}
\delta \boldsymbol{x}_{0} \\
\delta \boldsymbol{\phi}_{0} \\
\delta \boldsymbol{q}
\end{cases}^{T} \begin{cases}
-\lambda \\
-\left(\boldsymbol{R}_{0} \left(\tilde{\boldsymbol{f}}_{P} + \boldsymbol{U}_{P} \boldsymbol{q}\right)\right) \times \boldsymbol{\lambda} - \boldsymbol{R}_{N} \boldsymbol{\alpha} \\
-\boldsymbol{U}_{P}^{T} \boldsymbol{R}_{0}^{T} \boldsymbol{\lambda} - \boldsymbol{V}_{P}^{T} \boldsymbol{R}_{0}^{T} \boldsymbol{R}_{N} \boldsymbol{\alpha}
\end{cases}$$

$$(9.428)$$

<sup>&</sup>lt;sup>5</sup>For example, to constrain the displacement of a FEM node P that represents the weighing of the displacement of a set of FEM nodes according to a constant weighing matrix  $\mathbf{W}_P \in \mathbb{R}^{3n \times 3}$ , simply use  $\mathbf{U}_P = \mathbf{W}_P^T \mathbf{U}$ .

The linearization of the constraint yields

$$\begin{bmatrix} -\boldsymbol{I} & \boldsymbol{f}_{N} \times & \boldsymbol{I} & -\left(\boldsymbol{R}_{0}\left(\tilde{\boldsymbol{f}}_{P} + \boldsymbol{U}_{P}\boldsymbol{q}\right)\right) \times & \boldsymbol{R}_{0}\boldsymbol{U}_{P} \\ \boldsymbol{0} & -\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{R}_{N}^{T} & \boldsymbol{0} & \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{R}_{N}^{T} & \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{R}_{N}^{T}\boldsymbol{R}_{0}\boldsymbol{V}_{P} \end{bmatrix} \begin{cases} \delta\boldsymbol{x}_{N} \\ \delta\boldsymbol{g}_{N} \\ \delta\boldsymbol{g}_{0} \\ \delta\boldsymbol{q} \end{cases} = \begin{cases} (9.422) \\ (9.423) \end{cases}$$

$$(9.429)$$

Note that  $\Gamma(\theta)^{-1} \cong I$  since  $\theta \to 0$  when the constraint is satisfied. The linearization of forces and moments yields

$$\begin{bmatrix}
0 & 0 & 0 \\
0 & -\lambda \times f_{N} \times + (R_{N}\alpha) \times \\
0 & 0 & 0 \\
0 & -(R_{N}\alpha) \times \\
0 & -V_{P}^{T}R_{0}^{T}(R_{N}\alpha) \times
\end{bmatrix}
\begin{cases}
\delta x_{N} \\
\delta g_{N}
\end{cases}$$

$$+ \begin{bmatrix}
0 & 0 & 0 \\
0 & 0 & 0 \\
0 & 0 & 0 \\
0 & \lambda \times (R_{0}(\tilde{f}_{P} + U_{P}q)) \times & -\lambda \times R_{0}U_{P} \\
0 & U_{P}^{T}R_{0}^{T}\lambda \times + V_{P}^{T}R_{0}^{T}(R_{N}\alpha) \times & 0
\end{bmatrix}
\begin{cases}
\delta x_{0} \\
\delta g_{0} \\
\delta q
\end{cases}$$

$$+ \begin{bmatrix}
-I & 0 \\
-f_{N} \times & -R_{N} \\
I & 0 \\
(R_{0}(\tilde{f}_{P} + U_{P}q)) \times R_{N} \\
U_{P}^{T}R_{0}^{T} & V_{P}^{T}R_{0}^{T}R_{N}
\end{bmatrix}
\begin{cases}
\delta \lambda \\
\delta \alpha
\end{cases} = \begin{cases}
\lambda \\
f_{N} \times \lambda + R_{N}\alpha \\
(9.428)
\end{cases}$$

### 9.4.6 Virtual strain energy

Author: Reinhard Resch The modal element is based on the assumption of small elastic deformations but arbitrary superimposed rigid body motions. Since elastic deformations are small, the virtual strain energy  $\delta W$  may be approximated as a linear function of the modal displacement q.

$$\delta W \approx \delta \mathbf{q}^T \, \mathbf{K}_{qq} \, \mathbf{q} \tag{9.431}$$

 $\boldsymbol{K}_{qq}$  reduced order linear stiffness matrix

### Quasi static corrections for stress stiffening

However, there are applications of structures subject to small elastic deformations and linear elastic material, where those linear approximation of the virtual strain energy according equation 9.431 is not applicable due to significant pre-stress effects. See also [?]. Typical examples are:

- 1. rotor blades of helicopters, wind turbines and gas turbines
- 2. propellers of airplanes
- 3. rotors of turbo chargers for internal combustion engines
- 4. connecting rods of high speed reciprocating engines

#### 5. slender flexible arms of robots

According to the following assumptions, which are described in [?], it is possible to apply a quasi static correction to the virtual strain energy.

- 1. The flexible body should have low stiffness in some directions but high stiffness in other directions.
- 2. There are only low loads applied in directions of low stiffness. So, the deformations will remain small despite of low stiffness in those directions.
- 3. There are also high loads applied in directions of high stiffness. Because of such a high stiffness in those directions, the deformations will remain small. However, those high loads will cause high stresses which are affecting the stiffness in other directions.

Based on those assumptions, the corrected expression for the virtual strain energy according [?] is:

$$\delta W \approx \delta \mathbf{q}^T \left( \mathbf{K}_{qq} + \mathbf{K}_{qq_{aeo}} \right) \mathbf{q} \tag{9.432}$$

In equation 9.432 the matrix  $K_{qq_{geo}}$  is called "geometrical stiffness matrix" or "stress stiffening matrix". According to [?],  $K_{qq_{geo}}$  can be written as a linear combination of a set of constant matrices.

$$K_{qq_{geo}} = \sum_{i=1,3} (\tilde{x}_{0_i} - \tilde{g}_i) K_{0t_i} + \sum_{i=1,3} \tilde{\omega}_{0_i} K_{0r_i} + \sum_{m=1,6} \tilde{\omega}_{q_m} K_{0\omega_m}$$

$$+ \sum_{i=1,3} \sum_{j=1,M} \tilde{F}_{P_{ij}} K_{0F_{ij}} + \sum_{i=1,3} \sum_{j=1,M} \tilde{M}_{P_{ij}} K_{0M_{ij}}$$

$$(9.433)$$

So,  $K_{qq_{geo}}$  is a function of the rigid body motion of the modal node, and also a function of the Lagrange multipliers applied at the interface nodes.

$$\tilde{\ddot{x}}_0 = \mathbf{R}_0^T \, \ddot{x}_0 \tag{9.434}$$

$$\tilde{\dot{\omega}}_0 = R_0^T \, \dot{\omega}_0 \tag{9.435}$$

$$\tilde{\boldsymbol{\omega}}_{q} = \begin{pmatrix} \tilde{\omega}_{0_{1}}^{2} & \tilde{\omega}_{0_{2}}^{2} & \tilde{\omega}_{0_{3}}^{2} & \tilde{\omega}_{0_{1}} \, \tilde{\omega}_{0_{2}} & \tilde{\omega}_{0_{2}} \, \tilde{\omega}_{0_{3}} & \tilde{\omega}_{0_{1}} \, \tilde{\omega}_{0_{3}} \end{pmatrix}^{T}$$

$$(9.436)$$

$$\tilde{\boldsymbol{\omega}}_0 = \boldsymbol{R}_0^T \, \boldsymbol{\omega}_0 \tag{9.437}$$

$$\tilde{\mathbf{F}}_{P_j} = -\mathbf{R}_0^T \, \lambda_j \tag{9.438}$$

$$\tilde{\boldsymbol{M}}_{P_i} = -\boldsymbol{R}_0^T \, \boldsymbol{R}_N \, \boldsymbol{\alpha}_i \tag{9.439}$$

Those matrices are also called "pre-stress stiffness matrices" and can be a determined a priori based on the stress field for various static unit loads.

 $K_{0t_i}$  A unit linear acceleration is applied in direction  $x_i$ 

 $K_{0r_i}$  A unit angular acceleration is applied along the  $x_i$  axis

 $K_{0\omega_m}$  Can be computed from six angular velocity loads

 $K_{0F_{ij}}$  A unit force is applied in  $x_i$  direction at interface node j

 $K_{0M_{ij}}$  A unit moment is applied along the  $x_i$  axis at interface node j

In theory, any structural Finite Element solver like ANSYS, ABAQUS or NASTRAN could be used to generate those matrices. For a comprehensive description of the underlying procedure, the reader is referred to [?]. Probably, the most convenient solution to get those matrices and all the modal element data is, to use a dedicated toolkit like mboct-fem-pkg with builtin support for MBDyn's input files.

# Chapter 10

# **Beam Element**

**TODO** 

# 10.1 Generalized strains, strain rates and their linearization

Authors: Marco Morandini and Wenguo Zhu

This a draft, but hopefully consistent and correct documentation of the beam strains, strain rates and of their derivatives. Arbitrary point on the beam reference line, and the rotation parameter:

$$p(\xi) = N_i(\xi)(x_i + R_i\tilde{f}_i)$$

$$g(\xi) = N_i(\xi)g_i$$

The generalized strain:

$$\varepsilon(\xi) = R^T(\xi)N_i'(\xi)(x_i + R_i\tilde{f}_i) - \bar{p}'$$

$$\kappa(\xi) = R^{T}(\xi) \left( G(\xi) N_{i}'(\xi) g_{i} \right) + \kappa_{r}$$

Rotation:

$$R = R(N_i g_i) R_r$$

Derivative of Rotation:

$$\dot{R} = \omega \times R$$

$$\dot{R}^T = -R^T \omega \times$$

Section angular velocity:

$$\omega = G(\xi)N_i'(\xi)\dot{g}_i - \omega_r \times N_i g_i$$

And the strain rate can be expressed as:

$$\begin{split} l &= N_i'(\xi)(x_i + R_i\tilde{f}_i) \\ \dot{l} &= N_{Jk}'(\dot{x}_k + \dot{R}_k\tilde{f}_k) \\ &= N_{Jk}'(\dot{x}_k + \omega_k \times R_k\tilde{f}_k) \\ \dot{\tilde{\varepsilon}} &= R^T(\dot{l} - \omega \times l) \\ &= R^TN_{Jk}'(\dot{x}_k + \omega_k \times R_k\tilde{f}_k) \\ &- R^T\omega \times N_{Ji}'(x_i + R_i\tilde{f}_i) \end{split}$$

$$G &= \frac{4}{4 + g^Tg}(I + \frac{1}{2}g\times)$$

$$\dot{G} &= -\frac{4}{(4 + g^Tg)^2}(\dot{g}\otimes g + g\otimes \dot{g})(I + \frac{1}{2}g\times) + \frac{4}{4 + g^Tg}(\frac{1}{2}\dot{g}\times)$$

$$\dot{\tilde{\kappa}} &= R^T(G(\xi)N_i'(\xi)\dot{g}_i + \dot{G}(\xi)N_i'(\xi)g_i - \omega \times (G(\xi)N_i'(\xi)g_i)) + \dot{\kappa}_r \\ \omega &= G(N_ig_i)N_i'\dot{g}_i + R(N_ig_i)\omega_r \end{split}$$

Angular velocity linearization at an evaluation point J:

$$\triangle \omega = \triangle G N_{Ji} \dot{g}_{i}$$

$$+ \angle G^{G \approx I} N_{Ji} \triangle \dot{g}_{i}$$

$$+ \Delta R \omega_{r}$$

$$= \frac{1}{2} N_{jk} \triangle g_{k} \times N'_{Ji} \dot{g}_{i}$$

$$+ N_{Ji} \triangle \dot{g}_{i}$$

$$- \omega_{r} \times N_{Ji} \triangle g_{i}$$

$$= \frac{1}{2} N'_{Ji} \dot{g}_{t} \times N_{jk} \triangle g_{k}^{\dot{g} \approx 0}$$

$$+ N_{Ji} \triangle \dot{g}_{i}$$

$$- \omega_{r} \times N_{Ji} \triangle g_{i}$$

$$= N_{Ji} \triangle \dot{g}_{i} - \omega_{r} \times N_{Ji} \triangle g_{i}$$

$$= N_{Ji} \triangle \dot{g}_{i} - \omega_{r} \times N_{Ji} \triangle g_{i}$$

Rotation linearization at an evaluation point J:

$$\Delta R = \Delta g \times R_r 
= (N_{Ji} \Delta g_i) \times R_r$$

$$\Delta R^T = -R_r^T (N_{Ji} \Delta g_i) \times$$

Rotation rate linearization at an evaluation point J:

$$\dot{R} = \dot{R}_{\delta} R_{r} = (G_{\delta} g) \times R_{r}$$

$$= \omega \times R$$

$$\dot{R}^{T} = -R^{T} \omega \times$$

$$\Delta \dot{R} = \Delta \omega \times R$$

$$+\omega \times \Delta R$$

$$= (N_{Ji} \Delta \dot{g}_{i} - \omega_{r} \times N_{Ji} \Delta g_{i}) \times R$$

$$+\omega \times N_{Ji} \Delta g_{i} \times$$

$$= N_{Ji} \Delta \dot{g}_{i} \times R$$

$$-N_{Ji} \Delta g_{i} \otimes \omega_{r} R$$

$$+\omega_{r} \otimes N_{Ji} R^{T} \Delta g_{i}$$

$$+\omega \times N_{Ji} \Delta g_{i} \times R_{r}$$

$$\dot{R}_{i} = \Delta \dot{g}_{i} \times R_{i}$$

$$-\Delta g_{i} \otimes \omega_{ri} R_{i}$$

$$+\omega_{ri} \otimes R_{i}^{T} \Delta g_{i}$$

 $+\omega_i \times \Delta g_i \times R_{ri}$ 

Strain linearization at an evaluation point J:

$$\Delta \varepsilon = \Delta R^T N'_{Jk} (x_k + R_k \tilde{f}_k)$$

$$+ R^T N'_{Jk} (\Delta x_k + \Delta R_k \tilde{f}_k)$$

$$= R_r^T N'_{Jk} (x_k + R_k \tilde{f}_k) \times (N_{Jm} \Delta g_m)$$

$$+ R^T N'_{Jk} (\Delta x_k + \Delta g_k \times R_k \tilde{f}_k)$$

$$= R_r^T N'_{Jk} (x_k + R_k \tilde{f}_k) \times (N_{Jm} \Delta g_m)$$

$$+ R_r^T N'_{Jk} (\Delta x_k - R_k \tilde{f}_k \times \Delta g_k)$$

$$\Delta \kappa = \Delta R^T G N_{Ji} g_i^{g_i \approx 0}$$

$$+ R^T \Delta G N_{Ji} g_i^{g_i \approx 0}$$

$$+ R^T G N_{Ji}' \Delta g_i$$

$$= R_T^T N_{Ji}' \Delta g_i$$

$$\dot{l} = N'_{Ji}(\dot{x}_i + \dot{R}_i \tilde{f}_i)$$

$$\Delta \dot{l} = N'_{Ji}(\triangle \dot{x}_i + \triangle \dot{R}_i \tilde{f}_i) 
= N'_{Ji}(\triangle \dot{x}_i + (\triangle \dot{g}_i \times R_i - \Delta g_i \otimes \omega_{ri} R_i + \omega_{ri} \otimes R_i^T \Delta g_i + \omega_i \times \Delta g_i \times R_{ri}) \tilde{f}_i) 
= N'_{Ji} \triangle \dot{x}_i 
-N'_{Ji}(R_i \tilde{f}_i) \times \Delta \dot{g}_i 
-N'_{Ji}(\omega_{ri} R_i \tilde{f}_i) \Delta g_i 
+N'_{Ji} \omega_{ri} \otimes \tilde{f}_i R_i^T \Delta g_i 
-N'_{Ji} \omega_i \times (R_{ri} \tilde{f}_i) \times \Delta g_i$$

Strain rate linearization at an evaluation point J:

$$\triangle \dot{\bar{\varepsilon}}_{J} = \Delta R^{T}(\dot{l} - \omega \times l) \\ + R^{T} \Delta \dot{l} \\ - R^{T} \omega \times \Delta l \\ = R^{T}_{r}(\dot{l} - \omega \times l) \times N_{Ji} \Delta g_{i} \\ + R^{T} N'_{ji} \triangle \dot{x}_{i} + \\ - R^{T} N'_{ji} (R_{i} \tilde{f}_{i}) \times \Delta \dot{g}_{i} \\ - R^{T} N'_{ji} (\omega_{ri} R_{i} \tilde{f}_{i}) \Delta g_{i} \\ + R^{T} N'_{ji} (\omega_{ri} R_{i} \tilde{f}_{i}) \Delta g_{i} \\ + R^{T} N'_{ji} \omega_{ri} \otimes \tilde{f}_{i} R_{i}^{T} \Delta g_{i} \\ - R^{T} N'_{ji} \omega_{i} \times (R_{ri} \tilde{f}_{i}) \times \Delta g_{i} \\ + R^{T} l \times N_{Ji} \Delta \dot{g}_{i} \\ + R^{T} l \times N_{Ji} \Delta g_{i} \\ - R^{T} \omega_{r} \otimes l \cdot N_{Ji} \Delta g_{i} \\ - R^{T} \omega_{r} \otimes l \cdot N_{Ji} \Delta g_{i} \\ - R^{T} \omega \times N'_{Ji} \Delta x_{i} \\ + R^{T} \omega \times N'_{Ji} \Delta x_{i} \\ + R^{T} \omega \times N'_{Ji} \Delta x_{i} \\ + R^{T} (l - \omega \times l) \times N_{Ji} \Delta g_{i} \\ - R^{T} N'_{Ji} (\omega_{ri} \tilde{f}_{i}) \times \Delta \dot{g}_{i} \\ - R^{T} N'_{Ji} (\omega_{ri} R_{i} \tilde{f}_{i}) \Delta g_{i} \\ - R^{T} N'_{Ji} \omega_{ri} \otimes \tilde{f}_{i} R_{i}^{T} \Delta g_{i} \\ - R^{T} N'_{Ji} \omega_{ri} \otimes \tilde{f}_{i} R_{i}^{T} \Delta g_{i} \\ - R^{T} N'_{Ji} \omega_{i} \times (R_{ri} \tilde{f}_{i}) \times \Delta g_{i} \\ + R^{T} l \times N_{Ji} \Delta \dot{g}_{i} \\ + R^{T} l \times N_{Ji} \Delta \dot{g}_{i} \\ + R^{T} l \times N_{Ji} \Delta \dot{g}_{i} \\ + R^{T} \omega \otimes l \cdot N_{Ji} \Delta g_{i} \\ - R^{T} \omega_{r} \otimes l \cdot N_{Ji} \Delta g_{i} \\ + R^{T} \omega \times l \cdot N_{Ji} \Delta g_{i} \\ + R^{T} \omega \times l \cdot N_{Ji} \Delta g_{i} \\ + R^{T} \omega \times l \cdot N_{Ji} \Delta g_{i} \\ + R^{T} \omega \otimes l \cdot N_{Ji$$

$$\triangle \dot{\hat{\kappa}}_{J}(\xi) = \Delta R^{T} \left( \mathcal{L}^{\approx I} N'_{Jk} \dot{g}_{k}^{j} \dot{g}_{k}^{\approx 0} + \Delta \dot{G} N'_{Jk} g_{k}^{g_{k} \approx 0} - \omega_{J} \times (\mathcal{L}^{\approx I} N'_{Jk} g_{k})^{g_{k} \approx 0} \right) + \dot{\kappa}_{T}$$

$$+ R^{T} \left( \mathcal{L}^{\approx I} N'_{Jk} \Delta \dot{g}_{k} \right)$$

$$+ R^{T} \left( \mathcal{L}^{\approx I} N'_{Jk} \Delta \dot{g}_{k} \right)$$

$$+ R^{T} \left( \mathcal{L}^{\approx I} N'_{Ji} g_{i} \right)^{g_{i} \approx 0} \times \Delta \omega$$

$$+ R^{T} \left( \mathcal{L}^{\approx I} N'_{Ji} \Delta g_{i} \right) \times \omega$$

$$= + R^{T} N'_{Jk} \Delta \dot{g}_{k}$$

$$+ R^{T} \left( N'_{Ji} \Delta g_{i} \right) \times \omega$$

$$= + R^{T} \left( N'_{Jk} \Delta \dot{g}_{k} \right)$$

$$- R^{T} \omega \times \left( N'_{Ji} \Delta g_{i} \right)$$

$$= + R^{T} N'_{Jk} \Delta \dot{g}_{k}$$

$$- R^{T} \omega \times \left( N'_{Im} \Delta g_{m} \right)$$

## 10.2 Fully coupled piezoelectric beam

A fully coupled piezoelectric beam, differently from a piezoelectric beam, do contribute to the electric equations of the abstrc nodes it is linked to. Each abstract node do represent an electrode. The constitutive law at any given evaluation point is

$$\left\{ \begin{array}{c} \mathbf{F} \\ \mathbf{Q} \end{array} \right\} = \left[ \begin{array}{cc} \mathbf{E}_{kk} & \mathbf{E}_{kV} \\ \mathbf{E}_{Vk} & \mathbf{E}_{VV} \end{array} \right] \left\{ \begin{array}{c} \mathbf{k} \\ \mathbf{V} \end{array} \right\} \tag{10.1}$$

where F are the six beam internal actions at the evaluation point, Q the vector of electrodes charges per unit of beam length, k the six beam generalized deformations and V the electric difference of potential at the electrodes. The equation contribution to the structural nodes are the same of the piezoelectric beam. The difference with respect to the piezoelectric beam is the equations contribution to the asbtract nodes. The unknowns of the abstract nodes do represent the electric difference of potential at the electrodes. The equations at the abstract nodes states that the sum of charge flux (the electric current) flowing out from each node must be equal to zero:

$$\sum_{i} I_i = 0 \tag{10.2}$$

where  $I_i$  is the current flowing out from the abstract nodedue to the connected element i. For this element the current flowing out from the electrodes is

$$I = -\int_{l} \dot{\mathbf{Q}} ds = -\int_{l} \mathbf{E}_{Vk} \dot{\mathbf{k}} + \mathbf{E}_{VV} \dot{\mathbf{V}} ds$$
(10.3)

The fully copled beam element thus turns out to be viscoelastic, as its contribution to the electric equations do depend on the time derivative of the beam generalized measure. The integral  $\int ()ds$  is computed with the same gauss quadrature scheme used for the evaluation of the beam stiffness matrix. The assembled residual contribution is equal to Eq. (10.3) with sign changed.

# Chapter 11

# Shell Element

Authors: Marco Morandini and Riccardo Vescovini

## 11.1 Variational principle

The formulation refers to the modified Hu-Washizu variational functional. The linearization of the functional is written as:

$$\delta W + \Delta \delta W = 0 \tag{11.1}$$

with:

$$\delta W = \int_{A} \left( \delta \boldsymbol{\epsilon}^{T} \boldsymbol{\sigma} + \delta \hat{\boldsymbol{\epsilon}}^{T} \boldsymbol{\sigma} \right) dA \tag{11.2}$$

with

$$\sigma = \sigma \left( \epsilon + \hat{\epsilon} \right) \tag{11.3}$$

A linear (visco)elastic stress-strain relationship is considered,

$$\sigma = C \left( \epsilon + \hat{\epsilon} \right) + E \left( \dot{\epsilon} + \dot{\hat{\epsilon}} \right) \tag{11.4}$$

FIXME:  $\hat{\epsilon}$ ? Direi di no! and:

$$\Delta \delta W = \int_{A} \left( \delta \boldsymbol{\epsilon}^{T} \boldsymbol{C} \left( \Delta \boldsymbol{\epsilon} + \Delta \hat{\boldsymbol{\epsilon}} \right) + \delta \hat{\boldsymbol{\epsilon}}^{T} \boldsymbol{C} \left( \Delta \boldsymbol{\epsilon} + \Delta \hat{\boldsymbol{\epsilon}} \right) + \Delta \delta \boldsymbol{\epsilon}^{T} \boldsymbol{\sigma} \right) dA$$
(11.5)

where:

- $\bullet$  C and E are the linear viscoelastic constitutive law matrices (integrated along the shell thickness)
- $\bullet$  is the vector of the compatible strains (resulting from the strain-displacement relations)
- $\hat{\epsilon}$  is the vector of the enhancing strains (EAS)
- $\bullet$   $\sigma$  is the vector of forces and moments per unit length

The enhancing strains  $\hat{\pmb{\epsilon}}$  are interpolated within the element.

The compatible strains  $\epsilon$  are defined as:

$$\frac{\epsilon}{12\times 1} = \begin{cases} \tilde{\epsilon}_1 \\ \tilde{\epsilon}_2 \\ \tilde{\kappa}_1 \\ \tilde{\kappa}_2 \end{cases} \tag{11.6}$$

where:

$$\tilde{\boldsymbol{\epsilon}}_k = \boldsymbol{T}^T \boldsymbol{y}_{,k} - \boldsymbol{e}_k \tag{11.7}$$

where the comma followed by the index represents the derivation with respect to the k-th arc-length coordinate.

T is the orientation and y is the position vector both in the deformed configuration, and  $e_k = \{e_{1k}, e_{2k}, e_{3k}\}$ , with  $e_{ik} = \delta_{ik}$ .

$$\tilde{\kappa}_k = \mathbf{T}^T \kappa_k - \mathbf{T}_0^T \kappa_k^0 \tag{11.8}$$

with:

$$\boldsymbol{\kappa}_k \times = \boldsymbol{T}_k \boldsymbol{T}^T \tag{11.9}$$

### 11.1.1 Strain Rate

The compatible strain derivatives  $\dot{\epsilon}$  are defined as:

$$\frac{\dot{\epsilon}}{\dot{\epsilon}_{12\times 1}} = \left\{ \begin{array}{c} \dot{\tilde{\epsilon}}_{1} \\ \dot{\tilde{\epsilon}}_{2} \\ \dot{\tilde{\kappa}}_{1} \\ \dot{\tilde{\kappa}}_{2} \end{array} \right\}$$
(11.10)

where:

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\epsilon}}_{k} = \dot{\boldsymbol{T}}^{T}\boldsymbol{y}_{,k} + \boldsymbol{T}^{T}\dot{\boldsymbol{y}}_{,k} = -\boldsymbol{T}^{T}\boldsymbol{\omega} \times \boldsymbol{y}_{,k} + \boldsymbol{T}^{T}\dot{\boldsymbol{y}}_{,k}$$
(11.11)

and

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\kappa}_k = \dot{T}^T \kappa_k + T^T \dot{\kappa}_k = -T^T \omega \times \kappa_k + T^T \dot{\kappa}_k. \tag{11.12}$$

Since

$$\frac{\mathrm{d}}{\mathrm{d}t}(T_{,k}) = \frac{\mathrm{d}}{\mathrm{d}t}(\kappa_k \times T) = \dot{\kappa}_k \times T + \kappa_k \times \omega \times T$$
(11.13)

$$(\dot{T})_{,k} = (\boldsymbol{\omega} \times \boldsymbol{T})_{,k} = \boldsymbol{\omega}_{,k} \times \boldsymbol{T} + \boldsymbol{\omega} \times \boldsymbol{\kappa}_k \times \boldsymbol{T}$$
(11.14)

then

$$\dot{\kappa}_k \times + \kappa_k \times \omega \times = \omega_{,k} \times + \omega \times \kappa_k \times \tag{11.15}$$

i.e.

$$\dot{\kappa}_k = \omega_{.k} + \omega \times \kappa_k \tag{11.16}$$

Thus

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\kappa}_k = T^T \omega_{,k} \tag{11.17}$$

The vector  $\boldsymbol{\sigma}$  is:

$$\sigma = \left\{ \begin{array}{c} n_1 \\ n_2 \\ m_1 \\ m_2 \end{array} \right\} \tag{11.18}$$

## 11.2 Finite element discretization and notation

The shell elements has four nodes, numbered counterclockwise starting from the upper right node, as shown in Figure 11.1. In the natural domain, the coordinate system is identified by the coordinates  $\xi_1$ 

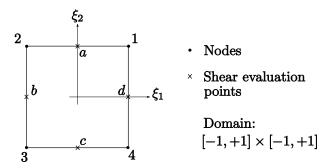


Figure 11.1: Shell finite element

and  $\xi_2$ , both varying in the range [-1,1]. In the following, the notation

$$\boldsymbol{\xi} = (\xi_1, \xi_2) \tag{11.19}$$

will be used. Four points are defined at the element's mid-sides. They are used in the context of the ANS approach. In particular, they are denoted by the set of coordinates:

$$\begin{aligned}
\xi_a &= (\xi_{1a}, \xi_{2a}) \\
\xi_b &= (\xi_{1b}, \xi_{2b}) \\
\xi_c &= (\xi_{1c}, \xi_{2c}) \\
\xi_d &= (\xi_{1d}, \xi_{2d})
\end{aligned} (11.20)$$

The following convention is adopted:

- $\bullet$  the subscript n denotes a nodal variable
- $\xi_i$  means  $\xi$  evaluated in a generic integration point
- $\xi_A$  means  $\xi$  evaluated in one of the four shear evaluation points
- $\xi_0$  means  $\xi$  evaluated at the origin

According to the numbering of the nodes, the bilinear shape functions defined at element level are:

$$L_1(\boldsymbol{\xi}) = \frac{1}{4} (1 + \xi_1) (1 + \xi_2)$$
 (11.21a)

$$L_2(\boldsymbol{\xi}) = \frac{1}{4} (1 - \xi_1) (1 + \xi_2)$$
 (11.21b)

$$L_3(\xi) = \frac{1}{4} (1 - \xi_1) (1 - \xi_2) \tag{11.21c}$$

$$L_4(\boldsymbol{\xi}) = \frac{1}{4} (1 + \xi_1) (1 - \xi_2) \tag{11.21d}$$

The degrees of freedom associated with each element are 24 nodal position and orientation parameter components, collected in vector q:

$$\delta \mathbf{q} = \left\{ \begin{array}{c} \delta \mathbf{y}_{1} \\ \varphi_{\delta 1} \\ \delta \mathbf{y}_{2} \\ \varphi_{\delta 2} \\ \delta \mathbf{y}_{3} \\ \varphi_{\delta 3} \\ \delta \mathbf{y}_{4} \\ \varphi_{\delta 4} \end{array} \right\} = \left\{ \begin{array}{c} \delta \mathbf{y}_{n} \\ \varphi_{\delta 1} \\ \delta \mathbf{y}_{2} \\ \varphi_{\delta 2} \\ \delta \mathbf{y}_{3} \\ \varphi_{\Delta 3} \\ \delta \mathbf{y}_{4} \\ \varphi_{\delta 4} \end{array} \right\} = \left\{ \begin{array}{c} \Delta \mathbf{y}_{1} \\ \varphi_{\Delta 1} \\ \Delta \mathbf{y}_{2} \\ \varphi_{\Delta 2} \\ \Delta \mathbf{y}_{3} \\ \varphi_{\Delta 3} \\ \Delta \mathbf{y}_{4} \\ \varphi_{\Delta 4} \end{array} \right\} \tag{11.22}$$

and 7 internal degrees of freedom related to the assumed strain (EAS) and collected in vector  $\boldsymbol{\beta}$ . The total number of degrees of freedom is 31.

### 11.3 Linearization

The virtual variation of the compatible strains  $\epsilon$  is

$$\delta \epsilon = \left\{ \begin{array}{c} \delta \tilde{\epsilon}_1 \\ \delta \tilde{\epsilon}_2 \\ \delta \tilde{\kappa}_1 \\ \delta \tilde{\kappa}_2 \end{array} \right\}$$
 (11.23)

In particular, the virtual variations of the linear deformation  $\tilde{\epsilon}_k$  is:

$$\delta \tilde{\boldsymbol{\epsilon}}_{k} = \delta \left( \boldsymbol{T}^{T} \boldsymbol{y}_{,k} \right) = \sum_{i=1}^{n} \boldsymbol{T}^{T} \boldsymbol{y}_{,k} \times \boldsymbol{\Phi}_{n} L_{n} \boldsymbol{\varphi}_{\delta n} + \sum_{i=1}^{n} \boldsymbol{T}^{T} L_{n,k} \delta \boldsymbol{y}_{n}$$
(11.24)

where:

$$\Phi_n = \overline{T}\tilde{\Gamma}\tilde{\Gamma}_n^{-1}\overline{T}^T \tag{11.25}$$

The virtual variations of the curvatures  $\tilde{\kappa}_k$  is:

$$\delta \tilde{\kappa}_k = \delta \left( \mathbf{T}^T \kappa_k \right) = \sum_{i=1}^n \mathbf{T}^T \kappa_k \times \Phi_n L_n \varphi_{\delta n} + \sum_{i=1}^n \mathbf{T}^T K_{kn} \varphi_{\delta n}$$
(11.26)

where:

$$\boldsymbol{K}_{kn} = \overline{T}\mathcal{L}\left(\tilde{\varphi}, \tilde{\varphi}_{,k}\right) \tilde{\Gamma}_{n}^{-1} \overline{T}^{T} L_{n} + \boldsymbol{\Phi}_{n} L_{n,k}$$
(11.27)

the term  $L_{n,k}$  is the derivative of the *n*-th shape function with respect to the *k*-th arc-length coordinate. The last term of Eq. 11.5 requires the evaluation of the terms:

$$n_{k} \cdot \Delta \delta \tilde{\boldsymbol{\epsilon}}_{k} = n_{k} \cdot \Delta \delta \left( \boldsymbol{T}^{T} \boldsymbol{y}_{,k} \right) = \sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n} \boldsymbol{\Phi}_{n}^{T} L_{n} \boldsymbol{y}_{,k} \times \left( \boldsymbol{T} \boldsymbol{n}_{k} \right) \times \boldsymbol{\Phi}_{m} L_{m} \boldsymbol{\varphi}_{\Delta n} +$$

$$+ \sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n} \boldsymbol{\Phi}_{n}^{T} L_{n} \left( \boldsymbol{T} \boldsymbol{n}_{k} \right) \times L_{m,k} \Delta \boldsymbol{y}_{n} +$$

$$- \sum_{m,n=1}^{4} \delta \boldsymbol{y}_{n} L_{n,k} \left( \boldsymbol{T} \boldsymbol{n}_{k} \right) \times \boldsymbol{\Phi}_{m} L_{m} \boldsymbol{\varphi}_{\Delta m}$$

$$(11.28)$$

$$m_{k} \cdot \Delta \delta \tilde{\kappa}_{k} = m_{k} \cdot \Delta \delta \left( \mathbf{T}^{T} \boldsymbol{\kappa}_{k} \right) = \sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n} L_{n} \boldsymbol{\Phi}_{n}^{T} \boldsymbol{\kappa}_{k} \times \left( \mathbf{T} \boldsymbol{m}_{k} \right) \times \boldsymbol{\Phi}_{m} L_{m} \boldsymbol{\varphi}_{\Delta m} +$$

$$+ \sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n} L_{n} \boldsymbol{\Phi}_{n}^{T} \left( \mathbf{T} \boldsymbol{m}_{k} \right) \times \boldsymbol{\Phi}_{m} L_{m,k} \boldsymbol{\varphi}_{\Delta m}$$

$$(11.29)$$

## 11.4 Structural Damping

Consistently formulated structural damping requires to express the time derivatives of strain and curvature. A linear contribution to internal force and moment fluxes is considered,

$$\sigma += E\dot{\epsilon} \tag{11.30}$$

The discretized strain rate is

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\epsilon}}_k = \boldsymbol{T}^T \boldsymbol{y}_{,k} \times \sum_{i=1}^n \boldsymbol{\Phi}_i L_i \boldsymbol{\omega}_i + \boldsymbol{T}^T \sum_{i=1}^n L_{n,k} \dot{\boldsymbol{y}}_i$$
(11.31)

The discretized curvature rate is

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\kappa}}_k = \boldsymbol{T}^T \sum_{i=1}^n L_{n,k} \boldsymbol{\omega}_i \tag{11.32}$$

# 11.5 Implementation

Having shown the variational principle and the linearization of strains and curvatures, it is then possible to develop the procedure to derive the Jacobian matrix and the residual.

## 11.5.1 Orientation interpolation

In the initial configuration it is built the matrix:

$$iTa_n = R_n^T \left[ t_{1n} t_{2n} t_{3n} \right] \tag{11.33}$$

with  $R_n$  node orientation, and  $t_{in}$  vectors tangent to the element surface. So:

$$T_n = R_n i T a_n \tag{11.34}$$

It is then calculated:

$$T_{\text{avg}} = \frac{1}{4} \sum_{n=1}^{4} T_n \tag{11.35}$$

which is in general a not orthogonal matrix.

An orthogonal matrix can be obtained by applying:

$$\overline{T} = \text{Rot}\left(\text{VecRot}\left(T_{\text{avg}}\right)\right)$$
 (11.36)

which is then used to calculate the nodal rotation:

$$\tilde{R}_n = \overline{T}^T T_n \tag{11.37}$$

and:

$$\tilde{\varphi}_n = \text{VecRot}\left(\tilde{R}_n\right)$$
 (11.38)

The nodal values of  $\tilde{\varphi}_n$  are interpolated by means of the shape functions:

$$\tilde{\varphi}\left(\xi_{i}\right) = \sum_{i=1}^{4} L_{n}\left(\xi_{i}\right) \tilde{\varphi}_{n} \tag{11.39}$$

from which is obtained the rotation matrix at the integration point:

$$\tilde{R}\left(\boldsymbol{\xi}_{i}\right) = \operatorname{Rot}\left(\tilde{\varphi}\left(\boldsymbol{\xi}_{i}\right)\right) \tag{11.40}$$

and finally the orientation at the integration point:

$$T(\xi_i) = \overline{T}\tilde{R}(\xi_i) \tag{11.41}$$

The virtual variation of  $\varphi$  at the integration point is related to the nodal values by:

$$\varphi_{\delta}\left(\boldsymbol{\xi}_{i}\right) = \sum_{n=1}^{4} \Phi_{n}\left(\boldsymbol{\xi}_{i}\right) L_{n}\left(\boldsymbol{\xi}_{i}\right) \varphi_{\delta n} \tag{11.42}$$

with:

$$\Phi_n(\boldsymbol{\xi}_i) = \overline{T}\widetilde{\Gamma}(\widetilde{\varphi}(\boldsymbol{\xi}_i))\widetilde{\Gamma}^{-1}(\widetilde{\varphi}_n)\overline{T}^T$$
(11.43)

Similarly the virtual variation of  $\varphi$  can be obtained at the shear evaluation points as:

$$\varphi_{\delta}\left(\boldsymbol{\xi}_{A}\right) = \sum_{n=1}^{4} \Phi_{n}\left(\boldsymbol{\xi}_{A}\right) L_{n}\left(\boldsymbol{\xi}_{A}\right) \varphi_{\delta n} \tag{11.44}$$

## 11.5.2 Position interpolation

The nodal positions are so interpolated as:

$$\mathbf{y} = \sum_{n=1}^{4} L_n \mathbf{y}_n \tag{11.45}$$

The derivatives with respect to the generic coordinate  $\xi_k$  at the integration points is:

$$\frac{\partial \boldsymbol{x}\left(\boldsymbol{\xi}_{i}\right)}{\partial \xi_{k}} = \sum_{n=1}^{4} \frac{\partial L_{n}\left(\boldsymbol{\xi}_{i}\right)}{\partial \xi_{k}} \boldsymbol{x}_{n} \tag{11.46}$$

It is then possible to build the matrix:

$$S_{\alpha\beta}(\boldsymbol{\xi}_{i}) = \begin{bmatrix} t_{1}^{0}(\boldsymbol{\xi}_{i}) \frac{\partial x(\boldsymbol{\xi}_{i})}{\partial \boldsymbol{\xi}_{1}} & t_{1}^{0}(\boldsymbol{\xi}_{i}) \frac{\partial x(\boldsymbol{\xi}_{i})}{\partial \boldsymbol{\xi}_{2}} \\ {}^{1\times3} & {}^{3\times1} \\ t_{2}^{0}(\boldsymbol{\xi}_{i}) \frac{\partial x(\boldsymbol{\xi}_{i})}{\partial \boldsymbol{\xi}_{1}} & t_{2}^{0}(\boldsymbol{\xi}_{i}) \frac{\partial x(\boldsymbol{\xi}_{i})}{\partial \boldsymbol{\xi}_{2}} \end{bmatrix}$$

$$(11.47)$$

observing that  $T_0(\boldsymbol{\xi}_i) = \left[ \boldsymbol{t}_1^0(\boldsymbol{\xi}_i) \, \boldsymbol{t}_2^0(\boldsymbol{\xi}_i) \, \boldsymbol{t}_3^0(\boldsymbol{\xi}_i) \right].$ 

With the same procedure are derived  $S_{\alpha\beta}(\xi_0)$  and  $S_{\alpha\beta}(\xi_A)$ .

$$\boldsymbol{L}_{\alpha B}(\boldsymbol{\xi}_{i}) = \begin{bmatrix} \frac{\partial L_{1}(\boldsymbol{\xi}_{i})}{\partial \xi_{1}} & \frac{\partial L_{1}(\boldsymbol{\xi}_{i})}{\partial \xi_{2}} \\ \frac{\partial L_{2}(\boldsymbol{\xi}_{i})}{\partial \xi_{1}} & \frac{\partial L_{2}(\boldsymbol{\xi}_{i})}{\partial \xi_{2}} \\ \frac{\partial L_{3}(\boldsymbol{\xi}_{i})}{\partial \xi_{1}} & \frac{\partial L_{3}(\boldsymbol{\xi}_{i})}{\partial \xi_{2}} \\ \frac{\partial L_{4}(\boldsymbol{\xi}_{i})}{\partial \xi_{1}} & \frac{\partial L_{4}(\boldsymbol{\xi}_{i})}{\partial \xi_{2}} \end{bmatrix}$$

$$(11.48)$$

$$L_{\alpha\beta}(\boldsymbol{\xi}_i) = L_{\alpha B}(\boldsymbol{\xi}_i) S_{\alpha\beta}^{-1}(\boldsymbol{\xi}_i)$$
(11.49)

which is the matrix giving the variation of the shape functions  $L_n$  with respect the the arc-length coordinates:

$$\boldsymbol{L}_{\alpha\beta} = \begin{bmatrix} L_{1,1} & L_{1,2} \\ L_{2,1} & L_{2,2} \\ L_{3,1} & L_{3,2} \\ L_{4,1} & L_{4,2} \end{bmatrix}$$
(11.50)

In order to perform the integration in the isoparametric domain the area element need to be calculated. In particular, the determinant of the Jacobian of the transformation between the physical and the natural domain has to be calculated. It is:

$$\alpha\left(\boldsymbol{\xi}_{i}\right) = \det \boldsymbol{S}_{\alpha\beta}\left(\boldsymbol{\xi}_{i}\right) \qquad \qquad \alpha\left(\boldsymbol{\xi}_{A}\right) = \det \boldsymbol{S}_{\alpha\beta}\left(\boldsymbol{\xi}_{A}\right) \tag{11.51}$$

#### 11.5.3 Enhancing strains interpolation

The virtual variation and increments of the enhancing strains  $\hat{\epsilon}$  are interpolated as:

$$\frac{\delta \hat{\boldsymbol{\epsilon}}}{12 \times 1} (\boldsymbol{\xi}_i) = \underset{12 \times 7}{\boldsymbol{P}} (\boldsymbol{\xi}_i) \frac{\delta \boldsymbol{\beta}}{7 \times 1} \qquad \qquad \Delta \hat{\boldsymbol{\epsilon}} (\boldsymbol{\xi}_i) = \boldsymbol{P} (\boldsymbol{\xi}_i) \Delta \boldsymbol{\beta} \tag{11.52}$$

where  $\beta$  is the vector collecting the the strains parameters, while the expression of the matrix P is derived in the next.

The EAS approach here adopted considers the enhancing of the membrane strains only, i.e.  $\epsilon_{11}$ ,  $\epsilon_{12}$ ,  $\epsilon_{21}$  and  $\epsilon_{22}$ . Shear strains and bending strains are not enhanced.

The interpolation is performed in the natural domain adopting the shape functions:

$$\mathbf{H}(\boldsymbol{\xi}_i) = \begin{bmatrix} \xi_{1i} & \xi_{1i}\xi_{2i} & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & \xi_{2i} & \xi_{1i}\xi_{2i} & 0 & 0 & 0 \\ 0 & 0 & 0 & \xi_{1i} & \xi_{1i}\xi_{2i} & 0 \\ 0 & 0 & 0 & 0 & \xi_{1i} & \xi_{1i}\xi_{2i} & 0 \\ 0 & 0 & 0 & 0 & \xi_{1i}\xi_{2i} & \xi_{2i} \end{bmatrix}$$
(11.53)

The interpolation is reported in the physical domain with a push-forward operation with the transformation matrix  $M_0$ , defined as:

$$\mathbf{M}_{0} = \begin{bmatrix}
s_{1,1}s_{1,1} & s_{1,2}s_{1,2} & s_{1,2}s_{1,1} & s_{1,1}s_{1,2} \\
s_{2,1}s_{2,1} & s_{2,2}s_{2,2} & s_{2,2}s_{2,1} & s_{2,1}s_{2,2} \\
s_{1,1}s_{2,1} & s_{1,2}s_{2,2} & s_{1,1}s_{2,2} & s_{1,2}s_{2,1} \\
s_{1,1}s_{2,1} & s_{1,2}s_{2,2} & s_{1,2}s_{2,1} & s_{1,1}s_{2,2}
\end{bmatrix}$$
(11.54)

where the generic term  $s_{i,k}$  is the element (i,k) of the matrix  $S_{\alpha\beta}(\boldsymbol{\xi}_0)$ .

$$P(\xi_i) = \frac{\alpha(\xi_0)}{\alpha(\xi_i)} P_{12 \times 4} M_0^{-T} H(\xi_i)$$
(11.55)

where  $\mathcal{P}$  is a permutation matrix defined as:

$$\mathcal{P}_{12\times4} = \begin{bmatrix}
1 & 0 & 0 & 0 \\
0 & 0 & 1 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 1 \\
0 & 1 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0
\end{bmatrix}$$
(11.56)

which has the places the enhanced strains in the corresponding positions of the global vector of membrane and bending strains  $\epsilon$ .

#### 11.5.4 Compatible strains interpolation

The virtual variations of the linear deformation  $\tilde{\epsilon}_k$  at the *i*-th integration point is obtained from Eq. 11.24:

$$\delta \tilde{\boldsymbol{\epsilon}}_{k} (\boldsymbol{\xi}_{i}) = \delta \left( \boldsymbol{T} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{y}_{,k} (\boldsymbol{\xi}_{i}) \right) = \sum_{i=1}^{n} \boldsymbol{T} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{y}_{,k} (\boldsymbol{\xi}_{i}) \times \boldsymbol{\Phi}_{n} (\boldsymbol{\xi}_{i}) L_{n} (\boldsymbol{\xi}_{i}) \boldsymbol{\varphi}_{n\delta} + \sum_{i=1}^{n} \boldsymbol{T} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{L}_{\alpha\beta} (\boldsymbol{\xi}_{i}) (n,k) (\boldsymbol{\xi}_{i}) \delta \boldsymbol{y}_{n}$$

$$(11.57)$$

where  $L_{\alpha\beta}(\xi_i)(n,k)$  denotes the element (n,k) of the matrix  $L_{\alpha\beta}(\xi_i)$ .

The virtual variation of the curvatures  $\tilde{\kappa}_k$  at the *i*-th integration point is derived from Eq. 11.26:

$$\delta \tilde{\boldsymbol{\kappa}}_{k} \left(\boldsymbol{\xi}_{i}\right) = \delta \left(\boldsymbol{T}\left(\boldsymbol{\xi}_{i}\right)^{T} \boldsymbol{\kappa}_{k} \left(\boldsymbol{\xi}_{i}\right)\right) = \sum_{i=1}^{n} \boldsymbol{T}\left(\boldsymbol{\xi}_{i}\right)^{T} \boldsymbol{\kappa}_{k} \left(\boldsymbol{\xi}_{i}\right) \times \boldsymbol{\Phi}_{n} \left(\boldsymbol{\xi}_{i}\right) L_{n} \left(\boldsymbol{\xi}_{i}\right) \boldsymbol{\varphi}_{n\delta} + \sum_{i=1}^{n} \boldsymbol{T}\left(\boldsymbol{\xi}_{i}\right)^{T} \boldsymbol{K}_{kn} \left(\boldsymbol{\xi}_{i}\right) \boldsymbol{\varphi}_{n\delta}$$

$$(11.58)$$

where:

$$\Phi_{n}\left(\boldsymbol{\xi}_{i}\right) = \overline{T}\widetilde{\Gamma}\left(\widetilde{\varphi}\left(\boldsymbol{\xi}_{i}\right)\right)\widetilde{\Gamma}_{n}^{-1}\overline{T}^{T} \tag{11.59}$$

and:

$$K_{kn}\left(\boldsymbol{\xi}_{i}\right) = \overline{T}\mathcal{L}\left(\tilde{\boldsymbol{\varphi}}\left(\boldsymbol{\xi}_{i}\right), \tilde{\boldsymbol{\varphi}}_{,k}\left(\boldsymbol{\xi}_{i}\right)\right) \tilde{\boldsymbol{\Gamma}}_{n}^{-1} \overline{T}^{T} L_{n}\left(\boldsymbol{\xi}_{i}\right) + \boldsymbol{\Phi}_{n}\left(\boldsymbol{\xi}_{i}\right) \boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_{i}\right)\left(n,k\right)\left(\boldsymbol{\xi}_{i}\right)$$
(11.60)

The derivative of the the vector  $\tilde{\varphi}$  with respect to the k-th arc-length coordinate can be expressed as function of the nodal values as:

$$\tilde{\varphi}_{,k}\left(\boldsymbol{\xi}_{i}\right) = \sum_{n=1}^{4} \boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_{i}\right)\left(n,k\right)\boldsymbol{\varphi}_{n} \tag{11.61}$$

The curvatures are given by:

$$\kappa_{k}\left(\boldsymbol{\xi}_{i}\right) = \overline{T}\widetilde{\Gamma}\left(\widetilde{\boldsymbol{\varphi}}\left(\boldsymbol{\xi}_{i}\right)\right)\widetilde{\boldsymbol{\varphi}}_{,k}\left(\boldsymbol{\xi}_{i}\right) \tag{11.62}$$

and the derivative of the position vector is:

$$\mathbf{y}_{,k}\left(\boldsymbol{\xi}_{i}\right) = \sum_{i=1}^{4} \mathbf{L}_{\alpha\beta}\left(\boldsymbol{\xi}_{i}\right)\left(n,k\right)\mathbf{y}_{n} \tag{11.63}$$

The compatible strains can so be expressed as function of the nodal variables q by considering Eqs. 11.57 and 11.58:

$$\delta \epsilon = \overline{B} \delta q \tag{11.64}$$

with:

$$\overline{B}_{12\times24}(\xi_i) = [\overline{B}_1(\xi_i) \overline{B}_2(\xi_i) \overline{B}_3(\xi_i) \overline{B}_4(\xi_i)]$$
(11.65)

and:

$$\overline{B}_{n}(\boldsymbol{\xi}_{i}) = \begin{bmatrix}
\boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_{i})(n, 1) & \boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{y}_{,1}(\boldsymbol{\xi}_{i}) \times \boldsymbol{\Phi}_{n}(\boldsymbol{\xi}_{i}) L_{n}(\boldsymbol{\xi}_{i}) \\
\boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_{i})(n, 2) & \boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{y}_{,2}(\boldsymbol{\xi}_{i}) \times \boldsymbol{\Phi}_{n}(\boldsymbol{\xi}_{i}) L_{n}(\boldsymbol{\xi}_{i}) \\
0 & \boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{\kappa}_{1}(\boldsymbol{\xi}_{i}) \times \boldsymbol{\Phi}_{n}(\boldsymbol{\xi}_{i}) L_{n}(\boldsymbol{\xi}_{i}) + \boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{K}_{1n}(\boldsymbol{\xi}_{i}) \\
0 & \boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{\kappa}_{2}(\boldsymbol{\xi}_{i}) \times \boldsymbol{\Phi}_{n}(\boldsymbol{\xi}_{i}) L_{n}(\boldsymbol{\xi}_{i}) + \boldsymbol{T}(\boldsymbol{\xi}_{i})^{T} \boldsymbol{K}_{2n}(\boldsymbol{\xi}_{i})
\end{bmatrix} (11.66)$$

#### 11.5.5 ANS

The ANS technique is applied to prevent shear locking. Here the ANS is applied to shear strains only, i.e.  $\epsilon_1$  and  $\epsilon_2$  The approach consists in interpolating the shear strains in the mid-sides of the element in the natural domain. Such interpolated strains are then used to derive the shear strains at the integration points.

The use of the ANS technique leads a re-definition of:

- ullet the two rows of the  $\overline{B}$  matrix relative to shear strains
- the shear strains

The compatible strains are:

$$\tilde{\epsilon}_1 = \left\{ \begin{array}{c} \epsilon_{11} \\ \epsilon_{12} \\ \epsilon_1 \end{array} \right\}$$

$$\tilde{\epsilon}_2 = \left\{ \begin{array}{c} \epsilon_{21} \\ \epsilon_{22} \\ \epsilon_2 \end{array} \right\}$$

$$(11.67)$$

At first, the compatible strains are evaluated at the shear evaluation points of Figure 11.1. This is done referring to Eq. 11.7

$$\tilde{\boldsymbol{\epsilon}}_{k}\left(\boldsymbol{\xi}_{A}\right) = \boldsymbol{T}\left(\boldsymbol{\xi}_{A}\right)^{T} \boldsymbol{y}_{.k}\left(\boldsymbol{\xi}_{A}\right) - \boldsymbol{e}_{k} \tag{11.68}$$

The matrix  $\overline{B}$  of Eq. 11.65 is built also in the shear evaluation points for the membrane strains only, and is indicated as  $\overline{\overline{B}}$ 

$$\overline{\overline{B}}_{6\times24}(\xi_A) = \left[ \overline{\overline{B}}_1(\xi_A) \quad \overline{\overline{B}}_2(\xi_A) \quad \overline{\overline{B}}_3(\xi_A) \quad \overline{\overline{B}}_4(\xi_A) \right]$$
(11.69)

with:

$$\overline{\overline{B}}_{n}(\boldsymbol{\xi}_{A}) = \begin{bmatrix} \boldsymbol{T}(\boldsymbol{\xi}_{A})^{T} \boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_{A})(n,1) & \boldsymbol{T}(\boldsymbol{\xi}_{A})^{T} \boldsymbol{y}_{,1}(\boldsymbol{\xi}_{A}) \times \boldsymbol{\Phi}_{n}(\boldsymbol{\xi}_{A}) L_{n}(\boldsymbol{\xi}_{A}) \\ \boldsymbol{T}(\boldsymbol{\xi}_{A})^{T} \boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_{A})(n,2) & \boldsymbol{T}(\boldsymbol{\xi}_{A})^{T} \boldsymbol{y}_{,2}(\boldsymbol{\xi}_{A}) \times \boldsymbol{\Phi}_{n}(\boldsymbol{\xi}_{A}) L_{n}(\boldsymbol{\xi}_{A}) \end{bmatrix}$$
(11.70)

The rows relative to the shear strains  $\epsilon_1$  and  $\epsilon_2$  are collected in:

$$\overline{\overline{B3}}(\boldsymbol{\xi}_{A}) = \begin{bmatrix}
\overline{\overline{B}}(\boldsymbol{\xi}_{a})(3,:) \\
\overline{\overline{B}}(\boldsymbol{\xi}_{b})(3,:) \\
\overline{\overline{B}}(\boldsymbol{\xi}_{c})(3,:)
\end{bmatrix}$$

$$\overline{\overline{B6}}(\boldsymbol{\xi}_{A}) = \begin{bmatrix}
\overline{\overline{B}}(\boldsymbol{\xi}_{a})(6,:) \\
\overline{\overline{B}}(\boldsymbol{\xi}_{b})(6,:) \\
\overline{\overline{B}}(\boldsymbol{\xi}_{c})(6,:) \\
\overline{\overline{B}}(\boldsymbol{\xi}_{c})(6,:)
\end{bmatrix}$$
(11.71)

where  $\overline{\overline{B}}(\xi_a)(k,:)$  is used to denote all the element of the k-th row of  $\overline{\overline{B}}(\xi_a)$ .

The matrices  $\overline{B3}$  and  $\overline{B6}$  are interpolated to obtain the values at the integration points.

$$\overline{B3}(\xi_i) = \frac{1}{2} \begin{bmatrix} 1 + \xi_{2i} & 0 & 1 - \xi_{2i} & 0 \end{bmatrix} \overline{\overline{B3}}(\xi_A)$$

$$(11.72)$$

$$\overline{B6}(\boldsymbol{\xi}_i) = \frac{1}{2} \begin{bmatrix} 1 + \boldsymbol{\xi}_{1i} & 0 & 1 - \boldsymbol{\xi}_{1i} & 0 \end{bmatrix} \overline{\overline{B6}}(\boldsymbol{\xi}_A)$$
(11.73)

The resulting matrices  $\overline{B3}$  and  $\overline{B6}$  replace the corresponding rows of the matrix  $\overline{B}$  of Eq. 11.65. The second step in the application of the ANS technique is the interpolation of the shear strains:

$$\epsilon_1(\boldsymbol{\xi}_i) = \frac{1}{2} (1 + \xi_{2i}) \,\epsilon_1(\boldsymbol{\xi}_a) + \frac{1}{2} (1 - \xi_{2i}) \,\epsilon_1(\boldsymbol{\xi}_c)$$
(11.74a)

$$\epsilon_2(\boldsymbol{\xi}_i) = \frac{1}{2} (1 - \xi_{1i}) \,\epsilon_2(\boldsymbol{\xi}_b) + \frac{1}{2} (1 + \xi_{1i}) \,\epsilon_2(\boldsymbol{\xi}_d) \tag{11.74b}$$

The so interpolated strains  $\epsilon_1$  and  $\epsilon_2$  are then inserted into the proper position in the vector  $\epsilon$  respectively.

### 11.5.6 Forces

Strains and curvatures can be calculated as:

$$\tilde{\boldsymbol{\epsilon}}_{k}\left(\boldsymbol{\xi}_{i}\right) = \boldsymbol{T}\left(\boldsymbol{\xi}_{i}\right)^{T}\boldsymbol{y}_{,k}\left(\boldsymbol{\xi}_{i}\right) - \boldsymbol{e}_{k}$$
(11.75)

$$\tilde{\kappa}_{k} = T(\xi_{i})^{T} \kappa_{k}(\xi_{i}) - T_{0}^{T}(\xi_{i}) \kappa_{k}^{0}(\xi_{i})$$
(11.76)

where  $T_0$  and  $\kappa_k^0$  are calculated at the first step.

The total strain is the sum of the compatible and the enhancing strains:

$$\epsilon_t(\xi_i) = \epsilon(\xi_i) + \hat{\epsilon}(\xi_i)$$
 (11.77)

The resulting forces are easily computed by means of the constitutive law:

$$\sigma\left(\xi_{i}\right) = C\left(\xi_{i}\right)\epsilon_{t}\left(\xi_{i}\right) \tag{11.78}$$

which is:

$$\sigma\left(\boldsymbol{\xi}_{i}\right) = \left\{\begin{array}{c} n_{1}\left(\boldsymbol{\xi}_{i}\right) \\ n_{2}\left(\boldsymbol{\xi}_{i}\right) \\ m_{1}\left(\boldsymbol{\xi}_{i}\right) \\ m_{2}\left(\boldsymbol{\xi}_{i}\right) \end{array}\right\}$$

$$(11.79)$$

### 11.5.7 Jacobian matrix

The second variation of the variational principle of Eq. 11.5 gives the Jacobian matrix. In particular, the finite element discretization is here presented for the five different terms of Eq. 11.5.

The first term is:

$$\int_{A} \delta \boldsymbol{\epsilon}^{T} \boldsymbol{C} \Delta \boldsymbol{\epsilon} dA = 
= \delta \boldsymbol{q}^{T} \sum_{i=1}^{4} \overline{\boldsymbol{B}} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{C} (\boldsymbol{\xi}_{i}) \overline{\boldsymbol{B}} (\boldsymbol{\xi}_{i}) \alpha (\boldsymbol{\xi}_{i}) w_{i} \Delta \boldsymbol{q} 
= \delta \boldsymbol{q}^{T} \boldsymbol{K}_{m} \Delta \boldsymbol{q}$$
(11.80)

The second term is:

$$\int_{A} \delta \hat{\boldsymbol{\epsilon}}^{T} \boldsymbol{C} \Delta \boldsymbol{\epsilon} dA = 
= \delta \boldsymbol{\beta}^{T} \sum_{i=1}^{4} \boldsymbol{P} \left( \boldsymbol{\xi}_{i} \right)^{T} \boldsymbol{C} \left( \boldsymbol{\xi}_{i} \right) \overline{\boldsymbol{B}} \left( \boldsymbol{\xi}_{i} \right) \omega \left( \boldsymbol{\xi}_{i} \right) w_{i} \Delta \boldsymbol{q} 
= \delta \boldsymbol{\beta}^{T} \boldsymbol{K}_{\beta a} \Delta \boldsymbol{q}$$
(11.81)

The third term is:

$$\int_{A} \delta \boldsymbol{\epsilon}^{T} \boldsymbol{C} \Delta \hat{\boldsymbol{\epsilon}} dA =$$

$$= \delta \boldsymbol{q}^{T} \boldsymbol{K}_{\beta a}^{T} \Delta \boldsymbol{\beta}$$
(11.82)

The fourth term is:

$$\int_{A} \delta \hat{\boldsymbol{\epsilon}}^{T} \boldsymbol{C} \Delta \hat{\boldsymbol{\epsilon}} dA = 
= \delta \boldsymbol{\beta}^{T} \sum_{i=1}^{4} \boldsymbol{P} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{C} (\boldsymbol{\xi}_{i}) \boldsymbol{P} (\boldsymbol{\xi}_{i}) \alpha (\boldsymbol{\xi}_{i}) w_{i} \Delta \boldsymbol{\beta} 
= \delta \boldsymbol{\beta}^{T} \boldsymbol{K}_{\beta\beta} \Delta \boldsymbol{\beta}$$
(11.83)

The fifth term is:

$$\int_{A} \Delta \delta \boldsymbol{\epsilon}^{T} \boldsymbol{\sigma} dA = 
= \delta \boldsymbol{q}^{T} \sum_{i=1}^{4} \overline{\boldsymbol{D}} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{G} (\boldsymbol{\xi}_{i}) \overline{\boldsymbol{D}} (\boldsymbol{\xi}_{i}) \alpha (\boldsymbol{\xi}_{i}) w_{i} \Delta \boldsymbol{q} 
= \delta \boldsymbol{q}^{T} \boldsymbol{K}_{g} \Delta \boldsymbol{q}$$
(11.84)

where this last expression is obtained starting from Eqs. 11.28 and 11.29, and where:

$$\overline{\overline{D}}(\xi_i) = [\overline{D}_1(\xi_i) \quad \overline{D}_2(\xi_i) \quad \overline{D}_3(\xi_i) \quad \overline{D}_4(\xi_i)]$$
(11.85)

with:

$$\overline{D}_{n}(\xi_{i}) = \begin{bmatrix}
L_{\alpha\beta}(\xi_{i})(n,1)I & 0 \\
L_{\alpha\beta}(\xi_{i})(n,2)I & 0 \\
0 & K_{1n}(\xi_{i}) \\
0 & K_{2n}(\xi_{i})
\end{bmatrix}$$
(11.86)

$$Hh(\xi_{i}) = T(\xi_{i}) n_{1}(\xi_{i}) \otimes y_{,1}(\xi_{i}) - T(\xi_{i}) n_{1} \cdot y_{,1}(\xi_{i}) I +$$

$$+ T(\xi_{i}) n_{2}(\xi_{i}) \otimes y_{,2}(\xi_{i}) - T(\xi_{i}) n_{2} \cdot y_{,2}(\xi_{i}) I +$$

$$+ T(\xi_{i}) m_{1}(\xi_{i}) \otimes \kappa_{1}(\xi_{i}) - T(\xi_{i}) m_{1} \cdot \kappa_{1}(\xi_{i}) I +$$

$$+ T(\xi_{i}) m_{2}(\xi_{i}) \otimes \kappa_{2}(\xi_{i}) - T(\xi_{i}) m_{2} \cdot \kappa_{2}(\xi_{i}) I$$

$$(11.87)$$

## 11.5.8 Residual

The residual comes from the finite element approximation of Eq. 11.2. The first term is:

$$\int_{A} \delta \boldsymbol{\epsilon}^{T} \boldsymbol{\sigma} dA =$$

$$= \delta \boldsymbol{q}^{T} \sum_{i=1}^{4} \overline{\boldsymbol{B}} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{\sigma} (\boldsymbol{\xi}_{i}) \alpha (\boldsymbol{\xi}_{i}) w_{i}$$

$$= \delta \boldsymbol{q}^{T} \boldsymbol{r}_{d} \tag{11.89}$$

The second term is:

$$\int_{A} \delta \hat{\boldsymbol{\epsilon}}^{T} \boldsymbol{\sigma} dA = 
= \delta \boldsymbol{\beta}^{T} \sum_{i=1}^{4} \boldsymbol{P} (\boldsymbol{\xi}_{i})^{T} \boldsymbol{\sigma} (\boldsymbol{\xi}_{i}) \alpha (\boldsymbol{\xi}_{i}) w_{i} 
= \delta \boldsymbol{\beta}^{T} \boldsymbol{r}_{\beta}$$
(11.90)

The resulting governing equations are then:

$$(\mathbf{K}_m + \mathbf{K}_g) \Delta \mathbf{q} + \mathbf{K}_{\beta q}^T \Delta \beta = -\mathbf{r}_d$$
(11.91a)

$$K_{\beta q} \Delta q + K_{\beta \beta} \Delta \beta = -r_{\beta} \tag{11.91b}$$

# Chapter 12

# Solid Element

Author: Reinhard Resch

Solid elements are intended to model general three dimensional structures with complex shapes, subject to large deformations, large strain and nonlinear constitutive laws. Even fully incompressible constitutive laws are supported.

Files. It is implemented in files mbdyn/struct/solid.h mbdyn/struct/solid.cc mbdyn/struct/solidshape.h mbdyn/struct/solidshape.cc mbdyn/struct/solidshapetest.cc mbdyn/struct/solidinteg.h mbdyn/struct/solidinteg.cc mbdyn/struct/solidpress.h mbdyn/struct/solidpress.cc mbdyn/struct/solidcsl.cc mbdyn/struct/solidcsl.cc

#### 12.0.1 Kinematics

MBDyn's solid elements are based on the classical displacement based isoparametric Finite Element formulation [?]. For enhancements, required for nearly or fully incompressible constitutive laws, see section 12.0.4.

**Interpolation** The three dimensional global Cartesian coordinates x and the displacements  $u = x - {}^{0}x$ , of a particle inside an element, are interpolated between coordinates  $\hat{x}$  and displacements  $\hat{u}$  at element

nodes by means of shape functions h = f(r) [?], [?].

$$\boldsymbol{u}_i = \sum_{k=1}^{N_n} \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_k \tag{12.1}$$

$$\boldsymbol{x}_{i} = \sum_{k=1}^{N_{n}} \hat{\boldsymbol{x}}_{ik} \, \boldsymbol{h}_{k} \tag{12.2}$$

$$\boldsymbol{u} = \begin{pmatrix} \boldsymbol{u}_1 & \boldsymbol{u}_2 & \boldsymbol{u}_3 \end{pmatrix}^T \tag{12.3}$$

$$\boldsymbol{x} = \begin{pmatrix} \boldsymbol{x}_1 & \boldsymbol{x}_2 & \boldsymbol{x}_3 \end{pmatrix}^T \tag{12.4}$$

$$\boldsymbol{r} = \begin{pmatrix} \boldsymbol{r}_1 & \boldsymbol{r}_2 & \boldsymbol{r}_3 \end{pmatrix}^T \tag{12.5}$$

$$\hat{\boldsymbol{u}} = \begin{pmatrix} \hat{\boldsymbol{u}}_{1,1} & \hat{\boldsymbol{u}}_{1,2} & \dots & \hat{\boldsymbol{u}}_{1,N_n} \\ \hat{\boldsymbol{u}}_{2,1} & \hat{\boldsymbol{u}}_{2,2} & \dots & \hat{\boldsymbol{u}}_{2,N_n} \\ \hat{\boldsymbol{u}}_{3,1} & \hat{\boldsymbol{u}}_{2,2} & \dots & \hat{\boldsymbol{u}}_{3,N_n} \end{pmatrix}$$

$$(12.6)$$

$$\boldsymbol{h} = \begin{pmatrix} \boldsymbol{h}_1 & \boldsymbol{h}_2 & \dots & \boldsymbol{h}_{N_n} \end{pmatrix}^T \tag{12.7}$$

x = f(r) global Cartesian coordinates of a particle inside the deformed body

 ${}^{0}x = f(r)$  global Cartesian coordinates of a particle inside the undeformed body

 $\boldsymbol{u} = \boldsymbol{x} - {}^{0}\boldsymbol{x}$  deformation of a particle within the body

r curvilinear natural coordinates of a particle within the body

h = f(r) shape functions of a particular Finite Element type

 $N_n$  number of nodes per element

Shape functions All solid elements in MBDyn are based on templates and are using standard shape functions based on [?], [?] and [?]. In order to implement a new solid element type in MBDyn, it is sufficient to provide a new C++ class which defines it's shape functions  $\boldsymbol{h}$ , derivatives of the shape functions versus the natural coordinates  $\boldsymbol{h}_d = \frac{\partial \boldsymbol{h}}{\partial \boldsymbol{r}}$  and also the integration points  $\boldsymbol{r}|_g$  and weights  $\alpha|_g$ . The following types of elements are currently implemented:

- Hexahedrons with linear and quadratic shape functions [?], [?]
- Pentahedrons with quadratic shape functions [?]
- Tetrahedrons with quadratic shape functions [?]

See also MBDyn's *input-manual* for further information.

**Deformation gradient** Because MBDyn's solid elements are based on a Total Lagrangian Formulation, the deformation gradient F is evaluated with respect to the undeformed state  ${}^{0}x$ . As a consequence, the

Jacobian matrix  ${}^{0}\boldsymbol{J}$  and the gradient operator  $\boldsymbol{h}_{0d}$  are constant.

$${}^{0}\boldsymbol{J}_{ij} = \frac{\partial^{0}\boldsymbol{x}_{j}}{\partial\boldsymbol{r}_{i}} = \sum_{k=1}^{N_{n}} {}^{0}\hat{\boldsymbol{x}}_{jk} \underbrace{\frac{\partial\boldsymbol{h}_{k}}{\partial\boldsymbol{r}_{i}}}_{\boldsymbol{h}_{d}} = \left({}^{0}\boldsymbol{x}\,\boldsymbol{h}_{d}\right)^{T}$$
(12.8)

$${0 J^{-1}}_{ij} = \frac{\partial r_j}{\partial^0 x_i}$$
(12.9)

$$\mathbf{F}_{ij} = \frac{\partial \mathbf{x}_i}{\partial^0 \mathbf{x}_j} = \delta_{ij} + \frac{\partial \mathbf{u}_i}{\partial^0 \mathbf{x}_j} = \delta_{ij} + \sum_{k=1}^{N_n} \hat{\mathbf{u}}_{ik} \underbrace{\frac{\partial \mathbf{h}_k}{\partial^0 \mathbf{x}_j}}_{\mathbf{h}_{ki}}$$
(12.10)

$$\dot{F}_{ij} = \sum_{k=1}^{N_n} \dot{\hat{u}}_{ik} \, h_{0d_{kj}} \tag{12.11}$$

$$\boldsymbol{h}_{0d_{ij}} = \frac{\partial \boldsymbol{h}_i}{\partial^0 \boldsymbol{x}_j} = \sum_{k=1}^3 \frac{\partial \boldsymbol{h}_i}{\partial \boldsymbol{r}_k} \frac{\partial \boldsymbol{r}_k}{\partial^0 \boldsymbol{x}_j} = \left\{ \boldsymbol{h}_d^{\ 0} \boldsymbol{J}^{-T} \right\}_{ij}$$
(12.12)

$$\delta_{ij} = \begin{cases} 1 & \text{if } i = j \\ 0 & \text{if } i \neq j \end{cases}$$
 (12.13)

 $\boldsymbol{F}$  deformation gradient

 ${}^{0}\boldsymbol{J}$  Jacobian matrix  $\det \left( {}^{0}\boldsymbol{J} \right) > 0$ 

 $m{h}_{0d} = rac{\partial m{h}}{\partial^0 m{x}}$  derivative of shape functions versus global Cartesian coordinates

 $m{h}_d = rac{\partial m{h}}{\partial m{r}}$  derivative of shape functions versus natural coordinates

 $\delta_{ij}$  Kronecker delta

If elements become excessively distorted It is required that the deformation gradient F and the Jacobian matrix  ${}^{0}J$  are always invertible [?], [?]. For that reason  $\det(F) > 0$  will be checked by the solver at every iteration, and  $\det({}^{0}J) > 0$  will be checked once, when the mesh is loaded. An exception will be thrown by the solver, if any element becomes excessively distorted and those conditions are not valid any more.

Strain tensor and stress tensor In order to derive the expressions for virtual strain energy, the Green-Lagrange strain tensor G and the 2nd Piola-Kirchhoff stress tensor S are used. It is important to note, that the 2nd Piola-Kirchhoff stress tensor is work conjugate with the Green-Lagrange strain tensor [?], [?], [?]. Since MBDyn's solid element is pure displacement based, the stress tensor S is a function of the strain tensor G and optionally it's time derivative G and the strain history. In case of viscoelastic constitutive laws, the strain rates G are scaled according to equation 12.17 in order to make the effect

of viscous damping independent on the strain [?].

$$C_{ij} = \sum_{k=1}^{3} \mathbf{F}_{ki} \mathbf{F}_{kj} \tag{12.14}$$

$$G_{ij} = \frac{1}{2} (C_{ij} - \delta_{ij}) = \frac{1}{2} \left( \sum_{k=1}^{3} F_{ki} F_{kj} - \delta_{ij} \right)$$
 (12.15)

$$\dot{G}_{ij} = \frac{1}{2} \left[ \sum_{k=1}^{3} \left( \dot{F}_{ki} \, F_{kj} + F_{ki} \, \dot{F}_{kj} \right) \right]$$
(12.16)

$$\dot{\mathbf{G}}^{\star} = \mathbf{C}^{-1} \dot{\mathbf{G}} \mathbf{C}^{-1} \det(\mathbf{F}) \tag{12.17}$$

$$S = f\left(G, \dot{G}^{\star}\right) \tag{12.18}$$

 ${m C}$  Right Cauchy-Green strain tensor

 $\boldsymbol{G}$  Green-Lagrange strain tensor

 $\dot{G}^{\star}$  scaled Green-Lagrange strain rates

 ${m S}$  2nd Piola-Kirchhoff stress tensor

Constitutive laws The relationship between stress tensor S and strain tensor G is determined by a specific constitutive law. Right now, the following types of constitutive laws are implemented:

- linear elastic generic (isotropic or anisotropic)
- linear Kelvin-Voigt viscoelastic generic (isotropic or anisotropic) [?]
- Hookean linear elastic isotropic
- Hookean linear Kelvin-Voigt viscoelastic isotropic
- linear viscoelastic generalized Maxwell (isotropic or anisotropic) [?]
- nonlinear hyperelastic Neo-Hookean [?]
- nonlinear Kelvin-Voigt viscoelastic Neo-Hookean [?]
- nonlinear hyperelastic Mooney-Rivlin [?]
- bilinear elasto-plastic with isotropic hardening [?]

See MBDyn's input-manual for further information about constitutive laws usable for solid elements.

## 12.0.2 The principle of virtual displacements

The equations of motion for displacement based Finite Element methods can be derived from the principle of virtual displacements [?], [?], [?].

$$\underbrace{\bigcup_{e=1}^{N_e} \int_{^{0}V} ^{0} \rho \left[ \sum_{i=1}^{3} \delta \boldsymbol{u}_{i} \left( \ddot{\boldsymbol{u}}_{i} - \boldsymbol{b}_{i} \right) \right] d^{0}V}_{\delta^{m}W} + \underbrace{\bigcup_{e=1}^{N_e} \int_{^{0}V} \left( \sum_{i=1}^{3} \sum_{j=1}^{3} \delta \boldsymbol{G}_{ij} \, \boldsymbol{S}_{ij} \right) d^{0}V}_{\delta^{i}W} \\
= \underbrace{\bigcup_{e=1}^{N_e} \int_{A} \sum_{i=1}^{3} \delta \boldsymbol{u}_{i} \,^{A} \boldsymbol{f}_{i} \, dA}_{\delta^{e}W} \tag{12.19}$$

 $^{0}\rho$  Density of the undeformed body

 $^{0}V$  Volume of the undeformed body

 $\boldsymbol{b}$  Body loads due to gravity and rigid body kinematics

 $^{A}f$  Surface loads due to pressure and surface traction's

 $^{m}W$  Virtual work of body loads (e.g. inertia terms and gravity loads)

<sup>i</sup>W Internal virtual work (e.g. virtual strain energy)

 $^{e}W$  External virtual work (e.g. due to surface loads  $^{A}f$ )

 $N_e$  Number of solid elements

U Summation over all elements

### 12.0.3 Virtual strain energy

In order to get the expression for the internal force vector at the element nodes  $\hat{k}$ , the following equivalence is used:

$$\delta^{i}W = \bigcup_{e=1}^{N_{e}} \int_{0V} \left( \sum_{i=1}^{3} \sum_{j=1}^{3} \delta \mathbf{G}_{ij} \, \mathbf{S}_{ij} \right) d^{0}V = \bigcup_{e=1}^{N_{e}} \sum_{k=1}^{3} \sum_{l=1}^{N_{n}} \delta \hat{\mathbf{u}}_{kl} \,^{i} \hat{\mathbf{k}}_{kl}$$
(12.20)

Virtual perturbation of the strain tensor As a first step, the virtual perturbation of the strain tensor  $\delta G$  must be expressed in terms of the vector of virtual nodal displacements  $\delta \hat{u}$ . For that purpose, the virtual perturbation of equation 12.15 must be derived.

$$\delta \mathbf{G}_{ij} = \frac{1}{2} \sum_{k=1}^{3} \left( \delta \mathbf{F}_{ki} \, \mathbf{F}_{kj} + \mathbf{F}_{ki} \, \delta \mathbf{F}_{kj} \right) \tag{12.21}$$

Virtual perturbation of the deformation gradient  $\delta F$  In the same way, the virtual perturbation of equation 12.10 is derived. Since we are using a Total Lagrangian Formulation,  $h_{0d}$  is a constant matrix.

$$\delta \mathbf{F}_{ij} = \sum_{k=1}^{N_n} \delta \hat{\mathbf{u}}_{ik} \, \mathbf{h}_{0d_{kj}} \tag{12.22}$$

Virtual perturbation of the strain tensor expressed by virtual displacements  $\delta \hat{u}$  Now equation 12.22 is substituted into equation 12.21.

$$\delta G_{ij} = \frac{1}{2} \sum_{k=1}^{3} \sum_{l=1}^{N_n} \delta \hat{\mathbf{u}}_{kl} \left( \mathbf{h}_{0d_{li}} \, \mathbf{F}_{kj} + \mathbf{h}_{0d_{lj}} \, \mathbf{F}_{ki} \right)$$
(12.23)

Virtual strain energy expressed by virtual displacements  $\delta \hat{u}$  Finally equation 12.23 is substituted into equation 12.20.

$$\delta^{i}W = \frac{1}{2} \bigcup_{e=1}^{N_{e}} \int_{0_{V}} \left[ \sum_{i=1}^{3} \sum_{j=1}^{3} \sum_{k=1}^{3} \sum_{l=1}^{N_{n}} \delta \hat{\boldsymbol{u}}_{kl} \left( \boldsymbol{h}_{0d_{li}} \, \boldsymbol{F}_{kj} + \boldsymbol{h}_{0d_{lj}} \, \boldsymbol{F}_{ki} \right) \, \boldsymbol{S}_{ij} \right] d^{0}V$$
(12.24)

Internal elastic reactions due to internal stress Because equation 12.24 and equation 12.20 must be valid for arbitrary virtual displacements  $\delta \hat{u}$ , we can get  $^{i}\hat{k}$  just by comparing the coefficients of those two equations.

$${}^{i}\hat{\mathbf{k}}_{kl} = \frac{1}{2} \int_{0_{V}} \left[ \sum_{i=1}^{3} \sum_{j=1}^{3} \left( \mathbf{h}_{0d_{li}} \mathbf{F}_{kj} + \mathbf{h}_{0d_{lj}} \mathbf{F}_{ki} \right) \mathbf{S}_{ij} \right] d^{0}V$$
 (12.25)

Numerical integration Finally standard numerical integration schemes (e.g. Gauss-Legendre) are applied, which sum up the weighted integrand at several integration points [?], [?]. Also in this case the values of  $\det ({}^{0}J)$  for each integration point g are constant with respect to time, because a Total Lagrangian Formulation is used.

$${}^{i}\hat{\boldsymbol{k}}_{kl} \approx \frac{1}{2} \sum_{g=1}^{N_g} \left[ \sum_{i=1}^{3} \sum_{j=1}^{3} \left( \boldsymbol{h}_{0d_{li}} \boldsymbol{F}_{kj} + \boldsymbol{h}_{0d_{lj}} \boldsymbol{F}_{ki} \right) \boldsymbol{S}_{ij} \alpha \det \begin{pmatrix} 0 \boldsymbol{J} \end{pmatrix} \right]_q$$

$$(12.26)$$

 $\alpha$  Weighting factor

 $N_g$  Number of integration points

 $|_{g}$  Expression is evaluated at integration point g

## 12.0.4 Displacement/Pressure (u/p-c) formulation

In case of nearly incompressible constitutive laws, pure displacement based formulations are not effective. For that reason, it is necessary to introduce the hydrostatic pressure  $\tilde{p}$  as an additional unknown. For a detailed discussion see also [?] section 4.4.3. In order to derive the u/p-c formulation for large displacements, the following modified strain energy potential per unit volume is assumed for isotropic materials [?]:

$${}^{i}\mathbb{W} = {}^{i}\bar{\mathbb{W}} - \frac{1}{2\kappa}(\bar{p} - \tilde{p})^{2} \tag{12.27}$$

See also [?] section 6.4.1, equation 6.136.

Strain energy potential per unit volume Within this section, iW denotes strain energy potential per unit volume, whereas iW denotes overall strain energy potential. They are related as follows:

$${}^{i}W = \bigcup_{e=1}^{N_e} \int_{{}^{0}V} {}^{i}\mathbb{W} \, d^{0}V \tag{12.28}$$

<sup>i</sup>W modified strain energy potential for the u/p-c formulation

 $i\bar{W}$  strain energy potential for the pure displacement based formulation which is equal to equation 12.20

 $^i\mathbb{W}$  modified strain energy potential per unit volume for the u/p-c formulation

 $^i\bar{\mathbb{W}}$  strain energy potential per unit volume for the pure displacement based formulation equivalent to equation 12.20

 $\bar{p}$  hydrostatic pressure obtained from the pure displacement based formulation

 $\tilde{p}$  hydrostatic pressure interpolated from the element nodes

 $\kappa$  bulk modulus of the material

In order to enhance the principle of virtual-displacements equation 12.19, the virtual perturbation of the modified strain-energy potential iW is derived with respect to the new unknowns (displacement  $\hat{u}$  and hydrostatic pressure  $\hat{p}$  at element nodes). This is equivalent to the application of the "Hu-Washizu" variational-principle. See also [?] section 4.4.3.

$$\delta^{i} \mathbb{W} = \delta^{i} \overline{\mathbb{W}} - \frac{1}{\kappa} (\bar{p} - \tilde{p}) (\delta \bar{p} - \delta \tilde{p})$$
(12.29)

As a next step, the virtual perturbations of the hydrostatic pressure  $\bar{p}$  and  $\tilde{p}$  are derived.

$$\delta \bar{p} = \sum_{i=1}^{3} \sum_{j=1}^{3} \frac{\partial \bar{p}}{\partial \mathbf{G}_{ij}} \delta \mathbf{G}_{ij}$$
(12.30)

$$\delta \tilde{p} = \sum_{i=1}^{N_p} \frac{\partial \tilde{p}}{\partial \hat{p}_i} \delta \hat{p}_i \tag{12.31}$$

 $N_p$  number element nodes for hydrostatic pressure

The displacement based hydrostatic pressure  $\bar{p}$  is depending only on the strain tensor G whereas the hydrostatic pressure  $\tilde{p}$  is depending only on the assumed hydrostatic pressure at element nodes  $\hat{p}$ .

**Reformulation in terms of the modified stress tensor** In the following step, equation 12.30 and equation 12.31 are substituted into equation 12.29.

$$\delta^{i} \mathbb{W} = \delta^{i} \overline{\mathbb{W}} - \frac{1}{\kappa} (\bar{p} - \tilde{p}) \left( \sum_{i=1}^{3} \sum_{j=1}^{3} \frac{\partial \bar{p}}{\partial G_{ij}} \delta G_{ij} - \sum_{i=1}^{N_{p}} \frac{\partial \tilde{p}}{\partial \hat{p}_{i}} \delta \hat{p}_{i} \right)$$
(12.32)

Furthermore we can use the expression for the virtual perturbation of the displacement based strain energy from equation 12.20. Within this section,  $\bar{S}$  denotes the displacement based stress tensor and S denotes the modified stress tensor.

$$\delta^{i}\bar{\mathbb{W}} = \sum_{i=1}^{3} \sum_{j=1}^{3} \delta G_{ij} \bar{S}_{ij}$$

$$(12.33)$$

When comparing equation 12.32 to equation 12.33, it is obvious that the modified stress tensor S may be defined as:

$$S_{ij} = \bar{S}_{ij} - \frac{1}{\kappa} (\bar{p} - \tilde{p}) \frac{\partial \bar{p}}{\partial G_{ij}}$$
(12.34)

The derivation of equation 12.34 is specific to a particular type of constitutive law. At the moment, the following types of constitutive laws area available for u/p-c formulations:

- Hookean linear elastic isotropic
- nonlinear hyperelastic Mooney-Rivlin
- bilinear-elastoplastic with isotropic hardening

Since the modified stress tensor is depending not only on the strain tensor G, but also on the hydrostatic pressure  $\tilde{p}$ , specialized types of constitutive laws are required. Furthermore, it is required that those constitutive laws must return also the condition of volumetric compatibility  $\frac{1}{\kappa}$  ( $\bar{p} - \tilde{p}$ ). See also MBDyn's input-manual for further information about constitutive laws usable for solid elements based on u/p-c formulations.

Using the modified stress tensor and the condition of volumetric compatibility Now equation 12.34 and equation 12.33 are substituted into equation 12.32.

$$\delta^{i} \mathbb{W} = \sum_{i=1}^{3} \sum_{j=1}^{3} \delta G_{ij} S_{ij} + \frac{1}{\kappa} (\bar{p} - \tilde{p}) \sum_{i=1}^{N_{p}} \frac{\partial \tilde{p}}{\partial \hat{p}_{i}} \delta \hat{p}_{i}$$
(12.35)

Since we are using isoparametric shape functions g in order to interpolate the hydrostatic pressure  $\tilde{p}$ , the following simplification can be applied:

$$\tilde{p} = \sum_{i=1}^{N_p} g_i \, \hat{p}_i \tag{12.36}$$

$$\frac{\partial \tilde{p}}{\partial \hat{p}_i} = g_i \tag{12.37}$$

If the order of interpolation for the hydrostatic pressure  $\hat{p}$  is too high compared to the order of interpolation for displacements  $\hat{u}$ , then the resulting element may behave like an displacement based element which will not be effective [?]. So, a lower order of interpolation is used for the hydrostatic pressure in MBDyn. For example, linear elements are using a constant hydrostatic pressure, whereas quadratic elements are using a linear interpolation of the hydrostatic pressure based on the pressure at corner nodes. See also MBDyn's *input-manual* for further information about the node layout.

**Integration over the volume of all elements** In the next step, we integrate the virtual perturbation of the modified strain energy over the element volume, and sum up the contributions of all the elements.

$$\delta^{i}W = \bigcup_{e=1}^{N_e} \int_{0_V} \delta^{i} \mathbb{W} d^{0}V$$
 (12.38)

Finally we can substitute equation 12.35 into equation 12.38.

$$\delta^{i}W = \bigcup_{e=1}^{N_{e}} \int_{0}^{N_{e}} \sum_{i=1}^{3} \sum_{i=1}^{3} \delta G_{ij} S_{ij} d^{0}V + \bigcup_{e=1}^{N_{e}} \int_{0}^{N_{e}} \frac{1}{\kappa} (\bar{p} - \tilde{p}) \sum_{i=1}^{N_{p}} g_{i} \delta \hat{p}_{i} d^{0}V$$
(12.39)

In the end, we can use the same formula for the internal force vector  ${}^{i}\hat{k}$  as equation 12.25, just by replacing the displacement based stress tensor  $\bar{S}$  by the modified stress tensor S. In addition to that, equation 12.41 is required, which represents the weak form of the condition of volumetric compatibility.

$${}^{i}\hat{\mathbf{k}}_{kl} = \frac{1}{2} \int_{0V} \left[ \sum_{i=1}^{3} \sum_{j=1}^{3} \left( \mathbf{h}_{0d_{li}} \, \mathbf{F}_{kj} + \mathbf{h}_{0d_{lj}} \, \mathbf{F}_{ki} \right) \, \mathbf{S}_{ij} \right] d^{0}V$$
 (12.40)

$$\hat{\boldsymbol{c}}_{i} = \int_{0V} \frac{1}{\kappa} (\bar{p} - \tilde{p}) \, \boldsymbol{g}_{i} \, d^{0}V \tag{12.41}$$

$$\delta^{i}W = \bigcup_{e=1}^{N_{e}} \sum_{k=1}^{3} \sum_{l=1}^{N_{n}} \delta \hat{\mathbf{u}}_{kl} \,^{i} \hat{\mathbf{k}}_{kl} + \bigcup_{e=1}^{N_{e}} \sum_{i=1}^{N_{p}} \delta \hat{\mathbf{p}}_{i} \, \hat{\mathbf{c}}_{i}$$
(12.42)

Those expressions will be used in order to formulate the global equations of motion 12.54 and 12.55 in section 12.0.6.

#### 12.0.5 Virtual work of inertia terms and body loads

Also accelerations  $\ddot{\hat{u}}$  and virtual displacements  $\delta \hat{u}$  are interpolated by the same shape functions h.

$$\delta^{m}W = \bigcup_{e=1}^{N_{e}} \int_{0}^{N_{e}} \sum_{i=1}^{3} {}^{0}\rho \, \delta \boldsymbol{u}_{i} \, (\ddot{\boldsymbol{u}}_{i} - \boldsymbol{b}_{i}) \, d^{0}V$$
 (12.43)

$$\delta \boldsymbol{u}_i = \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_k \tag{12.44}$$

$$\ddot{\boldsymbol{u}}_i = \sum_{k=1}^{N_n} \ddot{\tilde{\boldsymbol{u}}}_{ik} \, \boldsymbol{h}_k \tag{12.45}$$

**Body loads** In MBDyn, body loads due to gravity g and rigid body kinematics are considered. See also section 8.1.6. As a consequence, solid elements may be used also for typical rotor-dynamic analysis.

$$\boldsymbol{b} = \boldsymbol{g} - \ddot{\overline{\boldsymbol{x}}}_0 - \overline{\boldsymbol{\omega}}_0 \times (\overline{\boldsymbol{\omega}}_0 \times \boldsymbol{x}) - \dot{\overline{\boldsymbol{\omega}}}_0 \times \boldsymbol{x} \underbrace{-2\,\overline{\boldsymbol{\omega}}_0 \times \dot{\boldsymbol{u}}}_{a_r}$$

$$(12.46)$$

g Gravity.

 $\ddot{\overline{x}}_0$  Acceleration of the global reference frame.

 $\overline{\omega}_0$  Angular velocity of the global reference frame.

 $\dot{\overline{\omega}}_0$  Angular acceleration of the global reference frame.

 $a_c$  Acceleration of Coriolis (contributed by the "AutomaticStructDispElem" element)

Mass matrix and body load vector When equation 12.44 and equation 12.45 are substituted into equation 12.43, the virtual work  $\delta^m W$  can be written in terms of the consistent mass matrix M and body load vector  ${}^b\hat{f}$ . Because of the isoparametric approach, the consistent mass matrix M is constant with respect to time and needs to be evaluated only once [?], [?]. In contradiction to that, the actual magnitudes of

**b** and  ${}^b\hat{f}$  may be time dependent.

$$\hat{\boldsymbol{M}}_{kl} = \int_{{}^{0}\boldsymbol{V}} {}^{0}\boldsymbol{\rho}\,\boldsymbol{h}_{k}\,\boldsymbol{h}_{l}\,d^{0}\boldsymbol{V} \approx \sum_{g=1}^{N_{g}} \left[ {}^{0}\boldsymbol{\rho}\,\boldsymbol{h}_{k}\,\boldsymbol{h}_{l}\,\alpha\,\det\left( {}^{0}\boldsymbol{J}\right) \right] \big|_{g}$$
(12.47)

$${}^{b}\hat{\mathbf{f}}_{ik} = \int_{{}^{0}V} {}^{0}\rho \,\mathbf{h}_{k} \,\mathbf{b}_{i} \,d^{0}V \approx \sum_{g=1}^{N_{g}} \left[ {}^{0}\rho \,\mathbf{h}_{k} \,\mathbf{b}_{i} \,\alpha \,\det\left( {}^{0}\boldsymbol{J}\right) \right] \Big|_{g}$$

$$(12.48)$$

$$\delta^{m}W = \bigcup_{e=1}^{N_{e}} \left( \sum_{i=1}^{3} \sum_{k=1}^{N_{n}} \sum_{l=1}^{N_{n}} \delta \hat{\boldsymbol{u}}_{ik} \, \ddot{\hat{\boldsymbol{u}}}_{il} \, \hat{\boldsymbol{M}}_{kl} - \sum_{i=1}^{3} \sum_{k=1}^{N_{n}} \delta \hat{\boldsymbol{u}}_{ik} \, {}^{b} \hat{\boldsymbol{f}}_{ik} \right) = \bigcup_{e=1}^{N_{e}} \delta \hat{\boldsymbol{u}}^{T} \, \left( \boldsymbol{M} \, \ddot{\hat{\boldsymbol{u}}} - {}^{b} \hat{\boldsymbol{f}} \right)$$
(12.49)

 $\hat{M}$   $N_n \times N_n$  element mass matrix in compact storage

M  $3N_n \times 3N_n$  element mass matrix in redundant storage (e.g.  $M_{iijk} = \hat{M}_{jk}$ )

 ${}^{b}\hat{f}$  Element body load vector

**Lumped mass matrix** In addition to a consistent mass matrix, also a lumped mass matrix can be used in MBDyn. For that purpose, the diagonal of the consistent mass matrix is scaled, so that the overall mass is conserved.

$$\hat{M}_{kk}^{\star} = \int_{{}^{0}V} {}^{0}\rho \, \boldsymbol{h}_{k}^{2} \, d^{0}V \approx \sum_{g=1}^{N_{g}} \left[ {}^{0}\rho \, \boldsymbol{h}_{k}^{2} \, \alpha \, \det \left( {}^{0}\boldsymbol{J} \right) \right] \Big|_{g}$$

$$(12.50)$$

$$\hat{M}_{kk} = \hat{M}_{kk}^{\star} \frac{m}{\sum_{k=1}^{N_n} \hat{M}_{kk}^{\star}}$$
 (12.51)

$$m = \int_{{}^{0}V} {}^{0}\rho \, d^{0}V \approx \sum_{g=1}^{N_{g}} \left[ {}^{0}\rho \, \alpha \, \det \left( {}^{0}J \right) \right] \Big|_{g}$$
 (12.52)

If a lumped mass matrix is used, the virtual work of the inertia terms becomes:

$$\delta^{m}W = \bigcup_{e=1}^{N_{e}} \left( \sum_{i=1}^{3} \sum_{k=1}^{N_{n}} \delta \hat{\mathbf{u}}_{ik} \, \dot{\hat{\mathbf{u}}}_{ik} \, \hat{\mathbf{M}}_{kk} - \sum_{i=1}^{3} \sum_{k=1}^{N_{n}} \delta \hat{\mathbf{u}}_{ik} \, {}^{b} \hat{\mathbf{f}}_{ik} \right)$$
(12.53)

#### 12.0.6 Reformulation of inertia terms required for a first order DAE solver

The principle of virtual displacements equation 12.19 leads to the following system of second order ordinary differential equations.

$$\bigcup_{e=1}^{N_e} \left( M \ddot{\hat{u}} + {}^{i}\hat{k} - {}^{b}\hat{f} - {}^{e}\hat{f} \right) = \mathbf{0}$$
 (12.54)

The special case of u/p-c formulations In case of an u/p-c formulation, an additional set of algebraic equations 12.41 is required in order to determine the hydrostatic pressure  $\hat{p}$ .

$$\bigcup_{e=1}^{N_e} \hat{c} = \mathbf{0} \tag{12.55}$$

As a consequence, the whole system of equations becomes Differential Algebraic, even if it is unconstrained.

Implementation issues in MBDyn Since MBDyn does not use accelerations for the solution of equations of motion, a reformulation of the equations of motion is required for solid elements. It is required also because rigid bodies might be present in the same model, and those rigid bodies might share common nodes with solid elements. So, equation 12.54 cannot be implemented directly.

Introducing the momentum Since the mass matrix M is constant with respect to time, equation 12.54 can be easily reformulated as a system of two first order ODE's using the momentum  $\hat{\beta}$  as a new unknown. This approach is strictly consistent with MBDyn's conventions for rigid bodies.

$$\hat{\boldsymbol{\beta}} = \boldsymbol{M} \, \dot{\hat{\boldsymbol{u}}} \tag{12.56}$$

$$\dot{\hat{\beta}} = M \ddot{\hat{u}} \tag{12.57}$$

 $\hat{\boldsymbol{\beta}}$  Momentum at element nodes

With equation 12.56 and equation 12.57 the global system of equations is formulated as:

$$\bigcup_{e=1}^{N_e} \left( \hat{\beta} - M \, \dot{\hat{u}} \right) = \mathbf{0} \tag{12.58}$$

$$\bigcup_{e=1}^{N_e} \left( \hat{\boldsymbol{\beta}} - \boldsymbol{M} \, \hat{\boldsymbol{u}} \right) = \boldsymbol{0}$$

$$- \bigcup_{e=1}^{N_e} \left( \dot{\hat{\boldsymbol{\beta}}} + {}^{i} \hat{\boldsymbol{k}} - {}^{b} \hat{\boldsymbol{f}} - {}^{e} \hat{\boldsymbol{f}} \right) = \boldsymbol{0}$$
(12.58)

$$-\bigcup_{c=1}^{N_e} \hat{\boldsymbol{c}} = \boldsymbol{0} \tag{12.60}$$

In equation 12.58 to 12.60, MBDyn's sign conventions are applied in order to ensure compatibility with other elements. Equation 12.60 is present only in case of u/p-c based formulations.

**Limitations** The only remaining limitation of this approach is, that it is not possible to compute accelerations for a model using solid elements, unless a lumped mass matrix is used for all solid elements in the model. See the MBDyn's input-manual for further information on how to activate a lumped mass matrix instead of a consistent mass matrix.

#### 12.0.7Elements for surface loads

In order to apply surface loads at solid elements, dedicated surface elements are required. Basically the same isoparametric approach known from section 12.0.1 is applied also to surface elements. Instead of the determinant of the Jacobian matrix, equation 12.63 is used to transform infinitesimal surface areas between natural curvilinear coordinates r and global Cartesian coordinates x.

$$x_i = \sum_{k=1}^{N_n} h_k \, \hat{x}_{ik} \tag{12.61}$$

$$\boldsymbol{u}_{i} = \sum_{k=1}^{N_{n}} \boldsymbol{h}_{k} \, \hat{\boldsymbol{u}}_{ik} \tag{12.62}$$

$$dA = \left\| \frac{\partial \mathbf{x}}{\partial \mathbf{r}_1} \times \frac{\partial \mathbf{x}}{\partial \mathbf{r}_2} \right\| d\mathbf{r}_1 d\mathbf{r}_2 \tag{12.63}$$

$$\frac{\partial x_i}{\partial r_1} = \sum_{k=1}^{N_n} \frac{\partial h_k}{\partial r_1} \hat{x}_i \tag{12.64}$$

$$\frac{\partial x_i}{\partial r_2} = \sum_{k=1}^{N_n} \frac{\partial h_k}{\partial r_2} \hat{x}_i \tag{12.65}$$

$$\boldsymbol{r} = \begin{pmatrix} \boldsymbol{r}_1 & \boldsymbol{r}_2 \end{pmatrix}^T \tag{12.66}$$

**Shape functions** Also surface elements are based on C++ templates in order to simplify the implementation of new element types. The following types of elements are currently implemented:

- Quadrangular elements with linear and quadratic shape functions [?], [?]
- Triangular elements with quadratic shape functions [?]

See also MBDyn's *input-manual* for further information about the node layout of different surface elements.

Virtual work of surface loads In order to derive the expressions for external virtual work, surface loads must be expressed in terms of virtual displacements  $\delta \hat{u}$  at the element nodes.

$$\delta^e W = \bigcup_{e=1}^{N_e} \int_A \left( \sum_{i=1}^3 \delta \boldsymbol{u}_i \,^A \boldsymbol{f}_i \right) dA \tag{12.67}$$

$$= \bigcup_{e=1}^{N_e} \int_A \left( \sum_{i=1}^3 \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_k \,^A \boldsymbol{f}_i \right) dA$$
 (12.68)

$$= \bigcup_{e=1}^{N_e} \sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \,^e \hat{\boldsymbol{f}}_{ik} \tag{12.69}$$

**Pressure loads** In case of pressure loads,  ${}^{A}f$  will always act normal to the surface. It should be emphasized, that the surface normal- and tangent vectors must be evaluated with respect to the deformed state.

$${}^{A}\boldsymbol{f} = -\frac{1}{\|\boldsymbol{A}\boldsymbol{n}\|} {}^{A}\boldsymbol{n} \, p \tag{12.70}$$

$$p = \sum_{k=1}^{N_n} \boldsymbol{h}_k \, \hat{\boldsymbol{p}}_k \tag{12.71}$$

$${}^{A}n = \frac{\partial x}{\partial r_{1}} \times \frac{\partial x}{\partial r_{2}} \tag{12.72}$$

p pressure at a point  $\boldsymbol{x}$  at the surface

 $\hat{\boldsymbol{p}}$  pressures at the element nodes

 ${}^{A}n$  outward surface normal vector at point x

Finally, the virtual work of pressure loads can be evaluated by numerical integration across the surface area. Due to the fact, that the surface may be moved or deformed during the simulation, pressure loads will not be constant, even if the nodal pressures are constant values. In addition to that, pressure loads do contribute to the global stiffness matrix, and they will directly (e.g. due to the deformation of the surface) and indirectly (e.g. due to the stress in solid elements) affect mode shapes and natural frequencies of the structures they are applied to.

$$\delta^{e}W = -\bigcup_{e=1}^{N_{e}} \int_{A} \left( \sum_{i=1}^{3} \sum_{k=1}^{N_{n}} \delta \hat{\mathbf{u}}_{ik} \, \mathbf{h}_{k} \,^{A} \mathbf{n}_{i} \, \frac{p}{\|^{A} \mathbf{n}\|} \right) dA$$
 (12.73)

$$\approx - \left. \bigcup_{e=1}^{N_e} \sum_{g=1}^{N_g} \left( \sum_{i=1}^3 \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_k \, p^A \boldsymbol{n}_i \, \alpha \right) \right|_g$$
 (12.74)

Surface traction's Surface traction's are similar to pressure loads, but they do not necessarily act normal to the surface. Instead the initial orientation of traction loads will be specified by the user, by means of an orientation matrix  $R_f$ . In that way, shear stresses may be imposed at the surface of a body.

$$e_1^{\star} = \frac{\partial x}{\partial r_1} \tag{12.75}$$

$$e_2^{\star} = \frac{\partial x}{\partial r_2} \tag{12.76}$$

$$e_3^{\star} = e_1^{\star} \times e_2^{\star} \tag{12.77}$$

$$e_2^{\star\star} = e_3^{\star} \times e_1^{\star}$$
 (12.78)

$${}^{A}\mathbf{R} = \begin{pmatrix} \frac{1}{\|e_{1}^{\star}\|} e_{1}^{\star} & \frac{1}{\|e_{2}^{\star}\|} e_{2}^{\star \star} & \frac{1}{\|e_{3}^{\star}\|} e_{3}^{\star} \end{pmatrix}$$
(12.79)

$${}^{A}f = {}^{A}R^{A_{0}}R^{T}R_{f}{}^{A}\bar{f}$$
(12.80)

$${}^{A}\bar{f}_{i} = \sum_{k=1}^{N_{n}} h_{k} {}^{A}\bar{\hat{f}}_{ik}$$
 (12.81)

$$\delta^{e}W = \bigcup_{e=1}^{N_{e}} \int_{A} \left( \sum_{i=1}^{3} \sum_{k=1}^{N_{n}} \delta \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_{k} \,^{A} \boldsymbol{f}_{i} \right) dA$$
 (12.82)

$$\approx \left. \bigcup_{e=1}^{N_e} \sum_{g=1}^{N_g} \left( \sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_k \,^{A} \boldsymbol{f}_i \parallel \boldsymbol{e}_3^{\star} \parallel \alpha \right) \right|_{g}$$
 (12.83)

 ${}^{A}\boldsymbol{R}$  relative orientation matrix at point  $\boldsymbol{x}$  at the deformed state

 $^{A_0}R$  relative orientation matrix at point x at the undeformed state

 $R_f$  absolute orientation matrix for the applied traction load with respect to the undeformed state

 $^{A}f$  surface traction's at point x with respect to the global reference frame

 ${}^A\bar{f}$  surface traction's at point x with respect to the local reference frame

 ${}^{A}\bar{\hat{f}}$  surface traction's at element nodes

### 12.0.8 Implementation notes

Many authors of textbooks about nonlinear Finite Element Methods spent a lot of effort to explain the consistent derivation of the tangent stiffness matrix, since this is crucial for any Newton-like nonlinear solver [?], [?]. In contradiction to that, the analytical derivation of a sparse tangent stiffness matrix is not required for MBDyn's solid elements, because they are exploiting a technique called "Automatic Differentiation" for Newton based- as well as Newton Krylov based solvers.

# Chapter 13

# **Aerodynamic Elements**

Aerodynamic elements apply aerodynamic forces to structural nodes.

This section is not intended to give details about the aerodynamic models adopted but mainly discuss the computation of the contributions to the Jacobian matrix of the aerodynamic elements.

```
Files. 2D aerodnamic elements are implemented in files mbdyn/aero/aeroelem.h mbdyn/aero/aeroelem.cc 2D aerodynamic models are implemented in files mbdyn/aero/aerodata.h mbdyn/aero/aerodata.cc mbdyn/aero/aerodata_impl.h mbdyn/aero/aerodata_impl.cc
```

# 13.1 Linearization of 2D Aerodynamic Forces and Moments

MBDyn's built-in 2D aerodynamics computes aerodynamic forces  $\tilde{f}_{a/\xi}$  and moments  $\tilde{c}_{a/\xi}$  per unit span, in a relative frame at station  $\xi$ , based on the instantaneous value of linear and angular velocity boundary conditions, respectively  $\tilde{v}$  and  $\tilde{\omega}$ , expressed in the same relative frame, namely

$$\tilde{f}_{a/\xi} = \tilde{f}_{a/\xi} \left( \tilde{v}, \tilde{\omega}, \xi \right) \tag{13.1a}$$

$$\tilde{\mathbf{c}}_{a/\xi} = \tilde{\mathbf{c}}_{a/\xi} \left( \tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, \xi \right). \tag{13.1b}$$

The boundary conditions are computed by projecting the *effective* linear and angular velocity at station  $\xi$ , respectively  $v(\xi)$  and  $\omega(\xi)$ , in the reference frame of the aerodynamic forces, namely

$$\tilde{\boldsymbol{v}}\left(\xi\right) = \boldsymbol{R}^{T}\left(\xi\right)\boldsymbol{v}\left(\xi\right) \tag{13.2a}$$

$$\tilde{\boldsymbol{\omega}}\left(\xi\right) = \boldsymbol{R}^{T}\left(\xi\right)\boldsymbol{\omega}\left(\xi\right),\tag{13.2b}$$

where  $\mathbf{R}(\xi)$  is the matrix that expresses the local orientation of the aerodynamic section at station  $\xi$ . In detail, the effective linear velocity at an arbitrary station is the combination of the absolute velocity resulting from the kinematics of the model, of an airstream velocity that may depend on the absolute location of a reference point and on time, and of a contribution resulting from an inflow model, namely

$$v\left(\xi\right) = v_{\text{kin}}\left(\xi\right) + v_{\infty}\left(x\left(\xi\right), t\right) + v_{\text{inflow}}\left(x\left(\xi\right)\right). \tag{13.3}$$

It is assumed that the last two contributions do not depend on the state of the problem, or only depend on it in a loose manner, and thus do not directly participate in the linearization of the aerodynamic forces and moments.

Their linearization yields

$$\delta \tilde{\mathbf{v}} = \mathbf{R}^{T}(\xi) \left( \delta \mathbf{v}_{kin}(\xi) + \mathbf{v}(\xi) \times \boldsymbol{\theta}_{\delta}(\xi) \right)$$
(13.4a)

$$\delta \tilde{\boldsymbol{\omega}} = \boldsymbol{R}^{T} \left( \xi \right) \left( \delta \boldsymbol{\omega} \left( \xi \right) + \boldsymbol{\omega} \left( \xi \right) \times \boldsymbol{\theta}_{\delta} \left( \xi \right) \right), \tag{13.4b}$$

where

$$\boldsymbol{\theta}_{\delta}(\xi) = \operatorname{ax}\left(\delta \boldsymbol{R}(\xi) \, \boldsymbol{R}^{T}(\xi)\right). \tag{13.5}$$

By means of numerical integration, the force and moment per unit span are integrated into discrete contributions to the force and the moment applied to the appropriate node equilibrium. This is usually done by multiplying each force and moment per unit span contribution by an appropriate reference length coefficient. As a consequence, in the following force and moment contributions will be considered, namely

$$\tilde{f}_a = \tilde{f}_a \left( \tilde{v}, \tilde{\omega}, \xi \right)$$
 (13.6a)

$$\tilde{\mathbf{c}}_a = \tilde{\mathbf{c}}_a \left( \tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, \xi \right).$$
 (13.6b)

As already mentioned, each weighted sectional force and moment contribution is applied to the appropriate node after projection in the global reference frame. The contribution to the force and moment equilibrium of the *n*-th node is

$$\Delta f_n = R\left(\xi\right)\tilde{f}_a \tag{13.7a}$$

$$\Delta c_n = \mathbf{R}(\xi) \,\tilde{c}_a + (\mathbf{x}(\xi) - \mathbf{x}_n) \times \Delta \mathbf{f}_n. \tag{13.7b}$$

Their linearization yields

$$\delta \Delta \mathbf{f}_{n} = -\Delta \mathbf{f}_{n} \times \boldsymbol{\theta}_{\delta} \left( \xi \right) + \mathbf{R} \left( \xi \right) \delta \tilde{\mathbf{f}}_{a}$$
(13.8a)

$$\delta \Delta \boldsymbol{c}_{n} = -\Delta \boldsymbol{c}_{n} \times \boldsymbol{\theta}_{\delta} (\xi) + \boldsymbol{R} (\xi) \, \delta \tilde{\boldsymbol{c}}_{a} - \Delta \boldsymbol{f}_{n} \times (\delta \boldsymbol{x} (\xi) - \delta \boldsymbol{x}_{n}) + (\boldsymbol{x} (\xi) - \boldsymbol{x}_{n}) \times \left( -\Delta \boldsymbol{f}_{n} \times \boldsymbol{\theta}_{\delta} (\xi) + \boldsymbol{R} (\xi) \, \delta \tilde{\boldsymbol{f}}_{a} \right),$$

$$(13.8b)$$

which can be summarized as

$$\begin{cases}
\delta \Delta \mathbf{f}_{n} \\
\delta \Delta \mathbf{c}_{n}
\end{cases} = \begin{bmatrix}
-\Delta \mathbf{f}_{n} \times \\
-\Delta \mathbf{c}_{n} \times - (\mathbf{x}(\xi) - \mathbf{x}_{n}) \times \Delta \mathbf{f}_{n} \times
\end{bmatrix} \boldsymbol{\theta}_{\delta}(\xi) \\
+ \begin{bmatrix}
\mathbf{0} \\
-\Delta \mathbf{f}_{n} \times
\end{bmatrix} (\delta \mathbf{x}(\xi) - \delta \mathbf{x}_{n}) \\
+ \begin{bmatrix}
\mathbf{I} & \mathbf{0} \\
(\mathbf{x}(\xi) - \mathbf{x}_{n}) \times \mathbf{I}
\end{bmatrix} \begin{Bmatrix}
\mathbf{R}(\xi) \delta \tilde{\mathbf{f}}_{a} \\
\mathbf{R}(\xi) \delta \tilde{\mathbf{c}}_{a}
\end{Bmatrix}.$$
(13.9)

It is assumed that the Jacobian matrix of the sectional force and moment with respect to the linear and angular velocity is either available or can be computed by numerical differentiation. The resulting force and moment perturbation is

$$\left\{\begin{array}{c}
\delta \tilde{f}_{a} \\
\delta \tilde{c}_{a}
\end{array}\right\} = \left[\begin{array}{cc}
\tilde{f}_{a/\tilde{v}} & \tilde{f}_{a/\tilde{\omega}} \\
\tilde{c}_{a/\tilde{v}} & \tilde{c}_{a/\tilde{\omega}}
\end{array}\right] \left\{\begin{array}{c}
\delta \tilde{v} \\
\delta \tilde{\omega}
\end{array}\right\}.$$
(13.10)

The computation of the matrix of Eq. (13.10) is delegated to the AeroData class.

Each type of element determines how the sectional force and moment contributions are applied to the nodes, and how the sectional boundary conditions at each section are computed from the kinematics of the nodes.

### 13.2 Numerical Linearization of Sectional Forces

Consider an arbitrary submatrix of the Jacobian matrix of Eq. (13.10),  $J = p_{/q}$ . Its generic element, the c-th component of p derived by the r-th component of q, is

$$J_{rc} = \frac{\partial \mathbf{p}_r}{\partial \mathbf{q}_c}. (13.11)$$

A forward difference approach is used, namely

$$J_{rc} \cong \frac{p_r \left( q + \Delta q e_c \right) - p_r \left( q \right)}{\Delta q},\tag{13.12}$$

where  $e_c$  is the unit vector along the c-th component, and  $\Delta q$  is a suitably chosen perturbation. Alternatively, a centered difference approach can be used, namely

$$J_{rc} \cong \frac{p_r \left( q + \Delta q e_c \right) - p_r \left( q - \Delta q e_c \right)}{2\Delta q}.$$
(13.13)

The perturbation is

$$\Delta q = \varepsilon \|\mathbf{q}\| + \nu. \tag{13.14}$$

Since the boundary condition  $\mathbf{q}$  is perturbed in order to determine an equivalent perturbation of angle of attack, a resolution of few tenth of degree is deemed sufficient. As a consequence,  $\varepsilon > 0$  must be a "small" number that, in case  $\mathbf{e}_c$  is orthogonal to  $\mathbf{q}$ , yields an angle of the order of a tenth of a degree. The default value is  $\varepsilon = 10^{-3}$ . However, in order to avoid divisions by too small numbers, the perturbation is corrected by another "small" parameter,  $\nu > 0$ . The default value is  $\nu = 10^{-9}$ .

## 13.3 Aerodynamic Forces with Internal States

Consider the case of a model of the aerodynamic forces that requires the use of internal states q, namely

$$\tilde{\mathbf{f}}_a = \tilde{\mathbf{f}}_a \left( \tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, \mathbf{q} \right) \tag{13.15a}$$

$$\tilde{\boldsymbol{c}}_{a} = \tilde{\boldsymbol{c}}_{a} \left( \tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q} \right) \tag{13.15b}$$

$$\mathbf{0} = g\left(\tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, q, \dot{q}\right). \tag{13.15c}$$

Usually, the dynamic model of the aerodynamics is differential, and thus its perturbation yields a linearized state-space system,

$$\delta \mathbf{g} = g_{/\tilde{\mathbf{p}}} \delta \tilde{\mathbf{v}} + g_{/\tilde{\mathbf{p}}} \delta \tilde{\omega} + g_{/\tilde{\mathbf{q}}} \delta q + g_{/\tilde{\mathbf{q}}} \delta \dot{\mathbf{q}}$$
(13.16a)

$$\delta \tilde{f}_{a} = \tilde{f}_{a/\tilde{v}} \delta \tilde{v} + \tilde{f}_{a/\tilde{\omega}} \delta \tilde{\omega} + \tilde{f}_{a/\sigma} \delta q \tag{13.16b}$$

$$\delta \tilde{c}_a = \tilde{c}_{a/\tilde{v}} \delta \tilde{v} + \tilde{c}_{a/\tilde{\omega}} \delta \tilde{\omega} + \tilde{c}_{a/q} \delta q, \tag{13.16c}$$

where, with respect to  $\delta g$ , the terms  $\delta \tilde{v}$  and  $\delta \tilde{\omega}$  play the role of the input, while  $\delta q$  plays the role of the state;  $\delta \tilde{f}_a$ ,  $\delta \tilde{c}_a$  play the role of the output.

In those cases, the underlying aerodynamic model has to deal with g, Eq. (13.15c), and its perturbation  $\delta g$ , Eq. (13.15c).

However, the aerodynamic elements have to:

- 1. provide the underlying aerodynamic model the Jacobian submatrices required to compute  $\delta \tilde{v}$  and  $\delta \tilde{\omega}$  from the perturbations of the nodal position, orientation, and linear and angular velocity that are needed to deal with  $\delta g$ , Eq. (13.15c);
- 2. account for the contribution of the Jacobian matrices  $\delta \hat{f}_{a/q}$  and  $\delta \tilde{c}_{a/q}$  respectively required by Eqs. (13.16b) and (13.16c).

### 13.4 Aerodynamic body

The aerodynamic body element applies aerodynamic forces to the structural node it is connected to, based on the relative velocity between an aerodynamic surface attached to the node and the airstream.

The boundary conditions are related to the rigid body motion of the node, so

$$\mathbf{R}\left(\xi\right) = \mathbf{R}_{n}\mathbf{R}_{a}\mathbf{R}_{t}\left(\xi\right) \tag{13.17a}$$

$$\boldsymbol{b}\left(\xi\right) = \boldsymbol{R}_{n}\left(\tilde{\boldsymbol{b}}_{0} + \boldsymbol{R}_{a}\left(\boldsymbol{b}\left(\xi\right)\boldsymbol{e}_{1} + \xi\boldsymbol{e}_{3}\right)\right) \tag{13.17b}$$

$$\omega\left(\xi\right) = \omega_n \tag{13.17c}$$

$$\mathbf{v}_{\mathrm{kin}}\left(\xi\right) = \mathbf{v}_{n} + \boldsymbol{\omega}_{n} \times \mathbf{b}\left(\xi\right),\tag{13.17d}$$

where  $\mathbf{R}_n$  is the orientation of the node,  $\mathbf{R}_a$  is the relative orientation of the aerodynamics with respect to the node,  $\mathbf{R}_t$  is the pretwist matrix,  $\mathbf{v}_n$  is the absolute velocity of the node,  $\boldsymbol{\omega}_n$  is the absolute angular velocity of the node,  $\tilde{\mathbf{b}}_0$  is an offset between the node and the reference location of the aerodynamic body, and  $b(\xi)$  is the chordwise location of the point where the boundary conditions are evaluated.

Their linearization is straightforward:

$$\theta_{\delta}\left(\xi\right) = \theta_{n\delta} \tag{13.18a}$$

$$\delta \boldsymbol{b}\left(\xi\right) = -\boldsymbol{b}\left(\xi\right) \times \boldsymbol{\theta}_{n\delta} \tag{13.18b}$$

$$\delta\omega\left(\xi\right) = \delta\omega_n\tag{13.18c}$$

$$\delta \mathbf{v}_{\text{kin}}(\xi) = \delta \mathbf{v}_n - \mathbf{b}(\xi) \times \delta \mathbf{\omega}_n - \mathbf{\omega}_n \times \mathbf{b}(\xi) \times \mathbf{\theta}_{n\delta}. \tag{13.18d}$$

Eq. (13.7b) can be rewritten as

$$\Delta c_n = R(\xi) \left( \tilde{c}_a + \tilde{o}(\xi) \times \tilde{f}_a \right), \tag{13.19}$$

where  $\tilde{o}(\xi) = \mathbf{R}^T(\xi)(\mathbf{x}(\xi) - \mathbf{x}_n)$ , the offset between the point where the force is applied and the node, in the reference frame of the node, does not depend on the kinematics of the system, since the body is rigid. Its linearization yields

$$\delta \Delta \boldsymbol{c}_{n} = -\Delta \boldsymbol{c}_{n} \times \boldsymbol{\theta}_{\delta} \left( \xi \right) + \boldsymbol{R} \left( \xi \right) \left( \delta \tilde{\boldsymbol{c}}_{a} + \tilde{\boldsymbol{o}} \left( \xi \right) \times \delta \tilde{\boldsymbol{f}}_{a} \right), \tag{13.20}$$

since  $\delta \tilde{o}(\xi) \equiv 0$ . So the linearized force and moment is

$$\left\{ \begin{array}{c} \delta \Delta f_n \\ \delta \Delta c_n \end{array} \right\} = - \left[ \begin{array}{cc} \Delta f_n \times \\ \Delta c_n \times \end{array} \right] \boldsymbol{\theta}_{n\delta} + \left[ \begin{array}{cc} \boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{o}(\xi) \times & \boldsymbol{I} \end{array} \right] \left\{ \begin{array}{c} \boldsymbol{R}(\xi) \, \delta \tilde{f}_a \\ \boldsymbol{R}(\xi) \, \delta \tilde{c}_a \end{array} \right\}.$$
(13.21)

with  $o(\xi) = \mathbf{R}(\xi) \tilde{o}(\xi)$ .

The linearization of the boundary conditions yields

$$\begin{cases}
\delta \tilde{v}(\xi) \\
\delta \tilde{\omega}(\xi)
\end{cases} = \begin{bmatrix}
R^{T}(\xi) & \mathbf{0} \\
\mathbf{0} & R^{T}(\xi)
\end{bmatrix} \begin{pmatrix} \begin{bmatrix}
\mathbf{v}(\xi) \times -\boldsymbol{\omega}_{n} \times \boldsymbol{b}(\xi) \times \\
\boldsymbol{\omega}_{n} \times
\end{pmatrix} \boldsymbol{\theta}_{n\delta} \\
+ \begin{bmatrix}
\mathbf{I} & -\boldsymbol{b}(\xi) \times \\
\mathbf{0} & \mathbf{I}
\end{bmatrix} \begin{pmatrix} \delta \mathbf{v}_{n} \\ \delta \boldsymbol{\omega}_{n}
\end{pmatrix} \end{pmatrix}$$

$$\overset{\text{uu}}{=} \begin{bmatrix}
R^{T}(\xi) & \mathbf{0} \\
\mathbf{0} & R^{T}(\xi)
\end{bmatrix} \begin{pmatrix} \begin{bmatrix}
(\mathbf{v}(\xi) + \boldsymbol{b}(\xi) \times \boldsymbol{\omega}_{n}) \times \\
\mathbf{0}
\end{pmatrix} \delta \boldsymbol{g}_{n} \\
+ \begin{bmatrix}
\mathbf{I} & -\boldsymbol{b}(\xi) \times \\
\mathbf{0} & \mathbf{I}
\end{bmatrix} \begin{pmatrix} \delta \dot{\mathbf{x}}_{n} \\ \delta \dot{\mathbf{g}}_{n}
\end{pmatrix} \right).$$
(13.22a)

After defining

$$f_{a/\tilde{v}} = R(\xi) \, \tilde{f}_{a/\tilde{v}} R^T(\xi) \tag{13.23a}$$

$$f_{a/\tilde{\omega}} = \mathbf{R}(\xi) \, \tilde{f}_{a/\tilde{\omega}} \mathbf{R}^T(\xi) \tag{13.23b}$$

$$c_{a/\tilde{v}} = R(\xi) \, \tilde{c}_{a/\tilde{v}} R^T(\xi) \tag{13.23c}$$

$$\mathbf{c}_{a/\tilde{\omega}} = \mathbf{R}(\xi) \, \tilde{\mathbf{c}}_{a/\tilde{\omega}} \mathbf{R}^T(\xi) \,, \tag{13.23d}$$

the linearization becomes

$$\begin{bmatrix}
f_{a/\tilde{v}} \\
o(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}}
\end{bmatrix} \delta \dot{x}_{n}$$

$$+ \begin{bmatrix}
f_{a/\tilde{v}} - f_{a/\tilde{v}} b(\xi) \times \\
o(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}} - (o(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}}) b(\xi) \times
\end{bmatrix} \delta \dot{g}_{n}$$

$$+ \begin{bmatrix}
f_{a/\tilde{v}} (v(\xi) + b(\xi) \times \omega_{n}) \times \\
(o(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}}) (v(\xi) + b(\xi) \times \omega_{n}) \times
\end{bmatrix} \delta g_{n}$$

$$- \begin{bmatrix}
\Delta f_{n} \times \\
\Delta c_{n} \times
\end{bmatrix} \delta g_{n} \stackrel{\text{uu}}{=} \begin{cases}
\delta \Delta f_{n} \\
\delta \Delta c_{n}
\end{cases} \right\}.$$
(13.24)

### 13.5 Aerodynamic Beam (3 Nodes)

The aerodynamic beam3 element applies aerodynamic forces to the nodes of a three node structural beam element.

The aerodynamic forces/moments acting on each node are computed based on the relative velocity of a set of locations along the beam and the airstream. The kinematic quantities of the beam are computed based on an interpolation of the kinematics of the three nodes.

**Kinematics Interpolation.** Note: this part is common to all elements that use the three-node beam discretization and interpolation model. The generic field variable p(x) is interpolated using parabolic functions related to the value of the field variable at three locations that in general can be offset from the nodes,

$$\boldsymbol{p}\left(\xi\right) = \sum_{i=1,2,3} N_i\left(\xi\right) \boldsymbol{p}_i,\tag{13.25}$$

with

$$N_1 = \frac{1}{2}\xi(\xi - 1) \tag{13.26a}$$

$$N_2 = 1 - \xi^2 \tag{13.26b}$$

$$N_3 = \frac{1}{2}\xi(\xi+1)$$
. (13.26c)

Orientation at an arbitrary location  $\xi$ :

$$R(\xi) = R_{2a}R(\theta(\xi)) \tag{13.27}$$

$$\boldsymbol{\theta}(\xi) = \sum_{i=1,3}^{2} N_i(\xi) \, \boldsymbol{\theta}_{2\leftarrow i} = N_1(\xi) \, \boldsymbol{\theta}_{2\leftarrow 1} + N_3(\xi) \, \boldsymbol{\theta}_{2\leftarrow 3}$$
(13.28)

$$\boldsymbol{\theta}_{2\leftarrow i} = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{2_{a}}^{T}\boldsymbol{R}_{i_{a}}\right)\right). \tag{13.29}$$

Orientation is dealt with specially, given its special nature. The orientation of the mid node is used as a reference, and the orientation parameters that express the relative orientation between each of the end nodes and the mid node are interpolated. The interpolated orientation parameters are used to compute the interpolated relative orientation matrix, which is then pre-multiplied by the orientation matrix of the mid node. Summation in this case occurs on i = 1, 3 only because by definition  $\theta_{2\leftarrow 2} = \operatorname{ax}(\exp^{-1}((I)) \equiv \mathbf{0}$ .

Since the Euler-Rodrigues orientation parameters are used (the so-caller 'rotation vector'), the magnitude of the relative orientation between each end node and the mid node must be limited (formally, to  $\pi$ , but it should be less for accuracy).

Position at an arbitrary location  $\xi$ :

$$\boldsymbol{x}\left(\xi\right) = \sum_{i=1,2,3} N_i\left(\xi\right) \left(\boldsymbol{x}_i + \boldsymbol{o}_i\right),\tag{13.30}$$

with  $o_i = R_i \tilde{o}_i$ .

Angular velocity at an arbitrary location  $\xi$ :

$$\omega\left(\xi\right) = \sum_{i=1,2,3} N_i\left(\xi\right)\omega_i. \tag{13.31}$$

Velocity at an arbitrary location  $\xi$ :

$$\mathbf{v}_{\mathrm{kin}}\left(\xi\right) = \sum_{i=1,2,3} N_i\left(\xi\right) \left(\mathbf{v}_i + \boldsymbol{\omega}_i \times \mathbf{o}_i\right). \tag{13.32}$$

**Perturbation of Interpolated Kinematics.** Orientation perturbation at an arbitrary location  $\xi$ :

$$\delta \boldsymbol{\theta} \left( \xi \right) = \sum_{i=1,3} N_i \left( \xi \right) \delta \boldsymbol{\theta}_{2 \leftarrow i} \tag{13.33}$$

$$\delta \boldsymbol{\theta}_{2 \leftarrow i} = \boldsymbol{\Gamma}^{-1} \left( \boldsymbol{\theta}_{2 \leftarrow i} \right) \boldsymbol{\theta}_{(2 \leftarrow i)\delta} \tag{13.34}$$

$$\boldsymbol{\theta}_{(2\leftarrow i)\delta} = \boldsymbol{R}_{2a}^{T} \left(\boldsymbol{\theta}_{i\delta} - \boldsymbol{\theta}_{2\delta}\right) \tag{13.35}$$

$$\boldsymbol{\theta}_{\delta}\left(\xi\right) = \boldsymbol{\theta}_{2\delta} + \sum_{i=1,3} \boldsymbol{R}_{2a} \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\left(\xi\right)\right) N_{i}\left(\xi\right) \boldsymbol{\Gamma}^{-1}\left(\boldsymbol{\theta}_{2\leftarrow i}\right) \boldsymbol{R}_{2a}^{T}\left(\boldsymbol{\theta}_{i\delta} - \boldsymbol{\theta}_{2\delta}\right)$$

$$= \left( I - R_{2a} \Gamma \left( \theta \left( \xi \right) \right) \sum_{i=1,3} N_i \left( \xi \right) \Gamma^{-1} \left( \theta_{2 \leftarrow i} \right) R_{2a}^T \right) \theta_{2\delta}$$

$$+ R_{2a} \Gamma \left( \theta \left( \xi \right) \right) N_1 \Gamma^{-1} \left( \theta_{2 \leftarrow 1} \right) R_{2a}^T \theta_{1\delta}$$

$$+ R_{2a} \Gamma \left( \theta \left( \xi \right) \right) N_3 \Gamma^{-1} \left( \theta_{2 \leftarrow 3} \right) R_{2a}^T \theta_{3\delta}$$

$$= \sum_{i=1,2,3} \Theta_i \left( \xi \right) \theta_{i\delta},$$

$$(13.36)$$

with

$$\Theta_{i}(\xi) = \mathbf{R}_{2a} \Gamma(\boldsymbol{\theta}(\xi)) N_{i} \Gamma^{-1}(\boldsymbol{\theta}_{2\leftarrow i}) \mathbf{R}_{2a}^{T} \qquad i = 1 \text{ and } 3$$
(13.37a)

$$\Theta_2(\xi) = I - \Theta_1(\xi) - \Theta_3(\xi) \tag{13.37b}$$

playing the role of shape functions.

In fact, note that, when  $N_1 = 1$  and  $N_3 = 0$ , then  $\Theta_1 = I$ ,  $\Theta_2 = \Theta_3 = 0$  and  $\theta_{\delta}(\xi) = \theta_{1\delta}$ , while, when  $N_1 = 0$  and  $N_3 = 1$ , then  $\Theta_1 = \Theta_2 = 0$ ,  $\Theta_3 = I$  and  $\theta_{\delta}(\xi) = \theta_{3\delta}$ . Finally, when  $N_1 = N_3 = 0$ , then  $\Theta_1 = \Theta_3 = 0$ ,  $\Theta_2 = I$  and  $\theta_{\delta}(\xi) = \theta_{2\delta}$ . Moreover,  $\sum_{i=1,2,3} \Theta_i(\xi) = I \ \forall \xi$ .

Position perturbation at an arbitrary location  $\xi$ :

$$\delta \boldsymbol{x}\left(\xi\right) = \sum_{i=1,2,3} N_i\left(\xi\right) \left(\delta \boldsymbol{x}_i + \boldsymbol{\theta}_{i\delta} \times \boldsymbol{o}_i\right). \tag{13.38}$$

Angular velocity perturbation at an arbitrary location  $\xi$ :

$$\delta \boldsymbol{\omega} \left( \xi \right) = \sum_{i=1,2,3} N_i \delta \boldsymbol{\omega}_i$$

$$\stackrel{\text{uu}}{=} \sum_{i=1,2,3} N_i \left( \delta \dot{\boldsymbol{g}}_i - \boldsymbol{\omega}_i \times \delta \boldsymbol{g}_i \right). \tag{13.39}$$

Velocity perturbation at an arbitrary location  $\xi$ :

$$\delta \boldsymbol{v}_{\text{kin}}(\xi) = \sum_{i=1,2,3} N_i(\xi) \left( \delta \boldsymbol{v}_i + \delta \boldsymbol{\omega}_i \times \boldsymbol{o}_i + \boldsymbol{\omega}_i \times \delta \boldsymbol{o}_i \right)$$

$$= \sum_{i=1,2,3} N_i(\xi) \left( \delta \boldsymbol{v}_i - \boldsymbol{o}_i \times \delta \boldsymbol{\omega}_i - \boldsymbol{\omega}_i \times \boldsymbol{o}_i \times \boldsymbol{\theta}_{i\delta} \right)$$

$$\stackrel{\text{uu}}{=} \sum_{i=1,2,3} N_i(\xi) \left( \delta \dot{\boldsymbol{x}}_i - \boldsymbol{o}_i \times \delta \dot{\boldsymbol{g}}_i - (\boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times \delta \boldsymbol{g}_i \right). \tag{13.40}$$

Boundary Conditions Perturbation. Angular velocity perturbation:

$$\delta \tilde{\boldsymbol{\omega}} \left( \xi \right) = \boldsymbol{R}^{T} \left( \xi \right) \sum_{i=1,2,3} \left( N_{i} \left( \xi \right) \delta \boldsymbol{\omega}_{i} + \boldsymbol{\omega} \left( \xi \right) \times \boldsymbol{\Theta}_{i} \left( \xi \right) \boldsymbol{\theta}_{i \delta} \right)$$

$$\stackrel{\text{uu}}{=} \boldsymbol{R}^{T} \left( \xi \right) \left( N_{i} \left( \xi \right) \delta \dot{\boldsymbol{g}}_{i} + \left( \boldsymbol{\omega} \left( \xi \right) \times \boldsymbol{\Theta}_{i} \left( \xi \right) - N_{i} \left( \xi \right) \boldsymbol{\omega}_{i} \times \right) \delta \boldsymbol{g}_{i} \right). \tag{13.41}$$

Velocity perturbation:

$$\delta \tilde{\boldsymbol{v}}(\xi) = \boldsymbol{R}^{T}(\xi) \left( N_{i}(\xi) \, \delta \boldsymbol{v}_{i} - N_{i}(\xi) \, \boldsymbol{o}_{i} \times \delta \boldsymbol{\omega}_{i} \right. \\ \left. + \left( \boldsymbol{v}(\xi) \times \boldsymbol{\Theta}_{i}(\xi) - N_{i}(\xi) \, \boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i} \times \right) \boldsymbol{\theta}_{i\delta} \right) \\ \stackrel{\text{uu}}{=} \boldsymbol{R}^{T}(\xi) \left( N_{i}(\xi) \, \delta \dot{\boldsymbol{x}}_{i} - N_{i}(\xi) \, \boldsymbol{o}_{i} \times \delta \dot{\boldsymbol{g}}_{i} \right. \\ \left. + \left( \boldsymbol{v}(\xi) \times \boldsymbol{\Theta}_{i}(\xi) - N_{i}(\xi) \left( \boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i} \right) \times \right) \delta \boldsymbol{g}_{i} \right).$$

$$(13.42)$$

They can be summarized as

$$\begin{cases}
\delta \tilde{\boldsymbol{v}}(\xi) \\
\delta \tilde{\boldsymbol{\omega}}(\xi)
\end{cases} = \begin{bmatrix}
\boldsymbol{R}^{T}(\xi) & \mathbf{0} \\
\mathbf{0} & \boldsymbol{R}^{T}(\xi)
\end{bmatrix} \sum_{i=1,2,3} \left( N_{i}(\xi) \begin{bmatrix} \boldsymbol{I} & -\boldsymbol{o}_{i} \times \\ \mathbf{0} & \boldsymbol{I} \end{bmatrix} \right) \begin{cases}
\delta \boldsymbol{v}_{i} \\
\delta \boldsymbol{\omega}_{i}
\end{cases} \\
+ \begin{bmatrix}
\boldsymbol{v}(\xi) \times \boldsymbol{\Theta}_{i}(\xi) - N_{i}(\xi) \boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i} \times \\
\boldsymbol{\omega}(\xi) \times \boldsymbol{\Theta}_{i}(\xi)
\end{bmatrix} \boldsymbol{\theta}_{i\delta}$$

$$\overset{\text{uu}}{=} \begin{bmatrix}
\boldsymbol{R}^{T}(\xi) & \mathbf{0} \\
\mathbf{0} & \boldsymbol{R}^{T}(\xi)
\end{bmatrix} \sum_{i=1,2,3} \left( N_{i}(\xi) \begin{bmatrix} \boldsymbol{I} & -\boldsymbol{o}_{i} \times \\ \mathbf{0} & \boldsymbol{I} \end{bmatrix} \right) \begin{cases} \delta \dot{\boldsymbol{x}}_{i} \\ \delta \dot{\boldsymbol{g}}_{i}
\end{cases} \\
+ \begin{bmatrix}
\boldsymbol{v}(\xi) \times \boldsymbol{\Theta}_{i}(\xi) - N_{i}(\xi) (\boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i}) \times \\
\boldsymbol{\omega}(\xi) \times \boldsymbol{\Theta}_{i}(\xi) - N_{i}(\xi) \boldsymbol{\omega}_{i} \times
\end{cases} \delta \boldsymbol{g}_{i}$$
(13.43)

Contribution to Jacobian Matrix. After defining

$$f_{a/\tilde{v}} = R(\xi) \, \tilde{f}_{a/\tilde{v}} R^T(\xi) \tag{13.44a}$$

$$f_{a/\tilde{\omega}} = R(\xi) \, \tilde{f}_{a/\tilde{\omega}} R^T(\xi) \tag{13.44b}$$

$$\mathbf{c}_{a/\tilde{\mathbf{v}}} = \mathbf{R}(\xi) \, \tilde{\mathbf{c}}_{a/\tilde{\mathbf{v}}} \mathbf{R}^{T}(\xi) \tag{13.44c}$$

$$\mathbf{c}_{a/\tilde{\omega}} = \mathbf{R}(\xi) \, \tilde{\mathbf{c}}_{a/\tilde{\omega}} \mathbf{R}^T(\xi) \tag{13.44d}$$

$$\boldsymbol{B}_{\tilde{\boldsymbol{v}}} = \boldsymbol{v}\left(\xi\right) \times \boldsymbol{\Theta}_{i}\left(\xi\right) - N_{i}\left(\xi\right)\left(\boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i}\right) \times \tag{13.44e}$$

$$\boldsymbol{B}_{\tilde{\omega}} = \boldsymbol{\omega}\left(\xi\right) \times \boldsymbol{\Theta}_{i}\left(\xi\right) - N_{i}\left(\xi\right)\boldsymbol{\omega}_{i} \times \tag{13.44f}$$

$$d_n(\xi) = x(\xi) - x_n, \tag{13.44g}$$

the contribution of the i-th node's motion to the equilibrium of the n-th node (i = 1, 2, 3, n = 1, 2, 3) is

$$N_{i}(\xi) \begin{bmatrix} f_{a/\tilde{v}} \\ d_{n}(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}} \end{bmatrix} \delta \dot{x}_{i}$$

$$+ N_{i}(\xi) \begin{bmatrix} f_{a/\tilde{v}} - f_{a/\tilde{v}} o_{i} \times \\ d_{n}(\xi) \times f_{a/\tilde{\omega}} + c_{a/\tilde{\omega}} - (d_{n}(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}}) o_{i} \times \end{bmatrix} \delta \dot{g}_{i}$$

$$+ \begin{bmatrix} f_{a/\tilde{v}} B_{\tilde{v}} + f_{a/\tilde{\omega}} B_{\tilde{\omega}} \\ d_{n}(\xi) \times (f_{a/\tilde{v}} B_{\tilde{v}} + f_{a/\tilde{\omega}} B_{\tilde{\omega}}) + c_{a/\tilde{v}} B_{\tilde{v}} + c_{a/\tilde{\omega}} B_{\tilde{\omega}} \end{bmatrix} \delta g_{i}$$

$$+ \begin{bmatrix} 0 \\ -(N_{i} - \delta_{ni}) \Delta f_{n} \times \end{bmatrix} \delta x_{i}$$

$$+ \begin{bmatrix} -\Delta f_{n} \times \Theta_{i}(\xi) \\ -(d_{n}(\xi) \times \Delta f_{n} \times + \Delta c_{n} \times) \Theta_{i}(\xi) + \Delta f_{n} \times N_{i} o_{i} \times \end{bmatrix} \delta g_{i}$$

$$\stackrel{\text{uu}}{=} \begin{cases} \delta \Delta f_{n} \\ \delta \Delta c_{n} \end{cases} \}, \qquad (13.45)$$

where  $\delta_{ni}$  is Dirac's delta, which is 1 when i = n, and 0 otherwise.

# 13.6 Aerodynamic Beam (2 Nodes)

The aerodynamic beam2 element applies aerodynamic forces to the nodes of a two node structural beam element.

The aerodynamic forces/moments acting on each node are computed based on the relative velocity of a set of locations along the beam and the airstream. The kinematic quantities of the beam are computed based on an interpolation of the kinematics of the three nodes.

**Kinematics Interpolation.** Note: this part is common to all elements that use the two-node beam discretization and interpolation model. The generic field variable p(x) is interpolated using linear functions related to the value of the field variable at two locations that in general can be offset from the nodes,

$$\boldsymbol{p}\left(\xi\right) = \sum_{i=1,2} N_i\left(\xi\right) \boldsymbol{p}_i,\tag{13.46}$$

with

$$N_1 = \frac{1}{2} (1 - \xi) \tag{13.47a}$$

$$N_2 = \frac{1}{2} (1 + \xi). \tag{13.47b}$$

Orientation at an arbitrary location  $\xi$ :

$$R(\xi) = R_{\text{mid}} \exp(\theta(\xi) \times) \tag{13.48}$$

$$\mathbf{R}_{\text{mid}} = \mathbf{R}_{1_a} \exp\left(\overline{\boldsymbol{\theta}} \times\right) = \mathbf{R}_{2_a} \exp\left(\overline{\boldsymbol{\theta}} \times\right)^T \tag{13.49}$$

$$\overline{\theta} = \frac{1}{2} \operatorname{ax} \left( \exp^{-1} \left( \mathbf{R}_{1_a}^T \mathbf{R}_{2_a} \right) \right) \tag{13.50}$$

$$\boldsymbol{\theta}\left(\xi\right) = \sum_{i=1,2} N_i\left(\xi\right) \boldsymbol{\theta}_{\text{mid}\leftarrow i} = N_1\left(\xi\right) \boldsymbol{\theta}_{\text{mid}\leftarrow 1} + N_2\left(\xi\right) \boldsymbol{\theta}_{\text{mid}\leftarrow 2} \tag{13.51}$$

$$\theta_{\text{mid}\leftarrow 1} = -\overline{\theta} \tag{13.52}$$

$$\theta_{\text{mid}\leftarrow 2} = \overline{\theta}.$$
 (13.53)

Orientation is dealt with specially, given its special nature. The orientation of the mid point is used as a reference, and the orientation parameters that express the relative orientation between each of the end nodes and the mid point are interpolated. The interpolated orientation parameters are used to compute the interpolated relative orientation matrix, which is then pre-multiplied by the orientation matrix of the mid point.

Since the Euler-Rodrigues parametrization is used (the so-called 'rotation vector'), the magnitude of the relative orientation between each end node must be limited (formally, to  $\pi$ , but it should be less for accuracy).

Note that since the generic orientation  $R(\xi)$  is the result of a sequence of orientations about a common axis  $\overline{\theta}$ , it can be conveniently rewritten as

$$\mathbf{R}(\xi) = \mathbf{R}_{1_a} \exp\left(\overline{\boldsymbol{\theta}} \times\right) \exp\left(\left(\left(N_2(\xi) - N_1(\xi)\right)\overline{\boldsymbol{\theta}}\right) \times\right)$$
$$= \mathbf{R}_{1_a} \exp\left(\left(\left(1 + N_2(\xi) - N_1(\xi)\right)\overline{\boldsymbol{\theta}}\right) \times\right). \tag{13.54}$$

In fact, when  $\xi = -1$ ,  $N_1 = 1$  and  $N_2 = 0$ , then  $\mathbf{R}(\xi) = \mathbf{R}_{1_a}$ , while when  $\xi = 1$ ,  $N_1 = 0$  and  $N_2 = 1$ , then  $\mathbf{R}(\xi) = \mathbf{R}_{2_a}$ .

Position at an arbitrary location  $\xi$ :

$$\boldsymbol{x}\left(\xi\right) = \sum_{i=1,2} N_i\left(\xi\right) \left(\boldsymbol{x}_i + \boldsymbol{o}_i\right),\tag{13.55}$$

with  $o_i = \mathbf{R}_i \tilde{o}_i$ .

Angular velocity at an arbitrary location  $\xi$ :

$$\omega\left(\xi\right) = \sum_{i=1,2} N_i\left(\xi\right) \omega_i. \tag{13.56}$$

Velocity at an arbitrary location  $\xi$ :

$$\mathbf{v}_{\mathrm{kin}}\left(\xi\right) = \sum_{i=1,2} N_i\left(\xi\right) \left(\mathbf{v}_i + \boldsymbol{\omega}_i \times \mathbf{o}_i\right). \tag{13.57}$$

**Perturbation of Interpolated Kinematics.** Orientation perturbation at an arbitrary location  $\xi$ :

$$\theta_{\delta}(\xi) = \frac{1 + N_{2}(\xi) - N_{1}(\xi)}{2} \theta_{2\delta} + \frac{1 + N_{1}(\xi) - N_{2}(\xi)}{2} \theta_{1\delta}$$
(13.58)

$$=\sum_{i=1}^{N} \mathcal{N}_{i}\left(\xi\right) \boldsymbol{\theta}_{i\delta},\tag{13.59}$$

with

$$\mathcal{N}_{i}(\xi) = \frac{1 + N_{i}(\xi) - N_{3-i}(\xi)}{2}.$$
(13.60a)

Note, however, that according to Eqs. (13.47), the shape functions of Eq. (13.60a) are  $\mathcal{N}_i(\xi) = N_i(\xi)$ . Position perturbation at an arbitrary location  $\xi$ :

$$\delta \boldsymbol{x}\left(\xi\right) = \sum_{i=1,2} N_i\left(\xi\right) \left(\delta \boldsymbol{x}_i + \boldsymbol{\theta}_{i\delta} \times \boldsymbol{o}_i\right). \tag{13.61}$$

Angular velocity perturbation at an arbitrary location  $\xi$ :

$$\delta \boldsymbol{\omega} \left( \xi \right) = \sum_{i=1,2} N_i \delta \boldsymbol{\omega}_i$$

$$\stackrel{\text{uu}}{=} \sum_{i=1,2} N_i \left( \delta \dot{\boldsymbol{g}}_i - \boldsymbol{\omega}_i \times \delta \boldsymbol{g}_i \right). \tag{13.62}$$

Velocity perturbation at an arbitrary location  $\xi$ :

$$\delta \boldsymbol{v}_{\text{kin}}(\xi) = \sum_{i=1,2} N_i(\xi) \left( \delta \boldsymbol{v}_i + \delta \boldsymbol{\omega}_i \times \boldsymbol{o}_i + \boldsymbol{\omega}_i \times \delta \boldsymbol{o}_i \right)$$

$$= \sum_{i=1,2} N_i(\xi) \left( \delta \boldsymbol{v}_i - \boldsymbol{o}_i \times \delta \boldsymbol{\omega}_i - \boldsymbol{\omega}_i \times \boldsymbol{o}_i \times \boldsymbol{\theta}_{i\delta} \right)$$

$$\stackrel{\text{uu}}{=} \sum_{i=1,2} N_i(\xi) \left( \delta \dot{\boldsymbol{x}}_i - \boldsymbol{o}_i \times \delta \dot{\boldsymbol{g}}_i - (\boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times \delta \boldsymbol{g}_i \right). \tag{13.63}$$

Boundary Conditions Perturbation. Angular velocity perturbation:

$$\delta \tilde{\boldsymbol{\omega}} \left( \xi \right) = \boldsymbol{R}^{T} \left( \xi \right) \sum_{i=1,2} \left( N_{i} \left( \xi \right) \delta \boldsymbol{\omega}_{i} + \boldsymbol{\omega} \left( \xi \right) \times \mathcal{N}_{i} \left( \xi \right) \boldsymbol{\theta}_{i\delta} \right)$$

$$\stackrel{\text{uu}}{=} \boldsymbol{R}^{T} \left( \xi \right) \sum_{i=1,2} \left( N_{i} \left( \xi \right) \delta \dot{\boldsymbol{g}}_{i} + \left( \mathcal{N}_{i} \boldsymbol{\omega} \left( \xi \right) - N_{i} \left( \xi \right) \boldsymbol{\omega}_{i} \right) \times \delta \boldsymbol{g}_{i} \right)$$

$$= \boldsymbol{R}^{T} \left( \xi \right) \sum_{i=1,2} N_{i} \left( \xi \right) \left( \delta \dot{\boldsymbol{g}}_{i} + \left( \boldsymbol{\omega} \left( \xi \right) - \boldsymbol{\omega}_{i} \right) \times \delta \boldsymbol{g}_{i} \right). \tag{13.64}$$

Velocity perturbation:

$$\delta \tilde{\boldsymbol{v}}(\xi) = \boldsymbol{R}^{T}(\xi) \left( N_{i}(\xi) \, \delta \boldsymbol{v}_{i} - N_{i}(\xi) \, \boldsymbol{o}_{i} \times \delta \boldsymbol{\omega}_{i} \right. \\ \left. + \left( \mathcal{N}_{i}(\xi) \, \boldsymbol{v}(\xi) \times - N_{i}(\xi) \, \boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i} \times \right) \boldsymbol{\theta}_{i\delta} \right) \\ \stackrel{\text{uu}}{=} \boldsymbol{R}^{T}(\xi) \left( N_{i}(\xi) \, \delta \dot{\boldsymbol{x}}_{i} - N_{i}(\xi) \, \boldsymbol{o}_{i} \times \delta \dot{\boldsymbol{g}}_{i} \right. \\ \left. + \left( \mathcal{N}_{i}(\xi) \, \boldsymbol{v}(\xi) - N_{i}(\xi) \, \boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i} \right) \times \delta \boldsymbol{g}_{i} \right) \\ = \boldsymbol{R}^{T}(\xi) \, N_{i}(\xi) \left( \delta \dot{\boldsymbol{x}}_{i} - \boldsymbol{o}_{i} \times \delta \dot{\boldsymbol{g}}_{i} + \left( \boldsymbol{v}(\xi) - \boldsymbol{\omega}_{i} \times \boldsymbol{o}_{i} \right) \times \delta \boldsymbol{g}_{i} \right).$$

$$(13.65)$$

They can be summarized as

$$\begin{cases}
\delta \tilde{v}(\xi) \\
\delta \tilde{\omega}(\xi)
\end{cases} = \begin{bmatrix}
R^{T}(\xi) & \mathbf{0} \\
\mathbf{0} & R^{T}(\xi)
\end{bmatrix} \sum_{i=1,2} \left( N_{i}(\xi) \begin{bmatrix} \mathbf{I} & -\mathbf{o}_{i} \times \\ \mathbf{0} & \mathbf{I} \end{bmatrix} \right) \begin{cases}
\delta \mathbf{v}_{i} \\
\delta \omega_{i}
\end{cases} \\
+ \begin{bmatrix}
N_{i}(\xi) \mathbf{v}(\xi) \times -N_{i}(\xi) \mathbf{\omega}_{i} \times \mathbf{o}_{i} \times \\
N_{i}(\xi) \mathbf{\omega}(\xi) \times
\end{bmatrix} \theta_{i\delta}$$

$$\stackrel{\text{uu}}{=} \begin{bmatrix}
R^{T}(\xi) & \mathbf{0} \\
\mathbf{0} & R^{T}(\xi)
\end{bmatrix} \sum_{i=1,2} \left( N_{i}(\xi) \begin{bmatrix} \mathbf{I} & -\mathbf{o}_{i} \times \\ \mathbf{0} & \mathbf{I} \end{bmatrix} \right) \begin{cases}
\delta \dot{\mathbf{x}}_{i} \\
\delta \dot{\mathbf{g}}_{i}
\end{cases} \\
+ \begin{bmatrix}
(N_{i}(\xi) \mathbf{v}(\xi) - N_{i}(\xi) \mathbf{\omega}_{i} \times \mathbf{o}_{i}) \times \\
(N_{i}(\xi) \mathbf{\omega}(\xi) - N_{i}(\xi) \mathbf{\omega}_{i}) \times
\end{bmatrix} \delta g_{i}$$

$$= \begin{bmatrix}
R^{T}(\xi) & \mathbf{0} \\
\mathbf{0} & R^{T}(\xi)
\end{bmatrix} \sum_{i=1,2} N_{i}(\xi) \left( \begin{bmatrix} \mathbf{I} & -\mathbf{o}_{i} \times \\ \mathbf{0} & \mathbf{I} \end{bmatrix} \right) \begin{cases}
\delta \dot{\mathbf{x}}_{i} \\
\delta \dot{\mathbf{g}}_{i}
\end{cases} \\
+ \begin{bmatrix}
(\mathbf{v}(\xi) - \mathbf{\omega}_{i} \times \mathbf{o}_{i}) \times \\
(\mathbf{\omega}(\xi) - \mathbf{\omega}_{i}) \times
\end{bmatrix} \delta g_{i}
\end{cases} . \tag{13.66}$$

i

Contribution to Jacobian Matrix. After defining

$$f_{a/\tilde{v}} = R(\xi) \, \tilde{f}_{a/\tilde{v}} R^T(\xi) \tag{13.67a}$$

$$f_{a/\tilde{\omega}} = R(\xi) \, \tilde{f}_{a/\tilde{\omega}} R^T(\xi) \tag{13.67b}$$

$$c_{a/\tilde{v}} = R(\xi) \, \tilde{c}_{a/\tilde{v}} R^T(\xi) \tag{13.67c}$$

$$\mathbf{c}_{a/\tilde{\omega}} = \mathbf{R}(\xi) \, \tilde{\mathbf{c}}_{a/\tilde{\omega}} \mathbf{R}^{T}(\xi) \tag{13.67d}$$

$$B_{\tilde{\boldsymbol{v}}} = (\mathcal{N}_i(\xi) \, \boldsymbol{v}(\xi) - N_i(\xi) \, \boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times = N_i(\xi) \, (\boldsymbol{v}(\xi) - \boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times$$
(13.67e)

$$B_{\tilde{\omega}} = (\mathcal{N}_i(\xi)\,\boldsymbol{\omega}\,(\xi) - N_i(\xi)\,\boldsymbol{\omega}_i) \times = N_i(\xi)\,(\boldsymbol{\omega}\,(\xi) - \boldsymbol{\omega}_i) \times$$
(13.67f)

$$d_{n}\left(\xi\right) = \boldsymbol{x}\left(\xi\right) - \boldsymbol{x}_{n},\tag{13.67g}$$

the contribution of the *i*-th node's motion to the equilibrium of the *n*-th node (i = 1, 2, n = 1, 2) is

$$N_{i}(\xi) \begin{bmatrix} f_{a/\tilde{v}} \\ d_{n}(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}} \end{bmatrix} \delta \dot{x}_{i}$$

$$+ N_{i}(\xi) \begin{bmatrix} f_{a/\tilde{v}} - f_{a/\tilde{v}}o_{i} \times \\ d_{n}(\xi) \times f_{a/\tilde{\omega}} + c_{a/\tilde{\omega}} - (d_{n}(\xi) \times f_{a/\tilde{v}} + c_{a/\tilde{v}}) o_{i} \times \end{bmatrix} \delta \dot{g}_{i}$$

$$+ \begin{bmatrix} f_{a/\tilde{v}}B_{\tilde{v}} + f_{a/\tilde{\omega}}B_{\tilde{\omega}} \\ d_{n}(\xi) \times (f_{a/\tilde{v}}B_{\tilde{v}} + f_{a/\tilde{\omega}}B_{\tilde{\omega}}) + c_{a/\tilde{v}}B_{\tilde{v}} + c_{a/\tilde{\omega}}B_{\tilde{\omega}} \end{bmatrix} \delta g_{i}$$

$$+ \begin{bmatrix} 0 \\ -(N_{i} - \delta_{ni}) \Delta f_{n} \times \end{bmatrix} \delta x_{i}$$

$$+ \begin{bmatrix} -N_{i}(\xi) \Delta f_{n} \times \\ -N_{i}(\xi) (d_{n}(\xi) \times \Delta f_{n} \times + \Delta c_{n} \times) + \Delta f_{n} \times N_{i}o_{i} \times \end{bmatrix} \delta g_{i}$$

$$\stackrel{\text{uu}}{=} \begin{cases} \delta \Delta f_{n} \\ \delta \Delta c_{n} \end{cases}, \qquad (13.68)$$

where  $\delta_{ni}$  is Dirac's delta, which is 1 when i = n, and 0 otherwise.

Table 13.1: Coefficients of the Wagner indicial response approximation of Theodorsen's function ([?, ?])

	approx. 1	approx. 2
$A_1$	0.165	0.165
$A_2$	0.335	0.335
$b_1$	0.0455	0.041
$b_2$	0.3	0.32

### 13.7 Unsteady aerodynamics model

(Author: Mattia Mattaboni)

The 2D unsteady aerodynamics loads are computed implementing the Theodorsen theory in state-space form using the Wagner approximation of the Theodorsen function.

$$\tilde{\mathbf{f}}_{a} = \frac{1}{2} \rho \tilde{\mathbf{v}}^{T} \tilde{\mathbf{v}} c \tilde{\mathbf{c}}_{f_{a}} \left( \mathbf{y} \left( \tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, \mathbf{q} \right), U_{\infty} \right)$$
(13.69a)

$$\tilde{\boldsymbol{c}}_{a} = \frac{1}{2} \rho \tilde{\boldsymbol{v}}^{T} \tilde{\boldsymbol{v}} c^{2} \tilde{\boldsymbol{c}}_{c_{a}} \left( \boldsymbol{y} \left( \tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q} \right), U_{\infty} \right)$$
(13.69b)

$$\mathbf{0} = g\left(\tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, \mathbf{q}, \dot{\mathbf{q}}\right) = \dot{\mathbf{q}} - \mathbf{A}\left(U_{\infty}\right)\mathbf{q} - \mathbf{B}\left(U_{\infty}\right)\mathbf{u}\left(\tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}\right), \tag{13.69c}$$

where  $\rho$  is the air density, c the airfoil chord and y is

$$y = C(U_{\infty}) q + D(U_{\infty}) u(\tilde{v}, \tilde{\omega}). \tag{13.70}$$

Matrix  $\boldsymbol{A}$  is

$$\mathbf{A} = \begin{bmatrix} 0 & 1 & 0 & 0 & 0 & 0 \\ -b_1 b_2 \left(\frac{2U_{\infty}}{c}\right)^2 & -(b_1 + b_2) \left(\frac{2U_{\infty}}{c}\right) & 0 & 0 & 0 & 0 \\ 0 & 0 & -2\omega_{\text{PD}} & -\omega_{\text{PD}}^2 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & -2\omega_{\text{PD}} & -\omega_{\text{PD}}^2 \\ 0 & 0 & 0 & 0 & 1 & 0 \end{bmatrix},$$
(13.71)

where  $A_1$ ,  $A_2$ ,  $b_1$  and  $b_2$  are the coefficients of the Theodorsen function approximation (Table 13.1 from [?] and [?]),  $\omega_{\text{PD}}$  is the frequency of the pseudo-derivative algorithm

$$\mathcal{L}\left(\dot{f}\right) = s\mathcal{L}\left(f\right) - f\left(0\right) \cong \frac{s}{\left(1 + s/\omega_{\text{PD}}\right)^{2}} \mathcal{L}\left(f\right)$$
(13.72)

(where f(0) can be neglected under broad assumptions), and

$$U_{\infty} = \sqrt{\tilde{v}_x^2 + \tilde{v}_y^2}.\tag{13.73}$$

Matrix  $\boldsymbol{B}$  is

$$\boldsymbol{B} = \tilde{\boldsymbol{B}} \boldsymbol{T}_{u} \left( U_{\infty} \right), \tag{13.74}$$

where

$$\tilde{\boldsymbol{B}} = \begin{bmatrix} 0 & 0 & 0 \\ 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 1 \\ 0 & 0 & 0 \end{bmatrix}, \tag{13.75}$$

and

$$T_{u} = \begin{bmatrix} 0 & 1 \\ 1 & -\frac{d_{1/4}}{U_{\infty}} \\ 1 & -\frac{d_{3/4}}{U_{\infty}} \end{bmatrix}^{-1} \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ \frac{1}{d_{3/4} - d_{1/4}} \begin{bmatrix} d_{3/4} & -d_{1/4} \\ U_{\infty} & -U_{\infty} \end{bmatrix} \end{bmatrix}.$$
(13.76)

$$\boldsymbol{B} = \begin{bmatrix} 0 & 0 \\ 0 & 1 \\ \frac{1}{d_{3/4} - d_{1/4}} d_{3/4} & -\frac{1}{d_{3/4} - d_{1/4}} d_{1/4} \\ 0 & 0 \\ \frac{1}{d_{3/4} - d_{1/4}} U_{\infty} & -\frac{1}{d_{3/4} - d_{1/4}} U_{\infty} \\ 0 & 0 \end{bmatrix}$$

$$(13.77)$$

$$u = \begin{cases} \tan^{-1} \left( \frac{-V_y - \omega_z d_{1/4}}{V_x} \right) \\ \tan^{-1} \left( \frac{-V_y - \omega_z d_{3/4}}{V_x} \right) \end{cases}$$
 (13.78)

Matrix C is

$$C = \begin{bmatrix} (A_1 + A_2) b_1 b_2 \left(\frac{2U_{\infty}}{c}\right)^2 & (A_1 b_1 + A_2 b_2) \left(\frac{2U_{\infty}}{c}\right) & 0 & 0 & 0 & 0\\ 0 & 0 & \omega_{\text{PD}}^2 & 0 & 0 & 0\\ 0 & 0 & 0 & 0 & \omega_{\text{PD}}^2 & 0\\ 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix}.$$
 (13.79)

Matrix  $\boldsymbol{D}$  is

$$D = \tilde{D}T_u\left(U_{\infty}\right),\tag{13.80}$$

where

$$D = \begin{bmatrix} 0 & (1 - A_1 - A_2) \\ 0 & 0 \\ 0 & 0 \\ \frac{1}{d_{3/4} - d_{1/4}} U_{\infty} & -\frac{1}{d_{3/4} - d_{1/4}} U_{\infty} \end{bmatrix}.$$
 (13.82)

$$\tilde{\boldsymbol{c}}_{f_a} = \left\{ \begin{array}{c} -c_d \\ c_l \\ 0 \end{array} \right\} = \boldsymbol{c}_{f_a}^{\text{lookup}} \left( \boldsymbol{y} \right) + \tilde{\boldsymbol{T}}_{f_a} \boldsymbol{y}. \tag{13.83}$$

$$\tilde{\boldsymbol{c}}_{c_a} = \left\{ \begin{array}{c} 0 \\ 0 \\ c_m \end{array} \right\} = \boldsymbol{c}_{c_a}^{\text{lookup}}(\boldsymbol{y}) + \tilde{\boldsymbol{T}}_{c_a} \boldsymbol{y}. \tag{13.84}$$

The second part is the noncirculatory effect.

$$\left\{ \begin{array}{l} c_{l}^{NC} \\ c_{m}^{NC} \end{array} \right\} = \mathbf{T}_{1} \mathbf{T}_{2} \left( U_{\infty} \right) \mathbf{y} = \tilde{\mathbf{T}} \mathbf{y}, \tag{13.85}$$

where

$$T_1 = \begin{bmatrix} 1 & 0 \\ -\frac{a+\frac{1}{2}}{2} & 1 \end{bmatrix}, \tag{13.86}$$

and

$$T_2 = \frac{C_{l_{\alpha}}}{2} \begin{bmatrix} 0 & \frac{1}{U_{\infty}} & -\frac{ca}{2U^2} & 0\\ 0 & \frac{a}{2U_{\infty}} & -\frac{c}{4U_{\infty}^2} \left(\frac{1}{8} + a^2\right) & -\frac{1}{4U_{\infty}} \end{bmatrix}.$$
 (13.87)

$$\tilde{T} = \frac{C_{l_{\alpha}}}{2} \frac{c}{2} \begin{bmatrix} 0 & \frac{1}{U_{\infty}} & -\frac{ca}{2U_{\infty}^2} & 0\\ 0 & -\frac{1}{4U_{\infty}} & \left(\frac{ca}{8U_{\infty}^2} - \frac{c}{32U_{\infty}^2}\right) & -\frac{1}{4U_{\infty}} \end{bmatrix}$$
(13.88)

$$\tilde{T}_{f_a} = \frac{C_{l_\alpha}}{2} \begin{bmatrix} 0 & \frac{1}{U_\infty} & -\frac{ca}{2U_\infty^2} & 0\\ 0 & 0 & 0 & 0\\ 0 & 0 & 0 & 0 \end{bmatrix}$$
(13.89)

$$\tilde{T}_{c_a} = \frac{C_{l_\alpha}}{2} \frac{c}{2} \begin{bmatrix} 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & -\frac{1}{4U_\infty} & \left(\frac{c_a}{8U_\infty^2} - \frac{c}{32U_\infty^2}\right) & -\frac{1}{4U_\infty} \end{bmatrix}$$
(13.90)

Finally,

$$\tilde{c}_{f_a} = c_{f_a}^{\text{lookup}}(y_1) + \left\{ \begin{array}{c} 0 \\ \frac{c_{l_\alpha}}{2} \frac{c}{2U_\infty} \left( y_2 - \frac{ca}{2U_\infty} y_3 \right) \\ 0 \end{array} \right\}.$$
(13.91)

$$\tilde{\mathbf{c}}_{c_a} = \mathbf{c}_{c_a}^{\text{lookup}}(y_1) + \left\{ \begin{array}{c} 0 \\ 0 \\ \frac{c_{l_\alpha}}{2} \frac{c}{2U_\infty} \left( -\frac{1}{4}y_2 + \left( \frac{ca}{8U_\infty} - \frac{c}{32U_\infty} \right) y_3 - \frac{1}{4}y_4 \right) \end{array} \right\}.$$
(13.92)

#### 13.7.1 Perturbation of the Equations

#### Perturbation of g with respect to $\tilde{v}$

The perturbation of g is

$$g_{/\tilde{\boldsymbol{v}}} = -\left(\boldsymbol{A}_{/U_{\infty}}\boldsymbol{q} + \boldsymbol{B}_{/U_{\infty}}\boldsymbol{u}\right)U_{\infty/\tilde{\boldsymbol{v}}} - \boldsymbol{B}\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}.$$
(13.93)

where, according to the previous definition of the matrices, the derivatives are

$$\boldsymbol{B}_{/U_{\infty}} = \begin{bmatrix} 0 & 0 \\ 0 & 0 \\ 0 & 0 \\ 0 \\ \frac{1}{d_{3/4} - d_{1/4}} & -\frac{1}{d_{3/4} - d_{1/4}} \\ 0 & 0 \end{bmatrix}$$
(13.95)

$$U_{\infty/\tilde{\mathbf{v}}} = \begin{bmatrix} \frac{\tilde{v}_x}{U_{\infty}} & \frac{\tilde{v}_y}{U_{\infty}} & 0 \end{bmatrix}$$
 (13.96)

$$\boldsymbol{u}_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} \frac{\tilde{v}_{y} + \tilde{\omega}_{z} d_{1/4}}{\tilde{v}_{x}^{2} + \tilde{v}_{y}^{2} + \tilde{\omega}_{z}^{2} d_{1/4}^{2} + 2\tilde{v}_{y} \tilde{\omega}_{z} d_{1/4}} & -\frac{\tilde{v}_{x}}{\tilde{v}_{x}^{2} + \tilde{v}_{y}^{2} + \tilde{\omega}_{z}^{2} d_{1/4}^{2} + 2\tilde{v}_{y} \tilde{\omega}_{z} d_{1/4}} & 0\\ \frac{\tilde{v}_{y} + \tilde{\omega}_{z} d_{3/4}}{\tilde{v}_{x}^{2} + \tilde{v}_{y}^{2} + \tilde{\omega}_{z}^{2} d_{3/4}^{2} + 2\tilde{v}_{y} \tilde{\omega}_{z} d_{3/4}} & -\frac{\tilde{v}_{x}}{\tilde{v}_{x}^{2} + \tilde{v}_{y}^{2} + \tilde{\omega}_{z}^{2} d_{1/4}^{2} + 2\tilde{v}_{y} \tilde{\omega}_{z} d_{1/4}} & 0 \end{bmatrix}$$

$$(13.97)$$

The explicit computation of each term of Eq. 13.93 yields

$$(\boldsymbol{A}_{U_{\infty}}\boldsymbol{q} + \boldsymbol{B}_{U_{\infty}}\boldsymbol{u}) U_{\infty/\tilde{v}} = \left\{ \begin{array}{c} 0 \\ -b_{1}b_{2}\frac{8}{c^{2}}U_{\infty}q_{1} - (b_{1} + b_{2})\frac{2}{c}q_{2} \\ 0 \\ 0 \\ \frac{u_{1} - u_{2}}{d_{3/4} - d_{1/4}} \\ 0 \end{array} \right\} \left\{ \begin{array}{c} \frac{\tilde{v}_{x}}{U_{\infty}} & \frac{\tilde{v}_{x}}{U_{\infty}} & 0 \end{array} \right\}$$
 (13.98)

$$= \begin{bmatrix} 0 & 0 & 0 & 0 \\ \left(-b_1b_2\frac{8}{c^2}U_{\infty}q_1 - (b_1 + b_2)\frac{2}{c}q_2\right)\frac{\tilde{v}_x}{U_{\infty}} & \left(-b_1b_2\frac{8}{c^2}U_{\infty}q_1 - (b_1 + b_2)\frac{2}{c}q_2\right)\frac{\tilde{v}_y}{U_{\infty}} & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ \left(\frac{u_1 - u_2}{d_{3/4} - d_{1/4}}\right)\frac{\tilde{v}_x}{U_{\infty}} & \left(\frac{u_1 - u_2}{d_{3/4} - d_{1/4}}\right)\frac{\tilde{v}_y}{U_{\infty}} & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix}$$

$$(13.99)$$

for the first, while the second yields

$$\boldsymbol{B}\boldsymbol{u}/\tilde{\boldsymbol{v}} = \begin{bmatrix} 0 & 0 & 0 \\ \boldsymbol{B}\boldsymbol{u}/\tilde{\boldsymbol{v}}(2,1) & \boldsymbol{B}\boldsymbol{u}/\tilde{\boldsymbol{v}}(2,2) & 0 \\ \boldsymbol{B}\boldsymbol{u}/\tilde{\boldsymbol{v}}(3,1) & \boldsymbol{B}\boldsymbol{u}/\tilde{\boldsymbol{v}}(3,2) & 0 \\ 0 & 0 & 0 \\ \boldsymbol{B}\boldsymbol{u}/\tilde{\boldsymbol{v}}(5,1) & \boldsymbol{B}\boldsymbol{u}/\tilde{\boldsymbol{v}}(5,2) & 0 \\ 0 & 0 & 0 \end{bmatrix}$$

$$(13.100)$$

The non-null terms are

$$\boldsymbol{B}\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,1\right) = \boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,1\right) \tag{13.101}$$

$$\boldsymbol{B}\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,2\right) = \boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,2\right) \tag{13.102}$$

$$Bu_{/\tilde{v}}(3,1) = B(3,1)u_{/\tilde{v}}(1,1) + B(3,2)u_{/\tilde{v}}(2,1)$$
 (13.103)

$$Bu_{/\tilde{v}}(3,2) = B(3,1)u_{/\tilde{v}}(1,2) + B(3,2)u_{/\tilde{v}}(2,2)$$
 (13.104)

$$Bu_{\tilde{v}}(3,1) = B(5,1)u_{\tilde{v}}(1,1) + B(5,2)u_{\tilde{v}}(2,1)$$
 (13.105)

$$Bu_{\tilde{v}}(3,2) = B(5,1)u_{\tilde{v}}(1,2) + B(5,2)u_{\tilde{v}}(2,2)$$
 (13.106)

So, the Jacobian matrix  $g_{/\tilde{v}}$  is

$$\mathbf{g}_{/\tilde{\mathbf{v}}} = \begin{bmatrix} 0 & 0 & 0 \\ \mathbf{g}_{/\tilde{\mathbf{v}}}(2,1) & \mathbf{g}_{/\tilde{\mathbf{v}}}(2,2) & 0 \\ \mathbf{g}_{/\tilde{\mathbf{v}}}(3,1) & \mathbf{g}_{/\tilde{\mathbf{v}}}(3,2) & 0 \\ 0 & 0 & 0 \\ \mathbf{g}_{/\tilde{\mathbf{v}}}(5,1) & \mathbf{g}_{/\tilde{\mathbf{v}}}(5,2) & 0 \\ 0 & 0 & 0 \end{bmatrix},$$
(13.107)

where the matrix elements are

$$g_{/\tilde{v}}(2,1) = -\left(-b_1 b_2 \frac{8}{c^2} U_{\infty} q_1 - (b_1 + b_2) \frac{2}{c} q_2\right) \frac{\tilde{v}_x}{U_{\infty}} - u_{/\tilde{v}}(2,1)$$
(13.108)

$$g_{/\tilde{v}}(2,2) = -\left(-b_1 b_2 \frac{8}{c^2} U_{\infty} q_1 - (b_1 + b_2) \frac{2}{c} q_2\right) \frac{\tilde{v}_y}{U_{\infty}} - u_{/\tilde{v}}(2,2)$$
(13.109)

$$g_{/\tilde{v}}(3,1) = -(B(3,1)u_{/\tilde{v}}(1,1) + B(3,2)u_{/\tilde{v}}(2,1))$$
(13.110)

$$g_{/\tilde{v}}(3,2) = -(B(3,1)u_{/\tilde{v}}(1,2) + B(3,2)u_{/\tilde{v}}(2,2))$$
 (13.111)

$$g_{\tilde{v}}(3,1) = -\left(\frac{u_1 - u_2}{d_{3/4} - d_{1/4}}\right) \frac{\tilde{v}_x}{U_{\infty}} - \left(\mathbf{B}(5,1)\mathbf{u}_{/\tilde{v}}(1,1) + \mathbf{B}(5,2)\mathbf{u}_{/\tilde{v}}(2,1)\right)$$
(13.112)

$$g_{\tilde{v}}(3,2) = -\left(\frac{u_1 - u_2}{d_{3/4} - d_{1/4}}\right) \frac{\tilde{v}_y}{U_{\infty}} - \left(\mathbf{B}(5,1)\mathbf{u}_{/\tilde{v}}(1,2) + \mathbf{B}(5,2)\mathbf{u}_{/\tilde{v}}(2,2)\right)$$
(13.113)

#### Perturbation of g with respect to $\tilde{\omega}$

The perturbation of q yields

$$g_{/\tilde{\omega}} = -Bu_{/\tilde{\omega}}.\tag{13.114}$$

Where

$$\mathbf{u}_{/\tilde{\omega}} = \begin{bmatrix} 0 & 0 & \frac{-\tilde{v}_x d_{1/4}}{\tilde{v}_x^2 + \tilde{v}_y^2 + \tilde{\omega}_z^2 d_{1/4}^2 + 2\tilde{v}_y \tilde{\omega}_z d_{1/4}} \\ 0 & 0 & \frac{-\tilde{v}_x d_{3/4}}{\tilde{v}_x^2 + \tilde{v}_y^2 + \tilde{\omega}_z^2 d_{3/4}^2 + 2\tilde{v}_y \tilde{\omega}_z d_{3/4}} \end{bmatrix}$$

$$(13.115)$$

Thus,

$$\mathbf{g}_{/\tilde{\omega}} = \begin{bmatrix} 0 & 0 & 0 \\ 0 & 0 & \mathbf{g}_{/\tilde{\omega}} (2,3) \\ 0 & 0 & \mathbf{g}_{/\tilde{\omega}} (3,3) \\ 0 & 0 & 0 \\ 0 & 0 & \mathbf{g}_{/\tilde{\omega}} (5,3) \\ 0 & 0 & 0 \end{bmatrix}$$
(13.116)

where

$$g_{/\tilde{\omega}}(2,3) = -u_{/\tilde{\omega}}(2,3) \tag{13.117}$$

$$g_{/\tilde{\omega}}(5,3) = -(B(3,1)u_{/\tilde{\omega}}(1,3) + B(3,2)u_{/\tilde{\omega}}(2,3))$$
(13.118)

$$\mathbf{g}_{/\tilde{\boldsymbol{\omega}}}\left(5,3\right) = -\left(\mathbf{B}\left(5,1\right)\mathbf{u}_{/\tilde{\boldsymbol{\omega}}}\left(1,3\right) + \mathbf{B}\left(5,2\right)\mathbf{u}_{/\tilde{\boldsymbol{\omega}}}\left(2,3\right)\right) \tag{13.119}$$

#### Perturbation of g with respect to q

The perturbation of g yields

$$g_{/q} = -A \tag{13.120}$$

#### Perturbation of g with respect to $\dot{q}$

The perturbation of g yields

$$g_{/\dot{q}} = I \tag{13.121}$$

#### 13.7.2 Perturbation of the aerodynamic forces

Perturbation of  $ilde{f}_a$  with respect to  $ilde{v}$ 

$$\tilde{\mathbf{f}}_{a/\tilde{\mathbf{v}}} = \rho c \tilde{\mathbf{c}}_{f_a} \begin{bmatrix} \tilde{v}_x & \tilde{v}_y & \tilde{v}_z \end{bmatrix} + \frac{1}{2} \rho \tilde{\mathbf{v}}^T \tilde{\mathbf{v}} c \left( \tilde{\mathbf{c}}_{f_{a/y}} \mathbf{y}_{/\tilde{\mathbf{v}}} + \tilde{\mathbf{c}}_{f_{a/U_{\infty}}} U_{\infty/\tilde{\mathbf{v}}} \right)$$
(13.122)

where

$$y_{/\tilde{v}} = (C_{/U_{\infty}}q + D_{/U_{\infty}}u)U_{\infty/\tilde{v}} + Du_{/\tilde{v}}$$
(13.123)

$$D_{/U_{\infty}} = \begin{bmatrix} 0 & 0 \\ 0 & 0 \\ 0 & 0 \\ \frac{1}{d_{3/4} - d_{1/4}} & -\frac{1}{d_{3/4} - d_{1/4}} \end{bmatrix}$$
 (13.125)

$$\tilde{c}_{f_{a/U_{\infty}}} = \left\{ \begin{array}{c} 0 \\ \frac{C_{l_{\alpha}}}{2} \frac{c}{2} \frac{1}{U_{\infty}^{2}} \left( -y_{2} + \frac{ca}{U_{\infty}} y_{3} \right) \\ 0 \end{array} \right\}$$
(13.126)

$$\tilde{c}_{f_{a/y}} = \begin{bmatrix} \frac{dc_d^{\text{lookup}}}{d\alpha} & 0 & 0 & 0\\ \frac{dc_l^{\text{lookup}}}{d\alpha} & \frac{C_{l_{\alpha}}}{2} \frac{c}{2U_{\infty}} & -\frac{c_{l_{\alpha}}}{2} \frac{c^2 a}{4U_{\infty}^2} & 0\\ 0 & 0 & 0 & 0 \end{bmatrix}$$
(13.127)

Perturbation of  $ilde{f}_a$  with respect to  $ilde{\omega}$ 

$$\tilde{\mathbf{f}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2} \rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \left( \tilde{\boldsymbol{c}}_{f_{a/y}} \boldsymbol{y}_{/\tilde{\boldsymbol{\omega}}} \right) \tag{13.128}$$

where

$$y_{/\tilde{\omega}} = Du_{/\tilde{\omega}} \tag{13.129}$$

Perturbation of  $ilde{f}_a$  with respect to q

$$\tilde{f}_{a/q} = \frac{1}{2} \rho \tilde{v}^T \tilde{v} c \left( \tilde{c}_{f_{a/y}} y_{/q} \right)$$
(13.130)

where

$$y_{/q} = C \tag{13.131}$$

Perturbation of  $ilde{f}_a$  with respect to  $\dot{q}$ 

$$\tilde{\mathbf{f}}_{a/\dot{\mathbf{q}}} = \mathbf{0} \tag{13.132}$$

#### 13.7.3 Perturbation of the aerodynamic moments

Perturbation of  $ilde{c}_a$  with respect to  $ilde{v}$ 

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}} = \rho c^2 \tilde{\boldsymbol{c}}_{c_a} \left[ \tilde{v}_x \quad \tilde{v}_y \quad \tilde{v}_z \right] + \frac{1}{2} \rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left( \tilde{\boldsymbol{c}}_{c_{a/y}} \boldsymbol{y}_{/\tilde{\boldsymbol{v}}} + \tilde{\boldsymbol{c}}_{c_{a/U_{\infty}}} U_{\infty/\tilde{\boldsymbol{v}}} \right)$$

$$(13.133)$$

$$\tilde{c}_{c_{a/U_{\infty}}} = \begin{cases}
0 \\
0 \\
\frac{c_{l_{\alpha}}}{2} \frac{c}{2} \frac{1}{4U_{\infty}^{2}} \left( y_{2} - \left( \frac{ca}{U_{\infty}} - \frac{c}{4U_{\infty}} \right) y_{3} + y_{4} \right)
\end{cases}$$
(13.134)

$$\tilde{c}_{c_{a/y}} = \begin{bmatrix}
0 & 0 & 0 & 0 & 0 \\
0 & 0 & 0 & 0 & 0 \\
\frac{dc_{m}^{\text{lookup}}}{d\alpha} & -\frac{1}{4} \frac{c_{l_{\alpha}}}{2} \frac{c}{2U_{\infty}} & \frac{c_{l_{\alpha}}}{2} \frac{c}{2U_{\infty}} \left(\frac{ca}{8U_{\infty}} - \frac{c}{32U_{\infty}}\right) & -\frac{1}{4} \frac{c_{l_{\alpha}}}{2} \frac{c}{2U_{\infty}}\end{bmatrix}$$
(13.135)

Perturbation of  $\tilde{c}_a$  with respect to  $\tilde{\omega}$ 

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2} \rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left( \tilde{\boldsymbol{c}}_{c_{a/\boldsymbol{y}}} \boldsymbol{y}_{/\tilde{\boldsymbol{\omega}}} \right)$$
(13.136)

Perturbation of  $ilde{c}_a$  with respect to q

$$\tilde{\boldsymbol{c}}_{a/q} = \frac{1}{2} \rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left( \tilde{\boldsymbol{c}}_{c_{a/y}} \boldsymbol{y}_{/q} \right)$$
(13.137)

Perturbation of  $\tilde{\boldsymbol{c}}_a$  with respect to  $\dot{\boldsymbol{q}}$ 

$$\tilde{\boldsymbol{c}}_{a/\dot{\boldsymbol{q}}} = \boldsymbol{0} \tag{13.138}$$

#### 13.7.4 Finite difference version

A reduced state-space model, with just 2 states instead of 6 states, can be used deleting the pseudo-derivative algorithm and computing the derivate using the backward finite difference.

The set of equations that descibes the unsteady aerodynamic loads is still the same:

$$\tilde{\mathbf{f}}_{a} = \frac{1}{2} \rho \tilde{\mathbf{v}}^{T} \tilde{\mathbf{v}} c \tilde{\mathbf{c}}_{f_{a}} \left( y \left( \tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, \mathbf{q} \right), U_{\infty} \right)$$
(13.139a)

$$\tilde{\boldsymbol{c}}_{a} = \frac{1}{2} \rho \tilde{\boldsymbol{v}}^{T} \tilde{\boldsymbol{v}} c^{2} \tilde{\boldsymbol{c}}_{c_{a}} \left( y \left( \tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q} \right), U_{\infty} \right)$$
(13.139b)

$$\mathbf{0} = g\left(\tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}, \mathbf{q}, \dot{\mathbf{q}}\right) = \dot{\mathbf{q}} - \mathbf{A}\left(U_{\infty}\right)\mathbf{q} - \mathbf{B}u\left(\tilde{\mathbf{v}}, \tilde{\boldsymbol{\omega}}\right), \tag{13.139c}$$

where  $\rho$  is the air density, c the airfoil chord and y is defined as:

$$y = C(U_{\infty}) q + Du(\tilde{v}, \tilde{\omega}). \tag{13.140}$$

In this case the matrix  $\boldsymbol{A}$  is:

$$\mathbf{A} = \begin{bmatrix} 0 & 1 \\ -b_1 b_2 \left(\frac{2U_{\infty}}{c}\right)^2 & -(b_1 + b_2) \left(\frac{2U_{\infty}}{c}\right) \end{bmatrix}, \tag{13.141}$$

where  $A_1$ ,  $A_2$ ,  $b_1$  and  $b_2$  are the coefficients of the Theodorsen function approximation (Table 13.1 from [?] and [?]),

The matrix  $\boldsymbol{B}$  is simply:

$$\boldsymbol{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \tag{13.142}$$

Whereas the input of the system u is the angle of attack computed at the 3/4 chord point:

$$u = \tan^{-1} \left( \frac{-V_y - \omega_z d_{3/4}}{V_x} \right) \tag{13.143}$$

The C matrix is:

$$C = \left[ (A_1 + A_2) b_1 b_2 \left( \frac{2U_{\infty}}{c} \right)^2 \left( A_1 b_1 + A_2 b_2 \right) \left( \frac{2U_{\infty}}{c} \right) \right].$$
 (13.144)

and the  $\boldsymbol{D}$  matrix:

$$\mathbf{D} = [ (1 - A_1 - A_2) ]. \tag{13.145}$$

Using the otuput y of this SISO state-space model as input for the lookup table the circulatory part of the unsteady loads is computed.

The non-circulatory part is computed starting from the angle of attack computed at 1/4 chord  $(u_1)$  and 3/4 chord  $(u_2)$ :

where:

$$\boldsymbol{u} = \left\{ \begin{array}{l} \tan^{-1} \left( \frac{-V_y - \omega_z d_{1/4}}{V_x} \right) \\ \tan^{-1} \left( \frac{-V_y - \omega_z d_{3/4}}{V_x} \right) \end{array} \right\}$$

$$(13.147)$$

Thus, the aerodynamic coefficients result:

$$\tilde{\mathbf{c}}_{f_a} = \mathbf{c}_{f_a}^{\text{lookup}}(y) + \left\{ \begin{array}{c} 0\\ \frac{c_{l_\alpha}}{2} \frac{c}{2U_\infty} \left( \dot{\alpha}_{pivot} - \frac{ca}{2U_\infty} \ddot{\alpha} \right) \\ 0 \end{array} \right\}.$$
(13.148)

$$\tilde{\mathbf{c}}_{c_a} = \mathbf{c}_{c_a}^{\text{lookup}}(y) + \left\{ \begin{array}{c} 0 \\ 0 \\ \frac{c_{l_\alpha}}{2} \frac{c}{2U_\infty} \left( -\frac{1}{4} \dot{\alpha}_{pivot} + \left( \frac{ca}{8U_\infty} - \frac{c}{32U_\infty} \right) \ddot{\alpha} - \frac{1}{4} \dot{\alpha} \right) \end{array} \right\}.$$
(13.149)

In order to compute the aerodynamic coefficients  $\dot{\alpha}_{pivot}$  and  $\ddot{\alpha}$  are necessary and they can be computed using the backward finite difference:

#### 13.7.5 Perturbation of the equations

#### Perturbation of g with respect to $\tilde{v}$

The perturbation of g is:

$$g_{/\tilde{v}} = -A_{/U_{\infty}} q U_{\infty/\tilde{v}} - B u_{/\tilde{v}}. \tag{13.151}$$

where, accordingly with the previous definition of the matrices the derivatives are:

$$\mathbf{A}_{/U_{\infty}} = \begin{bmatrix} 0 & 0 \\ -b_1 b_2 \frac{8}{c^2} U_{\infty} & -(b_1 + b_2) \frac{2}{c} \end{bmatrix}$$
 (13.152)

$$U_{\infty/\tilde{v}} = \begin{bmatrix} \frac{\tilde{v}_x}{U_{\infty}} & \frac{\tilde{v}_y}{U_{\infty}} & 0 \end{bmatrix}$$
 (13.153)

$$u_{/\tilde{\mathbf{v}}} = \begin{bmatrix} \frac{\tilde{v}_y + \tilde{\omega}_z d_{3/4}}{\tilde{v}_x^2 + \tilde{v}_y^2 + \tilde{\omega}_z^2 d_{3/4}^2 + 2\tilde{v}_y \tilde{\omega}_z d_{3/4}} & \frac{-\tilde{v}_x}{\tilde{v}_x^2 + \tilde{v}_y^2 + \tilde{\omega}_z^2 d_{3/4}^2 + 2\tilde{v}_y \tilde{\omega}_z d_{3/4}} & 0 \end{bmatrix}$$
 (13.154)

We can now explicitly perform the computation of each term of Eq. 13.151:

$$\mathbf{A}_{U_{\infty}} \mathbf{q} U_{\infty/\tilde{v}} = \left\{ \begin{array}{c} 0 \\ -b_1 b_2 \frac{8}{c^2} U_{\infty} q_1 - (b_1 + b_2) \frac{2}{c} q_2 \end{array} \right\} \left\{ \begin{array}{cc} \frac{\tilde{v}_x}{U_{\infty}} & \frac{\tilde{v}_x}{U_{\infty}} & 0 \end{array} \right\}$$
 (13.155)

$$= \begin{bmatrix} 0 & 0 & 0 \\ (-b_1b_2\frac{8}{c^2}U_{\infty}q_1 - (b_1 + b_2)\frac{2}{c}q_2)\frac{\tilde{v}_x}{U_{\infty}} & (-b_1b_2\frac{8}{c^2}U_{\infty}q_1 - (b_1 + b_2)\frac{2}{c}q_2)\frac{\tilde{v}_y}{U_{\infty}} & 0 \end{bmatrix}$$
(13.156)

wheres the second is:

$$\boldsymbol{B}u_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} 0 & 0 & 0 \\ u_{/\tilde{\boldsymbol{v}}}(1,1) & u_{/\tilde{\boldsymbol{v}}}(1,2) & 0 \end{bmatrix}$$

$$(13.157)$$

So, the jacobian matrix  $g_{/\tilde{v}}$  results:

$$\mathbf{g}_{/\tilde{\mathbf{v}}} = \begin{bmatrix} 0 & 0 & 0 \\ \mathbf{g}_{/\tilde{\mathbf{v}}} (2,1) & \mathbf{g}_{/\tilde{\mathbf{v}}} (2,2) & 0 \end{bmatrix}$$
 (13.158)

where the matrix elements are:

$$\mathbf{g}_{/\tilde{\mathbf{v}}}(2,1) = -\left(-b_1 b_2 \frac{8}{c^2} U_{\infty} q_1 - (b_1 + b_2) \frac{2}{c} q_2\right) \frac{\tilde{v}_x}{U_{\infty}} - u_{/\tilde{\mathbf{v}}}(1,1)$$
(13.159)

$$\mathbf{g}_{/\tilde{\mathbf{v}}}(2,2) = -\left(-b_1 b_2 \frac{8}{c^2} U_{\infty} q_1 - (b_1 + b_2) \frac{2}{c} q_2\right) \frac{\tilde{v}_y}{U_{\infty}} - u_{/\tilde{\mathbf{v}}}(1,2)$$
(13.160)

#### Perturbation of g with respect to $\tilde{\omega}$

The perturbation of  $\boldsymbol{g}$  is:

$$g_{/\tilde{\omega}} = -Bu_{/\tilde{\omega}}.\tag{13.161}$$

Where:

$$u_{/\tilde{\omega}} = \begin{bmatrix} 0 & 0 & \frac{-\tilde{v}_x d_{3/4}}{\tilde{v}_x^2 + \tilde{v}_y^2 + \tilde{\omega}_z^2 d_{3/4}^2 + 2\tilde{v}_y \tilde{\omega}_z d_{3/4}} \end{bmatrix}$$
 (13.162)

Thus, it results:

$$\mathbf{g}_{/\tilde{\boldsymbol{\omega}}} = \begin{bmatrix} 0 & 0 & 0 \\ 0 & 0 & -u_{/\tilde{\boldsymbol{\omega}}} (1,3) \end{bmatrix}$$
 (13.163)

#### Perturbation of g with respect to q

The perturbation of  $\boldsymbol{g}$  is simply:

$$g_{/q} = -A \tag{13.164}$$

#### Perturbation of g with respect to $\dot{q}$

The perturbation of  $\boldsymbol{g}$  is simply:

$$g_{/\dot{q}} = I \tag{13.165}$$

#### 13.7.6 Perturbation of the aerodynamic forces

Perturbation of  $ilde{f}_a$  with respect to  $ilde{v}$ 

$$\tilde{\mathbf{f}}_{a/\tilde{\mathbf{v}}} = \rho c \tilde{\mathbf{c}}_{f_a} \begin{bmatrix} \tilde{v}_x & \tilde{v}_y & \tilde{v}_z \end{bmatrix} + \frac{1}{2} \rho \tilde{\mathbf{v}}^T \tilde{\mathbf{v}} c \left( \tilde{\mathbf{c}}_{f_{a/y}} y_{/\tilde{\mathbf{v}}} + \tilde{\mathbf{c}}_{f_{a/U_{\infty}}} U_{\infty/\tilde{\mathbf{v}}} \right)$$
(13.166)

where:

$$y_{/\tilde{\mathbf{v}}} = C_{/U_{\infty}} q U_{\infty/\tilde{\mathbf{v}}} + D u_{/\tilde{\mathbf{v}}}$$
(13.167)

$$C_{/U_{\infty}} = \left[ (A_1 + A_2) b_1 b_2 \frac{8}{c^2} U_{\infty} \quad (A_1 b_1 + A_2 b_2) \frac{2}{c} \right]$$
 (13.168)

$$\tilde{c}_{f_{a/U_{\infty}}} = \left\{ \begin{array}{c}
0 \\
\frac{C_{l_{\alpha}}}{2} \frac{c}{2} \frac{1}{U_{\infty}^{2}} \left( -\dot{\alpha}_{pivot} + \frac{ca}{U_{\infty}} \ddot{\alpha} \right) \\
0
\end{array} \right\}$$
(13.169)

$$\tilde{c}_{f_{a/y}} = \left\{ \begin{array}{c} \frac{dc_d^{\text{lookup}}}{d\alpha} \\ \frac{dc_l^{\text{lookup}}}{d\alpha} \\ 0 \end{array} \right\}$$
(13.170)

where the dependence of  $\dot{\alpha}_{pivot}$ ,  $\dot{\alpha}$  and  $\ddot{\alpha}$  is neglected.

Perturbation of  $ilde{f}_a$  with respect to  $ilde{\omega}$ 

$$\tilde{\mathbf{f}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2} \rho \tilde{\mathbf{v}}^T \tilde{\mathbf{v}} c \left( \tilde{\mathbf{c}}_{f_{a/y}} y_{/\tilde{\boldsymbol{\omega}}} \right)$$
(13.171)

where:

$$y_{/\tilde{\omega}} = Du_{/\tilde{\omega}} \tag{13.172}$$

Perturbation of  $ilde{f}_a$  with respect to q

$$\tilde{f}_{a/q} = \frac{1}{2} \rho \tilde{v}^T \tilde{v} c \left( \tilde{c}_{f_{a/y}} y_{/q} \right)$$
(13.173)

where:

$$y_{/q} = C \tag{13.174}$$

Perturbation of  $ilde{f}_a$  with respect to  $\dot{q}$ 

$$\tilde{f}_{a/\dot{q}} = \mathbf{0} \tag{13.175}$$

#### 13.7.7 Perturbation of the aerodynamic moments

Perturbation of  $ilde{c}_a$  with respect to  $ilde{v}$ 

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}} = \rho c^2 \tilde{\boldsymbol{c}}_{c_a} \left[ \tilde{v}_x \quad \tilde{v}_y \quad \tilde{v}_z \right] + \frac{1}{2} \rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left( \tilde{\boldsymbol{c}}_{c_{a/y}} y_{/\tilde{\boldsymbol{v}}} + \tilde{\boldsymbol{c}}_{c_{a/U_{\infty}}} U_{\infty/\tilde{\boldsymbol{v}}} \right)$$
(13.176)

$$\tilde{c}_{c_{a/U_{\infty}}} = \left\{ \begin{array}{c} 0 \\ 0 \\ \frac{c_{l_{\alpha}}}{2} \frac{c}{2} \frac{1}{4U_{\infty}^{2}} \left( \dot{\alpha}_{pivot} - \left( \frac{ca}{U_{\infty}} - \frac{c}{4U_{\infty}} \right) \ddot{\alpha} + \dot{\alpha} \right) \end{array} \right\}$$
(13.177)

$$\tilde{\boldsymbol{c}}_{c_{a/y}} = \begin{bmatrix} 0\\0\\\frac{dc_{m}^{\text{lookup}}}{d\alpha} \end{bmatrix}$$
 (13.178)

where again the dependence of  $\dot{\alpha}_{pivot}$ ,  $\dot{\alpha}$  and  $\ddot{\alpha}$  is neglected.

Perturbation of  $\tilde{c}_a$  with respect to  $\tilde{\omega}$ 

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2} \rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left( \tilde{\boldsymbol{c}}_{c_{a/y}} y_{/\tilde{\boldsymbol{\omega}}} \right) \tag{13.179}$$

Perturbation of  $\tilde{c}_a$  with respect to q

$$\tilde{\mathbf{c}}_{a/\mathbf{q}} = \frac{1}{2} \rho \tilde{\mathbf{v}}^T \tilde{\mathbf{v}} c^2 \left( \tilde{\mathbf{c}}_{c_{a/y}} y_{/\mathbf{q}} \right) \tag{13.180}$$

Perturbation of  $\tilde{\boldsymbol{c}}_a$  with respect to  $\dot{\boldsymbol{q}}$ 

$$\tilde{\boldsymbol{c}}_{a/\dot{\boldsymbol{q}}} = \boldsymbol{0} \tag{13.181}$$

#### **13.8** Rotor

**Definitions.** Axis 3 is the rotor's axis.  $\tilde{v}$  is the composition of the velocity of the 'aircraft' node and of the airstream speed, if any, projected in the reference frame of the 'aircraft' node, namely

$$\tilde{\mathbf{v}} = \mathbf{R}_{\text{craft}}^T \left( -\mathbf{v}_{\text{craft}} + \mathbf{v}_{\infty} \right). \tag{13.182}$$

$$v_{12} = \sqrt{v_1^2 + v_2^2} \tag{13.183a}$$

$$v = \sqrt{v_1^2 + v_2^2 + v_3^2} = \sqrt{\tilde{v}^T \tilde{v}}$$
(13.183b)

$$\sin \alpha_d = -v_3/v \tag{13.183c}$$

$$\cos \alpha_d = v_{12}/v \tag{13.183d}$$

$$\psi_0 = \tan^{-1} \left( \frac{v_2}{v_1} \right) \tag{13.183e}$$

$$v_{\rm tip} = \Omega R \tag{13.183f}$$

$$\mu = \cos \alpha_d \frac{v}{v_{\text{tip}}} \tag{13.183g}$$

Note:  $v \ge 0$  and  $v_{12} \ge 0$  by definition; as a consequence,  $\cos \alpha_d \ge 0$ , while the sign of  $\sin \alpha_d$  depends on whether the flow related to the absolute motion of the rotor enters the disk from above (> 0) or from below (< 0).  $v_{\text{tip}} > 0$  by construction  $(\Omega = ||\omega||)$ , and no induced velocity is computed if  $\Omega$  is below a threshold). As a consequence,  $\mu \ge 0$ .

**Ground effect.** If defined, according to [?],

$$u_{\rm IGE} = k_{\rm GE} u_{\rm OGE} \tag{13.184a}$$

$$k = 1 - \frac{1}{z^2} \tag{13.184b}$$

$$z = \max\left(\frac{h}{R}, \frac{1}{4}\right) \tag{13.184c}$$

where h is the component along axis 3 of the 'ground' node of distance between the 'aircraft' and the 'ground' node, assuming the 'aircraft' node is located at the hub center.

**Reference Induced Velocity.** The reference induced velocity u is computed by solving the implicit problem

$$f = \lambda_u - \frac{C_t}{2\sqrt{\mu^2 + \lambda^2}} = 0, (13.185)$$

with

$$C_t = \frac{T}{\rho \pi R^4 \Omega^2} \tag{13.186a}$$

$$\lambda_u = \frac{u}{v_{\text{tip}}} \tag{13.186b}$$

$$\lambda = \frac{v \sin \alpha_d + u}{v_{\text{tip}}} = \mu \tan \alpha_d + \lambda_u; \tag{13.186c}$$

T is the component of the aerodynamic force of the rotor along the shaft axis. The value of  $\lambda_u$  is initialized using the reference induced velocity u at the previous step/iteration. Only when u = 0 and  $C_t \neq 0$ , u is initialized using its nominal value in hover,

$$u = \operatorname{sign}(T) \sqrt{\frac{\|T\|}{2\rho A}}.$$
(13.187)

The problem is solved by means of a local Newton iteration. The Jacobian of the problem is

$$\frac{\partial f}{\partial \lambda_u} = 1 + \frac{C_t}{2\left(\mu^2 + \lambda^2\right)^{3/2}} \lambda. \tag{13.188}$$

The solution,

$$\Delta \lambda_u = -\left(\frac{\partial f}{\partial \lambda_u}\right)^{-1} f,\tag{13.189}$$

is added to  $\lambda_u$  as  $\lambda_u + = \eta \Delta \lambda_u$ , where  $0 < \eta \le 1$  is an optional relaxation factor (by default,  $\eta = 1$ ).

**Corrections.** The reference induced velocity is corrected by separately correcting the inflow and advance parameters, namely

$$\lambda^* = \frac{\lambda}{k_{\rm H}^2} \tag{13.190a}$$

$$\mu^* = \frac{\mu}{k_{\rm EF}}$$
 (13.190b)

(by default,  $k_{\rm H}=1$  and  $k_{\rm FF}=1$ ). The reference induced velocity is then recomputed as

$$u^* = (1 - \rho) k_{\text{GE}} v_{\text{tip}} \frac{C_t}{2\sqrt{\mu^{*2} + \lambda^{*2}}} + \rho u_{\text{prev}}^*, \tag{13.191}$$

where  $0 \le \rho < 1$  is a memory factor (by default,  $\rho = 0$ ).

Note: in principle, multiple solutions for  $\lambda_u$  are possible. However, only one solution is physical. Currently, no strategy is put in place to ensure that only the physical solution is considered.

#### 13.8.1 Uniform Inflow Model

The induced velocity is equal to its reference value,  $u^*$ , everywhere.

#### 13.8.2 Glauert Model

In forward flight (when  $\mu > 0.15$ ) the inflow over the rotor disk can be approximated by:

$$\lambda_i = \lambda_0 \left( 1 + k_x \frac{x}{R} + k_y \frac{y}{R} \right) \tag{13.192}$$

$$= \lambda_0 \left( 1 + k_x r \cos \psi + k_y r \sin \psi \right), \tag{13.193}$$

where the mean induced velocity  $\lambda_0$  is computed as shown in the previous section, while  $r = \sqrt{x^2 + y^2}/R$  is the nondimensional radius.

Table 13.2: Glauert inflow model (source: Leishman [?])

Author(s)	$k_x$	$k_y$
Coleman et al. (1945)	$\tan \frac{\chi}{2}$	0
Drees (1949)	$\frac{4}{3} \frac{\left(1 - \cos \chi - 1.8\mu^2\right)}{\sin \chi}$	$-2\mu$
Payne (1959)	$\frac{4}{3}(\mu/\lambda/(1.2 + \mu/\lambda))$	0
White & Blake (1979)	$\sqrt{2}\sin\chi$	0
Pitt & Peters (1981)	$\frac{15\pi}{23}\tan\frac{\chi}{2}$	0
Howlett (1981)	$\sin^2 \chi$	0

In literature a lot of expressions for the  $k_x$  and  $k_y$  coefficients have been proposed by different authors, as summarized in table 13.2. Up to now in MBDyn the following expressions are implemented:

$$k_x = \frac{4}{3} \left( 1 - 1.8\mu^2 \right) \tan \frac{\chi}{2} \tag{13.194}$$

$$k_y = 0, (13.195)$$

#### FIXME: è diversa dalle espressioni riportate sul Leishman!

where  $\chi$  is the wake skew angle:

$$\chi = \tan^{-1}\left(\frac{\mu}{\lambda}\right). \tag{13.196}$$

#### TODO: check, dovrebbe essere equivalente all'espressione di Leishman ma sarebbe meglio verificare!!!

Note: the Glauert inflow model exactly matches the uniform inflow model when the advance ratio is null (in hover). In fact, when  $\mu = 0$  then  $\chi = k_x = 0$ . The inflow is thus uniform over the rotor disk, and equal to  $\lambda_0$ .

Table 13.3: Glauert inflow model as implemented in MBDyn

Name	Author(s)	$k_x$	$k_y$
(default)	Glauert	$\frac{4}{3}\left(1-1.8\mu^2\right)\tan\left(\frac{\chi}{2}\right)$	0
coleman	Coleman et al. (1945)	$\tan\left(\frac{\chi}{2}\right)$	0
drees	Drees (1949)	$\frac{4}{3} \frac{\left(1 - \cos \chi - 1.8\mu^2\right)}{\sin \chi}$	$-2\mu$
payne	Payne (1959)	$\frac{4}{3} \frac{\mu/\lambda}{1.2 + \mu/\lambda}$	0
white and blake	White & Blake (1979)	$\sqrt{2}\sin\chi$	0
pitt and peters	Pitt & Peters (1981)	$\frac{15\pi}{23}\tan\left(\frac{\chi}{2}\right)$	0
howlett	Howlett (1981)	$\sin^2 \chi$	0
drees 2	Drees (?)	$\frac{4}{3}\left(1 - 1.8\mu^2\right)\sqrt{1 - \frac{\lambda}{\mu} + \left(\frac{\lambda}{\mu}\right)^2}$	$-2\mu$

#### 13.8.3 Mangler-Squire Model

The Mangler-Squire model is developed under the high speed assumption and it should be used only for advance ratio grater than 0.1.

In the original formulation the induced velocity is computed as:

$$\lambda_i = \left(\frac{2C_T}{\mu}\right) \left[\frac{c_0}{2} - \sum_{n=1}^{\infty} c_n(r, \alpha_d) \cos n\psi\right],\tag{13.197}$$

since the advance ratio  $\mu$  appears in the denominator this expression is not valid in hover. Bramwell [?] proposed a different expression for the induced velocity:

$$\lambda_i = 4\lambda_0 \left[ \frac{c_0}{2} - \sum_{n=1}^{\infty} c_n(r, \alpha_d) \cos n\psi \right], \tag{13.198}$$

where  $\lambda_0$  is the mean inflow computed as shown before. In this way the Mangler-Squire inflow model makes sense also in hover. MBDyn uses the latter version.

The expression of the  $c_n$  coefficients depends on the form of the rotor disk loading. Mangler and Squire developed the theory for two fundamental forms: Type I (elliptical loading) and Type III (a loading that vanishes at the edges and at the center of the disk). The total loading is finally obtained by a linear combination of Type I and Type III loadings (see [?]).

MBDyn uses just a Type III loading, and the resulting expressions for the  $c_n$  coefficients are:

$$c_0 = \frac{15}{8} \eta \left( 1 - \eta^2 \right), \tag{13.199}$$

where  $\eta = \sqrt{1-r^2}$ , and  $r = \sqrt{x^2 + y^2}/R$  is the nondimensional radius.

$$c_1 = -\frac{15\pi}{256} \left( 5 - 9\eta^2 \right) \left[ \left( 1 - \eta^2 \right) \left( \frac{1 - \sin \alpha_d}{1 + \sin \alpha_d} \right) \right]^{\frac{1}{2}}, \tag{13.200}$$

$$c_3 = \frac{45\pi}{256} \left[ (1 - \eta^2) \left( \frac{1 - \sin \alpha_d}{1 + \sin \alpha_d} \right) \right]^{\frac{3}{2}}, \tag{13.201}$$

and  $c_n = 0$  for odd values of  $n \ge 0$ .

For even values:

$$c_n = (-1)^{\frac{n}{2} - 1} \frac{15}{8} \left[ \frac{\eta + n}{n^2 - 1} \frac{9\eta^2 + n^2 - 6}{n^2 - 9} + \frac{3\eta}{n^2 - 9} \right] \left[ \left( \frac{1 - \eta}{1 + \eta} \right) \left( \frac{1 - \sin \alpha_d}{1 + \sin \alpha_d} \right) \right]^{\frac{n}{2}}, \tag{13.202}$$

Note: the version proposed by Bramwell [?] makes sense also in hover but gives different results with respect to the uniform inflow and the Glauert inflow models. Let assume  $\alpha_d = \pi/2$ , it follows that  $c_n = 0$  for  $n \ge 1$ . Therefore the induced velocity does not depend on the azimuthal position  $\psi$  but only on the radial position r, so the inflow is not uniform, but the mean inflow is still  $\lambda_0$ .

#### 13.8.4 Dynamic Inflow Model

The dynamic inflow model implemented in MBDyn has been developed by Pitt and Peters [?]. Here the model is just briefly described together with the MBDyn implementation peculiarities.

The inflow dynamics is represented by a simple first-order linear model:

$$M\dot{\lambda} + L^{-1}\lambda = c, ag{13.203}$$

where  $\lambda$  is a vector with 3 elements:

$$\boldsymbol{\lambda} = \begin{bmatrix} \lambda_0 \\ \lambda_s \\ \lambda_c \end{bmatrix}, \tag{13.204}$$

the induced velocity on the rotor disk is finally obtained as function of the azimuthal angle  $\psi$  and the non dimensional radial position  $r=\frac{\sqrt{x^2+y^2}}{R}$  using the following equation:

$$u_{ind}(r,\psi) = \Omega R(\lambda_0 + \lambda_s r \sin \psi + \lambda_c r \cos \psi). \tag{13.205}$$

The right-hand term in equation 13.203 contains the thrust, roll moment and pitch moment coefficients:

$$\mathbf{c} = \begin{bmatrix} C_T \\ C_L \\ C_M \end{bmatrix} = \begin{bmatrix} \frac{T}{\rho A \Omega^2 R^2} \\ \frac{L}{\rho A \Omega^2 R^3} \\ \frac{M}{\rho A \Omega^2 R^3} \end{bmatrix}, \tag{13.206}$$

while  $\lambda$  is derived with respect a non-dimensional time  $\Omega t$ :

$$\dot{\lambda} = \frac{d\lambda}{d(\Omega t)}. (13.207)$$

Equation 13.203 could be rewritten as:

$$M\dot{\lambda} + \Omega L^{-1}\lambda = \Omega c, \tag{13.208}$$

where now the dot represents the (dimensional) time derivative. The latter is the form implemented in MBDvn.

Matrix  $\boldsymbol{L}$  is defined as:

$$\mathbf{L} = \tilde{\mathbf{L}} \cdot \mathbf{K} = \begin{bmatrix}
\frac{1}{2} & 0 & \frac{15\pi}{64} \tan \frac{\chi}{2} \\
0 & -\frac{4}{2\cos^{2} \frac{\chi}{2}} & 0 \\
\frac{15\pi}{64} \tan \frac{\chi}{2} & 0 & -\frac{4(2\cos^{2} \frac{\chi}{2} - 1)}{2\cos^{2} \frac{\chi}{2}}
\end{bmatrix} \begin{bmatrix}
\frac{1}{V_{T}} & \\
\frac{1}{V_{m}} & \\
\frac{1}{V_{m}} & \\
\frac{1}{V_{m}} & \\
\end{bmatrix}, (13.209)$$

where  $\chi$  is wake skew angle defined as:

$$\chi = \tan^{-1} \frac{\mu}{\lambda},\tag{13.210}$$

where

$$\mu = \frac{V_{\infty} \cos \alpha_d}{\Omega R},\tag{13.211}$$

and

$$\lambda = \frac{V_{\infty} \sin \alpha_d}{\Omega R} + \frac{u_{ind}^0}{\Omega R},\tag{13.212}$$

where  $u_{ind}^0$  is the steady uniform induced velocity computed as described in the uniform inflow model section. The elements in matrix K matrix are respectively:

$$V_T = \sqrt{\lambda^2 + \mu^2},\tag{13.213}$$

and

$$V_m = \frac{\mu^2 + \lambda \left(\lambda + \frac{u_{ind}^0}{\Omega R}\right)}{\sqrt{\lambda^2 + \mu^2}} \tag{13.214}$$

Note: matrix L is slightly different from matrix L in Pitt and Peters' paper [?] because here the first column elements are divided by  $V_T$  while the second and third columns elements by  $V_m$ , whereas in matrix L an unique value v is used for all the elements in the matrix. The  $V_m$  term corresponds to the steady lift mass-flow parameter defined in the Pitt and Peters paper, while the  $V_T$  corresponds to the no lift mass-flow parameter, because  $\overline{\lambda} + \overline{\nu} = \lambda$  and  $\overline{\nu} = u_{ind}^0/(\Omega R)$ . Moreover in the Pitt and Peters work the elements are function of  $\alpha = \tan^{-1}\frac{\lambda}{\mu}$ , the relation between  $\alpha$  and  $\chi$  is:

$$\alpha = \frac{\pi}{2} - \chi. \tag{13.215}$$

So,

$$\sin \alpha = \cos \chi = \cos \left(\frac{\chi}{2} + \frac{\chi}{2}\right) = \cos^2 \frac{\chi}{2} - \sin^2 \frac{\chi}{2} = 2\cos^2 \frac{\chi}{2} - 1,\tag{13.216}$$

$$\sqrt{\frac{1 - \sin \alpha}{1 + \sin \alpha}} = \sqrt{\frac{2 - 2\cos^2 \frac{\chi}{2}}{2\cos^2 \frac{\chi}{2}}} = \sqrt{\frac{2\sin^2 \frac{\chi}{2}}{2\cos^2 \frac{\chi}{2}}} = \tan \frac{\chi}{2}.$$
 (13.217)

That means that the only difference in the MBDyn implementation is related to matrix K.

In MBDyn the inversion of the L matrix is formulated analytically; matrix  $L^*$  is defined as:

$$\boldsymbol{L}^* = \Omega \boldsymbol{L}^{-1} = \Omega \begin{bmatrix} \frac{l_{33}}{l_{11}l_{33} - l_{13}l_{31}} & 0 & -\frac{l_{13}}{l_{11}l_{33} - l_{13}l_{31}} \\ 0 & \frac{1}{l_{22}} & 0 \\ -\frac{l_{31}}{l_{11}l_{33} - l_{13}l_{31}} & 0 & \frac{l_{11}}{l_{11}l_{33} - l_{13}l_{31}} \end{bmatrix}.$$
(13.218)

Finally, matrix M is defined as:

$$\mathbf{M} = \begin{bmatrix} \frac{128}{75\pi} & 0 & 0\\ 0 & -\frac{16}{45\pi} & 0\\ 0 & 0 & -\frac{16}{45\pi} \end{bmatrix}. \tag{13.219}$$

Note: this choice of matrix M corresponds to the mixed uncorrected-corrected (following the authors' nomenclature) M-matrix proposed by Pitt and Peters in their paper.

#### 13.9 Aero Modal

### 13.9.1 Clamped

#### TODO

The matrices A, B, C,  $D_0$ ,  $D_1$  and  $D_2$ , of a state space model according to the representation

$$\dot{x} = Ax + Bq$$
 
$$f = q \left( Cx + D_0 q + \frac{c}{2V_{\infty}} D_1 \dot{q} + \left( \frac{c}{2V_{\infty}} \right)^2 D_2 \ddot{q} \right)$$

where x are the aerodynamic state variables, q are the modal variables that describe the structural motion as defined in the related modal joint, c is the reference length,  $V_{\infty}$  is the free airstream velocity,  $q = \rho V_{\infty}^2/2$  is the dynamic pressure, and f are the unsteady aerodynamic forces applied to the structural dynamics equations.

#### 13.9.2 Free

#### TODO

The matrices A, B, C,  $D_0$ ,  $D_1$  and  $D_2$ , of a state space model according to the representation

$$\dot{\boldsymbol{x}} = \boldsymbol{A}\boldsymbol{x} + \boldsymbol{B}\boldsymbol{q} + \boldsymbol{B}_{q_x}\boldsymbol{q}_x + \boldsymbol{B}_{q_{\theta}}\boldsymbol{q}_{\theta} 
\boldsymbol{f} = q \left( \boldsymbol{C}\boldsymbol{x} + \boldsymbol{D}_0\boldsymbol{q} + \boldsymbol{D}_{0q_x}\boldsymbol{q}_x + \boldsymbol{D}_{0q_{\theta}}\boldsymbol{q}_{\theta} + \frac{c}{2V_{\infty}} \left( \boldsymbol{D}_1\dot{\boldsymbol{q}} + \boldsymbol{D}_{1q_x}\dot{\boldsymbol{q}}_x + \boldsymbol{D}_{1q_{\theta}}\dot{\boldsymbol{q}}_{\theta} \right) + \left( \frac{c}{2V_{\infty}} \right)^2 \left( \boldsymbol{D}_2\ddot{\boldsymbol{q}} + \boldsymbol{D}_{2q_x}\ddot{\boldsymbol{q}}_x + \boldsymbol{D}_{2q_{\theta}}\ddot{\boldsymbol{q}}_{\theta} \right) \right) 
\boldsymbol{F} = q\boldsymbol{R} \left( \boldsymbol{C}_F\boldsymbol{x} + \boldsymbol{D}_{0F}\boldsymbol{q} + \boldsymbol{D}_{0Fq_x}\boldsymbol{q}_x + \boldsymbol{D}_{0Fq_{\theta}}\boldsymbol{q}_{\theta} + \frac{c}{2V_{\infty}} \left( \boldsymbol{D}_{1F}\dot{\boldsymbol{q}} + \boldsymbol{D}_{1Fq_x}\dot{\boldsymbol{q}}_x + \boldsymbol{D}_{1Fq_{\theta}}\dot{\boldsymbol{q}}_{\theta} \right) + \left( \frac{c}{2V_{\infty}} \right)^2 \left( \boldsymbol{D}_{2F}\ddot{\boldsymbol{q}} + \boldsymbol{D}_{2Fq_x}\ddot{\boldsymbol{q}}_x + \boldsymbol{D}_{2Fq_x}\ddot{\boldsymbol{q}}_x + \boldsymbol{D}_{2Fq_x}\ddot{\boldsymbol{q}}_x \right) \right)$$

where 
$$q_x = \mathbf{R}^T(\mathbf{x} - \mathbf{x}_0), \ q_\theta = \mathbf{R}^T(\boldsymbol{\theta}_\Delta - \boldsymbol{\theta}_{\Delta 0}), \ \dot{q}_x = \mathbf{R}^T\dot{\mathbf{x}}, \ \dot{q}_\theta = \mathbf{R}^T\boldsymbol{\omega}, \dots$$

# Chapter 14

# **Forces**

- 14.1 Abstract Force
- 14.1.1 Abstract
- 14.1.2 Abstract Internal
- 14.2 Structural Forces

#### 14.2.1 Force

Absolute

Follower

#### Absolute Internal

A structural internal force is a pair of internal forces, of equal magnitude and opposite direction, applied to two nodes. Consider two nodes, 1 and 2, and an internal force f. The force is applied to node 1 with an offset,  $\tilde{o}_1$ , in the node's reference frame.

The force and moment acting on the first node are

$$f_1 = f \tag{14.1a}$$

$$m_1 = o_1 \times f \tag{14.1b}$$

with  $o_1 = R_1 \tilde{o}_1$ , where  $R_1$  is the orientation matrix of the first node.

The force acting on the second node is

$$f_2 = -f \tag{14.2}$$

Two options are available for the moment applied to the second node:

- Case 1: the opposite force is applied to node 2 with another offset,  $\tilde{o}_2$ , in the node's reference frame;
- Case 2: the opposite force is applied to node 2 in the same point where it is applied to node 1. This case is not implemented yet.

In the first case, the moment acting on the second node is

$$m_2 = -o_2 \times f \tag{14.3}$$

with  $o_2 = R_2 \tilde{o}_2$ , where  $R_2$  is the orientation matrix of the second node.

In the second case, the moment acting on the second node is

$$m_2 = -(p_1 + o_1 - p_2) \times f \tag{14.4}$$

where  $p_1$  and  $p_2$  are the positions of the two nodes.

When the force is *absolute*, its direction is fixed in the global reference frame. As such, f does not depend on the orientation of any node.

The linearization of the forces and moments is thus:

$$\Delta f_1 = \mathbf{0} \tag{14.5a}$$

$$\Delta m_1 = (\theta_{1\Delta} \times o_1) \times f = f \times o_1 \times \theta_{1\Delta}$$
(14.5b)

$$\Delta f_2 = \mathbf{0} \tag{14.5c}$$

Case 1:

$$\Delta m_2 = -(\theta_{2\Delta} \times o_2) \times f = -f \times o_2 \times \theta_{2\Delta}$$
(14.5d)

Case 2

$$\Delta m_2 = -(\Delta p_1 + \theta_{1\Delta} \times o_1 - \Delta p_2) \times f = f \times \Delta p_1 - f \times o_1 \times \theta_{1\Delta} - f \times \Delta p_2$$
(14.5e)

#### **Follower Internal**

When the force is *follower*, it can be expressed as

$$f = R_1 \tilde{f} \tag{14.6}$$

with  $\tilde{f}$  expressed in the frame of the first node, i.e., it is assumed to follow the orientation of the first node.

The linearization of the forces and moments is thus:

$$\Delta f_1 = \theta_{1\Delta} \times f = -f \times \theta_{1\Delta} \tag{14.7a}$$

$$\Delta m_1 = (\theta_{1\Delta} \times o_1) \times f + o_1 \times \theta_{1\Delta} \times f = (f \times o_1) \times \theta_{1\Delta}$$
(14.7b)

$$\Delta f_2 = -\theta_{1\Delta} \times f = f \times \theta_{1\Delta} \tag{14.7c}$$

Case 1:

$$\Delta m_2 = -(\theta_{2\Delta} \times o_2) \times f - o_2 \times \theta_{1\Delta} \times f = o_2 \times f \times \theta_{1\Delta} - f \times o_2 \times \theta_{2\Delta}$$
(14.7d)

$$\Delta m_2 = -(\Delta p_1 + \theta_{1\Delta} \times o_1 - \Delta p_2) \times f - o_1 \times \theta_{1\Delta} \times f$$
  
=  $f \times \Delta p_1 - (f \times o_1) \times \theta_{1\Delta} - f \times \Delta p_2$  (14.7e)

#### 14.2.2 Couple

Absolute

**Follower** 

**Absolute Internal** 

Follower Internal

#### **14.3** Modal

#### 14.4 External

The external structural force element allows MBDyn to cooperate with external solvers by defining a meta-element that applies forces and moments to a set of structural nodes. The forces and moments are provided by an external solver, called the *peer*. MBDyn provides the peer information about the motion of the nodes participating in the set.

Optionally, an additional layer of field mapping can be interposed. In this case, the motion of the nodes is transformed in the motion of a set of intermediate points, which is further mapped into the motion of the points known by the peer by means of a linear mapping.

The forces at the mapped points returned by the peer are mapped back into forces and moments for the structural nodes participating in the set of the element.

#### 14.4.1 External Structural

The external structural and external structural mapping forces can be formulated directly in the absolute frame, or referred to a reference node. In the former case, operations are straightforward; in the latter one, the kinematics are first expressed in the reference frame of the reference node and then sent to the peer along with the motion of the reference node. The latter returns nodal forces and moments oriented according to the reference frame of the reference node. The additional operations performed by the mapping variant are discussed separately in a subsequent section. The orientation of the reference node is  $R_r$ ; the position is  $x_r$ .

The orientation of the generic node i is

$$R_i = R_r \overline{R}_i. ag{14.8}$$

The relative orientation passed to the peer solver is

$$\overline{R}_i = R_r^T R_i. \tag{14.9}$$

The position of the generic node i is

$$x_i = x_r + R_r \overline{x}_i. ag{14.10}$$

The relative position passed to the peer solver is

$$\overline{\boldsymbol{x}}_i = \boldsymbol{R}_r^T \left( \boldsymbol{x}_i - \boldsymbol{x}_r \right). \tag{14.11}$$

The angular velocity of the generic node i is

$$\boldsymbol{\omega}_{i} \times = \dot{\boldsymbol{R}}_{i} \boldsymbol{R}_{i}^{T} = \dot{\boldsymbol{R}}_{r} \boldsymbol{R}_{r}^{T} + \boldsymbol{R}_{r} \dot{\overline{\boldsymbol{R}}}_{i}^{T} \boldsymbol{R}_{r}^{T} = \boldsymbol{\omega}_{r} \times + \boldsymbol{R}_{r} \overline{\boldsymbol{\omega}}_{i} \times \boldsymbol{R}_{r}^{T}.$$
(14.12)

The relative angular velocity passed to the peer solver is

$$\overline{\boldsymbol{\omega}}_i = \boldsymbol{R}_r^T \left( \boldsymbol{\omega}_i - \boldsymbol{\omega}_r \right). \tag{14.13}$$

The velocity of the generic node i is

$$\dot{x}_i = \dot{x}_r + \omega_r \times R_r \overline{x}_i + R_r \dot{\overline{x}}_i. \tag{14.14}$$

The relative velocity passed to the peer solver is

$$\dot{\overline{x}}_i = R_r^T \left( \dot{x}_i - \dot{x}_r \right) - \left( R_r^T \omega_r \right) \times \overline{x}_i \tag{14.15}$$

#### **TODO:** accelerations

The virtual work done by the forces applied to the nodes is

$$\delta \mathcal{L} = \delta \boldsymbol{x}_r \cdot \boldsymbol{f}_r + \boldsymbol{\theta}_{r\delta} \cdot \boldsymbol{m}_r + \sum_i \left( \delta \overline{\boldsymbol{x}}_i \cdot \overline{\boldsymbol{f}}_i + \overline{\boldsymbol{\theta}}_{i\delta} \cdot \overline{\boldsymbol{m}}_i \right). \tag{14.16}$$

The virtual rotation of the generic node i is

$$\delta \mathbf{R}_{i} \mathbf{R}_{i}^{T} = \boldsymbol{\theta}_{i\delta} \times = \delta \mathbf{R}_{r} \mathbf{R}_{r}^{T} + \mathbf{R}_{r} \delta \overline{\mathbf{R}}_{i} \overline{\mathbf{R}}_{i}^{T} \mathbf{R}_{r}^{T} = \boldsymbol{\theta}_{r\delta} \times + \mathbf{R}_{r} \overline{\boldsymbol{\theta}}_{i\delta} \times \mathbf{R}_{r}^{T}.$$
(14.17)

The relative virtual rotation is thus

$$\overline{\boldsymbol{\theta}}_{i\delta} = \boldsymbol{R}_r^T \left( \boldsymbol{\theta}_{i\delta} - \boldsymbol{\theta}_{r\delta} \right). \tag{14.18}$$

The virtual displacement of the generic node i is

$$\delta \mathbf{x}_{i} = \delta \mathbf{x}_{r} + \mathbf{\theta}_{r} \delta \times \mathbf{R}_{r} \overline{\mathbf{x}}_{i} + \mathbf{R}_{r} \delta \overline{\mathbf{x}}_{i}. \tag{14.19}$$

The relative virtual displacement is thus

$$\delta \overline{x}_i = R_r^T (\delta x_i - \delta x_r) + \overline{x}_i \times (R_r^T \theta_{r\delta}). \tag{14.20}$$

The virtual work becomes

$$\delta \mathcal{L} = \delta \boldsymbol{x}_r \cdot \boldsymbol{f}_r + \boldsymbol{\theta}_{r\delta} \cdot \boldsymbol{m}_r + \sum_{i} \left( \delta \boldsymbol{x}_i \cdot \boldsymbol{R}_r \overline{\boldsymbol{f}}_i + \boldsymbol{\theta}_{i\delta} \cdot \boldsymbol{R}_r \overline{\boldsymbol{m}}_i - \delta \boldsymbol{x}_r \cdot \boldsymbol{R}_r \overline{\boldsymbol{f}}_i - \boldsymbol{\theta}_{r\delta} \cdot \boldsymbol{R}_r \left( \overline{\boldsymbol{m}}_i + \overline{\boldsymbol{x}}_i \times \overline{\boldsymbol{f}}_i \right) \right). \tag{14.21}$$

The force and moment acting on the generic node i are

$$f_i = R_r \overline{f}_i \tag{14.22}$$

$$m_i = R_r \overline{m}_i. \tag{14.23}$$

The moment is always intrinsically referred to the current position of the node. The force and moment acting on the reference node are

$$f = f_r - \sum_i R_r \overline{f}_i \tag{14.24}$$

$$m = m_r - \sum_i R_r \left( \overline{m}_i + \overline{x}_i \times \overline{f}_i \right).$$
 (14.25)

The moment is always intrinsically referred to the current position of the node.

In principle, f and m should be identically zero, unless the reference node is specifically loaded. This fact can be exploited by setting use reference node forces to no, which results in ignoring f and m.

#### 14.4.2 External Structural Mapping

The external structural mapping case differs from the previous one in the fact that two additional intermediate layers are added. The first layer computes the motion of a set of points rigidly connected to the nodes that participate in the set. Each node n can have an arbitrary number of associated points p, whose position in the reference frame of the node is  $\tilde{o}_{np}$ . The position of point p associated with node n is

$$x_{np} = x_n + R_n \tilde{o}_{np}. \tag{14.26}$$

The position  $x_{np}$ , instead of  $x_i$ , must be used to compute the relative position. Orientations are not mapped.

As soon as the positions, velocities (and accelerations, if needed) of the points are computed and collected in vectors denoted by the subscript  $(\cdot)_{\text{mbdyn}}$ , they are mapped into the corresponding quantities of the peer, denoted by the subscript  $(\cdot)_{\text{peer}}$ , using a linear transformation H, namely

$$x_{\text{peer}} = Hx_{\text{mbdyn}}$$
 (14.27)

$$\dot{x}_{\text{peer}} = H\dot{x}_{\text{mbdvn}} \tag{14.28}$$

$$\delta x_{\text{peer}} = H \delta x_{\text{mbdyn}}.$$
 (14.29)

The work done in the peer domain must be equal by the work done in MBDyn's; this implies

$$\delta \mathcal{L}_{\text{mbdyn}} = \delta \mathbf{x}_{\text{mbdyn}} \cdot \mathbf{f}_{\text{mbdyn}} = \delta \mathbf{x}_{\text{peer}} \cdot \mathbf{f}_{\text{peer}} = \delta \mathcal{L}_{\text{peer}}, \tag{14.30}$$

which yields

$$\delta x_{\text{mbdvn}} \cdot f_{\text{mbdvn}} = \delta x_{\text{mbdvn}} \cdot H^T f_{\text{peer}}, \tag{14.31}$$

and thus, thanks to the arbitrariness of virtual displacements,

$$f_{\text{mbdvn}} = H^T f_{\text{peer}}.$$
 (14.32)

The forces  $f_{\text{mbdyn}}$  correspond to the points of the intermediate mapping layer. They are transformed into the corresponding nodal forces and moments considering the work done by the virtual perturbation of Eq. (14.26),

$$\delta \mathbf{x}_{np} = \delta \mathbf{x}_n - (\mathbf{R}_n \tilde{\mathbf{o}}_{np}) \times \boldsymbol{\theta}_{n\delta},\tag{14.33}$$

namely

$$\delta \mathcal{L}_{n} = \sum_{p} \delta \boldsymbol{x}_{np} \cdot \boldsymbol{f}_{np} = \sum_{p} \left( \delta \boldsymbol{x}_{n} \cdot \boldsymbol{f}_{np} + \boldsymbol{\theta}_{n\delta} \cdot (\boldsymbol{R}_{n} \tilde{\boldsymbol{o}}_{np}) \times \boldsymbol{f}_{np} \right). \tag{14.34}$$

The corresponding nodal force and moment are

$$f_n = \sum_{p} f_{np} \tag{14.35}$$

$$\boldsymbol{m}_{n} = \sum_{p} (\boldsymbol{R}_{n} \tilde{\boldsymbol{o}}_{np}) \times \boldsymbol{f}_{np}. \tag{14.36}$$

The moment is always intrinsically referred to the current position of the node.

When a reference node is defined, all symbols in the expressions of the nodal force and moment must bear an overbar  $\overline{(\cdot)}$ , to indicate that they are relative and thus need to be further transformed as previously shown for the external structural force element.

#### 14.4.3 External Modal

## 14.4.4 External Modal Mapping

## 14.4.5 Client Library

The peer side of the communication protocol has been implemented in a set of client libraries. At the core there is libmbc, a library written in C that performs the core operations. Declarations are provided in the header file mbc.h.

A high-level interface is provided in C++ in libmbcxx. Declarations are provided in the header file mbcxx.h.

Another interface is provided in Python, in module \_mbc\_py.so. The corresponding Python code is defined in mbc\_py\_interface.py.

#### Socket-Based Protocol

Each communication is prefixed by a uint8\_t value that indicates the type of operation being performed. It is optionally followed by a message. Legal values are

- ES\_REGULAR\_DATA
- ES\_GOTO\_NEXT\_STEP
- ES\_ABORT
- ES\_REGULAR\_DATA\_AND\_GOTO\_NEXT\_STEP
- ES\_NEGOTIATION
- ES\_OK

The corresponding numerical value is defined in mbc.h.

Operations are:

- negotiation: the client tells the server what
- $\bullet$  kinematics exchange: the master sends the motion
- forces exchange: the peer receives the loads

# Chapter 15

# Hydraulic Library

- 15.1 Hydraulic Fluids
- 15.2 Hydraulic Nodes
- 15.3 Hydraulic Elements

#### 15.3.1 Accumulator

The accumulator defines two internal states x and v that represent the position and the velocity of the cap that, in a conventional gas device, separates the fluid and the gas. However, both the gravity effect and a linear spring effect can be considered as well, and any combination of reaction forces can be modeled by setting the appropriate parameters: g for a gravity device,  $p_{g0}$  for a gas device, and k for a linear spring device.

$$\begin{array}{rcl} 0&=&q\\ m\dot{v}+kx&=&-mg+Ap\left(p-p_g\right)-f_0-\frac{1}{2}\rho Ac_e\left(\frac{A}{A_p}\right)^2|v|\,v\\ &&-\mathrm{step}\left(x_{\mathrm{min}}-x\right)\left(c_1\left(x-x_{\mathrm{min}}\right)+c_2v+c_3\dot{v}\right)\\ &&-\mathrm{step}\left(x-x_{\mathrm{max}}\right)\left(c_1\left(x-x_{\mathrm{max}}\right)+c_2v+c_3\dot{v}\right)\\ \dot{x}&=&v\\ \end{array}$$
 where  $p_g=p_{g0}\left(\frac{l}{l-x}\right)^{\gamma}$  and  $q=\rho Av$ .

### 15.3.2 Actuator

The hydraulic actuator element couples the hydraulic library with the structural library. It connects the displacement of two structural nodes to the flow through two hydraulic nodes, and the pressure at two hydraulic nodes to the forces applied at two structural nodes. In the spirit of the multibody analysis philosophy, this element provides the essential connection between structural and hydraulic nodes; the constraints between the structural nodes, and other flow elements, e.g. leakages between the chambers, must be added by the user.

#### **Definitions**

In the following,  $(\cdot)_{s1}$  and  $(\cdot)_{s2}$  refer to structural nodes 1 and 2, and  $(\cdot)_{h1}$  and  $(\cdot)_{h2}$  refer to hydraulic nodes 1 and 2. The structural node labeled as 1 is assumed as the cylinder, and its orientation determines the axis of the actuator. The relative orientation of the actuator is defined by the unit vector  $\tilde{v}$ , and the absolute orientation is  $R_{s1}\tilde{v}$ . It is assumed that appropriate kinematic constraints allow only a relative displacement of the structural nodes along the axis  $\tilde{v}$ , and the only relative rotation, if any, is about the axis itself. This can be obtained by combining an inline joint with a revolute rotation or a prismatic joint.

#### **Equations**

$$0 = -F 
0 = -f_{s1} \times F 
0 = F 
0 = f_{s2} \times F 
0 = q_{h1} 
0 = q_{h2} 
p_{h1} = P_{h1} 
p_{h2} = P_{h2}$$

The first four equations apply the force resulting from the hydraulic pressure to the structural nodes; the fifth and the sixth apply the flow resulting from the actuator kinematics to the flow balance equations of the hydraulic nodes. The last two equations are required to associate two scalar differential unknowns to the hydraulic node pressures, because the flow definitions require the derivative of the pressure, while the hydraulic nodes are defined as scalar algebraic.

The force is defined as

$$F = (A_{h1}p_{h1} - A_{h2}p_{h2})(R_{s1}\tilde{v})$$
(15.1)

The distance between the structural nodes, along the actuator axis, is

$$l = \left(\mathbf{R}_{s1}\tilde{\mathbf{v}}\right)^{T} \left(\mathbf{x}_{s2} + \mathbf{f}_{s2} - \mathbf{x}_{s1} - \mathbf{f}_{s1}\right)$$

$$(15.2)$$

The relative velocity of the structural nodes, along the actuator axis, is

$$\dot{l} = (\mathbf{R}_{s1}\tilde{\mathbf{v}})^T \left(\dot{\mathbf{x}}_{s2} - \dot{\mathbf{x}}_{s1} + \boldsymbol{\omega}_{s1} \times (\mathbf{x}_{s2} - \mathbf{x}_{s1}) + (\boldsymbol{\omega}_{s2} - \boldsymbol{\omega}_{s1}) \times \mathbf{f}_{s2}\right)$$
(15.3)

The flow at the two hydraulic nodes is

$$\begin{array}{lcl} q_{h1} & = & A_{h1} \left( l \frac{\partial \rho_{h1}}{\partial p} \dot{P}_{h1} + \rho_{h1} \dot{d} \right) \\ \\ q_{h2} & = & A_{h2} \left( (L - l) \frac{\partial \rho_{h2}}{\partial p} \dot{P}_{h2} - \rho_{h2} \dot{d} \right) \end{array}$$

where  $\rho$  is the fluid density (different fluids in the chambers are allowed), and L is the total length of the actuator. In case stroke limitations must be enforced, the kinematic constraints must account for them.

#### 15.3.3 Dynamic Pipe

Finite Volume dynamic pipe.

#### **Definitions**

The dynamic pipe is formulated according to the finite volume approach. The pipe is discretized by means of the pressures and the flow at the two ends, which are interpolated linearly. The mass and the momentum balance equations are written by cutting the pipe in two halves and adding the contribution of each resulting subvolume to the respective nodal equations.

Consider the mass conservation and the momentum balance equations for a one-dimensional flow:

$$\frac{D}{Dt}(dm) = 0, (15.4)$$

$$\frac{D}{Dt}(dQ) = df. ag{15.5}$$

When a rigid pipe is considered, the total derivative D/Dt of the test mass  $dm = \rho A dx$  of Equation (15.4) yields

$$\frac{D}{Dt}(dm) = \frac{\partial}{\partial t}(dm) + v\frac{\partial}{\partial x}(dm), \qquad (15.6)$$

which results in

$$q_{/x} + A\rho_{/t} = 0, (15.7)$$

where  $q = \rho Av$  is the mass flow. Consider now the momentum equation (15.5); the total derivative of the momentum dQ = vdm yields

$$\frac{D}{Dt}(dQ) = \left(q_{/t} + (qv)_{/x}\right)dx,\tag{15.8}$$

while the pressure gradient and the viscous contributions can be isolated from the force per unit length on the right hand side:

$$df = -Adp + f_v dx + df^*, (15.9)$$

so, by neglecting the deformability of the pipe and the extra forces  $df^*$  acting on the fluid, the momentum balance equation yields

$$q_{/t} + (qv + Ap)_{/x} = f_v,$$
 (15.10)

which can be reduced to the pressure and flow unknowns simply by recalling the definition of the flow:

$$q_{/t} + \left(\frac{q^2}{\rho A} + Ap\right)_{/x} = f_v. \tag{15.11}$$

A flexible pipe has been considered as well; the formulation is not reported for simplicity, because such a level of detail is required only for very specialized problems, and a first approximation can be obtained by altering the bulk modulus of the fluid.

The pipe is discretized by considering a finite volume approach, based on the use of constant stepwise (Heavyside) test functions with arbitrary trial functions. In the present case, linear trial functions have been considered both for the flow and for the pressure:

$$q(x) = \begin{bmatrix} \frac{1-\xi}{2} & \frac{1+\xi}{2} \end{bmatrix} \begin{Bmatrix} q_1 \\ q_2 \end{Bmatrix},$$

$$p(x) = \begin{bmatrix} \frac{1-\xi}{2} & \frac{1+\xi}{2} \end{bmatrix} \begin{Bmatrix} p_1 \\ p_2 \end{Bmatrix},$$

with  $\xi = \xi(x) \in [-1, 1]$  and  $d\xi/dx = 2/(b-a)$ . The discrete form of the pipe equations results in

$$q(b) - q(a) = -\int_{a}^{b} \frac{\partial \rho}{\partial p} p_{/t} dx,$$

$$\frac{b - a}{2} \left( q(b)_{/t} + q(a)_{/t} \right) + \left( \frac{q(b)^{2}}{\rho(b) A} + Ap(b) \right)$$

$$- \left( \frac{q(a)^{2}}{\rho(a) A} + Ap(a) \right) = \int_{a}^{b} f_{v} dx;$$

by dividing the pipe in two portions, and by considering the domains [-1,0] and [0,1] for  $\xi$  in each portion, the discrete equations of the finite volume pipe become

$$-\frac{1}{2}(q_1+q_2) - \frac{\partial \rho(-1/2)}{\partial p} \frac{L}{8}(3\dot{p}_1 + \dot{p}_2) = \phi_1,$$

$$\frac{1}{2}(q_1+q_2) - \frac{\partial \rho(1/2)}{\partial p} \frac{L}{8}(\dot{p}_1 + 3\dot{p}_2) = \phi_2,$$

$$\frac{L}{8}(3\dot{q}_1 + \dot{q}_2) + \frac{(q_1+q_2)^2}{4\rho(0)A} - \frac{q_1^2}{\rho(-1)A}$$

$$+ \frac{A}{2}(p_2 - p_1) = \frac{L}{2} \int_{-1}^{0} f_v \, d\xi,$$

$$\frac{L}{8}(\dot{q}_1 + 3\dot{q}_2) + \frac{q_2^2}{\rho(1)A} - \frac{(q_1+q_2)^2}{4\rho(0)A}$$

$$+ \frac{A}{2}(p_2 - p_1) = \frac{L}{2} \int_{0}^{1} f_v \, d\xi,$$

where  $\phi_1$  and  $\phi_2$  are the contributions of the two portions of pipe to the respective nodal flow balance equations. The integral of the time derivative of the density is numerically computed. The integral of the viscous forces per unit length is numerically performed as well, accounting for the flow regime in the pipe as function of the *Reynolds* number. In fact, for the forces per unit length, the dependency on the flow is considered linear for 0 < Re < 2000, and quadratic for Re > 4000, while a polynomial fitting of the transition behavior, accounting also for the rate of the *Reynolds* number, is modeled for 2000 < Re < 4000.

#### **Equations**

$$0 = \frac{1}{2}(q_1 + q_2) + AL\frac{\partial \rho}{\partial p_1} \left(\frac{3}{8}\dot{P}_1 + \frac{1}{8}\dot{P}_2\right)$$

$$0 = -\frac{1}{2}(q_1 + q_2) + AL\frac{\partial \rho}{\partial p_2} \left(\frac{1}{8}\dot{P}_1 + \frac{3}{8}\dot{P}_2\right)$$

$$0 = -L\left(\frac{3}{8}\dot{q}_1 + \frac{1}{8}\dot{q}_2\right) - \left(\frac{1}{2}(q_1 + q_2)\right)^2 \frac{1}{\rho_m A} + q_1^2 \frac{1}{\rho_1 A} - \frac{A}{2}(p_2 - p_1) - f_1$$

$$0 = -L\left(\frac{1}{8}\dot{q}_1 + \frac{3}{8}\dot{q}_2\right) - q_2^2 \frac{1}{\rho_2 A} + \left(\frac{1}{2}(q_1 + q_2)\right)^2 \frac{1}{\rho_m A} - \frac{A}{2}(p_2 - p_1) - f_2$$

$$p_1 = P_1$$

$$p_2 = P_2$$

## 15.3.4 Pressure Flow Control Valve

$$R_{1} = Q_{12} + Q_{13}$$
 (15.12)  

$$R_{2} = -Q_{12} + Q_{24}$$
 (15.13)  

$$R_{3} = -Q_{13} + Q_{34}$$
 (15.14)  

$$R_{4} = -Q_{34} - Q_{24}$$
 (15.15)  

$$R_{5} = A_{v}s;$$
 (15.16)  

$$R_{6} = -A_{v}s$$
 (15.17)  

$$R_{7} = -F + M\dot{v} + C\dot{s} + Ks + c_{1}s + c_{2}\dot{s} + c_{3}\dot{v} + cf_{1}(s - s_{\text{max}}) + cf_{2}\dot{s} + cf_{3}\dot{v}$$
 (15.18)  

$$R_{8} = \dot{s} - v$$
 (15.19)

# Chapter 16

# Hydrodynamic Plain Bearing Element

Author: Reinhard Resch

Hydrodynamic plain bearing elements are intended to model tribological fluid-structure interactions between a bearing journal and a bearing shell.

Files. It is implemented in files modules/module-hydrodynamic\_plain\_bearing2/module-hydrodynamic\_plain\_bearing2.h modules/module-hydrodynamic\_plain\_bearing2.cc

#### 16.1 Introduction

Hydrodynamic lubricated journal plain bearings are used in many different types of machinery:

- Combustion engines
- Turbo chargers
- Steam turbines for power plants
- Hydraulic pumps

MBDyn's "module-hydrodynamic\_plain\_bearing2" is intended to simulate the following effects in rigid or flexible multibody systems including hydrodynamic bearings:

- Frictional losses inside the bearing
- Maximum contact pressure and maximum fluid pressure at the surface of the bearing
- Minimum lubricant film thickness at the surface of the bearing
- Demand of lubricant to be supplied by means of a hydraulic pump
- Impact on structural damping of a mechanism due to the squeeze effect
- Impact on stability of the orbital path for high speed and low load applications (e.g. turbo chargers)

## 16.2 The compressible Reynolds differential equation

## 16.2.1 Determination of the coordinate system for the cylindrical journal bearing

Figure 16.1 shows a cylindrical journal bearing with the following coordinate systems:

- $R_{b1}$  Coordinate system in the center of the bearing journal
- $R_{b2}$  Coordinate system in the center of the bearing shell
- $R_{t1}$  Coordinate system tangential to the surface of the bearing journal
- $R_{t2}$  Coordinate system tangential to the surface of the bearing shell

The following symbols are used:

- R Radius of the bearing shell
- r Radius of the bearing journal
- B Width of the bearing shell or bearing journal
- h Radial radial gap height

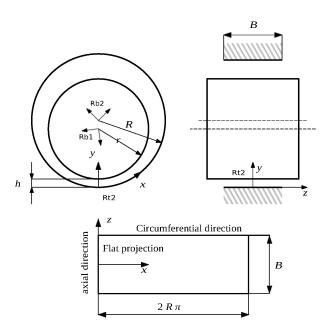


Figure 16.1: Coordinate systems for cylindrical plain bearings

The z axes of  $\mathbf{R}_{b1}$  and  $\mathbf{R}_{b2}$  correspond to the axes of the bearing journal and bearing shell. The x and y axis can be defined as required. The x axis of  $\mathbf{R}_{t2}$  is tangential to the circumference of the bearing shell, the y axis is in the radial direction and the z axis is parallel to the z axis of  $\mathbf{R}_{b2}$ . The derivation of the Reynolds differential equation in section 16.2.2 is based on the coordinate system  $\mathbf{R}_{t2}$ . However,  $\mathbf{R}_{t1}$  could just as well be used.

# 16.2.2 Derivation of the Reynolds equation from the compressible Navier Stokes equation

Since, according to [?], the radial gap height h is small compared to the radius R, the curvature of the oil-filled gap can be neglected. For this reason, as shown in Figure 16.1, the volume of the gap can be unrolled onto a plane and the Navier Stokes equation can be written in Cartesian coordinates. If we assume a Newtonian fluid with constant viscosity and laminar flow, then according to [?] the Navier Stokes equation given in equation 16.1 follows for the flow in x and z direction. As the flow velocity in the radial gap height direction is neglected, the Navier Stokes equation for the y direction is not applicable.

$$\underbrace{\rho\left(\frac{\partial u_x}{\partial t} + u_x \frac{\partial u_x}{\partial x} + u_y \frac{\partial u_x}{\partial y} + u_z \frac{\partial u_x}{\partial z}\right)}_{\approx 0} = \underbrace{\rho g_x}_{\approx 0} - \underbrace{\frac{\partial p}{\partial x}}_{\approx 0} + \underbrace{2 \eta \frac{\partial^2 u_x}{\partial x^2}}_{\approx 0} - \underbrace{\frac{\partial^2 u_x}{\partial x^2}}_{\approx 0} + \underbrace{\frac{\partial^2 u_y}{\partial x \partial y}}_{\approx 0} + \underbrace{\frac{\partial^2 u_y}{\partial x \partial y}}_{\approx 0} + \underbrace{\frac{\partial^2 u_z}{\partial x \partial z}}_{\approx 0}\right) \\
+ \eta \left(\underbrace{\frac{\partial^2 u_x}{\partial y^2}}_{\approx 0} + \underbrace{\frac{\partial^2 u_y}{\partial x \partial y}}_{\approx 0}\right) + \eta \left(\underbrace{\frac{\partial^2 u_x}{\partial z^2}}_{\approx 0} + \underbrace{\frac{\partial^2 u_z}{\partial x \partial z}}_{\approx 0}\right) \\
- \underbrace{\rho\left(\frac{\partial u_z}{\partial t} + u_x \frac{\partial u_z}{\partial x} + u_y \frac{\partial u_z}{\partial y} + u_z \frac{\partial u_z}{\partial z}\right)}_{\approx 0} = \underbrace{\rho g_z}_{\approx 0} - \underbrace{\frac{\partial p}{\partial z}}_{\approx 0} + \underbrace{2 \eta \frac{\partial^2 u_z}{\partial z^2}}_{\approx 0} - \underbrace{\frac{\partial^2 u_x}{\partial z}}_{\approx 0} + \underbrace{\frac{\partial^2 u_y}{\partial y \partial z}}_{\approx 0} + \underbrace{\frac{\partial^2 u_z}{\partial y \partial z}}_{\approx 0}\right) \\
+ \eta \left(\underbrace{\frac{\partial^2 u_x}{\partial x \partial z}}_{\approx 0} + \underbrace{\frac{\partial^2 u_z}{\partial z^2}}_{\approx 0}\right) + \eta \left(\underbrace{\frac{\partial^2 u_y}{\partial y \partial z}}_{\approx 0} + \underbrace{\frac{\partial^2 u_z}{\partial y \partial z}}_{\approx 0}\right) \right) \tag{16.1}$$

 $u = \begin{pmatrix} u_x \\ u_z \end{pmatrix}$  Flow velocity measured in the coordinate system  $R_{t1}$  or  $R_{t2}^{-1}$ 

- p Pressure
- $\rho$  Density
- $\eta$  dynamic viscosity

According to [?] and [?], the following simplifying assumptions can be made:

- Due to the small Reynolds numbers present in hydrodynamic plain bearings, the inertia forces can be neglected compared to the pressure forces and the frictional forces.
- The gravity loads can also be neglected compared to the pressure forces and the frictional forces.
- Since the radial gap height h is very small compared to the bearing width B and the bearing circumference  $2R\pi$  for the usual bearing dimensions, the velocity gradients in x and z direction can be neglected in the friction terms compared to the velocity gradients in y direction.
- It is also assumed that the pressure change in the direction of the radial gap height is negligible. For the same reason, the Navier Stokes equation for the y direction is also omitted.

<sup>&</sup>lt;sup>1</sup>Strictly speaking, an inertial coordinate system would have to be used for the derivation. However, since the inertial forces are neglected in the derivation of Reynolds' differential equation, this does not matter

With these assumptions, equation 16.1 is reduced to equation 16.2.

$$\frac{\partial p}{\partial x} = \eta \frac{\partial^2 u_x}{\partial y^2} 
\frac{\partial p}{\partial z} = \eta \frac{\partial^2 u_z}{\partial y^2}$$
(16.2)

#### Boundary conditions for the flow velocity at the bearing surface

If it is assumed that the fluid adheres to the surface of the bearing journal and the surface of the bearing shell, the boundary conditions according to equation 16.3 apply[?]. This requirement is usually fulfilled for radial plain bearings by selecting the appropriate bearing materials, as the adhesion condition is of decisive importance for the load carrying capacity of the bearing. For piston-cylinder bearings, however, adhesion to the surface is not absolutely necessary. For example, when using special coatings for pistons, the adhesion condition may not be fulfilled. However, this case is excluded here.

$$u_{x|_{y=0}} = \Delta U_{2x}$$
 $u_{x|_{y=h}} = \Delta U_{1x}$ 
 $u_{z|_{y=0}} = \Delta U_{2z}$ 
 $u_{z|_{y=h}} = \Delta U_{1z}$ 
(16.3)

When introducing the boundary conditions, care must be taken to ensure that they are objective. A distinction is made between two cases:

control volume moves with the bearing journal

$$\Delta U_1 = \mathbf{0} \tag{16.4}$$

$$\Delta \boldsymbol{U}_2 = \boldsymbol{U}_2 - \boldsymbol{U}_1 \tag{16.5}$$

control volume moves with the bearing shell

$$\Delta \boldsymbol{U}_1 = \boldsymbol{U}_1 - \boldsymbol{U}_2 \tag{16.6}$$

$$\Delta U_2 = \mathbf{0} \tag{16.7}$$

Obviously, the boundary conditions depend on the choice of control volume. However, the derivation of the radial gap height  $\frac{\partial h}{\partial t}$  also depends on the choice of control volume. The kinematic relationships are discussed in section 16.6.

 $m{U}_1$  Absolute velocity at the surface of the bearing journal projected into the coordinate system  $m{R}_{t1}$  or  $m{R}_{t2}$ 

 $U_2$  Absolute velocity at the surface of the bearing shell projected into the coordinate system  $R_{t1}$  or  $R_{t2}$ 

$$\Delta \boldsymbol{U}_1 = \begin{pmatrix} \Delta U_{1x} \\ \Delta U_{1y} \\ \Delta U_{1z} \end{pmatrix}$$
 Velocity of the surface of the bearing journal relative to the control volume

$$\Delta U_2 = \begin{pmatrix} \Delta U_{2x} \\ \Delta U_{2y} \\ \Delta U_{2z} \end{pmatrix}$$
 Velocity of the surface of the bearing shell relative to the control volume

If equation 16.2 is integrated twice over the radial gap height and the boundary conditions 16.3 are used, this results in a parabolic velocity distribution in the direction of the radial gap height [?], [?].

$$u_x = \frac{1}{\eta} \frac{\partial p}{\partial x} \left( \frac{y^2}{2} - y \frac{h}{2} \right) + \frac{\Delta U_{1x} - \Delta U_{2x}}{h} y + \Delta U_{2x}$$

$$u_z = \frac{1}{\eta} \frac{\partial p}{\partial z} \left( \frac{y^2}{2} - y \frac{h}{2} \right) + \frac{\Delta U_{1z} - \Delta U_{2z}}{h} y + \Delta U_{2z}$$

$$(16.8)$$

For the mass flow per unit length through the edges of the control volume, the following applies [?], [?]

$$\dot{m}_x = \int_{y=0}^{y=h} \rho \, u_x \, dy = \rho \underbrace{\int_{y=0}^{y=h} u_x \, dy}_{q_x}$$
 (16.9)

$$\dot{m}_z = \int_{y=0}^{y=h} \rho \, u_z \, dy = \rho \underbrace{\int_{y=0}^{y=h} u_z \, dy}_{q_z}$$
(16.10)

It is assumed in this work that the density  $\rho$  is only a function of the pressure p. Since the pressure is assumed to be constant in the direction of the radial gap height, the density is also constant in the y direction.

$$\dot{m}_x = \rho \, q_x \tag{16.11}$$

$$\dot{m}_z = \rho \, q_z \tag{16.12}$$

$$q_x = \underbrace{\frac{\Delta U_{1x} + \Delta U_{2x}}{2} h}_{\text{Couette fraction}} \underbrace{-\frac{h^3}{12 \eta} \frac{\partial p}{\partial x}}_{\text{Poiseuille fraction}}$$
(16.13)

$$q_z = \underbrace{\frac{\Delta U_{1z} + \Delta U_{2z}}{2} h}_{\text{Couette fraction}} \underbrace{-\frac{h^3}{12 \eta} \frac{\partial p}{\partial z}}_{\text{Poiseuille fraction}}$$
(16.14)

The compressible Reynolds differential equation 16.15 follows from the application of the continuity equation to the infinitesimal volume element [?], [?]. To close this equation, a relationship between pressure and density must be specified. This is the task of the cavitation model.

$$\frac{\partial}{\partial t} (\rho h) = -\frac{\partial \dot{m}_x}{\partial x} - \frac{\partial \dot{m}_z}{\partial z}$$

$$= -\frac{\partial}{\partial x} \left[ \rho \left( \frac{\Delta U_{1x} + \Delta U_{2x}}{2} h - \frac{h^3}{12 \eta} \frac{\partial p}{\partial x} \right) \right]$$

$$-\frac{\partial}{\partial z} \left[ \rho \left( \frac{\Delta U_{1z} + \Delta U_{2z}}{2} h - \frac{h^3}{12 \eta} \frac{\partial p}{\partial z} \right) \right]$$
(16.15)

## 16.3 Cavitation models

#### 16.3.1 Non-mass conserving cavitation

#### The incompressible Reynolds differential equation

For the incompressible case, the density  $\rho$  is constant. This results in a linear partial differential equation of elliptic type with the pressure p as an unknown.

$$\frac{\partial q_x}{\partial x} + \frac{\partial q_z}{\partial z} + \frac{\partial h}{\partial t} = \frac{\partial}{\partial x} \left( \frac{\Delta U_{1x} + \Delta U_{2x}}{2} h - \frac{h^3}{12 \eta} \frac{\partial p}{\partial x} \right) 
+ \frac{\partial}{\partial z} \left( \frac{\Delta U_{1z} + \Delta U_{2z}}{2} h - \frac{h^3}{12 \eta} \frac{\partial p}{\partial z} \right) + \frac{\partial h}{\partial t} = 0$$
(16.16)

#### The Gümbel boundary condition

After discretization using finite differences or finite elements, a linear system of equations results. Since no cavitation model was used, its solution can contain negative pressures [?]. According to [?], the negative pressures are set to zero after the solution of the linear system of equations in accordance with the Gümbel boundary condition. However, this violates the continuity equation at the edge of the cavitation region. According to [?], this causes an error in the pressure distribution. That error is increasing with the pressure gradient. The analytical solution of the incompressible Reynolds differential equation for an infinitely wide bearing given in [?] results in a deviation in the Sommerfeld number between Gümbel boundary condition and Reynolds boundary condition of 18% with a relative eccentricity of  $\varepsilon = 0.999$  for the case of pure rotary motion[?]. See also Figure 16.2. Due to its simple implementation, the Gümbel boundary condition was used for the incompressible case. With this method, however, it is not possible to calculate the amount of oil supplied via a lubrication groove as soon as the Gümbel boundary condition becomes active, as the global mass conservation is not fulfilled. Instead, the required oil quantity must be calculated from the volume flow that exits via the bearing edges.



Figure 16.2: Differences in the Sommerfeld number between the Reynolds boundary condition and the Gümbel boundary condition for the infinitely wide bearing with pure rotary motion

#### The Reynolds boundary condition

According to [?], the Reynolds boundary condition also requires that the pressure gradient is zero where the pressure is also zero. As a result, the continuity equation according to [?] is fulfilled at least at the edge of the cavitation region. In the cavitation region itself, however, the continuity equation is still not fulfilled according to [?]. The implementation of the Reynolds boundary condition is much more difficult than the implementation of the Gümbel boundary condition. In [?], for example, the pressures in the widest gap were iteratively adjusted to fulfill the Reynolds boundary condition. However, this method is only applicable in the case of a pure rotary motion. According to [?], it is possible to obtain the Reynolds boundary condition for the general case by setting the negative pressures to zero during the iterative solution of the linear system of equations using the Gauss Seidel method. However, this method only works if the matrices of the linear system of equations are symmetrically positive definite. As this is not the case in the multi-body system used, this method could not be implemented there. For test purposes, however, this method was implemented in a stand-alone finite element program for the solution of the incompressible Reynolds equation.

#### 16.3.2 Mass conserving cavitation

#### The Jakobsson Floberg Ollson (JFO) cavitation model

According to [?], the so-called JFO cavitation model assumes that the flow in the cavitation region is divided into oil-filled strips and strips with oil vapor or dissolved gas. It is assumed that in the oil-filled strips the radial gap height is completely filled with oil. In the cavitation region where the mean density is less than the density of the liquid oil, the vapor pressure  $p_c$  is uniform. This means that only Couette flow is possible in this region. In the full-film region where the pressure is greater than  $p_c$ , the fluid is assumed to be incompressible. The implementation of the JFO model is relatively complex as the edges of the cavitation region must be treated explicitly.

#### The cavitation model of H. G. Elrod

In [?], Elrod assumes in contrast to the JFO theory that the fluid in the full-film region is linearly compressible. The pressure is represented as a function of density.

$$p = p_c + g \beta \ (\Theta - 1)$$

$$g = \begin{cases} 1 & \text{if } \Theta \ge 1 \\ 0 & \text{if } \Theta < 1 \end{cases}$$

$$\Theta = \frac{\rho}{\rho_c}$$

$$(16.17)$$

$$\Theta = \frac{\rho}{\rho_c} \tag{16.18}$$

 $p_c$  Cavitation pressure

 $\rho_c$  Cavitation density

 $\beta$  bulk modulus

Θ dimensionless density/pressure

By assuming a slightly compressible fluid, it is possible to calculate the distribution of pressure and density in the bearing without having to know the edges of the cavitation region. The problem is that the bulk modulus  $\beta$  is very high, which affects the numerical stability. According to [?], for example, the bulk modulus of mineral oil is  $\beta = 2.41GPa$ . To avoid numerical stability problems, [?] often uses values for  $\beta$  that are ten to one hundred times smaller than the physically correct bulk modulus. This circumstance was taken into account in [?] by assuming the fluid to be incompressible for the calculation

of the mass flows. The linear compressibility of the fluid is only taken into account in the term a in equation 16.15. According to [?], this makes it possible to artificially reduce the bulk modulus  $\beta$  without affecting the results for the steady state. According to [?], the choice of the bulk modulus only influences the rate of convergence with which the solution tends towards the steady state. However, a reduction of  $\beta$  is not applicable to transient analysis at all, because the orbital path would be affected for sure.

The solution of the cavitation condition based on a mixed-complementarity problem Since the original Elrod model is not really applicable, it is necessary to modify the solution procedure. Instead of having only one unknown variable (e.g. either pressure p or density  $\rho$ ), it is necessary to solve for p and rho simultaneously, and to add another inequality in order to make the mathematical problem well posed. Now the complementarity condition describing the cavitation model is:

- If  $p \geq 0$  then  $\rho = \rho_{liquid}$
- If  $\rho < \rho_{liquid}$  then p = 0

Where  $\rho_{liquid}$  is a constant value which is the density of pure liquid without void fraction. Actually  $\rho >= 0$  is not a complementary condition but usually it is not hard to fulfill. In any case, it is necessary to use a dedicated nonlinear solver like SICONOS, for the solution of this so called mixed-nonlinear complementarity problem.

# 16.4 Discretization of the Reynolds differential equation using finite differences

#### 16.4.1 The orthogonal finite difference mesh of a cylindrical journal bearing

Figure 16.3 shows the basic structure of such a mesh. The grid spacing does not have to be equidistant. For example, it is possible to refine the mesh in the areas of the piston skirt and the sealing edge of the piston. To make it easier to implement the periodic boundary condition of the cylindrical journal bearing with the five node elements, the mesh on the left-hand side was extended by one node beyond the physical boundary of the bearing surface. For each active node, a five-node element with that node in the center must be defined. The edge nodes of a five-node element can be active or passive nodes. The four node elements for reaction forces and axial mass flow are only located within the physical bearing surface.

Physical surface of the bearing

Active node without boundary condition

Node with Dirichlet boundary condition

Mirror node with periodic boundary condition

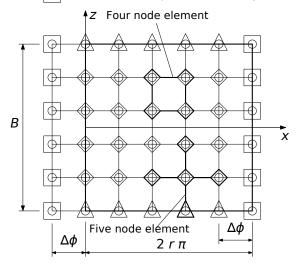


Figure 16.3: orthogonal finite difference mesh of a cylindrical journal bearing

#### 16.4.2 The compressible Reynolds differential equation

$$\frac{\partial p}{\partial x}\Big|_{wc} \approx \frac{p|_{center} - p|_{west}}{x|_{center} - x|_{west}}$$
(16.19)

$$h|_{wc} \approx \frac{1}{2} \left( h|_{west} + h|_{center} \right) \tag{16.20}$$

$$\Delta U_{1x}|_{wc} \approx \frac{1}{2} \left( \Delta U_{1x}|_{west} + \Delta U_{1x}|_{center} \right)$$
(16.21)

$$\Delta U_{2x}|_{wc} \approx \frac{1}{2} \left( \Delta U_{2x}|_{west} + \Delta U_{2x}|_{center} \right)$$
 (16.22)

$$q_x|_{wc} \approx \frac{\Delta U_{1x}|_{wc} + \Delta U_{2x}|_{wc}}{2} h|_{wc} - \frac{h^3|_{wc}}{12 \eta} \frac{\partial p}{\partial x}|_{wc}$$
 (16.23)

$$\rho|_{wc} \approx \begin{cases} \rho|_{west} & \text{wenn} \quad q_x|_{wc} \ge 0\\ \rho|_{center} & \text{wenn} \quad q_x|_{wc} < 0 \end{cases}$$

$$(16.24)$$

$$\eta|_{wc} \approx \frac{1}{2} \left( \eta|_{west} + \eta|_{center} \right)$$
 (16.25)

$$\dot{n}_x|_{wc} \approx \rho|_{wc} |q_x|_{wc} \tag{16.26}$$

$$\frac{\dot{m}_x|_{wc}}{\partial x} \approx \frac{\rho|_{wc}}{\rho|_{wc}} q_x|_{wc}$$

$$\frac{\partial \dot{m}_x}{\partial x}|_{center} \approx \frac{\dot{m}_x|_{ce} - \dot{m}_x|_{wc}}{x|_{ce} - x|_{wc}}$$
(16.26)

$$\frac{\partial \dot{m}_z}{\partial z}\Big|_{center} \approx \frac{\dot{m}_z|_{cn} - \dot{m}_z|_{sc}}{z|_{cn} - z|_{sc}} \tag{16.28}$$

$$\frac{\partial \dot{m}_z}{\partial z}\Big|_{center} \approx \frac{\dot{m}_z|_{cen}}{z|_{cn} - \dot{m}_z|_{sc}} \approx \frac{\dot{m}_z|_{cn} - \dot{m}_z|_{sc}}{z|_{cn} - z|_{sc}} \qquad (16.28)$$

$$\frac{\partial}{\partial t} (\rho h)\Big|_{center} \approx \frac{\partial}{\partial t} (\rho|_{center} h|_{center}) \qquad (16.29)$$

#### The Courant Friedrichs Lewy condition

Since the compressible Reynolds equation is of parabolic type, it is necessary to consider the CFL condition. This is for the two-dimensional case:

$$\Delta t \le \frac{C_{max}}{\frac{q_x}{h\,\Delta x} + \frac{q_z}{h\,\Delta z}} \tag{16.30}$$

The CFL condition is checked in the multibody system in each iteration after the calculation of the residual and the time step size is reduced accordingly if necessary. For explicit methods,  $C_{max} = 1$ usually applies. However, since the solution method used is implicit, it is also possible that  $C_{max} \geq 1$  is specified. However, values of  $C_{max}$  that are too high can lead to divergence of the non-linear solver.

#### 16.5 Hydraulic boundary conditions

#### 16.5.1Dirichlet boundary condition

Dirichlet boundary conditions can be specified either for the hydraulic pressure p or for the density  $\rho$  or for the radial gap height  $h_0$  filled with oil.

#### Partially flooded bearing edges

In this case, it is assumed that the component surface on the opposite side of the mesh is wetted with an oil film with a layer thickness of  $h_0$  at the bearing edges. See figure 16.4. This assumption was made

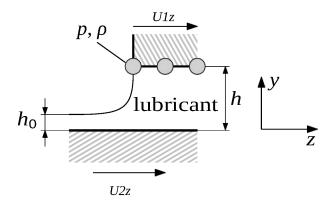


Figure 16.4: assumptions for partially flooded bearing edges

based on the commercial software AVL-Excite. In the case of the lubricating film of the piston, where the mesh is always on the piston, an oil film with a constant layer thickness  $h_0$  on the cylinder liner is assumed because only in this case is oil transport through the bearing edges possible due to the axial movement of the piston. The fluid density at the bearing edges is determined as follows

$$\Phi = \frac{h_0}{h} \tag{16.31}$$

$$\Phi = \frac{h_0}{h}$$

$$\rho = \begin{cases}
\rho_c \Phi & \text{when } \Phi \le 1 \\
\rho_c & \text{if } \Phi > 1
\end{cases}$$
(16.31)

However, since Reynolds' differential equation only knows one independent variable, it is not possible to specify density and pressure at the bearing edges at the same time. In order to be able to specify pressure and density independently of each other, it would be necessary to switch to a multiphase flow which also takes into account the proportion of dissolved gas. However, such an approach was not pursued in this work.

#### Coupling of boundary conditions with other variables

When specifying a Dirichlet boundary condition, it is possible to specify not only constants but also any functions as boundary conditions. For example the pressure can be specified as a boundary condition for the lubricating film at the edges of a bearing, or within lubrication grooves, by means of a "DriveCaller".

#### Geometric locations for the application of boundary conditions

A Dirichlet boundary condition is always required at the bearing edges of the cylindrical plain bearing. In addition, lubrication grooves with a circular or rectangular cross-section can be defined and Dirichlet boundary conditions can be specified there. For reasons of accuracy, the mesh must be located at the same side as the lubrication grooves.

### 16.5.2 Periodic boundary conditions

Since the surface of the cylindrical plain bearing is unwound onto a plane, it is necessary that the radial bearing edges are coupled with each other. For this purpose, so-called mirror nodes were introduced which have their own nodal coordinates but obtain their value and equation number from their corresponding nodes at the opposite side of the mesh.

#### 16.5.3 Coupling a plain bearing with a hydraulic network

In the multi-body system MBDyn used, it is also possible to set up hydraulic networks consisting of pipelines, valves, throttle points, tanks and hydraulic actuators. For this reason, it was obvious to provide a coupling between individual plain bearings with a hydraulic network. In this way, for example, the two journal bearings may be connected to each other via a pipeline. The quantity of oil supplied via the oil pump can be specified as a function of the revolution speed, for example.

#### Coupling at the bearing edges

When coupling the mass flow through bearing edges with the hydraulic network, the following conditions apply for the bearing edge at  $z = \frac{B}{2}$ :

$$p|_{z=\frac{B}{2}} = p_{hyd} \tag{16.33}$$

$$\dot{m}_{hyd} = -\int_{x=0}^{2\pi r} \left[ \rho \left( \frac{\Delta U_{1z} + \Delta U_{2z}}{2} h - \frac{h^3}{12 \eta} \frac{\partial p}{\partial z} \right) \right] \Big|_{z=\frac{B}{2}} dx$$
 (16.34)

 $p_{hyd}$  Pressure of the node from the hydraulic network to which the bearing edge is coupled

 $\dot{m}_{hud}$  Mass flow which emerges from the hydraulic network

The negative sign in equation 16.34 results from the convention for defining the residual for the nodes in the hydraulic network. Equation 16.34 applies if the network is located on the bearing journal. Otherwise, it must be integrated over  $\int_{x=0}^{2\pi R}$ .

Consideration of the flow direction for  $z = -\frac{B}{2}$  Coupling with the hydraulic network is achieved using four nodal coupling elements at the bearing edges. To couple the mass flow in the negative z direction, the node coordinates are swapped in the x direction so that dx becomes negative.

#### Coupling with a radial lubrication groove

When coupling with a radial lubrication groove, the continuity equation is extended by an additional source term.

$$p|_{A_{hyd}} = p_{hyd}$$

$$\dot{m}_{hyd} = \oint_{A_{hyd}} \left\{ \frac{\partial (\rho h)}{\partial t} + \frac{\partial}{\partial x} \left[ \rho \left( \frac{\Delta U_{1x} + \Delta U_{2x}}{2} h - \frac{h^3}{12 \eta} \frac{\partial p}{\partial x} \right) \right] + \frac{\partial}{\partial z} \left[ \rho \left( \frac{\Delta U_{1z} + \Delta U_{2z}}{2} h - \frac{h^3}{12 \eta} \frac{p}{z} \right) \right] \right\} dA_{hyd}$$

$$(16.35)$$

 $A_{hyd}$  Area of the radial lubrication groove on the bearing surface

Pressure losses due to flow restrictions when entering the lubricating oil bore must be explicitly modeled in the hydraulic network by means of a throttling point. Coupling with a radial lubrication groove is only possible if this is located on the side of the mesh.

## 16.6 Kinematic boundary conditions

The kinematic variables h,  $\frac{\partial h}{\partial t} = \dot{h}$ ,  $\Delta U_1$  and  $\Delta U_2$  required in equation 16.15 are derived in this section. Two possibilities have been implemented in this work so far:

- The mesh moves with the bearing journal
- The mesh moves with the bearing shell

In the case of a piston-cylinder bearing, the first option must be selected so that the kinematic boundary conditions and the reaction forces correspond to reality. Both options can be used for radial plain bearings. The mesh should preferably be located on the side where the pockets or lubrication grooves are located in order to improve accuracy. However, it is also possible to specify pockets on the side opposite the mesh.

#### 16.6.1 The cylindrical plain bearing in which the mesh moves with the bearing journal

The kinematic relationships in Equation 16.37 are shown in Figure 16.5. It is assumed that the radial gap height vector  $\mathbf{v}_h$  is normal to the surface of the bearing shell. Other assumptions would lead to a quadratic equation with multiple solutions. However, with the bearing clearances of  $\Psi \approx 10^{-3}$  that are usual for radial plain bearings, the approximation used should be more than sufficiently accurate. For piston-cylinder bearings, the relative bearing clearance is even smaller than that.

The determination of the radial gap height

$$X_1 + R_1 (o_1 + R_{b1} v_1) + R_2 R_{b2} v_h = X_2 + R_2 (o_2 + R_{b2} v_2)$$
 (16.37)

 $X_1$  Position of the node of the bearing journal

 $R_1$  Orientation of the node of the bearing journal

- $\omega_1$  Angular velocity of the node of the bearing journal
- $o_1$  Distance between the center of the bearing journal and the structural node of the bearing journal



Figure 16.5: Kinematics of the rigid cylindrical plain bearing with mesh on the bearing journal

- $R_{b1}$  Orientation of the bearing journal relative to the node of the bearing journal
- $v_1$  Distance from the center of the bearing journal to the point at the surface of the journal at which the radial gap height is measured, in the coordinate system of the journal
- $X_2$  Position of the node of the bearing shell
- $R_2$  Orientation of the node of the bearing shell
- $\omega_2$  Angular velocity of the structural node of the bearing shell
- $o_2$  Distance between the center of the bearing shell and the node of the bearing shell
- $R_{b2}$  Orientation of the bearing shell relative to the structural node of the bearing shell
- $v_2$  Distance from the center of the bearing shell to the point on the surface of the bearing shell at which the radial gap height is measured, in the coordinate system of the bearing shell
- $\boldsymbol{v}_h$  Vector of the radial gap height
- $h_{rb}$  Radial gap height, not considering elastic deformations of the bearing surfaces
- h Actual radial gap height
- $w_{tot}$  Total radial component of the elastic deformation of the surfaces of bearing shell and bearing journal

For a certain node on the bearing journal, the vector  $v_1$  is known a priori according to equation 16.38. The unknown variables in equation 16.39 and equation 16.40 are  $\varphi_2$  and  $h_{rb}$ . These must be determined

so that equation 16.37 is fulfilled.

$$v_1 = \begin{pmatrix} (r + \Delta y_1) \cos \varphi_1 \\ (r + \Delta y_1) \sin \varphi_1 \\ z_1 \end{pmatrix}$$
 (16.38)

$$\mathbf{v}_2 = \begin{pmatrix} (R + \Delta y_2) \cos \varphi_2 \\ (R + \Delta y_2) \sin \varphi_2 \\ z_2 \end{pmatrix}$$
 (16.39)

$$\boldsymbol{v}_h = \begin{pmatrix} h_{rb} \cos \varphi_2 \\ h_{rb} \sin \varphi_2 \\ 0 \end{pmatrix} \tag{16.40}$$

 $(\varphi_1 \quad z_1)$  Position of the hydrodynamic node on the bearing journal in cylindrical coordinates

 $\Delta y_1$  Deviation of the journal surface with respect to the ideal cylindrical shape within specified areas (e.g. barrel shape, cone shape, ellipse shape, grooves, ...).

 $(\varphi_2 \quad z_2)$  Position of the point on the surface of the bearing shell which is opposite the hydrodynamic node on the bearing journal

 $\Delta y_2$  Deviation of the bearing shell surface with respect to the ideal cylindrical surface within specified areas (e.g. barrel shape, cone shape, ellipse shape, grooves, ...).

Due to the assumption that the vector  $v_h$  is normal to the surface of the bearing shell, the resolution of equation 16.37 to  $\varphi_2$  and  $h_{rb}$  is simple:

$$v_2 - v_h = \underbrace{R_{b2}^T \left\{ R_2^T \left[ X_1 + R_1 \left( o_1 + R_{b1} v_1 \right) - X_2 \right] - o_2 \right\}}_{b}$$
(16.41)

$$\begin{pmatrix}
[(R + \Delta y_2) - h_{rb}] \cos \varphi_2 \\
[(R + \Delta y_2) - h_{rb}] \sin \varphi_2 \\
z_2
\end{pmatrix} = \begin{pmatrix}
b_1 \\
b_2 \\
b_3
\end{pmatrix}$$
(16.42)

$$\sin \varphi_2 = \frac{b_2}{\sqrt{b_1^2 + b_2^2}} \tag{16.43}$$

$$\cos \varphi_2 = \frac{b_1}{\sqrt{b_1^2 + b_2^2}} \tag{16.44}$$

$$\tan \varphi_2 = \frac{b_2}{b_1} \tag{16.45}$$

$$h_{rb} = R + \Delta y_2 - \sqrt{b_1^2 + b_2^2} \tag{16.46}$$

$$h = h_{rb} + w_{tot} \tag{16.47}$$

In addition, the derivatives of the radial gap height with respect to time are required for the Reynolds

differential equation:

$$\dot{h}_{rb} = \Delta \dot{y}_2 - \frac{b_1 \, \dot{b}_1 + b_2 \, \dot{b}_2}{\sqrt{b_1^2 + b_2^2}} \tag{16.48}$$

$$\dot{h} = \dot{h}_{rb} + \dot{w}_{tot} \tag{16.49}$$

$$egin{aligned} \dot{m{b}} &= m{R}_{b2}^T m{R}_2^T \; igg\{ \dot{m{X}}_1 + raket{\omega_1} m{R}_1 \; (m{o}_1 + m{R}_{b1} \, m{v}_1) - \dot{m{X}}_2 \ &- raket{\omega_2} [m{X}_1 + m{R}_1 \; (m{o}_1 + m{R}_{b1} \, m{v}_1) - m{X}_2] \} \end{aligned}$$

$$-\langle \boldsymbol{\omega}_2 \rangle \left[ \boldsymbol{X}_1 + \boldsymbol{R}_1 \left( \boldsymbol{o}_1 + \boldsymbol{R}_{b1} \, \boldsymbol{v}_1 \right) - \boldsymbol{X}_2 \right] \} \tag{16.50}$$

$$\Delta \dot{y}_2 = \frac{\partial \Delta y_2}{\partial x_2} \, \dot{x}_2 + \frac{\partial \Delta y_2}{\partial z_2} \, \dot{z}_2 \tag{16.51}$$

$$\dot{x}_2 = R \dot{\varphi}_2 \tag{16.52}$$

$$\dot{\varphi}_2 = \frac{b_1 \, \dot{b}_2 - \dot{b}_1 \, b_2}{b_1^2 + b_2^2} \tag{16.53}$$

$$\dot{z}_2 = \dot{b}_3 \tag{16.54}$$

For this purpose, the derivatives of  $\Delta y_2$  must be specified.

#### Deviations from the cylindrical bearing geometry

Various types of so-called pockets were implemented in this work. A pocket is a deviation from the cylindrical bearing geometry within a given boundary. Rectangular and circular boundaries are currently implemented. If a node is located within this boundary, then  $\Delta y_1$  or  $\Delta y_2$  correspond to the height of the respective pocket. In the case of a circular boundary, this is of course only a very rough approximation. In the case of a rectangular boundary, it is still possible to align the grid lines accordingly when generating the mesh.

**Pocket with constant height**  $\Delta y$  In this case, the specified height  $\Delta y$  applies to the entire area within the boundary. This means that  $\frac{\partial \Delta y}{\partial x} = 0$  and  $\frac{\partial \Delta y}{\partial z} = 0$ .

**Pocket with linear interpolation of**  $\Delta y$  With linear interpolation, the height  $\Delta y$  can be specified at four vertices of a rectangle. See figure 16.6. The rectangle is only used for interpolation or extrapolation. The boundary of the pocket, on the other hand, can also be a circle, for example.



Figure 16.6: Interpolation of  $\Delta y$  for a rectangular pocket

$$\Delta y_{i1} = (\Delta y_{21} - \Delta y_{11}) \frac{x_i - x_1}{x_2 - x_1} + \Delta y_{11}$$
(16.55)

$$\Delta y_{i2} = (\Delta y_{22} - \Delta y_{12}) \frac{x_i - x_1}{x_2 - x_1} + \Delta y_{12}$$
(16.56)

$$\Delta y = (\Delta y_{i2} - \Delta y_{i1}) \frac{z_i - z_1}{z_2 - z_1} + \Delta y_{i1}$$
(16.57)

$$\frac{\partial \Delta y}{\partial x} = \frac{z_i - z_1}{z_2 - z_1} \left( \frac{\partial \Delta y_{i2}}{\partial x} - \frac{\partial \Delta y_{i1}}{\partial x} \right) + \frac{\partial \Delta y_{i1}}{\partial x}$$
(16.58)

$$\frac{\partial \Delta y_{i1}}{\partial x} = \frac{\Delta y_{21} - \Delta y_{11}}{x_2 - x_1} \tag{16.59}$$

$$\frac{\partial \Delta y_{i2}}{\partial x} = \frac{\Delta y_{22} - \Delta y_{12}}{x_2 - x_1} \tag{16.60}$$

$$\frac{\partial \Delta y_{i2}}{\partial x} = \frac{\Delta y_{22} - \Delta y_{12}}{x_2 - x_1}$$

$$\frac{\partial \Delta y}{\partial z} = \frac{\Delta y_{i2} - \Delta y_{i1}}{z_2 - z_1}$$
(16.60)

#### boundary conditions for the velocities

The velocities  $\Delta U_1$  and  $\Delta U_2$  must still be specified for the Reynolds differential equation. For this purpose, the velocity of the points  $P_1$  and  $P_2$  which are located on the surface of the bearing journal and bearing shell are first determined as shown in figure 16.5.

$$P_1 = X_1 + R_1 (o_1 + R_{b1} v_1)$$
(16.62)

$$P_2 = X_2 + R_2 (o_2 + R_{b2} v_2)$$
 (16.63)

For the absolute velocities of the points  $P_1$  and  $P_2$  we get

$$\dot{\boldsymbol{P}}_1 = \dot{\boldsymbol{X}}_1 + \langle \boldsymbol{\omega}_1 \rangle \, \boldsymbol{R}_1 \, \left( \boldsymbol{o}_1 + \boldsymbol{R}_{b1} \, \boldsymbol{v}_1 \right) \tag{16.64}$$

$$\dot{P}_2 = \dot{X}_2 + \langle \omega_2 \rangle R_2 \left( o_2 + R_{b2} v_2 \right) \tag{16.65}$$

Finally, the difference between the absolute velocities of the component surface and the control volume is transformed into the tangential coordinate system  $R_{t1}$ . The orientation of the tangential coordinate system is shown in Figure 16.7. Since the mesh moves with the bearing journal according to the assumptions in this section, the velocity difference  $\Delta U_1$  at the bearing journal is zero.

$$\Delta U_1 = 0 \tag{16.66}$$

$$\Delta \boldsymbol{U}_{2} = \boldsymbol{R}_{t1}^{T} \, \boldsymbol{R}_{b1}^{T} \, \boldsymbol{R}_{1}^{T} \, \left( \dot{\boldsymbol{P}}_{2} - \dot{\boldsymbol{P}}_{1} \right) \tag{16.67}$$

$$\mathbf{R}_{t1} = \begin{pmatrix} -\sin\varphi_1 & -\cos\varphi_1 & 0\\ \cos\varphi_1 & -\sin\varphi_1 & 0\\ 0 & 0 & 1 \end{pmatrix}$$
 (16.68)

#### The cylindrical plain bearing in which the mesh moves with the bearing shell 16.6.2

It is assumed that the radial gap height  $v_h$  is measured normal to the surface of the bearing journal. See figure 16.8. Apart from this, the kinematic relationships are the same as in section 16.6.1.

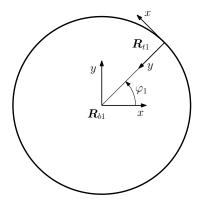


Figure 16.7: Orientation of the tangential coordinate system

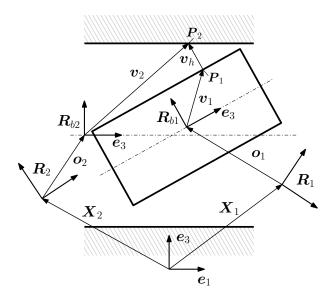


Figure 16.8: Kinematics of the cylindrical plain bearing with mesh on the bearing shell

### The determination of the radial gap height

$$\mathbf{v}_{h} = \begin{pmatrix} h_{rb} \cos \varphi_{1} \\ h_{rb} \sin \varphi_{1} \\ 0 \end{pmatrix}$$

$$\mathbf{v}_{1} + \mathbf{v}_{h} = \mathbf{b}$$

$$= \mathbf{R}_{b1}^{T} \left\{ \mathbf{R}_{1}^{T} \left[ \mathbf{X}_{2} + \mathbf{R}_{2} \left( \mathbf{o}_{2} + \mathbf{R}_{b2} \mathbf{v}_{2} \right) - \mathbf{X}_{1} \right] - \mathbf{o}_{1} \right\}$$

$$\dot{\mathbf{v}}_{1} = \mathbf{v}_{1} + \mathbf{v}_{2} \left[ \dot{\mathbf{v}}_{1} + \dot{\mathbf{v}}_{2} + \dot{\mathbf{v}}_{3} + \dot{\mathbf{v}}_{4} \right]$$

$$\dot{\mathbf{v}}_{2} = \mathbf{v}_{3} + \mathbf{v}_{4} + \dot{\mathbf{v}}_{3} + \dot{\mathbf{v}}_{4} + \dot{\mathbf{v}}_{4} + \dot{\mathbf{v}}_{5} + \dot{\mathbf{v}}_{5}$$

$$v_1 + v_h = b$$

$$= R_{b1}^T \left\{ R_1^T \left[ X_2 + R_2 \left( o_2 + R_{b2} v_2 \right) - X_1 \right] - o_1 \right\}$$
(16.70)

$$\dot{\boldsymbol{b}} = \boldsymbol{R}_{b1}^{T} \boldsymbol{R}_{1}^{T} \left\{ \dot{\boldsymbol{X}}_{2} + \langle \boldsymbol{\omega}_{2} \rangle \boldsymbol{R}_{2} \left( \boldsymbol{o}_{2} + \boldsymbol{R}_{b2} \boldsymbol{v}_{2} \right) - \dot{\boldsymbol{X}}_{1} \right. \\
\left. - \langle \boldsymbol{\omega}_{1} \rangle \left[ \boldsymbol{X}_{2} + \boldsymbol{R}_{2} \left( \boldsymbol{o}_{2} + \boldsymbol{R}_{b2} \boldsymbol{v}_{2} \right) - \boldsymbol{X}_{1} \right] \right\} \tag{16.71}$$

(16.72)

$$\sin \varphi_1 = \frac{b_2}{\sqrt{b_1^2 + b_2^2}} \tag{16.73}$$

$$\cos \varphi_1 = \frac{b_1}{\sqrt{b_1^2 + b_2^2}} \tag{16.74}$$

$$\tan \varphi_1 = \frac{b_2}{b_1} \tag{16.75}$$

$$\dot{\varphi}_1 = \frac{b_1 \, \dot{b}_2 - \dot{b}_1 \, b_2}{b_1^2 + b_2^2} \tag{16.76}$$

$$h_{rb} = \sqrt{b_1^2 + b_2^2} - r - \Delta y_1 \tag{16.77}$$

$$\dot{h}_{rb} = \frac{b_1 \dot{b}_1 + b_2 \dot{b}_2}{\sqrt{b_1^2 + b_2^2}} - \Delta \dot{y}_1 \tag{16.78}$$

$$h = h_{rb} + w_{tot} \tag{16.79}$$

$$\dot{h} = \dot{h}_{rb} + \dot{w}_{tot} \tag{16.80}$$

$$h = h_{rb} + w_{tot}$$

$$\Delta \dot{y}_1 = \frac{\partial \Delta y_1}{\partial x_1} \dot{x}_1 + \frac{\partial \Delta y_1}{\partial z_1} \dot{z}_1$$

$$(16.81)$$

$$\dot{x}_1 = r \,\dot{\varphi}_1 \tag{16.82}$$

$$\dot{z}_1 = \dot{b}_3 \tag{16.83}$$

#### Boundary conditions for the velocities

In contrast to section 16.6.1, the following applies to the velocities:

$$\Delta U_1 = R_{t2}^T R_{b2}^T R_2^T \left( \dot{P}_1 - \dot{P}_2 \right)$$
 (16.84)

$$\Delta \boldsymbol{U}_2 = \boldsymbol{0} \tag{16.85}$$

$$\Delta U_2 = \mathbf{0}$$

$$\mathbf{R}_{t2} = \begin{pmatrix} -\sin\varphi_2 & -\cos\varphi_2 & 0\\ \cos\varphi_2 & -\sin\varphi_2 & 0\\ 0 & 0 & 1 \end{pmatrix}$$

$$(16.85)$$

#### Solid body contact and dry friction 16.7

#### 16.7.1 The contact model of Greenwood and Tripp

In order to account for solid contact and dry friction between rough surfaces, the approach of Greenwood and Tripp was applied[?]. The equations for the Hertzian contact pressure between asperities of rough surfaces are [?]:

$$p_{asp} = \frac{16\sqrt{2}}{15} \pi \left(\eta_{asp} \beta_{asp} \sigma_{\delta}\right)^{2} \acute{E} \sqrt{\frac{\sigma_{\delta}}{\beta_{asp}}} F_{\frac{5}{2}} \left(\frac{h}{\sigma_{\delta}}\right)$$
(16.87)

$$\acute{E} = \left(\frac{1 - \nu_1^2}{E_1} + \frac{1 - \nu_2^2}{E_2}\right)^{-1}$$
(16.88)

$$\dot{E} = \left(\frac{1 - \nu_1^2}{E_1} + \frac{1 - \nu_2^2}{E_2}\right)^{-1}$$

$$F_{\frac{5}{2}}(H) = \begin{cases}
4.4086 \cdot 10^{-5} (4 - H)^{6.804} & \text{if } H \leq 4 \\
0 & \text{if } H > 4
\end{cases}$$
(16.89)

$$H = \frac{h}{\sigma_{\delta}} \tag{16.90}$$

$$\sigma_{\delta} = \sqrt{M_0} \tag{16.91}$$

$$\eta_{asp} = \frac{1}{6\pi\sqrt{3}} \frac{M_4}{M_2} \tag{16.92}$$

$$\beta_{asp} = \frac{3\sqrt{\pi}}{8\sqrt{M_4}} \tag{16.93}$$

 $p_{asp}$  Pressure due to contact between the asperities of the rough surfaces

 $\eta_{asp}$  Asperity density

 $\beta_{asp}$  Radius of curvature of the asperity tip

 $\sigma_{\delta}$  Variance of the measured values of the roughness profile

 $M_0 = \sigma_\delta^2$  combined zeroth spectral moment to describe the surface roughness

 $M_2 = \dot{\sigma}_{\delta}^2$  combined second spectral moment to describe the surface roughness

 $M_4 = \ddot{\sigma}_{\delta}^2$  combined fourth spectral moment to describe the surface roughness

According to [?], those values can be determined from the analysis of measured roughness profiles of the component surfaces.

#### 16.7.2 The two-dimensional LuGre solid friction model

The standard model for the description of dry friction between solid bodies is Coulomb's law. However, the implementation of the transition between sliding friction and static friction for the general twodimensional case is not trivial. The consideration of this transition is always important in a multi-body system, if the relative movement of a mechanism is going to stop due to friction. If sliding friction were always used in the calculation, an explicit integration scheme would result in endless oscillations around the static equilibrium point. For this reason, the two-dimensional LuGre model presented in [?] was selected, which is based on a linear differential equation and does not require any case distinctions. The LuGre friction model assumes that two bodies with rough surfaces touch each other at the tips of the asperities, also called bristles in the literature. With small relative movements, these bristles behave like springs. However, as soon as a certain maximum deformation is reached, the bristles begin to slide over each other. However, the transition between sticking and sliding is continuous in the LuGre model. The two-dimensional LuGre model from [?] reads:

$$\boldsymbol{\tau}_{asp} = (\boldsymbol{\sigma}_0 \, \boldsymbol{z} + \boldsymbol{\sigma}_1 \, \dot{\boldsymbol{z}}) \, p_{asp} \tag{16.94}$$

$$\dot{\boldsymbol{z}} = \Delta \boldsymbol{U} - \kappa \, \boldsymbol{M}_k^{-2} \, \boldsymbol{\sigma}_0 \, \boldsymbol{z} \tag{16.95}$$

$$g = \frac{\|\boldsymbol{M}_{k}^{2} \Delta \boldsymbol{U}\|}{\|\boldsymbol{M}_{k} \Delta \boldsymbol{U}\|} + \left(\frac{\|\boldsymbol{M}_{s}^{2} \Delta \boldsymbol{U}\|}{\|\boldsymbol{M}_{s} \Delta \boldsymbol{U}\|} - \frac{\|\boldsymbol{M}_{k}^{2} \Delta \boldsymbol{U}\|}{\|\boldsymbol{M}_{k} \Delta \boldsymbol{U}\|}\right) \exp\left[-\left(\frac{\|\Delta \boldsymbol{U}\|}{v_{s}}\right)^{\gamma}\right]$$
(16.96)

$$\kappa = \frac{\|\boldsymbol{M}_k^2 \Delta \boldsymbol{U}\|}{g} \tag{16.97}$$

$$\boldsymbol{M}_{k} = \begin{pmatrix} \mu_{kx} & 0\\ 0 & \mu_{kz} \end{pmatrix} \tag{16.98}$$

$$\boldsymbol{M}_s = \begin{pmatrix} \mu_{sx} & 0\\ 0 & \mu_{sz} \end{pmatrix} \tag{16.99}$$

$$\boldsymbol{\sigma}_0 = \begin{pmatrix} \sigma_{0x} & 0\\ 0 & \sigma_{0z} \end{pmatrix} \tag{16.100}$$

$$\sigma_1 = \begin{pmatrix} \sigma_{1x} & 0\\ 0 & \sigma_{1z} \end{pmatrix} \tag{16.101}$$

$$\Delta \boldsymbol{U} = \begin{pmatrix} \boldsymbol{e}_1^T \\ \boldsymbol{e}_3^T \end{pmatrix} (\Delta \boldsymbol{U}_1 - \Delta \boldsymbol{U}_2)$$
 (16.102)

 $z = \begin{pmatrix} z_1 \\ z_2 \end{pmatrix}$  Deformation of the bristles

 $m{ au}_{asp} = egin{pmatrix} au_{asp_{xy}} \\ au_{asp_{yz}} \end{pmatrix}$  Shear stresses due to dry friction

 $\Delta U$  Components of the velocity difference in x- and z direction

 $\sigma_0$  transient micro-sliding stiffness matrix

 $\sigma_1$  transient micro-slip damping matrix

 $\boldsymbol{M}_k$  sliding friction matrix

 $\mu_{kx}$  coefficient of sliding friction in x direction

 $\mu_{kz}$  Sliding friction coefficient in z direction

 $M_s$  static friction matrix

 $\mu_{sx}$  Coefficient of static friction in x direction

 $\mu_{sz}$  Coefficient of static friction in z direction

 $v_s$  Velocity which describes the transition between static friction and dynamic friction (Stribeck effect)

 $\gamma$  Coefficient that describes the transition between static friction and dynamic friction (Stribeck effect)

#### The transition to Coulomb's law of friction

For the stationary sliding process for isotropic surfaces without Stribeck effect, the LuGre model can be simplified as follows for illustrative purposes:

$$\dot{z} = 0 \tag{16.103}$$

$$\boldsymbol{M}_k = \boldsymbol{M}_s \tag{16.104}$$

$$\sigma_{0x} = \sigma_{0z} = \sigma_0 \tag{16.105}$$

$$\mu_{kx} = \mu_{kz} = \mu_k \tag{16.106}$$

With these simplifications we get

$$z = \frac{\mu_k}{\sigma_0 \|\Delta U\|_2} \Delta U \tag{16.107}$$

$$\tau_{asp} = \frac{\sigma_0 \|\Delta U\|_2}{\sigma_0 z p_{asp}} 
= \frac{\mu_k p_{asp}}{\|\Delta U\|_2} \Delta U$$
(16.108)

Equation 16.108 therefore corresponds exactly to the surface area of the cone in Coulomb's law of friction.

#### The transition to static friction

For the unsteady one-dimensional case, the simplifications of equation 16.104-16.106:

$$\dot{z}_x = \Delta U_x - |\Delta U_x| \frac{\sigma_{0x}}{\mu_k} z_x \tag{16.109}$$

At constant velocity  $\Delta U_x$ , the analytical solution of the differential equation 16.109 and the initial condition  $z_x|_{t=0} = 0$ :

$$z_x = \left[1 - \exp\left(-\left|\Delta U_x\right| \frac{\sigma_{0x}}{\mu_k} t\right)\right] \frac{\mu_k}{\sigma_{0x}} \operatorname{sign} \Delta U_x \tag{16.110}$$

$$\tau_x = \left[ \mu_k \operatorname{sign} \Delta U_x + (\Delta U_x \, \sigma_{1x} - \mu_k \operatorname{sign} \Delta U_x) \, \exp\left( -|\Delta U_x| \, \frac{\sigma_{0x}}{\mu_k} \, t \right) \right] \, p_{asp} \tag{16.111}$$

Figure 16.9 shows the course of the shear stresses as a function of the deformation according to equation 16.111. It can be seen from this that the product  $\sigma_{0x} p_{asp}$  only indicates the gradient of the stress curve at the beginning of the movement (black straight line). After that, the movement changes into a creeping movement.

#### Numerical integration of the LuGre model

In principle, the linear differential equation for the LuGre model could be solved together with the other equations of the multi-body system. However, this would triple the size of the Jacobian matrix, as the states z for the transition between static friction and dynamic friction would have to be stored for each node in addition to the hydrodynamic pressure p. However, since the differential equation of the LuGre model is linear and the static friction states of the individual nodes are independent, the LuGre model was numerically integrated separately from the other equations. The following integration scheme is used for this purpose:

$$\boldsymbol{z}|_{t} = \begin{bmatrix} \zeta \ \dot{\boldsymbol{z}}|_{t} + (1 - \zeta) \ \dot{\boldsymbol{z}}|_{t-1} \end{bmatrix} \ \Delta t + \boldsymbol{z}|_{t-1} \tag{16.112}$$

 $\Delta t$  time step size

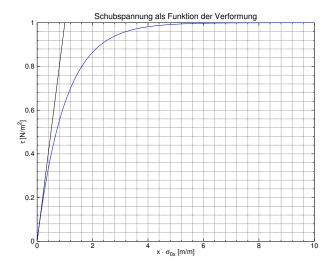


Figure 16.9: Shear stress distribution as a function of deformation in the one-dimensional LuGre model

 $\zeta = 0$  explicit Euler method (unstable)

 $\zeta = \frac{1}{2}$  trapezoidal rule (second order accurate)

 $\zeta = 1$  implicit Euler method (first order accurate)

With these assumptions, the following equation for  $\dot{z}$  results:

$$\boldsymbol{A}|_{t} = \kappa|_{t} \, \boldsymbol{M}_{k}^{-2} \, \boldsymbol{\sigma}_{0} \tag{16.113}$$

$$\dot{\boldsymbol{z}}|_{t} = (\boldsymbol{I} + \zeta \, \Delta t \, \boldsymbol{A}|_{t})^{-1} \left\{ \Delta \boldsymbol{U}|_{t} - \boldsymbol{A}|_{t} \left[ (1 - \zeta) \, \dot{\boldsymbol{z}}|_{t-1} \, \Delta t + \boldsymbol{z}|_{t-1} \right] \right\}$$

$$(16.114)$$

### 16.8 Reaction forces

#### 16.8.1 Frictional forces due to fluid friction

For a Newtonian fluid in laminar flow, the shear stresses  $\tau_{xy}$  and  $\tau_{yz}$  apply:

$$\tau_{xy} = \eta \left( \frac{\partial u_x}{\partial y} + \underbrace{\frac{\partial u_y}{\partial x}}_{\approx 0} \right)$$

$$\tau_{yz} = \eta \left( \underbrace{\frac{\partial u_y}{\partial z}}_{\approx 0} + \underbrace{\frac{\partial u_z}{\partial y}}_{\approx 0} \right)$$
(16.115)

As in the derivation of the Reynolds differential equation, the derivatives of the velocity in the circumferential direction and axial direction are neglected compared to the derivative in the radial gap height direction. If equation 16.8 is differentiated according to y, the velocity gradients are obtained:

$$\frac{\partial u_x}{\partial y} = \frac{1}{\eta} \frac{\partial p}{\partial x} \left( y - \frac{h}{2} \right) + \frac{\Delta U_{1x} - \Delta U_{2x}}{h}$$

$$\frac{\partial u_z}{\partial y} = \frac{1}{\eta} \frac{\partial p}{\partial z} \left( y - \frac{h}{2} \right) + \frac{\Delta U_{1z} - \Delta U_{2z}}{h}$$
(16.116)

Substituting equation 16.116 into equation 16.115 gives the shear stresses at the surface of the components:

$$\tau_{xy}|_{y=0} = -\frac{h}{2} \frac{\partial p}{\partial x} + \eta \frac{\Delta U_{1x} - \Delta U_{2x}}{h}$$
(16.117)

$$\tau_{xy}|_{y=h} = \frac{h}{2} \frac{\partial p}{\partial x} + \eta \frac{\Delta U_{1x} - \Delta U_{2x}}{h}$$

$$\tau_{yz}|_{y=0} = -\frac{h}{2} \frac{\partial p}{\partial z} + \eta \frac{\delta U_{1z} - \Delta U_{2z}}{h}$$
(16.118)

$$\tau_{yz}|_{y=0} = -\frac{h}{2} \frac{\partial p}{\partial z} + \eta \frac{\delta U_{1z} - \Delta U_{2z}}{h}$$
(16.119)

$$\tau_{yz}|_{y=h} = \frac{h}{2} \frac{\partial p}{\partial z} + \eta \frac{\delta U_{1z} - \Delta U_{2z}}{h}$$

$$(16.120)$$

#### 16.8.2 The mesh moves with the bearing shell

The reaction forces on the bearing journal and on the bearing shell result from the integration of the shear stresses and the pressure loads over the surface. The kinematic relationships are shown in Figure 16.10.

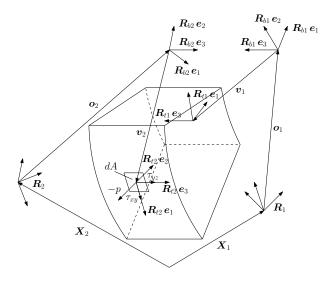


Figure 16.10: Reaction forces with a mesh on the bearing shell

#### Forces on the bearing shell

The integration of the reaction forces on the bearing shell is conveniently carried out in the coordinate system of the node of the bearing shell.

$$dF_{2}^{(\mathbf{R}_{2})} = \mathbf{R}_{b2} \, \mathbf{R}_{t2} \begin{pmatrix} \tau_{xy}|_{y=0} + \tau_{asp_{xy}} \\ -(p + p_{asp}) \\ \tau_{yz}|_{y=0} + \tau_{asp_{yz}} \end{pmatrix} dA_{2}$$
(16.121)

$$d\mathbf{M}_{2}^{(\mathbf{R}_{2})} = \langle \mathbf{R}_{b2} \, \mathbf{v}_{2} \rangle \, d\mathbf{F}_{2}^{(\mathbf{R}_{2})} \tag{16.122}$$

$$\mathbf{F}_2 = \mathbf{R}_2 \oint_{A_2} d\mathbf{F}_2^{(\mathbf{R}_2)} \tag{16.123}$$

$$M_2 = \langle R_2 o_2 \rangle F_2 + R_2 \oint_{A_2} dM_2^{(R_2)}$$
 (16.124)

#### Forces on the bearing journal

Since the shear stresses due to fluid friction are different on the bearing journal at y=h and on the bearing shell at y=0, the reaction forces on both sides must be integrated. For this purpose, the shear stresses must be transformed from the mesh to the opposite side. This transformation assumes that the pressure p also acts perpendicular to the surface on the opposite side and that the shear stresses  $\tau_{xy}$  and  $\tau_{yz}$  lie in the tangential plane of the surface of the bearing journal. However, as the bearing journal can tilt relative to the bearing shell or the coordinate system  $R_{b1}$  can be oriented differently to the coordinate system  $R_{b2}$ , the modified tangential coordinate system  $R_{b1}$  is introduced. This is defined as follows:

$$\bar{R}_{t1} e_2 = R_1 R_{b1} R_{t1} e_2 \tag{16.125}$$

$$\bar{R}_{t1} e_1 = \langle \bar{R}_{t1} e_1 \rangle R_2 R_{b2} R_{t2} e_3$$
 (16.126)

$$\bar{R}_{t1} e_3 = \langle \bar{R}_{t1} e_1 \rangle \bar{R}_{t1} e_2$$
 (16.127)

The axes of the coordinate system  $\bar{R}_{t1}$  must still be scaled accordingly.

$$\|\bar{R}_{t1} e_1\| \equiv 1$$
 (16.128)

$$\left\| \bar{R}_{t1} \, \boldsymbol{e}_2 \right\| \equiv 1 \tag{16.129}$$

$$\|\bar{R}_{t1} e_3\| \equiv 1$$
 (16.130)

If the bearing journal is tilted relative to the bearing shell, the axes  $\bar{R}_{t1} e_1$  and  $R_{t2} e_1$  are no longer parallel. However, as the relative bearing clearance  $\Psi$  is very small with the usual bearing dimensions, this angle will be very small.

In contrast to section 16.8.2, the integration of the reaction forces on the bearing journal takes place in the global coordinate system.

$$d\mathbf{F}_{1} = \bar{\mathbf{R}}_{t1} \begin{pmatrix} -\tau_{xy}|_{y=h} - \tau_{asp_{xy}} \\ p + p_{asp} \\ -\tau_{yz}|_{y=h} - \tau_{asp_{xy}} \end{pmatrix} dA_{1}$$

$$(16.131)$$

$$d\mathbf{M}_1 = \langle \mathbf{R}_1 \, \mathbf{R}_{b1} \, \mathbf{v}_1 \rangle \, d\mathbf{F}_1 \tag{16.132}$$

$$\boldsymbol{F}_1 = \oint_{A_1} d\boldsymbol{F}_1 \tag{16.133}$$

$$\boldsymbol{M}_{1} = \langle \boldsymbol{R}_{1} \, \boldsymbol{o}_{1} \rangle \, \boldsymbol{F}_{1} + \oint_{A_{1}} d\boldsymbol{M}_{1} \tag{16.134}$$

#### 16.8.3 The mesh moves with the bearing journal

The procedure with the mesh on the bearing journal is the same as described in section 16.8.2.

#### Forces on the bearing journal

The following applies to the forces on the bearing journal:

$$d\mathbf{F}_{1}^{(\mathbf{R}_{1})} = \mathbf{R}_{b1} \mathbf{R}_{t1} \begin{pmatrix} -\tau_{xy}|_{y=h} - \tau_{asp_{xy}} \\ p + p_{asp} \\ -\tau_{yz}|_{y=h} - \tau_{asp_{yz}} \end{pmatrix} dA_{1}$$
(16.135)

$$dM_1^{(R_1)} = \langle R_{b1} \, v_1 \rangle \, dF_1^{(R_1)} \tag{16.136}$$

$$\mathbf{F}_1 = \mathbf{R}_1 \oint_{A_1} d\mathbf{F}_1^{(\mathbf{R}_1)} \tag{16.137}$$

$$M_1 = \langle R_1 o_1 \rangle F_1 + R_1 \oint_{A_1} dM_1^{(R_1)}$$
 (16.138)

#### Forces on the bearing shell

The transformation of the forces from the bearing journal to the bearing shell is analogous to Section 16.8.2.

$$\bar{R}_{t2} e_2 = R_2 R_{b2} R_{t2} e_2 \tag{16.139}$$

$$\bar{R}_{t2} e_1 = \langle \bar{R}_{t2} e_2 \rangle R_1 R_{b1} R_{t1} e_3$$
 (16.140)

$$\bar{\mathbf{R}}_{t2}\,\mathbf{e}_3 = \langle \bar{\mathbf{R}}_{t2}\,\mathbf{e}_1 \rangle \,\mathbf{R}_{t2}\,\mathbf{e}_2 \tag{16.141}$$

$$\|\bar{R}_{t2}\,e_1\| \equiv 1\tag{16.142}$$

$$\|\bar{R}_{t2}\,e_2\| \equiv 1 \tag{16.143}$$

$$\|\bar{\boldsymbol{R}}_{t2}\,\boldsymbol{e}_3\| \equiv 1 \tag{16.144}$$

For the forces on the bearing shell, this results in

$$d\mathbf{F}_{2} = \bar{\mathbf{R}}_{t2} \begin{pmatrix} \tau_{xy}|_{y=0} + \tau_{asp_{xy}} \\ -p - p_{asp} \\ \tau_{yz}|_{y=0} + \tau_{asp_{yz}} \end{pmatrix} dA_{2}$$
(16.145)

$$d\mathbf{M}_2 = \langle \mathbf{R}_2 \, \mathbf{R}_{b2} \, \mathbf{v}_2 \rangle \, d\mathbf{F}_2 \tag{16.146}$$

$$\mathbf{F}_2 = \oint_{A_2} d\mathbf{F}_2 \tag{16.147}$$

$$\boldsymbol{M}_2 = \langle \boldsymbol{R}_2 \, \boldsymbol{o}_2 \rangle \, \boldsymbol{F}_2 + \oint_{A_2} d\boldsymbol{M}_2 \tag{16.148}$$

#### 16.8.4 The direct determination of frictional losses

Theoretically, the frictional losses could also be determined from the bearing reaction forces. However, it is not possible to separate dry friction from fluid friction and it is difficult to separate the dissipative components from the conservative components. For this reason, the friction power was determined independently of the reaction forces.

$$P_f = \oint_A \left( -U_{1x} \ \tau_{xy}|_{y=h} - U_{1z} \ \tau_{yz}|_{y=h} + U_{2x} \ \tau_{xy}|_{y=0} + U_{2z} \ \tau_{yz}|_{y=0} \right) dA$$
 (16.149)

$$P_{asp} = \oint_{A} \left( -U_{1x} \, \tau_{asp_{xy}} - U_{1z} \, \tau_{asp_{yz}} + U_{2x} \, \tau_{asp_{xy}} + U_{2z} \, \tau_{asp_{yz}} \right) \, dA \tag{16.150}$$

 $P_f$  Frictional losses due to fluid friction

 $P_{asp}$  Frictional losses due to dry friction

# 16.9 Alternative solution of the incompressible Reynolds differential equation using the finite element method

The discretization chosen in section 16.4 using finite differences was based on an orthogonal grid. This is completely sufficient for simple geometries such as a cylindrical plain bearing without lubrication grooves. Even a rectangular lubrication groove can still be captured accurately thanks to the variable grid spacing. In the case of a circular lubricating oil bore, however, the method is very inefficient, as a very fine grid is required for accurate resolution of the circular edge, which extends over the entire bearing surface due

to the orthogonal grid lines in the circumferential direction and in the axial direction. Using the finite element method, however, it is easily possible to handle complex geometries. The general procedure for the discretization of partial differential equations in this section is essentially based on [?].

## 16.9.1 The weak formulation of the Reynolds differential equation

The starting point for the finite element formulation is the incompressible Reynolds differential equation. In equation 16.151 it was assumed that the radial velocity of the bearing journal is small compared to the circumferential velocity. This results in the frequently encountered simplification  $\frac{\partial}{\partial x} \left( \frac{\Delta U_{1x} + \Delta U_{2x}}{2} h \right) \approx \frac{\Delta U_{1x} + \Delta U_{2x}}{2} \frac{\partial h}{\partial x}$ .

$$\frac{\partial}{\partial x} \left( h^3 \frac{\partial p}{\partial x} \right) + \frac{\partial}{\partial z} \left( h^3 \frac{\partial p}{\partial z} \right) = 12 \, \eta \left[ \frac{\partial h}{\partial t} + \frac{\Delta U_{1x} + \Delta U_{2x}}{2} \frac{\partial h}{\partial x} + \frac{\Delta U_{1z} + \Delta U_{2z}}{2} \frac{\partial h}{\partial z} \right] \quad (16.151)$$

Equation 16.151 is multiplied by the test function  $\bar{p}$  and integrated over the entire solution domain.

$$\int_{A} \left\{ \bar{p} \left[ \frac{\partial}{\partial x} \left( h^{3} \frac{\partial p}{\partial x} \right) + \frac{\partial}{\partial z} \left( h^{3} \frac{\partial p}{\partial z} \right) \right] -12 \eta \bar{p} \left( \frac{\partial h}{\partial t} + \frac{\Delta U_{1x} + \Delta U_{2x}}{2} \frac{\partial h}{\partial x} + \frac{\Delta U_{1z} + \Delta U_{2z}}{2} \frac{\partial h}{\partial z} \right) \right\} dA = 0$$
(16.152)

The aim is to eliminate the second derivatives from the partial differential equation. The advantage of this is that it allows lower-order shape functions to be used[?]. For this purpose, the partial differential equation is transformed using Gauss's integral theorem and the chain rule of differentiation so that only first derivatives appear[?]. This follows from the chain rule of differentiation:

$$\int_{A} \left\{ \frac{\partial}{\partial x} \left( \bar{p} \, h^{3} \, \frac{\partial p}{\partial x} \right) - \frac{\partial \bar{p}}{\partial x} \, h^{3} \, \frac{\partial p}{\partial x} + \frac{\partial}{\partial z} \left( \bar{p} \, h^{3} \, \frac{\partial p}{\partial z} \right) - \frac{\partial \bar{p}}{\partial z} \, h^{3} \, \frac{\partial p}{\partial z} \right. \\
\left. - 12 \, \eta \, \bar{p} \left( \frac{\partial h}{\partial t} + \frac{\Delta U_{1x} + \Delta U_{2x}}{2} \, \frac{\partial h}{\partial x} + \frac{\Delta U_{1z} + \Delta U_{2z}}{2} \, \frac{\partial h}{\partial z} \right) \right\} \, dA = 0 \tag{16.153}$$

The Gaussian integral theorem reads:

$$\int_{A} \left( \frac{\partial Q}{\partial x} - \frac{\partial P}{\partial z} \right) dA = \oint_{R} P dx + Q dz$$
 (16.154)

After applying Gauss's integral theorem, the following results:

$$\int_{A} \left( \frac{\partial \bar{p}}{\partial x} h^{3} \frac{\partial p}{\partial x} + \frac{\partial \bar{p}}{\partial z} h^{3} \frac{\partial p}{\partial z} \right) dA 
+12 \eta \int_{A} \bar{p} \left( \frac{\partial h}{\partial t} + \frac{\Delta U_{1x} + \Delta U_{2x}}{2} \frac{\partial h}{\partial x} + \frac{\Delta U_{1z} + \Delta U_{2z}}{2} \frac{\partial h}{\partial z} \right) dA 
= \oint_{B} -\bar{p} h^{3} \frac{\partial p}{\partial z} dx + \bar{p} h^{3} \frac{\partial p}{\partial x} dz$$
(16.155)

The edge R of the solution domain can now be divided into two areas:

 $R_p$  edge at which the pressure p is prescribed and the pressure gradient can be freely adjusted. Therefore,  $\bar{p}|_{R_p} = 0$  applies to this boundary

 $R_g$  boundary at which the pressure gradient  $\frac{\partial p}{\partial x}$  or  $\frac{\partial p}{\partial z}$  is prescribed and the pressure p can be freely adjusted.

With these assumptions, the integrals over the edges can be transformed as follows:

$$\oint_{R} -\bar{p} h^{3} \frac{\partial p}{\partial z} dx + \bar{p} h^{3} \frac{\partial p}{\partial x} dz$$

$$= -\oint_{R_{p}} \bar{p} h^{3} \frac{\partial p}{\partial z} dx - \oint_{R_{g}} \bar{p} h^{3} \frac{\partial p}{\partial z} \Big|_{g} dx$$

$$+ \oint_{R_{p}} \bar{p} h^{3} \frac{\partial p}{\partial x} dz + \oint_{R_{g}} \bar{p} h^{3} \frac{\partial p}{\partial x} \Big|_{g} dz \qquad (16.156)$$

#### 16.9.2 Discretization using isoparametric finite elements

According to [?], the unknown pressures p and the test function  $\bar{p}$  inside an element are interpolated using shape or interpolation functions N from the pressures  $p_e$  in the nodes at the edges of an element. The pressure gradients  $\frac{\partial p}{\partial x}$  and  $\frac{\partial p}{\partial z}$  are calculated using the derivatives  $B_1$  and  $B_2$  of those shape functions. The following applies:

$$p = \mathbf{N}\,\hat{\mathbf{p}}_e \tag{16.157}$$

$$\bar{\mathbf{p}} = \mathbf{N}\,\hat{\bar{\mathbf{p}}}_e$$

$$\bar{p} = N \, \bar{\hat{p}}_e$$

$$= \bar{\hat{p}}_e^T \, N^T$$
(16.158)

$$\frac{\partial p}{\partial x} = \mathbf{B}_1 \,\hat{\mathbf{p}}_e \tag{16.159}$$

$$\frac{\partial \bar{p}}{\partial x} = \boldsymbol{B}_1 \, \bar{\hat{\boldsymbol{p}}}_e$$

$$= \hat{\bar{\boldsymbol{p}}}_e^T \boldsymbol{B}_1^T \tag{16.160}$$

$$\frac{\partial p}{\partial z} = \mathbf{B}_2 \,\hat{\mathbf{p}}_e \tag{16.161}$$

$$\frac{\partial \bar{p}}{\partial z} = \boldsymbol{B}_2 \, \bar{\hat{\boldsymbol{p}}}_e$$

$$= \hat{\boldsymbol{p}}_e^T \boldsymbol{B}_2^T \tag{16.162}$$

$$h = N \,\hat{h}_e \tag{16.163}$$

$$\frac{\partial h}{\partial t} = N \frac{\partial \hat{h}_e}{\partial t} \tag{16.164}$$

$$\frac{\partial h}{\partial t} = N \frac{\partial \hat{h}_e}{\partial t} \qquad (16.164)$$

$$\frac{\partial h}{\partial x} = B_1 \hat{h}_e \qquad (16.165)$$

$$\frac{\partial h}{\partial z} = B_2 \hat{h}_e \qquad (16.166)$$

$$\frac{\partial h}{\partial z} = \mathbf{B}_2 \,\hat{\mathbf{h}}_e \tag{16.166}$$

$$\Delta U_{1x} = \mathbf{N} \, \Delta \hat{\mathbf{U}}_{1x_e} \tag{16.167}$$

$$\Delta U_{2x} = N \, \Delta \hat{U}_{2x} \tag{16.168}$$

$$\Delta U_{1z} = \mathbf{N} \, \Delta \hat{\mathbf{U}}_{1z_e} \tag{16.169}$$

$$\Delta U_{2z} = \mathbf{N} \, \Delta \hat{\mathbf{U}}_{2z_e} \tag{16.170}$$

$$\frac{\partial p}{\partial x}\Big|_{g_e} = \mathbf{N} \left. \frac{\partial \hat{\mathbf{p}}}{\partial x} \right|_{g_e}$$
(16.171)

$$\frac{\partial p}{\partial z}\bigg|_{q_e} = N \left. \frac{\partial \hat{p}}{\partial z} \right|_{q_e} \tag{16.172}$$

 $\hat{\boldsymbol{p}}_e$  Pressure in the node of the element e

 $\bar{\hat{\boldsymbol{p}}}_e$  Test function in the nodes of the element e

 $\hat{h}_e$  radial gap height in the nodes of the element e

 $\Delta \hat{U}_{1x_e}$  relative velocity of the bearing journal in x-direction in the nodes of the element e.

 $\Delta \hat{U}_{1z_e}$  relative velocity of the bearing journal in z-direction in the nodes of the element e

 $\frac{\partial \hat{p}}{\partial x}$  prescribed pressure gradient in x-direction in the nodes of the element e

 $\frac{\partial \hat{p}}{\partial z}$  prescribed pressure gradient in z-direction in the nodes of the element e

N Matrix for interpolating the pressures within the element e

 $B_1, B_2$  Matrices for interpolating the pressure gradients in the x- and z-direction

The matrices N and B depend on the selected element type. In this work, isoparametric elements with four or nine nodes from [?] were used. In contrast to finite difference discretization, these elements can be used to approximate complex geometries without additional implementation effort. For example, the mesh can be adapted to circular lubricating oil holes and these can thus be approximated very accurately.

#### An isoparametric element with four nodes

The following element matrices for the four-node element result from the shape functions from [?]:

$$h_1 = \frac{(r+1)(s+1)}{4} \tag{16.173}$$

$$h_2 = \frac{(1-r)(s+1)}{4} \tag{16.174}$$

$$h_3 = \frac{(1-r)(1-s)}{4} \tag{16.175}$$

$$h_4 = \frac{(r+1)(1-s)}{4} \tag{16.176}$$

$$N = \begin{pmatrix} h_1 & h_2 & h_3 & h_4 \end{pmatrix} \tag{16.177}$$

#### An isoparametric element with nine nodes

The shape functions for the nine-node element are an extension of the shape functions of the four-node element and also originate from [?].

$$h_9 = (1 - r^2) (1 - s^2)$$
 (16.178)

$$h_5 = \frac{(1-r^2)(s+1)}{2} - \frac{h_9}{2} \tag{16.179}$$

$$h_6 = \frac{(1-r)(1-s^2)}{2} - \frac{h_9}{2} \tag{16.180}$$

$$h_7 = \frac{\left(1 - r^2\right)\left(1 - s\right)}{2} - \frac{h_9}{2} \tag{16.181}$$

$$h_8 = \frac{(r+1)(1-s^2)}{2} - \frac{h_9}{2} \tag{16.182}$$

$$h_1 = \frac{(r+1)(s+1)}{4} - \frac{h_9}{4} - \frac{h_8}{2} - \frac{h_5}{2}$$
 (16.183)

$$h_2 = \frac{(1-r)(s+1)}{4} - \frac{h_9}{4} - \frac{h_6}{2} - \frac{h_5}{2} \tag{16.184}$$

$$h_2 = \frac{(1-r)(s+1)}{4} - \frac{h_9}{4} - \frac{h_6}{2} - \frac{h_5}{2}$$

$$h_3 = \frac{(1-r)(1-s)}{4} - \frac{h_9}{4} - \frac{h_7}{2} - \frac{h_6}{2}$$

$$(16.184)$$

$$h_4 = \frac{(r+1)(1-s)}{4} - \frac{h_9}{4} - \frac{h_8}{2} - \frac{h_7}{2}$$
 (16.186)

$$\mathbf{N} = \begin{pmatrix} h_1 & h_2 & h_3 & h_4 & h_5 & h_6 & h_7 & h_8 & h_9 \end{pmatrix}$$
 (16.187)

#### Determination of the distortion interpolation matrix

The following applies to all two-dimensional isoparametric elements

$$x\left(r,\,s\right) = N\,\hat{x}_e\tag{16.188}$$

$$z\left(r,\,s\right) = N\,\hat{\boldsymbol{z}}_{e} \tag{16.189}$$

$$\boldsymbol{J} = \begin{pmatrix} \frac{\partial x}{\partial r} & \frac{\partial z}{\partial r} \\ \frac{\partial x}{\partial s} & \frac{\partial z}{\partial s} \end{pmatrix} \tag{16.190}$$

$$m{B} = egin{pmatrix} m{B}_1 \ m{B}_2 \end{pmatrix}$$

$$= J^{-1} \begin{pmatrix} \frac{\partial \mathbf{N}}{\partial T_k} \\ \frac{\partial \mathbf{N}}{\partial s} \end{pmatrix} \tag{16.191}$$

 $h_1, h_2, \ldots$  shape functions

J Jacobian matrix of the element

 $\hat{m{x}}_e$  x-coordinates of the nodes in the unrolled bearing surface

 $\hat{oldsymbol{z}}_e$  z-coordinates of the nodes in the unrolled bearing surface

#### Structure of the element matrices

If you insert the expressions from equation 16.157 to equation 16.172 and equation 16.156 into equation 16.155, you get:

$$\sum_{e=1}^{N_e} \left\{ \bar{\boldsymbol{p}}_e^T \underbrace{\left[ \int_{A_e} \left( \boldsymbol{N} \, \hat{\boldsymbol{h}}_e \right)^3 \, \left( \boldsymbol{B}_1^T \, \boldsymbol{B}_1 + \boldsymbol{B}_2^T \, \boldsymbol{B}_2 \right) \, dA_e \right] \, \hat{\boldsymbol{p}}_e}_{\boldsymbol{K}_e} \right. \\
+ \bar{\boldsymbol{p}}_e^T \underbrace{\left[ \int_{A_e} 12 \, \eta \, \boldsymbol{N}^T \, \boldsymbol{N} \, \left( \frac{\partial \hat{\boldsymbol{h}}_e}{\partial t} + \frac{\Delta \hat{\boldsymbol{U}}_{1x_e} + \Delta \hat{\boldsymbol{U}}_{2x_e}}{2} \, \boldsymbol{B}_1 \, \hat{\boldsymbol{h}}_e + \frac{\Delta \hat{\boldsymbol{U}}_{1z_e} + \Delta \hat{\boldsymbol{U}}_{2z_e}}{2} \, \boldsymbol{B}_2 \, \hat{\boldsymbol{h}}_e \right) \, dA \right] \right\} \\
= \sum_{e=1}^{N_e} \left\{ \bar{\boldsymbol{p}}_e^T \underbrace{\left[ \oint_{R_{g_e}} \boldsymbol{N}^T \, \boldsymbol{N} \, \left( \boldsymbol{N} \, \hat{\boldsymbol{h}}_e \right)^3 \, \frac{\partial \hat{\boldsymbol{p}}}{\partial x} \Big|_{g_e} \, dz - \oint_{R_{g_e}} \boldsymbol{N}^T \, \boldsymbol{N} \, \left( \boldsymbol{N} \, \hat{\boldsymbol{h}}_e \right)^3 \, \frac{\partial \hat{\boldsymbol{p}}}{\partial z} \Big|_{g_e} \, dx \right] \right\} }_{\boldsymbol{G}_e} \tag{16.192}$$

The element matrices  $K_e$ ,  $R_e$  and  $G_e$  are obtained for isoparametric elements by numerical integration over the natural coordinates r and s. For the surface integrals  $dA = \det J dr ds$ .

$$K_{e} = \int_{r=-1}^{1} \int_{s=-1}^{1} \left( \mathbf{N} \, \hat{\mathbf{h}}_{e} \right)^{3} \left( \mathbf{B}_{1}^{T} \, \mathbf{B}_{1} + \mathbf{B}_{2}^{T} \, \mathbf{B}_{2} \right) \det \mathbf{J} \, dr \, ds$$

$$(16.193)$$

$$R_{e} = -\int_{r=-1}^{1} \int_{s=-1}^{1} 12 \, \eta \, \mathbf{N}^{T} \, \mathbf{N} \left( \frac{\Delta \hat{U}_{1x_{e}} + \Delta \hat{U}_{2x_{e}}}{2} \mathbf{B}_{1} \, \hat{\mathbf{h}}_{e} \right)$$

$$+ \frac{\Delta \hat{U}_{1z_{e}} + \Delta \hat{U}_{2z_{e}}}{2} \mathbf{B}_{2} \, \hat{\mathbf{h}}_{e} + \frac{\partial \hat{\mathbf{h}}_{e}}{\partial t} \right) \det \mathbf{J} \, dr \, ds$$

$$(16.194)$$

$$G_{e} = \alpha_{1} \int_{r=-1}^{1} \left\{ \mathbf{N}^{T} \, \mathbf{N} \left( \mathbf{N} \, \hat{\mathbf{h}}_{e} \right)^{3} \left[ \frac{\partial \hat{\mathbf{p}}}{\partial x} \Big|_{g_{e}} \frac{\partial \mathbf{N}}{\partial r} \, \hat{\mathbf{z}}_{e} - \frac{\partial \hat{\mathbf{p}}}{\partial z} \Big|_{e} \frac{\partial \mathbf{N}}{\partial r} \, \hat{\mathbf{x}}_{e} \right] \right\} \Big|_{s=-1} \, dr$$

$$+ \alpha_{2} \int_{s=-1}^{1} \left\{ \mathbf{N}^{T} \, \mathbf{N} \left( \mathbf{N} \, \hat{\mathbf{h}}_{e} \right)^{3} \left[ \frac{\partial \hat{\mathbf{p}}}{\partial x} \Big|_{g_{e}} \frac{\partial \mathbf{N}}{\partial r} \, \hat{\mathbf{z}}_{e} - \frac{\partial \hat{\mathbf{p}}}{\partial z} \Big|_{e} \frac{\partial \mathbf{N}}{\partial s} \, \hat{\mathbf{x}}_{e} \right] \right\} \Big|_{r=-1} \, ds$$

$$+ \alpha_{3} \int_{r=-1}^{1} \left\{ \mathbf{N}^{T} \, \mathbf{N} \left( \mathbf{N} \, \hat{\mathbf{h}}_{e} \right)^{3} \left[ \frac{\partial \hat{\mathbf{p}}}{\partial x} \Big|_{g_{e}} \frac{\partial \mathbf{N}}{\partial r} \, \hat{\mathbf{z}}_{e} - \frac{\partial \hat{\mathbf{p}}}{\partial z} \Big|_{e} \frac{\partial \mathbf{N}}{\partial r} \, \hat{\mathbf{x}}_{e} \right] \right\} \Big|_{s=1} \, dr$$

$$+ \alpha_{4} \int_{s=-1}^{1} \left\{ \mathbf{N}^{T} \, \mathbf{N} \left( \mathbf{N} \, \hat{\mathbf{h}}_{e} \right)^{3} \left[ \frac{\partial \hat{\mathbf{p}}}{\partial x} \Big|_{g_{e}} \frac{\partial \mathbf{N}}{\partial s} \, \hat{\mathbf{z}}_{e} - \frac{\partial \hat{\mathbf{p}}}{\partial z} \Big|_{e} \frac{\partial \mathbf{N}}{\partial s} \, \hat{\mathbf{x}}_{e} \right] \right\} \Big|_{s=1} \, ds$$

$$+ \alpha_{4} \int_{s=-1}^{1} \left\{ \mathbf{N}^{T} \, \mathbf{N} \left( \mathbf{N} \, \hat{\mathbf{h}}_{e} \right)^{3} \left[ \frac{\partial \hat{\mathbf{p}}}{\partial x} \Big|_{g_{e}} \frac{\partial \mathbf{N}}{\partial s} \, \hat{\mathbf{z}}_{e} - \frac{\partial \hat{\mathbf{p}}}{\partial z} \Big|_{e} \frac{\partial \mathbf{N}}{\partial s} \, \hat{\mathbf{x}}_{e} \right] \right\} \Big|_{s=1} \, ds$$

$$(16.195)$$

In equation 16.195 the following rule was used for the evaluation of the second type of curve integrals:

$$\oint_{R} P(x(t), y(t)) dx + Q(x(t), y(t)) dy$$

$$= \int_{a}^{b} \left( P(x(t), y(t)) \frac{\partial x}{\partial t} + Q(x(t), y(t)) \frac{\partial y}{\partial t} \right) dt$$
(16.196)

 $\alpha_1, \alpha_2, \ldots$  This is a constant which is always equal to one if a boundary condition for the pressure gradient  $\frac{\partial p}{\partial x}\Big|_{q_e}$  or  $\frac{\partial p}{\partial z}\Big|_{q_e}$  is specified at the corresponding edge of the element. Otherwise  $\alpha$  is zero.

Numerical integration of the element matrices The numerical integration of the element matrices is carried out using the Gaussian Legendre Quatradur. The integration points and the weighting factors were taken from [?]. For an undistorted element with four nodes, a single Gaussian point is sufficient to obtain accurate results, and for an undistorted element with nine nodes, four Gaussian points are sufficient.

#### Structure of the system of linear equations

The system of linear equations is formally constructed using the Boolean matrices  $T_e$ . However, an index table is used internally in the program which assigns the corresponding global degrees of freedom to the individual nodes.

$$\hat{\boldsymbol{p}}_e = \boldsymbol{T}_e \, \hat{\boldsymbol{p}} \tag{16.197}$$

$$\hat{\boldsymbol{p}}_e = \boldsymbol{T}_e \, \hat{\boldsymbol{p}} \tag{16.198}$$

$$\hat{\bar{p}}_e = T_e \hat{\bar{p}}$$

$$\hat{\bar{p}}_e^T = \hat{\bar{p}}^T T_e^T$$
(16.198)

- $m{T}_e$  Boolean matrix for the element e which contains the local degrees of freedom  $\hat{m{p}}_e$  to the corresponding global degrees of freedom  $\hat{\boldsymbol{p}}$
- $\hat{\boldsymbol{p}}$  Global vector of pressures of the finite element system
- $\bar{\hat{\boldsymbol{p}}}$  Global vector of test functions of the finite element system

If the expressions from equation 16.197 to equation 16.199 are inserted into equation 16.192, the global equations for the hydrodynamic pressures in the nodes are obtained.

$$\boldsymbol{K} = \sum_{e=1}^{N_e} \boldsymbol{T}_e^T \boldsymbol{K}_e \, \boldsymbol{T}_e \tag{16.200}$$

$$\boldsymbol{R} = \sum_{e=1}^{N_e} \boldsymbol{T}_e^T \boldsymbol{R}_e \tag{16.201}$$

$$G = \sum_{e=1}^{N_e} T_e^T G_e$$

$$\bar{\hat{p}}^T K \hat{p} = \bar{\hat{p}}^T (R + G)$$
(16.203)

$$\bar{\hat{\boldsymbol{p}}}^T \boldsymbol{K} \, \hat{\boldsymbol{p}} = \bar{\hat{\boldsymbol{p}}}^T \, (\boldsymbol{R} + \boldsymbol{G}) \tag{16.203}$$

#### 16.9.4 Implementation of Dirichlet boundary conditions

The hydrodynamic pressures in the nodes  $\hat{p}$  are now divided into the unknown pressures  $\check{p}_1$  and the pressures  $\check{p}_2$  known a priori from the boundary conditions. This is done formally using the Boolean matrices  $\check{T}_1$  and  $\check{T}_2$ . However, index tables can be used internally in the program.

$$\hat{p} = \check{T}_1 \, \check{p}_1 + \check{T}_2 \, \check{p}_2 \tag{16.204}$$

$$\bar{\hat{p}} = \check{T}_1 \, \bar{\check{p}}_1 + \check{T}_2 \, \bar{\check{p}}_2 \tag{16.205}$$

The following condition applies to these Boolean matrices:

$$\check{\boldsymbol{T}}_1^T \check{\boldsymbol{T}}_2 = \mathbf{0} \tag{16.206}$$

If you insert equation 16.204 to 16.205 into equation 16.203, you get:


$$\bar{\tilde{\boldsymbol{p}}}_{1}^{T} \check{\boldsymbol{T}}_{1}^{T} \boldsymbol{K} \check{\boldsymbol{T}}_{1} \check{\boldsymbol{p}}_{1} + \check{\boldsymbol{p}}_{1}^{T} \check{\boldsymbol{T}}_{1}^{T} \boldsymbol{K} \check{\boldsymbol{T}}_{2} \check{\boldsymbol{p}}_{2} + \bar{\tilde{\boldsymbol{p}}}_{2}^{T} \check{\boldsymbol{T}}_{2}^{T} \boldsymbol{K} \check{\boldsymbol{T}}_{1} \check{\boldsymbol{p}}_{1} + \bar{\tilde{\boldsymbol{p}}}_{2}^{T} \check{\boldsymbol{T}}_{2}^{T} \boldsymbol{K} \check{\boldsymbol{T}}_{2} \check{\boldsymbol{p}}_{2} 
= \bar{\tilde{\boldsymbol{p}}}_{1}^{T} \check{\boldsymbol{T}}_{1}^{T} (\boldsymbol{R} + \boldsymbol{G}) + \bar{\tilde{\boldsymbol{p}}}_{2}^{T} \check{\boldsymbol{T}}_{2}^{T} (\boldsymbol{R} + \boldsymbol{G})$$
(16.207)

### 16.9.5 Solution of the linear system of equations

$$\check{\boldsymbol{p}}_{1} = \left(\check{\boldsymbol{T}}_{1}^{T} \boldsymbol{K} \check{\boldsymbol{T}}_{1}\right)^{-1} \left[\check{\boldsymbol{T}}_{1}^{T} \left(\boldsymbol{R} + \boldsymbol{G} - \boldsymbol{K} \check{\boldsymbol{T}}_{2} \check{\boldsymbol{p}}_{2}\right)\right]$$
(16.208)

Equation 16.208 was derived without the use of a cavitation model. To obtain the Gümbel boundary condition, the negative pressures in  $\check{p}_1$  must be set to zero after solving the linear system of equations 16.208.

#### 16.9.6 The pressure distribution in the cylindrical plain bearing

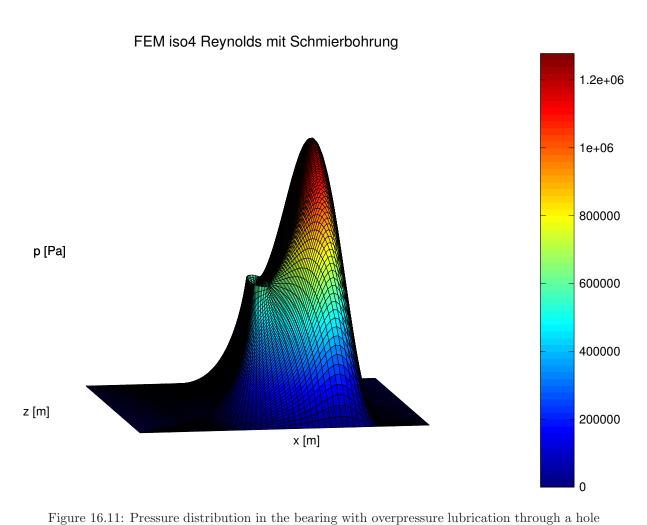

# Chapter 17

# Module MFtire

The source code of the module described in this document can be found at the following GitHub repository: https://github.com/andreafontana99/MBDyn-MFtire

#### 17.1 Introduction

This document provides an overview of the MFtire module for MBDyn, which implements a single contact point Pacejka tire model intended for full-vehicle handling simulations in a multibody environment. This is the second iteration of the module (effectively v0.2), where a complete refactoring of the slip calculation has allowed to remove some simplifying assumptions, improving the slip accuracy under high camber rates

Some aspects to keep in mind:

- It's still a work in progress
- The formulation is intentionally simple for three main reasons:
  - Low computational cost is mandatory for real-time simulations
  - The number of required parameters (e.g. tire data) must be low
  - The development of the jacobian matrix, necessary to guarantee stability and fast convergence, is straightforward but quite involved. As the number of calculations in the residual grows, the Jacobian components may become cumbersome to develop, debug, and maintain (as the process is still not automated).
- Most of the effort has been focused on the proper formulation of tire input quantities—such as slip angle, slip ratio, camber angle, and loaded radius—while less emphasis has been placed on the definition of forces and moments. This makes the module a solid starting point for users interested in implementing their own force and moment formulas.

Section 17.6 calculations are based on [?]. Note that both the sign conventions for the reference frame vectors and the notation are substantially different.

# 17.2 Model capabilities

The module calculates the forces and moments and applies them to the connected rim node. For now, pure longitudinal and lateral forces are directly computed as function of slips and vertical load while

tire moments are still to be implemented. Combined effects and camber dependency of the forces and rolling radius are neglected as well as relaxation effects. The vertical load is obtained by computing the difference between the instant and the undeformed loaded radius, which is then multiplied by a constant stiffness.

#### 17.3 TODO

- Self-aligning moment
- Combined effects
- Non-linear vertical stiffness and damping
- Relaxation effects (hopefully this removes the need for low speed handling)
- Rolling resistance
- Ground mesh
- Handling of wheel detachment
- NetCDF output

## 17.4 I/O and module interface

#### 17.5 Notation

## **Identity matrix**

$$\mathbf{I}_{3\times3} = \begin{bmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix} \tag{17.1}$$

#### Cross product

$$\mathbf{a} \times \mathbf{b} = \det \begin{bmatrix} \mathbf{e}_1 & \mathbf{e}_2 & \mathbf{e}_3 \\ a_1 & a_2 & a_3 \\ b_1 & b_2 & b_3 \end{bmatrix} = a_i b_i \epsilon_{ijk} \mathbf{e}_k$$
(17.2)

where  $\epsilon_{ijk}$  is the permutation symbol (Levi-Civita) and  $\mathbf{e}_i$  for i=1,2,3 are the cartesian base vectors.

#### Skew-symmetric matrix

A matrix resulting from the application of the cross-product operator to a three-dimensional vector

$$\mathbf{v} \times = \begin{bmatrix} 0 & -v_z & v_y \\ v_z & 0 & -v_x \\ -v_y & v_x & 0 \end{bmatrix} \tag{17.3}$$

#### Dyadic product

$$\mathbf{v} \otimes \mathbf{v} = \mathbf{v}\mathbf{v}^T \tag{17.4}$$

## 17.6 Residual assembly

#### 17.7 Ground

The ground surface is defined by mapping to each (x, y) coordinate a position vector and a unit normal vector, denoted as  $\mathbf{q}$  and  $\mathbf{n}$ , respectively. To simplify the derivation, a flat and constant plane is assumed; therefore,  $\mathbf{q}$  and  $\mathbf{n}$  are constant vectors given by:

$$\mathbf{q} = \mathbf{0} \qquad \mathbf{n} = \begin{bmatrix} 0 & 0 & 1 \end{bmatrix}^T \tag{17.5}$$

#### 17.8 Hub carrier and rim kinematics

Two nodes are required to fully describe the contact point kinematics: the wheel hub node and the rim node. The wheel hub and the rim must be constrained to rotate around the wheel spindle axis, denoted by  $\tilde{s}$ , which is constant in the local reference frame of the wheel hub. Both nodes must be coincident with the wheel centre. The position, velocity, and orientation matrix of the wheel hub node are denoted by  $\mathbf{w}_H$ ,  $\dot{\mathbf{w}}_H$ , and  $\mathbf{R}_H$ , respectively, while the angular velocity of the rim is  $\boldsymbol{\omega}_R$ .

#### 17.9 Reference frame

The following vectors, following the ISO sign convention, define the directions along which the forces act and enable the computation of the contact point position and velocity. The wheel spin axis representation in the global reference frame is:

$$\mathbf{s} = \mathbf{R}_H \tilde{\mathbf{s}} \tag{17.6}$$

s is a unit length vector as the input local spin axis is normalized. The local forward (1) and transverse (t) directions can be obtained as follows:

$$1 = \frac{\mathbf{s} \times \mathbf{n}}{||\mathbf{s} \times \mathbf{n}||}$$

$$\mathbf{t} = \mathbf{n} \times \mathbf{l}$$
(17.7)

The radial direction  $\mathbf{r}$  is perpendicular both to  $\mathbf{s}$  and  $\mathbf{l}$ :

$$\mathbf{r} = \mathbf{l} \times \mathbf{s} \tag{17.8}$$

The time derivatives of the unit vectors are:

$$\dot{\mathbf{s}} = \boldsymbol{\omega}_R \times \mathbf{s} 
\dot{\mathbf{l}} = \frac{\mathbf{I}_{3\times 3} - \mathbf{l} \otimes \mathbf{l}}{||\mathbf{s} \times \mathbf{n}||} (\dot{\mathbf{s}} \times \mathbf{n}) 
\dot{\mathbf{t}} = \mathbf{n} \times \dot{\mathbf{l}} 
\dot{\mathbf{r}} = \dot{\mathbf{l}} \times \mathbf{s} + \mathbf{l} \times \dot{\mathbf{s}}$$
(17.9)

These expressions rely on the assumption that  $\dot{\mathbf{n}} = \mathbf{0}$ , as the road plane is constant, and must be modified accordingly in case a general rigid/deformable surface is considered.

Note that the lateral direction points to the left and the radial direction is positive upwards.

#### 17.10 Loaded radius

To obtain the magnitude of the loaded radius,  $\rho$ , let's first define the position of the contact point:

$$\mathbf{c} = \mathbf{w}_H + \rho \mathbf{r} \tag{17.10}$$

The contact point and the road point must lie on the same plane perpendicular to  $\mathbf{n}$ , which translates in the following equation:

$$\mathbf{c} \cdot \mathbf{n} = \mathbf{q} \cdot \mathbf{n} \tag{17.11}$$

As q = 0, this expression can be simplified to:

$$\mathbf{0} = \mathbf{c} \cdot \mathbf{n}$$

$$\mathbf{0} = (\mathbf{w}_H + \rho \mathbf{r}) \cdot \mathbf{n}$$
(17.12)

Therefore,

$$\rho = -\frac{\mathbf{w}_H \cdot \mathbf{n}}{\mathbf{r} \cdot \mathbf{n}} \tag{17.13}$$

The derivative of the loaded radius is the following:

$$\dot{\rho} = -\frac{(\dot{\mathbf{w}}_H + \rho \dot{\mathbf{r}}) \cdot \mathbf{n}}{\mathbf{r} \cdot \mathbf{n}} \tag{17.14}$$

Note that as  $\rho \mathbf{r}$  is a vector from the wheel center to the contact point and  $\mathbf{r}$  points up,  $\rho$  is always negative in normal operating conditions (e.g. unless you are driving upside down).

# 17.11 Slip Quantities

The velocity of the contact point  $\mathbf{c}$  is:

$$\mathbf{v}_{C} = \dot{\mathbf{w}}_{H} + \frac{d(\rho \mathbf{r})}{dt}$$

$$= \dot{\mathbf{w}}_{H} + \dot{\rho} \mathbf{r} + \rho \mathbf{r}$$
(17.15)

The speed of propagation of the point  $c^*$  is:

$$\mathbf{v}_{C}^{*} = \dot{\mathbf{w}}_{H} - \frac{r_{e}}{\rho} \frac{d(\rho \mathbf{r})}{dt}$$

$$= \dot{\mathbf{w}}_{H} - \frac{r_{e}}{\rho} \dot{\rho} \mathbf{r} - r_{e} \mathbf{r}$$
(17.16)

Note that scaling the second term by  $\frac{r_e}{\rho}$  also requires a change in sign due to the fact that  $\rho$  is negative. The velocity of point s that is fixed to the wheel body reads:

$$\mathbf{v}_{S} = \dot{\mathbf{w}}_{H} - \frac{r_{e}}{\rho} \boldsymbol{\omega}_{R} \times (\rho \mathbf{r})$$

$$= \dot{\mathbf{w}}_{H} - r_{e} \boldsymbol{\omega}_{R} \times \mathbf{r}$$
(17.17)

The following velocity components allow for an easier definition of the slip quantities:

$$v_x = \mathbf{v}_C^* \cdot \mathbf{l}$$

$$v_y = \mathbf{v}_C \cdot \mathbf{t}$$

$$v_s = \mathbf{v}_S \cdot \mathbf{l}$$
(17.18)