Wireless Networks

Lecture 2: Wireless Challenges

WHY USE WIRELESS?

There are no wires!

Has several significant advantages:

- Supports mobile users
 - » Move around office, campus, city, ... users get hooked
 - » Remote control devices (TV, garage door, ..)
 - » Cordless phones, cell phones, ..
 - » WiFi, GPRS, Bluetooth, …
- No need to install and maintain wires
 - » Reduces cost important in offices, hotels, ...
 - » Simplifies deployment important in homes, hotspots, ...


WHAT IS HARD ABOUT WIRELESS?

There are no wires!

- In wired networks links are constant, reliable and physically isolated
 - » A 1 Gps Ethernet always has the same properties
 - » Not true for "54 Mbs" 802.11a and definitely not for "6 Gbs" 802.11ac
- In wireless networks links are variable, errorprone and share the ether with each other and other external, uncontrolled sources
 - » Link properties can be extremely dynamic
 - » For mobile devices they also differ across locations

WIRELESS IS A SHARED MEDIUM

- In wired communication, signals are contained in a conductor
 - » Copper or fiber
 - » Guides energy to destination
 - » Protects signal from external signals
- Wireless communication uses broadcasting over the shared ether
 - » Energy is distributed in space
 - » Signal must compete with many other signals in same frequency band

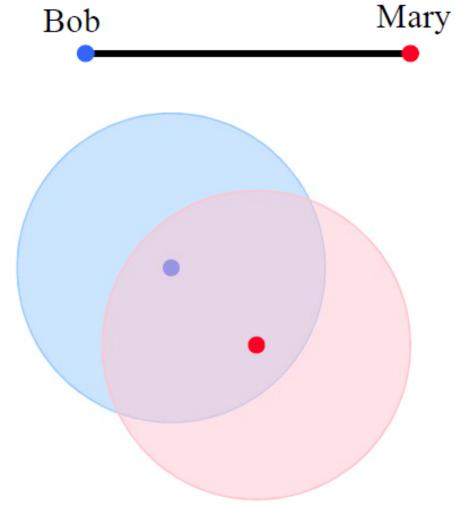


ATTENUATION AND ERRORS



- In wired networks error rate 10⁻¹⁰ or less
 - » Wireless networks are far from that target
- Signal attenuates with distance and is affected by noise and competing signals
- Obstacles further attenuate the signal
- Probability of a successful reception depends on the "signal to interference and noise ratio" - the SINR
- More details later in the course


HOW DO WE INCREASE NETWORK CAPACITY?

- Easy to do in wired networks: simply add wires
 - » Fiber is especially attractive
- Adding wireless "links" increases interference.
 - » Frequency reuse can help ... subject to spatial limitations
 - » Or use different frequencies ... subject to frequency limitations
- The capacity of the wireless network is fundamentally limited.

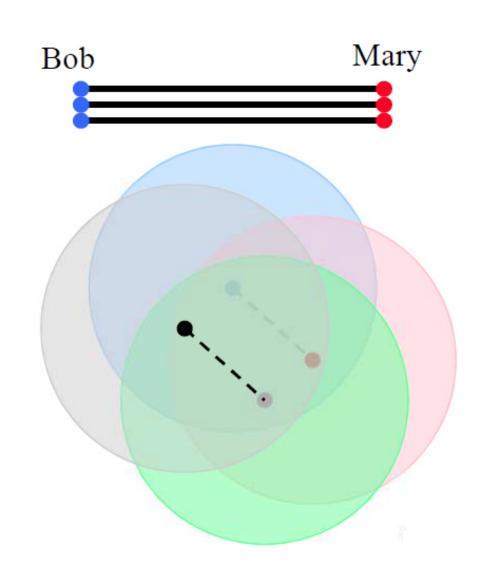

MOBILITY AFFECTS THE LINK THROUGHPUT

- Quality of the transmission depends on distance and obstacles blocking the "line of sight" (LOS)
 - » "Slow fading" the signal strength changes slowly
- Reflections off obstacles combined with mobility can cause "fast fading"
 - » Very rapid changes in the signal
 - » More on this later
- Hard to predict signal!

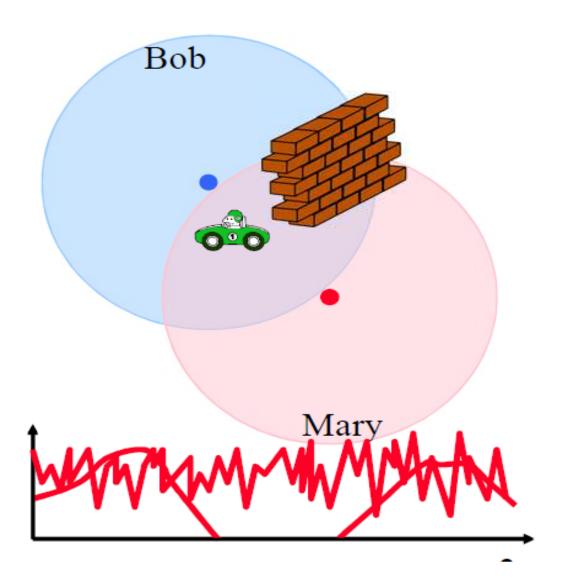

HOW IS WIRELESS DIFFERENT?

Wired

- Physical link properties are fixed and specified in standards
- Designed for low error rates and throughput is fixed and known
- Datalink layer is simple and optimized for the physical layer
- Internet was designed assuming low error rates


Wireless

- Physical link properties can change rapidly in unpredictable ways
- Error rates vary a lot and throughput is very dynamic
- How do you design an efficient datalink protocol?
- How well will higher layer protocols work?

IMPLICATIONS OF VARIABILITY IN WIRELESS PHY LAYER


- Wireless datalink protocols must optimize throughput across an unknown and dynamic transmission medium
 - » Important to understand what causes the changes
- Wireless "links" as observed by layers 3-7 will be unavoidably different from wired links
 - » Variable bandwidth and latency
 - » Intermittent connectivity
 - » Must adapt to changes in connectivity and bandwidth
- Understanding the <u>physical layer</u> is the key to making wireless work well
 - » High level intuition is sufficient

FROM SIGNALS TO PACKETS

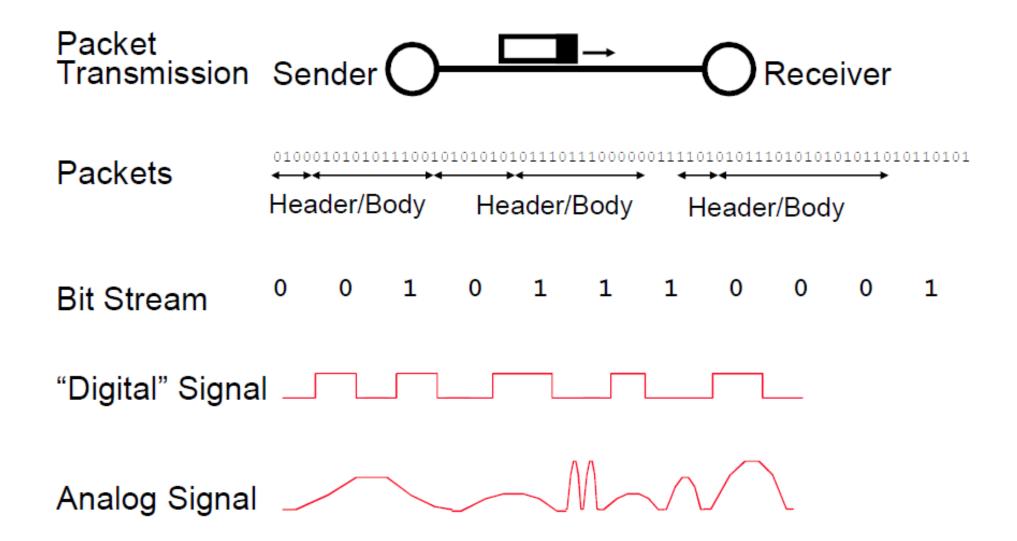

RF INTRODUCTION

- RF = Radio Frequency
 - » Electromagnetic signal that propagates through "ether"
 - » Ranges 3 KHz .. 300 GHz
 - » Or 100 km .. 0.1 cm (wavelength)

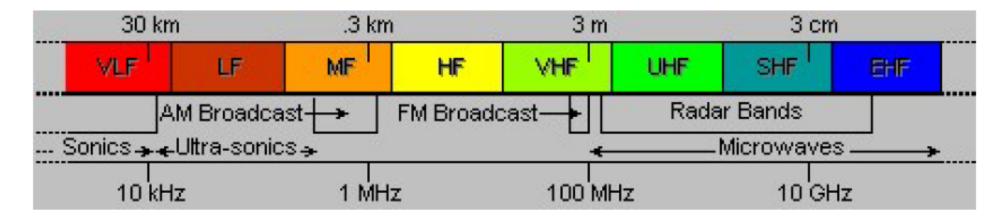


- Travels at the speed of light
- Can take both a time and a frequency view

CARTOON VIEW 1 -A WAVE OF ENERGY

- Think of it as energy that radiates from an antenna and is picked up by another antenna.
- Helps explain properties such as attenuation
 - » Density of the energy reduces over time, distance
 - » Signal strength is reduced, error rates go up
- Relevance to networking?
 - » Error rates of "wireless" depend on distance
 - Also depends on many properties
 - » Notion spatial reuse of frequencies
 - Basis of cellular and WiFi infrastructures


CARTOON VIEW 2 - RAYS OF ENERGY

- Can also view it as a "ray" that propagates between two points
 - » Rays can be reflected etc.
 - » A channel can include multiple "rays" that take different paths – "multi-path" effect
- Implications for wireless networks
 - » We can have provide connectivity without line of sight!
 - » Receiver can receive multiple copies of the signal, which leads to signal distortion
 - » Combined with mobility, it also leads to fast fading

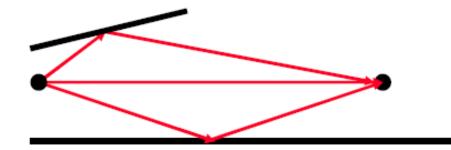


(NOT SO) CARTOON VIEW 3 –ELECTRO-MAGNETIC SIGNAL

- Signal that propagates and changes over time with a certain <u>frequency</u> and has an <u>amplitude</u> and <u>phase</u>
 - » Think: sine wave
- Relevance to networking?
 - » The sender can change the properties of the EM signal over time to convey information
 - » Receivers can observe these changes and extract the information




TIME AND POINT VIEW OF SIGNAL

- Can look at a point in space: signal will change in time according to a sine function
 - » But transmitter can change phase, amplitude, frequency
- Can take a snapshot in time: signal will "look" like a sine function in space
 - » Signal at different points are (rough) copies of each other
- Receiver can observe transmitter's changes

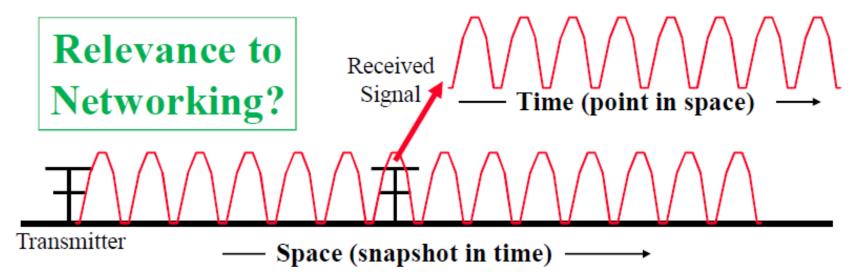

COMMUNICATION

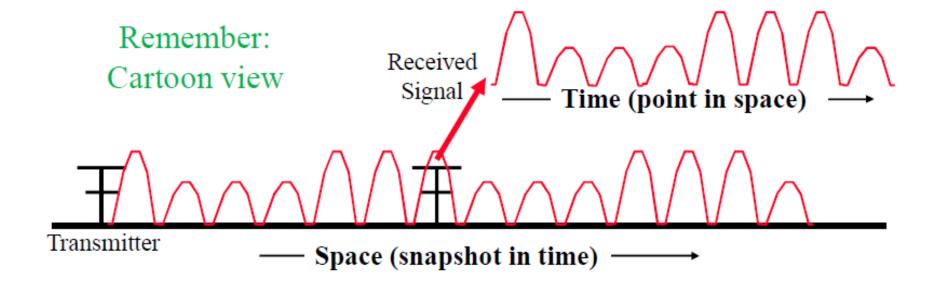


- Sender changes signal in agree upon way and receiver interprets the changes
 - » "Modulation" and "demodulation"
- Problem: the signal gets distorted on "channel"
 - » Makes it harder for receiver to interpret changes

SINE WAVE PARAMETERS

- General sine wave
 - $s(t) = A \sin(2\pi f t + \phi)$
- Example on next slide shows the effect of varying each of the three parameters
 - a) $A = 1, f = 1 \text{ Hz}, \phi = 0$; thus T = 1s
 - b) Reduced peak amplitude; A=0.5
 - c) Increased frequency; f = 2, thus $T = \frac{1}{2}$
 - d) Phase shift; $\phi = \pi/4$ radians (45 degrees)
- note: 2π radians = 360° = 1 period

SPACE AND TIME VIEW REVISITED

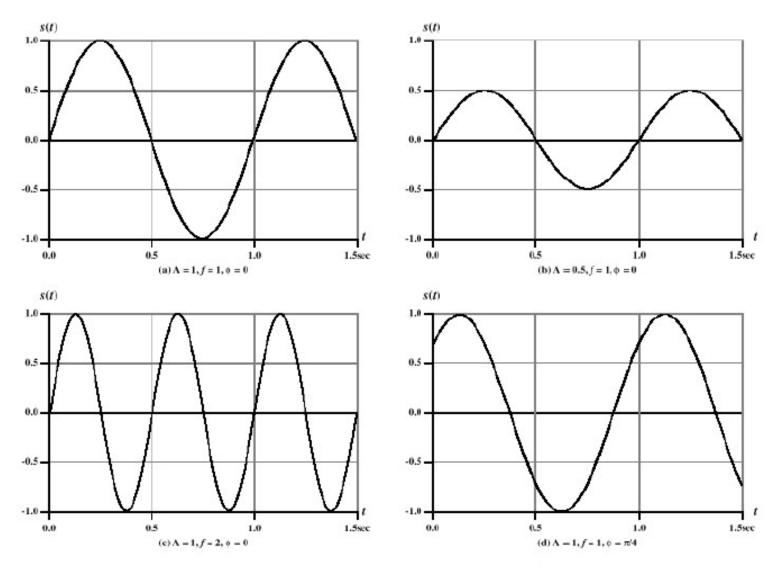

 $s(t) = A \sin (2 ft + \phi)$

KEY IDEA OF WIRELESS COMMUNICATION

- The sender sends an EM signal and changes its properties over time
 - » Changes reflect a digital signal, e.g., binary or multi-valued signal
 - » Can change amplitude, phase, frequency, or a combination
- Receiver learns the digital signal by observing how the received signal changes
 - » Note that signal is no longer a simple sine wave or even a periodic signal

"The wireless telegraph is not difficult to understand.

The ordinary telegraph is like a very long cat.

You pull the tail in New York, and it meows in Los Angeles.

The wireless is exactly the same, only without the cat."

CHALLENGE

- Cats, really? This is very informal!
 - » Sender "changes signal" and receiver "observes changes"
- Wireless network designers need more precise information about the performance of wireless "links"
 - » Can the receiver always decode the signal?
 - » How many Kbit, Mbit, Gbit per second?
 - » Does the physical environment, distance, mobility, weather, season, the color of my shirt, etc. matter?
- We need a more formal way of reasoning about wireless communication:

Represent the signal in the frequency domain!

TIME DOMAIN VIEW: PERIODIC VERSUS APERIODIC SIGNALS

- Periodic signal analog or digital signal pattern that repeats over time
 - s(t+T)=s(t)
 - where T is the period of the signal
 - » Allows us to take a frequency view important to understand wireless challenges and solutions
- Aperiodic signal analog or digital signal pattern that doesn't repeat over time
 - » Hard to analyze
- Can "make" an aperiodic signal periodic by taking a time slice T and repeating it
 - » Often what we do implicitly


KEY PARAMETERS OF (PERIODIC) SIGNAL

- Peak amplitude (A) maximum value or strength of the signal over time; typically measured in volts
- Frequency (f)
 - » Rate, in cycles per second, or Hertz (Hz) at which the signal repeats
- Period (T) amount of time it takes for one repetition of the signal
 - T = 1/f
- Phase (φ) measure of the relative position in time within a single period of a signal
- Wavelength (λ) distance occupied by a single cycle of the signal
 - » Or, the distance between two points of corresponding phase of two consecutive cycles

KEY PROPERTY OF PERIODIC EM SIGNALS


- Any electromagnetic signal can be shown to consist of a collection of periodic analog signals (sine waves) at different amplitudes, frequencies, and phases
- The period of the total signal is equal to the period of the fundamental frequency
 - » All other frequencies are an integer multiple of the fundamental frequency
- There is a strong relationship between the "shape" of the signal in the time and frequency domain
 - » Discussed in more detail later


SIGNAL = SUM OF SINE WAVES

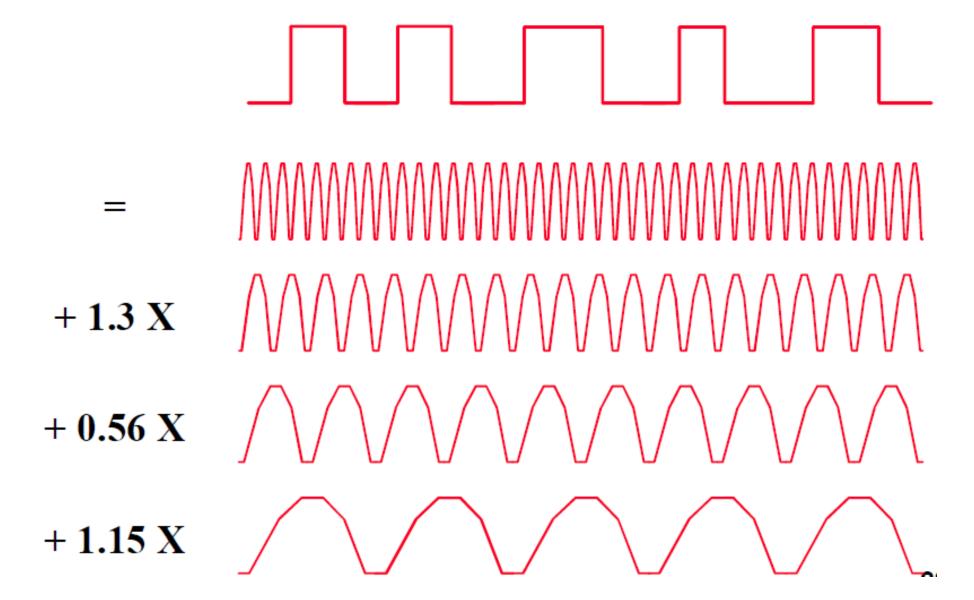

THE FREQUENCY DOMAIN

- A (periodic) signal can be viewed as a sum of sine waves of different strengths.
 - Corresponds to energy at a certain frequency
- Every signal has an equivalent representation in the frequency domain.
 - What frequencies are present and what is their strength (energy)
- We can translate between the two formats using a fourier transform

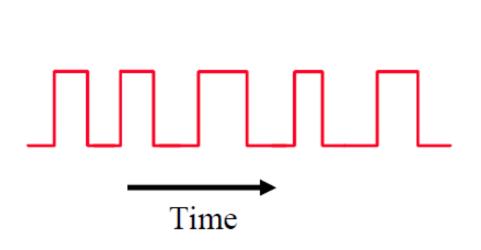


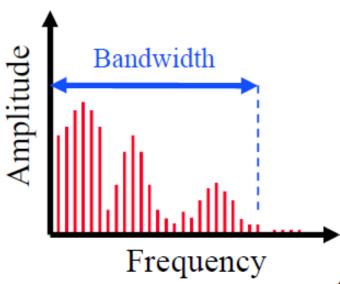


SIGNAL MODULATION


- Sender sends a "carrier" signal and changes it in a way that the receiver can recognize
 - The carrier is sine wave with fixed amplitude and frequency
- Amplitude modulation (AM): change the strength of the carrier based on information
 - High values -> stronger signal
- Frequency (FM) and phase modulation (PM): change the frequency or phase of the signal
 - Frequency or Phase shift keying
- Digital versions are also called "shift keying"
 - Amplitude (ASK), Frequency (FSK), Phase (PSK) Shift Keying
- Discussed in more detail in a later the course

AMPLITUDE AND FREQUENCY MODULATION

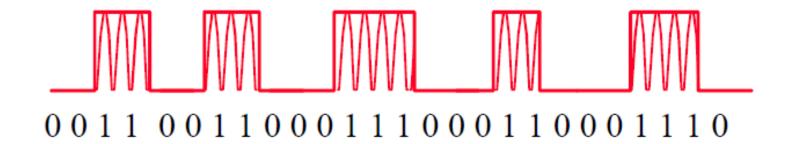

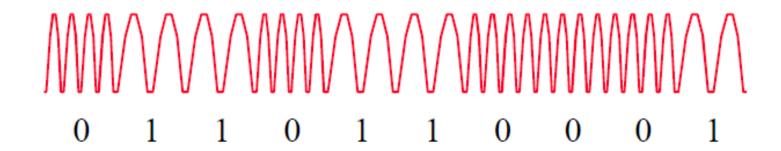

AMPLITUDE CARRIER MODULATION

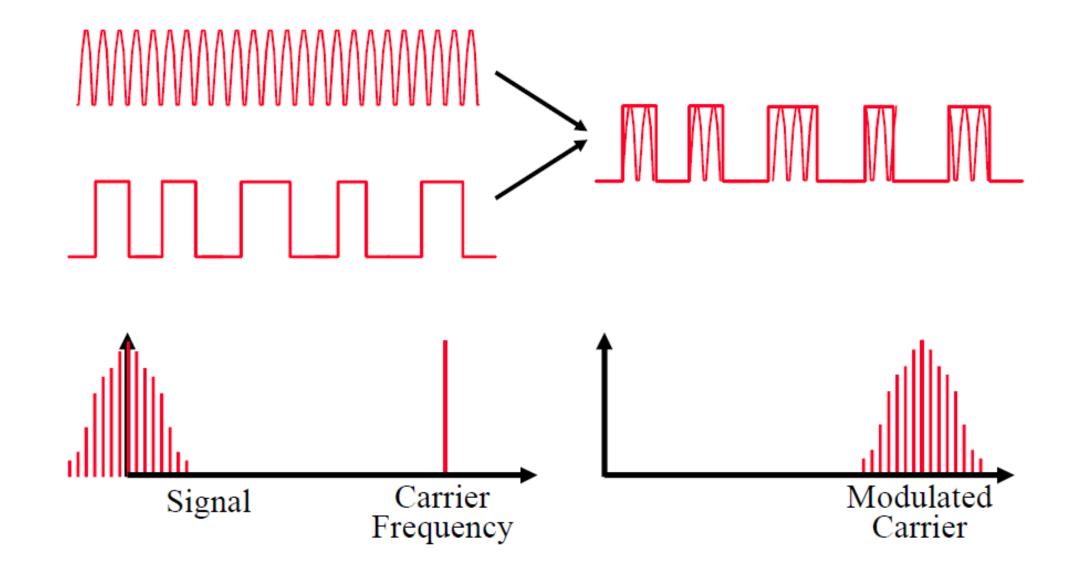

ANALOG AND DIGITAL SIGNAL MODULATION

- The signal that is used to modulate the carrier can be analog or digital
 - » Analog: broadcast radio (AM/FM)
 - » Digital: WiFi, LTE
- Analog: a continuously varying signal
 - » Cannot recover from distortions, noise
 - » Can amplify the signal but also amplifies the noise
- Digital: discreet changes in the signal that correspond to a digital signal
 - » Can recover from noise and distortion:
 - » Regenerate signal along the path: demodulate + remodulate


MULTIPLEXING

- Capacity of the transmission medium usually exceeds the capacity required for a single signal
- Multiplexing carrying multiple signals on a single medium
 - » More efficient use of transmission medium
- A must for wireless spectrum is huge!
 - » Signals must differ in frequency (spectrum), time, or space




MULTIPLEXING TECHNIQUES

- Frequency-division multiplexing (FDM)
 - » divide the capacity in the frequency domain
- Time-division multiplexing (TDM)
 - » Divide the capacity in the time domain
 - » Fixed or variable length time slices

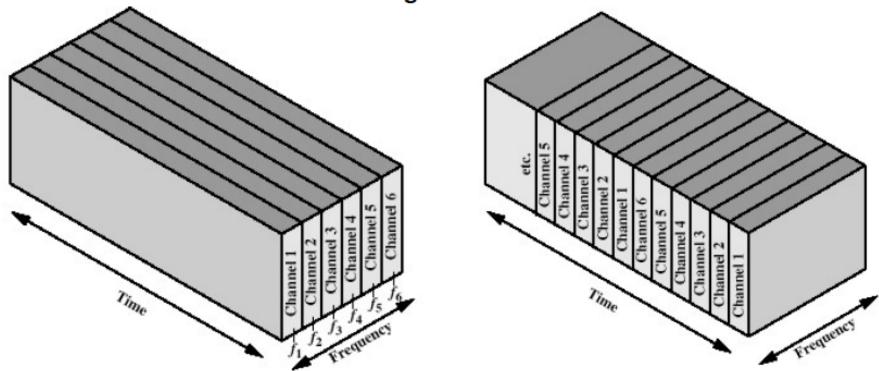


MULTIPLE USERS CAN SHARE THE ETHER

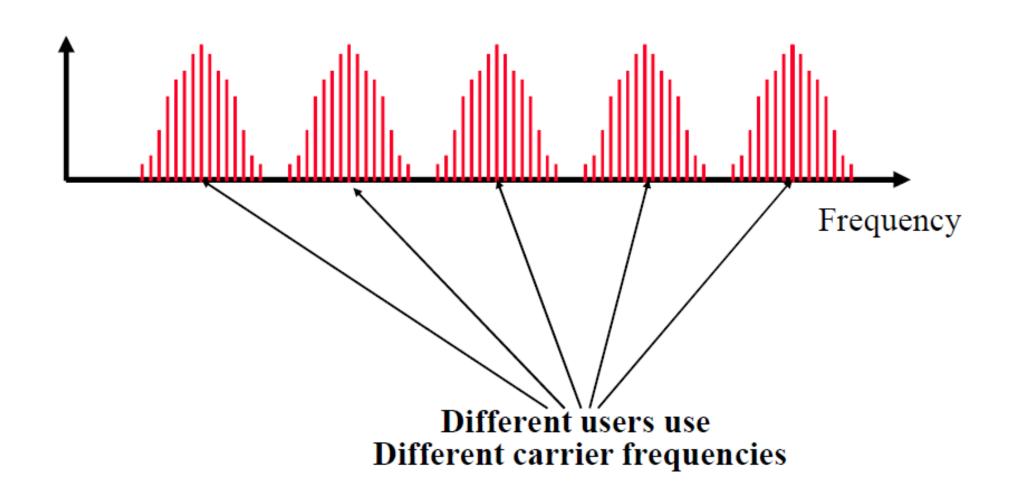

FREQUENCY VERSUS TIME-DIVISION MULTIPLEXING

- With frequency-division multiplexing different users use different parts of the frequency spectrum.
 - » I.e. each user can send all the time at reduced rate
 - » Example: roommates
 - » Hardware is slightly more expensive and is less efficient use of spectrum
- With time-division multiplexing different users send at different times.
 - » I.e. each user can sent at full speed some of the time
 - » Example: a time-share condo
 - » Drawback is that there is some transition time between slots; becomes more of an issue with longer propagation times
- The two solutions can be combined.

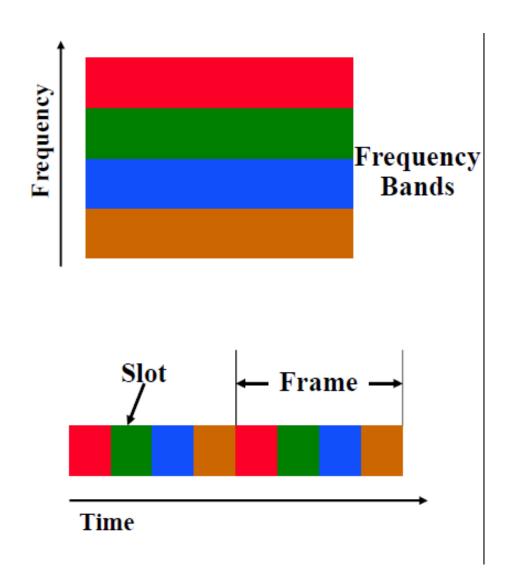

FREQUENCY REUSE IN SPACE

- Frequencies can be reused in space
 - » Distance must be large enough
 - » Example: radio stations
- Basis for "cellular" network architecture
- Set of "base stations" connected to the wired network support set of nearby clients
 - » Star topology in each circle
 - » Cell phones, 802.11, ...

