


# **Ornament Kit: Auto-wah**

mas-effects.com/holiday

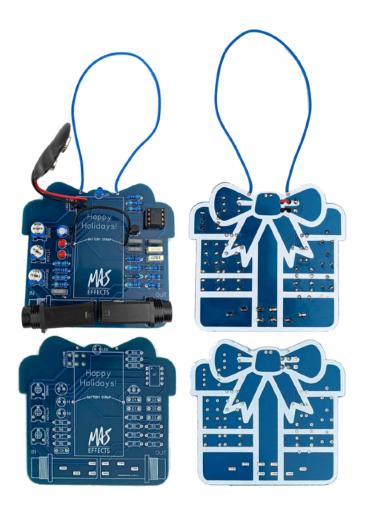

I hope you a have a ton of fun building this ornament, and that it brings some extra holiday cheer to you and everyone around you.

If you have any questions or run into any problems, visit our MAS Effects subreddit:

#### reddit.com/r/maseffects

This is where you'll get the quickest help. You can also email me directly (<a href="mailto:mark@mas-effects.com">mark@mas-effects.com</a>) or post to various DIY pedal groups online (visit <a href="mas-effects.com/holiday-instructions/">mas-effects.com/holiday-instructions/</a> for a list), but these may take a bit longer.

Happy Holidays!

Gift Ornament - Auto-wah Page 1 of 11

### **Overview**

This ornament is a playable auto-wah (or envelope filter) "pedal."

The audio circuit is called Nurse Quacky, and has evolved in the DIY communities to become, arguably, the best analog auto-wah available. Credits are due to Runoffgroove, Mark Hammer, Jack Orman, JD Sleep.


Power is drawn when a mono instrument cable is plugged into the input jack. **Leaving your guitar plugged into this will drain the battery!** 


### **Bill of Materials**

QTY	Designator	Part	Note
5	R1,R5,R6,R12,R13	47k	
3	R2,R3,R4	470k	
1	R7	3.3M	
1	R8	10k	
1	R9	51R	
1	R10	22k	
1	R11	220R	
1	R14	4.7k	
2	D1, D2	3mm Red LEDs	Matched with the same forward voltage
1	LED	LED	Power indicator
2	C1,C6	10n	
1	C2	100n	
2	C3,C4	4.7n	
1	C5	1n	
1	C8	22u	
1	Q1	2n3904	
1	ATTACK	1k trimmer	
1	RANGE	30k trimmer	
1	SENSITIVITY	100k trimmer	
1	U1	LM358	
1	BATTERY	9V Battery Cable	
2	IN, OUT	Audio jack	
1		Wire for hanger	
1		Printed Circuit Board (PCB)	Blue; Shaped like a gift

Gift Ornament - Auto-wah Page 2 of 11

# **Schematic**

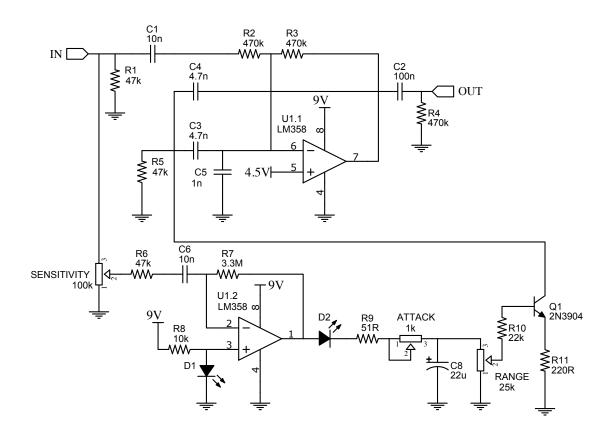

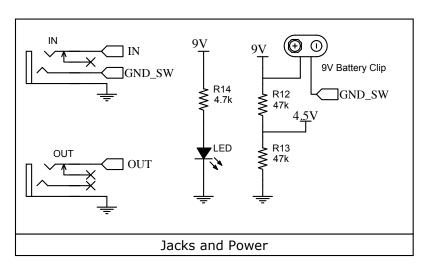

Gift Ornament - Auto-wah Page 3 of 11

#### **Instructions**

#### **PREFACE:** For Beginners

If you haven't spent much time soldering components to a PCB (printed circuit board) then here are a couple tips to help you ensure success with this project.

Nearly all problems people face when building kits such as this come from either

- A. Placing components in the wrong spots, or with the wrong orientation, or
- B. Bad solder joints

#### Placing components correctly:

- \* Leave the components in the sleeve until you need them. Cut the edge off the sleeve so you can easily pull out components as you need them. Refer to the component identification sheet to see which is which.
- \* Read this build instructions document. I will make notes about **polarity and orientation** of diodes, electrolytic capacitors, and transistors. These are very important to follow.
- \* Take your time

#### Getting good solder joints:

- \* First and foremost, watch this excellent, short, and to-the-point video about soldering: youtu.be/lpkkfK937mU
- \* If possible **practice soldering wires** onto a prototyping or vero board (fiberglass board with holes, and copper pads), or this **practice soldering kit** we offer. The practice kit includes detailed and comprehensive **instructions and step-by-step video to help you learn to solder**.
- \* Watch carefully to recognize when the solder has been pulled up onto the component legs, and spread across the pad of the board. This indicates both the component and the pad were sufficiently heated, and the solder bonded with them.
- \* If the solder isn't wicking up against the pad and component within a few seconds: Stop. Wait a few moments. Then try again. Wipe your soldering iron or rotate it against the joint if necessary to get good heat transfer.

Gift Ornament - Auto-wah Page 4 of 11

#### **SETUP**

**Leave the components in the plastic sleeve** until you need them. Cut the edge off the sleeve so you can easily pull them out. Refer to the component identification sheet to see which is which.

#### STEP 1: Resistors (R1 - R14)

It's typically easiest to populate the circuit board from the shortest to the tallest components. Resistors sit very low to the board so we start with those.

**Bend the legs 90 degrees** from body of the resistor before trying to place them. Orientation does not matter. Resistors can be inserted in either direction.

Inserting and soldering a few at a time will be easier than trying to do them all at once.




#### STEP 2: Op Amp (U1)

Orientation matters. A half-circle cutout or a dot indicate the side with pins 1 and 8.

**Line up the dot or half-circle** on the PCB, the socket, and the op amp.

The socket is optional, and if you may instead solder the op amp directly to the PCB.

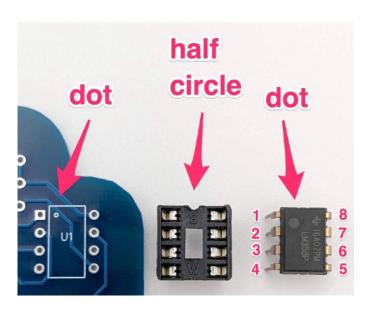





Gift Ornament - Auto-wah Page 5 of 11

#### STEP 3: LEDs (D1, D2, LED Power Indicator)


Light emitting diodes (LEDs) have polarity and must be oriented correctly.

The LED's cathode (-) is indicated by a shorter leg and a flat side of the body, and the anode (+) has a longer leg.

The PCB has a "+" to indicate the anode and a flat side to show the cathode.

D1 and D2 are red LEDs, and have been measured and matched to have identical forward voltages to help the circuit perform ideally. The LED indicator is a blue LED, but you may substitute any color.

Insert and solder all 3 LEDs.

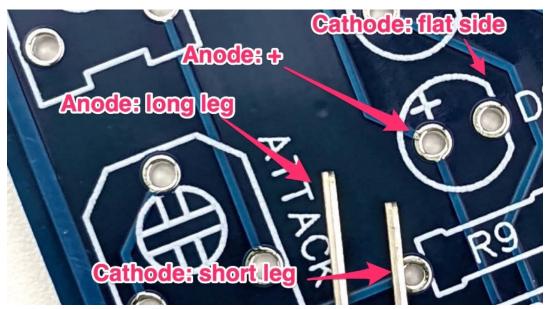



Gift Ornament - Auto-wah Page 6 of 11

#### **STEP 4: Trim Potentiometers**

Trimmers are used to help tweak and fine-tune the optimal setting for your guitar. In this case we have three to install and solder:

\* RANGE: 30k (303)\* ATTACK: 1k (102)

\* SENSITIVITY: 100k (104)

Check and match the 3 digit code printed on the trimmer.



### STEP 5: Non-polarized Capacitors (C1 - C6)

Orientation does not matter for these box film capacitors, so they can be inserted in either direction.




Gift Ornament - Auto-wah Page 7 of 11

#### STEP 6: Transistor (Q1)

**Orientation matters!** Insert the transistor so the flat and curved sides of its body align with the drawing on the PCB.

This ensures its leads, which correspond to the Emitter, Base, and Collector (EBC) are inserted in the correct pads.

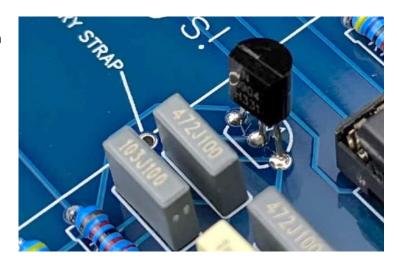

#### STEP 7: Polarized Capacitor (C8)

C8 has considerably more capacity than the other capacitors we've soldered so far, and due to the construction methods for larger capacitors it is necessarily polarized.

The positive side (+), or anode, has a longer leg, and the negative side (-), or cathode, has the shorter leg. You will also find a stripe printed down the negative side with minus signs drawn on it.

Match the longer leg (anode) to the pad on the PCB marked with a "+."



Gift Ornament - Auto-wah Page 8 of 11

#### **STEP 8: Input and Output Jacks**

Next, insert and solder each jack into place. Line up the lugs carefully with the holes on the PCB, then wiggle the jack slightly while gently pressing down.

**DO NOT FORCE it** into the holes or you may damage the jack.

FYI: To power on this circuit, a mono cable needs to be inserted into the input jack. The cable makes a connection between the sleeve, which connects to the circuit's ground, and the ring which connects to the battery's negative (-) terminal.




# STEP 9: Battery Clip

Trim the wires of the 9V battery clip to a suitable length (approximately 2-3 inches or 5-8 cm) and solder the black wire to the (-) pad and the red wire to the (+) pad.

There are holes that can optionally be used to provide strain relief; i.e. so the solder joints don't get stressed if you pull on the battery cable. To use them, weave the battery cables through the holes before soldering, as shown



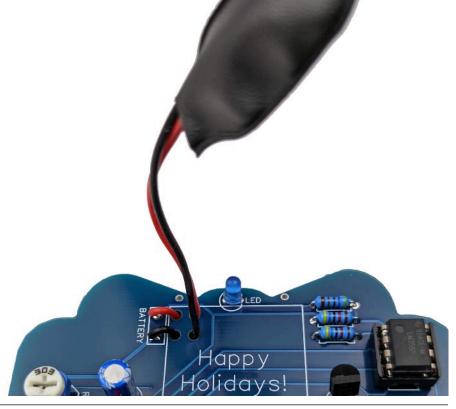

Gift Ornament - Auto-wah Page 9 of 11

#### STEP 10: Battery Strap

The battery strap wire will help restrain the 9V battery and keep it from dangling.

Take one of the scrap cutoffs from the battery clip and solder to a pad in the middle marked "Battery Strap."

Holding a 9V battery in place, loosely wrap a wire around it to estimate an appropriate length. Trim, strip, and solder the other end.



# STEP 11: Hanger

Solder both ends of the blue wire to the top of the PCB to form a loop that can be used to hang the ornament.



Gift Ornament - Auto-wah Page 10 of 11

#### STEP 12: (Optional) Clean

You can use an old toothbrush or cloth and rubbing alcohol to remove the soldering flux from the circuit board. Less diluted alcohol, e.g. 91%, will make the job easier.

#### STEP 13: Share with friends, family, bandmates

Be sure to take pics and **post online** to share with everyone. And if you know anyone who might appreciate either a kit or a pre-assembled ornament, **send them to** <u>mas-effects.com/holiday</u>.

We'd love to see it too, so post your build to <a href="reddit.com/r/maseffects">reddit.com/r/maseffects</a>

Happy Holidays!

#### **Problems? Questions?**

If you have any questions or run into any problems, visit our MAS Effects subreddit:

reddit.com/r/maseffects

or email directly: mark@mas-effects.com



Gift Ornament - Auto-wah Page 11 of 11