Continuum Mechanics

Lecture 16 - Energy, Rotation, Vorticity

Dr. Nicholas Smith

Wichita State University, Department of Aerospace Engineering

12 November, 2020

1

schedule

- 12 Nov Energy, Rotation, Vorticity, HW8 Due
- 17 Nov Non-Newtonian Fluids
- 1 Dec Final Review, Research Project, HW9 Due
- 3 Dec Final Review

energy dissipation

- Fluids can be used to dissipate energy
- sloshing video
- We can use the concept of stress power to find the energy dissipated in a fluid

3

incompressible newtonian fluid

• For an incompressible Newtonian fluid, we have

$$T_{ij} = -p\delta_{ij} + T'_{ij}$$

If we multiply both sides by the velocity gradient, v_{i,j}, we find

$$T_{ij}v_{i,j} = -pv_{i,i} + T'_{ij}v_{i,j}$$

4

incompressible newtonian fluid

 But for an incompressible fluid, we know that v_{i,i} = 0, therefore

$$T_{ii}v_{i,j}=T'_{ii}v_{i,j}$$

• Note that $T_{ij}v_{i,j} = T_{ij}(D_{ij} + W_{ij})$

5

incompressible newtonian fluid

- Since T_{ij} is symmetric and W_{ij} is antisymmetric, we find that $T_{ij}v_{i,j} = T_{ij}D_{ij}$, which is an expression for stress power
- The right side can be written as

$$T'_{ij}v_{i,j} = 2\mu D_{ij}v_{i,j} = 2\mu D_{ij}(D_{ij} + W_{ij})$$

■ But $D_{ij}W_{ij} = 0$, since D_{ij} is symmetric and W_{ij} is antisymmetric

incompressible newtonian fluid

• Thus the stress power is given as

$$P_s = 2\mu D_{ii}D_{ii} = 2\mu (D_{11}^2 + D_{22}^2 + D_{33}^2 + 2D_{12}^2 + 2D_{13}^2 + 2D_{23}^2)$$

- This represents the work done per unit volume to change the shape
- Is also known as the dissipation function for an incompressible Newtonian fluid

7

compressible newtonian fluid

- For a compressible Newtonian fluid, the continuity equation does not reduce as conveniently
- Recall that for a compressible Newtonian fluid

$$T'_{ij} = \lambda D_{kk} \delta_{ij} + 2\mu D_{ij}$$

• Where $D_{kk} = v_{i,j}$

compressible newtonian fluid

 Multiplying both sides of the constitutive equation as before, we find the stress power to be

$$P_s = -pv_{i,i} + \lambda v_{i,i}^2 + 2\mu D_{ij} D_{ij}$$

 From the equation for P_s, -pv_{i,i} represents the work done to change the volume of the fluid

9

compressible newtonian fluid

- $\lambda v_{i,i}^2 + 2\mu D_{ij} D_{ij}$ represents the rate at which work is converted to heat
- This is known as the dissipation function for compressible Newtonian fluids

energy equation

• Recall that the energy equation for a continuum is

$$\rho \frac{Du}{Dt} = T_{ij} v_{i,j} - q_{i,i} + \rho q_s$$

 We see that the change in energy is related to the stress power, plus heat which enters the continuum from internal or external sources

11

energy equation

- In fluids the internal energy is often express as $u = c\Theta$, where c is the specific heat and Θ is the temperature
- If we assume that the only heat transfer follows Fourier's law (and there is no internal heat source) we find

$$\rho c \frac{D\Theta}{Dt} = P_s + \kappa \frac{\partial^2 \Theta}{\partial x_j \partial x_j}$$

example

- As an example, we can consider plane Couette flow with prescribed temperatures at the boundaries
- Use the energy equation to find the steady-state temperature distribution

13

vorticity vector

- We know that W_{ij} is the antisymmetric part of the velocity gradient
- We also know that antisymmetric tensors can be expressed as some dual vector such that

$$Wx = \omega \times x$$

• Where the angular velocity vector, ω is given by

$$\omega_i = -\langle W_{23}, W_{31}, W_{12} \rangle$$

vorticity vector

 The angular velocity vector can be expressed directly in terms of components of the velocity gradient

$$\omega = \frac{1}{2} \langle v_{3,2} - v_{2,3}, v_{1,3} - v_{3,1}, v_{2,1} - v_{1,2} \rangle$$

 The vorticity vector is defined to eliminate the 1/2 from the angular velocity vector

$$\zeta = 2\omega = \langle v_{3,2} - v_{2,3}, v_{1,3} - v_{3,1}, v_{2,1} - v_{1,2} \rangle$$

15

vorticity vector

• In index notation, we can write

$$\zeta = \epsilon_{ijk} v_{k,j}$$

• Or in direct notation $\zeta = \text{curl } v$

irrotational flow

- If the vorticity vector is zero, the flow is considered irrotational
- If we consider some function $\varphi(x_1,x_2,x_3,t)$ and derive the velocity field from that function such that

$$v_i = -\frac{\partial \varphi}{\partial x_i}$$

• We find that the vorticity vector will be zero

17

irrotational flow

- For an incompressible fluid, we know that $v_{k,k} = 0$
- Substituting φ into this equation gives the Laplacian equation

$$\frac{\partial^2 \varphi}{\partial x_i \partial x_i} = 0$$

inviscid incompressible flow

 If viscosity is 0 (or negligible), the equations of motion reduce to

$$\rho\left(\frac{\partial v_i}{\partial t} + v_j \frac{\partial v_i}{\partial x_i}\right) = -\frac{\partial p}{\partial x_i} + \rho B_i$$

• These are known as Euler's equations of motion

19

inviscid incompressible flow

ullet If ho is constant and body forces are expressed as

$$B_i = -\frac{\partial \Omega}{\partial x_i}$$

then we can write

$$\frac{\partial v_i}{\partial t} + v_j \frac{\partial v_i}{\partial x_j} = -\frac{\partial}{\partial x_i} \left(\frac{p}{\rho} + \Omega \right)$$

inviscid incompressible flow

 For irrotational flow, the velocity gradient will be symmetric

$$v_{j}\frac{\partial v_{i}}{\partial x_{i}} = v_{j}\frac{\partial v_{j}}{\partial x_{i}} = \frac{1}{2}\frac{\partial}{\partial x_{i}}(v_{j}v_{j})$$

• We now let $v^2 = v_i v_i$ and write

$$\frac{\partial}{\partial x_i} \left(-\frac{\partial \varphi}{\partial t} + \frac{v^2}{2} + \frac{p}{\rho} + \Omega \right) = 0$$

21

inviscid incompressible flow

- The portion inside the parenthesis must be a function of time only
- For steady flow, it will be equal to a constant and the φ term will vanish

$$\frac{v^2}{2} + \frac{p}{\rho} + \Omega = C$$

 This is Bernoulli's equation, and shows that irrotational flows are always possible when density is constant in an inviscid, incompressible flow

compressible flow

- For a compressible fluid, we still need the pressure p to not be a function of deformation rate
- The pressure will be some function of density and temperature
- For example, ideal gases will follow the ideal gas law $p = R \rho \Theta$

23

compressible flow

The constitutive equation for a compressible Newtonian fluid are

$$T_{ij} = -p(\rho, \Theta)\delta_{ij} + \lambda \frac{\partial v_k}{\partial x_k} \delta_{ij} + 2\mu D_{ij}$$

And the contraction of that is

$$T_{ii}/3 = -p(\rho,\Theta) + k \frac{\partial v_k}{\partial x_k}$$

where $k=\lambda+\frac{2}{3}\mu$ (the bulk viscosity)

compressible flow

- Some gases have zero bulk viscosity
- The assumption that k = 0 is known as the Stokes assumption, valid for monatomic gases
- We can also write the constitutive equation in terms of μ and k

$$T_{ij} = -p(\rho, \Theta)\delta_{ij} + \lambda \frac{\partial v_k}{\partial x_k} \delta_{ij} + 2\mu D_{ij}$$

25

compressible flow

■ The Navier-Stokes equations are

$$\rho \frac{Dv_i}{Dt} = -\rho B_i - \frac{\partial P}{\partial x_i} + \frac{\mu}{3} \frac{\partial}{\partial x_i} \left(\frac{\partial v_j}{\partial x_j} \right) + \mu \frac{\partial^2 v_i}{\partial x_j \partial x_j} + k \frac{\partial}{\partial x_i} \left(\frac{\partial v_j}{\partial x_j} \right)$$

And the energy equation is

$$\rho \frac{Du}{Dt} = T_{ij} \frac{\partial v_i}{\partial x_j} + \kappa \frac{\partial^2 \Theta}{\partial x_j \partial x_j}$$

compressible flow

• We also recall the continuity equation

$$\frac{D\rho}{Dt} + \rho \frac{\partial v_j}{\partial x_j} = 0$$

- Together with some equation $p = p(\rho, \Theta)$ and $u = u(\rho, \Theta)$ gives 7 equations
- The 7 unknowns are v_i , p, ρ , Θ , and u

27

acoustic waves

- Let us consider the propagation of sound in an inviscid fluid with negligible body forces
- The equations of motion reduce to

$$\frac{\partial v_i}{\partial t} + v_j \frac{\partial v_i}{\partial x_i} = -\frac{1}{\rho} \frac{\partial p}{\partial x_i}$$

• If the fluid is initially at rest ($v_i=0, \rho=\rho_0, p=p_0$) with some perturbation such that

$$v_i = v_i'(x_i, t)$$
 $\rho = \rho_0 + \rho'(x_i, t)$ $p = p_0 + p'(x_i, t)$

Substituting gives

$$\frac{\partial v_i'}{\partial t} + v_j' \frac{\partial v_i'}{\partial x_j} = -\frac{1}{\rho_0 (1 + \rho'/\rho_0)} \frac{\partial \rho'}{\partial x_i}$$

29

acoustic waves

• If the disturbance is infinitesimal, then $v_j' \frac{\partial v_j'}{\partial x_j}$ will be negligible compared to $\frac{\partial v_j'}{\partial t}$ and ρ'/ρ_0 will be negligible compared to 1

$$\frac{\partial v_i'}{\partial t} = -\frac{1}{\rho_0} \frac{\partial p'}{\partial x_i}$$

· Similarly the continuity equation

$$\frac{\partial \rho'}{\partial t} + v_j' \frac{\partial \rho'}{\partial x_i} + \rho_0 (1 + \rho'/\rho_0) \frac{\partial v_i'}{\partial x_i} = 0$$

acoustic waves

Which reduces to

$$\frac{\partial v_i'}{\partial x_i} = -\frac{1}{\rho_0} \frac{\partial \rho'}{\partial t}$$

31

acoustic waves

 We can differentiate with respect to x_i and with respect to t to eliminate velocity from both equations

$$\frac{\partial^2 p'}{\partial x_i \partial x_i} = \frac{\partial^2 p'}{\partial t^2}$$

acoustic waves

 If pressure depends only on density (barotropic flow) then we can expand the pressure function as a Taylor series

$$p = p_0 + \left(\frac{dp}{d\rho}\right)_{\rho_0} (\rho - \rho_0) + \dots$$

• Neglecting higher-order terms and re-arranging gives

$$p - p_0 = \left(\frac{dp}{d\rho}\right)_{\rho_0} (\rho - \rho_0)$$

• if we let $c_0^2 = \left(\frac{dp}{d\rho}\right)_{\rho\rho}$ then we can write

$$p'=c_0^2\rho'$$

33

acoustic waves

For barotropic flow this gives

$$c_0^2 \frac{\partial^2 p'}{\partial x_i \partial x_i} = \frac{\partial^2 p'}{\partial t^2}$$

• c_0 is the speed of sound at stagnation

reynolds transport theorem

- Reynolds transport theorem is the general framework we use to convert conservation equations from "control mass" to "control volume"
- Arbitrary control volume can be fixed or moving
- "Control mass" equations are things like
 - Conservation of mass
 - F = ma
 - First and second laws of thermodynamics

35

reynolds transport theorem

- In general, Reynolds Transport Theorem states that for some scalar or tensor function of spatial coordinates and time, T(x_i, t)
- Where V_m is a material volume which consists of the same material particles at all times and S_m is the boundary of this volume

$$\frac{D}{Dt}\int_{V_m(t)}T(x_i,t)dV=\int_{V_c}\frac{\partial T(x_i,t)}{\partial t}dV+\int_{S_c}T(v_in_i)dS$$

or

$$\frac{D}{Dt} \int_{V_m(t)} T(x_i, t) dV = \int_{V_c} \left(\frac{DT}{Dt} + T \text{div} V \right) dV$$

 Mathematically, this gives us a framework for moving derivatives inside an integral

conservation of mass

- The conservation of mass states that the total mass of a material must remain constant
- We can write this as

$$\frac{D}{Dt} \int_{V_n} \rho(x_i, t) dV = 0$$

37

linear momentum

• We can write the global form of F = ma as

$$\int_{S_c} t_i dS + \int_{V_c} \rho B_i dV = \frac{D}{Dt} \int_{V_m} \rho v_i dV$$

examples

- rope sliding from table
- jet of water on a curved pane

39

moving frames

- If we define two frames, F_1 and F_2
- The position vector r_i denotes the position of some differential mass, dm relative to F₁
- x_i denotes position relative to F₂, we define velocity in the respective frames as

$$(dr_i/dt)_{F_1} = v_{F_1}$$

 $(dx_i/dt)_{F_2} = v_{F_2}$

moving frames

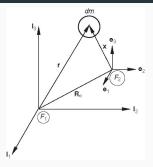


Figure 1: image

41

moving frames

• Since we can write $r_i = R_i + x_i$, we can say that

$$\left(\frac{dr_i}{dt}\right)_{F_1} = \left(\frac{dR_i}{dt}\right)_{F_1} + \left(\frac{dx_i}{dt}\right)_{F_1}$$

• Which we can define as

$$\left(\frac{dr_i}{dt}\right)_{F_1} = (v_0)_{F_1} + \left(\frac{dx_i}{dt}\right)_{F_1}$$

moving frames

• We also know that for any vector b_i

$$\left(\frac{db_i}{dt}\right)_{F_1} = \left(\frac{db_i}{dt}\right)_{F_2} + \omega_i \times b_i$$

where ω_i is the angular velocity of F_2 relative to F_1

43

moving frames

We find

$$v_{F_1} = (v_0)_{F_1} + v_{F_2} + \omega_i \times x_i$$

• Taking the global form we find

$$\left(\frac{D}{Dt}\right)_{F_1} \int v_{F_1} dm = \left(\frac{D}{Dt}\right)_{F_1} \left[\int (v_0)_{F_1} dm + \int v_{F_2} dm + \omega_i \times x_i dm\right]$$

moving frames

• If F_1 is the inertial frame, then we have

$$\left(\frac{D}{Dt}\right)_{F_1}\int v_{F_1}dm = \int t_idS + \int \rho B_idV$$

45

moving frames

• And in the moving frame

$$\left(\frac{D}{Dt}\right)_{F_2} \int v_{F_2} dm = \int t_i dS + \int \rho B_i dV - \left[m(a_0) + 2\omega \times \int v_{F_2} + \dot{\omega} \times \int x_i dm + \omega \times \left(\omega \times \int x_i dm\right)\right]$$

 Where a₀ is the acceleration of the moving frame with respect to the inertial frame

reading

Linear Viscoelasticity - 443-456