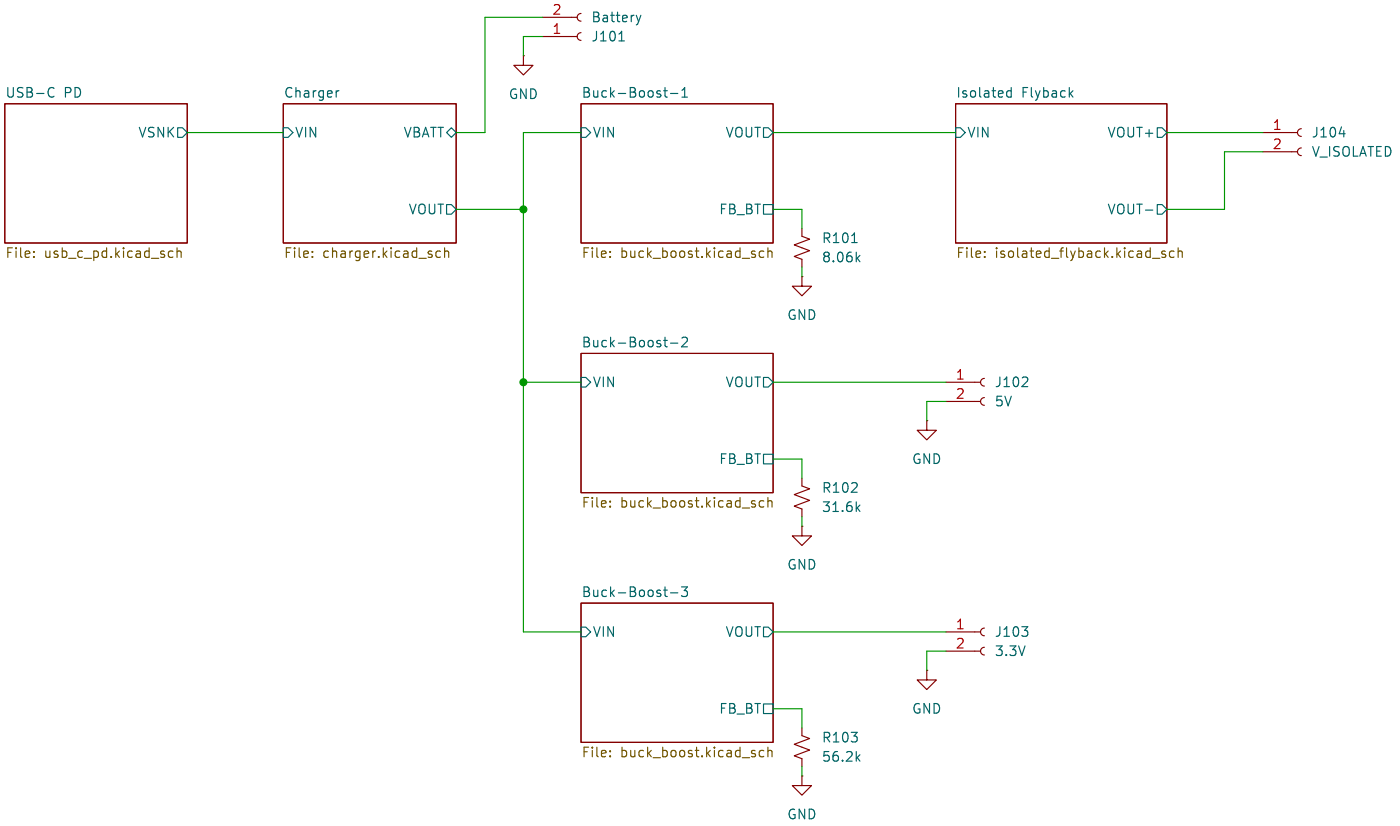

Nicholas Loehrke
University of Wisconsin-Platteville

Sheet: /
File: power_supply.kicad_sch

Title: Power Supply

Size: A4	Date: 2024-10-27	**Rev: 0.1.0**
KiCad E.D.A. 8.0.9		Id: 1/7

ESD Protection

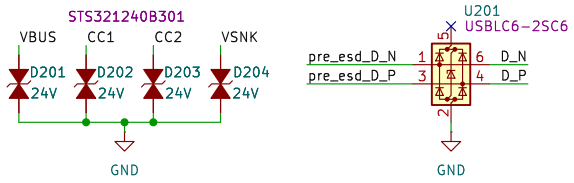

Reset Switch

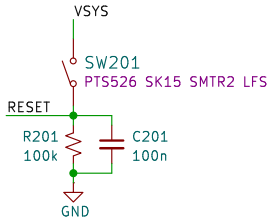

I2C Connector and Pull-ups

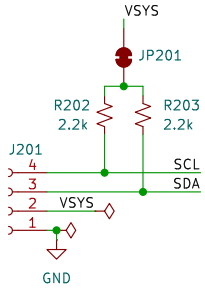

I2C Address Selection

ADDR0	ADDR1	Address
0	0	0x28*
0	1	0x29
1	0	0x2A
1	1	0x2B

*: Default
0: Jumper closed
1: Jumper open

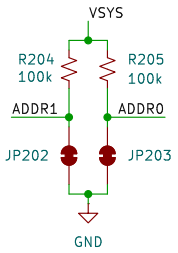

USB-C PD Controller

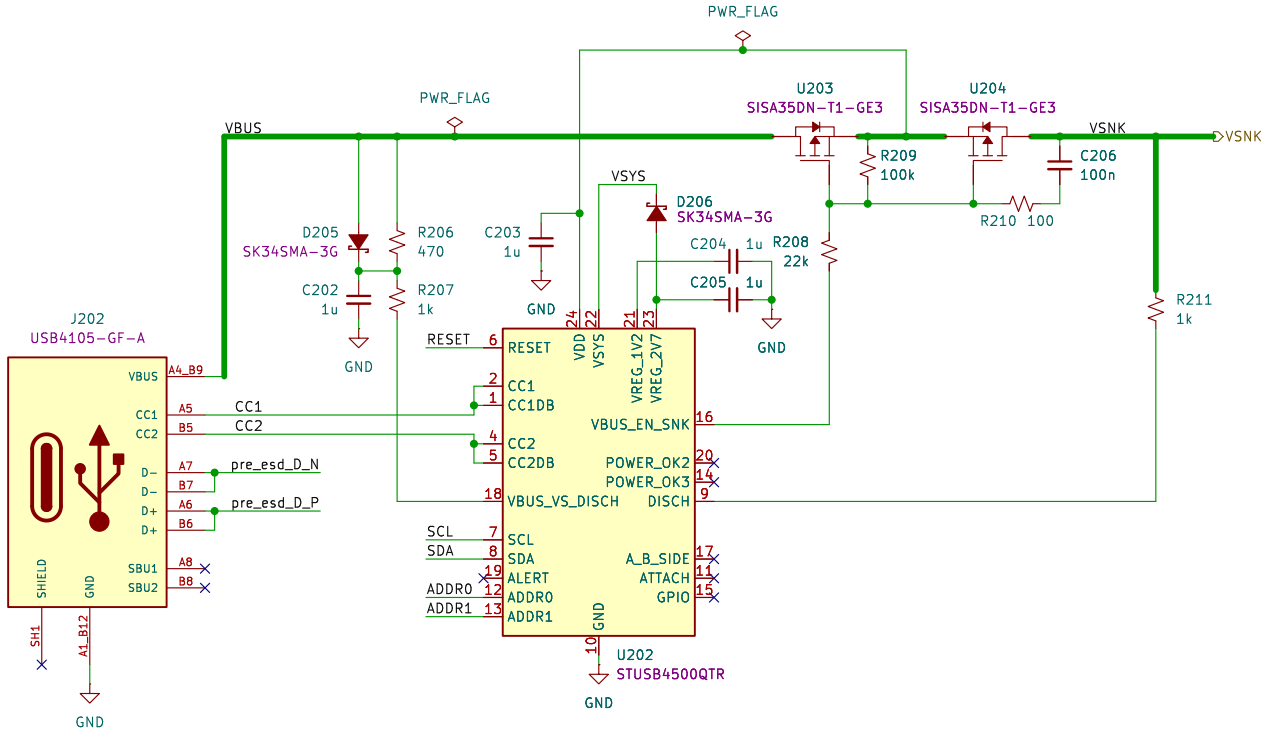

Required PDO configuration:

PDO1 = Doesn't matter, the minimum VIN for the MP2759 is 6.6V to charge a 1-cell battery
PDO2 = 9V, 2A (18W, 1-cell max.)
PDO3 = 15V, 2A (30W, 3-cell max.)

Make sure to set the charger ILIM to the lowest current of PDO2 and PDO3

USB Header

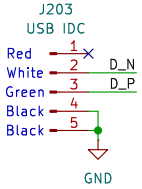

Nicholas Loehrke
University of Wisconsin-Platteville

Sheet: /USB-C PD/
File: usb_c_pd.kicad_sch

Title:

Size: A4	Date: 2024-10-27	**Rev: 0.1.0**
KiCad E.D.A. 8.0.9		Id: 2/7

Input Current Limit Setting

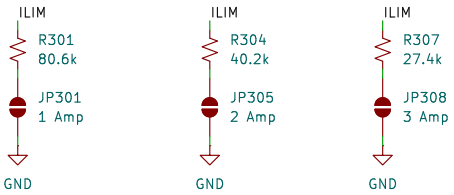

Note: Bridge only the desired current limit's jumper

Charging Current Setting

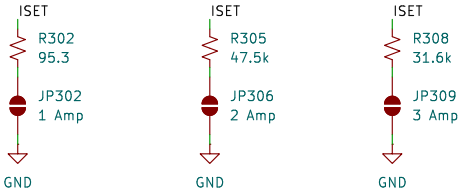

Note: Bridge only the desired current limit's jumper

Cell Count Setting

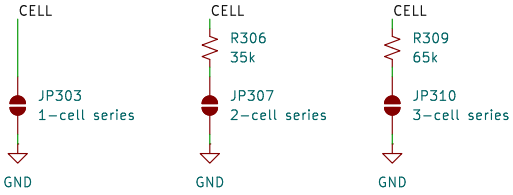

Note: Bridge only the desired cell count's jumper

Charger

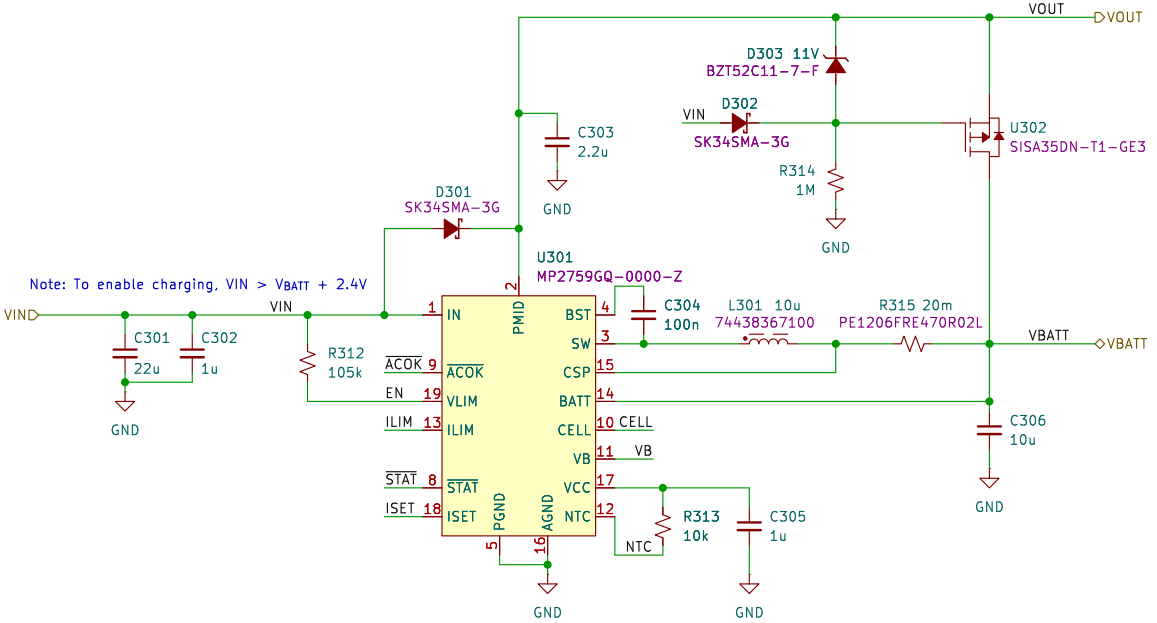

Thermister Setting and Connector

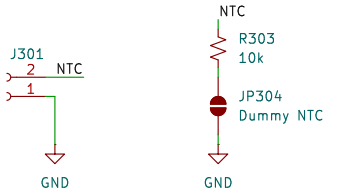

Note: Bridge 'Dummy NTC' when not using a thermistor

IO Connector

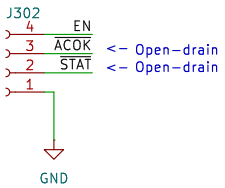

Charge Voltage Setting

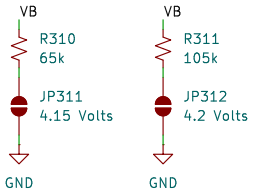

Note: Bridge only the desired charge voltage's jumper

Nicholas Loehrke
University of Wisconsin–Platteville

Sheet: /Charger/
File: charger.kicad_sch

Title:

Size: A4	Date: 2024-10-27	**Rev: 0.1.0**
KiCad E.D.A. 8.0.9		Id: 3/7

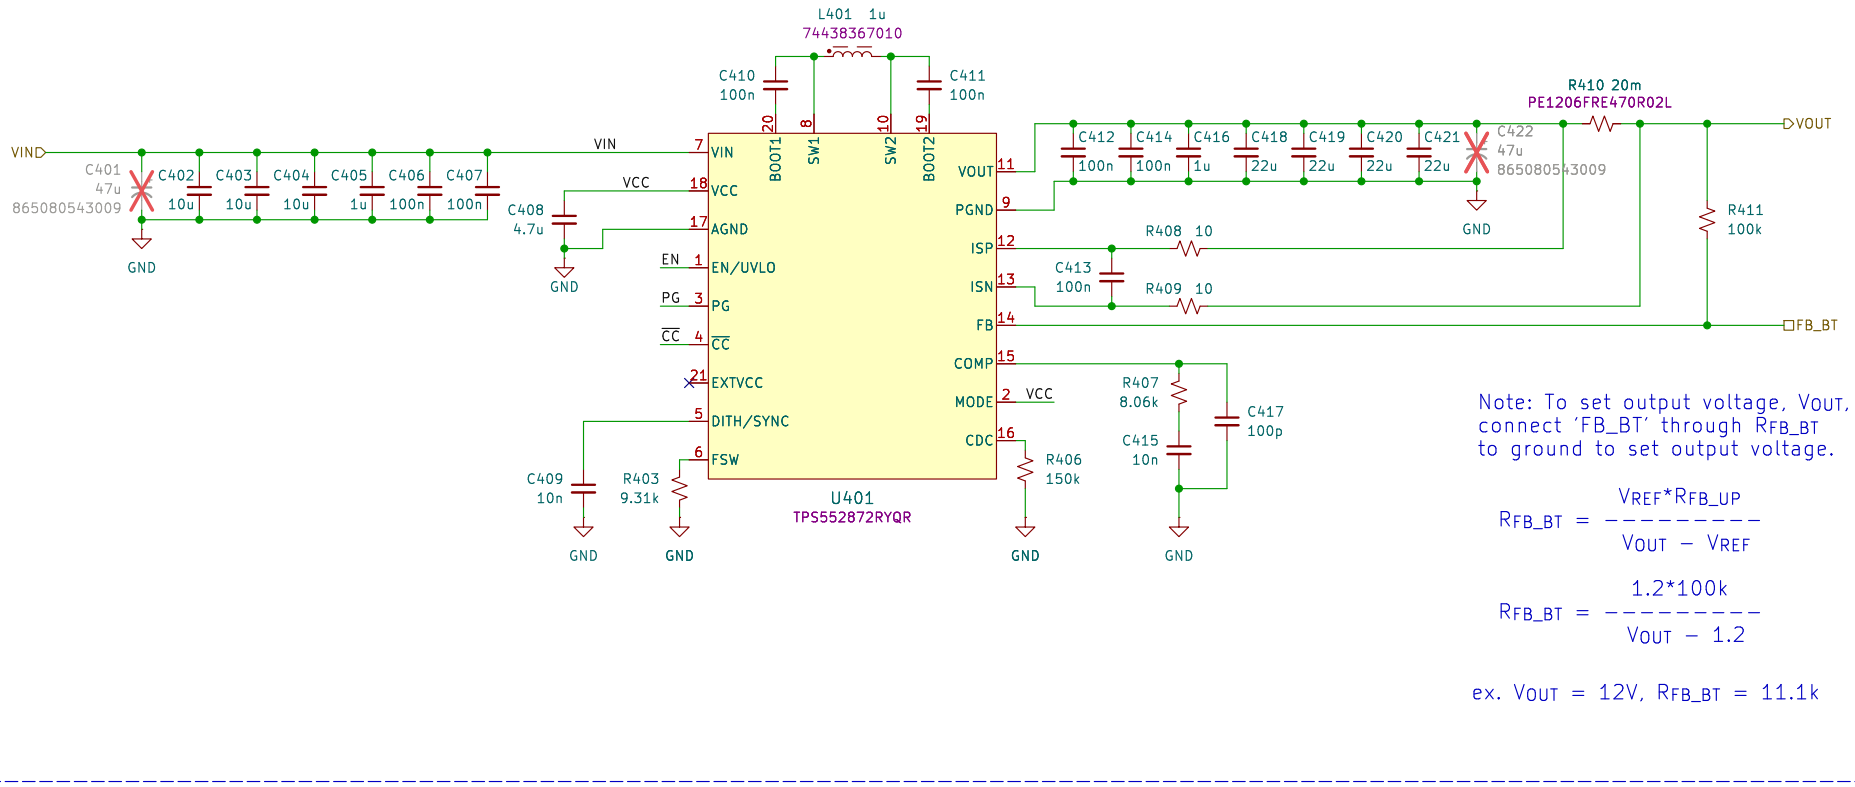

Sheet: /Buck–Boost–1/		
File: buck_boost.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 8.0.9		Id: 4/7

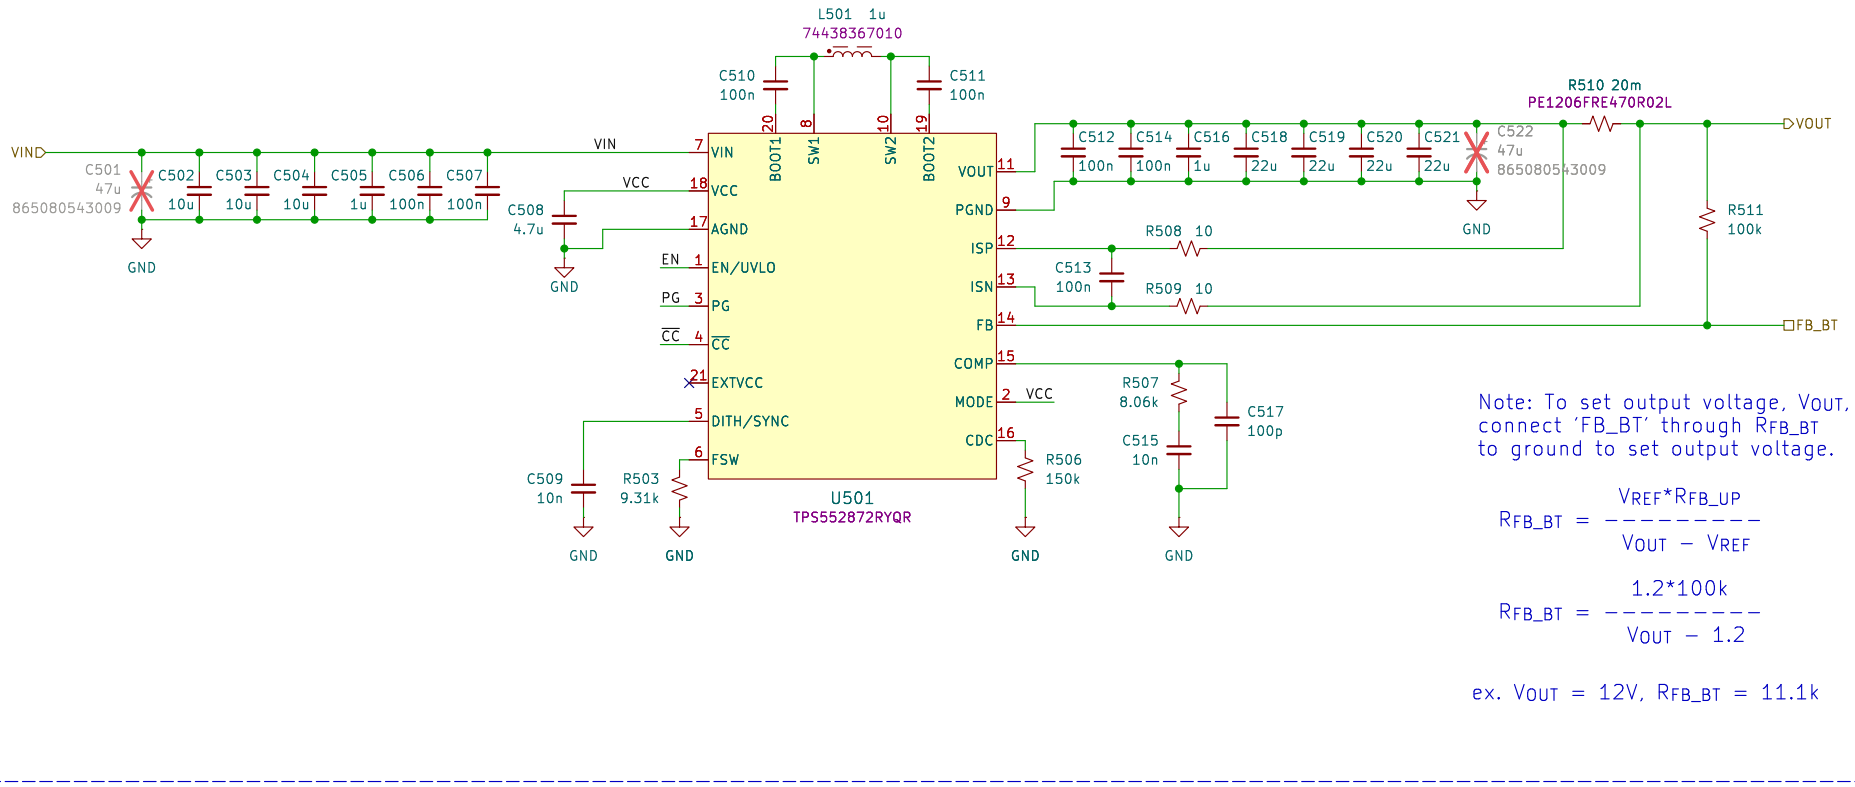

Sheet: /Buck–Boost–2/		
File: buck_boost.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 8.0.9		Id: 5/7

Buck–Boost Converter

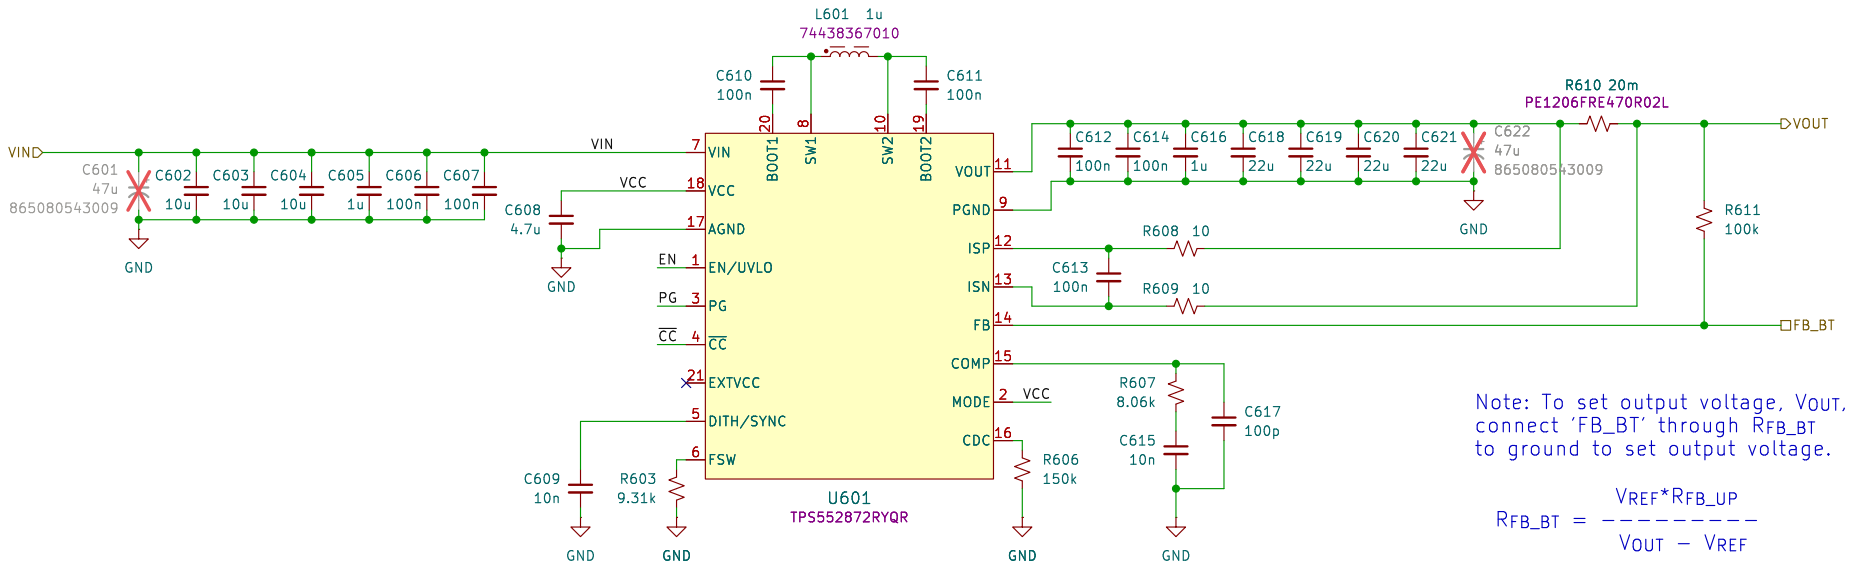

Note: To set output voltage, V_{OUT}, connect 'FB_BT' through R_{FB_BT} to ground to set output voltage.

$$R_{FB\_BT} = \frac{V_{REF} * R_{FB\_UP}}{V_{OUT} - V_{REF}}$$

$$R_{FB\_BT} = \frac{1.2 * 100k}{V_{OUT} - 1.2}$$

ex. V_{OUT} = 12V, R_{FB_BT} = 11.1k

Enable



Test Points

Sheet: /Buck–Boost–3/
File: buck_boost.kicad_sch

Title:

Size: A4	Date:	**Rev:**
KiCad E.D.A. 8.0.9		Id: 6/7

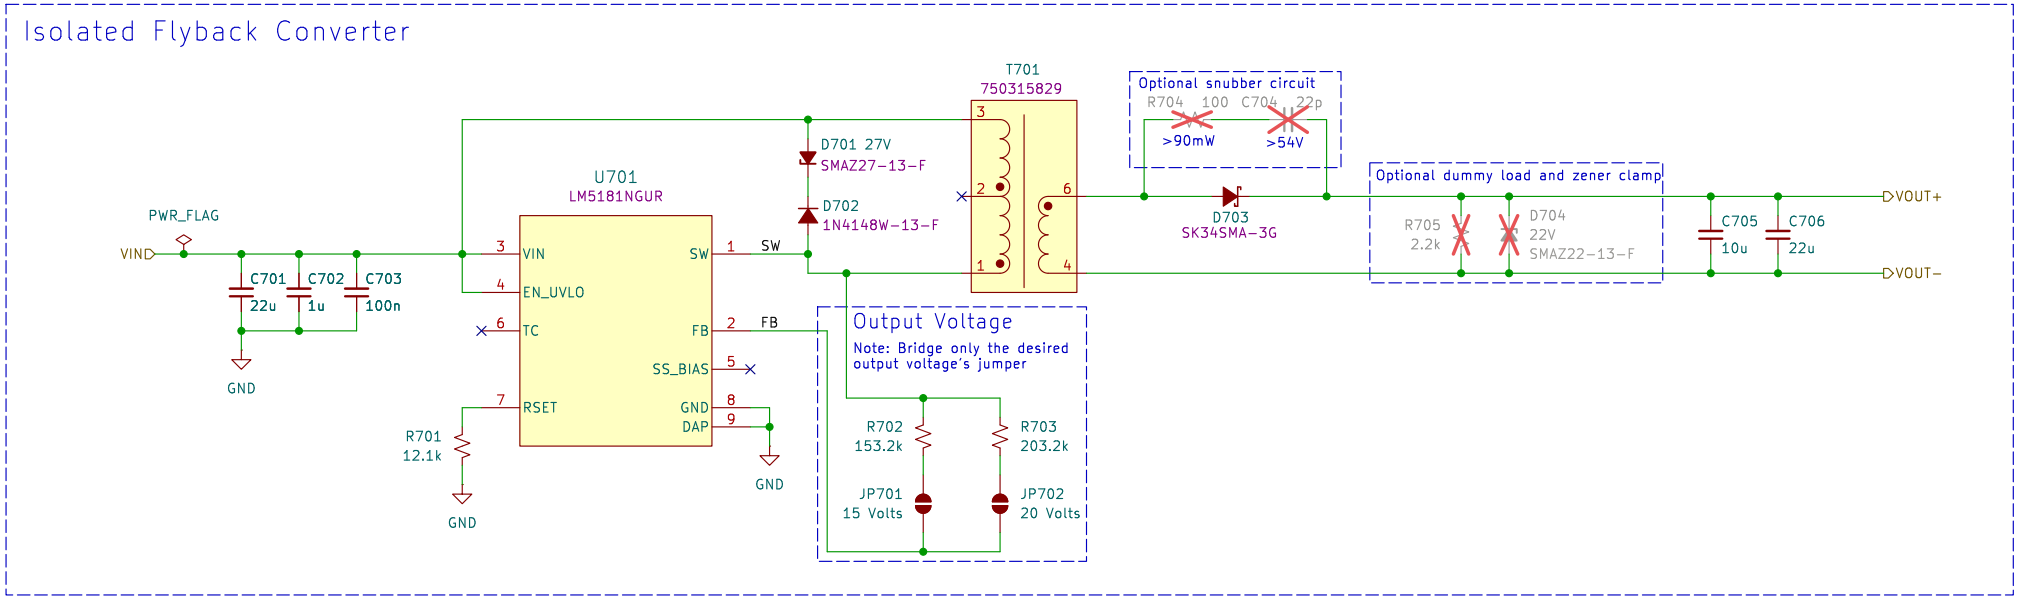

Nicholas Loehrke
University of Wisconsin–Platteville

Sheet: /Isolated Flyback/
File: isolated_flyback.kicad_sch

Title: Power Supply

Size: A4	Date: 2024-10-27	**Rev: 0.1.0**
KiCad E.D.A. 8.0.9		Id: 7/7